

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
81800/B1700 SYCOM
SDS 2222 2590 (02)

Software Design Specifications

TABLE OF CONTENTS

SCOPE	1-1
DEFINITION OF SYCOM	2-1
LINE THROUGHPUT	2-2
ERROR DETECTION AND RECOVERY	2-2
DATA COMMUNICATIONS PROCEDURE OF SYCOM	2-3
SYCOM HOST SYSTEMS AND REMOTE TERMINALS	2-3
SYSTEMS COMMUNICATIONS STANDARDS	3-1
SYCOM	3-1
SYCOM DATA COMMUNICATIONS STANDARD	3-1
CONVERSATIONAL COMMUNICATIONS PROCEDURES	3-1
Message Transfer	3-3
Retransmission of Messages	3-3
Parity or Block-Check Error Handling	3-3
Message Idle State	3-3
Normal Termination	3-3
POINT-TO-POINT CONTENTION PROCEDURES	3-3
Master Status	3-5
Enter Message Transfer State	3-5
Termination	3-5
SYCOM PROCEDURE	3-7
CODES AND ERROR CHECKING	3-8
SYCOM RECORD (TEXT) FORMAT	3-8
DEVICE ADDRESSES (DA1, DA2)	3-9
DEVICE FUNCTIONAL CONTROL (CC)	3-10
FILE SEPARATOR (FS)	3-10
RECORD SEPARATOR (RS)	3-11
SPACE COMPRESSION	3-11
SYCOM SYSTEM MESSAGES	3-11
FORMAT OF PUT/FETCH MESSAGES	3-18
FILE TRANSFER	3-19
MAINTENANCE OF FILE CHARACTERISTICS	3-20
FILE TRANSFER RECOVERY	3-22
TERMINAL SYSTEM MESSAGES	3-23
INPUT MESSAGES	3-23
OUTPUT MESSAGES	3-27
COMMUNICATION ERROR MESSAGES	3-31
HOST SYSTEM MESSAGES	3-31
ACCEPTABLE CHARACTERS FOR TERMINAL SPO	3-31
SYCOM TRANSMISSION OF PACKED DATA	4-1
DATA RECORD FORMAT	4-1
TERMINAL-TO-PROGRAM COMMUNICATION	5-1
PROGRAM-TO-PROGRAM COMMUNICATION	6-1
APPENDIX A - 1967 ASCII AND EBCDIC CHARACTER ASSIGNMENTS	A-1

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

SCOPE

This document describes the Burroughs Systems Communications Module and establishes standards and guidelines for the system. The data communication procedures used are the Burroughs Data Communications Standards as defined and published by the Data Communications Committee and Corporate Engineering. Other areas of SYCOM, such as record formats and supervisory messages are standardized in this document.

In addition to RJE, this protocol includes the features of file transfer, program-to-program communication and the issuance of SPO commands between two computers (or from a terminal to a computer). These latter features are symmetric; they may be invoked between any two systems without regard to "host" vs. "terminal" status.

The functions that might be supported by a program implementing this protocol fall into three categories: host RJE, terminal RJE, and file transfer. This protocol specifically allows implementation of a subset; any one or any combination of these functions is allowed.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

DEFINITION OF SYCOM

The purpose of SYCOM is to increase the use of data processing systems located some distance from each other. SYCOM includes remote job entry and file transfer capabilities. In remote job entry, jobs are submitted through a remote terminal and transmitted via a data communications line into the job stream of the host system. After processing, the job's printed and punched output is transmitted back to the terminal via the communications line. File transfer is the movement of files between two systems which can be either "terminal" systems or "host" systems.

Since some of the functions of this protocol allow interaction of 2 peer-level entities, the terms "terminal" and "host", although still used, are less applicable. Most applicable are the notions of "user" system and "server" system, as used in the ARPA Network. The user system is the active party with the human user wishing to utilize a computing resource, and the server system is the passive party supplying the computing service.

The basic functions of SYCOM are:

1. Introduction of programs from a remote input device for compilation and/or execution.
2. Introduction of data from a remote input device for processing by the host system.
3. Dispersing of data and/or programs produced by the host system to the remote device(s).
4. Monitoring and controlling of programs on the host system via a remote supervisory console.
5. Transfer of files from one system to another.
6. Support of communication between programs executing on the two systems.

An implementation of this protocol should include a system-dependent way for a user program to initiate any SYCOM function.

Since SYCOM applications imply the transmission of large batches of data between the two systems, line throughput maximization, error detection, and error recovery are of prime importance. This section discusses those topics and the procedures and conventions used in SYCOM applications.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

LINE THROUGHPUT

Maximization of line throughput is assured by the SYCOM point-to-point message transfer procedure which:

1. Specifically acknowledges a message with either a message or a numbered acknowledgement (#ACK). This reduces both line time and line turnaround per message.
2. Blocks records (that is, sends multiple records per message).
3. Compacts and expands blanks. It is common on card input and printer output to have a large percentage of blanks imbedded in the data. Eliminating the transmission of blanks can significantly improve throughput.
4. Sends messages in one direction while error recovery proceeds in the opposite direction through the unique capability for inclusion of a specific acknowledgement to a received message within a transmitted message.

ERROR DETECTION AND RECOVERY

The following features are provided in the error detection and recovery areas to assure reliable service to the SYCOM user:

1. A specific numbered acknowledgement (either in a message or in a #ACK) guards against the possibility of lost messages by providing an unambiguous acknowledgement to the transmitted message.
2. The use of at least modulo 2 transmission numbering facilitates the detection of duplicates.
3. Dynamic reduction of the transmission message length provides the potential for reducing error rates and retransmissions on bad circuits (error rates per message increase as the message size increases).
4. The convention of different timeout values for central and remote system alleviates line collision problems.
5. The message transfer procedure eliminates the ambiguous use of certain ASCII control characters (for example, ENQ is used only during establishment, nowhere else).
6. Error detection is provided through the use of vertical and horizontal parity in SYCOM.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

DATA COMMUNICATIONS PROCEDURE OF SYCOM

The point-to-point communications message transfer procedure allows the reversal of direction of message transfer without separate establishment and termination procedures. The essential characteristic of this procedure is the ability to specifically acknowledge a previous transmission via the use of a character included within the header of the message. This character will hereinafter be referred to as the ARM (Acknowledge Received Message) character and will be defined to have the following values:

1. ARM is the transmission number of the last validly received message, or NUL, immediately following establishment.
2. The ARM character immediately follows the SOH.

The validity of the ARM character will not be considered apart from the validity of the message (that is, if a message has a parity error, the ARM will be ignored).

The usefulness of the ARM is twofold: First, it provides a specific acknowledgement to a previous transmission because of its "numbered ACK" facility. Secondly, when a receiving station receives a message that it cannot accept because of a no-buffer or not-ready condition, the ARM allows the facility to implicitly NAK that message, while at the same time being able to transmit a new message and thereby possibly freeing buffers and/or conveying in the text the not-ready or buffer-full condition.

SYCOM HOSI SYSTEMS AND REMOTE TERMINALS

The following systems have implemented or plan to implement the following packages:

	hRJE	tRJE	FTP	term
B7700/B7800	C		P	P
B6700/B6800	C		P	P
Medium systems	C			
B1800/B1700	C	C	C	C
B800		C	P	P
B80		C	P	P
B771/B772		C		
TC5100		C		
TC3500		C		
DC1000		C		

Where hRJE = host RJE
 tRJE = terminal RJE
 FTP = file transfer
 term = terminal-to-program and program-to-program

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

interface

C = currently available

P = planned for implementation

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

SYSTEMS COMMUNICATIONS STANDARDS

SYCOM

SYCOM defines the standard functional characteristics for a nontransparent half-duplex mode systems communications mechanism.

SYCOM DATA COMMUNICATIONS STANDARD

This section defines the conversational SYCOM link procedure for operation over directly connected, leased, or switched lines. This SYCOM link procedure is a subset of the Burroughs Conversational Point-to-Point Line Procedure as defined in Burroughs Corporate Data Communications Standards, Document 1284 9006.

CONVERSATIONAL COMMUNICATIONS PROCEDURES

Figure 3-1 defines the basic conversational message transfer procedure. Conversational procedures allow reversals of direction of message transfer without separate establishment and termination procedures. This figure applies to a point-to-point circuit, either switched or dedicated. The establishment and termination procedures of figure 3-2 apply. An alternate timeout and recovery procedure is used whereby one station provides special timeout and recovery services for the other station.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

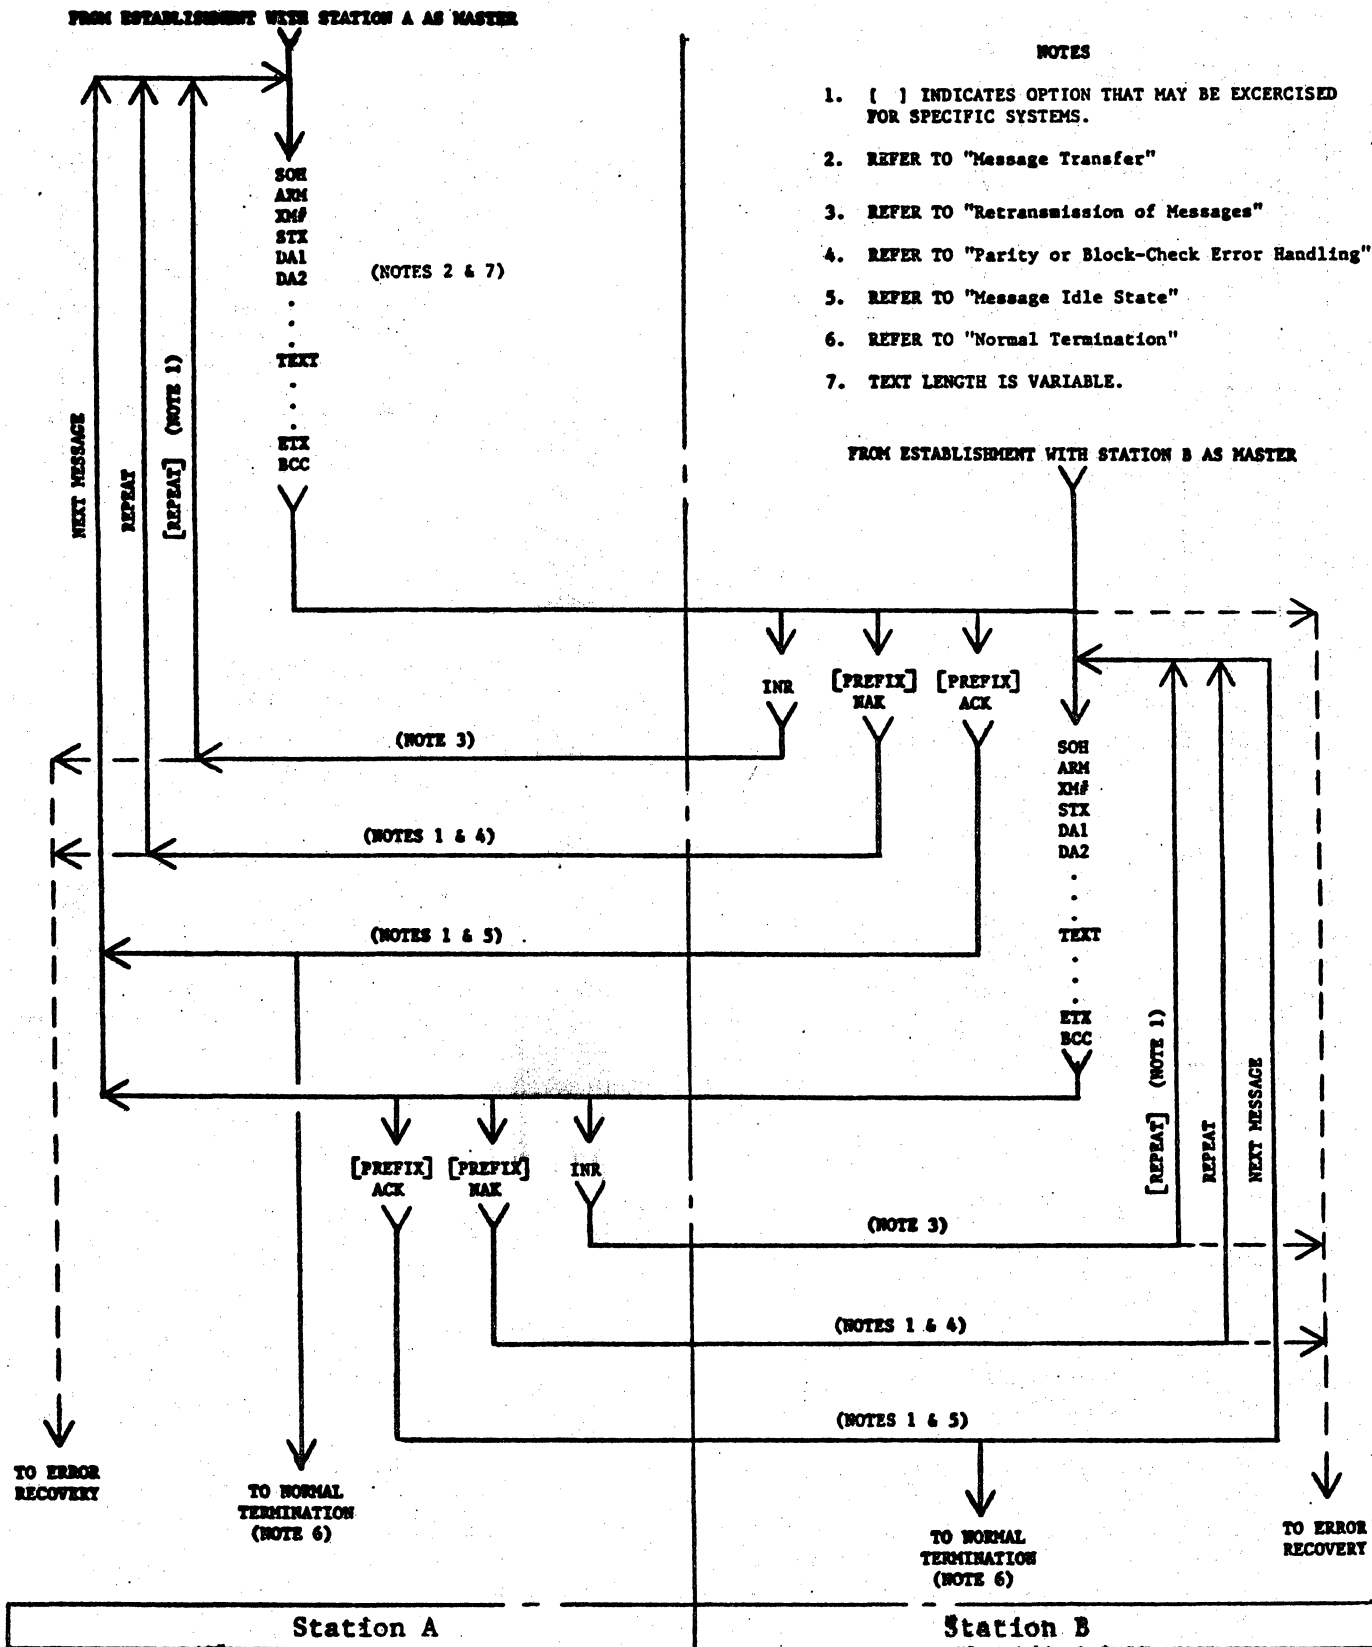 


FIGURE 3-1 CONVERSATIONAL COMMUNICATIONS PROCEDURES

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

Message Transfer

Message blocking is prohibited. Messages are delineated by special characters. A message begins with a SOH character and ends with a BCC character. The message stream is as follows: SOH, ARM, XM#, STX, DA1, DA2, the text of the message, ETX, and BCC.

Retransmission of Messages

If the master (transmitting) station does not receive a reply to its last transmission within some period of time, it may retransmit the unacknowledged message.

Parity or Block-Check Error Handling

If the slave station receives a recognizable message, but it contains character parity error(s) or a block check error, it may reply NAK. The master station should retransmit the message. This may be repeated 'n' times (n is user-specified and at least one), and if the error persists, either station may exit to error recovery.

Message Idle State

If the slave station receives a good message, but has no traffic to send, it responds ACK. If the master station has more traffic it sends another message. If the master station has no more traffic, it proceeds to the message idle state.

Normal Termination

The normal termination of a conversation occurs when one station sends ACK (indicating that it has no more traffic to send), and the station receiving the ACK also has no more traffic. The station receiving the ACK proceeds to the message idle state.

POINT-TO-POINT CONVENTION PROCEDURES

The essential characteristic of this procedure is that after the end of message transfer, as indicated by the transmission of the DLE EOT sequence, both stations are in an idle status (neither master nor slave), and that either station may bid for master status by sending the DLE ENQ sequence. See figure 3-2.

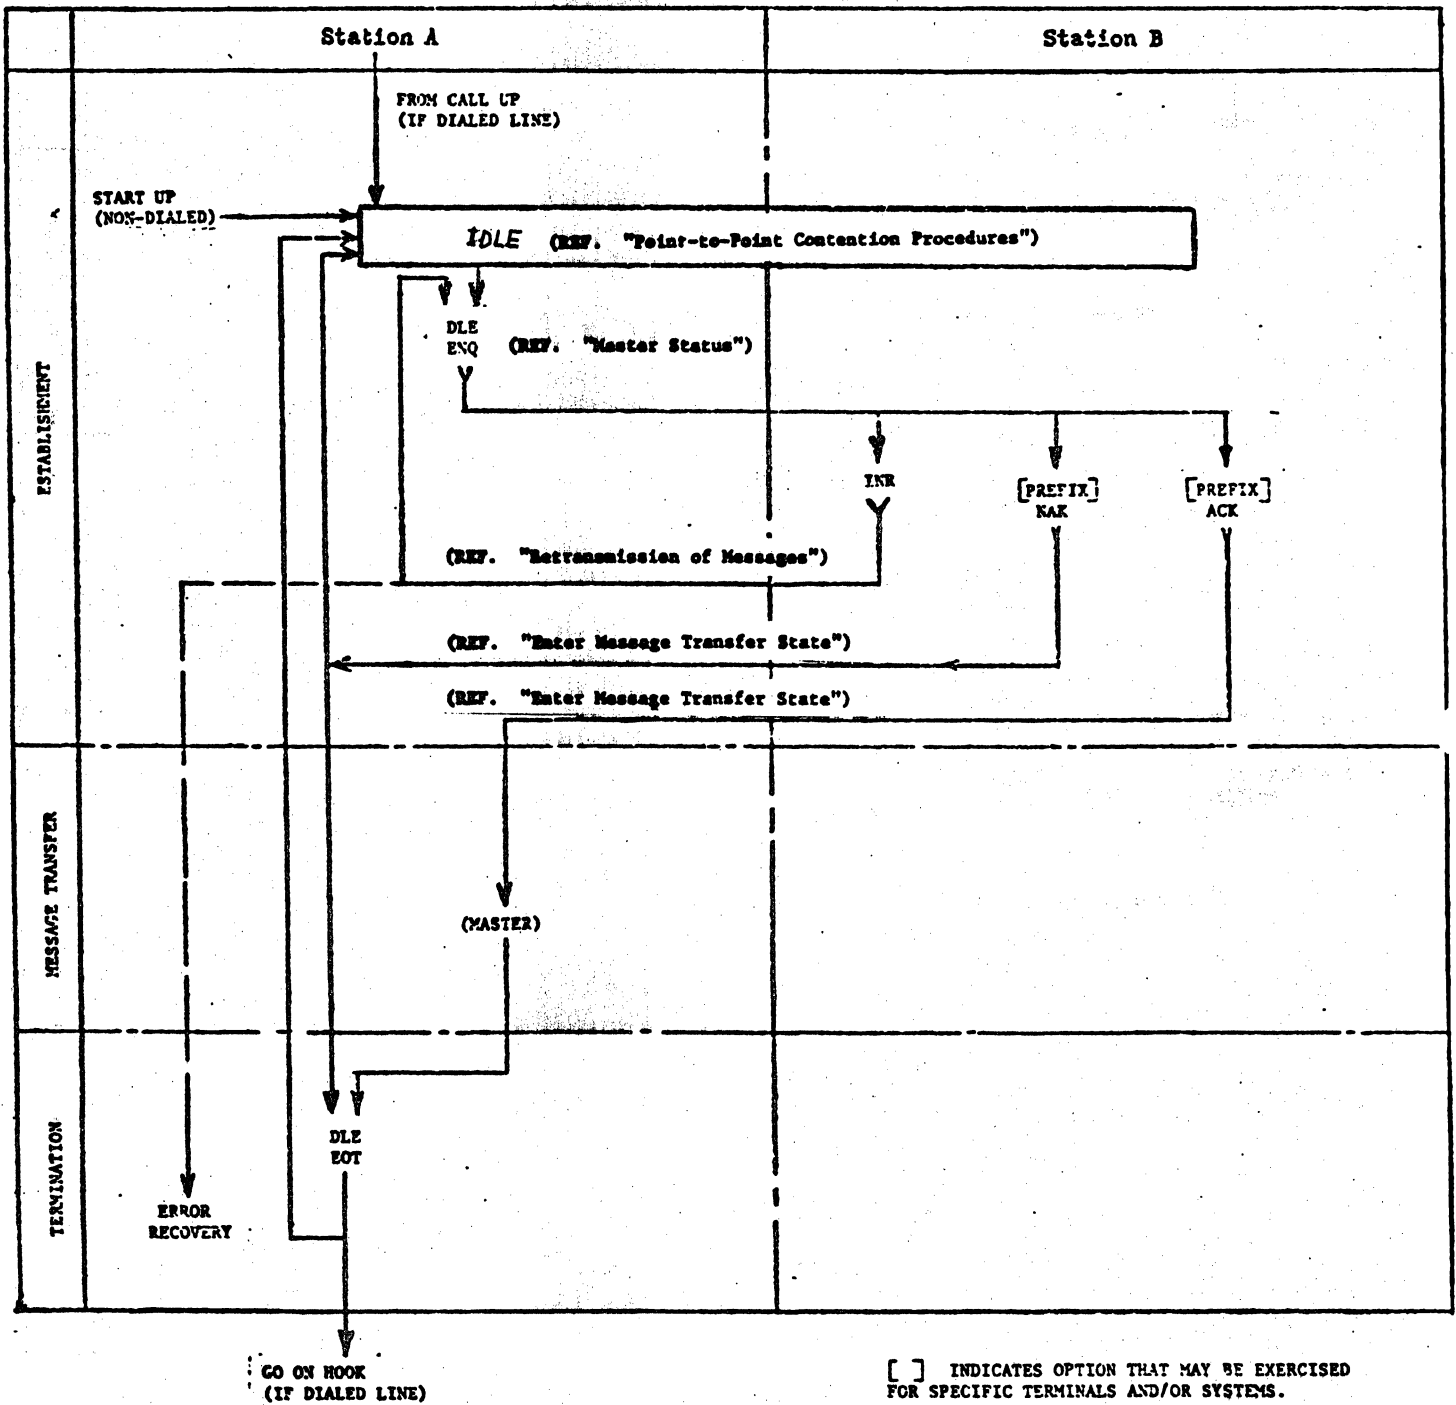 


Figure 3-2 Point-to-Point Contention Procedures

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SOS 2222 2590 (02)

Master Status

If either station in the idle state wishes to enter message transfer, it may bid for master status by sending DLE ENQ. If the same station had just terminated message transfer by sending DLE EOT, it is recommended that there be a delay before this station sends DLE ENQ again.

Enter Message Transfer State

If the station bidding for master status receives an ACK (indicating ready to receive) it may enter message transfer. If the response is NAK (not ready to receive), the DLE ENQ may be repeated up to a retry limit of 'n', (n is user-specified and at least one), and if no valid response is received, go to error recovery. If the station bidding for master status receives DLE ENQ, indicating that the other station is bidding at the same time, it shall abandon its own bid and reply in accordance with its readiness to receive. In order to avoid continuing line collision when both stations are bidding at the same time, the no-response timeout values should be of different length.

Termination

DLE EOT is transmitted to indicate the end of this session and, if switched lines, to disconnect the modem by going on hook.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

SYCOM PROCEDURE

The SYCOM flow chart provides a logic diagram of the detailed SYCOM procedure (see figure 3-3). Information and definitions for understanding the procedures are as follows:

1. The SYCOM procedure allows reversals of direction of message transfer without separate establishment and termination procedures. A message can be positively or negatively acknowledged with another message. This is accomplished by the use of the ARM (Acknowledge Received Message) character (defined below) contained within the message header.
2. Message blocking is prohibited. Each message is one block long, beginning with an SOH and ending with ETX followed by the BCC. The message header contains four characters defined as: SOH, ARM, XM#, and STX.
3. The ARM character indicates ACK or NAK of the previous message with respect to the validity or invalidity of that message. It is included:
 - a. within the header of each message.
 - b. as a prefix to an ACK character.

The ARM will be initialized to a NUL character (00) during the establishment phase of the procedure. When a valid message is received, the XM# will be saved and used as the next ARM character transmitted. It will be set to the NUL character value until a valid message has been received.

When an ARM sequence (ARM-ACK or SOH-ARM) is received, it will be compared with the last XM# sent and, if equal, the last message will be positively acknowledged. If the sequences do not agree, the last message has been negatively acknowledged and will be retransmitted.

The validity of the ARM character will be checked only if a valid header and message is received, that is, the ARM character will be assumed to be a NAK unless received in the header of a valid message or in a valid ARM-ACK reply.

4. The XM# is a one-character field. The recommended modulo 2 character sequence is F/U for the host, and 5/8 for the terminal. The XM#'s received will be checked against the previous XM# received and, if equal, a duplicate text is assumed and the text is ignored. It shall hereby be noted that the NUL character (00) must not be used as a

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

transmission number, after the first transmission.

5. An invalid character punched in the first column of an 80-column card (or a question mark character in the first column of a 96-column card) is replaced by a NUL character (00) prior to transmission.
6. Recommended timeout values for Invalid or No Response are 2.5 seconds and 3.0 seconds for terminal and host respectively.

CODES AND ERROR CHECKING

Character parity checking and longitudinal parity checking are used. An error in either check constitutes an erroneous message and will be negatively acknowledged. The character code used is the American Standard Code for Information Interchange (ASCII) ANSI X3.4 1967 (Appendix A). Each character consists of seven data bits and one parity bit. The parity checks are:

1. Longitudinal Redundancy Character (LRC). This is a redundant character added to the end of a transmission block for the purpose of error detection and control. The LRC is obtained as the binary sum (initialized to zero) without 'carry' on each of the bits of the characters following SOH, including ETX. The polynomial used in this "cyclic" accumulation is X to the power of eight plus one.
2. Character Parity. All characters, including the LRC, shall have the same parity. Synchronous transmission uses odd character parity and asynchronous transmission uses even character parity.

SYCOM RECORD (TEXT) FORMAT

The SYCOM record format is as follows:

```

DA1 DA2 [CC] <text> [RS [CC] <text> ...]
or DA1 DA2 [CC] FS 0 <text>
or DA1 DA2 [CC] FS 1 <text>
or DA1 DA2 [CC] FS 2 <text>

```

where:

DA1 and DA2 are device addresses indicating the source or intended destination of the text.

CC is used for control of special functions (only for the printer, not punch).

FS is the file separator.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

RS is the record separator.

<text> is a unit record, optionally modified by space compression and by deletion of trailing spaces. All text within a message is addressed to the same device.

DEVICE ADDRESSES (DA1, DA2)

DA1 and DA2 will be used for device addresses at the remote station. The convention used is:

DA1 ---		DA2 ---	Usage -----
0		0	System control
0		1	SPO
0		2	Card reader/card punch
0		3	Line printer
0		4	Data of a file transfer
0	through	5	Reserved for expansion
8		1	Packed punch
8		2	
8	through	3	Reserved
9		9	
a	through	A	User host transmit, or server host receive, virtual station data.
z		Z	
A	through	a	User host receive, or server host transmit, virtual station data.
Z		z	

See TERMINAL-TO-PROGRAM COMMUNICATION for more information on virtual station data. The device addresses are advisory only. The remote station may redirect a message to any appropriate device, based upon its own requirements.

Note that line printer data is allowed in either direction. When a system receives line printer data, it prints it on an available printer, independently of whether the system is "terminal" or "host".

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

DEVICE FUNCTIONAL CONTROL (CC)

A one-character field (CC) is used for control of special functions. The CC field is required and is valid only for messages addressed to a line printer. The CC field will always appear as the first character of a record when DA1=C and DA2=3, indicating that these records are destined for a line printer. The CC field controls the printer's vertical motion according to the following conventions (skip-to-channel is subject to hardware implementation):

CC	Function
--	-----
0	Print, no spacing
1	Print, then single space
2	Print, then double space
3-9	Reserved for expansion
A	Skip to channel 1 - top of page
B	Skip to channel 2
C	Skip to channel 3
D	Skip to channel 4
E	Skip to channel 5
F	Skip to channel 6
G	Skip to channel 7
H	Skip to channel 8
I	Skip to channel 9
J	Skip to channel 10
K	Skip to channel 11
L	Skip to channel 12 - end of page

FILE SEPARATOR (FS)

A separate message containing a file-separator character (FS) is used to separate files. The character following the FS is either "0", "1", or "2", indicating beginning-of-header, beginning-of-file or end-of-file, respectively. The text portion of the beginning-of-header or beginning-of-file separator record contains the file name. This name may be used at the recipient's discretion.

Example: begin header: SOH ARM XM# STX C3A FS 0 <text> ETX
begin file: SOH ARM XM# STX C3A FS 1 <text> ETX
end file: SOH ARM XM# STX C3A FS 2 ETX

The file-separator record is sent from either system signifying that the beginning or end of file has occurred for this device, or to prefix a copy of the file's symbolic file header (see MAINTENANCE OF FILE CHARACTERISTICS for more information).

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

RECORD SEPARATOR (RS)

Records are separated by the use of the ASCII control character RS. Character RS is not an end-of-record or a beginning-of-record designator, but is only used between records as a separator when several unit records are combined into a single SYCOM message. SPO records are never combined.

SPACE COMPRESSION

A sequence of consecutive space characters, up to 99 in length, may be replaced by an ASCII escape control character (ESC) followed by a two-character decimal number containing a count of space characters replaced. Greater than 99 consecutive space characters will require two or more ESC sequences. Trailing blanks may be truncated. SPO or packed records are not space-compressed or truncated.

SYCOM SYSTEM MESSAGES

In addition to the standard datacomm control interface, systems in the SYCOM environment need to communicate certain information via system messages to insure orderly operation. System messages are those messages whose DA1 and DA2 characters are 00.

SYCOM system messages are two-character decimal codes, followed in some cases by additional data. In the following definitions the code will be listed followed by its definition. The definition will be enclosed in parentheses. Beneath the code and definition will be an explanation of the code. The following are currently defined:

01 (Logged On)

(username & / < password > ?

Sent by the host system to the remote terminal to inform the terminal that the operator using the terminal has been logged on.

PPPP

020000 (Buffer Size)

Sent from either system, requesting a change in the length of messages being assembled for transmission. DDDD is the requested message length in decimal notation, e.g., 0200 means a maximum message size of 200 characters. Initial default buffer size is 402 (number of characters between STX and ETX).

A Buffer Size Request message is always answered with a Buffer Size Reply (04) message. Upon being logged on, the terminal should send this message to the host specifying the size of the largest message it can receive. Thereafter, this message may be sent to request an increase or a decrease in

???

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

actual message size. A decrease might be requested to reduce error rates on a marginal circuit.

It is important to note that the absolute maximum length of messages which will be accepted on input is specified only by the initial exchange of Buffer Size Request and Buffer Size Reply messages. Subsequent requests exceeding the original specification will result in message lengths conforming to this specification.

The maximum buffer size is 9999.

03 (Logged Off)

Sent from the host to the remote terminal to indicate that the terminal is no longer logged onto the host system.

^{FFFF}
 04DDDD (Buffer Size Reply)

Sent from either system as a reply to Receive Buffer Size request (02) message. DDDD is as defined for Buffer Size Request. When replying to the initial Buffer Size Request (after log on), the host system will specify the largest message it can receive. After the initial Buffer Size Request/Buffer size Reply message exchange, either system will reply to a Buffer Size Request message with a Buffer Size Reply message containing the maximum length of message that it will, henceforth, assemble. This length will be the smaller of the following:

1. The requested length.
2. Its maximum buffer size.

05[DA1][DA2] (Device Not Ready - Suspend)

Sent from either system instructing the other to suspend transmitting messages for DA1 and DA2. Indicates a temporary condition at the device (e.g., line printer out of paper). A Device Ready (07) system message should be sent to resume transmissions when the condition is corrected. If the condition is not corrected, a Device Not Ready Abort (06) system message should be sent.

06[DA1][DA2] (Device Not Ready - Abort)

Sent from either system informing the other that an uncorrectable condition exists preventing the processing of additional transmissions for device DA1, DA2. The received messages for that device are discarded. The transmitting system must preserve the entire file.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

07[DA1][DA2] (Device Ready)

Sent from either system:

1. After a Device Not Ready (05 or 06) system message to indicate that the condition has been corrected and the device is again ready to receive data, or
2. Whenever a device which was unavailable becomes available to receive data, or
3. Immediately after a Logged On (01) system message to indicate each device that is ready and available to receive data. (Optional) *otherwise no further tracking for Dick Holmes. 1/15/72*

09CCCCLVVDDSSS (Station-id)

Sent from either system prior to logging on to provide a positive means of identification, independent of any security function. This message includes the sender's CPU model identification and an indication of which part(s) of the protocol he has implemented. A terminal must be prepared to accept this message.

"DD" is the number of characters in "SSS", which is the sender's station identifier (between 1 and 17 characters long, inclusive). "CCCC" is the sender's system type, left-justified and padded with blanks to 4 characters (e.g. "1700", "6700", "771 "). (This allows similar systems to identify each other and engage in specialized communication inappropriate between dissimilar systems.) "L" is a character that indicates which parts of the protocol the sender supports. It is constructed as follows: The high-order two bits are 01, the next two bits are 0, and each of the low-order 4 bits corresponds to one part of the protocol: hex 1 bit set means "can act as host", hex 2 means "can act as terminal", hex 4 means "can do file transfer", hex 8 means "can do terminal to program communication". (For example, an ASCII "A" would mean "can act as host", or ASCII "E" means "can act as host and can do file transfer".) "VV" is a 2-character decimal number indicating the version of the protocol implemented by the sender; this document is version "02".

*need ①
ASCII/ASCII
② LMS*

③ char

01	LEVEL_RECORD,		Z length = 1 byte
03	CONSTANT_BITS	BIT (4),	Z 2(1)01002
03	TERMINAL_TO_PROGRAM	BIT (1),	
03	CAN_DO_FILE_TRANSFER	BIT (1),	
03	CAN_ACT_AS_TERMINAL	BIT (1),	
03	CAN_ACT_AS_HOST	BIT (1);	

This message may be sent by either system. On receipt, a host may initiate a log-on sequence, but a terminal may not. In the case of 2 hosts communicating with each other, either

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

one, both or neither may log on to the other. If both systems send this message, they may not both specify the same station identifier, since this is used as the "host name" elsewhere.

10 (Put File)

Contains identification of the user originating the request and filename and attributes of both source and destination file (see "Format of Put/Fetch Messages" for complete definition of format). The "Put" message elicits a response of "Put reply".

11 (Fetch File)

Contains identification of the user originating the request and filename and attributes of both source and destination file (see "Format of Put/Fetch Messages" for complete definition of format). Elicits a response (perhaps after a time lag) of "Put File".

12 T U U U U text (User-destined Message)

"T" specifies whether destination is the SPO ("0"), a user program ("1"), or a user at a terminal ("2"). "UUUU" identifies the user program or terminal, in a system-defined way. In any case, "text" is routed to the specified destination. Used as answers to message type 13.

13 T U U U U N N N N <filename> (List Fetches)

T and U have the same meaning as in message 12; NNNN is the file number, if specified; otherwise blank. <filename> is the filename if specified, otherwise it is blank (file name can be "=").

15 (Close Request)

The recipient is to terminate the session in an orderly way, after completing any file transfers it is currently executing. The sender only sends this message when it is not transmitting any files, and the receiver responds with a Close Reply when it is not transmitting any files.

16 (Close Reply)

Sent in response to a Close message. On exchange of Close replies, both systems are to terminate the session and break the connection. If a switched line, both systems hang up; if a leased line, it is an implementation decision whether to re-establish or not.

NNNN

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

17CC <optional text> (Put Reply)

Sent in response to a Put message to indicate initial success or failure of the file storage request. "CC" is the outcome code: "00" is success, "01" is "failed for lack of resources" (includes "pathname not found", and "no more disk space"), "02" is "failed for security violation", "03" is "failed for invalid filename syntax", "04" is "failed for unimplemented device or file attributes", "05" means "this system does not support file transfer" and "06" means file already exists when "AS" requested. Implementers are encouraged to distinguish between various cases of these errors, and to recognize other errors; the user should be supplied with information as specific as possible. It is the responsibility of the system doing the PUT, when it receives a Put Reply with a failure code, to notify the user of the error regardless of which system contains the user. New error codes will be added as needed. The <optional text> could be used to further explain (symbolically) the error conditions.

18TUUUUNNNN<filename> (Abort Put)

Sent from either system to request that the specified PUT be aborted, and that any portion of the file already written be discarded. NNNN is the file number, if specified; otherwise it is blank. The <filename> is the file name, if specified; otherwise it is blank (file name can be "="). If no file is specified (by number, name or "=") then the current PUT is specified. If no PUT is in progress, this is a NOP.

19TUUUUNNNN<filename> (Abort Fetch)

Sent from either system to request that the specified FETCH be aborted, and to advise that any portion of the file already written has been discarded. NNNN is the file number, if specified; otherwise it is blank. The <filename> is the file name, if specified; otherwise it is blank (file name can be "="). If no file is specified (by number, name or "="), then the current FETCH is specified. If no FETCH is in progress, this is a NOP.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
81800/81700 SYCOM
SDS 2222 2590 (02)

20VV characteristics (Connect)

Sent from user system to server system to request establishment of a terminal-to-program connection. "VV" is the virtual station address to be used for the proposed connection, and is the user system's transmit address. "characteristics" describe the characteristics of the real terminal, to allow the server program to format messages appropriately, if desired. The characteristics, taken from Common NDL, are:

station ID	20 characters
line width	4 characters
CRT boolean	1 character
"0" = not CRT	
"1" = CRT	
MYUSE	1 character
"1" = input only	
"2" = output only	
"3" = input/output	
maximum input length	4 characters
maximum output length	4 characters
page size (in characters)	4 characters
terminal type (from user system NDL; left-justified)	20 characters

Optional text >

21VCC (Connect Reply)

Sent from server system to user system to respond to a Connect message. States whether or not a terminal-to-program connection has been established for virtual station number "VV" (user system's transmit address) via the response code "CC": "00" for success, "01" for invalid address or system full, "02" for no MCS reading on station, and "03" for already connected.

22VV (Disconnect)

Sent from user system to server system to break an existing terminal-to-program connection for virtual station address "VV". There is no reply.

23 (EOF Confirmation)

Sent by a system receiving a file, after completing all processing of it, to confirm receipt of the sender's end of file. Also sent at connection-establishment time if no file is being received, to synchronize the two systems after a crash. (See FILE TRANSFER RECOVERY for more information.) On receipt, this message is ignored if no PUT is in progress.

The following chart of system messages depicts the requirement for implementation of these messages for both the host system and

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

the remote terminal:

Message	Host System		Terminal system		
	Code	Recv	Send	Recv	Send
01	Not required	Mandatory	Mandatory	Not required	
02	Mandatory	Mandatory	Mandatory	Optional	
03	Not required	Mandatory	Mandatory	Not required	
04	Mandatory	Mandatory	Mandatory	Mandatory	
05-07	Mandatory	Optional	Mandatory	Optional	
09	Mandatory	Optional	Mandatory	Optional	
10-23	Optional	Optional	Optional	Optional	

Note: Message codes greater than 03 are not implemented by DC1000. Message codes 10-19 are file-transfer related; if file-transfer is implemented, they are mandatory.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

FORMAT OF PUT/FETCH MESSAGES

Following is the format of the Put and Fetch messages, starting with the first character after the system message code. The put message is identical to the Fetch message except for the message code (note that the put message has no logical need to specify the source file identification; this is included for consistency). All numerical values are specified in character representation of decimal values, and have maximum values of all 9's.

Character (354)

```

01 PUT_OR_FETCH_RECORD,
  02 REQUESTOR CHARACTER(6),
    03 REQUESTOR_TYPE CHARACTER(1),
      % 0 = SPD user
      % 1 = user program
      % 2 = terminal user
    03 REQUESTOR_ID CHARACTER(4),
      % program ident or terminal ident.
    03 REQUESTOR_DIRECTION CHARACTER(1),
      % P = original request was "PUT"
      % F = original request was "FETCH"
  02 REPLACE_FLAG CHARACTER(1),
      % 0 = do not replace existing file "AS"
      % 1 = replace existing file (if any) "ONTO"
  02 ORIGINAL_SYSTEM_TYPE CHARACTER(4),
      % in the same format as
      % "CCCC" in station-id message
  02 BEGINNING_RECORD_NUMBER CHARACTER(8),
      % record number at which to
      % start transfer
  02 RECORD_COUNT CHARACTER(8),
      % number of records in file
  02 RECOVERY_FETCH CHARACTER(1),
      % 0 = not a recovery FETCH
      % 1 = this is a recovery FETCH
  02 SOURCE_FILE CHARACTER(17),
    03 FILE_NAME CHARACTER(100),
    03 DEVICE_KIND CHARACTER(2),
      % 00 = disk
      % 01 = tape (any available)
      % 02 = 9-track tape
      % 03 = 7-track tape
      % 04 = phase-encoded tape
    03 RECORD_SIZE CHARACTER(4),
    03 BLOCK_SIZE CHARACTER(4),
    03 PACK_NAME CHARACTER(17),
    03 FILE_KIND CHARACTER(2),
      % 00 = code file
      % 01 = data file
      % (other types may be added)
  
```

Zero/relative

163

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

03 USERCODE	CHARACTER(17),
03 PASSWORD	CHARACTER(17),
02 DESTINATION_FILE	CHARACTER(17); 163 X
	Z (format same as "SOURCE_FILE")

In this record, the source FILE_NAME is in whatever syntax is appropriate for the source system and the destination FILE_NAME syntax is appropriate for the destination system. If an implementer wishes to allow transfer of a file family, he must do so by initiating one transfer for each member of the family. The destination file must be created with the specified FILE_KIND, so it will be of the same type as the source file. Note that the source and destination RECORD_SIZES must be the same. Note also that a system is not required to implement all values for all options; if it receives a request specifying a device kind, file kind, or size parameter that cannot be handled, it may return an error of "unimplemented option".

FILE TRANSFER

File transfer is supported for disk and tape devices, and files may be transferred between any combination of these. Tape transfers are restricted in that only one file per tape may be transferred, and library-maintenance (load/dump) tapes are not supported (these tapes may be transferred by loading to disk before transferring). Between dissimilar systems only code files and 8-bit data files (including text files) are allowed. Similar systems are permitted to agree to transfer other files (e.g., printer backup files, arbitrary frame-size files). The protocol allows transfer of only one file at a time in each direction.

The user initiates a file transfer by entering a variation of the CSG standard "COPY" statement. This command specifies source and destination hosts for the transfer, by naming their "host names". These two names must be the names specified in the Station-id system messages at initialization. If the specified source host is the local host, the transfer is a PUT; if the source is the remote host, the transfer is a FETCH.

 
The actual transfer of a file is initiated by exchange of control information between systems. All transfers occur as PUTs; if one system wishes to do a FETCH, it sends a Fetch message to the other system, which causes it to initiate a PUT sequence, sending a Put message. The Fetch and Put messages completely specify both source and destination file. The Put message elicits a Put reply, signifying that data transfer may begin. The sender then sends one or more data messages (device address 04) followed by an end-of-file message.

On completion of file transfer, the system that received the file informs the original requestor of completion of the request. If the requestor is foreign to this (the receiving) system, the notification is by a User-destined message.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

The exchange of messages for a file transfer is diagrammed below:

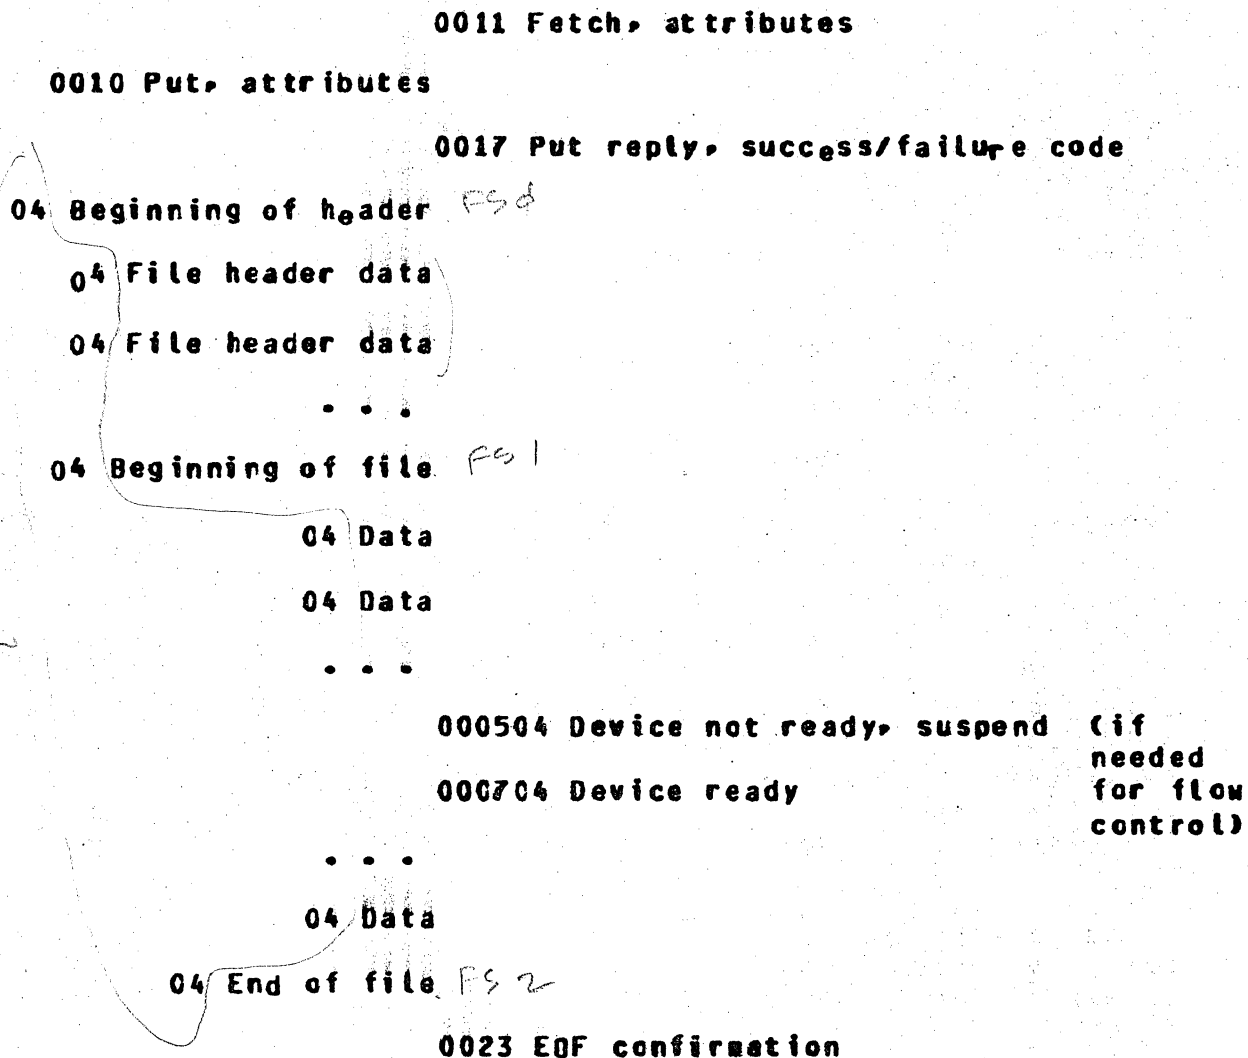

As shown in the diagram, the 0005 "Device not ready - suspend" and 0007 "Device ready" messages are used for flow control.

MAINTENANCE OF FILE CHARACTERISTICS

A goal of the file transfer mechanism is to maintain as many of a file's characteristics as possible across the transfer. For example, if a FORTRAN source program is transferred, it should be capable of being compiled without further modification, and if a code file is transferred to a like system, it should be executable without further modification.

Specifically, if a file is transferred between two like systems, even if via one or more unlike systems, all of its characteristics must be preserved. To accomplish this, a

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 259C (02)

symbolic version of the file's file header (understandable to all systems) is transferred with the file. This symbolic file header is the same as that used by the CSG standard library tape format. It is prefixed in the data stream by a beginning-of-header FS 0 message and may comprise one or more data messages.

When the symbolic file header is received, it is parsed and as many of the file characteristics therein as make sense on the receiving system are incorporated into the file being created (this may be all the characteristics or none). If the file is transferred to a system type other than the one where it was originally created, the symbolic file header and original system type are saved with the file, to be forwarded with the file whenever it is again transferred. If the file is transferred to its original system type, the entire symbolic file header is incorporated to create a file identical in characteristics to the original file, and the symbolic header is not saved.

When a system sends one of its own files, it must include in the symbolic file header enough information for it to recreate that file if returned, so as to look identical to the original file, with the exception of filename (this is conveyed in the PUT_OR_FETCH_RECORD).

Not every file transfer will include a symbolic file header. Some systems may not be able to save symbolic headers, and so will not be able to forward them on subsequent transfers (but this must be advertized). Also, a foreign-created file may be modified or replaced locally, thus invalidating the saved symbolic header. In this case, the symbolic header may be omitted, or used to describe the file according to its new creation system type.

The means of saving the symbolic file header and associating it with the file are implementation choices, but here are four suggestions, the first three of which probably require MCP changes.

1. Save the symbolic header as an extension of the real header, maintained by the MCP.
2. Save the symbolic header within the data of the file, but hidden from all programs except SYCOM (for example, if the file is FORTRAN source, the symbolic header must be invisible to the FORTRAN compiler).
3. Save the symbolic header in a secondary file given a unique name that can be inferred from the name of the data file. In the case of tape volumes, the secondary file could be the second file on the tape, after the data file.
4. Save symbolic headers for all files received by SYCOM in a common directory file maintained by SYCOM.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

Alternately, one such directory file could be maintained on each volume, containing symbolic headers for data files on that volume.

FILE TRANSFER RECOVERY

Any file transfer operations that cannot be executed when requested because another transfer is in progress must be queued (in a non-volatile medium) and executed when possible. (All requests are queued as PUTs, so if a user requests a FETCH, the request is sent to the other SYCOM, where it is queued as a PUT on that system.)

During a file transfer, both SYCOMs must maintain enough information that if one or both systems fail, the transfer can be restarted at the point it was interrupted (rather than at the beginning). This means that while sending a file, SYCOM must remember (in a non-volatile way) that it is sending a file, and that while receiving a file, SYCOM must remember (in a non-volatile way) that it is receiving a file, and how many records have been actually written to the destination file (the non-volatile copy of this value need not always be absolutely current).

Whenever the SYCOM connection becomes established (regardless of which SYCOM came up first), each SYCOM looks to see if it was in the process of receiving and/or sending a file. If in the process of receiving a file, SYCOM sends a FETCH request specifying that this is a recovery request and specifying the number of the record with which to restart the transfer. If not in the process of receiving a file, SYCOM conveys this fact via an EOF confirmation message to the other SYCOM for synchronization purposes. If SYCOM sees at establishment time that it was in the process of sending a file, it holds that request in abeyance, pending receipt of the recovery FETCH request. On receipt, it restarts the transfer at the specified record number (it is recommended that this be done in a direct-access way rather than skipping through the records to reach the desired point, but whether and how this is done is left to the implementor). (Note that since a given SYCOM can be sending and receiving a file at the same time, it must make both of the above checks at connection-establishment time.)

When SYCOM notices the other system breaking the connection on a switched line, it should wait for re-establishment and verify the host name specified in the Station-id message. If connection is re-established on the same line, but the host name is different, all file transfer requests involving that host are purged.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

TERMINAL SYSTEM MESSAGES

All instructions to or replies from the terminal are called local messages. All local messages start with a period (.). Messages not starting with a period are assumed to be input or output to or from the host system. The following set of local messages is recommended.

Note: These messages are meant to be a guideline and depend upon the particular needs of an installation.

1. The unit device identification scheme normally used by a terminal should be substituted in the following messages wherever "x" appears.
2. If device mnemonics are used, the following standard applies:
 - a. CP - Card punch
 - b. CR - Card reader
 - c. LP - Line printer
 - d. MT - Magnetic tape
 - e. CS - Cassette

INPUT MESSAGES

.ABORT FETCH <operand>

Aborts the FETCH in progress, if any.
 Initiates system message code 19.

.ABORT PUT <operand>

Aborts the PUT in progress, if any.
 Initiates system message code 18.

Both .ABORT PUT and .ABORT FETCH include an optional operand defined as follows:

<operand> := <number> Will remove PUT or FETCH <number> from the waiting schedule of files to be transmitted.

<operand> := = Will clear PUT or FETCH schedule.

<operand> := <filename> Will remove <filename> from the waiting schedule of files to be transmitted.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
81800/81700 SYCOM
SDS 2222 2590 (02)

- <operand> := No operand indicates an ABCRT PUT or an ABORT FETCH is in progress.
- .BYE Upon receipt of this command, SYCOM should return control of this terminal to any previous MCS. SYCOM would be expected to do an implicit .DISCONNECT if this terminal were currently connected to another host.
- .CL MT x Causes the magnetic tape buffers associated with drive x to be discarded and the tape rewound.
- .CL x Command to be given to clear buffers in the event device x becomes inoperable during transmission or reception of data.
- .CONNECT *Handwritten: this is not a list* Means connect the terminal or SPO as a virtual terminal to the remote system (using the virtual LSN concept).
- .COPY filename [(USER=a, PASSWORD=b)]

AS
[filename [(USER=c, PASSWORD=d)]]
ONTO

FROM [volume] ([KIND= PACK
TAPE
PETAPE ,] HOST=hostname)
TAPE7
TAPE9

TO [volume] ([KIND= PACK
TAPE
PETAPE ,] HOST=hostname)
TAPE7
TAPE9

where:

- { } denotes choice of items.
[] denotes optional item.
name denotes variable name.
NAME denotes literal text.
"AS" means "create a new file of this name".
"ONTO" means "write over existing file of this name".
"volume" defaults to system disk (if "KIND=" is also defaulted).
"KIND=" defaults to "KIND=PACK".
"DISK" is an abbreviation for "KIND=PACK".
"USER=a/b" is an abbreviation for "USER=a, PASSWORD=b".
"filename/=" is to be interpreted as the whole directory ("="/=" only to be allowed if a usercode is supplied).

not yet done

[BINARY]

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

Transfers the specified file in the direction specified by the source and destination hostnames. User/password values identify the user for purposes of verifying access rights to the specified file, and perhaps also affect defaults for parts of the filename. Source user/password default to those of the logged-in user, and destination user/password default to those of the source. Destination filename defaults to that of the source (in which case the "AS"/"ONTO" option defaults to "AS"). Initiates system message code 10 or 11.

.DISCONNECT

This is the inverse of .CONNECT and disconnects the virtual terminal from the remote system.

.EOJ

This entry will cause a terminal to revert to a non-SYCOM mode if appropriate, and sends a CLOSE message to the remote system to request it do the same. This entails an orderly cycling down of jobs and terminals before coming to END-OF-JOB.

.IGNORE x

This message can be entered in response to the local output message:

.MT x PE Where: x = Unit #

It causes the last record to be re-read ignoring any parity errors.

.LIST PARAMETERS

PUT <operand>
 FETCH <operand>

See definitions of <operand> from .ABORT. This command will display the local system PARAMETERS at either a terminal or a SPO. If .LIST PUT or .LIST FETCH is entered from a terminal, the waiting schedule of a user's file transfer request as specified by the <operand> will be displayed. If entered from the SPO, the waiting schedule of all file transfer requests as specified by the operand will be displayed.

.OFFLINE

This is the inverse of .ONLINE and breaks the connection if access was via a switched line. The program remains in the mix.

.ONLINE [hostname] Places the local system in the online mode.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

attempting to establish or re-establish communications with the specified host system. If no hostname is specified, or the last-named host is specified, re-establishes connection to the last-named host (if connection was broken for some reason). If a hostname other than the current one is specified, this command breaks connection to the current host if necessary, and establishes connection to the specified host. (If the host system is accessed via a switched line and its telephone number has been specified via .PHONE, .ONLINE initiates dial-out.) Invalid occurrences of this command are: the first .ONLINE has no hostname, an .ONLINE command with no hostname when the connection already exists, and an .ONLINE command specifying the current host when the connection to it already exists.

.PHONE
 .PHONE =
 .PHONE [new phone number]

If an auto-dial unit is supplied, specifies the telephone number to be used the next time dial-out is initiated to establish connection to the specified host. (Dial-out is initiated by the .ONLINE message.) The .PHONE with no operand will display the current phone number, .PHONE = will remove and clear the current phone number and .PHONE <new phone number> will enter into the system the new phone number, replacing any previous number. An optional "=" may be inserted between .PHONE and <new phone number>.

.PURGE x tttttt

Write a tape label on magnetic tape drive x with the ID of tttttt. The following rules apply:

1. The tape label (tttttt) must be six characters. If less than six characters, the tape is considered a scratch tape.
2. If the tape is in use when the command is issued, the MCP will ignore the command.
3. If no label (tttttt) is specified, the tape is made into a scratch tape.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 259C (02)

.READ [CARD] <filename>
 [DISK]
 [TAPE]

This command initiates the transfer of a card deck to be run as a job from the card reader, a disk file or a tape file. If no device type is specified, "CARD" is assumed. "filename" is the fully-qualified file name, and if not specified, defaults to "RJE/CARDS".

.READY x

Read tape label on magnetic tape drive x and display label on SPD.

.RETRY x

Informs the system to retry reading the record in question from magnetic tape drive x. This entry can be made in response to local output message .MT x PE.

.RY x

Informs the SYCOM terminal system that unit x is available and ready. Initiates system message code 07.

.SIZE=nnn

Informs the SYCOM terminal system to set the block size of information to be transmitted to the central system, equal to nnn. The nnn must be in the range of 80 to 402, inclusive. Initiates system message code 02.

.STOP

Terminate program immediately.

.SV x

Directs the terminal system to inform the host system to cease transmitting or receiving data from device x and to save the entire current file. Initiates system message code 06.

The **.ABORT FETCH**, **.ABORT PUT**, **.BYE**, **.CONNECT**, **.COPY**, **.DISCONNECT**, **.LIST** and **.PHONE** commands should be the only ones allowed from a terminal. All commands are allowed from a SPD.

QUIPUI MESSAGES

Under certain conditions, the SYCOM terminal system will supply information to the operator via the console typewriter. Some of these messages require an action by the operator. These messages will be identified in the operator's manual. For each of the SYCOM output message listed, a code number is given. If the message is returned to a program rather than displayed on a console, this code number will be included to avoid the need for the program to parse the text of the message.

00 **-CP-CHK**

The card punch has detected a punch error on the last card punched.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

01	.CP-NR	The card punch is in a not-ready state.
02	.CR-CHK	The card reader has detected a read error on the last card read.
03	.CR-INV	The card reader has detected an invalid punch in a column other than column 1.
04	.CR-NR	The card reader is in a not-ready state.
05	<ERR>	The error pushbutton was depressed. Re-enter all information.
06	.HOST EST	Informs the operator that the system has established or re-established communications with the host system.
07	.HOST TERM	The terminal system has been placed in an off-line mode due to: <ol style="list-style-type: none"> 1. Having received an End of Transmission indication from the host system. 2. Direct result of keyboard entry DISCONNECT, which causes termination of all activity.
08	.INV-KBD	Indicates that an invalid operation has been performed on keyboard input, such as: <ol style="list-style-type: none"> 1. Attempting to type in more than 80 characters for an input message. 2. Enabling keyboard input and typing at a rate of less than one character every ten seconds, or not depressing the EDM button at completion of input. 3. Input of a message which is inappropriate, e.g., typing ".ONLINE" when the system is already online to the specified host. 4. Input of a message which is not defined. 5. Incorrectly inputting a message. 6. Attempting to type in a message for the host system when sufficient

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

space is unavailable.

7. An error condition occurred during keyboard input, or an invalid key was depressed. Re-enter all information.

- 09 .LP-CHK The line printer has detected a print error on the last line printed.
- 10 .LP-NR The line printer is in a not-ready state.
- 11 .MT x BE Number of blocks that have been read is incorrect.
- 12 .MT x FE Magnetic tape has incorrect format.
1. Record size not correct, or
 2. No ending label or file mark.
- 13 .MT x FT Foreign magnetic tape. Record format incorrect.
- 14 .MT x NL No label on tape or magnetic tape drive x.
- 15 .MT x NR Magnetic tape drive x not ready.
- 16 .MT x PE Tape parity error on magnetic tape drive x.
- 17 .MT x REEL Another reel of tape is required on magnetic tape drive x.
- 18 .MT x MI Tape on unit x is write inhibited.
- 19 .MT x zzzzzz/##### rrr (dddd) Tape label information pertaining to tape on magnetic tape drive x:
- zzzzzz = File name
- ##### = Multifile id or zeros
- rrr = Reel number
- dddd = Creation date of SYCOM system

The following messages are self-explanatory:

20 FILE <filename> NOT FOUND

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
81800/81700 SYCOM
SDS 2222 2590 (02)

- 21 FILE <filename> LOCKED
- 22 FILE <filename> FILE TYPE CANNOT BE TRANSMITTED
- 23 CAN'T SCHEDULE NOW; TRY AGAIN LATER
- 24 REQUEST SCHEDULED; WILL SEND FILE <filename> ASAP
- 25 FILE <filename> START TRANSMISSION
- 26 FILE <filename> END TRANSMISSION
- 27 ONTO-PACK OR USER-CODE NOT FOUND--COPY ABORTED
- 28 FILE <filename> IN USE AT DESTINATION--COPY ABORTED
- 29 FILE <filename> RECORD SIZE IS TOO BIG
- 30 FILE <filename> TOO MANY RECORDS
- 31 REQUEST SCHEDULED--REMOTE RJE OFFLINE
- 32 UNABLE TO ESTABLISH COMMUNICATION
- 33 UNABLE TO DIAL OUT
- 34 NOW DIAL HOST
- 35 ALREADY CONNECTED; CAN'T DIAL
- 36 DIAL REQUESTED BUT NO ACU DEFINED
- 37 INVALID PHONE NUMBER
- 38 SYCOM IS CLOSING; CANNOT ACCEPT INPUT
- 39 General syntax error (exact text explains further)
- 40 SYCOM CLOSING ON REQUEST FROM REMOTE SYSTEM
- 41 SYCOM WILL CLOSE WHEN NEXT IDLE
- 42 LOST CONNECTION TO REMOTE SYSTEM SYCOM
- 43 REMOTE SYCOM HAS GONE DOWN AND COME BACK UP
- 44 THERE IS NO 'PUT' IN PROGRESS TO ABORT
- 45 PUT OF FILE <filename> ABORTED
- 46 THERE IS NO 'FETCH' IN PROGRESS TO ABORT
- 47 FETCH OF FILE <filename> ABORTED

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

48 SYCOM NOW ONLINE TO HOST <hostname>

COMMUNICATION ERROR MESSAGES

Error reporting may be handled one of two ways. The following errors may be reported individually as they occur:

- | | | |
|----|-------------|--|
| 49 | .DSET-NR | Data Set (Modem) is in a not-ready state. |
| 50 | .LN-ERR | Buffer currently transmitted by the terminal system has been discarded because retry count has been exceeded. |
| 51 | .NSP-EXP | In the process of transmission of data to the host, the system has exceeded the allowable number of NO RESPONSE retries. |
| 52 | .RX-RTYS-UP | In the process of data reception from the host, the system has exceeded the allowable number of error retries. |
| 53 | .TX-RTYS-UP | In the process of transmission of data to the host, the system has exceeded the allowable number of retries. |

Alternately, all errors may be reported by the following message:

54 .RETRYS UP

HOST SYSTEM MESSAGES

Applicable host system messages are found in the appropriate host master control program or language operations manuals.

ACCEPTABLE CHARACTERS FOR TERMINAL SPO

The following list constitutes the set of characters which are acceptable for transmission from a remote station's SPO. The entry of any character not listed shall either be deleted from the message prior to transmission, or shall invalidate the entire message prior to transmission, or shall invalidate the entire message at the remote station.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

C through 9	Blank or space
A through Z	Plus
+	Minus or hyphen
-	Asterisk
*	Virgule (slash)
/	Equal sign
=	Dollar sign
\$	Comma
,	Period
.	Semicolon
;	Colon
:	Quote mark
"	Left parenthesis
(Right parenthesis
)	Greater symbol
>	Less symbol
<	At sign
@	Exclamation mark
!	Left bracket
[Right bracket
]	Apostrophe
'	Question mark
?	Number mark
#	Ampersand
&	Percent sign
%	Reverse virgule (slash)
\	Up-arrow
↑	Left arrow or shifted O (Reversed for backspace function; nontransmittable)
LF	Line feed (nonprinting)
BELL	Control G (nonprinting)

The following is a table of equivalence for allowable control characters.

Carriage Return/Control C/ETX/End of Message

Rubout (Delete)/Control U/Error

Left Arrow/Shifted O/Backspace

allow
w/ll's

NOT

grave accent
f, l, d, e
left brace
right brace

} for terminals

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

SYCOM TRANSMISSION OF PACKED DATA

DATA RECORD FORMAT

As in previous version of this protocol, data records within the same transmission are separated by RS characters, and repeated blanks are compressed with the ESC-integer mechanism, but the method of representing non-printable characters is changed. The printable characters are those in the above list (acceptable characters for terminal SPD), except LF and BELL.

If the record contains only these characters, the first character of the record is not a DLE. If the record contains any character not in this list, the first character of the record is a DLE, and the remainder of the record contains translated data. The original data is translated such that every 4 bits is mapped into an 8-bit printable character. This mapping is accomplished by prefixing the 4 bits of data with 4 bits of hex 4.

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

TERMINAL-ID-PROGRAM COMMUNICATION

The protocol supports a user at a terminal in one host connecting to an interactive applications program in another host, and using it as if he were locally attached to the program. The main goal of this protocol is to minimize the visibility of the interfacing software, such that it appears to the user as if were directly connected to the applications program, and such that existing applications programs (e.g., CANDE) may be utilized with a minimum of modification.

Some ARPA Network terms that are useful in discussing this topic are "user" host and "server" host. The "user" host is the host with the users at terminals wishing to engage in interactive computing, and the "server" host is the host that supplies the interactive service.

The method for conveying terminal data between systems makes use of the device address field, DA1 DA2, to specify the terminal with which the data is associated. "DA1, DA2" in this context is termed a "virtual station address", and is the name used by user and server hosts to refer to a particular terminal. The addressing scheme is as follows:

1. DA1 and DA2 are ASCII letters, one upper case and the other lower case.
2. If "DA1, DA2" is the transmit address for a particular terminal, then "DA2, DA1" is the receive address for that terminal.
3. When the user host refers to a terminal (by transmit address), "DA1" is a lower-case letter and "DA2" is an upper-case letter. When the server host refers to the same terminal, since the roles of "transmit" and "receive" are reversed, "DA1" is an upper-case letter and "DA2" is a lower-case letter.
4. If a user host supports "N" different terminals connecting to a particular server host, the user host refers to them by the following virtual station addresses (as transmit addresses):

aA, bA, cA, ..., zA, aB, bB, cB, ...

and the server host refers to the same terminals by these virtual stations addresses (also as transmit addresses):

Aa, Ab, Ac, ..., Az, Ba, Bb, Bc, ...

The user and server host decide independently how many terminals

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

they will support, so these numbers will likely be different.

The sequence of events in a remote interactive session are as follows:

connection: when SYCOM establishes connection to a host in response to an .ONLINE command, it also attempts to establish a terminal-to-program connection, by assigning a virtual station address to this particular user and specifying it in a Connect message to the server host. This Connect message also describes the terminal's characteristics.

The server host receives the Connect message and checks to see if it can support the new connection; returns a Connect Reply message specifying whether or not it can. If the connection is successful, the server host makes this virtual station appear just like a real hardware terminal on that system that has been powered up and recognized as ready (but not yet "signed on"). It makes the station ready in a way determined by the nature of the host's operating system. The server host also saves the terminal characteristics specified in the Connect message, and makes them accessible to user programs, preferably by storing them in the NDL tables.

disconnection: whenever SYCOM breaks connection due to a .OFFLINE, .EOJ, .STOP or .ONLINE command to a new host, it also breaks the terminal-to-program connection (if any) by sending a Disconnect message to the server host, specifying the virtual station address.

The server host receives the Disconnect message, and does whatever is appropriate in that system to make that virtual terminal appear as though it was powered off, or otherwise available for re-use.

during the life of the connection: if the terminal-to-program connection was established successfully, all keyboard input entered by the user at his terminal (except for lines beginning with a period, which are interpreted locally) is transmitted to the server host, specifying the virtual terminal address as an RJE device address. The server host presents this input to whatever applications program or MCS that is currently attached to this terminal.

Any terminal output text that is generated by the MCS or applications program is transmitted back to the user host, specifying the virtual terminal address as an RJE device address. The user host SYCOM then displays this data on the user's terminal.

ONE POSSIBLE IMPLEMENTATION

The following is an outline of one possible method of implementing this protocol. It is presented here for

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

illustrative purposes only; it is not the responsibility of this document or the RJE committee to develop program logic for the individual plants.

The user host decides how many outbound connections will be allowed, and in the NDL station section defines one station for each, specifying a receive-address/transmit-address pair of "Aa"/aA" for the first, "Ab"/bA" for the second, and so on. Because of where these declarations fall within the station section, they are assigned some logical station numbers. In the file section, a file family is declared to have these logical stations as members.

At initialization, SYCOM (or some other MCS written for this purpose) opens the remote file pointing to these stations, and does a "remote file info" operation to obtain from NDL the LSNs for these virtual stations; it places these numbers in a table to map the LSN of each user's terminal into an LSN to reference the corresponding virtual station.

When a user wishes to connect to the remote host, SYCOM finds the next available entry in his LSN table, and issues a Connect message for that virtual station address. On receipt of the Connect Reply, SYCOM reports the outcome to the user.

during the life of the connection, SYCOM transmits unexamined any data entered by the user at his terminal (except commands prefixed by the SYCOM signal character) to the server, by doing a remote write to the LSN of the user's virtual station. In processing this remote write, NDL maps the LSN into the appropriate virtual station address and transmits the data according to the SYCOM protocol, with the virtual station address as the SYCOM device address. Any data read by the user NDL from the SYCOM line with a device address like "Aa", "Ab", etc., is presented to SYCOM, via his remote file, as input from the appropriate LSN for this virtual station. SYCOM then interrogates the LSN table to find the real LSN of the associated user, and writes the data to him via a remote write.

When the user wishes to disconnect from the remote host, SYCOM sends a Disconnect message to the server, specifying the virtual station number of this user.

The server host decides how many inbound connections will be allowed, and in the NDL station section, defines one station for each, specifying a receive-address/transmit-address pair of "aA"/"Aa" for the first, and so on. Any program wishing to serve these stations (e.g., SMCS) will include them in the family for their remote file declaration.

The server NDL intercepts Connect, Disconnect, Device Not Ready - Suspend, and Device Ready messages (unlike all other device address "00" messages, which are routed to SYCOM). On receipt of a Connect message, NDL verifies that the addressed virtual

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

station exists and that some program is ready to read from it. A Connect Reply message is sent indicating success or failure of the Connect.

During the life of the connection, any input data received by the server NDL for an enabled virtual station is conveyed to the waiting applications program through his remote file in exactly the same manner as for local terminals. Any output data generated by the program and written to the virtual station through his remote file is transmitted to the user host, with the virtual station address as the RJE device address.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
81800/81700 SYCOM
SDS 222 2590 (02)

PROGRAM-TO-PROGRAM COMMUNICATION

A limited type of program-to-program communication is possible by adapting the above scheme for terminal-to-program communication. The RJE MCS will provide a mechanism (of implementation-dependent nature) to allow a local program to masquerade as a terminal. This user program will format messages as if they were keyboard input, and the RJE system will send them to the server program. Likewise, the server program's output will be presented to the user program as if it were terminal display data.

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
81800/81700 SYCOM
SDS 2222 2590 (02)

APPENDIX A - 1967 ASCII AND EBCDIC CHARACTER ASSIGNMENTS

1967 ASCII -----	EBCDIC -----	EBCDIC GRAPHIC -----	EBCDIC PUNCH CODE -----
00	00	NUL	12-0-9-8-1
01	01	SOH	12-9-1
02	02	STX	12-9-2
03	03	ETX	12-9-3
04	37	EOT	9-7
05	2D	ENQ	0-9-8-5
06	2E	ACK	0-9-8-6
07	2F	BEL	0-9-8-7
08	16	BS	11-9-6
09	05	HT	12-9-5
0A	25	LF	0-9-5
0B	08	VT	12-9-8-3
0C	0C	FF	12-9-8-4
0D	0D	CR	12-9-8-5
0E	0E	SO	12-9-8-6
0F	0F	SI	12-9-8-7
10	10	DLE	12-11-9-8-1
11	11	DC1	11-9-1
12	12	DC2	11-9-2
13	13	DC3	11-9-3
14	3C	DC4	19-8-4
15	3D	NAK	9-8-5
16	32	SYN	9-2
17	26	ETB	0-9-6
18	18	CAN	11-9-8
19	19	EM	11-9-8-1
1A	3F	SUB	9-8-7
1B	27	ESC	0-9-7
1C	1C	FS	11-9-8-4
1D	1D	GS	11-9-8-5
1E	1E	RS	11-9-8-6
1F	1F	US	11-9-8-7
20	40	SP	No Punches
21	4F	Exclamation Point	12-8-7
22	7F	"	8-7
23	7B	#	8-3
24	58	\$	11-8-3
25	6C	%	0-8-4
26	50	&	12
27	7D	'	8-5
28	4D	(12-8-5
29	5D)	11-8-5

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
81800/81700 SYCOM
SDS 2222 2590 (02)

1967 ASCII -----	EBCDIC -----	EBCDIC GRAPHIC -----	EBCDIC PUNCH CODE -----
2A	5C	*	11-8-4
2B	4E	+	12-8-6
2C	6B	,	0-8-3
2D	60	-	11
2E	4B	.	12-8-3
2F	61	/	0-1
30	F0	0	0
31	F1	1	1
32	F2	2	2
33	F3	3	3
34	F4	4	4
35	F5	5	5
36	F6	6	6
37	F7	7	7
38	F8	8	8
39	F9	9	9
3A	7A	:	8-2
3B	5E	;	11-8-6
3C	4C	<	12-8-4
3D	7E	=	8-6
3E	6E	>	0-8-6
3F	6F	?	0-8-7
40	7C	3	8-4
41	C1	A	12-1
42	C2	B	12-2
43	C3	C	12-3
44	C4	D	12-4
45	C5	E	12-5
46	C6	F	12-6
47	C7	G	12-7
48	C8	H	12-8
49	C9	I	12-9
4A	D1	J	11-1
4B	D2	K	11-2
4C	D3	L	11-3
4D	D4	M	11-4
4E	D5	N	11-5
4F	D6	O	11-6
50	D7	P	11-7
51	D8	Q	11-8
52	D9	R	11-9
53	E2	S	0-2
54	E3	T	0-3
55	E4	U	0-4

BURROUGHS CORPORATION
COMPUTER SYSTEMS GROUP
SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
B1800/B1700 SYCOM
SDS 2222 2590 (02)

1967 ASCII -----	EBCDIC -----	EBCDIC GRAPHIC -----	EBCDIC PUNCH CODE -----
56	E5	V	0-5
57	E6	W	0-6
58	E7	X	0-7
59	E8	Y	0-8
5A	E9	Z	0-9
5B	4A	[12-8-2
5C	E0	\	0-8-2
5D	5A]	11-8-2
* 5E	5F	up arrow	11-8-7
5F	6D	underline	0-8-5
60	79	back apostrophe	8-1
61	81	a	12-0-1
62	82	b	12-0-2
63	83	c	12-0-3
64	84	d	12-0-4
65	85	e	12-0-5
66	86	f	12-0-6
67	87	g	12-0-7
68	88	h	12-0-8
69	89	i	12-0-9
6A	91	j	12-11-1
6B	92	k	12-11-2
6C	93	l	12-11-3
6D	94	m	12-11-4
6E	95	n	12-11-5
6F	96	o	12-11-6
70	97	p	12-11-7
71	98	q	12-11-8
72	99	r	12-11-9
73	A2	s	11-0-2
74	A3	t	11-0-3
75	A4	u	11-0-4
76	A5	v	11-0-5
77	A6	w	11-0-6
78	A7	x	11-0-7
79	A8	y	11-0-8
7A	A9	z	11-0-9
7B	C0	left brace	12-0
* 7C	6A	lozenge	12-11
7D	D0	right brace	11-0
7E	A1	tilde	11-0-1
7F	07	DEL	12-9-7

4 excluded from terminals

BURROUGHS CORPORATION
 COMPUTER SYSTEMS GROUP
 SANTA BARBARA PLANT

COMPANY CONFIDENTIAL
 B1800/B1700 SYCOM
 SDS 2222 2590 (02)

INDEX

ACCEPTABLE CHARACTERS FOR TERMINAL SPO 3-31
 APPENDIX A - 1967 ASCII AND EBCDIC CHARACTER ASSIGNMENTS A-1
 CODES AND ERROR CHECKING 3-8
 COMMUNICATION ERROR MESSAGES 3-31
 CONVERSATIONAL COMMUNICATIONS PROCEDURES 3-1
 DATA COMMUNICATIONS PROCEDURE OF SYCOM 2-3
 DATA RECORD FORMAT 4-1
 DEFINITION OF SYCOM 2-1
 DEVICE ADDRESSES (DA1, DA2) 3-9
 DEVICE FUNCTIONAL CONTROL (CC) 3-10
 Enter Message Transfer State 3-5
 ERROR DETECTION AND RECOVERY 2-2
 FILE SEPARATOR (FS) 3-10
 FILE TRANSFER 3-19
 FILE TRANSFER RECOVERY 3-22
 FORMAT OF PUT/FETCH MESSAGES 3-18
 HOST SYSTEM MESSAGES 3-31
 INPUT MESSAGES 3-23
 LINE THROUGHPUT 2-2
 MAINTENANCE OF FILE CHARACTERISTICS 3-20
 Master Status 3-5
 Message Idle State 3-3
 Message Transfer 3-3
 Normal Termination 3-3
 OUTPUT MESSAGES 3-27
 Parity or Block-Check Error Handling 3-3
 POINT-TO-POINT CONTENTION PROCEDURES 3-3
 PROGRAM-TO-PROGRAM COMMUNICATION 6-1
 RECORD SEPARATOR (RS) 3-11
 Retransmission of Messages 3-3
 SCOPE 1-1
 SPACE COMPRESSION 3-11
 SYCOM 3-1
 SYCOM DATA COMMUNICATIONS STANDARD 3-1
 SYCOM HOST SYSTEMS AND REMOTE TERMINALS 2-3
 SYCOM PROCEDURE 3-7
 SYCOM RECORD (TEXT) FORMAT 3-8
 SYCOM SYSTEM MESSAGES 3-11
 SYCOM TRANSMISSION OF PACKED DATA 4-1
 SYSTEMS COMMUNICATIONS STANDARDS 3-1
 TERMINAL SYSTEM MESSAGES 3-23
 TERMINAL-TO-PROGRAM COMMUNICATION 5-1
 Termination 3-5