

CC598A/B/C Utility Disk

Part Number 10306405

Introduction

This diskette is a bootable MS-DOS disk which contains programs used to maintain the CC598A and CC598B System Consoles and the CC598C LCN Network Maintenance Station.

This diskette is restricted to usage by Control Data personnel. Duplication is not authorized. Additional copies may be ordered from Software Manufacturing and Distribution, Arden Hills.

This document supercedes information contained in the 19003 System Console Operations and Maintenance Guide, publication 60463610, found on the following pages:

Part II Initializing the Hard Disk and Installing the Software
pages II-1-6, II-1-7, II-1-8, II-1-9 and the top of II-1-10.

Part II Creating a Bootable HOSTEST Diskette pages II-1-11 (bottom)
and II-1-12.

Conventions

The following conventions are used in this document:

- o The term 'console' means any model of the CC598.
- o When the word 'press' is used in an instruction, it means for you to press the named key(s).
- o When the word 'press' precedes a string of key names that are separated by hypens (for example CTRL-ALT-DEL), it means for you to press the keys listed simultaneously.
- o When the word 'type' is used in an instruction, it means for you to type in the word following.

Warning

The use of the programs contained on this diskette other than as proscribed will result in a non-functional console.

SMD800428

Problem Reporting

Problems should be reported on a PSR via SOLVER under the PSR Ident of CSW.

Disk Structure

The diskette is divided into 5 directories. Each directory contains the software necessary to perform a unique function. The 5 directories are:

Directory - BIN

This directory contains MS-DOS programs that are common to all of the procedures.

Directory - MFG

This directory contains the procedures used by Manufacturing to assemble a console. These procedures are one time only procedures. They will fail if executed twice on a console.

Directory - FIELD

This directory contains the procedures necessary to initialize the hard disk in the console after replacement of the hard disk.

Directory - LOW

This directory contains the software and procedures necessary to low level format the CC598A's Wren III hard disk.

Directory - HOST

This directory contains a copy of the HOSTESS diagnostics for the HOSTESS Multiport Network Adapter used in the CC598A and CC598B consoles.

General Usage

In order to use the software and procedures on this diskette, you must boot the console from this diskette. The following describes how to accomplish a floppy disk boot.

1. With power applied to the console, insert the Utility Disk in the floppy drive and latch the door.
2. Simultaneously press the *CTRL-ALT-INS* keys. The console will display:

MFM-200 Monitor, Version 2.3B

Memory Size: 640K Bytes

Enter ? for help

->

Note

If your console is a CC598B or CC598C, disregard any error message indicating that the controller is bad when you first applied power to the console before executing Part 1.

3. Type BF and press the ENTER key. The following will appear on the screen:

CC598A/B/C Utility Disk

Part Number 10306405

Refer to the documentation accompanying this diskette for usage information.

Quick Reference:

Manufacturing Installation Procedures - Type MFG

Field Disk Replacement Procedures - Type FIELD

Wren III Low Level Format - Type LOW

Hostess Diagnostics - Type HOST

All entries must be followed by pressing the ENTER key

A>

4. At this point, you would enter the command for the procedure that you wish to execute. After entering the procedure command, a set of instructions will be displayed on the screen. Follow these instructions.

Manufacturing Installation Procedures

To execute the Manufacturing Installation Procedures, type *MFG* and press the *ENTER* key. The following informational display will be presented.

Manufacturing Installation Procedures
for the CC598-A/B/C Consoles

The CC598A consoles requires a two part process in order
to prepare the hard disk.

The CC598B/C consoles require a three part process in order
to prepare the hard disk.

A re-boot is required between the parts. To re-boot press
the CTRL-ALT-INS keys.

Strike any key.

When you are ready, press any key for the detailed instructions. An instruction screen as shown on the next page will be presented.

Manufacturing Installation Procedures
for the CC598-A/B/C Consoles

Part One:

For a CC598A Console type "A1"

For a CC598B/C Console type "B1"

Part Two:

For a CC598A Console type "A2"

For a CC598B/C Console type "B2"

Part Three:

For a CC598B Console type "B3"

For a CC598C Console type "C3"

All entries are followed pressing the ENTER key.

A>

Select the procedure for your console model and type the command for whichever part you are going to execute. All parts must be executed and must be executed in order. Remember a re-boot is required between parts.

Note

If your console is a CC598B or CC598C, after executing Part 1 disregard any error messages indicating that the disk is not a bootable partition.

Field Disk Replacement Procedure

To execute the Field Disk Replacement Procedure, type *FIELD* and press the *ENTER* key. The following informational display will be presented:

Field Disk Replacement Procedure for the CC598-A/B/C Consoles

The CC598A consoles requires a two part process in order
to prepare the hard disk.

The CC598B/C consoles require a three part process in order
to prepare the hard disk.

A re-boot is required between the parts. To re-boot press
the CTRL-ALT-INS keys.

Strike any key.

When you are ready, press any key for the detailed instructions. An instruction screen as shown below will be presented.

Field Disk Replacement Procedure for the CC598-A/B/C Consoles

Part One:

For a CC598A Console type "A1"

For a CC598B/C Console type "B1"

Part Two:

For a CC598A Console type "A2"

For a CC598B/C Console type "B2"

Part Three:

For a CC598B Console type "B3"

For a CC598C Console type "C3"

All entries are followed pressing the ENTER key.

A>

Choose your console model and type the appropriate command for whichever part you are going to execute. All parts must be executed and must be executed in order. Remember a re-boot is required between parts.

Wren III Low Level Format

execute the Wren III Low Level Format Procedure, type `LOW` and press the `ENTER` key. The following informational screen will be presented.

Wren III Low Level Format Procedure

This procedure performs a low level format on the Wren III disk.
All information stored on or about the disk is lost.

Note to Manufacturing

If you have already executed the Manufacturing Installation Procedures on this console, you must use the Field Disk Replacement Procedures to finish the assembly process.

Press any key to start the format. The following format display will appear on the screen.

Version 2.13 - 9 November 1987

Controller is Generic

Base I/O Port Address is: 300

DMA Channel is: 1

Common Command Set Enabled

1 port:340h

2 rt10-at

3 dma:hsdma

RT10-AT Adapter Assumed

4 dmachan:5

5 tdr

tdr CDB is 00 00 00 00 00 00

Status: 00H

6 fd

fd CDB is 04 00 00 00 00 00

This display will remain while the Wren III is being formatted.

Note

The light on the Wren III will not be on during this operation. Do not interrupt the formatting routine while it is running or the console will become unusable.

The following display appears, when formatting is complete:

Common Command Set Enabled

```
1 port:340h
2 rt10-at
3 dma:hsdma
RT10-AT Adapter Assumed
4 dmachan:5
5 tdr

tdr CDB is 00 00 00 00 00 00
Status: 00H
6 fd

fd CDB is 04 00 00 00 00 00
Data Written:
Status: 00H
7 quit

A>
```


Hostess Diagnostics

to execute the Hostess Multiport Network Adapter Diagnostics, type *HOST* and press the *ENTER* key. Enter the following information as prompted by the diagnostic.

HOSTESS board base address:	Enter 140
Number of ports:	Enter 8
System Clock Speed:	Select 2

Note

The information contained on this page supercedes the information contained in the 19003 System Console Operations and Maintenance Guide, publication number 60463610, found on pages II-3-7 and II-3-8 concerning the running of the Hostess Diagnostics.

As the diagnostic runs, it will direct you to install the test plug that is included in the multiport adapter package. Install the test plug on each port as you are prompted.

Note

For additional information and explanations of any error message displayed, refer to the HOSTESS Multiport Network Adapter User's Guide. Which shipped with your console.

Additional Troubleshooting Information

any one of the following conditions exist:

- o You have replaced the CPU motherboard in the Console;
- o You have replaced the battery on the motherboard;
- o You are experiencing any problem with SETUP - messages during boot-up saying that the SETUP configuration information is corrupt. These messages usually say something to the effect of *'Error: Bad Configuration Information Found in CMOS'*.

You must boot the console and reconfigure the configuration information. The following describes how to do this.

With power applied to the console, simultaneously press the *CTRL-ALT-INS* keys. The console will display:

```
MFM-200 Monitor, Version 2.3B
```

```
Memory Size: 640K Bytes
```

```
) Enter ? for help
```

```
->
```

Type *SETUP* and press the *ENTER* key. Depending on your console type, one of the displays shown on the following page will appear. Use the *arrow* keys to move, the *space/backspace* keys to select values and the *ESC* key when you are done. After pressing the *ESC* key, follow the directions shown at the bottom of the display.

System Hardware Setup/Configuration Program

Time: 16:16:57

Date: 08/20/1988

BASE EXTENDED EMS

Main RAM: 640K OK 256K

Add-On RAM: OK OK ---

Total: 640K OK ---

Floppy Drive 0: **5-1/4" 1.2M**

Floppy Drive 1: -Not Present-

Boot Drive: **Floppy Disk Drive 0**

Serial Port 1 (COM1): **Enable**

Serial Port 2 (COM2): **Enable**

Video Display: **Enhanced Graphics**

Video Refresh Rate: 50Hz 60Hz

Operating Speed: Slow **Fast** Smart

Hard Disk Drive 0: **-Not Present-**

Media Type:	N/A
Cylinders:	Heads:
Ship Zone:	Sectors:
Precomp:	Capacity:

Hard Disk Drive 1: -Not Present-

Media Type:	N/A
Cylinders:	Heads:
Ship Zone:	Sectors:
Precomp:	Capacity:

Enter Current Time as HH:MM:SS In 24 Hour Format

Use space/backspace to select values, Arrows to move, ESC when done

CC598A Console

Make sure that your configuration matches the highlights shown above.

System Hardware Setup/Configuration Program																																	
<p>Time: 16:16:57 Date: 08/22/1988</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td></td> <td style="text-align: center;">BASE</td> <td style="text-align: center;">EXTENDED</td> <td style="text-align: center;">EMS</td> </tr> <tr> <td>Main RAM:</td> <td style="text-align: center;">640K</td> <td style="text-align: center;">OK</td> <td style="text-align: center;">256K</td> </tr> <tr> <td>Add-On RAM:</td> <td style="text-align: center;">OK</td> <td style="text-align: center;">OK</td> <td style="text-align: center;">---</td> </tr> <tr> <td>Total:</td> <td style="text-align: center;">640K</td> <td style="text-align: center;">OK</td> <td style="text-align: center;">---</td> </tr> </table> <p>Floppy Drive 0: 5-1/4" 1.2M Floppy Drive 1: -Not Present-</p> <p>Boot Drive: Hard Disk Drive 0</p> <p>Serial Port 1 (COM1): Enable Serial Port 2 (COM2): Enable</p> <p>Video Display: Enhanced Graphics Video Refresh Rate: 50Hz 60Hz</p>		BASE	EXTENDED	EMS	Main RAM:	640K	OK	256K	Add-On RAM:	OK	OK	---	Total:	640K	OK	---	<p>Operating Speed: Slow Fast Smart Hard Disk Drive 0: Drive Type 43</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td colspan="2" style="text-align: center;">Media Type: Fixed</td> </tr> <tr> <td>Cylinders: 989</td> <td>Heads: 5</td> </tr> <tr> <td>Ship Zone: 988</td> <td>Sectors: 17</td> </tr> <tr> <td>Precomp: 0</td> <td>Capacity: 43M</td> </tr> </table> <p>Hard Disk Drive 1: -Not Present-</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <tr> <td colspan="2" style="text-align: center;">Media Type: N/A</td> </tr> <tr> <td>Cylinders:</td> <td>Heads:</td> </tr> <tr> <td>Ship Zone:</td> <td>Sectors:</td> </tr> <tr> <td>Precomp:</td> <td>Capacity:</td> </tr> </table>	Media Type: Fixed		Cylinders: 989	Heads: 5	Ship Zone: 988	Sectors: 17	Precomp: 0	Capacity: 43M	Media Type: N/A		Cylinders:	Heads:	Ship Zone:	Sectors:	Precomp:	Capacity:
	BASE	EXTENDED	EMS																														
Main RAM:	640K	OK	256K																														
Add-On RAM:	OK	OK	---																														
Total:	640K	OK	---																														
Media Type: Fixed																																	
Cylinders: 989	Heads: 5																																
Ship Zone: 988	Sectors: 17																																
Precomp: 0	Capacity: 43M																																
Media Type: N/A																																	
Cylinders:	Heads:																																
Ship Zone:	Sectors:																																
Precomp:	Capacity:																																
<p>Enter Current Time as HH:MM:SS In 24 Hour Format</p> <p>Use space/backspace to select values, Arrows to move, ESC when done</p>																																	

CC598B and CC598C Console

Make sure that your configuration matches the highlights shown above.