

CC598A/B/C Utility Disk PN 10317268 LVL 716

# ntroduction



his diskette is a bootable MS-DOS disk which contains programs used to aintain the CC598A and CC598B System Consoles and the CC598C LCN etwork Maintenance Station.

This diskette is restricted to usage by Control Data personnel. uplication is not authorized. Additional copies may be ordered from oftware Manufacturing and Distribution, Arden Hills.

here there is a difference between the information contained in this ocument and the 19003 System Console Operations and Maintenance manual, he information contained here takes precedence.

#### Conventions

The following conventions are used in this document:

- o The term 'console' means any model of the CC598.
- o When the word 'press' is used in an instruction, it means for you to press the named key(s).
- o When the word 'press' precedes a string of key names that are separated by hyphens (for example CTRL-ALT-DEL), it means for you to press the keys listed simultaneously.
  - o When the word 'type' is used in an instruction, it means for you to type in the word following.

## Problem Reporting

Problems should be reported on a PSR via SOLVER under the PSR Ident of CSW.



The use of the programs contained on this diskette other than as described will result in a non-functional console.

# **Jisk Structure**



The diskette is divided into 4 directories. Each directory contains the software necessary to perform a unique function. The 4 directories are:

## Directory - BIN

This directory contains MS-DOS programs that are common to all of the procedures.

## Directory - HDI

This directory contains the procedures used to initialize the hard disks in the consoles.

## Directory - LOW

This directory contains the software and procedures necessary to low level format the CC598A's Wren III hard disk.

## Directory - HOST

This directory contains a copy of the HOSTESS diagnostics for the HOSTESS Multiport Network Adapter used in the CC598A and CC598B consoles.

# General Usage



To use the software and procedures on this diskette, you must boot the console from this diskette. The following describes how to accomplish a floppy disk boot.

- With power applied to the console, insert the Utility Disk in the 1. floppy drive and latch the door.
- 2. Simultaneously press the CTRL-ALT-INS keys. The console will display:

MFM-200 Monitor, Version 2.3B Memory Size: 640K Bytes Enter ? for help ->

If you have replaced the hard disk and the console is a B or C model, disregard the error messages indicating that the 'controller is bad' when first applying power to the console before executing the HDI procedure.

3. Type BF and press the ENTER key. The following will appear on the screen:

> CC598A/B/C Utility Disk Part Number 10317268

Refer to the documentation accompanying this diskette for usage information.

Quick Reference:

Hard Disk Initialization - Type HDI Wren III Low Level Format - Type LOW Hostess Diagnostics - Type HOST

All entries must be followed by pressing the ENTER key

A >



 Enter the command for the procedure that you wish to execute. After entering the procedure command, a set of instructions will be displayed on the screen. Follow these instructions.

## Hard Disk Initialization Procedures

To execute the Hard Disk Initialization, type HDI and press the ENTER key. The following informational display will be presented.

Hard Disk Initialization Procedures for the CC598-A/B/C Consoles

The CC598A consoles requires a two part process in order to prepare the hard disk.

The CC598B/C consoles require a three part process in order to prepare the hard disk.

A re-boot is required between the parts. To re-boot press the CTRL-ALT-INSkeys.

Strike any key.

When you are ready, press any key for the detailed instructions. An instruction screen as shown on the next page will be presented.

# Hard Disk Initialization Procedures for the CC598-A/B/C Consoles

Part One:

For a CC598A Console type "A1" For a CC598B/C Console type "B1"

Part Two:

For a CC598A Console type "A2" For a CC598B/C Console type "B2"

Part Three:

For a CC598B Console type "B3" For a CC598C Console type "C3"

All entries are followed pressing the ENTER key.

A>

Select the procedure for your console model and type the command for the part that you are going to execute. All parts must be executed and must be executed in order. Remember, a re-boot is required between parts.

Note: If the console is a B or C model, disregard the 'not a bootable partition' error message after executing Part 1.



Part 1 takes from one to four hours on the B and C models.

## Vren III Low Level Format



rexecute the Wren III Low Level Format Procedure, type LOW and pressive ENTER key. The following informational screen will be presented.

Wren III Low Level Format Procedure

This procedure performs a low level format on the Wren III disk.

All information stored on or about the disk is lost.

ress any key to start the format. The following format display will appear not the screen.

Version 2.13 - 9 November 1987

Controller is Generic

Base I/O Port Address is: 300

DMA Channel is: 1

Common Command Set Enabled

1 port:340h

2 rt10-at

3 dma:hsdma

RT10-AT Adapter Assumed

4 dmachan:5

5 tdr

tdr CDB is 00 00 00 00 00 00

Status: OOH

6 fd

fd CDB is 04 00 00 00 00 00

This display will remain while the Wren III is being formatted.





The light on the Wren III will not be on during this operation. DO NOT interrupt the formatting operation or the console will become unusable.

he following display appears, when formatting is complete:

### Common Command Set Enabled

1 port:340h

2 rt10-at

3 dma:hsdma

RT10-AT Adapter Assumed

4 dmachan:5

5 tdr

tdr CDB is 00 00 00 00 00 00

Status: OOH

6 fd

fd CDB is 04 00 00 00 00 00

Data Written:

Status: OOH

7 quit

A>



STOP CAUTION The hard disk must be initialized using the HDI procedure after executing this procedure.

# lostess Diagnostics

execute the Hostess Multiport Network Adapter Diagnostics, type HOST has prompted by the iagnostic.

HOSTESS board base address: Enter 140
System Clock Speed: Select 2
Nmber of ports: Enter 8

the diagnostic runs, it will direct you to install the test plug that is not uded in the multiport adapter package. Install the test plug on each ort as you are prompted.

Note: For additional information and explanations of any error message displayed, refer to the HOSTESS Multiport Network Adapter User's Guide.