

Digital Internal Use Only

DATADOC



**Welwyn/Newmarket
Service Centre**

**DATADOC is for the Internal Use Only of employees of Digital Equipment Corporation.
Please do not leave it lying around.**

Revision/Update Information: Issue 42, May 1995

digital equipment corporation

Digital Internal Use Only

This document is intended for the use of Digital Equipment Corporation Field Service Engineers only.

The information in this document is subject to change without notice and should not be construed as a commitment by Digital Equipment Corporation. Digital Equipment Corporation assumes no responsibility for any errors that may appear in this document.

The following are trademarks of Digital Equipment Corporation.

DEC	KDB	RSX
DECnet	LANbridge	RX02
DECserver	LN01	RX50
DECserver 200	LN03	SA482
DECserver 500	MASSBUS	ThinWire
DELNI	MicroVAX	TK50
DELUA	MicroVMS	UDA
DEMPR	MUXserver	ULTRIX
DEQNA	PDP	ULTRIX 32
DEREP	PDP-11	UNIBUS
DESTA	Q-bus	VAX
DEVA	RA60	VAX/VMS
DEUNA	RA80	VAXcluster
DIGITAL	RA81	VAXstation
HSC	RD53	VMS
KDA50-Q	RSTS	digital

Copyright ©1990 All rights reserved
Printed in England.

DATADOC is published by the Welwyn/Newmarket Service Centre.

You can contact the authors of DATADOC by sending VAXMAIL to WELSWSS::DATADOC_EDITOR.
Any offers of contributions to DATADOC will be especially well received.

Copies of DATADOC updates are sent to:-

Dave Price	BBP	7J8
Mike Paddick	BSO	7A5
Derek Duncan	EDA	7A3
Hugh Cleland	EDO	7A3
Dyfrig Davies	ESO	L43
Tony Smith	HHL	H46
Louise Slater	LZO	7A3
Jane Bradley	NOT	7J8
Helen Mitchell	OLO	7J8
Pete Bird	RKG	7A3
Michael Evans	SBP	L43
Tim Ashton	UCG	7A5
Duncan McCombe	UVQ	LX6
Dik Sutton	WLC	G28
Dave Bazley	WLO	L63

This document was prepared using VAX DOCUMENT, Version 1.2

CHAPTER CONTENTS

Number	Title	Contents
1	VAX 6000...	VAX 6xx0 family (Calypso)
2	VAX 88x0...	VAX 88x0/8700/85x0 (Nautilus + Polarstar)
3	11750	VAX 11/750 (Comet)
4	11780...	VAX 11/780 (Star) and 11/785 (Superstar)
5	8600/8650	VAX 8600 (Venus) and 8650 (Morning star)
6	DEC/VAX 7xx0...	DEC/VAX 7000/10000 (Laser + Blaser)
7	VMS	VMS operating system
8	82/83x0...	VAX 82/83x0 (Scorpio) and VAXBI
9	PDP11	PDP11 Unibus based systems
10	VAXclusters	VAX Clusters, CI and HSC
11	VAXsimPLUS...	VaxSimPLUS(SDD)and AES
12	Diagnostics	VAX and PDP diagnostics
13	DEC 3000 AXP	DEC 3xx0 family (Flamingo + Sandpiper)
14	QBUS SYSTEMS	QBUS based systems, VAX and PDP
15	DESKTOP...	Desktop systems and monitors
16	SMALL DEVICES...	Small systems devices, SCSI/DSSI etc.
17	Retired	Temporarily spare chapter
18	ETHERNET	Ethernet and Ethernet options
19	ETHERNET_SERVERS	Ethernet servers
20	TRANSLAN...	Translan bridges
21	ULTRIX	ULTRIX operating system
22	TAPE DRIVES	Tapes
23	Printers	Hard copy devices
24	RK, RL, RM...	RK, RL, RM and RP disk drives
25	RA DISKS	RAXx disks and 2 board RA disk controllers
26	FCO Information	FCO and Revcon
27	VES	Non-Digital options
28		
A	Appendix A	Welwyn Database index
B	Appendix B	Logistics, kits and tools
C	Appendix C	Factflash directory

Contents

Chapter 2 VAX88x0/8700/85x0

2.1	Introduction	2-1
2.2	Description of 8800	2-2
2.2.1	Logic	2-2
2.2.2	Power	2-2
2.2.3	Packaging	2-2
2.2.4	Other Systems	2-2
2.3	NAUTILUS who's who	2-4
2.4	CONSOLE	2-5
2.4.1	Using the CONSOLE	2-5
2.4.2	Console Commands	2-6
2.5	Physical Addressing	2-7
2.6	Troubleshooting Philosophy	2-7
2.6.1	Module and backplane cleaning procedure	2-8
2.6.2	Power Safety	2-8
2.7	CONSOLE - Special Considerations	2-8
2.7.1	Console Issues	2-8
2.7.1.1	The PPI Cable	2-8
2.7.1.2	Console floppies not seen	2-8
2.7.1.3	EXITing to PRODCL or powering Console	2-9
2.7.1.4	SYSGEN> Connect Console	2-9
2.7.2	CONSOLE Directory Structure	2-9
2.7.3	Differences between console versions 8.x, 9.x and 10.x	2-10
2.7.4	Upgrading CONSOLE	2-10
2.7.4.1	Entire Console	2-10
2.7.4.2	Individual Files	2-11
2.7.4.2.1	From CSA3: to VMS	2-12
2.7.4.2.2	From VMS to CSA3:	2-12
2.7.5	Using the REMOTE port	2-13
2.7.5.1	RDC - Hardware Setup	2-13
2.7.5.2	RDC - Software Setup	2-14
2.7.5.2.1	PRO/Communications Setup	2-15
2.7.5.2.2	CONSOLE setup	2-15
2.7.5.2.3	VMS Setup	2-16
2.7.5.2.4	Testing the link	2-16

2.7.5.3	VCS	2-16
2.7.5.4	Local Terminal	2-17
2.7.6	TESTING THE RTI	2-17
2.8	Memory	2-18
2.8.1	Memory Backplanes	2-18
2.8.1.1	Old types	2-18
2.8.1.2	New types	2-18
2.8.2	Memory Configuration	2-18
2.8.3	Memory issues	2-19
2.8.3.1	Failing Daughter Board (SMU) Isolation	2-19
2.8.3.2	Microdiagnostics	2-20
2.8.3.3	PMCL jumpers	2-20
2.9	The BI	2-21
2.9.1	BI Register Addressing	2-21
2.9.2	UNIBUS on the BI	2-22
2.10	Diagnostics	2-22
2.10.1	Microdiagnostics	2-22
2.10.1.1	Bugs and Problems	2-23
2.10.1.1.1	Bugs	2-23
2.10.2	Macrodiagnostics	2-23
2.10.2.1	EVKAA	2-23
2.10.2.2	Diagnostic Supervisor (EZSAA)	2-24
2.10.2.3	Bugs and problems	2-24
2.10.2.3.1	Bugs	2-24
2.10.2.3.2	EVGDA and CIBCA-A and CIBCA-B ucode updates	2-24
2.11	VMS issues	2-25
2.11.1	V4.4 and V4.5 SYSGEN> Connect console causes crash	2-25
2.11.2	Console Hangs with V4.5, V4.6 and V4.7	2-25
2.11.3	V4.5 and V4.6 can crash turning Cache off	2-25
2.11.4	Errorlog Problems	2-25
2.11.4.1	MS88-CA and DA Failing SMU callout	2-25
2.11.4.2	Machine check incorrectly reported	2-25
2.11.5	Mounting CSA3: can cause crash	2-25
2.11.6	CIBCA-B and V4.7, Bugcheck on Boot	2-26
2.11.7	V5.x long boot time	2-26
2.12	Parts and FRUs	2-27
2.13	FCOs	2-29
2.14	Tech Tips	2-30
2.15	Other Goodies	2-31
2.15.1	85xx Backplane Short	2-31
2.15.2	Overtemperature problem on 85xxs	2-31
2.15.3	Faulty BI Node Plugs	2-31
2.15.4	Power off problem	2-31
2.15.5	BI Load Resistor problem	2-31
2.15.6	Power Supply trouble-shooting	2-31
2.15.7	BA32 expander box trouble-shooting	2-31
2.15.8	Bad NBIA and NBIB chips	2-32

2.16	POLARSTAR	2-33
2.16.1	Logic	2-33
2.16.2	Power	2-33
2.16.2.1	The PDS+	2-33
2.16.3	Packaging	2-35
2.16.4	Physical Addressing	2-35
2.16.5	Polarstar Who's Who	2-37
2.16.6	Console	2-37
2.16.6.1	Standalone Backup	2-39
2.16.6.2	Upgrading Console	2-39
2.16.7	Diagnostics	2-40
2.16.7.1	Microdiagnostics	2-40
2.16.7.2	EVKAA	2-40
2.16.7.3	MacroDiagnostics	2-40
2.16.7.4	Bugs	2-40
2.16.8	FCOs	2-41
2.16.9	Tech Tips	2-41
2.16.10	Other Goodies	2-41
2.16.10.1	Console uVAX machine checks	2-41
2.16.10.2	Temperature and Airflow sensor mis-labeling	2-41
2.16.10.3	Polarstar Table Safety	2-42
2.16.10.4	PDS/PCS SAFETY ALERT (old factflash)	2-42
2.16.10.5	MPS2 backplane short	2-43

Figures

2-1	88xx Block Diagram	2-3
2-2	88xx Cabinet Layout	2-4
2-3	Nautilus Address Space	2-7
2-4	MDS01 Connections	2-14
2-5	MS88-CA and DA module layout	2-20
2-6	PMCL jumper location	2-21
2-7	Polarstar Block Diagram	2-34
2-8	Polarstar Cabinet Layout	2-35
2-9	Polarstar Address Space	2-36
2-10	Polarstar Console Roadmap	2-38

Tables

2-1	Nautilus Console Commands	2-6
2-2	CONSOLE version 8.x directory structure	2-9
2-3	CONSOLE versions 9.x and 10.x directory structure	2-9
2-4	MPS jumpers	2-10
2-5	Console device names	2-11
2-6	Typical Nautilus BI nodes	2-21
2-7	microdiagnostics	2-22
2-8	Some Macrodiagnostics	2-24
2-9	CPU Modules and Regulators	2-27

2-10	Useful Parts	2-27
2-11	FCO summary for 85xx/87xx/88xx (not Polarstar)	2-29
2-12	Nautilus Tech Tips 1	2-30
2-13	Nautilus Tech Tips 2	2-30
2-14	Modified and New Modules for Polarstar	2-33
2-15	Some Macrodiagnostics	2-40
2-16	FCO summary for 8810/8820/8830/8840/8842	2-41
2-17	Polarstar Tech Tips	2-41

Contents

Chapter 3 11750

3.1	11750 Revisions	3-1
3.1.1	MS750-H upgrade	3-2
3.1.1.1	Component parts.....	3-2
3.1.1.2	Installation notes.....	3-2
3.1.1.3	Register differences.....	3-3
3.1.1.4	Physical address location.....	3-4
3.1.1.5	Diagnostics.....	3-4
3.1.2	PCS Micro-code	3-4
3.2	11750 Machine Checks.....	3-6
3.3	Diagnostics.....	3-8
3.3.1	Micro-diagnostics	3-8
3.3.2	Macro-diagnostics.....	3-8
3.3.2.1	ECCBA Unibus adapter diagnostic.....	3-8
3.4	Writeboot	3-8
3.5	CMI Arbitration Levels	3-9
3.6	Accessing Unibus Addresses	3-9
3.7	Console tape generation (old factflash).....	3-10

Figures

3-1	How to update 11750 PCS microcode	3-5
3-2	11750 Machine Check Stack Logout	3-7

Tables

3-1	11750 Console Physical Addresses of common Unibus Options	3-10
-----	---	------

CHAPTER 4 11780/11785/11782

4.1	11780/11785 DIFFERENCES	4-2
4.1.1	Module Utilisation	4-2
4.1.2	11785 CPU Jumpers	4-3
4.1.3	Revision Levels	4-4
4.1.4	JCS/WCS/OCS	4-5
4.1.4.1	11785 JCS	4-5
4.1.4.2	11780 WCS/OCS	4-5
4.1.5	FCC	4-6
4.1.6	RDC	4-6
4.1.7	Attaching To Diagnostic Supervisor	4-6
4.1.8	New Floppies	4-6
4.1.9	Boot Files On Console Floppy	4-6
4.2	TROUBLESHOOTING CPU PARITY ERRORS	4-8
4.2.1	CONTROL STORE PARITY ERROR	4-8
4.2.2	CACHE ADDRESS TAG PARITY ERROR	4-9
4.2.3	CACHE DATA PARITY ERROR	4-9
4.2.4	TB ADDRESS TAG PARITY ERROR	4-10
4.2.5	TB DATA PARITY ERROR	4-10
4.3	TROUBLESHOOTING SBI ERRORS	4-11
4.3.1	SBI FAULT DETECTION	4-11
4.3.2	SBI FAULT ERRORLOG ENTRY	4-11
4.3.2.1	D31 - SBI PARITY FAULT	4-11
4.3.2.2	D30 - WRITE DATA SEQUENCE FAULT	4-11
4.3.2.3	D29 - UNEXPECTED READ DATA FAULT	4-11
4.3.2.4	D28 - INTERLOCK SEQUENCE FAULT	4-11
4.3.2.5	D27 - MULTIPLE TRANSMITTER FAULT	4-11
4.3.2.6	D26 - TRANSMITTER DURING FAULT	4-12
4.3.2.7	SBI SILO	4-12
4.3.3	FAULTFINDING TIPS	4-12
4.4	TROUBLESHOOTING UNIBUS ERRORS	4-14
4.4.1	HIT-LIST	4-14
4.4.1.1	DW780 Revision	4-14
4.4.1.2	RX211	4-14
4.4.1.3	DD11CK Four Slot SPC Backplane	4-14
4.4.1.4	UDA50	4-14
4.4.1.5	DR11B	4-14
4.4.1.6	DZ11	4-14
4.4.1.7	TU80	4-14
4.4.1.8	BA11	4-14
4.4.2	FAULTFINDING TIPS	4-15
4.4.2.1	DW780 Idle State	4-15
4.4.2.2	Diagnostics	4-15
4.4.2.3	Unibus Margins	4-15
4.4.2.4	PMK05	4-15
4.4.2.5	EXAM-DEPOSIT Unibus Options	4-15
4.4.2.6	BRRVR Registers In The DW780	4-15
4.4.2.7	DW780 Error Bits UBSTO, UBSSYNTO, And CPU Timeouts	4-16
4.4.2.8	Lost Devices	4-16
4.4.2.9	No Terminals Responding	4-16
4.5	POWER SUPPLIES	4-17
4.5.1	ACDCLO General Notes	4-17
4.5.2	ACDCLO Cabling Of The Cpu	4-17
4.5.3	ACLO And DCLO Block Diagrams	4-18

4.5.4	CPU 5 Volt Distribution	4-19
4.5.5	BBU For Memory	4-19
4.6	MS780	4-20
4.6.1	MS780-C And -E ROM FLOW	4-20
4.6.2	MS780-E, -H MODULE UTILISATION, JUMPERS, LEDS	4-22
4.6.3	MS780-E And -H Registers	4-23
4.6.4	Multiple Memories On The SBI	4-26
4.6.4.1	MS780C	4-26
4.6.4.2	MS780E/H	4-26
4.7	RH780	4-27
4.8	KC780/785	4-28
4.8.1	LSI Cpu And Memory	4-28
4.8.2	LSI RDC Port	4-29
4.9	PART NUMBERS	4-30

Chapter 5 8600/8650

5.1	reference information	5-1
5.1.1	8600/8650 Differences	5-2
5.1.2	Module Utilisation	5-2
5.1.2.1	8600/8650 kit	5-2
5.1.2.2	Rare part numbers	5-3
5.1.3	8600 to 8650 upgrade	5-3
5.1.3.1	General	5-3
5.1.3.2	Upgrade kit breakdown	5-3
5.2	Notes for installation engineers	5-3
5.2.1	Configuration notes	5-3
5.2.1.1	SBI cables - to expand	5-4
5.2.2	RDC/CONSOL hitlist	5-4
5.3	Notes for A/R engineers	5-4
5.3.1	Hit List	5-4
5.3.2	RL02 drive maintenance	5-5
5.3.3	RL02 file maintenance	5-5
5.3.4	Making a new RL02 console pack	5-6
5.4	Notes for troubleshooting	5-7
5.4.1	General	5-7
5.4.2	Front End Cab	5-7
5.4.3	Memory	5-8
5.4.3.1	Address map	5-8
5.4.3.2	Load modules	5-8
5.4.3.3	16mB modules	5-8
5.4.3.4	Memory Fault Isolation	5-8
5.4.4	RL02 boot troubleshooting flow	5-11
5.4.5	ED0BA console diagnostic	5-11
5.4.6	Diagnostic problems	5-11
5.4.7	Hardware problems	5-12
5.4.8	ECO index	5-12
5.4.9	Tech-tip index (8600 in first column - 8650 in second)	5-13
5.4.9.1	TECHTIPS generated by country support	5-13

Contents

Chapter 6 DEC/VAX 7xx0/10xx0

6.1	Introduction	6-1
6.1.1	Codenames	6-1
6.2	Sources of information	6-2
6.2.1	Training	6-2
6.2.1.1	Training notes:	6-2
6.2.1.2	HOST Training	6-2
6.2.2	Documentation	6-2
6.2.2.1	DEC/VAX 7000/10000 Manual Kits	6-3
6.2.2.2	DEC7000/10000 Manuals	6-3
6.2.2.3	DEC/VAX 7000/10000 Manuals	6-4
6.2.2.4	VAX 7000/10000 Manuals	6-5
6.2.2.5	DEC/VAX10000 Manuals	6-6
6.3	Descriptions of Systems	6-7
6.3.1	Laser Platform	6-7
6.3.1.1	Logic	6-7
6.3.1.2	Packaging	6-7
6.3.1.3	Power	6-9
6.3.1.4	System Modules	6-10
6.3.1.4.1	CPU Modules	6-10
6.3.1.4.2	Memory Modules	6-11
6.3.1.4.3	IOP Module	6-11
6.3.2	Laser Expander Cabinet	6-12
6.3.3	Plug In Units (PIUs)	6-13
6.3.3.1	XMI PIU	6-13
6.3.3.2	VAXBI PIU	6-14
6.3.3.3	Futurebus+ PIU	6-14
6.3.3.4	SCSI Disk and Tape PIU	6-14
6.3.3.5	DSSI Disk PIU	6-14
6.3.3.6	Battery PIU	6-14
6.3.4	Who's who of 7000/10000 systems	6-15
6.4	XMI Supported Options	6-16
6.4.1	Unsupported XMI options	6-17
6.4.2	BI Supported Options	6-17
6.4.3	Unibus Support	6-17

6.5	Futurebus+	6-18
6.5.1	Concept	6-18
6.5.2	Hardware	6-18
6.5.2.1	Futurebus+ Options	6-18
6.6	Console	6-19
6.6.1	Current versions	6-19
6.6.1.1	DEC versions	6-19
6.6.1.2	VAX versions	6-20
6.7	Laser Firmware Update (LFU) utility	6-22
6.7.1	Important considerations when using the LFU	6-24
6.7.2	Booting the LFU	6-24
6.7.2.1	Booting the LFU from the console RRD42	6-24
6.7.2.2	Booting the LFU from a local disk	6-25
6.7.2.3	Booting the LFU from another system	6-25
6.8	Infoserver	6-26
6.8.1	Booting a 7000/10000 from a CD in an Infoserver	6-26
6.8.1.1	Booting the VAX LFU	6-26
6.8.1.2	Booting OpenVMS VAX Standalone BACKUP	6-26
6.8.1.3	Booting the AXP LFU	6-27
6.8.1.4	Booting OpenVMS AXP Standalone BACKUP	6-27
6.8.2	Putting a service on the Infoserver system disk	6-27
6.8.2.1	Booting the LFU from the Infoserver system disk	6-28
6.9	RDC	6-29
6.10	Parts and FRUS	6-30
6.11	Diagnostics and testing	6-33
6.12	Troubleshooting Tips	6-33
6.13	FCOs	6-34
6.14	Known Features, Restrictions and Problems	6-35
6.14.1	Console issues	6-35
6.14.1.1	BOOTDEF_DEV restrictions	6-35
6.14.1.2	DEC7000 console cannot find an OSF/1 dump partition	6-35
6.14.1.3	DEC 7000 consoles and ">>> set host ..." command	6-35
6.14.1.4	DEC 7000 console V3.2 and OpenVMS AXP V1.5	6-35
6.14.1.5	HALT-RESTART problem in VAX V2.x and DEC V2.1 consoles	6-36
6.14.1.6	Shadowset booting restrictions	6-36
6.14.1.7	HSC EDC Errors - VAX7000 Console V1.2 Interaction	6-36
6.14.1.8	VAX/DEC7000 consoles will not auto boot via HSC95s after powerup	6-37
6.14.1.9	VAX 7000 console revision and HSD30	6-37
6.14.1.10	VAX 7000 and HSJ40, Single Path Booting Problem	6-37
6.14.1.11	VAX 7000 fails to reboot from HSJ-40 devices	6-38
6.14.1.12	DEC/VAX 7000 MOP booting problem	6-38
6.14.1.13	VAX 7000 MOP boot fails with RRD43	6-38
6.14.1.14	Boot fails due to suspected corrupt EEPROM on VAX 7000	6-39
6.14.1.15	TEST DWLMA* fails on VAX 7000s with multiple XMIs	6-39
6.14.1.16	HSD05 slow boot + no auto reboot on VAX 7000	6-39

6.14.2	Software issues	6-40
6.14.2.1	Supported Versions of Operating Systems	6-40
6.14.2.2	Operating system .vs. firmware support + PALcode	6-40
6.14.2.3	VAX 7000 systems may not reboot or write the dump file	6-41
6.14.2.4	DEC Verifier and Exerciser Tool (DEC VET)	6-41
6.14.2.5	Corrupt Boot Blocks and WRITEBOOT	6-41
6.14.2.6	Mandatory Patch for Cache ECC Errors on VAX7000/10000	6-42
6.14.2.7	SCSI Disks and Volume Shadowing with OpenVMS AXP 1.5	6-42
6.14.2.8	OpenVMS VAX V6.1 Power messages at Boot time on VAX 7000	6-42
6.14.2.9	OpenVMS AXP and DEC7000 Crash Dump Problems	6-42
6.14.3	Other Goodies	6-43
6.14.3.1	DEC/VAX 7000 Air Flow Pressure Switch Causes System Shutdown	6-43
6.14.3.2	Battery wiring on DEC/VAX 10000s	6-43
6.14.3.3	CCL capacitor backwards	6-43
6.14.3.4	CIXCD Microcode on Alpha/VAX VMSclusters	6-43
6.14.3.5	VAX 7000/10000 CIXCD Write Error Interrupt (WEI) Errors	6-43
6.14.3.6	DEC7000 with >2GB memory, CIXCD, running OpenVMS, may crash	6-44
6.14.3.7	DEMFA Firmware V2.0 and OpenVMS AXP V1.5	6-44
6.14.3.8	DSSI PIU Disk Brick Gotcha	6-44
6.14.3.9	EF51R-LA and EF52R-LA Disks VAX 7000/10000 Systems	6-44
6.14.3.10	KFMSA reports "Invalid Buffer Name" errors on busy VAXes	6-44
6.14.3.11	KFMSB Cable kit	6-44
6.14.3.12	KZMSA and TZ85/6/7s give errors on OSF systems	6-45
6.14.3.13	KZMSA revision for OSF/ASE	6-45
6.14.3.14	Vital information in Laser Errorlogs	6-45
6.14.3.15	LFU Version 5.2 revision reporting	6-45
6.14.3.16	Async 05 Machine Checks on Multiple CPU VAX7000/10000s	6-45
6.14.3.17	MS7AA-FA SIMM isolation on DEC 76/7700 from OpenVMS AXP errorlog	6-45
6.14.3.18	VAX 7000 upgrade gotcha	6-45
6.14.3.19	DEC OSF/1 AXP PRESTOSERVE memory option MS7BB	6-46
6.14.3.20	DEC/VAX 7000/10000 Memory interleaving restriction	6-46
6.14.3.21	RZ57s on ALPHA platforms	6-46
6.14.3.22	RF73s in VAX 7600 SF73LA, cable problem	6-46
6.14.3.23	VMS gains time	6-46

Figures

6-1	Laser Platform BLock Diagram	6-8
6-2	Laser Platform System Cabinet Layout	6-9
6-3	Laser Expander Cabinet Layout	6-12
6-4	Generic PIU Layout	6-13
6-5	Connecting to RDC	6-29

Tables

6-1	Current training	6-2
6-2	Who's who	6-15
6-3	DEC 7000/10000 - XMI Options	6-16
6-4	VAX 7000/10000 - XMI Options	6-16
6-5	VAX7000_V07 LFU devices and revisions	6-22
6-6	AXP7000_V0D LFU devices and revisions	6-23
6-7	Laser LSB and Platform parts	6-30
6-8	XMI PIU parts	6-30
6-9	Futurebus+ PIU parts (AXP only)	6-31
6-10	Disk PIU parts	6-31
6-11	Battery PIU parts	6-31
6-12	Miscellaneous Cables	6-32
6-13	FCO summary for DEC/VAX/7000/10000	6-34
6-14	DEC VET vs Operating Systems	6-41
6-15	Minimum system revisions for PRESTOSERVE support	6-46

Contents

Chapter 7 VMS

7.1	VMS Boot Troubleshooting	7-1
7.1.1	Booting a VAXcluster Member over the Ethernet	7-5
7.1.2	If it prints the VAX/VMS Version X.Y "banner"	7-6
7.1.2.1	Booting VMS conversationally	7-6
7.1.2.1.1	11750	7-6
7.1.2.1.2	uVAXII,uVAX 35/3600	7-7
7.1.2.1.3	8600/8650	7-7
7.1.2.1.4	Nautilus Family	7-7
7.1.2.1.5	82/83xx	7-7
7.1.2.1.6	6xx0	7-7
7.1.2.1.7	7xx0/10xx0	7-8
7.1.2.1.8	11780/11785, 11730	7-8
7.1.2.2	Starting VMS conversationally	7-8
7.2	How to use VMS when you have forgotten the passwords	7-10
7.3	Using VMS Sysgen to find floating addresses and vectors (for Unibus devices)	7-11
7.4	Identifying Hangs/Crashes/Halts/Reboots	7-12
7.4.1	Hangs	7-12
7.4.2	Fatal Bugchecks	7-13
7.4.2.1	How to ensure that a crash dump is taken	7-14
7.4.3	Halts and other pathological failures	7-17
7.4.3.1	Unknown restart	7-17
7.4.3.2	Interrupt stack invalid	7-17
7.4.3.3	Double Error Halt	7-18
7.5	VMS error messages	7-18
7.6	VAX/VMS DEVICE MNEMONICS AND DRIVERS	7-19
7.7	List Of VMB.EXE Register Bit Definitions	7-24
7.8	SID registers and third party software	7-28

Figures

7-1	SID layout, part 1	7-28
7-2	SID layout, part 2	7-29

Tables

7-1	Pathological halt codes	7-17
7-2	R0 - Boot device type codes	7-24
7-3	R1 - Boot device's bus address	7-24
7-4	R2	7-25
7-5	R3 - Boot device unit number	7-26
7-6	R4	7-26
7-7	R5 - Software Boot control flags	7-27
7-8	R7 on CALYPSO series	7-27

Chapter 8 retired

Contents

Chapter 9 PDP11

9.1	11/24	9-1
9.1.1	11/24 CPU MODULE M7133/M7133-YA	9-1
9.2	11/70	9-5
9.2.1	Bootstrap Error Halts	9-5
9.2.2	M9312 Bootstrap Terminator	9-5
9.2.3	Booting second RH70	9-7
9.2.4	11/70 Hints and Tips	9-7
9.2.4.1	11/70's and DECX11	9-7
9.2.4.1.1	DECX11 using XMONE0.LIB monitor E	9-7
9.2.4.2	False Cache Data Parity Errors	9-7
9.2.4.3	Main Memory Address Parity Error	9-8
9.2.4.4	MJ11 Troubleshooting	9-8
9.2.4.5	MK11 Array in error determination	9-8
9.2.4.6	System Size register Switches	9-9
9.2.4.7	Memory Bus Cabling	9-9
9.2.5	Modifications to the 11/70 by SYSTIME	9-9
9.2.5.1	Backplane Modification	9-9
9.2.5.2	M8136 Modifications	9-9
9.2.5.3	M8142 Modifications	9-9
9.3	11/84	9-11
9.3.1	11/84 Known Problems	9-11
9.3.1.1	M8191 (UBA)	9-11
9.3.1.2	11/84's and TU80's	9-11
9.3.1.3	BATTERY BACKUP SUPPORT (H7231-E/F)	9-11
9.3.1.4	11/84's AND EMULEX SC21'S	9-11
9.3.1.5	LINE TIME CLOCK	9-11
9.3.1.6	DHU11 DIAGNOSTIC ZDHX	9-11
9.3.2	MINIMUM LOAD MODULE (MLM M7556)	9-11
9.3.2.1	Requirements for having load modules	9-12
9.3.2.2	Where to install load modules	9-12
9.3.3	1184 General Information	9-12
9.3.4	MDM MODULE	9-12
9.3.4.1	MDM NPG switches	9-13
9.3.4.2	MDM Leds	9-13

9.3.5	CPU Switches and Jumpers	9-13
9.3.6	UBA Boot Roms	9-13
9.3.7	Part Numbers	9-14
9.3.8	Module Utilisation	9-14
9.3.9	Diagnostics	9-14
9.3.10	Decx11	9-15
9.3.11	Power supplies	9-15
9.3.11.1	Power supply ratings	9-15
9.3.12	Register information	9-16
9.3.12.1	CPU Registers	9-16
9.3.12.1.1	CPU Error Register(Address 17777766)	9-16
9.3.12.1.2	Maintenance Register(Address 17777750)	9-16
9.3.12.1.3	Memory Error Register(Address 17777744)	9-16
9.3.12.1.4	Cache Control register(Address 17777746)	9-17
9.3.12.1.5	Boot and Diagnostic CSR(Address 17777520)	9-17
9.3.12.2	KTJ11-B Registers (UBA)	9-17
9.3.12.2.1	Memory Configuration register(Address 17777734)	9-17
9.3.12.2.2	Diagnostic CSR(Address 17777730)	9-18
9.3.12.2.3	Diagnostic data register(Address 17777732)	9-18
9.3.13	Memory Switch Settings	9-19
9.3.13.1	MSV11-RA	9-19
9.3.13.2	MSV11-J	9-19
9.3.14	Console commands	9-20
9.3.14.1	Boot Command	9-20
9.3.14.2	Test Command	9-20
9.3.14.3	Setup Command	9-20
9.3.14.3.1	Set up command 1	9-21
9.3.14.3.2	Set up command 2	9-21
9.3.14.3.3	Setup Table Typical example for UK	9-21
9.3.14.3.4	Set up command 3	9-22
9.3.14.3.5	Set up command 4	9-22
9.3.14.3.6	Set up command 7	9-22
9.3.14.3.7	Set up command 8	9-22
9.3.14.3.8	Set up command 9	9-22
9.3.15	Front Panel	9-23
9.3.15.1	Rotary Switch	9-23
9.3.15.2	Halt/restart/run switch	9-23
9.3.15.3	Front panel indicators	9-23
9.3.16	Front panel error codes	9-24
9.3.17	11/84 Unibus signal connectors	9-26
9.4	Unibus Floating Addresses and Vectors	9-27
9.4.1	Floating Addresses and Vectors - your Questions Answered	9-27

Figures

9-1	M7133	9-4
9-2	M7133-YA	9-4
9-3	Block Diagram	9-12
9-4	MDM Module Layout	9-13
9-5	Unibus Connector Layouts	9-27

Tables

9-1	Module jumpers and switches	9-1
9-2	SLU2 baud rate selection	9-2
9-3	Baud rate selection. E135 or E121	9-3
9-4	SLU1 baud rate selection	9-3
9-5	1170 Bootstrap Error Halts	9-5
9-6	M9312 Configurations	9-6
9-7	MK11 Bit In Error Determination	9-8
9-8	Floating Address Ranking	9-28
9-9	Floating Vector Ranking	9-29

Contents

Chapter 10 VAXclusters

10.1	Cluster Registrations	10-1
10.1.1	Benefits of Cluster Registration	10-1
10.1.2	How to Register your Cluster	10-1
10.1.3	Documentation	10-2
10.1.3.1	Quorum	10-2
10.1.4	Cluster Revision Levels	10-3
10.2	CI	10-3
10.2.1	CI node numbering	10-3
10.2.2	CI cabling	10-4
10.2.3	Link modules and settings	10-4
10.2.3.1	L0100	10-4
10.2.3.2	L0118	10-5
10.2.3.3	Caution when adding new CI nodes	10-5
10.2.4	CI780	10-5
10.2.5	CI750	10-5
10.2.5.1	L0009	10-6
10.2.5.2	CIPA bus	10-6
10.2.5.3	CIPA box	10-6
10.2.6	CIBCI	10-6
10.2.7	CIBCA-A, CIBCA-B	10-7
10.2.8	CIXCD	10-7
10.3	CI microcode	10-8
10.3.1	Copying CI microcode files to/from console	10-8
10.3.2	Checking CI microcode revisions	10-9
10.4	CI Diagnostics	10-10
10.4.1	Attaching CI adapters	10-10
10.4.2	Level 3 Diagnostics	10-12
10.4.3	EVGAA	10-12
10.4.4	Level 2 (Online) diagnostic	10-13
10.5	Bootting systems via the CI	10-14
10.5.1	Register Setups	10-14
10.6	Configurations and Performance	10-15
10.6.1	DSSI	10-16
10.7	Dual Porting	10-17

10.7.1	HSC to HSC.	10-17
10.7.2	UDA50 and clones.	10-17
10.7.3	MASSBUS to MASSBUS	10-17
10.8	VMS.	10-18
10.8.1	Shutdown Options.	10-18
10.8.1.1	Remove_node	10-18
10.8.1.2	Cluster_shutdown	10-18
10.8.1.3	Reboot_check	10-18
10.8.1.4	Savefeedback	10-18
10.8.2	Hung Clusters.	10-18
10.8.2.2	Loss of Quorum	10-18
10.8.2.2	Gradual loss of activity.	10-19
10.8.3	Show Cluster Utility.	10-20
10.8.4	Shadow Sets.	10-21
10.8.4.1	Controller Based Volume Shadowing	10-21
10.8.4.2	Host Based Volume Shadowing	10-21
10.8.4.3	Volume Shadowing SYSGEN Parameters	10-21
10.8.4.4	HBVS Performance part 1	10-22
10.8.4.5	HBVS Performance part 2	10-22
10.8.4.6	Volume Shadowing General Considerations	10-23
10.8.5	UETP.	10-23
10.8.6	Sysgen Parameters.	10-24
10.8.7	VMS Ver 5.5 SYSGEN Parameter changes	10-27
10.8.7.1	Changes to CI Port Sanity Timeout	10-27
10.8.7.2	Changes to Virtual Circuit Check	10-27
10.9	Cluster common system disk.	10-27
10.9.1	Where to put the Diagnostics?	10-29
10.10	Error Messages.	10-30
10.10.1	%PAA0 errors.	10-30
10.10.1.1	Port Error Bit(s) Set - CNF/PMC/PSR	10-30
10.10.1.1.1	Maintenance/Sanity Timer Expiration	10-32
10.10.1.2	CI port Timeout, Virtual Circuit Timeout.	10-33
10.10.1.3	Path has gone from GOOD to BAD	10-33
10.10.1.4	Cables have gone from Uncrossed to Crossed.	10-34
10.10.1.5	Remote system conflicts with known system	10-34
10.10.1.6	Port/Software has closed virtual circuit.	10-34
10.10.2	%CNXMAN errors.	10-34
10.10.3	FATAL BUGCHECK, CLUEXIT	10-35
10.11	HSC.	10-36
10.11.1	HSC Documentation	10-36
10.11.2	Part Numbers	10-37
10.11.3	Cronic.	10-38
10.11.3.1	Distribution Procedures, MDDS.	10-38
10.11.3.2	HSC V8.20	10-38
10.11.3.3	HSC V8.10	10-38
10.11.3.4	HSC V7.00	10-38
10.11.3.5	HSC V6.50	10-38

10.11.3.6	HSC V4.1A	10-38
10.11.4	General	10-39
10.11.5	Using the HSC console terminal	10-39
10.11.5.1	Set Host /HSC	10-40
10.11.6	System Parameters	10-40
10.11.7	Installing HSC Cronic operating system	10-40
10.11.8	Performance Considerations	10-41
10.11.9	HSC Hardware Maintenance Features	10-42
10.11.10	HSC Diagnostics	10-43
10.11.10.1	Bootstrap diagnostics	10-43
10.11.10.2	Offline diagnostics	10-43
10.11.10.3	Inline diagnostics	10-44
10.11.10.4	Testing disk and tape drives	10-44
10.11.10.4.1	Running iltape	10-44
10.11.11	HSC "System Crashes"	10-45
10.11.11.1	Host Clear	10-45
10.11.11.1.1	Troubleshooting HOST CLEARS	10-45
10.11.12	K.SCSI	10-47
10.11.12.1	K.SCSI Documentation	10-47
10.11.12.2	Part Nos.	10-47
10.11.12.3	Single Ended or Differential Bus	10-48
10.11.12.4	Storage Shelves	10-48
10.11.12.5	3.5 and 5.25 SBB's	10-48
10.11.12.6	DWZZA	10-48
10.11.12.7	Dualpathed vs Dualport	10-48
10.11.12.8	Shadowing	10-48
10.11.12.9	KSUTIL	10-49
10.11.12.10	DSA like	10-49
10.11.12.11	StorageWorks Errorlog Analysis Tool	10-49
10.12	HSJ40, SW800/SW500	10-50
10.12.1	HSJ40 Software Dependencies	10-50
10.12.2	HSJ40 Documentation	10-50
10.12.3	HSJ40 and BA350 Part Nos.	10-51
10.12.4	HSJ40 Operational Features	10-51
10.12.4.1	Cluster HW Issues	10-51
10.12.4.2	OCP	10-52
10.12.4.3	Console	10-52
10.12.4.4	HSOF	10-52
10.12.4.5	SHADOWsets - RAID 1	10-53
10.12.4.6	STRIPEsets - RAID 0	10-53
10.12.4.7	RAIDsets	10-53
10.12.4.8	RAID Evaluator	10-53
10.12.4.9	3.5 and 5.25 SBB's	10-54
10.12.4.10	DSA like	10-54
10.12.4.11	StorageWorks Errorlog Analysis Tool	10-54
10.12.4.12	WARM SWAP	10-54

Tables

10-1	Documentation	10-2
10-2	Part numbers for ordering CI cables	10-4
10-3	CI780 Module Utilisation	10-5
10-4	CIPA (CI750 and CIBCI) Module Utilisation	10-6
10-5	BICA (CIBCI) Module Utilisation	10-6
10-6	CIBCA Module Utilisation	10-7
10-7	CIXCD Module Utilistation	10-7
10-8	CI uCode Revisions	10-8
10-9	Maximum no. of CI Adapters per VAXcluster CPU.	10-15
10-10	CI Adapter Bandwidths	10-15
10-11	Maximum no. of DSSI Adapters per CPU.	10-16
10-12	DSSI Adapters performance characteristics.	10-16
10-13	CI750/CI780 CNF register	10-31
10-14	CIBCI CNF register	10-31
10-15	PMC register	10-32
10-16	PSR register	10-32
10-17	Part No's and Configuration of HSC Controller Models	10-37
10-18	Other useful Part No's	10-38
10-19	Relative Device Speeds	10-41
10-20	K SCSI and BA350 part nos.	10-47
10-21	Part Nos.	10-51
10-22	Part Nos. for HSO F	10-53
10-23	Levels of RAID	10-53

Contents

Chapter 12 Diagnostics

12.1	VAXPAX, VAX Diagnostics	12-1
12.1.1	Read me first	12-1
12.1.2	VMS - VAXPAX - DS	12-2
12.1.3	EB - 8200/8300 - SCORPIO	12-3
12.1.4	EC - 11750 - COMET	12-3
12.1.5	ED - 8600 / 8650 - VENUS / MORNING_STAR	12-4
12.1.6	EH - MICROVAX / MICROVAX II - SEA_HORSE / MAYFLOWER	12-4
12.1.7	EJ - 8810/20/30/40 - POLARSTAR	12-4
12.1.8	EL - 6000/200/300 - CALYPSO/CVAX	12-5
12.1.9	EM - 6000/500 - CALYPSO/MARIAH	12-5
12.1.10	EN - 11730 - NEBULA	12-5
12.1.11	ER - 6000/400 - CALYPSO/RIGEL	12-5
12.1.12	ES - 11780 - STAR	12-6
12.1.13	ET - 11785 - SUPERSTAR	12-6
12.1.14	EX - 6000/600 - CALYPSO/NEPTUNE	12-7
12.1.15	EZ - 8800 / 8700 / 85x0 - NAUTILUS	12-7
12.1.16	GUIDE to generic VAX diagnostic INDEX	12-8
12.1.17	Generic VAX diagnostic INDEX	12-8
12.2	XXDP, PDP diagnostics	12-19
12.2.1	A quick guide to building a DECX11	12-19
12.2.1.1	An example DECX11 build	12-19
12.2.1.2	Some commonly used Decx modules	12-20
12.2.2	XXDP+ V2	12-20
12.2.2.1	Start-up file BOOT.CCC	12-21
12.2.2.2	SMALL MONITOR (XXDPSM)	12-21
12.2.2.3	EXTENDED MONITOR (XXDPXM)	12-21
12.2.2.4	Differences	12-24
12.2.2.5	Switches	12-24
12.2.2.6	UPDAT program	12-25
12.2.3	XXDP Diagnostics Listing	12-25
12.2.4	Handy Boot Noddies	12-46
12.2.4.1	RL01/2	12-46
12.2.4.2	RP04/5/6	12-46

Tables

12-1	Utilities	12-25
12-2	Diagnostics	12-25
12-3	Decx Modules	12-41
12-4	XXDP+ V1 System Files	12-44
12-5	XXDP+ V2 System Files	12-45

Contents

Chapter 13 DEC 3000 AXP

13.1	First Generation Alpha Products	13-1
13.1.1	DEC 3000 Model 300L AXP - Pelica	13-1
13.1.2	DEC 3000 Model 300 AXP - Pelican	13-1
13.1.3	DEC 3000 Model 400/400S AXP (S for Server) - Sandpiper	13-2
13.1.4	DEC 3000 Model 500/500S AXP(S for Server) - Flamingo, DEC 3000 Model 500X - Hotpink	13-2
13.1.5	Prestoserve	13-3
13.1.6	Workstation Specifics	13-3
13.2	Second Generation Alpha Products	13-3
13.2.1	DEC 3000 Model 300X and 300LX - Pelica Plus	13-3
13.2.2	DEC 3000 Model 600 and 600S - Sandpiper Plus	13-3
13.2.3	DEC 3000 Model 800 and 800S - Flamingo II	13-3
13.3	Console commands	13-4
13.3.1	Other commands	13-4
13.3.2	Examples	13-4
13.3.2.1	Booting Open VMS AXP	13-4
13.3.2.2	Booting DEC OSF/1	13-5
13.3.2.3	Testing	13-5
13.4	Diagnostics	13-5
13.4.1	Powerup console environment	13-5
13.4.2	Customer (console) mode diagnostic environment	13-5
13.4.3	Service (console) mode diagnostic environment	13-5
13.5	Testing	13-5
13.6	PALcode - An Explanation	13-6
13.7	Firmware	13-7
13.7.1	Firmware Update Procedure	13-8
13.7.1.1	Via CDrom	13-8
13.7.1.2	Over the Network from an Ultrix system	13-9
13.7.1.3	From a tape - under Open VMS AXP	13-9
13.7.1.4	From a tape - under DEC OSF/1	13-9
13.8	FCOs and problems	13-10
13.8.1	FCO History	13-10
13.8.2	Lost Keys for DEC 3000 Model 500 and 800	13-10
13.8.3	DEC 3000 Model 400 Problem with RZ25-E	13-11

13.9 Software Installation on DEC 3000 series Alpha Systems	13-11
13.9.1 Post installation tasks	13-12

Tables

13-1 Set/Show: (for environmental variables)	13-4
13-2 Available tests	13-6
13-3 Additional parameters	13-6
13-4 Operating System version vs Firmware revision	13-7
13-5 Firmware part numbers	13-8
13-6 DEC 3000-400 FCOs	13-10
13-7 DEC 3000-500 FCOs	13-10

Contents

Chapter 14 QBUS SYSTEMS

14.1	QBUS CONFIGURATION and Part Number Guide	14-1
14.1.1	General Q Bus Options	14-1
14.1.2	S Box Options	14-6
14.1.3	QBus Options (all) in part number order	14-8
14.1.4	Devices that can be located in CPU type Enclosures	14-11
14.1.5	Non Digital Q-Bus Options	14-11
14.1.6	System Enclosures	14-17
14.1.7	Backplanes	14-18
14.1.8	Termination and Expansion Rules for single and multiple backplanes	14-18
14.1.8.1	Termination SILs (Single In Line resistor packs)	14-20
14.2	ENCLOSURES	14-21
14.2.1	BA23 Fans connected wrong - cause memory failures	14-21
14.2.2	BA23 and BA123 Power Harnesses burn out	14-21
14.3	QBUS MVAX SYSTEMS -Problems and Features.....	14-22
14.3.1	QBus Vax computers and their parameters	14-22
14.3.2	QBus Processor Information	14-23
14.3.3	KA6xx firmware	14-23
14.3.3.1	Identification of Firmware	14-24
14.3.3.2	What different F/W versions do	14-25
14.3.4	PMI memory organisation (MVax 2) where is on board memory	14-25
14.3.5	Procedure for replacing Micro Vax 2 8 Mbyte memories	14-25
14.3.6	Errors on ECC memory - MS650	14-26
14.3.7	Phantom Uncorrectable memory errors from errrolog summary	14-26
14.3.8	KA640/650/655 Solicit Boot	14-26
14.3.9	KA640 ethernet, Front Panel, and their Fuses	14-27
14.4	QBUS OPTIONS - Problems and features	14-27
14.4.1	VCB02s in BA4xxx enclosures sync problem	14-27
14.4.2	RQDX3 LED	14-27
14.4.3	TQK50/70 LEDs At Power On	14-28
14.4.4	TQK70 "Unused opcode interrupt error" F/W problem	14-28

14.4.5	KMV11 notes	14-28
14.4.5.1	Installation Problems	14-28
14.4.5.2	Switches	14-28
14.4.5.3	Cables	14-29
14.4.5.4	Changing CSRs and PSI	14-29
14.4.6	DSV11 bad chips	14-30
14.4.7	DELQA-Plus	14-30
14.4.8	DEQNA migration procedures for later VMS versions (5,4+)	14-31
14.4.9	DZQ11 shorting to adjacent PCBs	14-31
14.5	VAX 4xxx SYSTEMS - Problems and Features	14-32
14.5.1	4200 Floating point problem	14-32
14.5.2	4200 Translation Buffer Problem - Poor performance	14-32
14.5.3	KA670 H3604 Panel	14-32
14.5.4	KFQSA and KZQSA notes	14-32
14.5.5	KA655 CDAL PE errors - 2nd level cache parity errors	14-33
14.5.6	KA670 FCO 001 - RA and TF Boot and MOV C5 and CMPC5 instructions	14-33
14.5.7	Upgrading a 4300 to later 4xxx systems	14-33
14.5.8	SAFETY- Rackmount 4000 -SAFETY	14-33
14.5.9	New Firmware for VAX 4400, 4500 and 4600 - Ver 4.8	14-34
14.5.10	Notes on Legacy (VAX 4x00A) systems	14-36
14.6	KFQSA notes and DSSI warm swap notes	14-37
14.7	MDM notes	14-37
14.7.1	MDM 138	14-37
14.8	The PDP 1193	14-38
14.8.1	XXDP Support	14-38
14.8.2	The console system	14-38
14.8.3	Known Problems	14-39
14.8.4	Parity error problems	14-39
14.9	Older PDPs	14-39
14.9.1	KDJ11-BF bad FPA chips	14-40
14.10	Other Bus Systems	14-40
14.10.1	Firefox VS3520/40	14-40

Figures

14-1	BA23 Fan Connections	14-21
14-2	Identification from firmware banner at switch on	14-24

Tables

14-1	Q-Bus Options	14-2
14-2	BA213/4/5 and BA440 Options	14-6
14-3	Numerical list of QBus Options - cross reference	14-8
14-4	Non Digital Q-Bus Options	14-12
14-5	Fujitsu Devices	14-16
14-6	System Enclosures	14-17
14-7	Backplanes	14-18
14-8	Bus Expansion Systems	14-20

14-9	Cable part numbers etc.	14-21
14-10	List of Qbus Vax Systems	14-22
14-11	Processor Information	14-23
14-12	Identification from EEPROM part numbers	14-24
14-13	KA640/H3602 fuse check	14-27
14-14	KMV dist panel switches that need to be on, all others off	14-29
14-15	DELQA-T switch settings	14-30
14-16	DEQNA upgrade packages available	14-31
14-17	VS3520/40 PCBs that plug in the M Bus	14-40

Contents

Chapter 15 DESKTOP SYSTEMS AND MONITORS

15.1	Physical address regions for memories	15-1
15.2	Loopbacks required for System Exercisers on VAX Desktop Systems	15-2
15.3	Memories for Desktop systems	15-3
15.4	List of DECStation and DECSysystems	15-4
15.5	Lists of VAX Desktop Systems	15-5
15.6	Enclosures for 2000/3100/5000 systems	15-7
15.7	Chronological Representation of ELS Desktop models	15-7
15.8	Glossary of types of desktop systems	15-9
15.9	Cables used in VAX Desktop Systems	15-10
15.9.1	System to Expansion box Matrix	15-12
15.10	Problems with 2000 and early 3100 systems	15-13
15.10.1	Identifying different VS3100 system modules	15-13
15.10.1.1	MicroVAX 3100 (KA41) ROMs	15-13
15.10.1.1.1	MicroVAX 3100 (KA41-A) ROMs	15-13
15.10.1.1.2	MicroVAX 3100E (KA41-E) ROMs	15-14
15.10.1.2	SCSI ROMs on KA41 system modules	15-14
15.10.2	VS/MV 2000 Memory Error Decoding	15-14
15.10.3	Memory Organisation with MS42 - PVAX/TEAMMATE2 PCB memory	15-15
15.10.4	Problems on MS42 memories	15-15
15.10.4.1	MS42 Memory daughter boards flexing	15-15
15.10.4.2	Parity Errors in general - How many are allowed on MS42 memory ..	15-15
15.10.4.3	Async Write Errors causing incomplete dump file and therefore no reboot	15-15
15.10.4.3.1	Update for VMS 5.5-2	15-16
15.10.4.4	Nat Semi Chips as drivers in MS42 memory PCBs	15-16
15.10.5	Hangs when running Windowing software	15-17
15.10.6	RZ56 gets half way through booting with Device Offline	15-17
15.10.7	LK401 is now supported	15-18
15.10.8	Drives over 1 Gbyte will not boot on VS3100s or MV3100	15-18
15.10.9	VS3100 system modules DOA	15-18
15.10.10	Console password feature on VS3100	15-18
15.10.11	GPX Screen/Pixel corruption	15-19
15.11	Later MV3100 Waverly and Cheetah sytems and VS4000 systems (not VS4000-90) ..	15-19

15.11.1	Sys Exer Crashes - and general console f/w bugs (VAXstation Model 60 and MicroVAX)	15-19
15.11.2	Problems with RZ23s (Not supported) and RZ23Ls on VS4000s	15-20
15.11.3	SOC Chip Systems going slow (VS4000-vlc, MV3100 mod 30 & 40, VAX4200, VXT2000)	15-20
15.11.4	Green power LED on MV3100 Model 30,40 and 80	15-21
15.11.5	MS42-KA, 8 Mbyte SIMMs showing as 4 Mbyte	15-21
15.11.6	VS4000 Firmware problems fixed with FCO F0001 Ver 1.2	15-22
15.11.7	Version 1.4 firmware for VS 4000 VLC/60 models	15-22
15.11.8	SCSI length on VS4000 and MV3100 mod 30, 40 and 80 is 4 metres	15-23
15.11.9	SCSI lengths of various enclosures	15-23
15.11.10	VS4000 vlc system modules shorting to ground	15-24
15.11.11	Multiple LUNs - MD400/410 Image Scanners - RRD40 - EXABYTES	15-25
15.11.11.1	MD400/410	15-25
15.11.11.2	RRD40 CDROM	15-25
15.11.12	RX33 SCSI Variant (VAXstation and MicroVAX)	15-25
15.11.13	VAXstation 4000 Model 60 LCG Card (VAXstation only)	15-25
15.11.14	VRC16 Monitors (VAXstation only)	15-26
15.11.15	VS4000 VLC Does not test for presence of a Keyboard (VAXstation only) ...	15-26
15.11.16	HALT Button Problem (VAXstation and MicroVAX)	15-26
15.11.17	SET KBD Problem (VAXstations only)	15-26
15.11.18	Console Terminals (MicroVAX)	15-26
15.11.19	VS4000 VLC with Clearpoint Memory SIMs	15-27
15.11.20	Vax Station 4000s fail the Ethernet PUST on thinwire	15-28
15.11.21	VS4000 Mod vlc, 60, 90, MVax3100 Mod 30, 40, 80 and 90 - Decoding memory errors with VMS 5.5	15-29
15.11.22	DHW on MV3100 model 30, 40, 80 and 90 - Hangs and lock ups	15-30
15.11.23	PMAX - VS4000 Turbo Channel SCSI problems	15-30
15.11.23.1	VS 4000-60 Turbochannel - Supported Options	15-30
15.11.23.2	Boot support	15-30
15.11.23.3	SCSI host id conflict	15-31
15.12	VAXStation 4000 Mod 90 only problems	15-31
15.12.1	VS 4000 Mod 90 PUST gives invalid FRU callout on a memory error	15-31
15.12.2	VS4000 mod 90 - New MOP command	15-33
15.12.3	VAXStation 4000 Mod 90 Console Firmware Ver 1.1 - and updating instr ...	15-33
15.13	Cheetah Vax 4000-100 and MV3100 Mod 90 only problems	15-35
15.13.1	Microvax 3100 model 90 and VAX 4000-100 CPU module conversion procedure	15-35
15.13.2	System Module Revision Problem (Rev D) and DSSI host id setting	15-36
15.13.3	MVAX 3100-90 and VAX 4000-100 serial ports may not support devices that run at 19.2K baud rate.	15-36
15.13.4	VAX 4100 ASYNC WRTErr crashes when using SYSGEN "connects" to Q-BUS adapters	15-37
15.13.5	FBCs or timeouts with the DHW41/42 comms option	15-37
15.14	MIPSCO systems	15-38
15.14.1	DECstation2100/3100 DECsystem3100	15-38
15.14.2	DECsystem5100	15-38
15.14.3	Decstation 2100/3100 console language	15-39

15.15	DECStation 5100 and 5200 systems	15-39
15.15.1	D51nn Troubleshooting Information	15-40
15.15.2	D51nn No memory at 0	15-40
15.15.3	5200 Rev levels system and turbo options	15-40
15.15.4	DS5120 DMA memory error on startup	15-40
15.15.5	DS5120/5 Ethernet Boot Problem	15-41
15.15.6	Booting workstations	15-41
15.16	MS-DOS Systems	15-41
15.16.1	Adaptec SCSI Controllers	15-41
15.16.1.1	Configuration Diskettes for the Adaptec 1740 and the DECpc 400ST series	15-42
15.16.1.2	DECpc 450ST and Adaptec 1740 System hangs in Boot	15-43
15.16.1.3	Configuring the Adaptec 1740	15-43
15.16.1.4	Displaying SCSI bus info from windows	15-44
15.16.2	LK450 Problems	15-44
15.17	CALYX ApplicationDec 433mp	15-45
15.17.1	Installing SCO UNIX and adding Hardware to SCO UNIX platforms	15-46
15.17.2	RZ Spin up problems for SCO and DOS - work rounds	15-46
15.17.3	433mp alternate console	15-47
15.17.4	Entering setup mode before booting	15-47
15.17.5	ISA and EISA systems and SYSX ver 2 and 3	15-47
15.18	MONITORS	15-48
15.18.1	General	15-48
15.18.2	VR290 EHT FCO	15-48
15.18.3	Broken On Off Switches on VR29x Monitors	15-48
15.18.4	VR260/2 Problems	15-49
15.18.5	Monitor Cables - Pinouts	15-49
15.18.6	SAFETY	15-50
15.18.6.1	Must be trained - for safety reasons	15-50
15.18.6.2	Static Shocks from Monitors when they are switched off	15-50
15.18.6.3	VR260 and VR262 Width adjustment	15-50
15.18.7	VR299 Screen Collapsing	15-50
15.18.8	VRT16 and VRT19 Issues	15-50
15.18.8.1	VRT19 probs - Arcing - Horizon Sync - Screen collapse - Out of Focus	15-50
15.18.8.2	Sony Trinitron Monitors - black lines	15-51
15.18.8.3	VRT19 blows 3100 fuses	15-51
15.18.8.4	The switch on the VRT1x-H monitors = Refresh rates	15-51
15.18.8.5	Service Manual	15-51
15.18.8.6	FRUs	15-52
15.18.9	VR160 Main Sub Assembly damaged on return	15-52
15.18.10	VR320 Dynamic Phase adjustment problem at 72 Hz refresh rate	15-52
15.18.11	LIST OF MONITORS used on Work Stations and their attributes	15-53
15.19	GRAPHICS OPTIONS	15-54
15.19.1	List of Graphics Options used on VAX Desktop	15-54
15.19.2	PMAGB-B Jumpers can cause blank screen	15-55
15.19.3	SPX Switches - 1 cm missing from LHS of monitor with a dark band at LHS	15-56

15.19.4	Lines on screen using the PMAGB-B - HX Smart Frame Buffer TURBOchannel	15-56
---------	---	-------

Figures

15-1	Chronological Representation of ELS Desktop models	15-8
15-2	Repairs to Monitors with broken on off switches	15-49

Tables

15-1	Physical Address Regions for Memories	15-1
15-2	Loopbacks required for system Exercisers on VAX Desktop Systems	15-2
15-3	List of Desktop Memories	15-3
15-4	List of DECStation and DECSysystems	15-4
15-5	First List of 2000 and 3100 systems	15-5
15-6	Second List of 2000 and 3100 systems	15-6
15-7	DS3100, VS3100, VS4000 and MV3100 Cable List	15-10
15-8	Expander box to System Enclosure Matrix	15-12
15-9	KA41-AA/-BA ROMs	15-13
15-10	KA41-EA/-DA ROMs	15-14
15-11	Memory Configuration Table	15-32
15-12	Monitors used on Work Stations	15-53
15-13	List of Graphics Options used on VAX Desktop	15-54
15-14	>>>SHOW CONFIG - Check on which graphics board is installed	15-54
15-15	PMAGB-Bx OSCILLATOR JUMPER SETTINGS	15-56

Contents

Chapter 16 SMALL DEVICES (SCSI, DSSI & ST506)

16.1	Lists of Disks Buses and Their Attributes	16-1
16.1.1	Buses and VMS naming conventions	16-1
16.1.2	Form Factor - what it is and sizes	16-1
16.1.3	Lists of Devices	16-2
16.2	DSP Drives	16-6
16.2.1	List of DSP drives	16-6
16.2.2	Logistics Strategy for DIGITAL DSP Disk Drives as of FEB 93	16-7
16.2.3	Jumper Settings for RH18x-FS Disk Drives	16-7
16.2.4	Warranty for DSP Disk Drives	16-8
16.3	SZ12 SZ16 Options	16-9
16.4	How to handle forced Errors, \$ Analyse/disk etc	16-9
16.4.1	Bouncing block	16-10
16.4.2	Forced Errors	16-10
16.4.3	To find the file given an LBN	16-10
16.4.4	ANALYSE/DISK notes	16-11
16.4.5	What to do when the file is found	16-11
16.4.6	If you have a file id and want a file name	16-12
16.5	General Items	16-12
16.5.1	Torx Driver kit	16-12
16.6	ST506 DISKS	16-12
16.6.1	Floppy disk densities	16-12
16.6.2	RX26 Formatting and the switch settings at the side	16-13
16.6.3	RD Drives that will not format	16-13
16.6.4	RQDX3 LED	16-14
16.6.5	RD32 Head Stiction - Spin up faults	16-14
16.7	General SCSI and DSSI Information	16-14
16.7.1	Switching devices ON/OFF on a live SCSI	16-15
16.7.2	Buses, devices and SCSI/DSSI termination	16-15
16.7.3	SCSI and DSSI bus lengths	16-15
16.7.4	DSSI Cables	16-16
16.7.5	SCSI Cables	16-16
16.8	SCSI Errorlogging Information	16-16
16.8.1	Read/Write Command Packets - 6 byte commands	16-17

16.8.2	REQUEST SENSE Command	16-17
16.8.2.1	Check condition in response to Request Sense	16-18
16.8.3	Error Codes 70 and 71 (hex) Sense data format	16-19
16.8.4	Sense-Key Specific	16-21
16.8.5	Deferred Errors	16-22
16.8.6	Sense Key and Sense Code Definitions	16-24
16.8.7	A worked Example	16-28
16.9	SCSI Disk Bad Blocking Notes	16-29
16.9.1	What the Disk itself does	16-29
16.9.2	SCSI Formatting	16-29
16.9.3	What BBRs VMS, ULTRIX, and DOS does	16-30
16.9.4	The problem with VMS BBR	16-30
16.10	SCSI disk problems	16-30
16.10.1	RZ26 Off track errors	16-30
16.10.2	Noisy RZ22 and RZ23 SCSI Drives	16-31
16.10.3	SCSI B Phase Errors	16-31
16.10.4	RZ24 Rev A05 problems and the RZ24L	16-32
16.11	DSSI disk problems	16-32
16.11.1	Possible data corruption with RF31T, RF31T+, RF35, RF35+ and RF73	16-32
16.11.2	RF30/71 ECMs left unuseable after fitting to a faulty HDA	16-34
16.11.3	RF72 reliability problem	16-35
16.11.4	RF Drive Calibration and MDM131+	16-35
16.11.5	RF31 and RF72 Command Timeout Problem	16-35
16.11.6	R23RF Enclosure Change of Power Supply	16-36
16.11.7	KFQSA - Undetected data corruption	16-36
16.11.8	RF35 Power Off during seeks causing HDA failures	16-37
16.11.9	RF73 Number of LBNs shown	16-38
16.12	DSSI warm swap notes and problems	16-38
16.12.1	What is warm swap - cold swap - hot swap	16-39
16.12.2	Main points of DSSI warm swap guide	16-39
16.12.3	Problems with warm swapping	16-40
16.13	Configuring KFQSA and Embedded DSSI notes	16-41
16.13.1	KFQSA and KDA50s on the same QBus	16-41
16.13.2	Procedure for Installing a KFQSA and setting up a DSSI device	16-41
16.13.3	forceuni, alloclass changes on DSSI buses	16-43
16.13.4	SET HOST under VMS	16-44
16.13.5	KFQSA Quirks	16-44
16.13.5.1	Bringing up VMS minimum - devices not seen	16-44
16.13.5.2	Missing devices or ones switched off at boot time	16-44
16.13.5.3	KFQSA - Cannot update firmware	16-44
16.14	Emulex disk controllers	16-45
16.15	TAPES - TKs and SCSI	16-45
16.16	Tapes - Tx85 series Information and Problems	16-45
16.17	Other Disks - RWZ and RC25	16-45
16.17.1	RWZ21 drive description	16-45

16.17.2	RC25 Maintenance Advisory	16-46
16.17.2.1	REV Levels	16-46
16.17.2.2	RC25 Ground Paths	16-47
16.17.2.3	RT-11 BBR	16-47
16.17.3	RC25 Dismount/Unload Problem	16-47

Figures

16-1	SZ12 Numbering Scheme	16-9
------	-----------------------------	------

Tables

16-1	Buses and Devices	16-1
16-2	Dimensions of the different form factors in inches	16-2
16-3	1st List of Devices with operational attributes	16-2
16-4	2nd List of devices including parts no and power req	16-4
16-5	DSP Drives	16-6
16-6	3.5 inch Floppy disk densities	16-12
16-7	When INIT'ing the RX26, use the following /DENS qualifiers	16-13
16-8	DSSI Cables	16-16
16-9	MR and PS sockets are used on	16-16
16-10	FCO details to fix Command T/O prob on RF31 and RF72	16-35
16-11	MATERIAL REQUIRED FOR CONVERSION	16-36
16-12	Naming convention for a KFQSA KDA50 mix	16-41
16-13	KFQSA Switches -ON is towards the pcb	16-42
16-14	Operating System Support	16-45
16-15	Documentation	16-46
16-16	RSL - Recommended Spares List	16-46
16-17	PC Based diagnostics	16-46

Contents

Chapter 17 Retired

CHAPTER 18

ETHERNET

18.1	INTRODUCTION	18-1
18.2	GENERAL INTRODUCTION TO ETHERNET	18-1
18.2.1	Contention And Collision Detection	18-2
18.2.2	Frame Format	18-3
18.3	BASIC CONFIGURATION RULES	18-5
18.3.1	Standard Ethernet Configuration	18-5
18.3.2	DELNI Configurations	18-7
18.4	H4000 TRANSCEIVER	18-8
18.4.1	General Description	18-8
18.4.2	Brief Technical Description	18-8
18.4.3	Components List/Maintenance Philosophy	18-9
18.4.4	Installation And Configuration	18-10
18.4.5	Testing	18-10
18.4.6	Reference Documentation	18-10
18.4.7	Problems And Solutions	18-10
18.5	DELNI- LOCAL NETWORK INTERCONNECT	18-12
18.5.1	General Description	18-12
18.5.2	Brief Functional Description	18-12
18.5.3	Components List/Maintenance Philosophy	18-13
18.5.4	Installation And Configuration	18-13
18.5.5	Diagnostics And Maintenance Aids	18-13
18.5.6	Reference Documentation	18-14
18.6	DEUNA- UNIBUS INTERFACE	18-15
18.6.1	General Description	18-15
18.6.2	Components List/Maintenance Philosophy	18-15
18.6.3	Installation And Configuration	18-15
18.6.4	Diagnostics And Maintenance Aids	18-15
18.6.5	Problems And Solutions	18-15
18.7	DELUA- UNIBUS INTERFACE	18-16
18.7.1	General Description	18-16
18.7.2	Components List/Maintenance Philosophy	18-16
18.7.3	Installation And Configuration	18-16
18.7.4	Diagnostics And Maintenance Aids.	18-17
18.7.5	Reference Documentation	18-18
18.7.6	Software	18-18
18.7.7	Problems And Solutions	18-18
18.8	DEQNA- Q-BUS INTERFACE	18-19
18.8.1	General Description	18-19
18.8.2	Components List/Maintenance Philosophy	18-19
18.8.3	Installation And Configuration	18-19
18.8.4	Diagnostics And Maintenance Aids	18-20
18.8.4.1	Self Test	18-20
18.8.4.2	ZQNA?? For PDP-11.	18-20
18.8.4.3	DEC/X11 Exerciser (XQNA)	18-21
18.8.4.4	NIE Network Interconnect Exerciser	18-22
18.8.5	Reference Documentation	18-22
18.8.6	Software	18-22
18.8.7	Problems And Solutions	18-23
18.8.8	Revision Levels And Fco's	18-23
18.9	DELQA - Q-BUS INTERFACE	18-24
18.9.1	General Description	18-24
18.9.2	Components List	18-24
18.9.3	Installation And Configuration	18-24
18.9.4	Diagnostics And Maintenance Aids	18-25

18.9.5	Reference Documentation	18-25
18.9.6	Software	18-25
18.10	DESVA - VAXSTATION 2000 INTERFACE	18-26
18.10.1	General Description	18-26
18.10.2	Components List	18-26
18.10.3	Installation And Configuration	18-26
18.10.4	Diagnostics And Maintenance Aids	18-26
18.10.5	Reference Documentation	18-28
18.10.6	Software	18-29
18.10.7	Problems And Solutions	18-29
18.11	DEBNT, DEBNA - BI-BUS INTERFACES	18-30
18.11.1	General Description	18-30
18.11.2	Brief Functional Description	18-30
18.11.3	Components List/Maintenance Philosophy	18-30
18.11.4	Installation And Configuration	18-30
18.11.5	Diagnostics And Maintenance Aids	18-31
18.11.5.1	Self Test	18-31
18.11.5.2	Ethernet Rom Based Functional	18-31
18.11.5.3	EVDYC And EVDYD	18-32
18.11.6	Reference Documentation	18-33
18.11.7	Software	18-33
18.11.8	Problems And Solutions	18-33
18.12	DECNA- PRO 300 INTERFACE	18-35
18.12.1	General Description	18-35
18.12.2	Components List	18-35
18.12.3	Installation And Configuration	18-35
18.12.4	Diagnostics And Maintenance Aids	18-35
18.12.5	Reference Documentation	18-36
18.12.6	Problems And Solutions	18-36
18.13	DEPCA- IBM PC INTERFACE	18-37
18.13.1	General Description	18-37
18.13.2	Components List	18-37
18.13.3	Installation And Configuration	18-37
18.13.4	Diagnostics And Maintenance Aids	18-38
18.13.5	Reference Documentation	18-40
18.13.6	Software	18-40
18.13.7	Problems And Solutions	18-41
18.14	DEREP- LOCAL/REMOTE REPEATER	18-42
18.14.1	General Description	18-42
18.14.2	Brief Functional Description	18-43
18.14.2.1	Normal Data Flow	18-43
18.14.2.2	Collisions	18-43
18.14.2.3	Autosegmentation	18-44
18.14.2.4	Standby Mode (Local Mode Only)	18-44
18.14.3	Components List/Maintenance Philosophy	18-44
18.14.4	Installation And Configuration	18-45
18.14.5	Diagnostics And Maintenance Aids	18-45
18.14.5.1	Using Loopback Connectors	18-45
18.14.5.2	Led Indicators	18-46
18.14.6	Reference Documentation	18-46
18.14.7	Problems And Solutions	18-47
18.15	DEBET- LAN BRIDGE 100	18-48
18.15.1	General Description	18-48
18.15.1.1	Leds And Switches	18-49
18.15.2	Brief Functional Description	18-49
18.15.3	Components List/Maintenance Philosophy	18-49

18.15.4	Installation And Configuration	18-50
18.15.5	Diagnostics And Maintenance Aids	18-50
18.15.6	Reference Documentation	18-50
18.15.7	Software	18-51
18.15.8	Problems And Solutions	18-51
18.16	THINWIRE ETHERNET	18-52
18.16.1	Brief Description	18-52
18.16.2	Configuration Rules	18-52
18.16.3	Components List	18-53
18.16.4	Problems	18-54
18.17	DESTA - THINWIRE TRANSCEIVER	18-55
18.17.1	General Description	18-55
18.17.2	Diagnostics And Maintenance Aids	18-55
18.17.3	Reference Documentation	18-55
18.18	DEMPR - THINWIRE MULTIPORT REPEATER	18-56
18.18.1	General Description	18-56
18.18.2	Diagnostics And Maintenance Aids	18-56
18.18.3	Reference Documentation	18-57
18.18.4	Revision Levels And FCO's	18-57
18.19	DESPR - THINWIRE SINGLE PORT REPEATER	18-58
18.19.1	General Description	18-58
18.19.2	Components List	18-58
18.20	TROUBLESHOOTING ETHERNET	18-59
18.20.1	How To Start NCP On Various Operating Systems	18-59
18.20.2	NCP Line Counters	18-59
18.20.3	Using Decnet Loop Tests	18-62

Chapter 19 ETHERNET_SERVERS

19.1	DECSERVERS	19-1
19.1.1	DECSERVER 100	19-1
19.1.2	DECSERVER 200	19-1
19.1.3	DECSERVER Common Features	19-2
19.1.4	DECSERVER 100 Power Up Sequence	19-2
19.1.5	DECSERVER 200 Power Up Sequence	19-3
19.1.6	Down Line Loading	19-4
19.1.6.1	Down Load Problems	19-4
19.1.7	TERMINAL PROBLEMS	19-4
19.1.8	COMMANDS	19-6
19.1.9	Error Messages	19-9
19.1.9.1	Interesting Error Messages	19-9
19.1.10	Counters (not the obvious ones)	19-9
19.1.11	SETTING UP A PRINTER PORT	19-10
19.1.12	SETTING UP A NON-LAT HOST (Reverse Lat)	19-10
19.2	LAT-11	19-11
19.2.1	Configuration of WELWYN LAT-11B	19-12
19.2.2	LAT Switch Settings	19-12
19.2.3	TESTING	19-14
19.3	Muxserver 100 and Decmux II	19-15
19.3.1	Description	19-15
19.3.2	Configuration	19-15
19.3.3	Ports and Indicators	19-16
19.3.4	Installation and Cables	19-17
19.3.4.1	Cables	19-17
19.3.4.2	Setting Composite Port Characteristics. The SYSTEM and SAVE commands	19-17
19.3.4.3	Setting Terminal Port Characteristics	19-17
19.3.5	Software	19-18
19.3.6	Useful Commands	19-18
19.3.6.1	The Muxserver COM> prompt	19-18
19.3.6.2	The DECMUX SYS> prompt	19-18
19.3.6.3	The MAP and SAVE commands	19-18
19.3.6.4	The CONNECT and DISCONNECT commands	19-19

19.3.6.5	Commands to find setups and statistics	19-19
19.3.7	Useful Messages	19-19
19.3.8	Troubleshooting	19-20
19.3.8.1	Testing the Muxserver	19-20
19.3.8.2	Testing the DECMUX II	19-21
19.3.8.3	Testing a terminal	19-22
19.3.8.4	Testing the ethernet	19-22
19.3.8.5	The INIT and RESTART commands	19-22
19.3.9	Factory Reset	19-22
19.3.10	Part Numbers	19-22
19.3.11	Known Problems	19-22
19.4	DECSA	19-24
19.4.1	Part Numbers	19-24
19.4.1.1	Setting up an M7133-YA module	19-24
19.4.2	Testing a DECSA	19-25
19.4.2.1	Possible actions from the PLU> prompt	19-25
19.4.3	DECSA Known Problems and Solutions	19-27
19.5	Decserver 500/550	19-28
19.5.1	Decserver 500/550 General Description	19-28
19.5.2	Decserver 500/550 Part Numbers	19-28
19.5.3	Configuration of Decserver 500/550	19-29
19.5.4	Servicing the Decserver 500	19-29
19.5.4.1	Self Tests and Status Displays	19-29
19.5.4.2	Boot Modes	19-30
19.5.4.3	CONSOLE COMMANDS	19-31
19.5.4.3.1	HELP	19-31
19.5.4.3.2	SELECT and DESELECT	19-31
19.5.4.3.3	ADD, DROP and MODIFY	19-31
19.5.4.3.4	START and CONTINUE	19-31
19.5.4.3.5	DISPLAY, FLAGS, ZFLAGS, PRINT and BOOT	19-32
19.5.5	Host Node Software	19-32

Figures

19-1	Possible Muxserver/DECMUX configurations	19-15
19-2	Muxserver/Decmux Connectors and Leds	19-16
19-3	M7133-YA switchpack locations	19-24
19-4	M7133-YA jumper locations	19-25

Tables

19-1	Default DECSEVER passwords	19-2
19-2	Non fatal status messages	19-3
19-3	Terminal Status Codes	19-3
19-4	Decserver 200 LEDs	19-3
19-5	Normal User Local Commands	19-5
19-6	Privileged Commands	19-6
19-7	SET and DEFINE commands	19-7

DATADOC
CONTENTS

Page 27
14 March 1990

19-8		
19-9	Server Commands	19-7
19-10	Terminal Commands	19-8
19-11	Messages	19-20
19-12	Parameters	19-22
19-13	Parameters	19-24
19-14	Decimals	19-26
19-15	Decs/500 Part Numbers	19-28
19-16	Decse/550 Line Card Device Address Switch Settings	19-29
	550 Status and Error Displays	19-30

Chapter 20 82xx, 83xx and VAXBI

20.1	CONFIGURATION - DIFFERENCES	20-1
20.1.1	Who's who. 82xx - 83xx	20-1
20.1.2	GENERIC 12-slot/24-slot CONFIGURATION RULES	20-2
20.1.2.1	Configuration 2 (24 slot) System Specific Rules	20-3
20.1.2.2	Configuration 1 (12 slot) System Specific Rules	20-4
20.1.2.3	12-slot Preferred Placement Rules	20-4
20.2	VAX 82xx Generic information	20-5
20.2.1	Self Test	20-5
20.2.1.1	CPU SELF TEST	20-5
20.2.1.2	BI SELF TEST	20-6
20.2.1.2.1	Memory Size	20-6
20.2.1.2.2	Complete Auto-Boot Sequence	20-6
20.2.1.3	DWBUA and its self test	20-6
20.2.1.4	DWBUA self test codes	20-7
20.2.2	Parts	20-8
20.2.3	Documentation	20-11
20.2.4	RX50 floppies	20-11
20.2.4.1	RX50 Formatting	20-11
20.2.4.2	CONSOL floppy	20-12
20.2.4.2.1	CONSOLE floppy version #	20-12
20.2.4.3	Building a EBSAA or EVKAA bootable floppy	20-12
20.2.4.4	Building a diagnostic floppy	20-12
20.2.5	Using BOOT58 to recover from loss of VMB on system disk	20-12
20.2.6	To check whether WRITEBOOT has been run on a system disk	20-13
20.2.7	Using WRITEBOOT to restore VMB pointers on the system disk	20-13
20.2.8	Running Load path diagnostics	20-14
20.2.8.1	Diagnostic short-list	20-14
20.2.8.2	Driving the console to a DS> prompt	20-14
20.2.8.3	CIBOO.CMD file used by BOOT58 to boot from a HSC disk	20-15
20.2.8.4	Testing second CPU on 83xx	20-15
20.2.8.5	EVKAA	20-15
20.2.8.6	EBKAX uses	20-15
20.2.8.7	EBKAX failure on 8x50	20-16
20.2.8.8	EBUCA the EEPROM Utility Program	20-16

20.2.9	BI backplane and modules	20-16
20.2.9.1	Backplane replacing	20-16
20.2.9.2	VAXBI Module Handling and packaging	20-17
20.2.9.3	Backplane and edge connector cleaning	20-17
20.2.10	Remote Services (RDC)	20-17
20.2.11	Escalation	20-17
20.3	Troubleshooting	20-18
20.3.1	Machine Checks	20-18
20.3.1.1	Machine check mechanism	20-18
20.3.1.2	Stack logout frame	20-20
20.3.1.2.1	Mcheck example 1	20-23
20.3.1.2.2	Mcheck example 2	20-23
20.3.1.2.2.1	Retry Timeout	20-24
20.3.2	PATHOLOGICAL errors	20-24
20.3.2.1	?05. Double Error Halt	20-24
20.3.2.2	?04 Interrupt stack not valid	20-24
20.3.3	KDB50 related	20-25
20.3.3.1	DU bootstrap problem	20-25
20.3.3.2	FCO KDB50-R-001	20-25
20.3.3.3	FCO KDB50-R-002	20-25
20.3.3.4	KDB50 revision levels	20-26
20.3.4	VMS V4 and 83xx's	20-26
20.3.4.1	Is the attached there/running?? V4 VMS only	20-26
20.3.4.2	Secondary machine checks and VMS V4	20-26
20.3.5	Accessing the secondary CPU from >>>	20-28
20.3.6	Accessing BI CSR's etc	20-28
20.3.7	SCBB and IPL levels see PSG	20-28
20.3.8	Hints'n'tips	20-28
20.3.8.1	Module Disable by software	20-28
20.3.8.2	Power Supply safety	20-29
20.3.8.3	Power supply faults	20-29
20.3.9	Odds'n'ends and Hints'n'Tips	20-29
20.3.9.1	BI nodes as NEXUS	20-29
20.3.9.2	BI device type codes. In bb+00	20-30
20.3.9.3	BROKE BI nodes	20-30
20.3.9.4	Manual use of TEST or BROKE	20-30
20.3.9.5	Determination of BI module revision	20-31
20.3.9.6	DWBUA Cabling	20-32
20.3.9.7	KA820 SID	20-33
20.3.10	BI ERROR LOGS	20-34
20.3.11	BIIC revisions	20-35
20.3.12	CPU RED LED	20-35
20.3.13	Checklist for engineer in trouble	20-35
20.4	FCO's	20-36
20.5	8250 - 8350 differences	20-36
20.6	8220 - 8320 differences	20-36
20.7	Recommendations for A.R engineers	20-37

20.7.1	Preventive Maintenance	20-37
20.7.2	Air Flow	20-37
20.7.3	Diagnostic supervisor	20-37
20.7.4	BI node map	20-37
20.7.5	Hard-copy console	20-37

Tables

20-1	Supported (saleable) DEC options	20-1
20-2	Supported (work) DEC options	20-1
20-3	Unsupported (Won't work)	20-1
20-4	Emulex options that work	20-2
20-5	Typical Configuration	20-4
20-6	Part Numbers (by option)	20-8
20-7	Part Numbers (in Part Number order)	20-10
20-8	WRITEBOOT parameters	20-13
20-9	KA82x Processor Diagnostics	20-14
20-10	Dummy Table	20-19
20-11	82xx Machine Check Stack Logout	20-20
20-12	Machine Check Type Codes	20-20
20-13	Machine Check Status Word definition	20-21
20-14	VAXBI event codes	20-22
20-15	KDB50 revisions	20-25
20-16	82xx CPU type differences	20-36

Chapter 21 Ultrix

21.1	The first steps	21-1
21.1.1	Read me or suffer	21-1
21.2	Logging into an Ultrix system	21-1
21.3	Shutting down the system	21-2
21.4	Bootting Ultrix	21-2
21.4.1	Bootting Steps	21-3
21.5	The File system	21-4
21.5.1	Partitions	21-4
21.5.2	The Fast File System	21-5
21.5.3	PATHNAMES	21-5
21.5.4	Your current working directory	21-6
21.5.4.1	File system related commands	21-6
21.5.4.2	Corrupted file systems	21-6
21.6	Device names and addresses	21-6
21.6.1	Device names	21-6
21.6.2	Raw devices and character devices	21-7
21.7	Using Ultrix	21-8
21.7.1	Background jobs	21-9
21.7.2	Prompts	21-9
21.7.3	Redirecting terminal input/output	21-9
21.7.4	Line Printers	21-9
21.7.5	Terminal Lines	21-10
21.8	Maintenance issues	21-10
21.8.1	Crashing a system	21-10
21.8.2	PANIC	21-10
21.9	Ultrix Error logging	21-11
21.9.1	Error Logging prior to Ultrix-32 Version 2.0	21-11
21.9.2	Error Logging in Ultrix V2.0 - and after	21-11
21.9.2.1	Components of the error logging system	21-11
21.9.2.2	Error logging system overview	21-11

21.9.3	Obtaining error log reports	21-11
21.9.3.1	The uerf program	21-11
21.9.3.2	Running uerf	21-12
21.9.3.3	uerf command options	21-13
21.9.3.4	uerf command examples	21-15
21.9.4	The eli utility	21-15

Figures

21-1	A simple Ultrix file system	21-4
21-2	Ultrix Internal overview	21-7
21-3	Ultrix Error Logging overview	21-12

Tables

21-1	Device names	21-6
21-2	Common Ultrix equivalents of VMS commands	21-8
21-3	System status and information	21-9

Contents

Chapter 22 TAPE DRIVES

22.1	Tape drive summary	22-1
22.2	TE10/TE16	22-3
22.2.1	Vacuum assembly replacement	22-3
22.3	TU77/Tx78/Tx79	22-4
22.3.1	Parts information	22-4
22.3.1.1	TU77 part differences	22-4
22.3.1.2	Control M2 jumpers	22-5
22.3.1.2.1	TU77	22-5
22.3.1.2.2	Tx78/Tx79	22-5
22.3.1.3	Terminating resistor packs missing	22-5
22.3.1.4	Bulk power supply	22-6
22.3.1.4.1	CR1 and CR2 bridge rectifiers	22-6
22.3.1.5	Microswitches	22-6
22.3.2	Loss of Vacuum Faults	22-7
22.3.2.1	Loss of Vacuum on a rewind at EOT intermittantly	22-7
22.3.2.1.1	Stiction - tape sticking to the head	22-7
22.3.2.1.2	Capstan Slippage	22-7
22.3.2.1.3	Faulty Capstan Motor	22-7
22.3.2.2	Intermittant Loss of Vacuum on Read/Write	22-7
22.3.2.2.1	Loss of air bearing pressure	22-8
22.3.2.2.2	Loss of vacuum	22-8
22.3.2.2.3	Static build up on vacuum column rails	22-8
22.3.2.3	Loss of vacuum at the end of a rewind (BOT)	22-8
22.3.2.3.1	Cripple Reel Problems	22-8
22.3.2.3.2	BOT Problems	22-9
22.3.2.4	General Items	22-9
22.3.3	TU77/TU78 load creep	22-9
22.3.4	Setup procedure on Tx78/Tx79	22-10
22.3.4.1	Adjustments using the test box (29-26619)	22-11
22.3.4.1.1	Initial set-up	22-11
22.3.4.1.2	Read gain adjustment	22-11
22.3.4.1.3	Write current adjustment	22-11
22.3.4.2	Adjustment procedure using a scope	22-12
22.3.4.2.1	Read gain adjustment	22-12

	22.3.4.2.2	Write current adjustment	22-12
	22.3.4.2.3	Programs for setup procedure	22-13
22.4		TU80/TU81/TA81	22-14
	22.4.1	Error code 26	22-14
	22.4.2	Error 52 and 53	22-14
	22.4.3	Air bearing cable orientation	22-14
	22.4.4	Erase head cable orientation	22-14
	22.4.5	1000 line tachometer	22-14
	22.4.6	TU80 and Tx81 power supply	22-15
	22.4.7	Tx81 Write Formatter PCBA	22-15
	22.4.8	Tx81 Servicing	22-15
	22.4.8.1	Head/Media Problems	22-15
	22.4.8.2	Test 91	22-15
	22.4.8.3	Pathfinder Test 54	22-16
	22.4.8.4	Multiple hard Read/Write Faults	22-17
	22.4.8.5	Scoping for multiple faults	22-17
	22.4.8.6	Heads	22-19
	22.4.9	TU80 Scope points	22-19
	22.4.10	TU81 vs TU81+ vs TA81	22-20
	22.4.11	Converting a TU81 to a TA81	22-20
	22.4.12	TU81E TMSCP module revision - Apr 90	22-20
22.5		Air Pressures for various tape drives	22-21
22.6		TA90/TA91	22-22
	22.6.1	Product description	22-22
	22.6.2	TA90 versions	22-22
	22.6.3	Configuration requirements	22-22
	22.6.4	Software requirements	22-22
	22.6.5	The K.si requestor	22-23
	22.6.6	Terminology	22-23
	22.6.7	Part numbers	22-23
	22.6.8	FCO information	22-28
	22.6.9	Old Factflashes	22-28
	22.6.9.1	TA90E upgrade gotcha - Dec 90	22-28
	22.6.9.2	TA90/91 Long tapes vs new microcode - Aug 92	22-28
22.7		TZ30, TK50 and TK70	22-29
	22.7.1	TZ30 leaders become jammed - Unload Problem	22-29
	22.7.2	TZ30 cartridges will not rewind - cartridge stuck in drive	22-29
	22.7.3	TZ30 replacements hanging on Backup	22-29
	22.7.4	The TZ30s bleep	22-29
	22.7.5	TZ30s fail PUST and bleep continuously on Power On in SZ12s	22-30
	22.7.6	TZ30 Rev E06 and E07 - SCSI Chip problem update - Mar 93	22-30
	22.7.7	TK50 SCSI B Phase Errors	22-31
	22.7.8	Faulty TK50 cartridges - Apr 93	22-31
	22.7.9	Reading TK50 tapes on TK70/TQK70s	22-31
	22.7.10	TQK50/70 LEDs At Power On	22-32
	22.7.11	TQK70 "Unused opcode interrupt error" FW problem	22-32

22.7.12	TK50/70 and the TD50 tester - Servicing Guide	22-32
22.7.12.1	Cleaning kits	22-33
22.7.12.2	TK cartridges and heat	22-34
22.7.13	Checklist	22-34
22.7.14	The TD50 tester	22-35
22.8	TF8x, Tx8x7 and SA10x series	22-36
22.8.1	General Information	22-36
22.8.2	Part numbers for Tx8xx series products	22-36
22.8.3	Different drive part number for loader	22-37
22.8.4	Power off with Tx857 loader swung out - Cartridge stuck	22-37
22.8.5	Loader loading/unloading problems - TK85 Drive Rev C04	22-37
22.8.6	Tx8x Head Cleaning Tape Notes	22-38
22.8.7	Really old TK50 cartridges jam in TF857s	22-38
22.8.8	TK85 Tape Leaders	22-38
22.8.9	TK85 Degaussing	22-38
22.8.10	TZ85/86 firmware V11 - Feb 93	22-38
22.8.11	TF85/86 and TF857/867 Firmware update procedure - Feb 93	22-39
22.8.12	TZ85 Firmware Ver 6 - Jun 92	22-39
22.8.13	Tx8xx Timeouts loader to drive - Front Panel Err A4 and A8 - Nov 93	22-40
22.8.14	New version of TZ87x products - May 94	22-40
22.9	TLZ04/06	22-41
22.9.1	60 and 90 metre tapes and compression mode	22-41
22.9.2	TLZ04/06 supported configurations	22-41
22.9.3	TLZ Media, whose tapes are allowed?	22-42
22.9.4	TLZ04 Diagnostics	22-42
22.9.5	TLZ06-AA and TLZ06-BA - Differences - Dec 93	22-42
22.9.6	Ejecting Cartridges - New Functionality	22-42
22.9.7	Boot Support for TLZ06 on VAX QBus Systems	22-43
22.9.7.1	VAX 4000, models 200 and 300	22-43
22.9.7.2	VAX 4000, models 500 and 600	22-43
22.9.7.3	VAX 4000 model 100 and 400	22-43
22.9.8	TLZ06 support on DECStations - Mar 93	22-44
22.9.8.1	DECStation and DECSystem TLZ06 Firm Ware	22-44
22.9.8.2	DECStation and DECSystem TZ30 and TLZ06 interaction	22-44
22.9.8.3	DECStation and DECSystem hanging with TLZ06 in use	22-44
22.9.8.4	VAX 4000-100 reboot problem with TLZ06	22-44
22.9.9	TLZ06 - Do not use \$ INIT/ERASE	22-44
22.9.10	TLZ04 Tape Stuck in Drive Procedure	22-45
22.10	TZK10	22-46
22.10.1	The TZK10 - an overview	22-46
22.11	Diagnostics for Tapes	22-47
22.11.1	VAX diagnostics	22-47
22.11.1.1	EVMAA	22-47
22.11.1.1.1	Sections	22-47
22.11.1.1.2	Event flags	22-47
22.11.1.1.3	Conversation mode	22-47
22.11.1.2	EVMAE	22-48

22.11.2	ILEXER	22-48
22.11.3	PDP11 diagnostics	22-49
22.11.3.1	Data reliability tests	22-49
22.11.3.2	Utility driver	22-49
22.12	Tape Tips	22-51
22.12.1	TU45 Load problems	22-51

Figures

22-1	Write formatter	22-15
22-2	Hex symbols for test 54	22-16
22-3	Read Amp Scope Points for Channel 0	22-18
22-4	Write Amp Scope Points for Channel 0	22-19

Tables

22-1	Tape drives, Cartridge	22-1
22-2	Tape drives, Magazine	22-2
22-3	Tape drives, 9 track, 10.5 inch reel	22-2
22-4	TE16/TE10 common parts list	22-3
22-5	Part no's for TU77/Tx78/Tx79 belts and pulleys	22-4
22-6	TU77/Tx78/Tx79 odds and ends part numbers	22-4
22-7	Fuses	22-6
22-8	Tx7x micro switches and part numbers	22-6
22-9	Highest values for test 54	22-16
22-10	TU81 scope points for channel 0	22-18
22-11	Heads and awkward part numbers	22-19
22-12	TU81/TU81+/TA81 differences	22-20
22-13	Air pressures of various tape drives	22-21
22-14	Terminology differences	22-23
22-15	TA90 FRU to part number cross reference	22-24
22-16	Diskettes, part numbers and revisions	22-27
22-17	Tool part numbers	22-27
22-18	Firmware and ROM info	22-32
22-19	Part Numbers	22-33
22-20	Parts to be kept in/with the TD50 Tester	22-35
22-21	Part numbers of main FRU's	22-36
22-22	Firmware Required to support the TLZ04	22-41
22-23	RSL	22-46
22-24	VAX diagnostics	22-47
22-25	Common function codes for conversation mode	22-48
22-26	ILEXER error information	22-48
22-27	PDP11 diagnostics	22-49
22-28	Utility drivers ZTEF, ZTUE and ZTUT	22-49
22-29	ZTEF, ZTUE and ZTUT function codes	22-50
22-30	Utility driver ZTMG	22-51
22-31	ZTMG function codes	22-51

Chapter 23 Printers

23.1	The use of this chapter	23-1
23.2	Glossary of printer terms	23-1
23.3	Printers and Part numbers in this chapter	23-2
23.4	LG01 and LG02	23-3
23.5	LP05	23-4
23.5.1	LP05 Servo PCB Setups	23-4
23.5.2	LP05 Set Up Of Hammer Bank	23-4
23.5.3	LP05 Paper Feed Servo Adjustments	23-6
23.5.4	LP05 and LP06 SELF TEST	23-7
23.5.5	Printer Drum Speeds	23-8
23.5.6	LP05 LP06 and LP14 Part Numbers	23-8
23.6	Data Products B series printers (LP25/6)	23-13
23.6.1	I/O Harness	23-14
23.6.2	Motherboard	23-14
23.6.3	Parallel Interface Module	23-15
23.6.4	Serial Interface Module	23-17
23.6.5	Processor Module	23-19
23.6.6	Timing and Status Module	23-20
23.6.7	Power Board	23-21
23.6.7.1	Paper Clamp Solenoids	23-21
23.6.8	Hammer Driver Module	23-21
23.6.9	Power Supply	23-22
23.6.10	Ribbon Drive	23-23
23.6.10.1	Ribbons	23-23
23.6.10.2	Ribbon Weld Skipover (RWS)	23-23
23.6.11	Printer Covers and Cabinets	23-24
23.6.12	Paper Puller	23-24
23.6.13	Printer Interface Conversions	23-25
23.6.14	Field Change Orders	23-27
23.7	Popular Part Numbers for B Series Printers	23-27
23.8	Running EVAAA	23-35
23.9	LP11 Jumper Information	23-36
23.10	Printer Cables and Long Line Drivers	23-38

23.10.1 Long Line Drivers	23-38
23.10.1.1 Fibre Optic Cables	23-39

Tables

23-1 Printers (Other Than DP) in the Systems Space	23-2
23-2 LP05/6/14 (DP 2200 Series) Popular Parts List	23-8
23-3 Preferred Motherboard Slot Usage	23-14
23-4 Interface Module Normal Switch Settings	23-15
23-5 Short or Long Line Interface	23-16
23-6 Switches mentioned in Table 23-5	23-17
23-7 Normal Switch configuration of Serial Interface	23-18
23-8 Serial Interface Switch Packs - Purpose	23-18
23-9 Serial Interface SW2-7 and 8	23-18
23-10 Serial Interface SW3-1 through SW3-4	23-19
23-11 15 CFI band part numbers	23-20
23-12 Band Timeout Switch Settings	23-20
23-13 Paper Puller wiring configurations 230 volt	23-24
23-14 Paper Puller Part Numbers	23-25
23-15 Interface Conversions Without VFU	23-26
23-16 Interface Conversions With VFU	23-26
23-17 B series printer FCOs	23-27
23-18 Popular Parts List for B Series printers	23-27
23-19 LP11 Jumper Designations	23-37
23-20 Maximum Cable Lengths	23-38
23-21 Parallel Printers and Cables	23-38
23-22 Configurations	23-39
23-23 M5973 Switch Settings	23-39
23-24 Fibre Optic configurations	23-39

Contents

Chapter 24 QBUS

24.1	Q BUS CONFIGURATION GUIDE	24-1
24.1.1	General Q Bus Options	24-1
24.1.2	S Box Options	24-6
24.1.3	Non Digital Q-Bus Options	24-8
24.1.4	System Enclosures	24-11
24.1.5	Backplanes	24-12
24.1.6	Termination and Expansion Rules for single and multiple backplanes	24-12
24.2	QBUS MVAX SYSTEMS	24-14
24.2.1	MVax 2 on board memory	24-14
24.2.2	KA6xx firmware	24-14
24.2.3	Identification of Firmware	24-15
24.2.4	Processor Information	24-16
24.2.5	KA640 ethernet, Front Panel, and their Fuses	24-16
24.2.6	KFQSA notes	24-17
24.2.7	Procedure for Installing a KFQSA	24-17
24.3	BOXED MICROS 2000/3100 SYSTEMS	24-18
24.3.1	Identifying different VS3100 system modules	24-19
24.4	DISKS AND THEIR ATTRIBUTES	24-20
24.4.1	Buses, devices and SCSI/DSSI termination	24-20
24.5	EMULEX DISK CONTROLLERS	24-21
24.5.1	General notes on the QD32, QD33, QD34, QD35 and QD21	24-21
24.5.2	Bringing up the FRD on a Microvax	24-22
24.5.3	Bringing up FRD on PDP systems	24-22
24.5.4	Parameter Values	24-23
24.5.5	PCB Layout	24-24
24.5.6	Switch and jumper settings	24-24
24.5.7	LEDs	24-26
24.5.8	Firmware Revisions	24-26
24.5.9	Cabling and the SMD bus	24-27
24.6	DILOG DISK CONTROLLERS	24-27
24.6.1	Parameters	24-27
24.6.2	Bringing up FRD on a Vax	24-27
24.6.3	Bringing up FRD on a PDP	24-27
24.6.4	Switches	24-27

24.7	TK50/70 AND THE TD50 TESTER - SERVICING GUIDE	24-28
24.7.1	First Checklist	24-30
24.7.2	Second Checklist	24-31
24.7.3	After This	24-31
24.8	MONITORS	24-31
24.8.1	general	24-31
24.8.2	VR260/2 Problems	24-31
24.9	The PDP 1193	24-32

Figures

24-1	Identification from firmware banner at switch on	24-15
24-2	QD32/3 PCB Layout	24-24

Tables

24-1	Q-Bus Options	24-1
24-2	BA213/4/5 and BA440 Options	24-6
24-3	Non Digital Q-Bus Options	24-8
24-4	System Enclosures	24-11
24-5	Backplanes	24-12
24-6	Bus Expansion Systems	24-13
24-7	List of Qbus Vax Systems	24-14
24-8	Identification from EEPROM part numbers	24-15
24-9	Processor Information	24-16
24-10	KA640/H3602 fuse check	24-16
24-11	Naming convention for a KFQSA KDA50 mix	24-17
24-12	KFQSA Switches	24-17
24-13	2000 and 3100 Boxed systems	24-19
24-14	Disks on 3xxx Systems	24-20
24-15	Buses and Devices	24-21
24-16	Commands for a microvax	24-22
24-17	Microvax xxxx and yyyy values	24-22
24-18	Drive Configuration Parameter Values Firmware Rev E plus for FUJITSU drives	24-23
24-19	Drive Configuration Parameter Values Firmware Rev E plus for Maxtor Drives	24-23
24-20	SW1 QD32 and QD33	24-24
24-21	SW2 and SW3 QD33 only	24-25
24-22	SW2 QD32 only	24-25
24-23	Address Switches	24-25
24-24	Jumpers	24-26
24-25	Firmware Revisions	24-26
24-26	DQ6xx SW1-1-2-3 and DQ2xx SW2-1-2-3	24-27
24-27	DQ696 rest of SW1	24-28
24-28	Monitors used on Work Stations	24-32

Contents

Chapter 25 RA_DISKS

25.1	Confusion surrounding formatting	25-1
25.1.1	A few DSA terms	25-1
25.1.2	Impact of the FORMATTER	25-2
25.1.2.1	What the two formatter modes do	25-2
25.1.3	Forced errors	25-2
25.2	Testing RA disk drives	25-3
25.2.1	Online Diagnostics	25-3
25.2.2	In Line Diagnostics	25-4
25.2.2.1	Running ILEXER	25-4
25.2.2.2	Running ILDISK	25-4
25.2.3	HSC utilities	25-5
25.2.3.1	VERIFY	25-5
25.2.3.2	DKUTIL	25-5
25.2.4	Running Drive Resident Micro-diagnostics	25-5
25.3	Drive General Information	25-6
25.3.1	RA Drive Specifications	25-6
25.3.2	HDA Handling	25-7
25.3.3	Head/Cyl from LBN conversion	25-8
25.3.3.1	Method 1	25-8
25.3.3.2	Method 2	25-8
25.4	Drive specific information	25-9
25.4.1	RA60	25-9
25.4.1.1	Measuring RA60 runout	25-9
25.4.1.2	RA60 Disk Well Glue Problem	25-9
25.4.2	RA70	25-10
25.4.2.1	RA70 spin down FCO RA70X-I001	25-10
25.4.2.2	RA70 microcode FCO, RA70X-I002	25-10
25.4.2.3	New RA70 ECM has no ground spring	25-10
25.4.3	RA71/72	25-10
25.4.4	RA73	25-11

25.4.5	RA80/81/82	25-12
25.4.5.1	RA81 Error code 39 determination	25-12
25.4.5.2	Problem with RA82 rev H2 Hybrid module	25-12
25.4.5.3	Error 2B's on RA82's with new rev KDB50	25-13
25.4.5.4	RA8x Preventative Maintenance	25-13
25.4.5.5	Replacing HDAs	25-13
25.4.5.6	SAFETY HAZARD on SA482	25-13
25.4.5.7	Potential RA82 Power Harness Problem and LED codes 25/30	25-14
25.4.6	RA90/92	25-15
25.4.6.1	RA90 "haze" problem	25-15
25.4.6.2	Long and Short arm HDAs + ECMs	25-15
25.4.6.3	RA9x microcode FCO, RA9x-F005	25-15
25.4.6.4	RA9x power supply FCO, RA9x-O006	25-15
25.5	Controller and System Information	25-16
25.5.1	UDA50 - Unibus Disk Adapter	25-16
25.5.1.1	Delay Jumper Setting	25-16
25.5.2	KDA50 - QBus Disk Adapter	25-16
25.5.2.1	Delay Jumper Setting	25-16
25.5.2.2	Two sorts of SDI module	25-16
25.5.3	KDM70 - XMI Disk/Tape controller	25-16
25.5.3.1	Overview	25-16
25.5.3.2	VMS Issues	25-16
25.5.3.3	Installation	25-17
25.5.3.4	KDM70 as the Boot device	25-17
25.5.3.5	MINIMUM KDM70 Revision Level	25-17
25.5.3.6	KDM70 SOFTWARE Releases	25-17
25.5.3.7	KDM70 DIAGNOSTICS	25-17
25.5.3.8	VAX DIAGNOSTICS	25-18
25.5.3.9	Invoking KDM70 Controller-resident Programs On Line from VMS	25-18
25.5.3.10	Invoking KDM70 Controller-resident Programs Off-Line from VDS	25-18
25.5.3.11	EVRLN Overview	25-18
25.5.4	VMS 5.5 - New Errorlog entry	25-19
25.5.5	DSAERR and FSTERR	25-19

Figures

25-1	Disk heads layout	25-6
25-2	RA60 Drive Logic Module	25-9
25-3	RA81 Servo module	25-12

Tables

25-1	Host based diagnostics/utilities	25-3
25-2	RA disk drive data	25-7
25-3	Operating system minimum version requirements for RA71/72	25-10
25-4	Controller minimum revision requirements for RA71/72	25-10
25-5	RA71/72 spare parts	25-11
25-6	Operating system minimum version requirements for RA73	25-11

25-7	Controller minimum revision requirements for RA73	25-11
25-8	RA73 spare parts	25-11
25-9	KDM70 RESIDENT DIAGNOSTICS	25-17
25-10	VAX DIAGNOSTICS	25-18
25-11	EVRLN Commands	25-18

Contents

Chapter 26 FCO Information

26.1	About this chapter	26-1
26.2	Some terms explained	26-1
26.3	Where to look for FCO information	26-1
26.4	Doing FCOs Right	26-2
26.4.1	Reporting	26-2
26.4.2	Upgrades	26-3
26.5	FCO tables	26-3
26.5.1	Legend	26-3
26.5.2	Current FCOs (published in 1994)	26-4
26.5.3	Old FCOs (published 1988 to 1993)	26-6

Figures

26-1	FCO LARS example	26-3
------	------------------------	------

Contents

Chapter 27 VES

27.1	Emulex Prom/option cross reference table	27-1
27.2	Emulex communications options	27-7
27.2.1	Maintenance Strategy For Emulex Comms Options	27-7
27.2.1.1	Controllers	27-8
27.2.1.2	CP12 Distribution panel	27-8
27.2.2	What Distribution Panels are Emulex still making	27-10
27.3	The SMD bus	27-11
27.4	EMULEX DISK CONTROLLERS	27-12
27.4.1	General notes on the QD32, QD33, QD34, QD35 and QD21	27-12
27.4.2	Bringing up the FRD on a MicroVax	27-12
27.4.3	Bringing up FRD on PDP systems	27-14
27.4.4	Parameter Values	27-14
27.4.5	PCB Layout	27-15
27.4.6	Switch and jumper settings	27-16
27.4.6.1	DMA Switch	27-18
27.4.6.2	jumpers	27-18
27.4.7	LEDs	27-18
27.4.8	Firmware Revisions	27-18
27.4.9	Emulex UC06, UC07, UC08, UC17, UC18 Controllers	27-19
27.4.9.1	No SCSI inquire	27-19
27.4.9.2	Offset values	27-19
27.4.9.3	SCSI Bus Parity	27-19
27.4.9.4	LED Codes	27-19
27.4.9.5	Switches	27-20
27.4.9.6	Firing up FRD	27-21
27.5	DILOG DISK CONTROLLERS	27-21
27.5.1	Parameters	27-21
27.5.2	Bringing up FRD on a Vax	27-21
27.5.3	Bringing up FRD on a PDP	27-22
27.5.4	Switches	27-22
27.6	CMD Controllers	27-23
27.6.1	Bringing up the FRD	27-23
27.6.2	Switches on board	27-24
27.7	FUJITSU DEVICES	27-25

27.8	Seagate Wren Disk Drives	27-27
27.8.1	Make-up of the earlier IMPRIMIS WREN model numbers.	27-27
27.8.2	SEAGATE model number break-down - current method	27-27
27.8.3	List of all drives and part numbers	27-28
27.8.4	Jumper settings on WREN 8 drives	27-31
27.9	Using the CDC TB216 Disc Drive Tester	27-31
27.9.1	Cabling	27-31
27.9.2	Initialising the tester and self test	27-31
27.9.3	Unit Selection	27-32
27.9.4	Seek Functions	27-33
27.9.5	Read/Write Functions	27-33
27.9.6	Exercising a drive.	27-34
27.9.7	Head Alignment	27-34
27.9.8	Hints and Tips	27-35
27.10	CIPHER TAPE DRIVES	27-35
27.10.1	LOGIC BOARD PART NUMBERS	27-35
27.11	Exabyte	27-37
27.11.1	CLEANING	27-37
27.11.1.1	Procedure for Cleaning	27-38
27.11.2	MEDIA	27-38
27.11.3	ENCLOSURES	27-38
27.11.4	CABLE	27-38
27.11.5	TERMINATION	27-38
27.11.6	TTI	27-39
27.11.7	TROUBLESHOOTING	27-39
27.11.8	PART NUMBERS	27-40
27.11.9	REPAIR STRATEGY	27-40

Figures

27-1	QD32/3 PCB Layout	27-16
------	-------------------	-------

Tables

27-1	PROM cross reference table	27-1
27-2	List of Part Numbers	27-8
27-3	Part Numbers from the Local Parts List	27-9
27-4	Which Distribution Panels Work With Which Controller	27-10
27-5	SMD Cable details	27-11
27-6	Commands for a microvax	27-13
27-7	Microvax xxxx and yyyy values	27-13
27-8	FRD boot of PDP	27-14
27-9	Drive Configuration Parameter Values Firmware Rev E plus for FUJI SMD Drives	27-14
27-10	Drive Configuration Parameter Values Firmware Rev E plus for ESDI Drives	27-15
27-11	SW1 QD32 and QD33	27-16
27-12	SW2 and SW3 QD33 only	27-17
27-13	SW2 QD32 only	27-17

27-14	Address Switches	27-17
27-15	Jumpers	27-18
27-16	Firmware Revisions	27-18
27-17	Part Nos etc	27-20
27-18	CSR switches 1 thro 4	27-21
27-19	DQ6xx SW1-1-2-3 and DQ2xx SW2-1-2-3	27-22
27-20	DQ696 rest of SW1	27-22
27-21	FRD boot of PDP	27-23
27-22	Bringing up the FRD on VAX systems	27-23
27-23	CSR jmps for CQD-220/M - U40 - P22016B - 29 disk CSRs and P200011A - 8 disk CSRs	27-24
27-24	CSR jmps for CQD-220/T - U40 - P22017A - 31 Tape CSRs and P200012b - 30 tape CSRs	27-24
27-25	CSR jmps for CQD-220/TM - U40 - P22015A - 7 disk and 7 tape CSRs - and U40 - P20010A - 3 disk 3 tape CSRs	27-24
27-26	Fujitsu Devices	27-26
27-27	Table of all Drives	27-28
27-28	Current taken by Seagate Full Height Drives	27-30
27-29	Device Codes	27-32
27-30	Cipher logic board part numbers	27-35
27-31	ROM part numbers	27-36

Contents

Chapter 28 Alpha

28.1	Introduction	28-1
28.2	Alpha Architecture	28-2
28.3	Alpha Chip	28-2
28.4	First Alpha Systems	28-3
28.4.1	Jensen - DEC 2000 Model 300 (now DECPC AXP150)	28-3
28.4.2	Sandpiper - DEC 3000 Model 400	28-3
28.4.3	Flamingo - DEC 3000 Model 500	28-4
28.4.4	Cobra - DEC 4000 Model xxx	28-4
28.4.5	Laser - DEC7000 Model xxx or VAX 7000 Model xxx	28-4
28.4.6	Blaser - DEC 10000 Model xxx or VAX 10000 Model xxx	28-4

Contents

Appendix C Factflash Directory

C.1	Index of Factflashes in Datadoc	C-1
-----	---	-----