
# Digital Equipment Corporation Maynard, Massachusetts

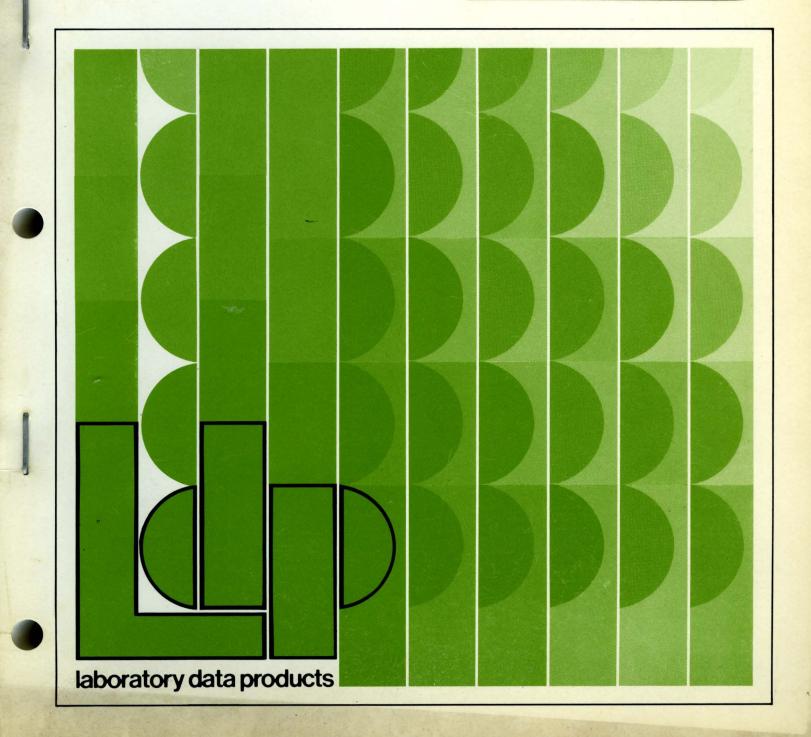

PDP-12 system reference manual



DEC-12-SRZC-D

PDP-12 system reference manual

digital equipment corporation • maynard. massachusetts

1st Edition, June 1970 2nd Printing (Rev) July 1970 3rd Printing (Rev) August 1971 4th Printing, October 1971 5th Printing (Rev) July 1972 6th Printing, December 1972 7th Printing, October 1973

#### Copyright © 1970, 1971, 1972, 1973 by Digital Equipment Corporation

The material in this manual is for informational purposes and is subject to change without notice.

Digital Equipment Corporation assumes no responsibility for any errors which may appear in this manual.

The following are trademarks of Digital Equipment Corporation, Maynard, Massachusetts:

DEC	PDP
FLIP CHIP	FOCAL
DIGITAL	COMPUTER LAB

## **CONTENTS**

Page

CHAPTER 1	GENERAL DESCRIPTION	
1.1	Description	1-1
1.1.1	System	1-1
1.1.2	Central Processor	1-3
1.1.3	Memory	1-4
1.1.4	Operating Modes	1-4
1.1.5	Input/Output Facilities and Display	1-5
1.2	Symbols and Abbreviations	1-6
CHAPTER 2	CONTROLS AND INDICATORS	
2.1	PDP-12 Console Controls and Indicators	2-1
2.2	Data Terminal	2-1
2.3	CRT Display, Type VR12	2-1
2.4	LINCtape Transport, Type TU55	2-1
2.5	Teletype, Model 33 ASR	2-1
CHAPTER 3	LINC MODE PROGRAMMING	
3.1	Organization of Memory	3-1
3.1.1	General	3-1
3.1.2	Program Counter	3-2
3.1.3	Instruction and Data Field Registers	3-2
3.2	Memory Addressing Methods	3-3
3.2.1	General	3-3
3.2.2	Direct Addressing	3-3
3.2.3	Indirect Addressing: $\beta$ -Class	3-3
3.2.4	Addressing: a-Class	3-6
3.3	LINC Mode Instructions	3-6
3.3.1	Instruction Formats	3-6
3.3.2	Instruction Descriptions	3-7
3.3.3	Full-Word Instructions	3-7
3.3.4	Full-Word Logic	3-11
3.3.5	Full-Word Comparison	3-12
3.3.6	Half-Word Operations	3-13
3.3.7	a-Class Operations	3-14
3.3.8	Program Control	3-15

Chapter

3.3.9

3.3.10

Shift and Rotate Operations

Skips

### iii

3-16

3-19

Page

### Chapter

•

3.3.11	Miscellaneous	3-21
3.3.12	Console Switches	3-22
3.3.13	Mode Control	3-22
3.3.14	Input/Output Bus	3-23
3.3.15	Memory Address Control	3-24
3.3.16	Special Functions	3-29
3.3.17	Instruction Trap	3-30
3.4	CRT Display, Type VR12	3-31
3.4.1	Point Displays	3-32
3.4.2	Character Displays	3-32
3.4.3	Half-Size Characters	3-32
3.4.4	Character Set	3-33
3.5	Data Terminal	3-35
3.5.1	Analog Inputs	3-35
3.5.2	Relays	
3.6	-	3-36
	LINCtape Type TC12	3-37
3.6.1	Organization of Data	3-37
3.6.2	Programming	3-41
3.6.3	Tape Motion	3-42
3.6.4	LINCtape Instructions	3-43
3.6.5	Extended Operations	3-45
3.6.6	Extended Address Format	3-46
3.6.7	Extended Units	3-47
3.6.8	Tape Interrupt Enable	3-47
3.6.9	No Pause Condition	3-48
3.6.10	Hold Unit Motion	3-48
3.6.11	MARK Condition	3-48
3.6.12	Maintenance Mode	3-49
3.6.13	Tape Trap	3-49
3.6.14	Tape Word Skip	3-49
CHAPTER 4 8 M	ODE PROGRAMMING	
4.1	Organization of Memory	4-1
4.1.1	Organization	4-1
4.1.2	Page 0	4-1
4.1.3	Extended Memory	4-2
4.2	Memory Addressing Methods	4-2
4.2.1	Direct Addressing	4-2
4.2.2	Indirect Addressing	4-3
4.2.3	Autoindexing	4-4
4.3	8 Mode Instructions	4-5
4.3.1	Memory Reference Instructions	4-5 4-5
4.3.2	Operate Class Instructions	4-3 4-6
4.4	Program Interrupt	
4.4.1	Operation	4-12
4.4.2	Using the Program Interrupt	4-12
4.4.2		4-13
4.5.1	Extended Arithmetic Element Type KE12	4-13
4.5.2	Operation EAE Instructions	4-13
	EAE Instructions	4-13
4.5.3	EAE Programming	4-16
4.6	Extended Memory	4-19

### **CONTENTS** (cont)

Page

v

## Chapter

4.6.1Registers4-194.6.2Instructions4-204.6.3Programming4-21

## CHAPTER 5 INPUT/OUTPUT BUS DESCRIPTION

5.1	Programmed Data Transfers and I/O Control	5-4
5.1.1	Timing and IOP Generator	5-6
5.1.2	Device Selector (DS)	5-7
5.1.3	Input/Output Skip (IOS)	5-8
5.1.4	Accumulator	5-9
5.1.5	Input Data Transfers	5-10
5.1.6	Output Data Transfers	5-11
5.1.7	Program Interrupt	5-11
5.2	Multi-Level Automatic Priority Interrupt	5-15
5.2.1	Interrupts	5-15
5.2.2	Push	5-15
5.2.3	Restore-"POP" (REST-IOT 6771)	5-16
5.2.4	Vectoring	5-16
5.2.5	Maintenance Logic	5-17
5.2.6	Programming	5-18
5.2.7	Programming Restrictions	5-19
5.2.8	Instruction List	5-19
5.2.9	DM12	5-20
5.3	Data Break Transfers	5-21
5.3.1	Single-Cycle Data Breaks	5-22
5.3.2	Input Data Transfers	5-22
5.3.3	Output Data Transfers	5-23
5.3.4	Memory Increment	5-27
5.3.5	Three-Cycle Data Breaks	5-29
5.4	Interface Design and Construction	5-30
5.4.1	PDP-12 Interface Modules	5-30
5.4.2	M Series Flip Chip Modules	5-34
5.4.3	Construction of Interfaces	5-39
5.4.4	IOT Allocations	5-43
5.4.5	Interface Connections	5-44

### CHAPTER 6 PERIPHERAL DEVICES

	Introduction	6-1
6.1	Teletype	6-3
6.1.1	Model 33 ASR	6-3
6.1.2	Model 33 KSR	6-3
6.1.3	Model 35 KSR	6-4
6.1.4	Model 37 KSR	6-4
6.1.5	Teletype Controls	6-4
6.2	Real Time Clocks	6-18
6.2.1	Real Time Interface, Type KW12-A	6-18
6.2.2	KW12-B and KW12-C Fixed Interval Clocks	6-25
6.3	Disk Storage	6-27
6.3.1	Random' Access Disk File, Types DF/DS32 and DF/DS32-D	6-27
6.3.2	Disk Memory System Type RF/RS08	6-30

Page

### Chapter

6.3.3	RK8 Disk Cartridge Memory System	6-38
6.3.4	Disk Software	6-44
6.4	Magnetic Tape	6-45
6.4.1	Automatic Magnetic Tape Control, Type TC58	6-45
6.4.2	Magnetic Tape Transports	6-54
6.4.3	LINCtape Option TC12-F	6-57
6.5	Line Printers	6-59
6.5.1	Line Printers and Control, Type LP12	6-59
6.5.2	Line Printers and Control, Type LP08	6-60
6.6	Card Readers	6-63
6.6.1	Card Reader and Control, Type CR12	6-63
6.6.2	Optional Mark Card Reader Type CM12	6-66
6.7	Incremental Plotters	6-68
6.7.1	Incremental Plotter and Control, Type XY12	6-68
6.8	Paper Tape	6-71
6.8.1	High-Speed Paper-Tape Punch and Reader, Type PC12	6-71
6.8.2	High-Speed Paper-Tape Punch, Type PP12	6-71
6.8.3	High-Speed Paper-Tape Reader, Type PR12	6-72
6.9	Data Buffers	6-73
6.9.1	Data Buffer Type DB12-P, N	6-73
6.10	Power Fail/Restart	6-74
6.10.1	Power Failure Option, Type KP12	6-74
6.11	Analog-To-Digital	6-76
6.11.1	General Purpose Multiplexed Analog-to-Digital Converter System, Type AF01-A	6-76
6.12	Digital-To-Analog	6-82
6.12.1	Digital-to-Analog Converter, Type AA01-A	6-82

### CHAPTER 7 PROGRAM LIBRARY

7.1	PDP-12 Programs	7-1
7.1.1	LAP 6 – DIAL Display Interactive Assembly Language (DEC-12-SE2D-D)	7-1
7.1.2	Peripheral Interchange Program (PIP)	7-3
7.1.3	QUANDA (DEC-12-FISA-D)	7-3
7.1.4	DATAM (DEC-L8-FDAA-D)	7-3
7.1.5	GRAPHA (DEC-L8-UGAA-D)	7-3
7.1.6	FRQANA (DEC-L8-FANA-D)	7-3
7.1.7	MAGSPY (DEC-12-UZSA-D)	7-3
7.1.8	COMPAR (DEC-L8-EUCA-D)	7-3
7.1.9	SEARCH (DEC-L8-EUSA-D)	7-3
7.1.10	CONVERT (DEC-12-ESYB-D)	7-3
7.1.11	MARK 12 (DEC-12-YITB-D)	7-4
7.1.12	L8SIM (DEC-12-SI1B-D)	7-4
7.1.13	FRED (DEC-12-FZFA-D)	7-4
7.1.14	PRTC 12-F (DEC-YIYA-D)	7-4
7.1.15	SIGAVG/SINPRE (DEC-12-UZ1A-D/DEC-12-UW4A-D)	7-4
7.1.16	CATACAL (DEC-12-UW1A-D)	7-4
7.1.17	NMRSIM (Nuclear Magnetic Resonance Simulation) (DEC-12-UW5A-D)	7-4
7.1.18	ADTAPE/ADCON (DEC-12-UW2A-D)	7-5
7.1.19	TISA (DEC-12-UW3A-D)	7-5
7.1.20	FOCAL 12	7-5
7.2	PDP-8 Programs	7-5
7.2.1	System Programs	7-5

vi

### Chapter

7.2.2	Elementary Function Routines	7-7
7.2.3	Utility Program	7-9
7.3	DECUS Program	7-10
7.4	Diagnostic Programs	7-27

### APPENDIX A LINC MODE INSTRUCTIONS

#### APPENDIX B 8 MODE INSTRUCTIONS

#### APPENDIX C I/O BUS INSTRUCTIONS

#### APPENDIX D 8 MODE PERFORATED-TAPE LOADER

#### APPENDIX E TAPE MAINTENANCE INSTRUCTIONS

E.1	General	E-1
E.2	Tape Maintenance Instructions	E-1
E.2.1	IOT 6141	E-1
E.2.2	IOT 6152	E-2
E.2.3	IOT 6154	E-2
E.2.4	IOT 6154 Detailed Transfer Information	E-3

### APPENDIX F TABLE OF CODES

F.1	Model 33/35 ASR/KSR Teletype Code	F-1
F.2	Model 33 ASR/KSR Teletype Code in Binary Form	F-2
F.3	LT-37 Transmit and Receive Code Table	F-3
F.4	Card Reader Codes	F-5
F.5	LP08 Line Printer Code	F-6
F.6	LP12 Automatic Line Printer Code	<b>F-7</b>

#### APPENDIX G CABLE CONNECTIONS TO PDP-12 FRONT PANEL

#### APPENDIX H MATH DATA

INDEX

Page

## **TABLES**

Table No.	Title	Page
2-1	Central Processor Register Indicators	2-3
2-2	Central Processor Major State Indicators	2-3
2-3	Central Processor Miscellaneous Indicators	2-3
2-4	Tape Processor Major State Indicators	2-4
2-5	Tape Processor Miscellaneous Indicators	2-4
2-6	Function of Computer Consoel Keys	2-5
2-7	Toggle Switch Registers	2-7
2-8	Individual Console Toggle Switches	2-7
2-9	Analog Knobs and Power Switch Panel	2-9
2-10	Relay and Analog Input Panel	2-9
2-11	VR12 Display Scope Controls	2-11
2-12	TU55 Tape Transport Controls and Indicators	2-12
2-13	Teletype Model 33 ASR Controls	2-14
3-1	ASR-33 Character Set Display Pattern	3-34
4-1	Summary of Addressing Methods in 8 Mode	4-4
5-1	Stack Register	5-16
5-2	M Series Module Summary	5-35
5-3	Cable Connections to the PDP-12 I/O Bus	5-45
6-1	PT08 Specifications	6-10
6-2	PT08 Device Codes	6-11
6-3	DC02-E Specifications	6-14
6-4	DF32 Instructions Compared with RF/RS08 Instructions	6-35
6-5	Input Signal Scaling	6-77
6-6	System Conversion Characteristics	6-79
A-1	LINC Mode Instructions	A-1
B-1	8 Mode Memory Reference Instructions	B-1
B-2	8 Mode Group 1 Operate Microinstructions	B-3
B-3	8 Mode Group 2 Operate Microinstructions	B-3
<b>B-4</b>	8 Mode Extended Arithmetic Element Microinstructions	B-4
C-1	IOT Instructions	C-1
E-1	AC Bit Functions	E-1
E-2	AC Bit Functions	E-2
E-3	IOT 6154 Effect of Tape Maintenance Instructions	E-2
E-4	Tape Maintenance Instruction Register Equals 108	E-3
E-5	Tape Maintenance Instruction Register Equals 118	E-4
E-6	Tape Maintenance Instruction Register Equals 128	E-4
E-7	Tape Maintenance Instruction Register Equals 138	E-4
E-8	Tape Maintenance Instruction Register Equals 148	E-5
E-9	Tape Maintenance Instruction Register Equals 158	E-5
F-1	Model 33/35 ASR/KSR Teletype Code (ASCII) in Octal Form	F-1
<b>F-</b> 2	Model 33 ASR/KSR Teletype Code (ASCII) in Binary Form	F-2

#### TABLES (cont)

#### Table No. Title Page LT-37 Transmit and Receive Code Table F-3 F-3 F-4 Card Reader Codes F-5 F-5 LP08 Line Printer Code F-6 LP12 Automatic Line Printer Code F-6 **F-**7 Cable Connections for PDP-12 Front Panel **G-**2 G-1

### Figure No.

Title

Page

Frontispiece	PDP-12 Program Data Processor	
1-1	PDP-12 Functional Block Diagram	1-2
2-1	PDP-12 Operator Console	2-2
2-2	Analog Knobs and Power Switch Panel	2-8
2-3	Relay and Analog Input Panel	2-10
2-4	Type VR12 CRT Display	2-10
2-5	TU55 Tape Transport Control Panel	2-11
2-6	Teletype Model 33 ASR	2-13
3-1	Assignment of LINC Address within Memory	3-1
3-2	Direct Address Instruction Format	3-3
3-3	$\beta$ -Class Instruction Format	3-4
3-4	$\beta$ -Class Format	3-6
3-5	a-Class and Non-Memory Reference Format	3-6
3-6	Rotate Left	3-17
3-7	Rotate Right	3-17
3-8	Scale Right	3-18
3-9	QAC Transfer Path	3-22
3-10	Data Path: IB, IF, DF, and AC	3-27
3-11	Data Path, RMF Instruction	3-28
3-12	Special Functions	3-29
3-13	CRT Grid	3-31
3-14	Display Pattern for DSC	3-33
3-15	Relay Terminals and Corresponding AC Bits	3-36
3-16	Standard LINCtape Format	3-38
3-17	LINCtape Processor Information Paths	3-40
3-18	LINCtape Instruction Format	3-41
3-19	Extended Operations Buffer Bit Assignments	3-45
4-1	Organization of Memory, 8 Mode	4-2
4-2	Memory Reference Instruction Format	4-3
4-3	Group I Operate Class Instruction Format	4-7
4-4	Rotation Scheme for RAR, RTR, RAL, RTL	4-8
4-5	Group II Operate Class Instruction Format	4-10
4-6	EAE Instruction Format	4-13
4-7	Shift Path for NMI, SHL	4-15
4-8	Shift Path for ASR	4-16
4-9	Shift Path for LSR	4-16
4-10	Data Path to SF and AC	4-20
5-1	Logic Symbols	5-3
5-2	IOT Instruction Decoding	5-4
5-3	Programmed Data Transfer Interface Block Diagram	5-5


## ILLUSTRATIONS (cont)

## Figure No.

Title

Page

5-4	Programmed Data Transfer Timing	5-6
5-5	Generation of IOT Command Pulses by Device Selectors	5-7
5-6	Typical Device Selector	5-8
5-7	Use of IOS to Test the Status of an External Device	5-9
5-8	Accumulator Input or Output	5-10
5-9	Loading Data into the Accumulator from an External Device	5-11
5-10	Loading a Six-Bit Word into an External Device from the AC	5-12
5-11	Program Interrupt Request Signal Origin	5-12
5-12	Multiple Inputs to IOS and PI Facilities	5-13
5-13	Illustration of Push and POP Operations	5-13
5-14	Vector Flow Diagram	5-15
5-15	DM12 Cable Diagram	5-20
5-16	Data Break Transfer Interface	5-21
5-17	Single-Cycle Data Break Input Transfer Timing	5-23
5-18	Device Interface Logic for Single-Cycle Data Break Input Transfer	5-24
5-19	Single-Cycle Data Break Output Transfer Timing	5-25
5-20	Device Interface Logic for Single-Cycle Data Break Output Transfer	5-26
5-21	Memory Increment Data Break Timing	5-27
5-22	Three-Cycle Data Break Timing	5-29
5-23	Typical M111/M906 Positive Input Circuit	5-31
5-24	Typical M516 Positive Bus Receiver Input Circuit	5-31
5-25	Typical M623/M906 Positive Output Circuit	5-32
5-26	M660 Terminated Bus Driver Output Circuit	5-32
5-27	M103 Device Selector Logic Circuit	5•33
5-28	M101 Bus Data Interface Logic Circuit	5-34
5-29	I/O Bus Configuration	5-40
5-30	I/O Cable Connections	5-41
6-1	Relationship Between Paper Tape and Accumulator	6-3
6-2	Punched Paper Tape Format for the Number 4	6-4
6-3	PT08 Equipment Configurations	6-11
6-4	PT08 Program Response Time	6-13
6-5	KW12-A Real Time Interface	6-18
6-6	KW12-A Organization	6-19
6-7	Simplified Input Synchronizer Logic Diagram	6-20
6-8	KW12-A Timing Diagram	6-21
6-9	Automatic Restart Program Events	6-75
6-10	Typical Power Failure Program Service Routine	6-75

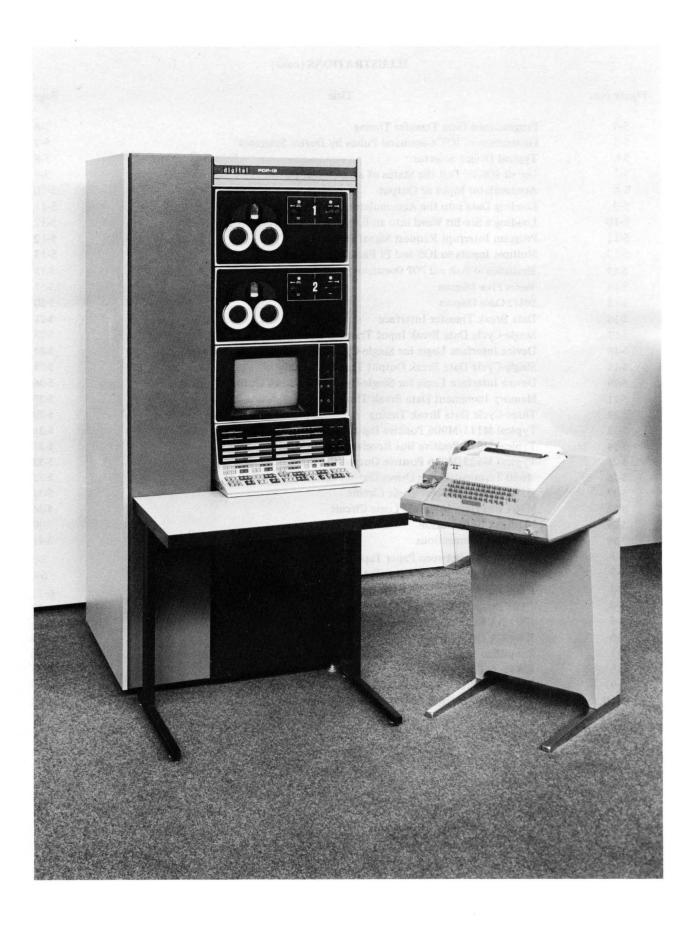

PDP-12 Programmed Data Processor

## CHAPTER 1 GENERAL DESCRIPTION

#### 1.1 DESCRIPTION

#### 1.1.1 System

The PDP-12 (Programmed Data Processor-12) is a versatile digital computer which includes within its single central processor two distinct operating modes, each with its own complete instruction set. This versatility of the PDP-12 makes it, on the one hand, a laboratory-oriented machine with several built-in facilities for input/output, auxiliary storage, and control and sensing of external equipment; and on the other hand, a general-purpose computer with a flexible input/output capability to which numerous peripheral devices may be easily attached. The central processor logic is fully parallel, using a basic word length of 12 bits. The processor cycle time is 1.6 microseconds  $\pm 20\%$ ; most instructions require from 1 to 3 cycles for execution.

Like its predecessor, the LINC-8, the PDP-12 operates in one mode as a LINC (Laboratory Instrument Computer) and in the other mode as a PDP-8 computer – specifically, a PDP-8/I. Unlike the LINC-8, however, the PDP-12 has one central processor, and both operating modes have equal status. (In the LINC-8, the LINC mode was subordinate to the PDP-8 mode.) The computer may be stopped and started in either mode, and programs may switch from one to the other at will. Computations in one mode are immediately available to programs operating in the other mode because only one set of processing registers is involved.

The PDP-12 is offered in three configurations, A, B, and C, in order of decreasing capability. The two smaller systems, B and C, are expandable into the A configuration. The system discussed in this handbook is the PDP-12A. The capacity of basic core memory storage in the PDP-12 is 4096 (4K) 12-bit words which can be expanded to 32,768 (32K) 12-bit words.

Figure 1-1 shows a system block diagram with many of the options and peripherals available, such as:

LINCtape –	Two TU55 tape transports or one TU56 dual drive transport controlled by a buffered subprocessor
CRT Display –	6" x 9" screen, two intensification channels
Analog Inputs –	Eight external inputs, eight variable potentiometers
Relay Buffer –	Six relays for control of external equipment

CARD READER TTY\* STATION#3 REMOTE VR12 (UP TO 200'BCI2-A EXTENSION CABLE) TTY\* STATION#2 EXPANDER CABINETS H961C POSITIVE DATA BREAK FACILITY TTY\* STATION#1 BASIC PDP-12 BAI2 PERIPH-POSITIVE 1/0 BUS RAL EXPANDER TTY\* DR12 r STATION#0 CR12 TRO2 INC. MAG. TAPE CONTROL DB12 L VR 12 LP08 VC12 DISPLAY DCO2-E LP12 UP TO 2 TRANSPORTS PC12 PDP-12A EXISTING OPTIONS PP12 TU22,TU25 OR TU28 LINE PRINTER LINE AM12 AG12 PR12 A D 12 DW08-A PC05-C COMBINATION READER PUNCH ADDITIONAL TU56 (MAXIMUM OF 4TU56 PER TC12) PCO5-R READER PC05-P 1/0 8 DATA TU56 (2 LINC TAPE TRANSPORTS) PUNCH BREAK CONV. TC12 NEGATIVE 1/0 BUS 1 TC12-F NEEDED IF MORE THAN ONE NEG.BUS DEVICE CONN. TO DATA BREAK FACILITY AF01-A A-D CONVERTER AF04-A D-A CONVERTER MM81-A ADDITIONAL 4K MC12 DMO1 MEMORY MULTIPLEXER \*\* KP12 MM8I-B 11 ADDITIONAL 8K DP12 UP TO 32K ADDITIONAL OPTIONS IN SYSTEM CABINET RF08 DISK CONTROL DF32 DISK CONTROL XY12 UP TO 7 DEVICES DS32 DISK RSO 8 DISK KE12 2 DISKS PER CABINET MAXIMUM TC 58 MAG. TAPE CONTROL UP TO 4 DISK OPTIONS KW12-A,B,C 11 DS32 DISK KT 12 VP 12 A 12" INCR. PLOTTER HOUSTON COMPLOT DS32 DISK VP12 B12" INCR. PLOTTER HOUSTON COMPLOT NOTE \* TTY OPTIONS AVAILABLE KSR33, ASR33 KSR35, ASR35 TU20 MAGNETIC TAPE UNIT VP12 C 30 INCR. PLOTTER HOUSTON COMPLOT TU10 WITH TC58 CONTROL MOUNTED INSIDE NOTE \*\* DMO4 POSITIVE BUS MEMORY MULTIPLEXER ALSO AVAILABLE (DOES NOT REQUIRE DWO8-A) TU30 UP TO 8 MAGNETIC TAPE TRANSPORTS

Figure 1-1. PDP-12 Functional Block Diagram

12-0208

1-2

The PDP-12 is also equipped with a positive-logic, PDP-8/I-type, input/output (I/O) bus which can be used for interfacing all 8-family peripherals and options, as well as the standard Teletype® Model 33 ASR.

#### 1.1.2 Central Processor

`

The central processor contains all the logic and registers required to carry out the functions of both operating modes of the PDP-12. The central processor can best be described in terms of its active registers:

Accumulator (AC) 12 Bits	This register contains data being operated upon. Its contents may be shifted or rotated right or left; incre- mented, cleared, or complemented; stored in memory or added to the contents of a memory register; and logically or arithmetically compared with the contents of any memory register. The AC holds the sum after an addition, and part of the product after a multiplication. The AC is also involved in the transfer of data to and from various other registers outside the central processor.
Link (L) 1 Bit	The Link is an extension of the AC. When a carry occurs out of $AC_{00}$ during a 2's complement addition, the Link is complemented. It may be set or cleared independently of the AC under 8 mode control, and may or may not be included in shifting and rotating operations performed on the contents of the AC.
Program Counter (PC) 12 Bits	This register contains the address of the next instruction to be executed within the memory field selected by the Instruction Field Register (see below). In 8 mode, the PC acts as a 12-bit counter; in LINC mode, it acts as a 10-bit counter.
Instruction Register (IR) 12 Bits	This register contains the complete binary code of the instruction being executed.
Memory Address Register (MA) 12 Bits	This register contains the address for memory references. Whenever a core memory location is being accessed, either for reading or for writing, the MA contains the address of that location.
Memory Buffer (MB) 12 Bits	All information passing between memory and other registers in the PDP-12 must go through the Memory Buffer Register, whether the transfer involves the central processor, an external I/O device, or another memory register.
Mode Status Register 1 Bit	This register indicates the current operating mode (LINC or 8) of the central processor.
® Teletype is the registered trademark of the Te	letype Corporation.

Instruction Field Register (IF) 5 Bits

This register selects the memory field containing the executable program. In the LINC mode, it is used to designate one of up to thirty-two 1024-word segments. In the 8 mode, the three high-order bits of the IF are used to designate one of up to eight 4096-word fields.

Data Field Register (DF) 5 Bits

This register selects the memory field containing data to be indirectly accessed by the memory reference instructions of a program. The fields are specified in each mode in the same way that the IF specifies the Instruction Field.

#### 1.1.3 Memory

The principal unit of core memory is a module of 4096 (4K) 12-bit words. Additional modules of 4K words may be added, up to a total of eight, or 32,768 words. Within each module, the logical organization of memory depends on the operating mode. In the LINC mode, each module is divided into four 1024-word segments. At any given time, only two of these segments are active: the Instruction Field, which contains the executable program and the directly accessed data; and the Data Field, which contains only indirectly accessed data. Absolute addresses may be assigned and changed at will using the IF and DF described above.

In the 8 mode, the memory field (a 4K module) is divided into 32 pages of 128 words each. Within a single page, data may be accessed directly; between pages, indirect addressing must be used. If more than 4K of memory is provided, the IF and DF registers specify the active fields.

#### 1.1.4 Operating Modes

The two operating modes, LINC and 8, are independent of each other, though they can be combined and intermixed within a program. The user can run programs from the already-existing libraries for the 8 family of computers, including the LINC-8. By using the I/O Handler (LINC-8 Simulator Trap Processor) program provided with the PDP-12 basic software, most programs written for the LINC-8 can be run without modification. (Some LINC-8 programs may require slight changes.) A complete software system designed for the PDP-12 allows the programmer to assemble coding for either or both modes in a single program.

LINC Mode - In this mode, the instruction set of the classic LINC computer is implemented. In addition, several new provisions are available:

*Extended Tape Addressing* - This allows the programmer to transfer information between LINCtape and any section of core, removing the restriction of data transfer to only specific segments of a given memory field. Other features include:

a. Tape Interrupt, which connects the tape processor status to the Program Interrupt.

b. No-pause, which permits the central processor to resume operation after initiating a tape transfer without waiting for completion.

c. Hold-motion, which allows a unit to remain in motion after it has been deselected.

I/O Bus Access – In LINC mode the user has immediate access to those devices activated by LINC instructions: analog inputs, Display, Relays, Sense Lines, and LINCtape. Devices connected to the I/O bus may be directly accessed from LINC mode programming by means of a special two-word instruction, in which the second word enables the bus and initiates the PDP-8 IOT timing chain. This second word is interpreted as a standard PDP-8 IOT instruction, but the program continues to operate in LINC mode. Special Functions – The LINC programmer may, by setting certain flip-flops,

- a. Change the size of characters displayed on the CRT;
- b. Enable the program trap, which intercepts certain LINC instruction codes;
- c. Disable interrupts from the ASR-33;
- d. Speed the sampling of analog inputs;
- e. Clear the PDP-12 I/O status by generating an I/O PRESET pulse.

8 Mode - In this mode, the user has available the entire PDP-8/I instruction set.

Interaction Between Modes – The user may switch from one mode to the other at will. In the LINC mode, execution of the instruction PDP causes the processor to change immediately to 8 mode operation, and all subsequent instructions are interpreted as PDP-8/I instructions. To switch from 8 mode to LINC mode, the IOT instruction LINC is used.

#### 1.1.5 Input/Output Facilities and Display

There are two main paths for the transmission of data from the central processor or memory to peripheral devices. One path, which is controlled by LINC mode programming, leads to the CRT display, LINCtape, A-D converter, and relays. The other path, which is the I/O bus, leads to the ASR-33 and to a large number of optional devices, such as plotters, high-speed paper tape, magnetic tape, A-D, and card readers, disk storage, and line printers.

Display — The Cathode Ray Tube has a 58.5-square-inch (6.5 x 9 inches) screen, on which individual points and whole characters may be displayed. The unit has two selectable channels, controlled by programming and by a switch on the display. Characters are plotted on a 4-point x 6-point matrix; a full character can be displayed with two instructions. Provision is made for displaying two sizes of characters.

Data Terminal - A Data Terminal provides a flexible means of receiving analog inputs and controlling the operation of external equipment not internally interfaced to the PDP-12.

Analog Inputs – Sixteen analog inputs feed a 10-bit A-D converter. A single LINC mode instruction samples any one of the 16 channels. Eight of the inputs are taken from phone jacks mounted on the Data Terminal Panel and fed through preamplifiers to the converter. The remaining eight are taken from continuously variable 10-turn potentiometers which are also mounted on the panel. A second set of 16 channels, with preamplifiers, may be added to the basic facility.

Relay Buffer - Six relays, mounted on the data terminal panel, can be switched individually or in combination, by means of a LINC mode instruction. The relays may be used to start and stop operations in external equipment. The states of the relays can be read into the AC.

Auxiliary Scope Connector – A connector mounted on the Data Terminal Panel is wired to accept an auxiliary CRT for displaying information. All display information (X, Y and Z) available to the internal display is also available at the remote connector.

Sense Lines – These 12 digital sense lines may be individually tested with a LINC mode instruction.

*LINCtape* – Two TU55 transports (or one TU56 dual drive transport) are controlled by a fully-buffered tape processor; once initiated by the LINC program, tape operations are carried out independently of the central processor. Tapes normally are written and read in standard LINCtape format, though nonstandard formats may be used. A special hardware option, TC12-F, permits the use of tapes with a different format, such as PDP-8 DECtape. In addition to the basic LINCtape commands, the PDP-12 also includes an Extended Operations facility, which

allows, among other features, the transmission of data between tape and any program-defined area of memory, and the addition of TU55 transports to a total of eight (or four dual drive TU56s).

Input/Output (I/O) Bus – This connecting facility provides the control and data transmission path between the central processor and any peripheral device attached to the bus. Some devices, such as paper tape readers and punches, line printers, and incremental plotters, transfer data via the accumulator (AC). Others, including magnetic tape and disk, use the three-cycle or single-cycle Data Break for direct memory access. The I/O bus uses positive logic and accepts peripherals used with the 8 family of computers. The processor is prewired to accept the following I/O bus options:

Extended Arithmetic Element (EAE), Type KE12

Programmable Real-time Clocks, Type KW12-A, B, or C

Incremental Plotter and Control, Type XY12

TTY/Dataphone®, Type DP12-A, B

With the inclusion of the BA12 Peripheral Expander and the DW08A I/O and Bus Converter, many other devices can be added to the PDP-12 I/O bus. The Peripheral Expander allows the addition of high-speed paper tape reader and punch, card reader, line printers, and optional communication interfaces. The Bus Converter provides for the addition of disk and IBM-compatible magnetic tape storage and A/D converters and associated multiplexers designed for the negative-logic PDP-8 I/O Bus.

Keyboard/Printer (Model 33 ASR) – An important means of direct communication between the user and the operating program is the Model 33 ASR Keyboard/Printer, standard on all configurations of the PDP-12. It is connected to the I/O bus, and can be accessed for input or output by programs in either operating mode. The Model 33 ASR is equipped with paper tape reader and punch; the reader and keyboard use the same input path and instructions, while the printer and punch use the same output path and instructions. The maximum transfer rate in either direction is 10 characters per second.

The Model 33 ASR operates in full-duplex mode, that is data may be transmitted in both directions simultaneously.

#### 1.2 SYMBOLS AND ABBREVIATIONS

The following symbols and abbreviations are used throughout this handbook:

AC, MB, PC, MQ, MA, L, IF, DF, IR	Central Processor registers: Accumulator, Memory Buffer, Program Counter, Multiplier Quotient, Memory Address, Link, Instruction Field, Data Field, Instruction Register.
R	General representation of any register.
C (R)	The contents of register R.
C (R <sub>j</sub> )	The content of bit j of register R.
C (R <sub>j-n</sub> )	The contents of bits j through n, inclusive, of register R.

<sup>®</sup> Dataphone is a registered trademark of A.T.&T.

C (R <sub>1</sub> )	The contents of the left half of register R.
$C(R_r)$	The contents of the right half of register R.
$\overline{C(R)}$	The one's complement of the contents of register R.
Y	The effective address of an operand.
Ι	The Indirect address bit of an instruction. In the LINC mode, I represents bit 7; in the 8 mode, bit 3.
$C(R) \rightarrow C(S)$	The contents of register R replace those of register S.
N→C (R)	The quantity N replaces the contents of register R.
v	Inclusive OR
<del></del>	Exclusive OR
Λ	AND

## CHAPTER 2 CONTROLS AND INDICATORS

This chapter describes the function of the controls and indicators of the PDP-12 computer console, Data Terminal, Type VR12 CRT Display, Type TU55 LINCtape Transport, and Teletype Model 33 ASR.

#### 2.1 PDP-12 CONSOLE CONTROLS AND INDICATORS

Tables 2-1 through 2-8 describe the controls and indicators located on the console of the PDP-12. Figure 2-1 provides a front view of the console.

#### 2.2 DATA TERMINAL

The Data Terminal is the area behind the door on the left front of the PDP-12. Normally, up to four separate panels are placed here. A storage rack to hold LINC tapes may be placed in any of the unused spaces of the Data Terminal area. The four standard panels are:

- 1. Power Switch Panel
- 2. Relay and Analog Input Panel
- 3. Analog Extension Panel
- 4. Clock Input Panel

The first two are described in Tables 2-9 and 2-10 and illustrated in Figures 2-2 and 2-3; the last two are described with the associated options (AG12 and KW12-A).

#### 2.3 CRT DISPLAY, TYPE VR12

Table 2-11 lists the controls and indicators of the Type VR12 CRT Display. Figure 2-4 shows a front view of the CRT Display.

#### 2.4 LINC TAPE TRANSPORT, TYPE TU55

Table 2-12 lists the functions of controls and indicators of the Type TU55 LINCtape transport. Figure 2-5 provides a front view of the transport.

#### 2.5 TELETYPE, MODEL 33 ASR

Table 2-13 lists the functions of controls of the Teletype, Model 33 ASR. Figure 2-6 provides a front view of the teletype.

INST FIELD		PRO	CESSOR STATES			
					8 MODE	LINC MODE
DATA FIELD	RELAYS	TAPE STATES	IP XA NP MH	TAPEINST		
INSTRUCT	ION REGISTER		AULTIPLIER QUOTIENT		RUN	AUTO
PROGR	AN COUNTER	INK	ACCUMULATOR		TRAP	INT PAUSE
MENO	IV ADDRESS		MENORY BUFFER	1368-1300 Mar	ION	170 PAUSE
0 1 2 3 4 5	SWITCHES 6 7 8 9 10 11	8 1 2 3 4	RIGHT SWITCHES	9 10 11	PETCH EXEC SI STOP STOP ST	NG STOP
INST FIELD D 1 2 STEEN FILL	L STEP ERAM ERAM MARK AUTO	SENSE SWITCHES	5. 00		400 LS	CONT
1164	TITT	LITY	FFFF	YYY	W	Y
IN FAI		IIII	Y []	AN	YY	N.

Figure 2-1. PDP-12 Operator console

### Table 2-1. Central Processor Register Indicators

Indicator	Bits
INST FIELD	5
DATA FIELD	5
RELAYS	6
INSTRUCTION REGISTER	12
PROGRAM COUNTER	12
MEMORY ADDRESS	12
MULTIPLIER QUOTIENT	12
ACCUMULATOR	12
LINK	1
MEMORY BUFFER	12

Indicator	State
F	Instruction Fetch
D	Deferred Address
${f E}$	Instruction Execution
E 2	Instruction Execution 2
INT	Program Interrupt
WC	Word Count
CA	Current Address
В	Break
ТВ	Tape Break

### Table 2-2. Central Processor Major State Indicators

Table 2-3. Central Processor Miscellaneous Indicators

Indicators	Interpretation When Lit
SKIP	Skip Flip-Flop is set
FLO	Overflow Flip-Flop is set
8 MODE	Processor is in the PDP-8 Mode
LINC MODE	Processor is in the LINC Mode
RUN	Processor is running
AUTO	Auto Restart Flip-Flop is set
TRAP	Trap flip-flop is set
INT PAUSE	An internal pause is occurring
ION	Program Interrupt facility enabled
I/O PAUSE	An I/O Pause is occurring

State
Idle
Search
Block
Check Word
Turn Around

 Table 2-4.
 Tape Processor Major State Indicators

Table 2-5. Tape Processor Miscellaneous Indicators

Indicator	Interpretation	Function
IP	In Progress	Indicates that a tape operation is In Progress.
ХА	Extended Address Mode	Indicates that the processor is in the Extended Address mode.
NP	No Pause Mode	Indicates that the processor is in the No Pause mode.
МК	Mark Flip-Flop	Indicates that the Mark Flip-Flop is set.
TAPE INST	3-bit Tape Instruction Register	These three lights indicate the contents of the 3-bit Tape Instruction register.

## Table 2-6. Function of Computer Console Keys

Кеу	Function	
I/O PRESET	This switch causes the processor to halt when it is in Internal Pause state during a tape instruction, and sets processor mode to the state of the console MODE switch. The Inst Field register is set to 2 and the Data Field register is set to 3. I/O PRESET pulse and the I/O BUS INITIALIZE pulse clear all I/O device flags and operations. The AC and Link are cleared.	
DO	This switch causes the processor to perform one instruction. In the LINC mode, the processor performs the instruction defined by the Left Switches (and the Right Switches, if it is a double word instruction). In the 8 mode, the processor performs the instruction defined by the Left Switches.	
START 20	This switch causes the processor to start at location 20 of the currently selected Instruction Field.	
START 400	This switch causes the processor to start at location 400 of the currently selected Instruction Field.	
START LS	This switch causes the processor to start at the 15-bit address specified by the Left Switches and the Instruction Field Switches.	
CONT	This switch causes the processor to resume operation.	
EXAM	The contents of the Left Switches are transferred into the Memory Address register. The contents of the absolute core address designated by the Left Switches are displayed in the Memory Buffer register.	
STEP EXAM	This switch increments the contents of the Memory Address register and displays the contents of this new address in the Memory Buffer register. This incrementing extends over 10 bits in LINC mode and 12 bits in 8 mode.	
FILL	The contents of the Left Switches are transferred into the Memory Address register. The contents of the Right Switches are deposited into the memory location whose absolute address is designated by the Left Switches and the Instruction Field switches.	
FILL STEP	Depressing this switch causes the contents of the Right Switches to be deposited into the memory location whose address is in the Memory Address register. Releasing this switch increments the contents of the Memory Address register. This incrementing extends over 10 bits in the LINC mode or 12 bits in the 8 mode. The Memory Buffer register then displays the contents of the location specified by the new contents of the Memory Address register.	
MODE	This switch determines the mode (LINC or 8) to which the processor will be set when the I/O PRESET switch is activated. The MODE switch is effective only when the computer is not running.	

## Table 2-6. Function of Computer Console Keys (cont)

Key	Function
AUTO	This switch sets the AUTO RESTART flip-flop if it is held down at the same time one of the following keys is actuated: STEP EXAM, FILL STEP, DO, or CONT.
	The AUTO RESTART flip-flop causes the central processor to start automatically at the end of a variable time delay (determined by the console controls) after the central processor stops for any of the following reasons:
	<ul><li>a. SING STEP switch activated</li><li>b. FETCH STOP address match</li></ul>
	c. EXEC STOP address match
	d. The end of a STEP EXAM operation
	e. The end of a FILL STEP operation
	f. The end of a DO switch operation
	The Auto Restart Flip-Flop is cleared by any of the following conditions:
	a. STOP switch pressed while processor is running
	b. DO, FILL STEP, or STEP EXAM switch activated and the AUTO switch <u>not</u> pressed
	c. A processor HLT instruction executed (either mode)
	d. I/O PRESET pulse is generated
	To start a program in AUTO RESTART mode:
	a. Start the program with the SING STEP switch up.
	With the AUTO key depressed, depress CONT.

Table 2-7.	Toggle	Switch	Registers
------------	--------	--------	-----------

Register	Bits	Function
LEFT SWITCHES	12	These switches form a 12-bit word which can be read into the accumulator with the LINC mode instruction LSW (517). This word also specifies the address to be examined when the EXAM switch is used, the address into which data will be placed when the FILL switch is used, the stopping address for EXEC STOP and FETCH STOP functions, and the instruction to be performed when the DO switch is used.
RIGHT SWITCHES	12	The contents of these switches form a 12-bit word which can be read into the accumulator with the LINC mode instruction RSW (516) or the 8 mode instruction OSR (7404). This word also provides data to be stored in memory when the FILL or FILL STEP switches are used. When the DO switch is used, the Right Switches contain the second word of two-word instructions.
INST FIELD	3	These are a high-order extension of the Left Switches. They provide addressing information for systems equipped with 8K or more of memory for the EXAM, FILL, START LS, EXEC STOP, and FETCH STOP functions.
SENSE SWITCHES	6	These switches are individually interrogated by LINC mode skip instructions, thereby enabling console control of program branching.

## Table 2-8. Individual Console Toggle Switches

Switch	Function
STOP	This switch causes the processor to stop at the end of an instruction. For the purposes of the STOP switch, Traps, Interrupt, Tape Break, and single-cycle Data Break are considered to be single-cycle instructions. During a three-cycle Data Break, the processor is stopped after the Break cycle.
SING STEP	This switch causes the RUN flip-flop to be cleared, thereby disabling the timing circuits at the end of one cycle of operation. Thereafter, repeated operation of the CONT switch steps the program one cycle at a time so that the operator can observe the contents of registers in each major state.
FETCH STOP	This switch causes the processor to stop when the address designated by the Left Switches matches the current address in the Memory Address register during the Fetch cycle. For systems with more than 4K of memory, the Inst Field switches designate the three most significant bits of the address.

## Table 2-8. Individual Console Toggle Switches (cont)

Switch	Function
EXEC STOP	This switch causes the processor to stop when the address designated by the Left Switches matches the current address in the Memory Address register during any computer cycle except a Fetch cycle. For systems having more than 4K of memory, the Inst Field switches designate the three most significant bits of the address.



Figure 2-2. Analog Knobs and Power Switch Panel

## Table 2-9. Analog Knobs and Power Switch Panel

Panel Controls	Function
OFF/ON/LOCK	This 3-position, key-locking switch is used to turn the PDP-12 on as well as inhibit console intervention during an operating program. When fully counterclockwise, the PDP-12 is off. When turned to the center position, the PDP-12 is turned on and the console activated. When the switch is fully clockwise, the PDP-12 is on, but console control functions are totally inhibited while the PDP-12 RUN light is on. Only the Left Switches, Right Switches, and Sense Switches remain operative.
SPEAKER VOLUME	The volume of the speaker is controlled by this knob. (The speaker, which is driven by AC bit 0, is added to the system when the AD12 is included in the system configuration.)
AUTO RESTART DELAY	These two knobs control the delay period of Auto Restart after a processor stop due to an EXEC STOP, FETCH STOP, or SING STEP operation. (See AUTO switch description in Table 2-6.)
COARSE and FINE	The COARSE delay selects overlapping ranges from 2.4 $\mu$ s to .38 sec. The FINE control gives variation within a range of 20:1 of the selected COARSE delay.
ANALOG CHANNELS 0-7 (knobs)	These 10-turn potentiometers are connected to analog input channels 0-7 of the AD12 Analog-to-Digital Converter. These knobs therefore provide eight continually-variable parameters within the range of $\pm 512_{10}$ for program usage.

## Table 2-10. Relay and Analog Input Panel

Terminals	Function
ANALOG CHANNELS 10-17 (Input Jacks)	These are 3-conductor phone jacks providing $\pm 1$ Volt input connections for AD12 Analog-to-Digital converter channels $10_8$ - $17_8$ .
RELAY REGISTER Contacts	One set of form C contacts for each of the six system relays is available at the binding posts.
EXTENSION SCOPE	A 24-pin connector for an extension scope provides for remote operations, multiple displays, or photographing of display output. See Appendix G for pin connections and drive characteristics.

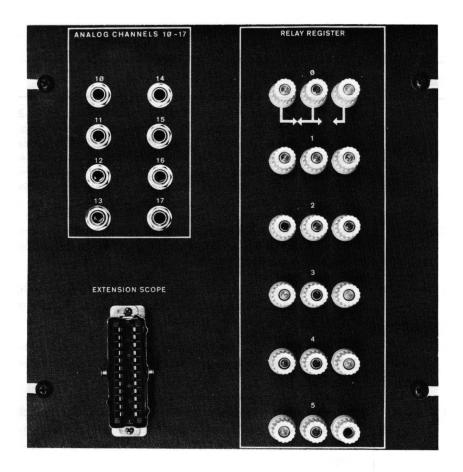


Figure 2-3. Relay and Analog Input Panel

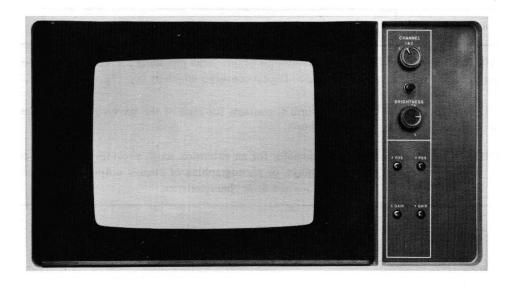


Figure 2-4. Type VR12 CRT Display

## Table 2-11. VR12 Display Scope Controls

Control	Function
CHANNEL	Selects one or both channels for scope display.
BRIGHTNESS	Controls level of brightness.
X GAIN	Controls horizontal size of display.
X POS	Controls horizontal position of display.
Y GAIN	Controls vertical size of display.
Y POS	Controls vertical position of display.




Figure 2-5. TU55 Tape Transport Control Panel

Control or Indicator	Function
Forward Tape-motion Switch (designated in Figure 2-5 by arrow pointing to the left)	Provides forward tape motion (i.e., from right to left) only if REMOTE/OFF/LOCAL switch is set to LOCAL.
WRITE ENABLED/WRITE LOCK switch	
WRITE ENABLED	Permits TC12 control system to write information on the TU55.
WRITE LOCK	Prevents writing. If TC12 control system is commanded to write on tape while the WRITE LOCK is set, the control signals a TAPE NOT OK.
WRITE ENABLED	Lights when WRITE ENABLE/WRITE LOCK switch is in the WRITE ENABLE position.
Unit Selector 0 1	When this selector is dialed to one of the numerals and the REMOTE/OFF/LOCAL switch is set to REMOTE, the central processor may gain access to the unit.
2 3 4 5 6	
7 OFF LINE	When the selector is dialed to OFF LINE, the transport cannot be selected by the tape control.
	NOTE
	Some earlier units were equipped with a unit selector position 8, which is the same as unit 0.
REMOTE/OFF/LOCAL Switch REMOTE	Permits tape processor to control the transport.
OFF	Removes power from reel motors and releases the brakes. This permits the operator to change the tape.

## Table 2-12. TU55 Tape Transport Controls and Indicators

Control or Indicator	Function
LOCAL	Permits the forward and reverse tape-motion switches to provide tape motion in direction of the arrows. The transport cannot be selected.
REMOTE Indicator	Lights only when transport is selected by the tape processor.
Reverse Tape-motion Switch (designated in Figure 2-5 by arrow pointing to the right)	Provides for motion in the reverse direction (i.e., from left to right), but only when REMOTE/OFF/ LOCAL switch is on LOCAL. If both reverse and forward tape-motion switches are pressed simulta- neously, reverse motion takes place.

### Table 2-12. TU55 Tape Transport Controls and Indicators (cont)

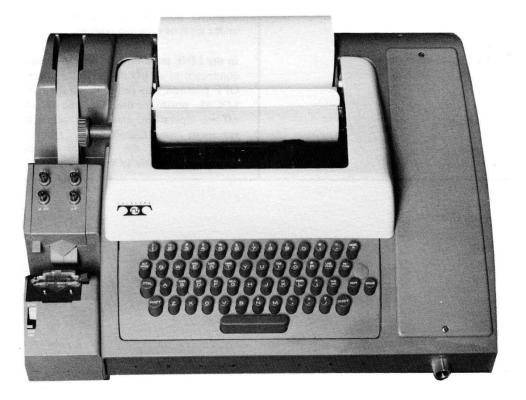

## Figure 2-6. Teletype Model 33 ASR

Control	Function
Punch Controls	
REL Pushbutton	Disengages the tape in the punch to allow removal or loading.
B SP Pushbutton	Backspaces the tape in the punch one space, allowing manual correction or rubout of the character just punched.
ON and OFF Pushbuttons	ON engages the punch for operation under local or program control. OFF removes the punch from control.
Reader Control	
START/STOP/FREE	In the FREE (lowest) position, the tape feed wheel is disengaged, and tape can be loaded or unloaded. In the STOP (center) position, the wheel is engaged but the reader cannot be operated. In the START (highest) position, the reader can be operated under local or program control.
LINE/OFF/LOCAL Switch	In the LINE position, the Teletype is energized and connected as an I/O device to the computer. In the OFF position, the Teletype is not energized. In the LOCAL position, the Teletype is energized for off-line operation, and signal connections to the processor are disconnected. Both LINE and LOCAL use of the Teletype require that the computer OFF/ON/LOCK switch is ON.

Table 2-13. Teletype Model 33 ASR Controls

## CHAPTER 3 LINC MODE PROGRAMMING

#### 3.1 ORGANIZATION OF MEMORY

#### 3.1.1 General

The LINC mode instruction set deals with two  $1024_{10}$ -word Memory Fields. The INSTRUCTION FIELD is the  $1024_{10}$ -word section of memory from which programs are executed, and in which data may be directly or indirectly accessed. The DATA FIELD is a second  $1024_{10}$ -word section of memory to which the LINC instruction set allows only indirect reference for data manipulation and storage. The physical locations of the Data Field and Instruction Field within the maximum  $32,768_{10}$ -word memory are specified by the contents of the 5-bit Data Field Register and the 5-bit Instruction Field Register. These are set and modified under program control or from the console; they need not be adjacent, or in any particular order, and can even be identical. With respect to a LINC program, addresses within a Field remain constant, regardless of the actual location of the Field. Addresses within the Instruction Field are 0000 through  $1777_8$ ; addresses within the Data Field are 2000<sub>8</sub> through  $3777_8$ . Thus, no matter where they are assigned, the two fields may be considered logically contiguous.

The PDP-8 instruction set (described in Chapter 4) divides memory into  $4096_{10}$ -word Fields, which are specified by the most significant 3 bits of the Instruction Field and Data Field Registers. Therefore, the term Field designates a  $1024_{10}$ -word segment of memory in LINC mode, and a  $4096_{10}$ -word segment of memory in 8 mode. In Figure 3-1, the division of the first  $4096_{10}$  words of memory is shown, assuming LINC mode, INST FIELD = 01, DATA FIELD = 03.

ABSOLUTE ADDRESS (OCTAL)	0000-1777	2000-3777	4000-5777	6000-7777
FIELD		INST		DATA
LINC ADDRESS (OCTAL)		0000-1777		2000-3777

12-0178

#### Figure 3-1. Assignment of LINC Addresses within Memory

#### 3.1.2 Program Counter

The Program Counter acts as a 10-bit counter in the LINC mode, so that executable programs can be stored only in the Instruction Field. If the contents of  $PC_{2-11}$  are incremented beyond 1777, they return to 0000; the two high-order bits of the PC are unaffected. Thus, incrementing C(PC) = 3777 yields C(PC) = 2000. Likewise, 5777 is incremented to 4000, and 7777 to 6000. This 10-bit indexing is very common in LINC mode operations.

### 3.1.3 Instruction and Data Field Registers

These two 5-bit registers select the 1K segments to be used by the LINC program. The three high-order bits of each register are the three bits of the corresponding 8 mode Memory Field register. The contents of the IF and DF may be set, changed, or examined at any time by the use of LINC instructions.

3.1.3.1 Instruction Field Reserved Locations – This field contains the executable program. The following registers are set aside in this field for special uses:

Field Address	Use
0000	Holds return address after execution of JMP.
0001	Holds horizontal coordinate during execution of DSC.
0001-0017	As $\beta$ -registers, used by indirect-reference instructions to hold the effective address of an operand.
0000-0017	As a-registers, used by SET, XSK, and DIS.
0020	Program start location when Start 20 key is pressed.
. 0400	Program start location when Start 400 key is pressed.

When the instruction field is assigned to the lowest segment of memory (that is, when C(IF) = 00), the following registers are also reserved:

Field Address	Use
0000 0001	PDP-8 Interrupt locations (Paragraph 4.4)
0040	Holds return address after a program interrupt during LINC mode operation.
0041	Location to which control is transferred after a program interrupt during LINC mode operation.
0140	Holds return address after an instruction trap.
0141	Location to which control is transferred after an instruction trap.

3.1.3.1 Data Field Reserved Locations – There are no specially-reserved registers in this field. Its contents cannot be accessed directly; data can be stored or retrieved only by indirect addressing.

# 3.2 MEMORY ADDRESSING METHODS

#### 3.2.1 General

Almost every program, at some time during its execution, will need an item of data stored in memory. Such an *operand* can be obtained only by specifying the address of the register in which it is stored or to be stored. An instruction which requires a reference to memory can designate the desired location in two ways. It may include the address of the operand as part of the instruction itself and *directly* address the location of the operand. Or, the instruction may specify the address, not of the operand, but of a register containing the address of the operand, thus *indirectly* addressing the data storage register.

The need for indirect addressing is readily apparent; with eleven bits required to specify a Data Field address, not much is left of a 12-bit word to use for instruction codes. It is necessary to reduce the number of address bits available within a memory reference instruction, and to use a limited set of directly addressable locations as pointers containing the *effective address* of the desired data. The LINC instruction set provides for both types of addressing.

#### 3.2.2 Direct Addressing

In LINC programming, direct access to memory registers is limited to the Instruction Field. A full address in this field requires ten bits (0000-1777), leaving only two bits for instruction codes. The three instructions, ADD, STC, and JMP, are described in detail in Paragraph 3.3. The format of a direct-address instruction is shown in Figure 3-2. Bits 0 and 1 are used for the operation code, bits 2-11 for the address.

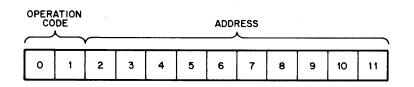


Figure 3-2. Direct Address Instruction Format

### 3.2.3 Indirect Addressing: β-Class

For access to registers in the Data Field, an indirect address is required. The instruction specifies one of a small set of special registers which are used to hold the effective addresses of desired data. The format of these  $\beta$ -class instructions is shown in Figure 3-3. Bits 3-6 are available for operation codes; bits 8-11, together with bit 7, determine which of four addressing schemes is to be used.

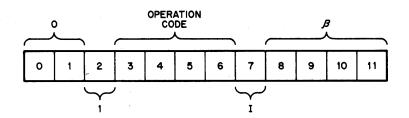


Figure 3-3.  $\beta$ -Class Instruction Format

3.2.3.1  $\beta$ -Registers – In a  $\beta$ -class instruction, the contents of bits 8-11, when not zero, designate one of fifteen registers at locations 0001-0017 of the Instruction Field. The contents of the specified  $\beta$ -register are used to determine the effective address of the operand. When the contents of bits 8-11 are zero, the effective address is found in the register which immediately follows the referencing instruction.

Bit 7, the I-Bit, determines the manner in which the register designated by bits 8-11 is to be used in locating the operand. There are four addressing schemes, described in the following table.

Bit 7 (I)	Bits 8-11 (β)	Effective Address
0	00	The contents of bits 1-11 of the register immediately following the instruction.
1	00	The address of the register immediately following the instruction. The operand itself is in this register.
0	01-17	The contents of bits 1-11 of the designated $\beta$ -register.
1	01-17	The contents, incremented by 1, of bits 1-11 of the designated $\beta$ -register. Ten-bit indexing is used (see text).

In the first scheme, the register which follows the referencing instruction contains the effective address. In the second scheme, the operand itself is in that register. When either of these two schemes is used (that is, when the contents of bits 8-11 are zero), the program counter automatically skips over the register immediately following the instruction, and the next instruction is fetched from the second register following.

The following examples illustrate the use of all four addressing schemes.

The instruction STA (Store Accumulator) causes the contents of the AC to be stored in memory. The operation code for STA is 1040. The register R is the one which immediately follows that containing the STA instruction.

(1) STA 0

Octal code: 1040 I=0,  $\beta$ =00 Destination of C(AC): C(R)=2345

Location 2345 (Location 345 in the Data Field)

(2) STA I 0	Octal code: 1060 I=1, $\beta$ =00 Destination of C(AC):	Location R
(3) STA 12	Octal code: 1025 I=0, β=12	C(0012)=3456
	Destination of C(AC):	Location 3456 (Location 1456 in the Data Field)
(4) STA I 12	Octal code: 1072 I=1, $\beta$ =12	C(0012)=3456
	Destination of C(AC):	Location 3457 (Location 1457 in the Data Field)
		(The contents of $\beta$ -register 0012 are incremented by 1, and the result, 3457, is used as the effective address.)

In the next example, the use of these addressing schemes in a program sequence is demonstrated. The instruction ADA (Add to Accumulator) adds the operand to the contents of the AC, leaving the result in the AC. The program sequence starting at location 1000 adds the numbers  $N_1$ ,  $N_2$ ,  $N_3$ , and  $N_4$ , leaving the sum in the AC.

ADDRESS	OCTAL		CONTENTS	REMARKS
0007	1500		1500	/REPLACED BY 1501 AFTER INDEXING
			*1000	
1000	1100		ADA	/INDIRECT THROUGH 1001, ADD N1 to C(AC)
1001	1477		1477	/ADDRESS OF N1
1002	1120		ADA I	/DIRECT TO 1003; ADDS N2 TO C(AC)
1003	3211	N2,	3211	
1004	1107		ADA 7	/INDIRECT THROUGH 7 TO 1500, ADDS N3
1005	1127		ADA I 7	/INDIRECT THROUGH 7, INDEXED, ADDS N4
			*1477	
1477	1234	N1,	1234	
1500	1235	N3,	1235	
1501	4321	N4,	4321	

3.2.3.2  $\beta$ -Register Indexing – When the  $\beta$ -indexing scheme is used (I = 1,  $\beta \neq 00$ ), effective addresses may specify registers in either memory field, but the  $\beta$ -register cannot be incremented from one field to the other. Indexing is only over ten bits, as it is in the PC; the two high-order bits are unaffected. Thus, the contents of the  $\beta$ -register will be incremented from 1777 to 0000, from 3777 to 2000, from 5777 to 4000, and from 7777 to 6000. To change access from one field to the other, it is necessary to change the contents of bit 1 of the  $\beta$ -register.

Bit 0 of the  $\beta$ -register has no effect in most indirect references, but it does have a special use in half-word operations, in multiplication, and in character display.

# 3.2.4 Addressing: a-Class

Three LINC mode instructions – SET, XSK, and DIS – have specialized memory reference schemes. Although each of them accesses memory in a unique way, all make use of one of the registers in locations 0000 through 0017. These are called a-registers, to differentiate between these instructions and those of the  $\beta$ -class.

SET and XSK are described in Section 3.3. DIS is described in Section 3.4.

# 3.3 LINC MODE INSTRUCTIONS

(Complete list is provided in Appendix A.)

# 3.3.1 Instruction Formats

There are three basic LINC mode instruction formats.

3.3.1.1 Direct Address (See Figure 3-2) – This class consists of the three instructions ADD, STC, and JMP.

3.3.1.2 Indirect Address,  $\beta$ -class (See Figure 3-4) – This class consists of 15  $\beta$ -class instructions, with operation codes between 1000 and 1740.

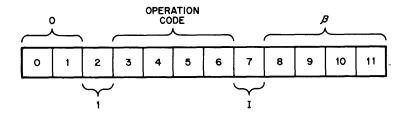


Figure 3-4.  $\beta$ -Class Format

3.3.1.3 a-class and Others (See Figure 3-5) – There are 16 basic instructions in this group, and they have operation codes between 0000 and 0777. Each of these instructions has up to 32 variants, depending on the contents of bits 7-11.

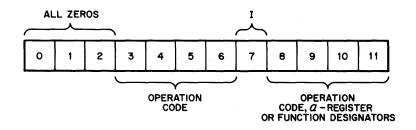


Figure 3-5. a-Class and Non-Memory Reference Format

# 3.3.2 Instruction Descriptions

The descriptions are organized according to function and class, as follows:

Full-word Data Transfers	STC, LDA, STA
Full-word Arithmetic	ADD, ADA, ADM, LAM, MUL
Full-word Logic	BCL, BSE, BCO
Full-word Comparison	SAE, SRO
Half-word Operations	LDH, STH, SHD
a-class Operations	SET, XSK
Program Control	JMP
Shift and Rotate	ROL, ROR, SCR
Skips	APO, AZE, LZE, QLZ, FLO, SNS,
	SXL, KST, SKP, STD, TWC
Miscellaneous	HLT, CLR, COM, NOP, QAC
Console Switches	LSW, RSW
Mode Control Switch	PDP
I/O Bus Enable	IOB
Memory Address Control	LIF, LDF, IOB/IOTs
Program Interrupt	IOB/IOTs, DJR
Special Functions	ESF, SFA

Instructions related to the Display, Data Terminal, and LINCtape are described in Sections 3.4, 3.5, and 3.6.

In general, the description of each instruction is presented in the following manner:

MnemonicOperation PerformedFormOctal codeExecution timeOperation

The second line shows the general form of the instruction when used in a program. The octal code is that of the instruction itself, plus the octal value of any other elements which may be present, such as the I-bit or  $\beta$ -register bits. (The I-bit, for example, being represented by bit 7, has an octal value of 20 when it is present.)

# 3.3.3 Full-Word Instructions

3.3.3.1 Full-Word Data Transfers – These three instructions move complete 12-bit words between the Accumulator and Memory.

STC Store and Clear (Direct Address)

Form:	STC Y
Octal code:	4000+ Y
Execution time:	3.2 µs
Operation:	Store the contents of the AC in register Y, then clear the AC. This is a direct address
	instruction; Y must be in the Instruction Field.

# LDA Load Accumulator (β-Class)

Form:	LDA Ι β
Octal code:	$1000 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	Place the contents of register Y, where Y is the address specified by I and $C(\beta)$ , in the AC. The
	previous contents of the AC are lost; the contents of Y are unchanged.

STA Store Accumulator (β-Class)

Form:	STA Ι β
Octal code:	$1040 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	Store the contents of the AC in memory register Y, where Y is the address specified by I and
	$C(\beta)$ . The previous contents of Y are lost; the contents of the AC are not changed.

3.3.3.2 Full-Word Arithmetic – The instructions ADD, ADA, and ADM use one's complement arithmetic. If, as a result of an addition, a 1 is carried out of bit 0 of the sum, 1 is added to the sum. This *end-around carry* is the defining property of a one's complement addition. If there is no carry, the sum is left as is.

Example 1:	2435 +1704	
	4341	no carry; sum is left as is.
Example 2:	2435	
	<u>+5704</u> (-2073)	
	(1 0341)	end-around carry; 1 added to sum.
	0342	

In either case, the Link is not affected.

The instruction LAM uses two's complement arithmetic. If a carry from bit 0 of the sum occurs, the Link is set to 1; the sum is left unaffected.

3.3.3.2.1 **Overflow** – In any LINC mode addition, a number is considered to be positive if its high-order bit (bit 0) is 0, and negative if this *sign* bit is 1. Whenever two addends of like sign produce a sum of opposite sign, overflow is said to occur. When this happens, the FLOW flip-flop is set to 1. If no overflow occurs, the FLOW flip-flop is set to 0. Overflow cannot, by definition, occur when the addends have unlike signs. Note that overflow and carry are not the same thing.

#### 3.3.3.2.2 Instructions

ADD Add to Accumulator (Direct Address)

Form:	ADD Y
Octal code:	2000 + Y
Execution time:	3.2 µs
Operation:	The contents of register Y are added to the contents of the AC, using one's complement addition; the sum is left in the AC. The previous $C(AC)$ are lost; the Link and $C(Y)$ are not changed.

# ADA Add to Accumulator ( $\beta$ -Class)

Form:	ADA I $\beta$
Octal code:	$1100 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	The contents of register Y, as specified by I and $C(\beta)$ , are added to the contents of the AC,
	using one's complement addition; the sum is left in the AC. The previous C(AC) are lost; the
	Link and $C(Y)$ are not changed.

ADM Add to Memory ( $\beta$ -Class)

Form:	ΑDΜ Ι β
Octal code:	$1140 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	The contents of register Y, as specified by I and $C(\beta)$ , are added to the contents of the AC,
	using one's complement addition; the sum is left in both the AC and Y. The previous contents
	of both registers are lost; the Link is not changed.

LAM Link Add to Memory ( $\beta$ -Class)

Form:	LAM I $\beta$
Octal code:	$1200 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00

# NOTE

This description presents the logical sequence of events; in practice, the operations are carried out simultaneously.

Operation:

The contents of the Link are added to the contents of the AC, using two's complement addition; the sum is left in the AC. If there is a carry out of bit 0, the Link is set to 1; if not, the Link is cleared. Next, the contents of register Y, as specified by I and  $C(\beta)$ , are added to the new contents of the AC, again using two's complement addition; the sum is left in both the AC and Y. If there is a carry from bit 0 this time, the Link is set to 1; if not, the Link is unchanged.

Example:			C(AC) = 3743	C(Y) = 6517	C(L) = 1
	(1)	C(AC) +C(L)	3743 + 1 3744	no carry; Link is cleared.	
	(2)	C(AC)	3744 +6517 1 2463	carry; Link is set to 1.	
Results:			C(AC) C(Y) C(L)	= 2463 = 2463 = 1	

# MUL Multiply (β-Class)

Form:	MUL Ι β
Octal code:	$1240 + 20I + \beta$
Execution time:	9.6 $\mu$ s; 8 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	The contents of the AC (multiplicand) are multiplied by the contents of register Y
	(multiplier). The product is left in the AC and the MQ. The sign of the product appears in the
	Link and $AC_0$ .

The multiplier and multiplicand are treated as 12-bit one's-complement numbers. If bit 0 of an operand is set to 1, the operand is negative. The sign of the product is always correct; that is, operands of like sign give a positive product, and operands of unlike sign give a negative product. Overflow cannot occur; the FLOW flip-flop is not affected by multiplication.

Either integer or fractional operands may be specified, as follows: if bit 0 of the designated  $\beta$ -register contains a 0, the operands are treated as integers; the binary points of both multiplier and multiplicand are considered to be to the right of bit 11. If  $C(\beta_0) = 1$ , the operands are taken as fractions; the binary points are considered to be between bit 0 (sign) and bit 1. Note that when I = 1 and  $\beta = 00$ , there is no effective address. In this case, integer multiplication is performed.

When integer multiplication is performed, the low-order 11 bits of the product appear in  $AC_{1-11}$  and the absolute value of the low order 11 bits of the product appears in  $MQ_{0-10}$ . The sign appears in  $AC_0$  and the Link. The high-order bits of the product are lost.

When fractional multiplication is performed, the high-order 11 bits of the product appear in  $AC_{1-11}$  and the absolute value of the low-order bits appears in bits  $MQ_{0-10}$ . The sign appears in  $AC_0$  and the Link. The contents of the MQ can be accessed by using the QAC instruction (see Paragraph 3.3.11).

*Examples:* (all octal form)

(1)	Integers

(a.)	0432 <u>x0006</u> 00003234	C(AC) C(Y) product	C(AC)=3234	C(MQ)=64	70
(b.)	2764 <u>x0153</u> 00476374		C(AC)=2374	C(MQ)=47	70
(c.)	2764 <u>x7624</u> 77301403	(= -153) (= -00476374)	C(AC)=5403	(= -3154)	C(MQ)=4770


(2)	Fractions				
	(a.)	0432 <u>x0006</u> 00003234	C(AC) C(Y) product	C(AC)=0000	C(MQ)=6470
	(b.)	2764 <u>x0153</u> 00476374	C(AC) C(Y) product	C(AC)=0117	C(MQ)=4770
	(c.)	2764 <u>x7624</u> 77301403	C(AC) C(Y) (-00476374)	C(AC)=7660	C(MQ)=4770

# 3.3.4 Full-Word Logic

In each of these Boolean functions, the operation is performed between corresponding bits of the AC and the operand, independent of the other bits in either word.

BCL Bit Clear (β-Class)

Form:	BCL I $\beta$
Octal code:	$1540 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	For each bit of the operand that is a 1, the corresponding bit of the AC is cleared to 0. For each operand bit that is a 0, the corresponding AC bit is unchanged. The operand is not changed. The following truth table gives the relationship between the corresponding bits, with the results of the comparison.

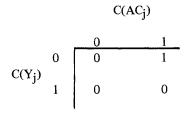


The Boolean statement of this relation is AC  $\Lambda \overline{Y}$ .

Example	C(AC)=2307	010011000111
	C(Y) = 1616	001110001110
	Result:=2101	010001000001

# BSE Bit Set (β-Class)

Form:	BSE I $\beta$
Octal code:	$1600 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	For each bit of the operand that is a 1, the corresponding bit of the AC is set to 1. For each operand bit that is 0, the corresponding AC bit is not changed. The operand is not affected. The truth table for this relation, which is the familiar inclusive OR, is as follows:

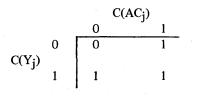


The Boolean statement of this relation is AC V Y.

Example	C(AC)=2307	010011000111	
	C(Y) =1616	001110001110	
	Result:=3717	011111001111	

BCO Bit Complement (β-Class)

Form:	ΒΟΟ Ι β
Octal code:	$1640 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	For each bit of the operand that is a 1, the corresponding bit of the AC is complemented. For
	each operand bit that is 0, the corresponding AC bit is unchanged. The operand is not changed.
	The truth table for this relation, which is the exclusive OR, is as follows:

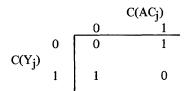

The Boolean statement of this relation is AC + Y.

Example	C(AC)=2307	010011000111	
	C(Y) =1616	001110001110	
	Result:=3511	011101001001	

#### 3.3.5 Full-Word Comparison

In both of these operations, the next succeeding memory location in the program sequence is skipped if the stated condition is met. When  $\beta \neq 00$ , this presents no unusual circumstance. When  $\beta = 00$ , however, the memory location immediately following the skip instruction contains either the operand itself or its address. When such is the case, this location is automatically skipped, and the one beyond that is considered to be the next location in the program sequence. If a skip occurs under these conditions, the program will proceed from the third location following the skip instruction.

SAE Skip If Accumulator Equal To Operand ( $\beta$ -Class,	SAE	Skip It	<sup>c</sup> Accumulator	Equal To C	)perand (	'β-Class)
--	-----	---------	--------------------------	------------	-----------	-----------

Form:	SAE Ι β
Octal code:	$1440 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	If the contents of the Accumulator are equal to the contents of Y (where Y is specified by I
	and $\beta$ ), the next instruction in the program sequence is skipped. Otherwise, the program
	continues without skipping. The contents of the AC and of Y are not changed.

#### SRO Skip and Rotate (β-Class)

Form:	SRO Ι β
Octal code:	$1500 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s. when I = 1 and $\beta$ = 00
Operation:	Bit 11 of the operand is tested. If it is a 0, skip is set and the operand is rotated right one
	place. If bit 11 is a 1, no skip takes place, but a rotate right one place still occurs.

#### Example:

ADDRESS	OCTAL		CONTENTS *20	REMARKS
0020	1520	P,	SRO I 0	<b>/THE OPERAND IS IN REG 21</b>
0021	3725	P1,	3725	/OPERAND BIT 11=1, SO NO SKIP
0022	0016	P2,	NOP	/PROGRAM CONTINUES FROM HERE
0023	0016	P3,	NOP	

After the test is performed, the contents of P1 are rotated right one place; the result, which is retained in P1, is 5752. If the instruction in register P were then to be executed again, the skip would occur, because the new contents of bit 11 of P1 equal 0. The program would then proceed from register P3, skipping the instruction in P2.

#### 3.3.6 Half-Word Operations

3.3.6.1 Half-Word Addressing – The three instructions, LDH, STH, and SHD, operate on either half of a memory register, independent of the other half. The addressing scheme is basically that of other  $\beta$ -class instructions, with the following difference: whenever bit 0 of the register containing the effective address holds a 0, the left half of the addressed operand is used; when bit 0 contains a 1, the right half is used. In either case, the data is transferred or compared between the designated half of the operand and the right half of the AC.

The following examples demonstrate the effects of half-word addressing. The instruction LDH transfers the designated half of the operand into the right half of the AC; the left half of the AC is cleared.

a. LDH 0 I = 0,  $\beta$  = 00. C(R) = 0370. (R is the register following LDH). The effective address is 0370. Because C(R<sub>0</sub>) = 0, the contents of the left half of register 0370 are placed in the right half of the AC, and the left half of the AC is cleared.

b. LDH 12  $I = 0, \beta = 12, C(0012) = 4370$ . Bit 0 of  $\beta$ -register 12 contains a 1; therefore, the contents of the right half of register 0370 are placed in the right half of the AC, and the left half of the AC is cleared.

c. LDH I 0 I = 1,  $\beta$  = 00. C(R) = 6527. This is a direct reference, so that there is no explicit effective address. In this case, the left half of the operand in register R is taken. In the example, the quantity 65 is placed in the right half of the AC, and the left half of the AC is cleared.

d. LDH I 12 I = 1,  $\beta$  = 12. C(0012) = 0370.

The effective address (that is, C(0012)) must be incremented before it is used. Instead of 1, however, 4000 is added to the contents of the  $\beta$ -register (remember that the half-word indicator is in bit 0). Given the conditions specified above, the contents of  $\beta$ -register 12 are first augmented from 0370 to 4370, and the right half of the operand in register 0370 is taken. If a second LDH I 12 is then executed, the  $\beta$ -register is again incremented by 4000. The sum, which leaves C( $\beta_0$ )=0, results in a carry out of the high-order bit. The carry causes 1 to be added to the sum, resulting in a final effective address of 0371. The new operand is then taken from the left half of the new register. The indexing sequence is thus: left half, right half, left half of the next succeeding register, etc.

Because the basic indexing scheme is operative only over bits 2-11 of the  $\beta$ -register, half-word addressing proceeds from the right half of register 1777 to the left half of register 0000, and from the right half of register 3777 to the left half of register 2000. C( $\beta$ ) are thus incremented from 1777 to 5777 to 0000, and from 3777 to 7777 to 2000.

# NOTE

Another way of looking at the half-word indicator may help clarify this method of addressing. If the indicator is considered to be just to the right of bit 11, rather than in bit 0, it becomes apparent that half-word indexing is just like full-word indexing, with 1 added to the low-order bit (that is, the half-word indicator) each time. You can, if you like, imagine a binary point between the half-word indicator and bit 11 of the  $\beta$ -register, so that successive addresses might be read as 0370, 0370 1/2, 0371, 0371 1/2, 0372, etc. (Or, in octal, 0370.0, 0370.4, 0371.0, 0371.4, 0372.0, etc.)

# LDH Load Half

Form: Octal code:	LDH I $\beta$ 1300 + 20I + $\beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s when I = 1 and $\beta$ = 00
Operation:	The contents of the designated half of register Y (where Y is specified by I and $C(\beta)$ ) are placed in the right half of the Accumulator. The left half of the AC is cleared. The previous $C(AC)$ are lost. The contents of Y are not changed.

STH Store Half

Form:	STH Ι β
Octal code:	$1340 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s when I = 1 and $\beta$ = 00
Operation:	The contents of the right half of the Accumulator are stored in the designated half of register
	Y. The contents of the AC and of the other half of Y are not disturbed.

### SHD Skip If Half Differs

Form:	SHD Ι β
Octal code:	$1400 + 20I + \beta$
Execution time:	4.8 $\mu$ s; 3.2 $\mu$ s when I = 1 and $\beta$ = 00
Operation:	If the contents of the designated half of register Y are not equal to the contents of the right
	half of the AC, the next instruction in the program sequence is skipped; otherwise, the
	program proceeds without skipping. The contents of Y and of the AC are not changed. As in
	the other $\beta$ -class skips (SAE, SRO), the register immediately following the SHD is
	automatically passed over when $\beta = 00$ .

### 3.3.7 a-Class Operations

Each of these instructions uses the registers 0000-0017 in a unique way. A third *a*-class instruction, DIS, is described in Paragraph 3.4, CRT Display.

# SET Set a-Register

Form:	SET I a
Octal code:	0040 + 20I + a
Execution time:	6.4 $\mu$ s; 4.8 $\mu$ s when I = 1
Operation:	The contents of the $a$ -register specified by bits 8-11 of the SET instruction are replaced by the operand, whose location is determined by the state of the I-bit, as follows:

If I = 1, the operand is in the register immediately following that containing the SET instruction.

If I = 0, the effective address of the operand is in the register immediately following that containing the SET instruction.

SET always requires two successive locations; the program always continues from the second register following, as in this example:

Address	Contents	Action
р р+1	SET I 15 2537	/THE OPERAND IS IN REGISTER p+1 /OPERAND 2537 IS STORED IN REGISTER 15
p + 2		/PROGRAM CONTINUES FROM THIS REGISTER

The previous contents of the *a*-register are lost. The AC is not disturbed, and the contents of the register containing the operand are not changed.

### XSK Index and Skip

Form:	XSK I $a$
Octal code:	0200 + 20I + $a$
Execution time:	3.2 $\mu$ s
Operation:	If I = 1, the contents of the designated <i>a</i> -register are incremented by 1, using 10-bit two's complement addition as in $\beta$ -class indexing. If I = 0, <i>a</i> is left undisturbed. Then if the contents of bits 2-11 of the <i>a</i> -register are equal to 1777, the next instruction in the program sequence is skipped. Otherwise, the skip does not occur.

When C(a) are incremented, the two high-order bits are not affected. Thus, 1777 is incremented to 0000, 3777 to 2000, etc.

### 3.3.8 Program Control

JMP Jump

Form:	JMP Y
Octal code:	6000 + Y
Execution time:	3.2 $\mu$ s when Y $\neq$ 0000; 1.6 $\mu$ s when Y = 0000
Operation:	The quantity Y is placed in $PC_{2-11}$ , and the next instruction is taken from register Y. The
	program proceeds from that point.

If  $Y \neq 0000$ , the 10-bit address of the register immediately following the JMP instruction (i.e., the contents of the Program Counter) is stored in location 0000 of the Instruction Field as a JMP instruction. This permits the JMP to be used not only as an unconditional transfer of program control, but also as a subroutine calling instruction. If Y = 0000, the jump is executed, but nothing is stored in register 0000. JMP 0 is used to return from a subroutine, as shown in the example. (See the DJR instruction, Paragraph 3.3.15.4, for use of JMP in conjunction with the DJR instruction.)

Example				
ADDRESS	OCTAL		CONTENTS	REMARKS
			*0000	
0000	0000	0000,	0000	/WILL CONTAIN 6573 AFTER JMP 175 IS /EXECUTED
0001	0000		*0175	
0175	0016		NOP	<b>/START OF LINEAR SUBROUTINE WHICH</b>
0176	0000			/CONTAINS NO JMP INSTRUCTIONS
0177	0000		· · · *0242	
0242	6000		JMP 0	/RETURN FROM SUBROUTINE
0243	0000			
0244	0000		*0572	
0572	6175		JMP 175	JUMP TO SUBROUTINE AT REGISTER 0175
0573	0017		NOP	/SUBROUTINE RETURNS TO THIS LOCATION
0574	0000		•	
0575	0000		•	

When JMP 175 is executed,  $C(PC_{2-11}) = 0573$ . This, combined with 6000 (the octal code for JMP), is placed in register 0000. When the subroutine has finished, JMP 0 transfers program control to register 0000, where JMP 573 is executed, returning control to the calling program. (At the same time, JMP 1 is stored in register 0000, but that is incidental to the actions of interest here.)

When a new Instruction Field has been selected (see paragraph 3.3.14. Memory Address Control), the first JMP Y ( $Y \neq 0000$ ) following the field selection performs the actual switching of the field; the target register of the JMP is in the new field, and the return jump is stored in register 0000 of the new Instruction Field. JMP 0 has no effect on the field registers.

### 3.3.9 Shift and Rotate Operations

These instructions rotate the contents of the Accumulator left or right, or shift them right (scaling), propagating the sign bit. A single instruction can cause a shift of up to  $17_8$  bit positions, or 1-1/2 times the length of the AC. On shifts or rotations right, the MQ is treated as a 12-bit extension of the AC, so that bits shifted out of  $AC_{11}$  enter  $MQ_0$ , as shown in Figures 3-7 and 3-8. In all these operations, the Link is included when I = 1 and excluded when I = 0. Execution times depend on the number of positions shifted.

ROL Rotate Left

Form:	ROL I N
Octal code:	$0240 + 20I + N, 0 \le N \le 17_8$
Execution time:	1.6 - 6.4 μs
Operation:	The contents of the AC are rotated left N places. If I = 1, the Link is included. The rotation
	scheme is shown in Figure 3-6. The contents of the MQ are not affected.

3-16

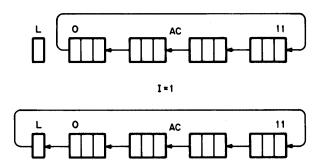


Figure 3.6. Rotate Left


ROR Rotate Right


ROR I N

 $0300 + 20I + N, 0 \le N \le 17_8$ 

Form: Octal code: Execution time: Operation:

 $1.6 - 6.4 \,\mu$ s The contents of the AC are shifted right N places. Bits shifted out of AC<sub>11</sub> enter MQ<sub>0</sub>, and are shifted down the MQ. Bits shifted out of MQ<sub>11</sub> are lost. If I = 1, the Link is included in the rotation. The scheme is shown in Figure 3-7.

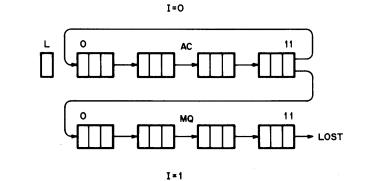

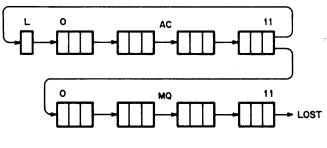

12-0116

Figure 3-7. Rotate Right

# SCR Scale Right

Form:	SCR I N
Octal code:	$0340 + 20I + N, 0 \le N \le 17_8$
Execution time:	1.6 - 6.4 μs
Operation:	The contents of the AC are shifted right N places. The sign bit (contents of $AC_0$ ) is not
	changed, and is placed in the N bits to the right of $AC_0$ . Bits shifted out of $AC_{11}$ enter $MQ_0$ ,
	and are shifted down the MQ. Bits shifted out of $MQ_{11}$ are lost. If I=1, bits shifted out of

and are shifted down the MQ. Bits shifted out of  $MQ_{11}$  are lost. If I=1, bits shifted out of  $AC_{11}$  also enter the Link, so that, at the completion of the operation,  $C(L) = C(MQ_0)$ . If I = 0, the Link is unaffected. The shifting scheme is shown in Figure 3-8.

Example:

C(AC) = 4371	C(MQ) = 0000
Instruction:	SCR I 6

Because I = 1, the Link will receive the contents of  $AC_{11}$  at each shift. The result of the operation:

C(AC) = 7743	The sign bit, which was 1, is loaded in the vacated bits $(AC_{1-6})$
C(MQ) = 7100	Bits shifted out of the AC entered the MQ at the high-order end.
C(L) = I	The last bit shifted out of $AC_{11}$ was a 1. Check: $C(L) = C(MQ_0)$ .

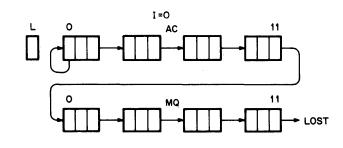


Figure 3-8. Scale Right

### 3.3.10 Skips

These instructions test the states of various registers, flip-flops, and external inputs. In every case, the next succeeding instruction in the program sequence is skipped if

(1)	I = 0 and the condition is met
or	
(2)	I = 1 and the condition is not met

Otherwise, the program proceeds without skipping.

The skip instructions (with the exception of the unconditional skip instruction, SKP) have an associated "skip condition", such as a register being cleared or one of the external digital inputs ("external levels") being asserted. If the skip condition is met (e.g., the register is cleared or the external level is asserted) at the time the instruction is executed, a skip occurs. This means that the next instruction is taken from the second location following the skip instruction, rather than from the usual location. Normally, the skip instruction is followed by a single-word instruction that is skipped or executed according to whether or not the tested condition was met. No distinction is made between single- and double-word instructions; if the skip instruction if a skip occurs. Generally skip instructions should not be followed by double-word instructions. In the skip instructions discussed here, (but not in the "addressable" skips: SHD, SAE, and SRO), the i bit inverts the sense of the skip. That is, if the i bit is zero, the instruction skips only if the skip condition is met. If the i bit is a one, the skip occurs only if the condition is not met.

#### APO Accumulator Positive

Form:	APO I
Octal code:	0451 + 20I
Execution time:	1.6 µs
Condition:	The sign bit (contents of $AC_0$ ) is 0, that is, $C(AC)$ is a positive number.

#### AZE Accumulator Zero

Form:	AZE I
Octal code:	0450 + 20I
Execution time:	1.6 µs
Condition:	The contents of the AC equal 0000 (+0) or 7777 (-0).

LZE Link Zero

Form:	LZE I
Octal code:	0452 + 20I
Execution time:	1.6 μs
Condition:	The contents of the Link equal 0.

#### QLZ MQ Low-Order Bit Zero

Form:	QLZ I
Octal code:	0455 + 20I
Execution time:	1.6 μs
Condition:	The contents of $MQ_{11}$ equal 0. (This is identical to the LINC-8 instruction, ZZZ.)

FLO Overflow

Form:	FLO I
Octal code:	0454 + 20I
Execution time:	1.6 μs
Condition:	The FLOW flip-flop is set to 1. When overflow occurs as the result of an addition (ADD, ADA,
	ADM, or LAM), the FLOW flip-flop is set to 1. If overflow does not occur as a result of the
	above instructions, the FLOW flip-flop is cleared.

SKP Skip Unconditionally

Form:	SKP I
Octal code:	0456 + 20I
Execution time:	1.6 μs
Condition:	The next instruction is skipped unconditionally. (In LINC-8 and early PDP-12 assembly
	programs SKP was defined as 466.)

The following skips test for various external input conditions.

IBZ LINCtape Inter-Block Zone

Form:	IBZ I
Octal code:	0453 + 20I
Execution time:	1.6 µs
Condition:	If the selected LINCtape unit is in one of the inter-block zones and the tape is moving, the next instruction is skipped. This instruction will sense an IBZ only if the tape is in motion (i.e., only after a tape instruction with " $I = 1$ ").
SNS Sense Switch	

Form:	SNS I N
Octal code:	$0440 + 20I + N, 0 \le N \le 5$
Execution time:	1.6 μs
Condition:	Sense Switch N on the Operator's Console is set to 1. If I=1, the skip will occur when the selected switch is set to 0.

SXL Skip On External Level

Form:	SXL I N
Octal code:	$0400 + 20I + N, 0 \le N \le 17_8$
Execution time:	1.6 µs
Condition:	An external input level is $+3v$ . If I = 1, the skip will occur when the external level is at ground
	(0V). In the basic PDP-12, only three of these levels have been defined; the others are available
	for the user's options. When nothing is connected to the External Level Lines, they are
	preloaded to +3V. These external levels are digital inputs to the I/O bus, and should not be
	confused with the analog inputs to the A-D Converter.

# NOTE

The connection for the External Level lines is made via the I/O Bus cables (see Chapter 5).

The three defined levels and their mnemonics are:

SXL	I	15	(KST)	Key Struck (See below)
SXL	Ι	16	(STD)	Tape Instruction Done (See Paragraph 3.6.9)
SXL	Ι	17	(TWC)	Tape Word Complete (See Paragraph 3.6.14)

KST Key Struck

Form:	KST I
Octal code:	0415 + 20I
Execution time:	1.6 µs
Condition:	A key has been struck on the ASR-33 keyboard, the character code has been assembled in the Teletype buffer, and the Keyboard flag is raised. (The flag is cleared when the character is read into the AC.)

# 3.3.11 Miscellaneous

These instructions perform various tasks. All are self-contained and require no memory references.

# HLT Halt

Octal code:	0000 1.6 μs to fetch and decode
Execution time:	$1.0 \ \mu s$ to retch and decode
Operation:	The computer stops. The contents of the AC, MQ, Link, and other active registers and flip-flops are not affected. The Program Counter contains the address of the register immediately following the HLT. If the operator presses CONTINUE, the program resumes from the point indicated by the C(PC).

CLR Clear

Octal code:	0011
Execution time:	1.6 μs
Operation:	The AC, MQ, and Link are cleared to zero. No other registers or flip-flops are affected.

COM Complement AC


Octal code:	0017
Execution time:	1.6 µs
Operation:	The contents of the AC are complemented. Bits containing 0s are changed to contain 1s, and vice versa. No other registers are affected.


NOP No Operation

Octal code:	0016
Execution time:	1.6 μs
Operation:	None. Nothing happens. NOP provides a $1.6-\mu$ s delay, and is often used to hold a place in the
	program for instructions which might be changed or added during the course of execution.

QAC Place MQ in AC

Octal code:	0005
Execution time:	1.6 µs
Operation:	The contents of $MQ_{0-10}$ are placed in $AC_{1-11}$ . $AC_0$ is cleared. This instruction provides access
	to the low-order bits of a fractional product. Figure 3-9 shows the transfer path.

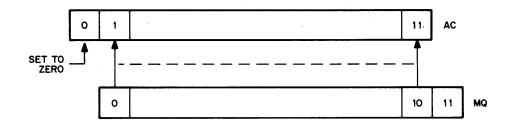

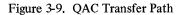

To obtain all 12 bits of the MQ, the following program sequence may be used:

OCTAL CODE	INSTRUCTION	REMARKS
	* 0020	·
0005	QAC	/C(MQ0-10) PLACED IN AC1-11
0241	ROL I	/ROTATE C(AC) LEFT 1 PLACE, WITHOUT LINK.
0475	QLZ I	/SKIP IF C(MQ11) = 1
6026	JMP .+3	/C(MQ11) = 0. JUMP TO THIRD REGISTER BEYOND.
1620	BSE I	/C(MQ11) = 1. SET AC11 EQUAL TO 1.
0001	0001	/OPERAND TO SET AC11

(QAC is identical to the LINC-8 instruction, ZTA.)

# 3.3.12 Console Switches

These instructions provide access to the states of the switches in the Left and Right Switch Registers on the Operator's Console. The I-bit has no effect in these instructions.

LSW Left Switches

Octal code:	0517
Execution time:	1.6 μs
Operation:	The contents of the Left Switches Register on the Console are placed in the AC. The previous $C(AC)$ are lost.

RSW Right Switches

Octal code:	0516
Execution time:	1.6 µs
Operation:	The contents of the Right Switches Register are placed in the AC. The previous C(AC) are lost.

# 3.3.13 Mode Control

PDP Switch To The 8 Mode

Octal code:	0002
Execution time:	1.6 μs
Operation:	Beginning with the next succeeding instruction, the central processor will operate in the 8 mode; all subsequent instructions are interpreted as PDP-8 operations. A similar instruction, LINC (6141), in the PDP-8 mode instruction set, causes a switch to LINC mode.

# 3.3.14 Input/Output Bus

In addition to the input and output devices controlled directly by LINC instructions (see Paragraphs 3.4, 3.5, and 3.6), the LINC mode program also has direct access to any device connected to the PDP-12 I/O Bus. By using the special two-word enabling instruction, IOB, any 8 mode IOT instructions can be included within a LINC program sequence.

# IOB I/O Bus Enable

Form:	IOB (first word) IOT (second word)
Octal code:	0500 (first word)
Execution time:	5.9 µs
Operation:	The IOT timing chain is activated by the second word of this instruction. Bits 3-11 of this
	second word are interpreted as a PDP-8 IOT command; bits 0-2 have no effect.

# Example 1:

The following sequence may be used to read and store a character from the high-speed tape reader:

IOB	/ENABLE I/O BUS
RRB	<b>/READ TAPE READER BUFFER</b>
STA 14	/STORE IN REGISTER SPECIFIED BY C(0014)
• • • •	

# Example 2:

The following sequence waits for the high-speed reader flag and then reads the character buffer

OCTAL CODE	INSTRUCTION	REMARKS
	* 0020	
0500	IOB	/ENABLE I/O BUS
6011	RSF	/SKIP IF HIGH-SPEED READER FLAG IS SET
6020	<b>JMP</b> 2	/NOT SET. GO BACK TWO SPACES
0500	IOB	/FLAG IS SET. ENABLE THE BUS, AND
6016	RRB	<b>/READ THE CHARACTER</b>
	• • • •	

Note that, in the skip loop, the program must jump back two locations, because the IOB must be executed each time.

Several IOB/IOT pairs are used in LINC Memory Address Control and Program Interrupt operations.

#### 3.3.15 Memory Address Control

The two memory Fields used by a LINC program are program-selectable. The assignments are made by setting the two 5-bit Memory Field Registers, which can address any of 32 1024-word memory segments. Considered with respect to the physical configuration of memory, the three high-order bits of each Field Register determine which 4096-word memory bank is to be used, while the two low-order bits specify one of the four segments within that bank. The two LINC memory Fields need not be adjacent, or in any particular order. Normally, however, they would not be assigned to the same segment.

In addition to the Instruction Field (IF) and Data Field (DF) Registers described in Chapter 1, the PDP-12 Memory Control contains two other registers of interest to the LINC mode programmer.

3.3.15.1 Instruction Field Buffer (IB) 5 Bits – This register holds the number specifying a new Instruction Field. Once loaded, its contents are transferred to the IF at the occurrence of the next JMP Y instruction.

3.3.15.2 Save Field Register (SF) 10 Bits – Whenever the Instruction Field is changed, either by programmed action or by a program interrupt or trap, the contents of the IF and DF are placed in the Save Field Register. From the SF, the Contents of the IF and DF can be restored, so that execution of an interrupted program, for example may be resumed. The contents of the SF may be read into the AC. (See also the Program Interrupt discussion in Paragraph 3.3.15.4.) For historical reasons the SF is also called Interrupt Buffer in some places.

3.3.15.3 Memory Control Programming – The Instruction Field and Data Field registers can be loaded directly, using LINC mode instructions.

LIF Load LINC Instruction Field Buffer

Field Register.

Form: Octal code: Execution time: Operation:	LIF N $0600 + N, 0 \le N \le 37_8$ $1.6 \mu s$ The five-bit quantity N is placed in the Instruction Field Buffer (IB). The present contents of the IF and DF are transferred to the Save Field Register (SF). When the next JMP Y instruction (Y $\ne$ 0000) is executed, N is transferred from the IB to the Instruction Field Register. The return JMP is stored in location 0000 of the new Instruction Field, and program control is transferred to register Y of the new Instruction Field.
	The automatic saving of the IF and DF in the Save Field Register is especially useful when subroutines are called across memory fields; that is, when a called subroutine is located in a memory field other than the current one. The subroutine may pick up the field information needed in obtaining arguments and generating subroutine returns by interrogating the Save

The execution of the LIF instruction will internally inhibit the execution of a Program Interrupt even if ION has been given. This Interrupt Inhibit lasts from the LIF instruction until the first LINC mode JMP instruction is fetched and executed in the newly selected Instruction Field. This allows the Save Field Register to be used for cross field subroutine linkage in programming which uses the Program Interrupt. (See the DJR instruction, Paragraph 3.3.15.4, for an explanation of DJR/LIF/JMP combinations.)

Because LINK Instruction Trap (see Paragraph 3.3.17) also uses the Save Field Register for program linkage, an instruction which will be trapped must not be given between an LIF and the next JMP Y ( $Y \neq 0000$ ) if the cross field reference will ultimately need the Save Field Register linkage information.

# Example:

Address	Action	Contents
р	LIF 5	/5 IS PLACED IN THE IB /C(IF) AND C(DF) ARE PLACED IN THE SF
 p + k	JMP 1000	/C(IB) ARE TRANSFERRED TO THE /IF. JMP P + K + 1 IS STORED IN REGISTER /0000 OF FIELD 5, AND THE PROGRAM /PROCEEDS FROM REGISTER 1000 OF FIELD 5

The program is operating in Field 2. Control is to be transferred to location 1000 of Field 5.

JMP 0 has no effect on the Memory Field registers. If it is used to return to a calling program in a different field, the change of field is effected by the JMP instruction stored in register 0000 of the subroutine's field.

(LIF replaces the LINC-8 instruction, LMB)

LDF Load LINC Data Field Register

Form:	LDF N
Octal code:	0640 + N, $0 \le N \le 37_8$
Execution time: Operation:	1.6 $\mu$ s The 5-bit quantity N is placed in the Data Field Register. All subsequent indirect references to the Data Field are made to the newly selected field. The previous C(DF) are lost. The contents of the other Memory Control registers are not affected.

(LDF is identical to the LINC-8 instruction, UMB)

The contents of the Memory Field Registers can be examined by using the following IOB/IOT pairs.

IOB RIF Read Instruction Field

Octal code:	0500 6224
Execution time:	5.9 µs
Operation:	The contents of the Instruction Field Register are ORed into bits $AC_{6-10}$ . The remaining AC
	bits are unaffected, and the contents of the IF are unchanged.

# NOTE

When executed in LINC mode, the three IOT instructions, RIF, RDF, and RIB, are the only cases where an IOT has a slightly different function than when executed in 8 mode. For these instructions, all five bits of the IF and/or DF are read into the AC when in LINC mode, while only the most significant three bits of each are used in 8 mode.

IOB RDF Read Data Field

Octal code:	0500
	6214
Execution time:	5.9 µs
Operation:	The contents of the Data Field Register are ORed into bits $AC_{6-10}$ . The remaining AC bits are unaffected, and the contents of the DF are not changed.

3.3.15.4 Program Interrupt In LINC Mode – To facilitate the handling of data being transmitted to and from several peripheral devices, the PDP-12 includes a Program Interrupt Facility. When an external device is ready for servicing, a signal (flag) associated with that device is set. With Interrupt enabled, the following sequence of events will occur when a flag is set:

1. The instruction being executed at the time of the interrupt request is completed.

2. The contents of the Program Counter are stored in register 0040 of memory field 0 (regardless of the current Instruction Field assignment).

3. The contents of the Memory Field registers are placed in the Interrupt Buffer (Save Field Register).

4. Program execution proceeds from register 0041 of Memory Field 0.

The normal procedure from this point calls for the interrupt service routine beginning in location 0041 to determine which device flag caused the interrupt request, perform the appropriate tasks, restore the Memory Field registers, re-enable the interrupt, and jump back to the interrupted program at the point where the Program Interrupt occurred.

Whenever a change of LINC Instruction Field occurs, the Program Interrupt is inhibited (between Steps 1 and 2 above) until the first JMP is executed in the new field. This allows the programmer to obtain and save the contents of the SF after the Field change, before a waiting interrupt request destroys the contents of the SF.

The interrupt control instructions and related memory field instructions are all IOB/IOT pairs.

IOB ION Interrupt C	Dn
Octal code:	0500 6001
Execution time:	5.9 μs
Operation:	The Interrupt Facility is enabled immediately after the next succeeding instruction (following the ION) is executed. From that point on, any interrupt request will cause the sequence of events described above. If a device flag is already raised when the Interrupt is enabled, the waiting request is serviced immediately. The one-instruction delay before enabling the interrupt ensures that the interrupt service routine can return to an interrupted program before a new request is honored without losing its place.
IOD	

IOB

IOF Interrupt Off	
Octal code:	0500
	6002
Execution time:	5.9 µs
Operation:	The Interrupt is disabled. The facility is disabled immediately; subsequent requests will not cause an interrupt until the facility is enabled again.

The next two instructions are related to the Save Field Register, wherein the original contents of the IF and DF are stored whenever the contents of the IF are being changed, by an LIF instruction, or as the result of an Interrupt request or a Program Trap.

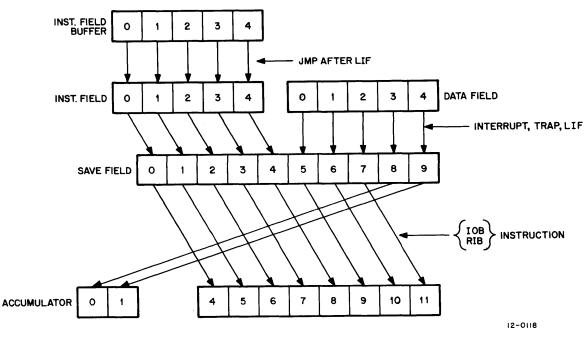


Figure 3-10. Data Path: IB, IF, DF, and AC

# IOB RIB Read Interrupt Buffer

Octal code:	0500
	6234
Execution time:	5.9 μs
Operation:	The contents of the Interrupt Buffer (Save Field Register) are ORed into bits AC <sub>0-1</sub> and
	$AC_{4-11}$ , as shown in Figure 3-10. $AC_{2-3}$ and the contents of the SF are unchanged.
	RIB is most commonly used immediately after a change of instruction field or a program trap,

to save the record of the origin fields while the Program Interrupt is inhibited. (If inhibit were not provided, a waiting interrupt request could destroy the contents of the Save Field Register. The first JMP instruction executed after a trap or change of Instruction Field reenables the Interrupt.)

# IOB

RMF Restore Memory Fields

Octal code:	0500
	6244
Execution time:	5.9 $\mu$ s, including IOB
Operation:	The contents of $SF_{5-9}$ are placed in the Data Field Register, and the contents of $SF_{0-4}$ are placed in the Instruction Field Buffer. At the next occurrence of a JMP Y instruction (Y $\neq$ 0000), the contents of the IB are transferred to the IF, effecting a return to the proper field
	after servicing an interrupt request. The data transfer path is shown in Figure 3-11.

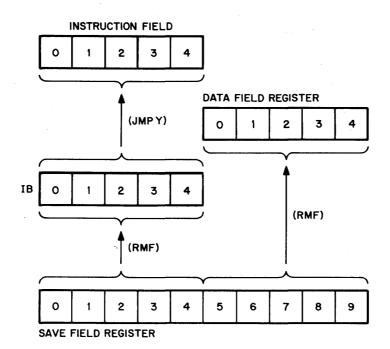


Figure 3-11. Data Path, RMF Instruction

DJR Disable JMP Return

Octal code:0006Execution time:1.6 μsOperation:DJR sets a flip-flop, preventing contents of Location 0000 from being changed when the next<br/>and only the next LINC mode JMP is given. The DJR instruction is used when returning from<br/>Program Interrupt or Trap service routines. The DJR should be given prior to the ION instruc-<br/>tions. This is useful because an interrupt can occur within a LINC mode subroutine that uses

### NOTE

Location 0000 of its IF to retain the subroutine return; hence, it must not be destroyed.

The DJR instruction causes an exception to the normal rule concerning JMP 0s. A JMP 0 following a DJR and LIF instruction causes a change of instruction fields, hence a jump to location 0 of the new field. This arrangement is necessary to facilitate return from an interrupt subroutine when the PC was pointing to location 0 of the main program prior to the interrupt. In the following example, if 0532 is replaced with 0, this feature of the DJR instruction is more clearly illustrated.

Because of this feature, extra care is required in the use of DJR instructions in subroutines. A DJR instruction cannot be indiscriminately sued when entering a subroutine if it is not known whether a JUMP $\neq$ 0 will be used prior to the use of a JUMP 0 required for return to the main routine. Such indiscriminate use of a DJR instruction could result in a JMP to 0 of the new field rather than to the correct location which is accessed by going through the 0 location of the subroutine field.

# Example:

A program operating in Field 7 is interrupted while the instruction in register 0531 is being executed.

(1) C(PC) are stored in location 0040 of Field 0.

(2) C(DF) and C(IF) are placed in the SF, as shown in Figure 3-10.

(3) Program execution resumes in location 0041 of Field 0; in other words, 00 is placed in the IF, and 0041 in  $PC_{2-11}$ .

(4) The interrupt is disabled.

The interrupt service routine must do three things. First, it sets up a return jump enabling the program to get back to the point of the break. Next, it identifies the cause of the request and services the condition. Finally, it restores the conditions prevailing at the time the interrupt occurred and returns to the main program. The following sequence shows how these tasks may be accomplished.

ADDRESS	OCTAL		CONTENTS	REMARKS
			*0040	
0040	0532		0532	CONTENTS OF PC AT TIME OF INTERRUPT
0041	4000		STC ACSAV	/SAVE C(AC), THEN CLEAR AC
0042	2040		ADD 0040	/SAVED ADDRESS (0532) TO AC
0043	1620		BSE I	/MAKE JMP INSTRUCTION: C(AC) /V C(0044)
0044	6000		6000	OCTAL CODE OF JMP INST.
0045	4071		STC RTN	/STORE JMP 532 AT END OF SERVICE /ROUTINE
0046	0000			/MAIN PART OF SERVICE ROUTINE, IF /NECESSARY
0047	0000			/OTHER ACTIVE REGISTERS (MQ,L,ETC)
0050	0000			SHOULD BE SAVED ALSO
0051	0000			ISTOCED DE SAVED RESO
0052	0016		NOP	
0053	0016		NOP	THE REST OF THE ROUTINE
0054	0016		NOP	
0055	0016		NOP	
0056	0000			
0057	0000			
0060	0500		IOB	/EXIT SEQUENCE, ENABLE IOT TIMING /CHAIN
0061	6244		RMF	/AND RESTORE MEMORY FIELDS, /(07 TO IB)
0062	4076		STC TEMP	CLEAR AC WITHOUT DISTURBING MQ AND L
0063	2000		ADD ACSAV	
0064	0006		DJR	SET PROCESSOR SO THAT NEXT JMP INST
0065	0000		Don	/WILL NOT STORE IN LOCATION ZERO OF
0066	0000			/MEMORY BANK TO WHICH JMP AT "RTN" /WILL GO
0067	0500		IOB	/ WIEL GO
0070	6001		ION	<b>/RE-ENABLE INTERRUPT</b>
0071	6532	RTN.	JMP 0532	JMP TO ORIGINAL FIELD
0072	0000		0.002	
0073	0000			
0074	0000			
0075	0000			
0076	0000	TEMP, RMF=6244 ION=6000	0000	

# 3.3.16 Special Functions

--!

A set of six Special Functions allows the LINC programmer to establish any of five operating states, or generate an I/O PRESET pulse. The special functions are determined by  $AC_{2-7}$ , as shown in Figure 3-12.

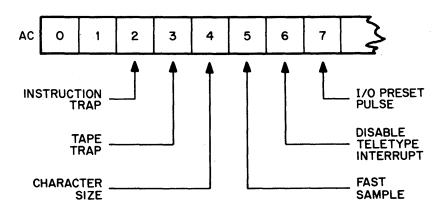


Figure 3-12. Special Functions

These functions have the following characteristics:

1. Instruction Trap Enable - Causes an immediate program interrupt to register 0141 when an undefined LINC instruction code is encountered.

The instruction trap is described in detail in Paragraph 3.3.17.

2. Tape Trap – When this function and Instruction Trap Enable are both set, a program interrupt to register 0141 will occur whenever a LINCtape instruction or one of the other trapped codes is encountered. The LINCtape instruction is not executed. Tape Trap is described in detail in Paragraph 3.6.13.

3. Character Size - This function determines the size of a character displayed on the CRT by the DSC instruction. It is described in detail in Paragraph 3.4.1.

4. Fast Sample - This function reverses the order of events of the SAM instruction; i.e., read the converter buffer and initiate a new conversion, then continue without pausing (see Paragraph 3.5.1).

5. Disable Teletype Interrupt – Interrupt requests from the ASR-33 Keyboard or Printer are inhibited No program interrupt will occur when either TTY flag is set even if the Interrupt Facility is enabled (see Chapter 6).

6. Generate I/O Preset – If this bit is set when the enabling instruction (ESF) is executed, an I/O PRESET pulse is generated clearing all device flags, disabling the Interrupt, clearing the Tape Extended Operations Buffer, and generating the TAPE PRESET pulse. Other Special Functions are cleared, or in the case of CHARACTER SIZE, set to full size. The active registers of the Central Processor are not affected, and the system continues to operate with RUN on. Any or all of these functions may be enabled at the same time, except that they are effectively nullified if I/O PRESET is given. All the Special Functions except I/O PRESET are controlled by flip-flops set from the designated AC bits; the states of these flip-flops may be examined at any time.

#### ESF Enable Special Functions

Octal code: Execution time: Operation:	0004 $1.6 \mu s$ The contents of AC <sub>2-6</sub> are placed in their respective flip-flops, as shown in Figure 3-12. For each AC bit set to 1, the corresponding function is enabled. For each AC bit set to 0, the corresponding function is disabled. If AC <sub>7</sub> is set to 1, the I/O PRESET pulse is generated. All Special Function bits are cleared (except ESF 04, Full Size Character, which is set to a 1) by
	Special Function bits are cleared (except ESF 04, Full Size Character, which is set to a 1) by I/O PRESET, either from the console or program control.

SFA Place Special Function Flip-Flops in AC

Octal code:	0024
Execution time:	1.6 <b>μ</b> s

**Operation**: The contents of the Special Function flip-flops are placed in their respectively designated AC bits, as shown in Figure 3-12.  $AC_{0-1}$  and  $_{7-11}$  are cleared.

#### 3.3.17 Instruction Trap

Several sets of operation codes in the LINC repertoire are undefined. The LINC programmer can make use of these codes without having to hard-wire them, by means of subroutines and the Instruction Trap. When the Trap is enabled (ESF with  $C(AC_2) = 1$ ), any undefined LINC codes will cause a program trap. When the undefined code is encountered, program control is transferred to register 0141 of Memory Field 0, regardless of the current setting of the IF. The contents of the Program Counter are placed in register 140, and the contents of the IF and DF are placed in the Save Field Register. The subroutine beginning at 0141 can examine the trapped code (using the information stored in 0140 and the SF) to determine what program-defined operations are to be performed. (Also, see Paragraphs 3.3.15.3 and 3.3.15.4 for interaction with Program Interrupt.

These are the undefined LINC codes which cause a program trap:

Operate class	501-515, 521-535
Execute class	740-747
Undefined	540-577
Undefined	1700-1737

The LINC codes 1700-1737 are considered as  $\beta$ -class instructions. Therefore, when either a 1700 or 1720 instruction is encountered, the address contained in location 140 is the address of the trapped instruction incremented twice (trapped instruction address +2). All other undefined codes will cause location 140 to contain the address of the trapped instruction incremented once (trapped instruction + 1).

Probably the most common use of the Instruction Trap is in the execution of programs written for the LINC-8. A LINC-8 Trap Simulator is provided in the basic PDP-12 software package. Close study of this program will be most helpful for the programmer wishing to use the Trap facility. The Trap facility is further useful for developing device-independent software.

3.3.17.1 Tape Trap – When both the Tape Trap and Instruction Trap functions are enabled, the LINCtape instructions (codes 700-737) are trapped also. This is useful if the programmer wishes to substitute another external storage device, such as a Disk, for the LINCtape.

3.3.17.2 Program Interrupt and Instruction Trap – If the interrupt is enabled when an Instruction Trap occurs, the interrupt is inhibited until the execution of the first JMP after the trap. This permits the trap program to store the contents of the Save Field Register immediately after the trap, so that the record of where the trap took place is not destroyed by an interrupt request, which also causes the contents of the IF and DF to be placed in the SF (also see Paragraphs 3.3.15.3 and 3.3.15.4).

# 3.4 CRT DISPLAY, TYPE VR12

The 6.5 inch x 9 inch rectangular screen of the PDP-12 CRT Display Type VR12 has a total display area of 58.5 square inches. Grid dimensions are 512 x 512 points. The horizontal distance between points is 0.0176 inches; the vertical distance is 0.0127 inches. The (0,0) grid point is at the midpoint of the left side of the screen, as shown in the schematic representation in Figure 3-13. Grid co-ordinates are given in octal.

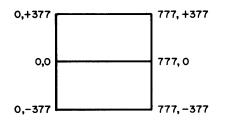


Figure 3-13. CRT Grid

The display system is fully buffered. Coordinates are held in two 9-bit buffers; during the execution of DSC, the pattern word is retained in a 12-bit Pattern Intensification Register. Either of two multiplexed intensification channels can be specified. A switch on the VR12 front panel allows either or both channels to be displayed.

Below the channel selector is a variable knob which allows the user to change the intensity of the displayed points. A level control located within the VR12 presets the maximum brightness level, preventing spot burns.

A 24-contact connector on the Data Terminal Panel allows the user to connect an auxiliary scope (VR-12A CRT Display, Tektronix 561, or similar unit) for remote display of the same information sent to the main screen. The channel selectors can be independently set so that each scope displays one of the channels, thus allowing independent simultaneous displays on two scopes.

A complete set of connection points for the VC12/VR12 display system is shown in Appendix G.

The output drive capability of the D-A converters is 0v to -5.85v capable of driving a load resistance of 1 k $\Omega$  connected to ground. This allows up to 200 feet of cable for a remote VR-12. The absolute values of the D-A outputs are not held closer than ±0.3v but are stable to within 3.0%. The D-A converters are loaded by jam transfer. The D-A used to drive the scope is also available as a single-ended output to drive external devices. The 0v D-A point is equivalent to the lower left hand corner of the display screen.

The LINC display instructions allow the programmer to display single grid points or a small array of points. In either case, the full buffering allows the program to proceed after the display operation has been initiated. If a subsequent display instruction is encountered before the previous display operation has been completed, the program will pause until the display control is free, then execute the new instruction.

#### 3.4.1 **Point Displays**

DIS Display (a-C	lass)					
Form:	DIS I a					
Octal code:	$0140 + a,  0 \ge a \ge 17_8$					
Execution time:	3.2 $\mu$ s; 23 $\mu$ s for completion of display					
	A single point on the screen is intensified. The vertical coordinate is specified by $AC_{3-1,1}$ ; the					
	horizontal coordinate by bits 3-11 of the designated a-register. If bit 0 of the a-register is set to					
	0, the point will be displayed on Channel 0; if $C(a_0) = 1$ , the point will be displayed on					
	Channel 1.					

If I = 0, the contents of a are taken as is. If I = 1, C(a) are first incremented by 1, using 10-bit, two's complement addition. Bits 0 and 1 are not affected.

# 3.4.2 Character Displays

DSC Display Cha	racter (β-Class)
DSC Display Cha Form: Octal code: Execution time: Operation:	<i>inacter</i> ( $\beta$ -Class) DSC I $\beta$ 1740 + 20I + $\beta$ , $\beta \le 2 \le 17_8$ 4.8 $\mu$ s when I = 1, $\beta$ = 00; 6.4 $\mu$ s when I = 0 or $\beta \ne 00$ Control completion time 20-56 $\mu$ s. A vertical 2 x 6 array of points is displayed according to a pattern word stored in register Y (Y is defined as with other $\beta$ -class instructions). For each bit of the pattern that is a 1, the corresponding point is intensified; for each bit that is a 0, the corresponding point is left dark. In Figure 3-14, the circles represent the points of array; the small numbers refer to the corresponding bit positions of the pattern word. The small arrows show the order in which the pattern bits are examined and displayed. As with DIS, the vertical coordinate is held in the Accumulator. The horizontal coordinate is held in register 0001; for this reason, register 0001 cannot be used as a $\beta$ -register with DSC. The character may be displayed in either of two sizes: full size, in which the spacing between points in both directions is four grid positions, and half-size, in which the spacing is two positions. The following description assumes full-size characters.
	When a DSC instruction is executed, the following events occur:

When a DSC instruction is executed, the following events occur:

(1) The intensification pattern is transferred from Y to the display control Intensification Buffer.

(2) The contents of AC<sub>3-6</sub> are placed in the display control Y-buffer; AC<sub>7-11</sub> are set to  $30_8$ .

The contents of register 0001, the X-coordinate, are incremented by  $10_8$ , and transferred to the display control X-buffer.

The foregoing operations take 4.8 or  $6.4 \,\mu s$  to do their work, after which the central processor is free to resume program execution. The remaining operations are performed by the display control.

(3) The pattern word is examined in the order shown in Figure 3-14. The time required to scan and display the points varies according to the number of points to be intensified. Reaching the first point requires 20  $\mu$ s, then 1  $\mu$ s for each point to be left dark and 3  $\mu$ s for each point to be displayed. This action continues until all points are intensified.

Because of the manner in which the Y-coordinate is used, full-size character arrays may start only at coordinates which are multiples of  $40_8$ ; e.g., 000, 040, 100, -100. Since the array itself is only  $30_8$  points high, this gives the programmer an automatic vertical spacing of  $10_8$  points between the bottom of one line and the top of the one immediately below it.

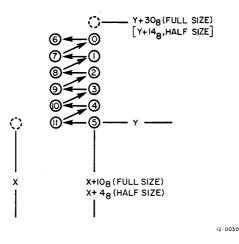


Figure 3-14. Display Pattern for DSC

# 3.4.3 Half-Size Characters

If the programmer clears the CHARACTER SIZE bit of the Special Function Register [ESF with  $C(AC_4) = 0$ ], all increments are by two grid positions, rather than four.  $AC_{3-7}$  provides the initial Y coordinate; after the two coordinates have been transferred to the display control's buffers, the contents of  $AC_{8-11}$  will be  $14_8$ , and the X coordinate in register 0001 will be incremented by 4 instead of by  $10_8$ . Vertical spacing is likewise halved; arrays may start at intervals of  $20_8$  points, with 4 points between lines. I/O PRESET sets this bit of the Special Function Register to a 1 (full-size characters).

#### 3.4.4 Character Set

Any character that can be represented on a  $4 \times 6$  grid (24 points) can be displayed by using two DSC instructions, with two consecutive storage words providing the complete 24-bit character pattern. Table 3-1 lists the display patterns for the ASR-33 character set. Nondisplayed characters have patterns of all zeros. The table entries, each consisting of two words, are arranged in order of ASCII codes.

External ASCII	Internal Code	Character	Pattern Words	External ASCII	Internal Code	Character	Pattern Words
245	45	%	3114	274	74	<	0412
			0643				2100
246	46	&	5166	275	75	=	1212
		· .	0526				1212
211	47	TAB	0000	276	76	>	0021
			0000				1204
250	50	(	3600	277	77	?	4020
		1	0041				2055
251	51	)	4100	301	01	А	4477
			0036				7744
252	52	*	2050	302	02	В	5177
			0050				2651
253	53	+	0404	303	03	С	4136
			0437				2241
254	54	,	0500	304	04	D	4177
		1	0006				3641
255	55	_	0404	305	05	E	4577
			0404				4145
256	56		0001	306	06	F	4477
			0000			_	4044
257	57	/	0601	307	07	G	4136
			4030		10		2645
260	60	0	4136	310	10	н	1077
			3641				7710
261	61	1	2101	311	11	ł	7741
			0177	010	10		0041
262	62	2	4523	312	12	J	4142
000			2151	010	10	K	4076
263	63	3	4122	313	13	К	1077
004	64		2651	014	14		4324 0177
264	64	4	2414 0477	314	14	, L	0301
265	65	5	5172	015	15	54	3077
205	65	5	0651	315	15	М	7730
266	66	6		216	16	N	
266	00	6	1506 4225	316	16	N	3077 7706
267	67	_	and the second	017	17	о	4177
207	67	7	4443	317	17	0	7741
270	70		6050	320	20	Р	4477
270	/0	8	5126	320	20	r r	3044
271	71	9	2651 5122	321	21	٩	4276
211	''	3	3651	521	21		0376
272	72	1 .	2200	322	22	R	4477
<i>L</i>   <i>L</i>	12	:	0000	522	22		3146
273	73	;	4601	323	23	S	5121
270	/ //	,	0000	525		1	4651
	1	1		1	1	}	

Table 3-1. ASR-33 Character Set Display Pattern

External ASCII	Internal Code	Character	Pattern Words	External ASCII	Internal Code	Character	Pattern Words
324	24	Т	4040	335	35	]	0000
			4077				7741
325	25	U	0177	336	36	1	0000
			7701				0000
326	26	V	0176	-212	37	LINE	0000
			7402			FEED	0000
327	27	w	0677				
			7701	240	40	SPACE	0000
330	30	X	1463				0000
			6314	241	41	1	7500
331	31	Ý	0770				0000
			7007	242	42	"	7000
332	32	Z	4543				0070
			6151	215	43	RETURN	0000
333	33	[	4177				0000
	1		0000	244	44	\$	4731
334	34	\	0204				4275
			1020				

Table 3-1. ASR-33 Character Set Display Pattern (cont)

# 3.5 DATA TERMINAL

The Data Terminal provides analog inputs and relay-controlled outputs for use by LINC mode programs. The facility includes the following:

Analog Inputs	Sixteen channels
Relays	Six relays for external equipment control
Auxiliary Scope Connector	24-pin connector for an auxiliary CRT

#### 3.5.1 Analog Inputs

The AD12 Analog-Digital Converter and Multiplexer consists of 16 input channels, a Sample and Hold, a multiplexer, and a 10-bit A-D converter. Eight of the channels are for external inputs via phone jacks. These feed through preamplifiers to the multiplexer. The acceptable voltage range of these inputs is  $\pm 1v$  with a sensitivity of approximately 2 mv/count.

The other eight channels are controlled by continuously variable knobs mounted on the Data Terminal. The knobs give ten turns stop-to-stop however, 7 turns provide the full 10-bit range to the converter (1-1/2 to 2 turns from each extreme is beyond the A-D range of  $-777_8$  to  $+777_8$ ). The knobs can be used to control speeds (as in the continuous display of data from tape), set threshold levels or other test parameters, etc.

A single LINC mode instruction selects the input channel, initiates the conversion, and transfers the contents of the buffer into the AC.

SAM Sample

Form:SAM NOctal code:0100 + N,  $0 \le N \le 17_8$  (Basic system);  $0 \le N \le 37_8$  (extended system)Execution time: $18.2 \ \mu s$  (Normal mode);  $1.6 \ \mu s$  (Fast sample mode)Operation:Input channel N is selected. In normal mode, the voltage level present at the input is sampled<br/>and converted to a 10-bit number (including sign), which is assembled in the converter buffer.<br/>When the conversion is complete, the contents of the buffer are transferred into AC<sub>3-11</sub>. The

sign is placed in  $AC_{0-2}$ .

When the FAST SAMPLE Special Function is selected [ESF with  $C(AC_5) = 1$ ], the order of events is reversed. The current contents of the converter buffer are transferred to the AC. Then the specified channel is selected and a new conversion is initiated. The results of this new conversion can be read by a subsequent SAM instruction, unless the KW12-A Real Time Interface is selected to mode 4, 5, 6, or 7; in this case only, the KW12-A may initiate the A-D conversion. If a conversion is still in progress when the next SAM is encountered, the processor waits until the conversion is complete before executing the new SAM.

#### 3.5.2 Relays

Six DPDT relays mounted on the Data Terminal can be switched by LINC mode instructions, allowing the user to control the operation of various pieces of external equipment that are not interfaced directly with the PDP-12. The states of the relays can be examined at any time. One set of form C contacts for each of the relays is available at the binding posts on the Analog Input Panel as indicated in Figure 3-15. A second set of contacts is brought out to split lugs on the relay printed circuit board.

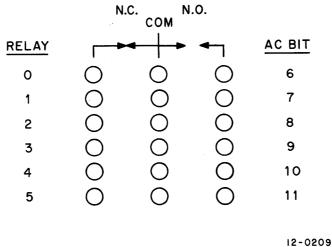


Figure 3-15. Relay Terminals and Corresponding AC Bits

#### ATR AC to Relays

 Octal code:
 0014

 Execution time:
 1.6 μs

 Operation:
 The contents of AC<sub>6-11</sub> are transferred to the Relay Buffer; the state of each relay is determined as follows:

 If the corresponding AC bit is 0, the relay is switched off.

 If the corresponding AC bit is 1, the relay is switched on.

RTA Relays to AC

Octal code:	0015
Execution time:	1.6 μs
Operation:	The contents of the Relay Buffer are transferred into $AC_{6-11}$ . If the relay is off, the
-	corresponding bit will be 0; if it is on, the bit will be 1. Bits $AC_{0-5}$ are not changed.

### 3.6 LINCTAPE TYPE TC12

The basic LINCtape system consists of either two DECtape Transports Type TU55 or one DECtape Transport Type TU56 controlled by a fully buffered subprocessor. A single ten-channel tape head serves for both reading and writing. Information is redundantly recorded; one line of tape contains five bits, each recorded in two non-adjacent channels, as shown in Figure 3-16. Three bits are actual data; the other two provide control information for the tape processor. The Timing track determines the position of each recorded line. Four lines are required to accommodate a full 12-bit word; the corresponding Mark Track code identifies the nature of the data word. The recording technique and tape layout are described in detail in the PDP-12 Maintenance Manual.

#### 3.6.1 Organization of Data

On a standard-format LINCtape, information is recorded in blocks of 256 12-bit words each, with identifying data at each end of the block. One reel of Standard format LINCtape has a capacity of 512 blocks, for a total of  $131,072_{10}$  words of data. (In other formats, this capacity may be extended to  $225,000_{10}$  words.)

The organization of a tape is schematically presented in Figure 3-16. At each end of the tape is a long End Zone which allows the transport to reverse direction or come to rest without pulling the tape off the reel. Between the end zones and the terminal blocks, and between blocks, are Interblock Zones which can be sensed by the LINC instruction IBZ. An interblock zone is 5 words long.

Figure 3-16B represents a typical block of 256 data words preceded and followed by control and identifying information. The serial bit sequence on the Mark Track, is decoded so that the control can determine whether the adjacent data bits form true data, checksum words, guard words, etc. The symbols BM, CM, GM, etc. (defined below), refer to these Mark Track bit patterns.

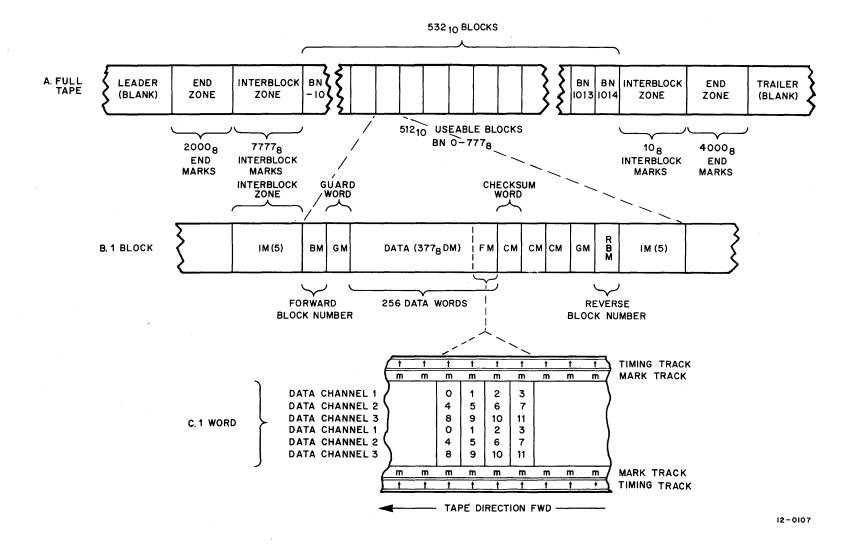


Figure 3-16. Standard LINCtape Format

3-38

A block consists of 256 data words preceded and followed by control and identifying information, as shown in the second drawing in Figure 3-16.

Block Number (BM)	This identifies the block. On a standard LINCtape, block numbers are sequential, from 0000 through $0777_8$ .
Guard Word (GM)	This protects the Block Number from transients when the read/write current is turned on and off, and allows time for the tape processor to switch from Search to Read or Write modes.
Data Words (DM,FM)	This is the information recorded on tape from core memory. The final Data Word is specially identified, to signal the end of the block. When writing a tape, this signal conditions the tape processor to write the checksum in the next word position.
Checksum (CM)	This is the two's complement of the 12-bit sum of all the data words in the block plus the constant $7777_8$ . The result of adding the data sum to the checksum should be 0000; this provides a check (hence the name) on the accuracy of the transfer.
Check Words (CM)	These are dummy words whose Mark Track code is the same as that for the Checksum. They are provided to insure that the Write current will be turned off before the Reverse Block Number is encountered. The Guard and Check words are not of general interest to the programmer except as they affect timing.
Reverse Block Number (RBM)	This is the Block Number that identifies the block when tape is being searched in the reverse direction.

### Subprocessor


The LINCtape processor controls all information transfers between memory and tape. It is fully buffered; once an operation has been initiated by a LINC mode instruction, it is carried to completion by the tape processor. The central processor may either wait until the tape transfer is complete, or proceed immediately after the tape instruction has been initiated, testing at some later time for completion of the operation.

Transfers are effected in either Standard or Extended modes. In Standard mode, transfers are made to and from fixed memory locations. Extended Operations provide for a flexible addressing facility, program interrupt, and additional tape units.

As can be seen in Figure 3-17, the tape subprocessor contains seven registers which provide the transmission path for data and for control information.

# Data Path

*Read/Write Buffer (RWB), 12-Bits* — When reading, the four lines of a data word are assembled in this register, in the bit positions shown in the third drawing of Figure 3-16. When writing, the contents of the RWB are disassembled and written on four consecutive lines of tape. Essentially, the RWB is a three-section shift register, with the three bits of a tape line entering (or leaving) the register at four-bit intervals, as indicated by the arrows in Figure 3-17.

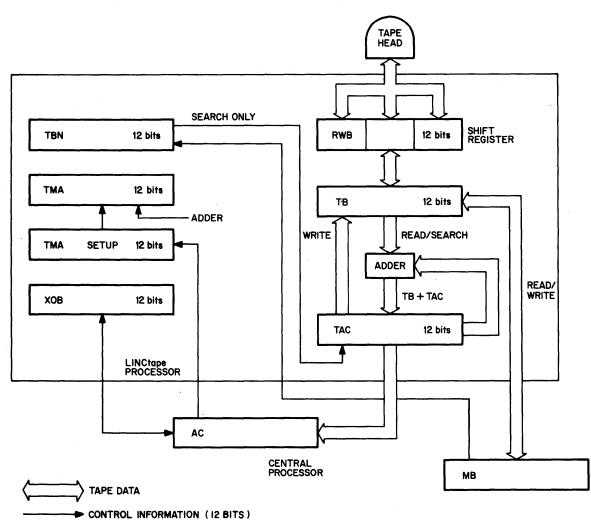

12-0105

Figure 3-17. LINCtape Processor Information Paths

Tape Buffer (TB), 12 Bits — When reading, the assembled word is transferred from the RWB to the TB, and from there sent to the MB in the central processor. When writing, the direction is reversed; information from the MB enters the TB, and from there is placed in the RWB for disassembly onto the tape.

Tape Accumulator (TAC), 12 Bits – As each data word is read or written, the data sum is accumulated in the TAC. When reading, this sum is added to the Checksum read from tape, to determine whether the transfer was completed accurately. When writing, the data sum is complemented when the final data word signal is received, and the resulting Checksum is written in the word position following the final data word. The contents of the TAC can be brought into the central processor AC, using the Linc mode TAC instruction. In searching operations, the TAC also holds the sum of the desired block number and the last block number read from tape.

## **Control Registers**

In Standard mode operations, these registers are automatically set up; in Extended Operations, the program must set the XOB and TMA Setup Register.

Tape Block Number (TBN), 12 Bits – This contains the number of the block to be accessed in a data transfer. As the tape is searched, the Block Number read from tape is compared with that in the TBN; when the numbers match, the tape is positioned so that the transfer can begin. During group operations, the TBN contains the number of the first block to be accessed.

Tape Memory Address (TMA), 12 Bits – This contains the address of the memory location to or from which the data is being transferred. In extended address mode, TMA is loaded from the TMA Setup Register at the beginning of a tape instruction; in Standard mode, the MBLK and TBLK information in the second tape instruction word are used to determine the initial contents of TMA. The TMA is incremented by 1 for each data word transferred.

TMA Setup Register, 12 Bits – In Extended Address mode, the register retains the first memory address of the data to be transferred. If the transfer is not successful, the contents of TMA Setup are placed in the TMA, and the operation is repeated. The TMA Setup Register is loaded from the AC, using the TMA instruction.

Extended Operations Buffer (XOB) 12 Bits - The contents of this register determine which of the various extended tape operations are in effect. These include extended memory addressing, tape interrupt, the no-pause condition, hold motion, and extended units.

# 3.6.2 Programming

The tape transfer operations are the same for both Standard and Extended Operation modes. Data may be read or written in single blocks or groups of contiguous blocks (in the extended address mode, only single blocks are transferred), with or without error-checking. Step-by-step searches can be performed, and block numbers can be identified without reading or writing data.

All LINCtape instructions require two words. The first word specifies the operation to be performed, one of two tape units, and the motion of tape at the end of the operation. The second word gives the tape block number and in Standard mode also gives the memory block number. The structure of the two words is shown in Figure 3-18.

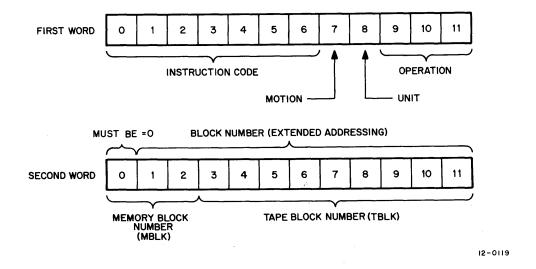


Figure 3-18. LINCtape Instruction Format

First WordThe general instruction code for the LINCtape class is 0700. The particular<br/>operation to be performed is specified by bits 9-11 of the first word. In the<br/>basic system, one of the two TU55 units is selected by bit 8. If this bit is 0,<br/>the unit dialed to 0 is selected; if this bit is a 1, unit 1 is chosen. Bit 7 (the<br/>I-bit) is used to determine the state of the unit's motion when the operation<br/>is completed. See Paragraph 3.6.3 below.Second WordIn Standard Addressing, bits 3-11 of the second word specify the number of

the tape block to be accessed. Bits 0-2 specify one of four blocks of a LINC Memory Field to or from which data is to be transferred. These memory blocks are assigned to specific addresses in each field. There are four blocks in each LINC field, each being 256 words (1 tape block) long. The blocks are assigned as follows:

Memory Block Number (MBLK)	LINC Memory Field	LINC Field Addresses
0	Instruction Field	0000-0377
1	Instruction Field	0400-0777
2	Instruction Field	1000-1377
3	Instruction Field	1400-1777
4	Data Field	2000-2377
5	Data Field	2400-2777
6	Data Field	3000-3377
7	Data Field	3400-3777

In Standard Mode addressing, the contents of a tape block and a memory block correspond exactly. All single-block transfers are effected between the tape block and the memory block specified by the second word of the tape instruction. In group transfers, where several contiguous blocks are transferred, the second word is interpreted in a slightly different way. (See description of RCG and WCG instructions in Paragraph 3.6.4.) The two non-transfer instructions, MTB and CHK, use the second word in still different ways.

#### 3.6.3 Tape Motion

Tape is read or written in the forward direction. It may be searched in either the forward or backward direction. Bit 7 of the first word of a LINCtape instruction determines the motion of the tape when a LINCtape operation has been completed.

If bit 7 (the I-bit) is set to a 1, the tape is left moving in the direction in which it was going at the completion of the operation. Except for searches backward, this will usually be the forward direction.

If bit 7 is set to a 0, the tape processor enters the Turnaround State at the completion of the operation, which is the end of the Checkword State. When a block mark is encountered, the tape stops, leaving the Turnaround State and entering the Idle State. If a subsequent tape instruction occurs while the tape processor is in the Turnaround State, searching begins with the tape moving forward.

If the tape has stopped, a subsequent tape instruction will begin with tape motion in the backward direction. It will search backwards until a block number has been encountered. This first block number is used to determine the required direction to complete the instruction.

# NOTE

The foregoing discussion applies only to tape motion at the completion of an instruction. It should not be confused with the NO PAUSE Extended Operation, which affects central processor action after a tape operation has begun.

# 3.6.4 LINCtape Instructions

In the subsequent instruction descriptions, the following terms are used:

Data sum	two's complement sum of all 256 data words in a block
Checksum	two's complement of (Data sum + $7777_8$ )
Transfer check	Data sum + Checksum + 7777 <sub>8</sub> If the transfer is successful, the transfer check = $7777_8$ If not, the transfer check $\neq 7777_8$
MBLK, TBLK	As shown in Figure 3-18 NOTE

It is assumed that Extended Address and NO PAUSE are not used in the following discussion.

RDE Read Tape

Form:	RDE I U
Octal code:	0702 + 20I + 10U
Execution time:	3.2 µs
Operation:	Block TBLK is read from tape into memory block MBLK. The transfer check is left in the
	TAC and AC. The contents of the tape are unchanged.

RDC Read and Check

Form:	RDC I U
Octal code:	0700 + 20I + 10U
Execution time:	3.2 µs
Operation:	Block TBLK is read from tape into memory block MBLK. If the block is transferred correctly,
	the transfer check is left in the TAC and AC; otherwise, the operation is repeated. The
	information on tape is unchanged.

RCG Read and Check Group

0

Form: Octal code:	RCG I U 0701 + 20I + 10U
Execution time:	3.2 µs
Operation:	Block TBLK is read from tape into the memory block designated by the three low-order bits of TBLK; e.g., tape block 773 is read into memory block 3, tape block 027 into memory block 7. The next consecutive tape blocks are read into successive memory blocks. Tape block 000 follows tape block 7.77 and memory block 0.6 follows memory block 7. MBLK is the number of
	follows tape block 777, and memory block 0 follows memory block 7. MBLK is the number of
	additional consecutive blocks to be transferred.

Example: Transfer blocks 202-205 from unit 1 to memory, leaving the unit in motion at the end.

Instruction	Octal	
	• • • • •	
RCG I 1	0731	/READ AND CHECK GROUP INST
3202	3202	/MBLK = 3, THE NUMBER OF ADDITIONAL BLOCKS
		/TBLK = 202.

Data is transferred from tape block 202 into memory block 2, then from 203 to memory block 3, 204 to memory block 4, and 205 to memory block 5.

Each block transfer is checked. If the transfer is successful, the transfer check (7777) is left in the TAC; otherwise, that block is repeated. If the entire group is transferred successfully, 7777 is left in the TAC and AC at the end of the operation.

WRI Write Tape

Form:	WRI I U
Octal code:	0706 + 20I + 10U
Execution time:	3.2 µs
Operation:	The contents of memory block MBLK are copied into block TBLK; the transfer check is left in
	the TAC. The contents of memory are unchanged.

WRC Write and Check

Form:	WRC I U
Octal code:	0704 + 20I + 10U
Execution time:	3.2 µs
Operation:	The contents of memory block MBLK are copied into block TBLK. If the transfer is successful, the transfer check (7777) is left in the TAC and PAC; otherwise, the operation is repeated.

# WCG Write and Check Group

Form:	WCG I U
Octal code:	0705 + 20I + 10U
Execution time:	3.2 µs
Operation:	MBLK is the number of additional consecutive memory blocks whose contents are written on
	tape. The low-order digit of TBLK specifies the first memory block to be accessed. The
	contents of this block are copied into block TBLK of tape. The contents of the next MBLK
	memory blocks are copied into the next successive tape blocks. Memory block 0 follows
	memory block 7, and tape block 000 follows block 777. The scheme is identical with that for
	RCG. If the transfer is successful, the transfer check (7777) is left in the TAC and AC;
	otherwise, the operation is repeated.

The following two instructions do not transfer data.

MTB Move Toward Block

Form: Octal code:	MTB I U 0703 + 20I + 10U
Execution time:	3.2 µs
Operation:	Subtract the first tape block number encountered (or reverse block number, if the tape is moving backwards) from TBLK, leaving the difference in the TAC and AC. If $I = 0$ , the tape stops. If $I = 1$ , the tape is left moving forward if the difference is positive or 0, and backward if negative. If motion = 0 when this instruction is given, it starts moving backward; otherwise it continues in the direction in which it had been going. The MBLK bits of the second word are ignored.

CHK Check one Tape Block

Form:	CHK I U	
Octal code:	0707 + 20I + 10U	
Execution time:	3.2 µs	
Operation:	Find block BN, form its transfer check and leave it in the TAC and AC. The information on	
	tape and the contents of memory are unchanged.	

The contents of the Tape Accumulator can be examined by using the following instructions.

TAC Tape Accumulator to AC

Octal code:	0003		
Execution time:	1.6 μs		
Operation:	The contents of the Tape Accumulator are placed in the central processor AC. The previous		
	C(AC) are lost; C(TAC) are unchanged. This instruction is used to verify transfer Checksums		
	for NO PAUSE tape operations. Because this instruction uses the tape ADDER data path, it		
	must not be given while a tape operation is in progress.		

### 3.6.5 Extended Operations

LINCtape Extended Operations give the programmer a more flexible addressing scheme for information transfers, additional control functions, and a tape processor maintenance facility. These operations are controlled by the contents of the Extended Operations Buffer, defined as shown in Figure 3-19. The XOB can be loaded from the AC and vice versa. The function of these bits is described in Paragraphs 3.3.6 through 3.6.12.

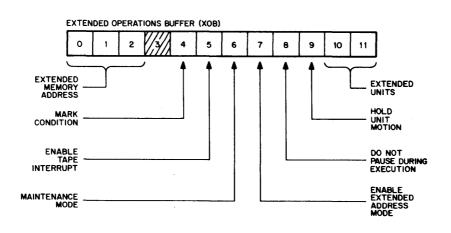


Figure 3-19. Extended Operations Buffer Bit Assignments

AXO AC to XOB

Octal code:	0001		
Execution time:	1.6 µs		
Operation:	The contents of the AC are placed in the Extended Operations Buffer. The previous C(XOB)		
	are lost; C(AC) are unchanged. Changing these states while a tape operation is in progress may		
	cause incorrect execution.		

XOA XOB to AC

Octal code:	0021
Execution time:	1.6 µs
Operation:	The contents of the Extended Operations Buffer are placed in the AC. The previous C(AC) are lost; C(XOB) are unchanged.
	This instruction must not be given when the tape is in progress because the data path includes the tape ADDER.

#### 3.6.6 Extended Address Format

This facility releases the programmer from the limitation of block-to-block transfers, as described previously. Instead, a block transfer may begin in any register of any memory field, regardless of the settings of the Memory Field Registers. The first memory address affected in the data transfer is placed in the TMA Setup Register by the program, using the instruction TMA. When the Extended Address Mode is enabled (by setting bit 7 of the XOB to 1), all subsequent tape transfers are executed as follows. At the occurrence of a tape transfer instruction, the contents of the TMA Setup Register are placed in the TMA. The second word of the instruction is taken as an 11-bit block number, and placed in the TBN. The transfer is effected between tape and the designated area of the 4096-word memory bank specified by bits 0-2 of the XOB. The transfer is thus independent of the LINC Memory Field assignments.

As in all extended memory operations, whether with tape or not, the transfer will not cross  $4096_{10}$  memory field bank boundaries; address 7777 is followed by address 0000.

#### NOTE

The group transfer instructions RCG and WCG cannot be used in extended address mode.

### TMA Load TMA Setup Register

Octal code:	0023		
Execution time:	1.6 µs		
Operation:	The contents of the AC are placed in the Tape Memory Address Setup Register. The previous		
	contents of TMA Setup are lost; C(AC) are unchanged. This instruction must not be given		
	when the tape is in progress because the data path includes the tape ADDER.		

*Example:* Read the contents of block 365 of unit 0 into memory, beginning at absolute location  $10540_8$  (0540<sub>8</sub> in the second  $4096_{10}$ -word bank of memory).

Instruction	Octal Code	Action
LDA I	1020	<b>/LOAD AC WITH STARTING ADDRESS</b>
0540	0540	STARTING ADDRESS OF TARGET AREA
TMA	0023	/PLACE STARTING ADDRESS IN TMA SETUP
LDA I	1020	<b>/LOAD AC WITH EXTENDED OPERATIONS BITS</b>
1020	1020	<b>/BANK 1; ENTER EXTENDED ADDRESS MODE</b>
AXO	0001	/LOAD XOB FROM AC
RDC	0700	/READ AND CHECK FROM UNIT 0
0365	0365	/BLOCK 365
• • • •	••••	

The data will be read into registers  $0540_8 - 1137_8$  of the second  $4096_{10}$ -word bank of memory.

#### 3.6.7 Extended Units

The two Extended Units bits  $(XOB_{10-11})$  may be thought of as an extension of the unit bit of a LINCtape instruction (bit 8). Taken together, the three bits can select one of up to eight transports which may be attached to the TC12 tape control. The logical unit numbers are assigned by rotating the dials on the transports; they correspond to the unit select bits as follows:

Extended Unit Bits (XOB)		Instruction Unit Bit	Transport
10	11	8	Selected
0	0	0	0
0	0	1	1
0	1	0	2
0	1	1	3
1	0	0	4
1	0	1	5
1	1	0	6
1	1	1	7

### 3.6.8 Tape Interrupt Enable

When this bit  $(XOB_5)$  is set, a program interrupt will occur whenever INTERRUPT is enabled and the TAPE DONE flag is set (i.e., the tape operation is completed). As with other LINC interrupts, control is transferred to register 0041 of memory field 0; the contents of the PC are stored in register 0040. (If the central processor is in the 8 mode, the interrupt uses registers 0001 and 0000.) TAPE DONE is set by the completion of a tape instruction and cleared by the execution of a new tape instruction or the tape maintenance instruction LMR (IOT 6151) with AC<sub>4</sub>(1). (See Paragraph 3.6.9 and Appendix E.)

#### 3.6.9 No Pause Condition

Normally, the central processor waits until a tape operation is finished before proceeding. Such delays may be eliminated by setting the NO PAUSE condition bit  $(XOB_8)$ . When this condition is enabled, the processor continues with the program as soon as the LINCtape instruction has been interpreted and the operation initiated. Subsequently, the program can monitor the Tape Done flag to determine when the operation has finished. The Tape Done flag is set when a tape operation has been completed and is cleared at the beginning of the next tape instruction. The flag can also be sensed and cleared by the following instructions. When in the no pause condition, a second tape instruction should not be used until the previous tape instruction has been completed.

#### IOB

LMR Load Maintenance Register

Octal code:	0500 6151
Execution time:	5.9 $\mu$ s (LINC mode)
Operation:	The maintenance IOT (see Appendix E) is used to test and clear the TAPE DONE flag.
	$(AC_{05} = 1)$ Skip if Tape Done Flag is set. $(AC_{04} = 1)$ Clear Tape Done Flag

Do not have other AC bits on a 1, as this instruction has many additional functions.

STD Skip if Tape Done

Form:	STD I
Octal code:	0416 + 20I
Execution time:	1.6 µs
Operation:	If $I = 0$ , skip the next instruction if no tape operation is in progress; otherwise, execute the next instruction. If $I = 1$ , skip if an operation is still in progress. This instruction is identical to SXL I 16.

Used in conjunction with the tape flag and tape interrupt, the NO PAUSE condition can save considerable amounts of time in central processor programming. When NO PAUSE is set, the Transfer Check is not placed in the accumulator at the end of tape instruction. The instruction TAC (see Paragraph 3.6.4) should be used to recover the Transfer Check.

#### 3.6.10 Hold Unit Motion

Normally, a tape transport stops as soon as another unit has been selected. When XOB<sub>9</sub> is set, however, the transport will continue in the direction it has been moving when the unit is deselected. This is a useful feature for certain operations involving several units, and must be used with caution. Note that it is not the same as the motion bit of a LINCtape instruction, which determines the motion state of a unit at the completion of an instruction only.

#### NOTE

With the Hold Unit Motion and No Pause bits both set, it is impossible to do two backto-back tape instructions and enable both units 0 and 1 for simultaneous motion.

### 3.6.11 MARK Condition

This bit  $(XOB_4)$  is used in conjunction with the MARK switch on the operator's console to allow the MARK 12 program (see Chapter 7 on Program Library) to record Timing and Mark tracks on a new tape. The interaction between the switch and the XOB is designed to minimize the possibility of accidentally destroying a tape by enabling the MARK flip-flop. The flip-flop can be set only when the MARK switch is held down while an AXO instruction is being executed with  $AC_4$  set to 1.

#### 3.6.12 Maintenance Mode

When  $XOB_6$  is set, all timing signals and data are prevented from entering the tape control registers from the reader-writers. Instead, signals generated by IOT instructions are used as input to the tape control, in order to simulate the functions of the tape head and the tape processor. The Maintenance Mode is designed for diagnostic purposes and is not intended for general use. See Appendix E for a list of Maintenance Mode tape control instructions.

### 3.6.13 Tape Trap

Whenever the TAPE TRAP and INSTRUCTION TRAP Special Functions are enabled (ESF with  $AC_{2-3}$  set), LINCtape instructions are not executed. When one is encountered, a program trap to register 0140 of memory field 0 occurs. The Tape Trap is intended primarily for use with LINC-8 programs and the I/O Handler (LINC-8 Trap Simulator) to ensure compatibility. Also, device-independent software can make use of Tape Trap to substitute other mass storage devices, such as disks for LINCtape.

# 3.6.14 Tape Word Skip

TWC Skip on Tape Word Complete

Form:TWC IOctal code:0417 + 20IExecution time: $1.6 \,\mu s$ Operation:This instruction is used when formatting a tape using the MARK 12 Program.

# CHAPTER 4 8 MODE PROGRAMMING

8-mode programming of the PDP-12 is covered in this chapter, which is divided into six sections: Organization of Memory, Memory Addressing Methods, PDP-8 Instructions, Program Interrupt, Extended Arithmetic Element, and Extended Memory.

# 4.1 ORGANIZATION OF MEMORY

#### 4.1.1 Organization

In the 8 mode, the basic 4096-word memory is divided into 32 pages of 128 words each for addressing purposes Within one of these pages, operands may be addressed directly by memory reference instructions. Access to operands across page boundaries (except for Page 0) requires indirect addressing.

Executable programs may be stored in any page of memory, and program sequences may extend across several pages. The program counter is indexed over all 12 bits in the 8 mode, so that a straight-line program sequence will pass from the last word of a page to the first word of the next. A programmed jump across page boundaries, however, requires an indirect reference. The organization of one memory field in 8 mode is shown in Figure 4-1.

#### 4.1.2 Page 0

The first page of memory (addresses 000-177) contains several registers reserved for special use, which the programmer must take into account. These are:

Address	Use
0000	During a program interrupt, holds C(PC).
0001	Contains the first instruction to be executed after a program interrupt.
0010-0017	Automatic index registers (see Paragraph 4.2.2).

# PAGE (OCTAL) ADDRESSES

0	0000-0177
1	0200-0377
2	0400-0577
3	0600-0777
4	1000-1177
5	1200-1377
6	1400-1577
7	1600-1777
10	2000-2177
11	2200-2377
12	2400-2577
13	2600-2777
14	3000-3177
15	3200-3377
16	3400-3577
17	3600-3777
20	4000-4177
21	4200-4377
22	4400-4577
23	4600-4777
24	5000-5177
25	5200-5377
26	5400-5577
27	5600-5777
30	6000-6177
31	6200-6377
32	6400-6577
33	6600-6777
34	7000-7177
35	7200-7377
36	7400-7577
37	76007777

12-0121

Figure 4-1. Organization of Memory, 8 Mode

# 4.1.3 Extended Memory

Additional 4K memory fields are organized in the same manner as the basic field. The Memory Field registers determine the assignment of fields (see Paragraph 4.6).

# 4.2 MEMORY ADDRESSING METHODS

# 4.2.1 Direct Addressing

In the 8 mode, all memory reference instructions have the same structure, which is shown in Figure 4-2.

Note that only seven bits (5-11) are available for use as an address. This is just sufficient to give access to 128 registers, or exactly one page. The state of bit 4 of the instruction determines which of two possible pages the 7-bit page address references. If this bit is 1, the page address is on the current page; that is, the one in which the instruction itself is stored. If bit 4 is 0, the page address is on Page 0. Thus, a memory reference instruction has direct access to a total of 256 registers of memory; the 128 locations of Page 0, and those of the current page.

#### Examples:

To store the contents of the AC in register 150 of the current page:

DCA 350 Octal code: 3350. The page address is 150; bit 4 (Page bit) set to 1 gives a total octal value of 350 for the address.

To store the contents of the AC in register 150 of Page 0:

DCA 150 Octal code: 3150. With the page bit set to 0, the complete octal address is 150.

As one can see from these examples, it is useful to think of page addresses running from 000-177 on Page 0, and from 200-377 on the current page.

## 4.2.2 Indirect Addressing

To gain access to registers outside of Page 0 or the current page, indirect addressing must be used. If bit 3 of a memory reference instruction is set to 1 (see Figure 4-2), the contents of the register designated by bits 5-11 are taken as the "effective" address of the operand. This is a full 12-bit number which gives the absolute address of any register in the 4K memory field.

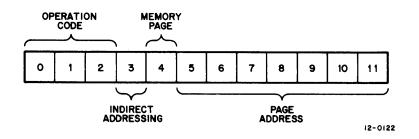


Figure 4-2. Memory Reference Instruction Format

In the following examples, as in normal 8 mode programming, the letter I is used as a mnemonic to represent the presence of a 1 in bit 3.

Examples:

a. To store the contents of the AC in register 100 of page 10 (absolute address 2100), using an effective address stored on the current page:

Absolute Address	Contents	Action
0410	DCA I 300	/OCTAL CODE: 3700. THE
		/EFFECTIVE ADDRESS IS
0500	2100	/CONTAINED IN REGISTER 500,
		/(PAGE ADDRESS 300)

b. To store the C(AC) in register 2100, using an effective address stored in Page 0:

Absolute Address	Contents	Action
0050	2100	/EFFECTIVE ADDRESS, STORED
• • • •		/ON PAGE 0
0410	DCA I 50	/OCTAL CODE: 3450. (BIT 4 = 0)

Table 4-1. Summary of Addressing Methods in 8 Mode

Bit 3	Bit 4	Effective Address
0	0	The operand is in Page 0 at the address specified by bits 5 through 11.
0	1	The operand is in the current page at the address specified by bits 5 through 11.
1	0	The absolute address of the operand is taken from the contents of the location in Page 0 designated by bits 5 through 11.
1	1	The absolute address of the operand is taken from the contents of the location in the current page designated by bits 5 through 11.

#### 4.2.3 Autoindexing

The eight registers in locations 10-17 of Page 0 have a special function when indirectly addressed. The contents of such a register are first incremented by 1; the result is taken as the effective address of the operand. This autoindexing feature allows the programmer to address a series of contiguous locations without extra address modification, as shown in the following example.

# Example:

BERS)
ני
<i>.</i> )
LE
)

When register 10 is first accessed, its contents are incremented from 777 to 1000, then used as the effective address to obtain the first addend. The next time around the loop, C(10) is again incremented by 1, to 1001, for the next operand. At the end of the sequence, C(10) = 1077.

# 4.3 8 MODE INSTRUCTIONS (See Appendix B)

# 4.3.1 Memory Reference Instructions

There are six memory reference instructions: DCA, TAD, AND, ISZ, JMP, and JMS. All may use either direct or indirect addressing. When indirect addressing is specified, 1.6 microseconds is added to the execution time.

DCA Deposit and Clear Accumulator

Form:	DCA Y
Octal code:	3000 + Y
Execution time:	3.2 $\mu$ s
Operation:	The contents of the AC are deposited in register Y; the AC is then cleared to 0000. The
	previous C(Y) are lost.


# TAD Two's Complement Add to Accumulator

Form:	TAD V
Octal code:	1000 + Y
Execution time:	3.2 µs
Operation:	The contents of Y are added to the contents of the AC, using two's complement addition. If
	there is a carry out of bit 0, the Link is complemented; otherwise, the Link is unchanged. The
	previous contents of the AC are lost; the contents of Y are not changed.

# AND Logical AND to Accumulator

Form:AND YOctal code:0000 + YExecution time: $3.2 \ \mu s$ Operation:The conter

The contents of the AC and the contents of Y are combined according to the Boolean AND relation, with the result left in the AC. The operation is performed on corresponding bits of each operand, independent of the other bits in the two operands. The truth table for the AND relation is shown below:

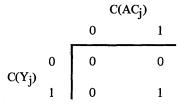

When corresponding bits of AC and Y are both 1, the result is 1. Otherwise, the result is 0. The previous C(AC) are lost; the C(Y) are unchanged.

#### ISZ Increment And Skip If Zero

Form:	ISZ Y
Octal code:	2000 + Y
Execution time:	3.2 µs
Operation:	The contents of Y are incremented by 1. If the result is 0000, the next instruction in sequence
	is skipped; otherwise, the next instruction is executed. The contents of the AC are not affected.

JMP Jump

Form:	JMP Y
Octal code:	5000 + Y
Execution time:	1.6 μs
Operation:	The address Y is placed in the PC, and the next instruction is taken from register Y; the
	program continues from that point. The contents of the AC are not affected.

JMS Jump to Subroutine

Form:	JMS Y
Octal code:	4000 + Y
Execution time:	3.2 µs
Operation:	The contents of the PC are stored in Y. The address $Y + 1$ is placed in the PC, and the program continues from $Y + 1$ . The contents of the AC are not affected. To return from the subroutine to the point at which the JMS was given (i.e., to the register immediately following the JMS), the instruction JMP I Y is executed. The contents of Y are taken as the effective address; since Y contains the PC stored at the time of the JMS, control returns to the calling program.

#### 4.3.2 Operate Class Instructions

This class is divided into two groups, I and II. Group I instructions include miscellaneous operations on the Accumulator and Link. Group II instructions include skips, program halt, and access to the console switches.

Operate class instructions are microprogrammable; they may be combined to provide several operations within a single instruction. However, combinations can be made only within a group; operations from different groups cannot be combined. To ease this restriction, the operation CLA (Clear the AC) is available in both groups. All Operate Class instructions require 1.6 microseconds for execution.

4.3.2.1 **Operate Class:** Group I – The microprogram structure of Group I instructions is shown in Figure 4-3. Any combination of these functions can be made, but the programmer must be aware of the order in which the operations are performed when the instruction is executed. This order is as follows:

- 1. CLA, CLL
- 2. CMA, CML
- 3. IAC
- 4. RAR, RAL, RTR, RTL

Certain combinations of Group I operations are common enough to be assigned separate mnemonics. These are described in Paragraph 4.3.2.2.

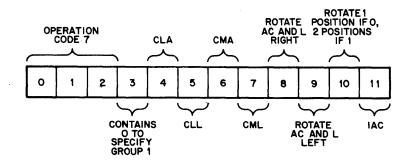


Figure 4-3. Group I Operate Class Instruction Format

## NOP No Operation

Octal code:7000Operation:None. This instruction may be used to provide short delays (1.6 microseconds per instruction),<br/>or to hold a place for instructions to be inserted by the programmer.

CLA Clear Accumulator

Octal code:7200Operation:The contents of the AC are cleared to 0000.

CLL Clear Link

Octal code:7100Operation:The content of the Link is cleared to 0.

CMA Complement Accumulator

Octal code:	7040
Operation:	The one's complement of the contents of the AC replaces the original contents of the AC.
	Each bit that is 0 becomes 1, and vice versa.

## CML Complement Link

Octal code:7020Operation:The content of the Link is complemented.

#### IAC Increment Accumulator

Octal code: 7001 Operation: The contents of the AC are incremented by 1, using two's complement arithmetic. A carry out of bit 0 complements the Link.

RAR Rotate Accumulator Right

Octal code: 7010 Operation: 7010 The contents of the AC and Link, taken as a 13-bit register, are rotated right one position. A bit rotated out of  $AC_{11}$  enters the Link; the bit rotated out of the Link enters  $AC_0$ . (See Figure 4-4.)

# RTR Rotate Two Places Right

Octal code:	7012
Operation:	The contents of the AC and Link, taken as a 13-bit register, are rotated two positions to the
-	right. (See Figure 4-4.) This is the equivalent of two RAR instructions.

# RAL Rotate Accumulator Left

Octal code:	7004
Operation:	The contents of the AC and Link, taken as a 13-bit register, are rotated one place to the left. A
	bit leaving $AC_0$ enters the Link; a bit leaving the Link enters $AC_{11}$ . (See Figure 4-4.)

#### RTL Rotate Two Places Left

Octal code:7006Operation:The contents of the AC and Link, taken as a 13-bit register, are rotated two positions left. (See<br/>Figure 4-4.) This is equivalent to two RAL instructions.

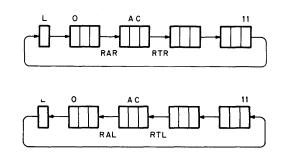


Figure 4-4. Rotation Scheme for RAR, RTR, RAL, RTL

4.3.2.2 Combined Operations: Group I – The following combined operations have been given separate mnemonics for programming convenience.

# STA Set Accumulator (CLA + CMA)

Octal code:7240Operation:Clear, then complement the AC. Resulting C(AC) = 7777.

STL Set Link (CLL + CML)

Octal code:	7120
Operation:	Clear, then complement the Link. Resulting $C(L) = 1$ .

CIA Complement and Increment Accumulator (CMA + IAC)

Octal code:	7041
Operation:	Complement the AC, then increment the result by 1. This gives the two's complement of the
	original C(AC). The two's complement of a number is defined as the one's complement plus 1.

GLK Get Link (CLA + RAL)

Octal code:	7204
Operation:	Clear the AC, then rotate one place left, thus putting the contents of the Link into $AC_{11}$ . This
	instruction is useful in multiple precision arithmetic.

Other Useful Combinations – The programmer can place a number of selected constants in the AC by combining Group I operations as shown:

Octal Code		Combi	ination		Resulting C(AC)
7201	CLA	IAC			0001
7326	CLA	STL	RTL		0002
7325	CLA	STL	IAC	RAL	0003
7307	CLA	CLL	IAC	RTL	0004
7327	CLA	STL	IAC	RTL	0006
7344	STA	CLL	RAL		7776 (-2)
7346	STA	CLL	RTL		7775 (-3)
7330	CLA	STL	RAR		4000
7332	CLA	STL	RTR		2000
7333	CLA	STL	IAC	RTR	6000


4.3.2.3 **Operate Class: Group II** – The microprogram structure of Group II operations is shown in Figure 4-5. Any of these operations may be combined, but the programmer must be aware of the sequence of events. In addition, the sense of the skip instruction determines the manner in which combined skips are interpreted. If bit 8 is a 0, the logical OR of the tested conditions will cause a skip; if this bit is a 1, the logical AND of the conditions will cause the skip. In the first case, this means that the skip will occur if any one of the conditions tested is true; in the second case, the skip will occur only if all the conditions tested are true. The various combinations are described in Paragraph 4.3.2.4.

The sequence of events in a Group II instruction is as follows:

- 1. Skips
- 2. CLA

3. OSR

4. HLT occurs after all other specified operations have been performed.

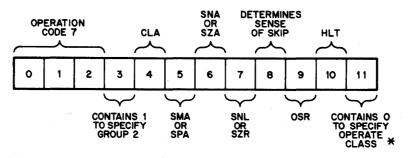

\* THIS BIT DISTINGUISHES GROUP II OPERATE CLASS INSTRUCTIONS FROM THE OPTIONAL EAE INSTRUCTION SET, IN WHICH THIS BIT IS SET TO 1.

Figure 4-5. Group II Operate Class Instruction Format

CLA Clear AC

Octal code: 7600 Operation: Clear the AC

SKP Skip Unconditionally

Octal code:7410Operation:The next instruction in the program sequence is unconditionally skipped.

SNL Skip On Non-Zero Link

Octal code:7420Skip condition:The contents of the Link equal 1.

SZL Skip On Zero Link

Octal code:7430Skip condition:The contents of the Link equal 0.

SZA Skip On Zero Accumulator

Octal code: 7440 Skip condition: The contents of the AC equal 0000.

SNA Skip On Non-Zero Accumulator

Octal code:7450Skip condition:The contents of the AC are not equal to 0000.

SMA Skip On Minus Accumulator

Octal code:7500Skip condition:The contents of  $AC_0$  equal 1. By convention, a negative number is one in which the most<br/>significant digit is 1. Thus, all numbers between 4000 and 7777, inclusive, are negative. The

two's complement of such a number is its positive counterpart. In this sense, 7777 is equivalent to -1; 4000 is equivalent to -4000. The two's complement sum of a number and its two's complement is always zero.

SPA Skip On Plus Accumulator

Octal code: Skip condition:	7510 The contents of $AC_0$ equal 0. By the convention described above, a number is positive if its most significant digit is 0.	
OSR OR Switch I	Register With Accumulator	
Octal code: Operation:	7404 The contents of the console switch register (Right Switches) are combined with the contents of the AC by the logical Inclusive OR relation; the result is left in the AC.	
	If either bit of a corresponding pair is set to 1, the result is 1. The result is 0 only if both AC and SR bits are 0. This instruction is normally used with CLA to obtain the actual status of the Switches (see below).	
HLT Halt		
Octal code: Operation:	7402 The processor stops. The PC contains the address of the register following the HLT instruction. The contents of the other processor registers are not affected.	
LAS Load Accumulator From Switches (CLA + OSR)		

Octal code:	7604
Operation:	Clear the AC, then OR the contents of the Right Switches with C(AC). This places the status
	of the switches in the AC. If the switch is set to 1, the corresponding AC bit is set to 1.

4.3.2.4 Combined Skips In Group II – The possible skip combinations are listed, with the conditions for a skip to occur.

Co	mbinatio	n	Octal Code	A skip will occur if
SZA	SNL		7460	C(AC)=0000, or C(L)=1, or both
SZA	SMA		7540	$C(AC)=0000$ , or $C(AC_0)=1$ , or both
SMA	SNL		7520	$C(AC_0)=1$ , or $C(L)=1$ , or both
SZA	SMA	SNL	7560	$C(AC)=0000$ , or $C(AC_0)=1$ , or $C(L)=1$ , or
				any, or all of these.
				A skip will occur if and only if
SNA	SZL		7470	C(AC)≠0 and C(L)=0
SNA	SPA		7550	$C(AC) \neq 0$ and $C(AC_0) = 0$
SPA	SZL		7530	$C(AC_0)=0$ and $C(L)=0$
SNA	SPA	SZL	7570	$C(AC) \neq 0000$ and $C(AC_0)=0$ and
				C(L)=0

If CLA is combined with any skip, the AC is cleared after the conditions have been tested.

4.3.2.5 Input/Output Transfer Class – These instructions, all of which have the basic operation code of 6000, are used to service peripheral devices, enable and disable the program interrupt, operate the memory extension control, change from 8 to LINC programming mode, and provide maintenance operations for the LINCtape subprocessor. Most of these instructions are described in Chapter 6 with their associated devices. The program interrupt and memory extension control are discussed with their respective instructions in Paragraphs 4.4 and 4.6 of this chapter.

Mode Control – To change operating mode from 8 to LINC, the following IOT instruction is used.

# LINC Switch to LINC Mode

Octal code:6141Execution time:4.25 μsOperation:Starting with the next succeeding instruction, the central processor will operate in LINC mode.

# 4.4 PROGRAM INTERRUPT

# 4.4.1 Operation

To facilitate the handling of data transfers and the checking of peripheral device status, provision is made for interrupting a program when a given condition exists. In general, an interrupt occurs when a peripheral device flag is raised (i.e., when the device is available for service, when an operation has been completed, or when a specific condition, such as an alarm, occurs within the device).

The Program Interrupt (PI) is enabled or disabled by the program. When it is disabled, a device flag must be sensed by means of a skip; the program is not interrupted. When the interrupt is enabled, any device flag that is connected to the interrupt system will cause the following sequence of events to occur when that flag is raised:

- 1. The instruction in progress at the time of the PI request is completed.
- 2. The contents of the program counter are stored in register 0000, and 0001 is placed in the PC.
- 3. Processing continues, beginning with the instruction in register 0001.
- 4. The PI facility is disabled.

The two IOT instructions which control the PI facility are described below.

#### ION Interrupt On

Octal code:	6001
Execution time:	4.25 μs
Operation:	The PI facility is enabled immediately after the instruction following the ION has been executed. If a PI request is waiting at the time of the ION, the interrupt will occur after the next instruction has been completed. The enabling is delayed in this manner so that a PI sequent particular completes and program before a subsequent PI request destruction.
	service routine can return to the interrupted program before a subsequent PI request destroys
	the contents of register 0000.

#### IOF Interrupt Off

Octal code:6002Execution time:4.25 μsOperation:The PI facility is disabled. Subsequent requests will not cause a PI, although any flag causing a<br/>request may be sensed in the usual manner with an IOT skip.

#### 4.4.2 Using the Program Interrupt

Normally, when a PI occurs, the instruction in register 0001 is a JMP to a PI service routine, which examines the expected flags to determine which device or condition caused the request. The appropriate routine is then called to service the device. During this time, the PI facility is disabled. When the device service routine is completed, control normally returns to the PI handling routine for restoring the PI facility and exiting to the main program. The last two instructions of such a routine would be:

ION	/ENABLE PI FACILITY
JMP I 0	/RETURN TO MAIN PROGRAM AT THE ADDRESS
	<b>/STORED IN REGISTER 0000</b>

The PI is not enabled until the JMP I 0 has been executed, so that the return to the main program is completed before a waiting request can cause another PI.

NOTE

Refer to Paragraph 3.3.15 for the discussion of additional aspects of Program Interrupt during LINC mode programming.

#### 4.5 EXTENDED ARITHMETIC ELEMENT TYPE KE12

#### 4.5.1 Operation

The Extended Arithmetic Element (EAE), Type KE12, adds a complete automatic multiplication and division facility to the PDP-12. Programming is provided by a class of 8 mode instructions. The AC and MQ are used to accommodate full 24-bit products and dividends, and the remainder and quotient after a division. Shifting, normalizing, and register setup instructions are included. All operands are treated as unsigned integers; the programmer must establish his own sign conventions. The normalizing instruction facilitates the writing of floating-point subroutines.

#### 4.5.2 EAE Instructions

The EAE instruction set has a basic operation code of 7401; some functions are microprogrammable, as in Operate Class instructions. The microprogram structure of the EAE class is shown in Figure 4-6.

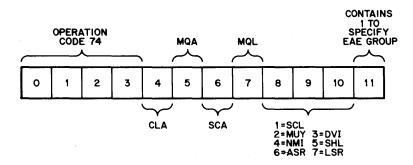


Figure 4-6. EAE Instruction Format

As with other microprogrammed instructions, EAE operations are performed in a given order. Operations can be combined in a single instruction, except that operations occurring at the same time cannot be combined with meaningful results.

The order of events is as follows:

CLA
 MQA, MQL, SCA
 SCL, MUY, DVI, SHL, ASR, LSR

CLA Clear AC

Octal code:	7601
Execution time:	1.6 μs
Operation:	Clear the AC. The MQ and Link are unaffected.

CAM Clear AC and MQ

Octal code:	7621
Execution time:	1.6 µs
Operation:	The AC and the MQ is cleared.

MQA Place MQ in AC

Octal code:	7501
Execution time:	1.6 µs
Operation:	The contents of the MQ are ORed into the AC. The C(MQ) are unchanged.

NOTE

All twelve bits are transferred; this is *not* identical to the LINC mode QAC instruction (Paragraph 3.3.11).

# MQL Load MQ from AC

Octal code:	7421
Execution time:	1.6 µs
Operation:	The MQ is cleared. The contents of the AC are placed in the MQ. The previous C(MQ) are lost.
	The AC is cleared at the end of the instruction.

SCA Step Counter to AC

Octal code:	7441
Execution time:	1.6 µs
Operation:	The contents of the step counter are ORed inclusively with the contents of $AC_{7-11}$ ; the result
	is left in the AC. To obtain the actual step count, SCA is combined with CLA (combined op-
	eration code: 7641).

All other EAE instructions, except NMI, require two words: the first contains the operation to be performed, the second contains the operand. In the following descriptions, the notation p + 1 designates the register containing the operand.

SCL Load Step Counter

Octal code:	7403
Execution time:	3.2 µs
Operation:	The complement of the contents of bits 7-11 of $p + 1$ is placed in the SC.

MUY Multiply

Octal code: Execution time: Operation:	7405 9.0 $\mu$ s The number in the MQ is multiplied by the number in register p + 1. At the conclusion of this instruction the Link contains a 0. The most significant 12 bits of the product are in the AC and the least significant 12 bits are in the MQ.
DVI Divide	
Octal code: Execution time: Operation:	7407 4.0 $\mu$ s to 10.0 $\mu$ s The 24-bit dividend is held in the AC (most significant part) and MQ (least significant part); the divisor is in register p + 1. At the conclusion of the division, the quotient is in the MQ, and the remainder in the AC. If the division was carried out, the Link is left clear. If either dividend or divisor is zero, the operation ends after one step and the Link is set to 1 to

dividend or divisor is zero, the operation ends after one step and the Link is set to 1, to indicate that a divide overflow occurred.

#### NMI Normalize

Octal code: Execution time: **Operation**:

7411 (not microprogrammable)

 $1.6 \,\mu s + 0.40 \,\mu s/step$ 

Figure 4-7.

The AC and MQ are treated as a single 24-bit register. The combined contents of the AC and MQ are shifted left until  $C(AC_0)$  differs from  $C(AC_1)$  or until 6000 0000 is contained in the combined AC and MQ. Bits shifted out of  $AC_0$  enter the Link; bits shifted out of the Link are lost. Zeros enter  $MQ_{11}$  and are shifted up the registers. At the end of the operation, the SC contains the number of shifts performed, which is the exponent of the normalized floating point fraction. The shift path is shown in Figure 4-7.

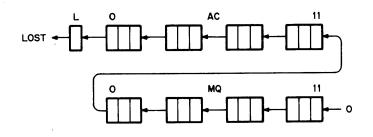


Figure 4-7. Shift Path for NMI, SHL

# SHL Shift Left

Octal code: 7413  $3.2 \ \mu s + 0.40 \ \mu s/step$ Execution time: Operation: The combined contents of the Link, AC and MQ are shifted left N + 1 places, where N is the number contained in bits 7-11 of register p + 1. Bits shifted out of the Link are lost; zeros are shifted into  $MQ_{11}$  and up the registers. The shift path is identical to that for NMI, as shown in

4-15

# ASR Arithmetic Shift Right

Octal code: Execution time: Operation: 7415 3.2  $\mu$ s + 0.40  $\mu$ s/step

The combined contents of the AC and MQ are shifted right N + 1 places, where N is the number contained in bits 7-11 of register p + 1. The sign bit  $(AC_0)$  is reproduced in all vacated bit positions, and is also placed in the Link. Bits shifted out of MQ<sub>11</sub> are lost, as is the previous C(L). The shift path is shown in Figure 4-8.

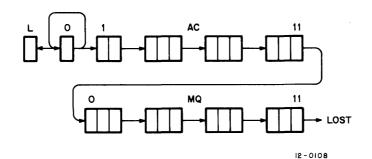


Figure 4-8. Shift Path for ASR

### LSR Logical Shift Right

Octal code: Execution time: Operation:

 $3.2 \,\mu s + 0.40 \,\mu s/step$ 

7417

The combined contents of the AC and MQ are shifted right N + 1 places, where N is the number contained in bits 7-11 of register p + 1. Bits shifted out of the MQ<sub>11</sub> are lost; zeros are shifted into the Link and down the register. The shift path is shown in Figure 4-9.

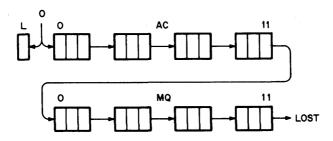


Figure 4-9. Shift Path for LSR

#### 4.5.3 EAE Programming

4.5.3.1 Multiplication – Multiplication is performed as follows:

1. Load the AC with the multiplier using the TAD instruction.

2. Transfer the contents of the AC into the MQ using the MQL command.

3. Give the MUY command.

Note that steps 2 and 3 can be combined into one instruction.

The contents of the MQ are then multiplied by the contents of the next successive core memory location (p + 1). At the conclusion of the multiplication the most significant 12 bits of the product are held in the AC and the least significant bits are held in the MQ. This operation takes 9.0 microseconds; at the end of this time, the next instruction is executed.

The following program examples demonstrate the operation of the EAE during multiplication:

a. Multiplication of 12-bit Unsigned Numbers

Enter with a 12-bit multiplicand in AC and a 12-bit multiplier in core memory. Exit with high order half of product in a core memory location labelled HIGH, and with low order half of product in the AC. Program time is approximately 13 microseconds.

	MQL MUY	/LOAD MQ WITH MULTIPLICAND, INITIATE
		/MULTIPLICATION
MLTPLR,	0000	/MULTIPLIER
	DCA HIGH	<b>/STORE HIGH ORDER PRODUCT</b>
	MQA	/LOAD AC WITH LOW ORDER PRODUCT

b. Multiplication of 12-Bit Signed Numbers, 24-Bit Signed Product

Enter with a 12-bit multiplicand in AC and a 12-bit multiplier in core memory. Exit with signed 24-bit product in core memory locations designated HIGH and LOW.

	1	
	CLL	
	SPA	/MULTIPLICAND POSITIVE?
	CMA CML IAC	/NO. FORM TWO'S COMPLEMENT
	MOL	/LOAD MULTIPLICAND INTO MQ
	TAD MLTPLR	EOAD MOETH EICAND INTO MQ
	SPA	MILL TIDI IED DOCITIVES
		/MULTIPLIER POSITIVE?
	CMA CML IAC	/NO. FORM TWO'S COMPLEMENT
	DCA MLTPLR	
	RAL	
	DCA SIGN	/SAVE LINK AS SIGN INDICATOR
	MUY	/MULTIPLY
MLTPLR,	0000	/MULTIPLIER
	DAC HIGH	
	TAD SIGN	
	RAR	/LOAD LINK WITH SIGN INDICATOR
	MQA	
	SNL	/IS PRODUCT NEGATIVE?
	JMP LAST	/NO, MULT DONE, EXIT
	CLL CMA IAC	/YES
	DCA LOW	COMPLEMENT RESULT
	TAD HIGH	COM LEMENT RESULT
	° CMA	
	SZL	/LINK USED TO COUPLE CARRY
	SEL	FROM BIT 12 TO BIT 11
	140	/OF DOUBLE-LENGTH PRODUCT
	IAC	
	DCA HIGH	
T A GT	SKP	
LAST,	DCA LOW	

## 4.5.3.2 **Division** – Division is performed as follows:

1. Load the least significant 12 bits of the dividend into the AC using the TAD instruction, then transfer the contents of the AC into the MQ using the MQL command.

2. Load the most significant 12 bits of the dividend into the AC.

3. Give the DVI command.

The 24-bit dividend contained in the AC and MQ is divided by the 12-bit divisor contained in the next successive core memory location (p + 1). This operation takes a maximum of 10.0 microseconds; when complete, a 12-bit quotient is held in the MQ, the 12-bit remainder is in the AC, and the Link holds a 0 if divide overflow did not occur. To prevent divide overflow, the divisor in the core memory must be greater than the 12 bits of the dividend held in the AC. When divide overflow occurs, the Link is set and the division is concluded after only one cycle. Therefore, the instruction following the divisor in core memory should be an SZL microinstruction to test for overflow. The instruction following the SZL may be a jump to a subroutine that services the overflow. This subroutine may cause the program to type out an error indication, rescale the divisor or the dividend, or perform other mathematical corrections, then repeat the divide routine.

The following program examples demonstrate the use of the EAE in division.

a. Division of 24-Bit Unsigned Numbers

Enter with the low order 12 bits of the dividend in the AC and the high order 12 bits of the dividend in memory location labeled HIGH 12. The divisor is in memory location labeled DIVISOR upon entry. Exit with the quotient in the AC and the remainder in location labeled REMAIN.

CLL MQL TAD HIGH 12 DVI DIVISOR, (12 BIT DIVISOR HERE) SZL JMP EXIT DCA REMAIN MQA /CLEAR LINK FOR OVERFLOW CHECK. /LOAD MQ WITH LOW ORDER DIVIDEND /LOAD AC WITH HIGH ORDER DIVIDEND /INITIATE DIVIDE

/OVERFLOW? /YES – EXIT /NO – STORE REMAINDER /AND LOAD AC WITH QUOTIENT

b. Division of 24-Bit Signed Numbers

Enter with the low order 12 bits of the dividend in memory location labeled LOW 12 and the high order 12 bits of the dividend in memory location labeled HIGH 12. The 12 bit divisor is in location labeled DIVISOR. Exit with the unsigned remainder in location labeled REMAIN, and the signed quotient in the AC.

CLA CLI	/CLEAR AC AND LINK
TAD HIGH 12	/LOAD AC WITH HIGH ORDER DIVIDEND
SMA CLA	/DIVIDEND NEGATIVE?
JMP .+12	/NO – SKIP NEGATION
TAD LOW 12	<b>/YES – LOAD AC WITH LOW ORDER DIVIDEND</b>
CMA IAC	/NEGATE IT AND
DCA LOW 12	/STORE IT BACK
TAD HIGH 12	/LOAD AC WITH HIGH ORDER DIVIDEND

CMA	/NEGATE IT
SZL	/WAS THERE A CARRY FROM LOW ORDER?
IAC	/YES – INCREMENT HIGH ORDER
DCA HIGH 12	AND STORE IT BACK
CLL CML	SET LINK TO 1 FOR SIGN CHECK
TAD DIVISOR	LOAD AC WITH DIVISOR
SPA	/IS IT POSITIVE?
CMA CML IAC	/NO – NEGATÉ IT
DCA DIVISOR	
	AND STORE IT BACK
SNL	/CHECK LINK FOR SIGN OF RESULT
CMA	/POSITIVE – STORE -1 IN SIGN
CLL	/NEGATIVE – STORE 0 IN SIGN
DCA SIGN	
TAD LOW 12	/GET LOW ORDER DIVIDEND
MQL	STORE IT IN MQ
TAD HIGH 12	LOAD AC WITH HIGH ORDER DIVIDEND
DVI	DIVIDE
DIVISOR, (DIVISOR STORED HERE)	
SZL	/OVERFLOW?
JMP EXIT	/YES – EXIT ON OVERFLOW
DCA REMAIN	/NO – STORE UNSIGNED REMAINDER
MQA	LOAD AC WITH QUOTIENT
ISZ SIGN	/SHOULD QUOTIENT BE NEGATIVE?
CMA IAC	
UNIA IAU	/YES – NEGATE IT

#### 4.6 EXTENDED MEMORY

When additional 4096-word memory banks are attached to the PDP-12, the Memory Extension Control provides access to the additional storage, both for programs and data. The registers of the Control are already built into the PDP-12; they are described in Paragraph 3.3.15 in relation to LINC mode memory control. In the 8 mode, the functions of these registers are the same, but only a portion of each register is used. The Instruction Field (IF), Data Field (DF), and Instruction Field Buffer (IB) registers are each five bits long; the two low-order bits of the 5-bit total pertain only to LINC mode programming operations. In 8 mode the Save Field register (Interrupt Buffer) uses only six bits; the four low-order bits are unused.

#### 4.6.1 **Registers**

4.6.1.1 Instruction Field Register (IF), 3 Bits – These three bits serve as an extension of the PC for determining the 4096-word field from which executable instructions are to be taken. All direct memory references are made to registers in the Instruction Field. With one exception, all JMP and JMS instructions, whether direct or indirect, are to registers within the Instruction Field. The exception is the first JMP or JMS executed after a CIF instruction is given. This causes the field to change.

4.6.1.2 Data Field Register (DF), 3 Bits – These three bits serve as an extension of the Memory Address register for determining which memory field contains the operands to be accessed by the memory reference instructions AND, TAD, DCA, and ISZ when indirect addressing is used. The Data Field and Instruction Field may be set to the same field.

4.6.1.3 Instruction Field Buffer (IB), 3 Bits – This serves as an input buffer for the IF. Except for a direct transfer from the console switches, all transfers into the IF must pass through the IB. When a CIF or RMF instruction is executed, information going to the IF is first placed in the IB. At the next occurrence of a JMP or JMS, the contents of the IB are transferred to the Instruction Field register, and programming continues in the new field, starting in the target register of the jump.

4.6.1.4 Save Field Register (SF), 6 Bits – Also called the Interrupt Buffer. When a program interrupt occurs, the contents of the IF and DF are stored in the Save Field register, as shown in Figure 4-10. After the PI has been serviced, an RMF instruction will cause the contents of the SF to be restored to the DF and IB. The SF can be examined by using the RIB instruction.

4.6.1.5 Break Field Register (BF), 3 Bits – When an external device requires extended memory for the transfer of data using the Data Break Facility, the contents of the BF specify the memory field to be accessed.

#### 4.6.2 Instructions

All Extended Memory IOT instructions require 4.3 microseconds for execution.

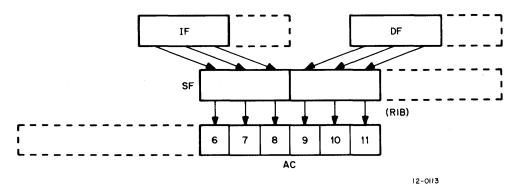


Figure 4-10. Data Path to SF and AC

#### CDF Change Data Field

Octal code: $62N1, 0 \le N \le 7$ Operation:The quantity N is transferred to the Data Field register. All subsequent indirect memory<br/>references by AND, TAD, ISZ, and DCA are to the new field.

CIF Change Instruction Field

Octal code: $62N2, 0 \le N \le 7$ Operation:The quantity N is transferred to the Instruction Field Buffer. At the occurrence of the next<br/>JMP or JMS instruction, whether direct or indirect, the contents of the IB are transferred to<br/>the IF. The effective address of the jump is placed in the PC, and the program continues from<br/>that address in the new Instruction Field.

In both CIF and CDF, the number N occupies bits 6-8 of the instruction code.

RDF Read Data Field

Octal code:6214Operation:The contents of the Data Field register are ORed into  $AC_{6-8}$ . The other bits of the AC are unaffected.

# RIF Read Instruction Field

Octal code:	6224
Operation:	The contents of the Instruction Field register are ORed into $AC_{6-8}$ . The other bits of the AC
	are unaffected.

# RIB Read Interrupt Buffer

Octal code:	6234
Operation:	The contents of the Save Field register (Interrupt Buffer) are transferred to the AC, as follows:
	Bits 0-2 (IF) are ORed into $AC_{6-8}$ ; bits 3-5 (DF) are ORed into $AC_{9-11}$ .

# RMF Restore Memory Field

Octal code:	6244
Operation:	The contents of the Save Field register are placed in the Instruction Field Buffer and DF as
	follows: Bits 0-2 (original Instruction Field) are transferred to the IB; bits 3-5 (original Data
	Field) are restored to the Data Field register. This instruction is used to restore the Memory
	Field registers after a program interrupt has been serviced. Normally, the next instruction after
	the RMF would be JMP I 0; the address of the interrupted program, stored in register 0000 of
	field 0, is placed in the PC, and the contents of the IB are placed in the Instruction Field
	register; the program thus returns to the main program with the Memory Fields restored to
	their original values.

# 4.6.3 Programming

All instructions, effective addresses, and directly-addressed operands are taken from the field specified by the contents of the Instruction Field Register. All indirectly-addressed operands are taken from (or are stored in) the field specified by the contents of the Data Field Register. The following chart shows the results of the four possible addressing combinations, when the IF and DF designate different memory fields.

Instructio Indirect	on Bits Page	Fie IF	lds DF	Effective Address
0	0	m	n	The operand is in Page 0 of Field m at the address specified by instruction bits 5-11.
0	1	m	n	The operand is in the current page of Field m.
1	0	m	n	The effective address of the operand is in Page 0 of Field m at the location specified by instruction bits 5-11. The operand is in Field n, in the location specified by the contents of the effective address.
1	1	m	n	The effective address is taken from the current page of Field m, at the location specified by instruction bits 5-11. The operand is in Field n, in the location specified by the contents of the effective address.

4.6.3.1 Autoindexing – When any memory field is used as an Instruction Field, registers 10-17 of that field have autoindexing properties, just as the corresponding locations in field 0 do. This is necessary so that a program can operate correctly regardless of the actual memory field assigned by the IF. When an autoindex register is indirectly addressed, the resulting effective address is used to obtain the operand from the Data Field specified by the DF.

Example:

C(IF) = 2.C(DF) = 4.C(AC) = 0.In field 4:C(4326) = 1107In field 2:C(0012) = 4325

The instruction TAD I 12 is executed in field 2.

C(0012) + 1 → C(0012). Resulting effective address is 4326. C(4326) in field 4 are added to the AC. C(AC) = 1107 when the instruction is completed.

4.6.3.2 Calling A Subroutine Across Fields – The problem is to let the subroutine know which field contains the calling program, so that it can return to the proper point when it's finished. This is most easily done by setting the DF to the same field as the IF, then setting the IF to the field containing the subroutine, and executing a JMS to read the subroutine. The subroutine uses the DF to indirectly obtain data from the calling field, then transfers the C(DF) back to the IF Buffer to return to the calling program. The following example shows a general procedure for doing this.

/CALLING PROGRAM IN FIELD 2, SUBROUTINE IN FIELD 4 /CURRENT DATA FIELD IS 1 /CALLING SEQUENCE SAVES CURRENT DF, PUTS IF IN DF, CALLS /SUBROUTINE. ON RETURN, ORIGINAL DF IS RESTORED

	• • • •	
	CLA	
	TAD KCDF	/CDF INSTRUCTION TO AC
	RDF	/C(DF) TO AC 6-8 FORMS CDF 10 (6211)
	DCA RESDF	<b>/STORE IN SEQUENCE TO RESTORE DF</b>
	TAD KCDF	/CDF TO AC
	RIF	/C(IF) TO AC 6-8 FORMS CDF 20 (6221)
	DCA SETDF	<b>/STORE IN SEQUENCE TO SET DF</b>
SETDF,	0000	/SETS DF TO CURRENT IF
	CIF 40	/SET IF BUFFER TO SUBROUTINE FIELD 4
	JMS I SUBADR	<b>JUMP TO SUBROUTINE IN FIELD 4</b>
RESDF,	0000	<b>/RESTORES ORIGINAL DF (FIELD 1)</b>
	••••	
SUBADR,	SUBRTN	ABSOLUTE ADDRESS OF SUBROUTINE
KCDF,	CDF	/CONSTANT

# /IN FIELD 4, THE SUBROUTINE HAS THE FOLLOWING GENERAL FORM

SUBRTN,	0 TAD KCIF RDF DCA RESIF	/C(PC) FROM CALLING PROGRAM /CIF INSTRUCTION TO AC /C(DF) TO AC 6-8 FORMS CIF 20 (6222) /STORE IN SEQUENCE TO RESTORE CALLING FIELD
RESIF,	····· •··· 6000	/SETS IF BUFFER TO RESTORE CALLING FIELD

4-22

	JMP I SUBRTN	JUMP BACK TO CALLING PROGRAM
KCIF,	CIF	/CONSTANT

The original contents of the IF, placed in the DF by the calling program, are used to form a CIF instruction which is placed in the subroutine program sequence just before the exit, to restore the original calling field.

4.6.3.3 **Program Interrupt** – If, when the PI facility is enabled, a PI request occurs, the contents of the IF and DF are saved in the Interrupt Buffer. The contents of the PC are stored in register 0000 of Field 0, and the next instruction is taken from register 0001 of Field 0. Regardless of the states of the Memory Field register, a PI always transfers control to Memory Field 0. When the interrupt has been serviced, the RMF instruction is used to restore the Memory Field registers to their original states. The last three instructions of a general interrupt service routine should be as follows:

RMF	<b>/RESTORES DF, PUTS ORIGINAL IF IN IF BUFFER</b>
ION	/ENABLE INTERRUPT
JMP I O	/SETS IF FROM IF BUFFER, AND RETURNS TO
	/MAIN PROGRAM.

# CHAPTER 5 INPUT/OUTPUT BUS DESCRIPTION

Because the processing power of a computer depends largely upon the range and number of peripheral devices that can be connected to it, the PDP-12 has been designed to interface readily with a broad variety of external equipment. This chapter defines the interface characteristics of the computer thus allowing the user to design and implement any electrical interfaces required to connect I/O devices to the PDP-12.

The simple I/O technique of the PDP-12, the availability of DEC's FLIP CHIP logic circuit modules, and DEC's policy of giving assistance wherever possible allow inexpensive, straightforward device interfaces to be realized. Should questions arise relative to the computer interface characteristics, the design of interfaces using DEC modules, or installation planning, customers are invited to telephone any of the sales offices or the main plant in Maynard, Massachusetts. Digital Equipment Corporation makes no representation that the interconnection of its circuit modules in the manner described herein will not infringe on existing or future patent rights. Nor do the descriptions contained herein imply the granting of licenses to use, manufacture, or sell equipment constructed in accordance herewith.

The PDP-12 contains a central processor and core memory composed of Digital's M Series TTL circuit modules. These circuits have an operating temperature range exceeding the limits of 50° F to 110° F, so air-conditioning is not required. Standard 115V, 50/60-Hz power operates an internal solid-state power supply that produces all required voltages and currents. High-capacity, high-speed I/O capabilities of the PDP-12 allow it to operate a variety of peripheral devices in addition to the standard Teletype keyboard/printer, tape reader, and tape punch. DEC options, consisting of an interface and normal data processing equipment, are available for connecting into the computer system. These options include a random access disk file, card equipment, line printers, magnetic tape transports, magnetic drums, analog-to-digital converters. CRT displays, and digital plotters. The PDP-12 system can also accept other types of instruments or hardware devices that have appropriate interfaces. Up to 61 devices requiring three programmed command pulses, or up to 183 devices requiring one programmed command pulse can be connected to the computer. The interface of any device to the computer does not require any modification to the central processor, and thus can be achieved in the field.

Control of some kind is needed to determine when an information exchange is to take place between the PDP-12 and peripheral equipment, and to indicate the location(s) in the computer memory which will accept or yield the data. Either the computer program or the I/O device can exercise this control. Transfers controlled by the computer, hence under control of its stored program, are called programmed data transfers.

Transfers made under control of the external I/O devices through the data break facility are called data break transfers.

### **Programmed Data Transfers**

The majority of I/O transfers occur under program control. To transfer and store information under program control takes about six times as much computer time as under the data break facility. In terms of real time, the duration of a programmed transfer is rather small, due to the high speed of the computer, and is well beyond that required for laboratory or process control instrumentation.

To realize full benefit of the built-in control features of the PDP-12, programmed I/O transfers should be used in most cases. Controls for devices using programmed data transfers are usually simpler and less expensive than controls for devices using data break transfers. Using programmed data transfer facilities, simultaneous operation of devices is limited only by the relative speed of the computer with respect to the device speeds, and the search time required to determine the device requiring service. Analog-to-digital converters, digital-to-analog converters, digital plotters, line printers, message switching equipment, and relay control systems typify equipment using programmed data transfers.

### **Data Break Transfers**

Devices which operate at very high rates of speed or which require very rapid response from the computer use the data break facilities. Use of these facilities permits an external I/O device to insert or extract words from the computer core memory, almost arbitrarily bypassing all program control logic. Because the computer program has no cognizance of such transfers, programmed checks of input data are made prior to use of information received in this manner. The data break is particularly well suited for devices that transfer large amounts of data in block form; e.g., random access disk file, high-speed magnetic tape systems, high-speed drum memories, or CRT display systems containing memory elements.

#### **Program Interrupt**

It is sometimes very useful for a program to be able to initiate operation of an I/O device and then continue with execution of programming which is not immediately related to the input-output operation, rather than wait for the device to become ready to transfer data. In this mode of operation, the device itself, through use of the PDP-12 Program Interrupt facility, initiates execution of the programming to transfer data to or from the computer. When the device requires service (i.e., when the device is ready to transfer data), it transmits an interrupt request signal to the computer. This signal causes the execution of the program currently underway to be interrupted, and program control to be transferred to a specific memory location. The contents of the program counter are stored in this location, and subroutine for servicing the I/O device beginning in the next core memory location specified by the contents of the program counter, which were saved when the interrupt occurred. The program interrupt hardware is designed so that interrupt requests from devices may be ignored if the program so desires.

#### Logic Symbols

The PDP-12 uses TTL logic internally. In order to discuss some of the internal logic pertaining to interfacing, it is necessary to understand the TTL symbology used in the PDP-12. The logic symbols are shown in Figure 5-1.

### Signal Names

All signals not originating at a flip-flop output are true when the line is at the level indicated by the suffix H (high) or L (low). Thus, a line labeled IOP 1 H is high when the pulse is being generated, and at all other times is ground. Similarly, AC CLEAR L is at ground for assertion, and positive otherwise.

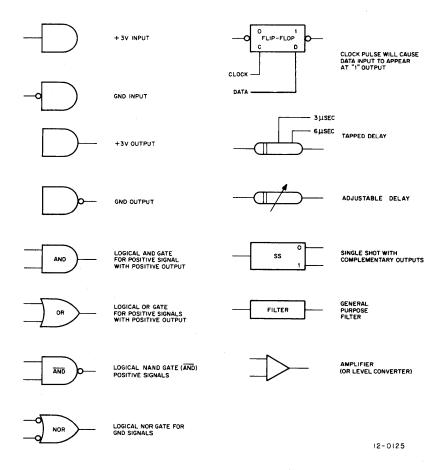


Figure 5-1. Logic Symbols

Signals originating at flip-flops are defined in terms of the flip-flop state. The following table illustrates the convention.

Signal Name	State of MB Flip-Flop	Signal Voltage
MB 03 (0) H	0	+3V
MB 03 (0) L	0	0V
MB 03 (1) L	1	0V
MB 03 (1) H	1	+3V

# NOTE

The line MB 03(0)H is the same line as MB 03(1)L, and MB 03(1)H is the same line as MB 03(0)L.

### 5.1 PROGRAMMED DATA TRANSFERS AND I/O CONTROL

The majority of I/O transfers take place under control of the PDP-12 program, taking advantage of control elements built into the computer. Although programmed transfers take more computer and actual time than data break transfers, the timing discrepancy is insignificant, considering the high speed of the computer with respect to most peripheral devices. The maximum data transfer rate for programmed operations of 12-bit words is 148 kHz when status checking (end, transfer check, etc.) is not done. This speed is well beyond the normal rate required for typical laboratory or process control instrumentation.

The PDP-12 is a parallel-transfer machine that distributes and collects data in bytes of up to twelve bits. All programmed data transfers take place through the accumulator, the 12-bit arithmetic register of the computer. The computer program controls the loading of information into the accumulator (AC) for an output transfer, and for storing information in core memory from the AC for an input transfer. Output information in the AC is power amplified, and supplied to the interface connectors for bussed connection to many peripheral devices. Then the program-selected device can sample these signal lines to strobe AC information into a control or information register. Input data arrives at the AC as pulses received at the interface connectors from bussed outputs of many devices. Gating circuits of the program-selected device produce these pulses. Command pulses generated by the device are connected to the input/output skip facility (IOS) to sample the condition of I/O device flags.

The IOS allows branching of the program based upon the condition or availability of peripheral equipment, effectively making programmed decisions to continue the current program or jump to another part of the program, such as a subroutine to service an I/O device.

The bussed system of input/output data transfers imposes the following requirements on peripheral equipment:

a. Each device must be able to sample the select code, generated by the computer during an IOT instruction<sup>\*</sup>, and, when selected, must be able to produce sequential IOT command pulses in accordance with the computer-generated IOP pulses. Circuits which perform these functions in the peripheral device are called Device Selectors (DS). Figure 5-2 shows the decoding of the IOT instruction.

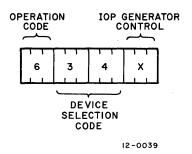


Figure 5-2. IOT Instruction Decoding

b. Each device receiving output data from the computer must contain gating circuits at the input of a receiving register capable of strobing the AC signal information into the register when triggered by a command pulse from the DS. Gating is also recommended at the input to the peripheral device in order to minimize loading on the BAC signal lines.

<sup>\*</sup>Appendix C provides a listing of IOT instructions.

- c. Each device sending input data to the computer must contain gating circuits at the output of the transmitting register capable of sampling the information in the computer output register and supplying a pulse to the computer input bus when triggered by a command pulse from the DS.
- d. Each device should contain a Busy/Done flag (flip-flop) and gating circuits that can pulse the computer I/O skip bus (IOS) upon command from the DS when the flag is set in the binary 1 state, to indicate that the device is ready to transfer another byte of information.

Figure 5-3 shows the information flow within the computer which effects a programmed data transfer with I/O equipment. All instructions stored in core memory as a program sequence are read into the memory buffer register (MB) and the instruction register (IR) for execution. The transfer of the operation code in the three most significant bits (bits 0, 1, and 2) of the instruction into the instruction register (IR) takes place and is decoded to produce appropriate control signals. The computer, upon recognition of the operation code as an IOT instruction, enters a 4.25-microsecond expanded computer cycle and enables the IOP generator to produce time-sequenced IOP pulses as determined by the three least significant bits of the instruction (bits 9, 10, and 11 in the MB). These IOP pulses and the buffered output of the select code from bits 3-8 of the instruction word in the MB are bussed to device selectors in all peripheral equipment.

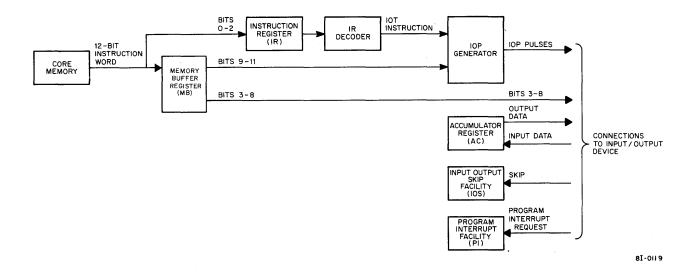


Figure 5-3. Programmed Data Transfer Interface Block Diagram

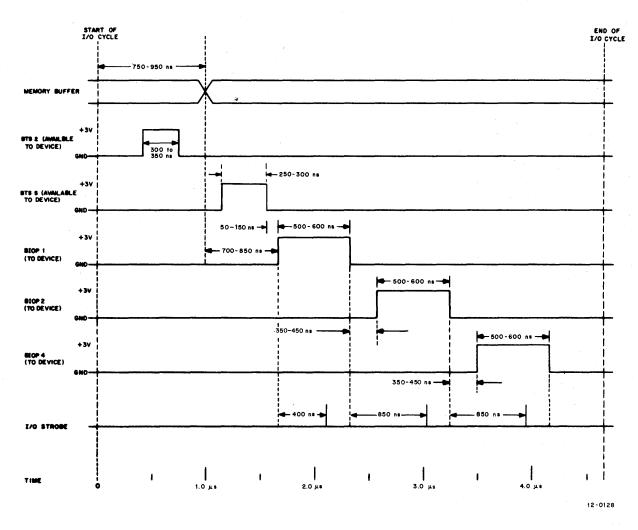


Figure 5-4. Programmed Data Transfer Timing

Figure 5-4 indicates the timing of programmed data transfers.

Devices which require immediate service from the computer program, or which require too much computer time to discontinue the main program until transfer needs are met, can use the program interrupt (PI) facility. In this mode of operation, the computer can initiate operation of I/O equipment and continue the main program until the device requests servicing. A signal input to the PI requesting a program interrupt causes storing of the conditions of the main program and initiates a subroutine to service the device. At the conclusion of this subroutine, the main program is reinstated until another interrupt request occurs.

### 5.1.1 Timing and IOP Generator

When the IR decoder detects an operation code of  $6000_8$ , it identifies an IOT instruction and the computer generates a slow cycle. The Slow Cycle signal is ANDed with TP4 to generate I/O Start and sets the I/O PAUSE flip-flop. The logic of the IOP generator consists of a re-entrant delay chain which generates three time states. These time states are gated with MB bits 11, 10, and 9 to generate IOP 1, IOP 2, and IOP 4, respectively. Note that an IOP is generated only if the corresponding MB bit is set although the I/O timing remains constant. At the end of each IOP, the state of the I/O interface is sampled by an I/O strobe pulse.

Following the end of IOP 4 time, the PAUSE flip-flop is reset and the normal timing chain is restarted.

Unlike PDP-8/I, the PDP-12 does not make a timing distinction between internal I/O functions and normal I/O, thus all I/O instructions cause the slow cycle.

Instruction Bit	IOP Pulse	IOT Pulse	Event Time	Used Primarily For, But Not Restricted To
11	IOP 1	IOT 1	1	Sampling Flags, Skipping.
10	IOP 2	IOT 2	2	Clearing Flags, Clearing AC.
9	IOP 4	IOT 4	3	Reading Buffers, Loading Buffers and Clearing Buffers.

### 5.1.2 Device Selector (DS)

Bits 3 through 8 of an IOT instruction serve as a device or subdevice select code. Bus drivers in the processor buffer the 1 and 0 output signals of  $MB_{3-8}$  and distribute them to the interface connectors for bussed connection to all device selectors. Each DS is assigned a select code and is enabled only when the assigned code is present in the MB. When enabled, a DS regenerates IOP pulses as IOT command pulses and transmits these pulses to skip, input, or output gates within the device and/or to the processor to clear the AC.

Each group of three command pulses requires a separate DS channel, and each DS channel requires a different select code (or I/O device address). Therefore, one I/O device can use several DS channels. Note that the processor produces the pulses identified as IOP 1, IOP 2, and IOP 4 and supplies them to all device selectors. The device selector produces pulses IOT 1, IOT 2, and IOT 4, which initiate a transfer or effect some control. Figure 5-5 shows generation of command pulses by several DS channels.

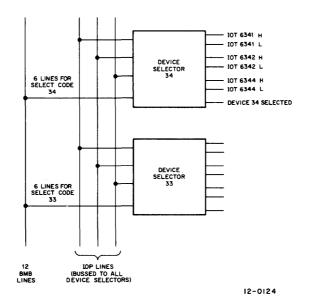


Figure 5-5. Generation of IOT Command Pulses by Device Selectors

The logical representation for a typical channel of the DS, using channel 34, is shown in Figure 5-6. An 8-input AND gate is wired to receive the appropriate signal outputs from the  $MB_{3-8}$  for select code 34, which activates the channel. In the DS module, 6 input pins are connected to the complementary outputs of  $MB_{3-8}$ , and 2 are open to receive subdevice or control condition signals as needed. Either the 1 or the 0 signal from each MB bit is connected to the AND gate when establishing the select code. The positive output of the AND gate indicates when the IOT instruction selection selects the device, and can, therefore, enable circuit operations with the device. This output also enables three power NAND gates, each of which produces a ground output pulse if the corresponding IOT pulse occurs. The ground output from each gate is an IOT command pulse identified by the select code and the number of the initiating IOP pulse. Three inverters receive the negative IOT pulses to produce complementary IOT output pulses.

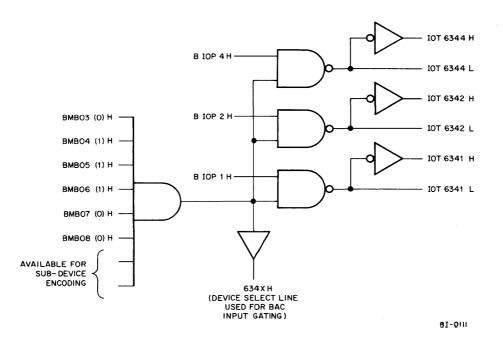


Figure 5-6. Typical Device Selector (Device 34)

An amplifier module can be connected in each channel of the DS to provide greater output drive.

### 5.1.3 Input/Output Skip (IOS)

Generation of an IOS pulse can be used to test the condition or status of a device flag, and to continue to or skip the next sequential instruction based upon the results of this test. This operation is performed by a 2-input AND gate in the device connected as shown in Figure 5-7. One input of the skip gate receives the status level (flag output signal), the second input receives an IOT pulse, and the output drives the computer skip (designated SKIP BUS L) to ground when the skip conditions are fulfilled. The state of the skip bus is sampled at the end of each IOT. If the bus has been driven to ground, the contents of the program counter are incremented by 1 to advance the program count without executing the instruction at the current program count. In this manner, an IOT instruction can check the status of an I/O device flag and skip the next instruction if the device requires servicing. Programmed testing in this manner allows the routine to jump out of sequence to a subroutine that services the device tested.

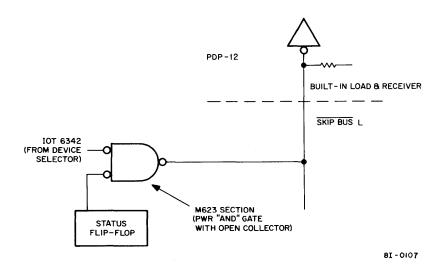


Figure 5-7. Use of IOS to Test the Status of an External Device

Assuming that a device is already operating, a possible program sequence to test its availability is:

100,	6342	/SKIP IF DEVICE 34 IS READY
101,	5100	/JUMP1
102,	5XXX	/ENTER SERVICE ROUTINE FOR DEVICE 34.

When the program reaches address 100, it executes an instruction skip with 6342. The skip occurs only if device 34 is ready when the IOT 6342 command is given. If device 34 is not ready, the flag signal disqualifies the skip gate, and the skip pulse does not occur. Therefore, the program continues to the next instruction, which is a jump back to the skip instruction. In this example, the program stays in this waiting loop until the device is ready to transfer data, at which time the skip gate in the device is enabled and the skip pulse is sent to the computer IOS facility. When the skip occurs, the instruction in location 102 transfers program control to a subroutine to service device 34. This subroutine can load the AC with data and transfer it to device 34, or can load the AC from a register in device 34 and store it in some known core memory location.

### 5.1.4 Accumulator

The binary 1 output signal of each flip-flop of the AC, buffered by a bus driver, is available at the interface connectors. These computer data output lines are bus-connected to all peripheral equipment receiving programmed data output information from the PDP-12. The I/O bus input on each flip-flop of the AC is connected to the interface connectors for bussing to all peripheral equipment supplying programmed data input to the PDP-12. An IOP that drives the input bus terminal to ground sets the corresponding AC flip-flop. Output and input connections to the accumulator appear in Figure 5-8.

The status of the link bit is not available to enter into transfers with peripheral equipment (unless it is rotated into the AC). A bus driver continuously buffers the output signal from each AC flip-flop. These buffered accumulator (BAC) signals are available at the interface connectors.

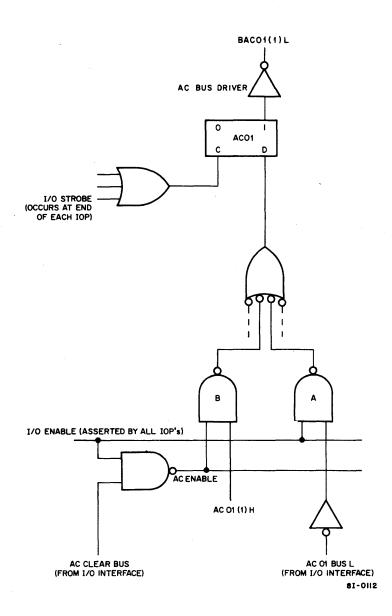


Figure 5-8. Accumulator Input or Output

## 5.1.5 Input Data Transfers

When a device is ready to transfer data into the PDP-12 accumulator, it sets a flag. The program senses the ready status of the flag and issues an IOT instruction to read the contents of the external device buffer register into the AC. If the AC CLEAR BUS L is not asserted, the resultant word in the AC is the inclusive OR of the previous word in the AC and the word transferred from the device buffer register. The AC CLEAR BUS L may also be used as an I/O AC clear by activating only this line from a separate IOT.

The illustration in Figure 5-9 shows that the accumulator has an input bus for each bit flip-flop. Setting a 1 into a particular bit of the accumulator necessitates grounding of the interface input bus by the standard interface gate. In the illustration, the 2-input AND gates set various bits of the accumulator. In this case an IOT pulse is AND combined with the flip-flop state of the external device to transfer into the accumulator. (The program need not include a clear AC command prior to loading in this manner.)

Following the transfer (possibly in the same instruction) the program can issue a command pulse to initiate further operation of the device and/or clear the device flag.

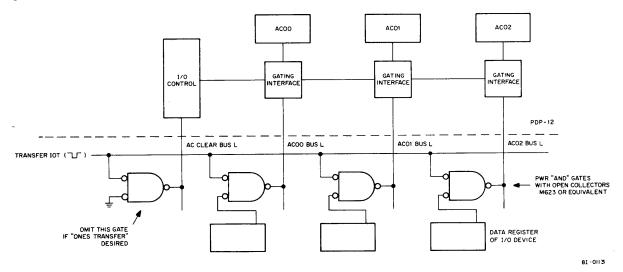


Figure 5-9. Loading Data into the Accumulator from an External Device

### 5.1.6 Output Data Transfers

The AC is loaded with a word (e.g., by a CLA TAD instruction sequence); then the IOT instruction is issued to transfer the word into the control or data register of the device by an IOT pulse (e.g., IOP 2), and operation of the device is initiated by another IOT pulse (e.g., IOP 4). The data word transferred in this manner can be a character to be operated upon, or can be a control word sampled by a status register to establish a control mode. The BAC lines should be gated by the select code at each device to prevent excessive loading. A special module, the M101, is provided for this purpose.

Since the BAC interface bus lines continually present the status of the AC flip-flops, the receiving device can strobe them to sense the value in the accumulator. In Figure 5-10, a strobe pulse samples six bits of the accumulator to transfer to an external 6-bit data register. Since this is a jam transfer, it is not necessary to clear the external data register. The gates driving the external data register are part of the external device and are not supplied by the computer. The data register can contain any number of flip-flops up to a maximum of twelve. If more than twelve flip-flops are involved, two or more transfers must take place. Obviously the strobe pulse shown in Figure 5-10 must occur when the data to be placed in the external data register is held in the accumulator. This pulse, therefore, must be under computer control to effect synchronization with the operation or program of the computer.

#### 5.1.7. Program Interrupt (PI)

When a large amount of computing is required, the program should initiate operation of an I/O device, then continue the main program, rather than wait for the device to become ready to transfer data. The program interrupt facility, when enabled by the program, relieves the main program of the need for repeated flag checks by allowing the ready status of I/O device flags to automatically cause a program interrupt. When a program interrupt occurs, program control transfers to a subroutine that determines which device requested the interrupt, and initiates an appropriate service routine.

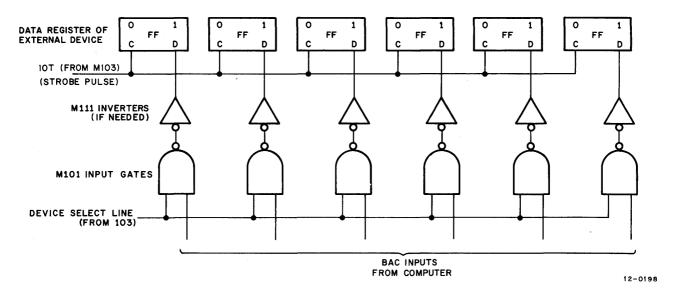


Figure 5-10. Loading a Six-Bit Word into an External Device from the Accumulator

In the example shown in Figure 5-11, a flag signal from a device status flip-flop operates a standard gate with no internal load. When the status flip-flop indicates the need for device service, the Program Interrupt Request bus is driven to ground and requests a program interrupt.

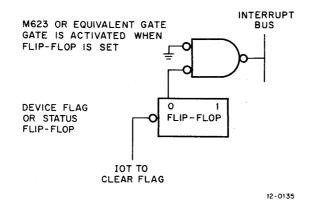


Figure 5-11. Program Interrupt Request Signal Origin

If only one device is connected to the PI facility, program control can be transferred directly to a routine that services the device when an interrupt occurs. This operation occurs as follows (example in 8 mode):

Tag	Address	Instruction	Remarks
	1000	•	/MAIN PROGRAM
	1001	•	/MAIN PROGRAM CONTINUES
	1002	•	/INTERRUPT REQUEST OCCURS /INTERRUPT OCCURS
	0000		/PROGRAM COUNT (PC = 1003) IS /STORED IN 0000
	0001	JMP SR	/ENTER SERVICE ROUTINE

SR,	2000		<b>/SERVICE SUBROUTINE FOR</b>
,			/INTERRUPTING DEVICE AND
			/SEQUENCE TO RESTORE AC, AND
	3001		/RESTORE LINK IF REQUIRED
	3002	RMF	<b>/RESTORE MEMORY FIELDS</b>
	3003	ION	/TURN ON INTERRUPT
	3004	JMP I 0000	/RETURN TO MAIN PROGRAM
	1003		/MAIN PROGRAM CONTINUES
	1004		
		•	

In most PDP-12 systems, numerous devices are connected to the PI facility, so the routine beginning in core memory address 0001 must determine which device requested an interrupt. The interrupt routine determines the device requiring service by checking the flags of all equipment connected to the PI and transfers program control to a service routine for the first device encountered that has its flag in the state required to request a program interrupt. In other words, when program interrupt requests can originate in numerous devices, each device flag connected to the PI must also be connected to the IOS.

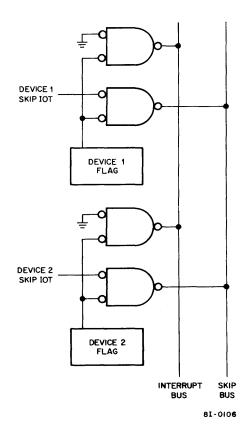


Figure 5-12. Multiple Inputs to IOS and PI Facilities

5.1.7.1 Multiple Use of IOS and PI – In common practice, more than one device is connected to the PI facility. In the basic PDP-12, the teletype flags are already connected. Therefore, since the computer receives a request that is the inclusive OR of requests from all devices connected to the PI, the IOS must identify the device making the request. When a program interrupt occurs, a routine is entered from address 0001 in 8 mode (0041 in Linc mode) to sequentially check the status of each flag connected to the PI and to transfer program control to an appropriate service routine for the device whose flag is requesting a program interrupt. Figure 5-12 shows IOS and PI connections for two typical devices.

The following program example illustrates how the program interrupt routine determines the device requesting service (example in 8 mode):

Tag	Address	Instruction	Remarks
	1000		/MAIN PROGRAM
	1001	•	/MAIN PROGRAM CONTINUES
	1002	•	/INTERRUPT REQUEST OCCURS
		INTERRUPT OCCURS	
	0000		<b>/STORE PC (PC = 1003)</b>
	0001	JMP FLG CK	/ENTER ROUTINE TO DETERMINE
			/WHICH DEVICE CAUSED INTERRUPT
FLG CK,		IOT 6341	<b>/SKIP IF DEVICE 34 IS REQUESTING</b>
		SKP	/NO - TEST NEXT DEVICE
		JMP SR34	/ENTER SERVICE ROUTINE 34
		IOT 6441	<b>/SKIP IF DEVICE 44 IS REQUESTING</b>
		SKP	<b>/NO - TEST NEXT DEVICE</b>
		JMP SR44	/ENTER SERVICE ROUTINE 44
		IOT 6541	<b>/SKIP IF DEVICE 54 IS REQUESTING</b>
		SKP	<b>/NO - TEST NEXT DEVICE</b>
		JMP SR54	/ENTER SERVICE ROUTINE 54
	1	•	-

Assume that the device that caused the interrupt is an input device (e.g., tape reader). The following example of a device service routine might apply:

Tag	Instruction	Remarks
SR,	DCA TEMP	/SAVE AC
	IOT XX	/TRANSFER DATA FROM DEVICE BUFFER TO AC
	DCA I 10	STORE IN MEMORY LIST
	ISZ COUNT	/CHECK FOR END
	SKP	/NOT END
	JMP END	/END. JUMP TO ROUTINE TO HANDLE
		/END OF LIST CONDITION
	•	
	•	/RESTORE LINK AND OTHER STATUS IF REQUIRED
	TAD TEMP	/RELOAD AC
	RMF	<b>/RESTORE MEMORY FIELDS</b>
	ION	/TURN ON INTERRUPT
	JMP I O	/RETURN TO PROGRAM

5-14

If the device that caused the interrupt was essentially an output device (receiving data from computer), the IOT - then - DCA I 10 sequence might be replaced by a TAD I 10 - then - IOT sequence.

# 5.2 MULTI-LEVEL AUTOMATIC PRIORITY INTERRUPT

The KF12B Multi-Level Automatic Priority Interrupt is designed to reduce the central processor overhead during the servicing of program interrupts. It is prewired in the EP section of the PDP-12 in racks P and R and utilizes approximately 55 M series modules. There are three major services provided automatically by the KF12B.

- a. Automatic determination of device priority and vectoring of interrupt service routines.
- b. Automatic saving and restoring of all major registers and machine status which include the following: PC, AC, IF, DF, MQ, LINK, FLOW, UF, MODE and the current processor level.
- c. Automatic stacking of the saved parameters permitting multiple levels of interrupts.

Storing, or stacking, of parameters is called *Pushing* and restoring the CP to its original status prior to an interrupt is called *Popping*. The CP is in the break state for the duration of each operation. It takes five break cycles for each *Push* and five break cycles for a *Pop*. This does not affect the normal operation of the data break facility in the PDP-12. One data break device can be handled without the addition of a multiplexer. The KF12B has the lowest priority on the bus and break requests from another device are acknowledged during push and restore operations. The KF12B control has its own timing generator and is asynchronous with computer timing. A free running 5 mHz oscillator provides the various clocking pulses. An M155 decoder provides the enable levels to enable data on the bus.

### 5.2.1 Interrupts

Up to 15 levels of interrupts can be accommodated with each level having a two-word vector address. The interrupts can be accepted from a prewired option or from up to six external devices. A priority is assigned to each interrupt by a jumper module, M905 at location R16. Level 0 has the highest priority. Interrupts of a higher priority can occur after executing the first instruction in the interrupt service routine. When the KF12B is not enabled (API ON (0)), interrupts are processed through the interrupt cycle in the normal manner.

### 5.2.2 Push

When the level of the device requesting an interrupt is greater than the current machine level a Push operation is performed. The Push and Break Req flip-flops are set and the processor enters the Break cycle. The active registers and status levels are stored (pushed) in five consecutive memory locations specified by the contents of the STACK register. (Refer to Table 5-1.) The starting location of the stack is specified by the program (IOT 6776) and is automatically incremented during the push operation. The stack increments and decrements across field boundaries. The CP is always in 8 MODE at the completion of an interrupt-push operation. If the CP is in LINC mode when a Push occurs it is returned to LINC mode at the completion of a Restore command.

Location	Data Stored
Р	AC 0-11
P + 1	PC 0-11
<b>P + 2</b>	MODE 0; FLOW 1; LINK 2; MACHINE LEVEL $8-11$
P + 3	MQ 0-11
P + 4	UF 1; IF $_{2-6}$ ; DF $_{7-11}$
P = Initial STACK address. NOTE: the subscript indicates the corresponding memory bits.	

Table 5-1. STACK Register

# 5.2.3 Restore-"POP" (REST-IOT 6771)

Every interrupt subroutine should be terminated with a Restore command. This restores the major registers and machine status from the stack and resumes programming at the memory location specified by the program counter.

For every Push operation performed a Pop (restore) must be performed; however, the two operations do not have to occur in any particular sequence (see Figure 5-13). The Restore command should not be issued when the CP is in a non-interruptable state because an Interrupt Inhibit is set due to the LIF or CIF instruction, or SAVE PC is not set due to a DJR instruction.

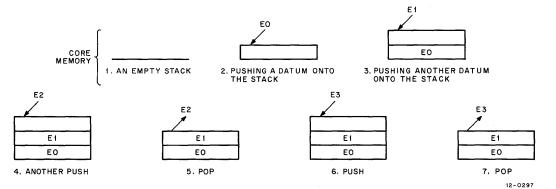


Figure 5-13. Illustration of Push and Pop Operations

### 5.2.4 Vectoring

Each of the 15 interrupt levels has an associated vector address to specify the appropriate interrupt service routine. The vector address is transferred to the PC during the Push operation, as shown in Figure 5-14. Vector bits 0, 1, and 2 specify the memory field and are set with AC bits 3, 4, and 5 by an IOT. Vector bits 3 through 9 specify the seven most significant bits of the MA (0-6) and are set with AC bits 0-6 by an IOT. The interrupt level specifies memory address bits 7 through 10 with level "0" setting these bits to zero. A vector address is always an even number address; therefore, each interrupt level is allotted two memory locations.

The following are the vector address assignments, which can reside in any memory field. Vector bits 3 through 9 (MA0-6) are set to 1s by the SVEC instruction:

Level	Address	Level	Address
0	7740	8	7760
0	7741	8	7761
1	7742	9	7762
1	7743	9	7763
2	7744	10	7764
2	7745	10	7765
3	7746	11	7766
3	7747	11	7767
4	7750	12	7770
4	7751	12	7771
5	7752	13	7772
5	7753	13	7773
6	7754	14	7774
6	7755	14	7775
7	7756		
7	7757		

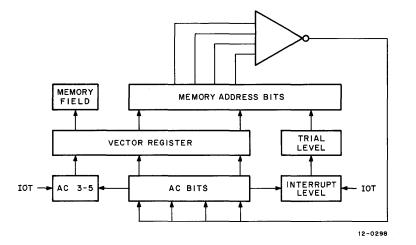


Figure 5-14. Vector Flow Diagram

# 5.2.5 Maintenance Logic

The maintenance logic included in the KF12B provides the capability of checking the major portion of the option for proper operation. Two IOT instructions simulate the 15 interrupt level inputs to check the priority logic and initiate the Push operation.

Instruction	Function
IOT 6051	AC0-11 to LEVELS 0-11 (1s transfer)
IOT 6052	AC 9, 10, 11 to LEVELS 12, 13, 14 (1s transfer)

The levels remain set for only one computer cycle. This feature allows enough time to initiate a Push function when the selected level has priority and API is enabled.

The KF12B features a new two-word instruction called push jump (PUSHJ, IOT 676X). This instruction permits jumping to subroutines across field boundaries in both Linc and PDP-8 Modes. The instruction causes the stacking of the active registers and machine status and automatically jumps to the memory location specified by the 15-bit address associated with the PUSHJ. The instruction code is (IOT) 676X and is similar to an IOT except that X defines the new memory field and the following location (P+1) specifies the 12-bit memory address of the subroutine.

The PC, which is saved on the stack during the execution of the PUSHJ, points to the location following the twoword instruction as shown in the following example:

Address	Instruction	Octal Code	
15432	PUSHJ	6760	
15433	1000	1000	
15434*	CLA	7200	

01000 – Programming is transferred to this memory location.

\* Field and PC saved on stack. The program is resumed at this location following a Restore.

# 5.2.6 **Programming**

The following is a typical example of a program to service a Teletype interrupt, which is level 5.

START/CLA	
TAD FLDLEV	
SMLV	/set stack and vector fields
CLA	and machine level
TAD STACK	
SSTK	/set stack
CLA	
TAD VEC	
SVEC	/set vector
APION	/enable KF12
NOP	
JMP1	/wait for interrupt
* 6412/JMS TTYR	/go to teletype reader subroutine
* 6413/REST	/restore to status prior to push

# **\*VECTOR ADDRESSES**

TTYR/XXXX
CLA
KRS
DCA I SAVE
KCC
JMP I TTYR

FLDLEV/0017 STACK/7000 VEC/6400 /return address saved here /read keyboard buffer /save word /clear reader flag /return to restore

### 5.2.7 Programming Restrictions

The REST and PUSHJ commands should not be issued when the processor is in a non-interruptable state due to the following conditions:

- a. "Interrupt Inhibit" being set due to the execution of a CIF or LIF instruction;
- b. The DJR instruction is being executed or Save PC is not set due to the previous execution of a DJR instruction.

If the REST command is issued and the CP is not in an interruptable condition, the Restore operation will not be performed until the condition becomes satisfactory. If the PUSHJ command is issued and the CP is not in an interruptable condition, the second word of the instruction is treated as a new instruction, and when the condition becomes satisfactory, the PUSHJ operation will not be properly executed. The ESF Disable Teletype instruction is not effective when the KF12B is enabled (API ON (1)); the TTY and DP12 interrupts will always be acknowledged. When the KF12B is not enabled (API ON (0)), the ESF instruction functions in the normal manner. Location zero is not saved on the stack; therefore, caution should be exercised when using this location in conjunction with a LINC JMP instruction.

### 5.2.8 Instruction List

Instruction	Function	Octal
ION	Enable software interrupt system	6001
IOF	Disable all interrupts	6002
APION	Enable API (KF12B) system Disable software interrupt The next instruction will be executed before an interrupt is processed.	6006
PUSH-J	PUSH JUMP to 15 bit address (XXXXX) (P+1)	676X XXXX
REST	Restore machine to previous level	6771
SMLV*	Set current machine level to AC $8-11$ . If AC7=1, set stack field to AC0-2 and vector field to AC3-5.	6772

\*The KF12B must be deselected to execute these instructions (i.e., API ON (0)).

Instruction	Function	Octal
RFLD	Read stack field into AC0 $-2$ , vector field into AC3 $-5$ , current level into AC8 $-11$ (Read in complement form)	6773
RSTK	Read least significant 12 bits of current stack pointer ad- dress (Read in complement form)	6774
RVEC	Read vector bits $3-9$ into AC bits $0-6$ , Trial levels into AC bits $7-10$ (Read in complement form)	6775
SSTK*	Set the least significant 12 stack bits to AC0-11	6776
SVEC*	Set bits 309 of the vector address (MA0-6) to AC $0-6$	6777

Note: When the above instructions are given in LINC mode they should be preceded by an IOB instruction.

\*The KF12B must be deselected to execute these instructions (i.e., API ON (0)).


5.2.9 DM12

The DM12, which is prewired in the PDP-12, provides the capability of operating up to three data break devices in either three-cycle or single-cycle data break. Both three-cycle and single-cycle devices can be simultaneously controlled by the DM12. The KF12B is a prerequisite for the DM12 because the KF12B and DM12 use the same timing and control signals, which originate in the KF12B. The DM12 uses M series positive logic; all signals are clamped at 0V and +3V.

Because both options use the control and timing of the KF12B, the theory of operation is similar. When an external device issues a break request, the corresponding Level flip-flop is set. The three level flip-flops and the API flip-flop are decoded to determine priority. Either PR0, PR1, or PR2 is generated and the appropriate Data Address and control signals are enabled on the bus. The EN BRK flip-flop corresponding to the device that has been decoded is set at TP1, allowing the B BREAK signal to go to the device that has control of the bus. The B BREAK signal is used to control the data on the bus for transfer between memory and the external devices.

Both options use the same IOTs; thus, when testing the DM12 the KF12B must be disabled using jumpers that allow only the DM12 priorities to be enabled.

The DM12 priorities are determined by cable location. Two cables from each device are used for the data address, data bits, and status signals. The cables from the device having the highest priority are inserted in locations P20 and P21 as illustrated in Figure 5-15.

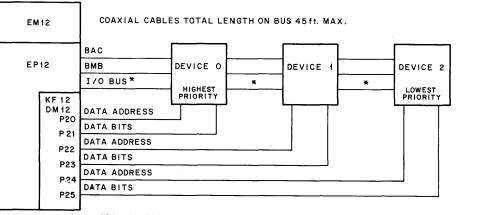

12-0299

COAXIAL CABLES - MAX. LENGTH 25 ft.

\* If the priority interrupt system is used in the KF12B this cable is connected separately from each device. (ref. BS-KF12-CAB).

Figure 5-15. DM12 Cable Diagram

### 5.3 DATA BREAK TRANSFERS

The Data Break facility allows an I/O device to transfer information directly with the PDP-12 core memory on a cycle-stealing basis. The Data Break is particularly well suited for devices which transfer large amounts of information in block form, and can be expanded to accommodate more than one device by using the DM01 or DM04 multiplexers. The DM01 will multiplex up to seven devices and is a negative bus option. The DM04 (positive bus) will multiplex three devices and up to three DM04s may be added for a total of nine devices.

Peripheral I/O equipment operating at high speeds can transfer information with the computer through the data break facility more efficiently than through programmed means. The combined maximum transfer rate of the data break facility is 6.5 million bits per second. Information flow to effect a Data Break transfer with an I/O device appears in Figure 5-16.

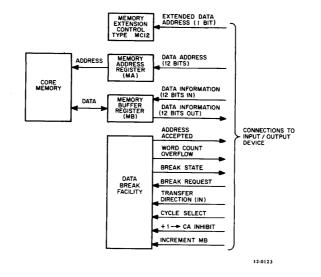


Figure 5-16. Data Break Transfer Interface Block Diagram

In contrast to programmed operations, the Data Break facilities permit an external device to control information transfers. Therefore, Data Break device interfaces require more control logic circuits, causing a higher cost than programmed-transfer interfaces.

Data Breaks are of two basic types: single-cycle and three-cycle. In a single-cycle Data Break, registers in the device (or device interface) specify the core memory address of each transfer and count the number of transfers to determine the end of data blocks. In the three-cycle Data Break, two computer core memory locations perform these functions, simplifying the device interface by omitting two hardware registers. In general terms, to initiate a Data Break transfer of information, the interface control must do the following:

- a. Specify the affected address in core memory.
- b. Provide the data word by establishing the proper logic levels at the computer interface (assuming an input data transfer), or provide input gates and storage for the word (assuming an output data transfer).
- c. Provide a logical signal to indicate direction of data word transfer.
- d. Provide a logical signal to indicate single-cycle or three-cycle break operation.
- e. Request a Data Break by supplying a proper signal to the computer data break facility.

### 5.3.1 Single-Cycle Data Breaks

Single-cycle Data Breaks are used for input data transfers to the computer, output data transfers from the computer, and memory increment data breaks. Memory increment is a special Data Break in which the content of a memory address is read, incremented by 1, and rewritten at the same address. It is useful for counting iterations or external events without disturbing the computer program counter (PC) or accumulator (AC) registers.

### 5.3.2 Input Data Transfers

Figure 5-17 illustrates timing of an input transfer data break. The address to be affected in core is normally provided in the device interface in the form of a 12-bit flip-flop register (data break address register) which has been preset by the interface control by programmed transfer from the computer.

External registers and control flip-flops supplying information and control signals to the Data Break facility and other PDP-12 interface elements are shown in Figure 5-18. The data register (DR in Figure 5-18) holds the 12-bit data word to be written into the computer core memory location specified by the address contained in the address register (AR in Figure 5-17).

Appropriate output terminals of these registers are connected to the computer to supply ground potential to designate binary 1s. Since most devices that transfer data through the Data Break facility are designed to use either single-cycle or three-cycle breaks, but not both, the Cycle Select signal can usually be supplied from a stable source (such as a ground connection or a +3v clamped load resistor), rather than from a bistable device as shown in Figure 5-18.

Other portions of the device interface, not shown in Figure 5-18, establish the data word in the input buffer register, set the address into the address register, set the direction flip-flop to indicate an input data transfer, and control the break request flip-flop. These operations can be performed simultaneously or sequentially, but all transients should occur before the data break request is made.

When the Break Request is recognized, the computer completes the current instruction, generates an Address Accepted pulse (at TP1, the beginning of the break cycle) to acknowledge receipt of the request, then enters the Break state to effect the transfer. The Address Accepted pulse can be used on the device interface to clear the BREAK REQUEST flip-flop, increment the content of the address register, etc. If the Break Request signal is removed before TP2 time of the data break cycle, the computer performs the transfer and returns to programmed operation.

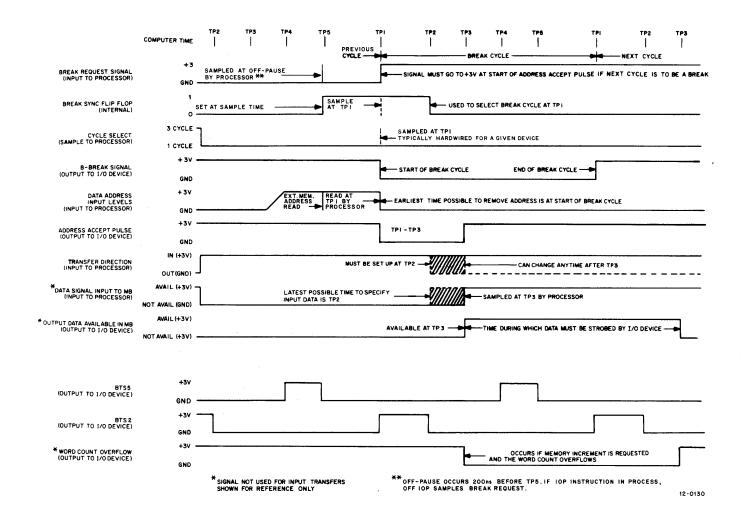


Figure 5-17. Single Cycle Data Break Input Transfer Timing Diagram

## 5.3.3 Output Data Transfers

Timing of operations occurring in a single-cycle output Data Break is shown in Figure 5-19. Basic logic circuits for the device interface used in this type of transfer are shown in Figure 5-20. Address and control signal generators are similar to those discussed previously for input data transfers, except that the Transfer Direction signal must be at ground potential to specify the output transfer of computer information. An output data register (OB in Figure 5-20) is usually required in the device interface to receive the computer information. The device must supply strobe pulses for all data transfers out of the computer (programmed or data break) since circuit configuration and timing characteristics differ in each device.

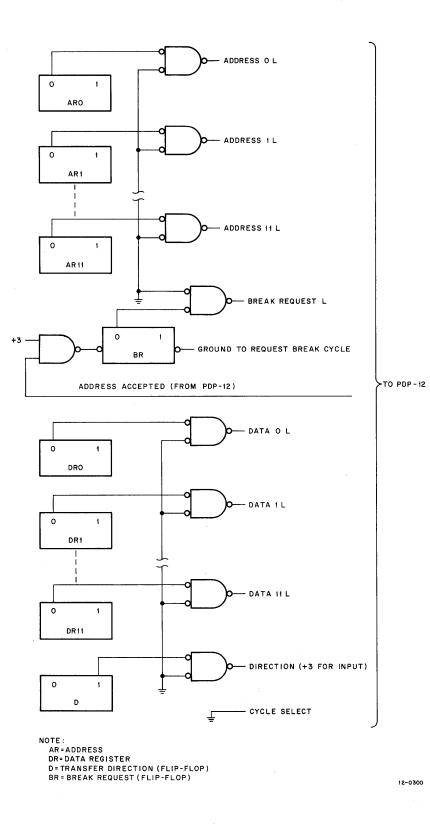


Figure 5-18. Device Interface Logic for Single-Cycle Data Break Input Transfer

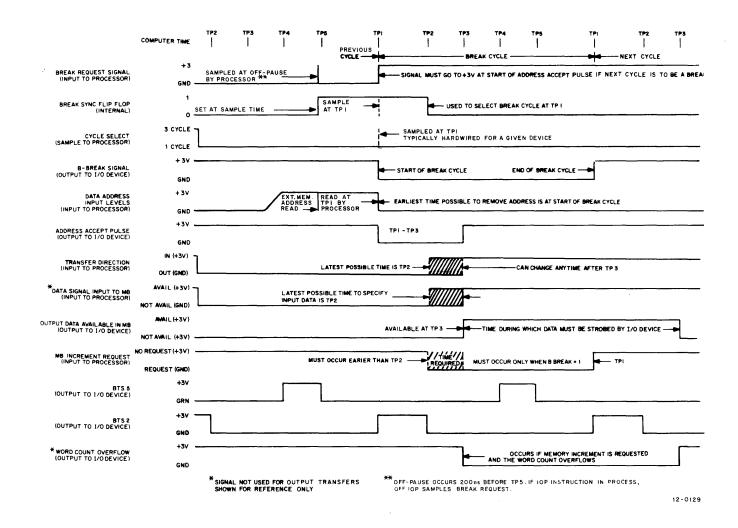


Figure 5-19. Single-Cycle Data Break Output Transfer Timing Diagram

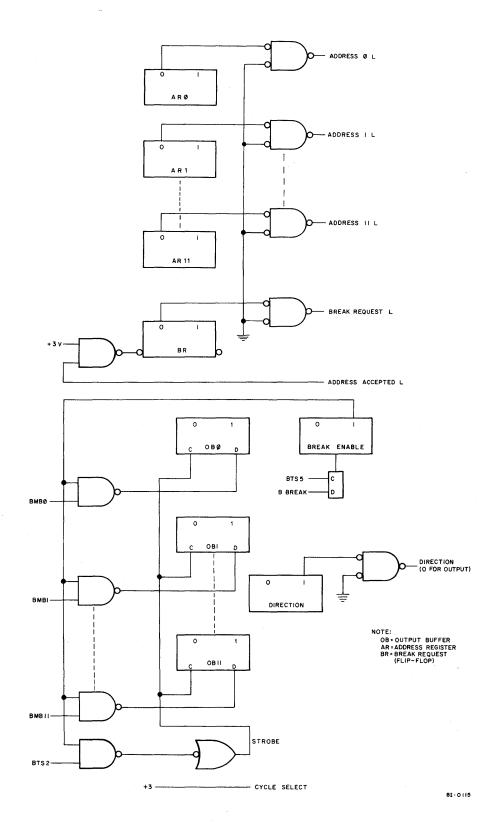


Figure 5-20. Device Interface Logic for Single-Cycle Data Break Output Transfer

When the Break Request is recognized the computer completes the current instruction and generates an Address Accepted pulse as it enters the Data Break cycle. At TP1 time, the address supplied to the PDP-12 is loaded into the MA, and the Break state is entered. Not more than 900 nsec after TP1 (at time TP3), the contents of the device-specified core memory address are read and available in the MB. (This word is automatically rewritten at the same address during the last half of the Break cycle, and is available for programmed operations when the Data Break is finished.) Data Bit signals are available as static levels of ground potential for binary 0s and +3v for binary 1s. The MB is changed at time TP3 of each computer cycle, so the data word is available in the MB for approximately 1.6 microseconds to be strobed by the device interface.

Generation of the strobe pulse by the device interface can be synchronized with computer timing through use of timing pulses BTS2 or BTS5, which are available at the computer interface. In addition to a timing pulse (delayed or used directly from the computer), generation of this strobe pulse should be gated by condition signals that occur only during the Break cycle of an output transfer. Figure 5-20 shows typical logic circuits to effect an output data transfer. In this example, BTS5 and B BREAK set the BREAK ENABLE flip-flop, which remains set for one computer cycle (unless successive cycles are requested). This enabling signal loads the buffered MB lines into the data inputs of a D type flip-flop. At BTS2 time, the data will be clocked into the Output Buffer flip-flops. Note that BTS2 can generate a strobe pulse only during a BREAK ENABLE cycle. Interface input gates are M101; output bus drivers are M623.

By careful design of the input and output gating, one register can serve as both the input and the output buffer register. Most DEC options using the Data Break facility have only one data buffer register with appropriate gating to allow it to serve as an output buffer when the Transfer Direction signal is at ground potential or an input buffer when the Transfer Direction signal is at ground potential or an input buffer when the Transfer Direction signal is at ground potential or an input buffer when the Transfer Direction signal is +3v.

#### 5.3.4 Memory Increment

In this type of Data Break the contents of core memory at a device-specified address are read into the MB, are incremented by 1, and are rewritten at the same address within one 1.6-microsecond cycle. This feature is particularly useful in building a histogram of a series of measurements, such as in pulse-height analysis applications. For example, in a computer-controlled experiment that counts the number of times each value of a parameter is measured, a Data Break can be requested for each measurement, and the measured value can be used as the core memory address to be incremented (counted).

Signal interface for a memory increment Data Break is similar to an output transfer Data Break except that the device interface generates an Increment MB signal and does not generate a strobe pulse (no data transfer occurs between the PDP-12 and the I/O device). Timing of memory increment operations appear in Figure 5-21.

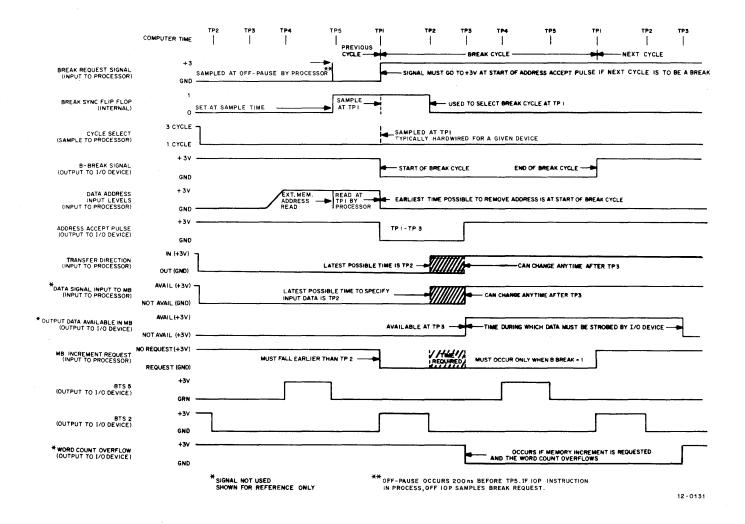


Figure 5-21. Memory Increment Data Break Timing Diagram

An interface for a device using memory increment Data Breaks must supply twelve Data Address signals, a Transfer Direction signal, a Cycle Select signal, and a Break Request signal to the computer Data Break facility as in an output transfer data break. In addition, a ground potential increment MB signal must be provided at least 250 nanoseconds before time TP3 of the Break cycle. The signal can be generated in the device interface by ANDing the B Break Computer Output signal, the output transfer condition of the Transfer Direction signal, and the Condition signal in the device that indicates that an increment operation should take place. When the computer receives this Increment MB signal, it forces the MB control element to generate a Carry Insert signal at time TS3 to increment the contents of the MB.

#### 5.3.5 Three-Cycle Data Breaks

Timing of input or output three-cycle Data Breaks is shown in Figure 5-22. The three-cycle Data Break uses the block transfer control circuits of the computer. The block transfer control provides an economical method of controlling the flow of data at high speeds between PDP-12 core memory and fast peripheral devices, e.g., drum, disc, magnetic tape and line printers, allowing transfer rates in excess of 208 kHz.

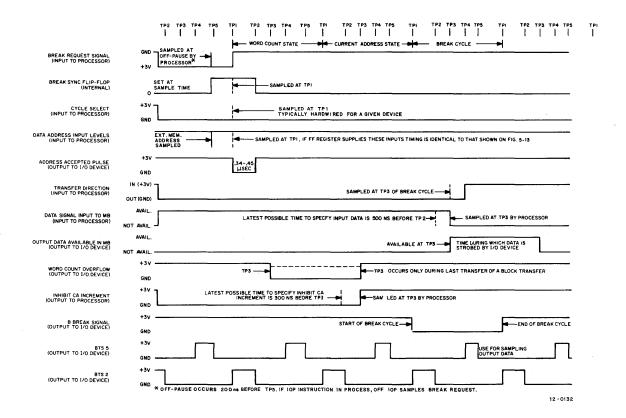


Figure 5-22. Three-Cycle Data Break Timing Diagram

The three-cycle Data Break facility provides separate current address and word count registers in core memory for the connected device, thus eliminating the necessity for flip-flop registers in the device control. When several devices are connected to this facility, each is assigned a different set of core locations for word count and current address, allowing interlaced operations of all devices as long as their combined rate does not exceed 208 kHz. The device specifies the location of these registers in core memory, and thus the software remains the same, regardless of what other equipment is connected to the machine. Since these registers are located in core memory, they may be loaded and unloaded directly without the use of IOT instructions. In a procedure where a device request to transfer data to or from core memory, the three-cycle Data Break facility performs the following sequence of operations:

a. An address is read from the device to indicate the location of the word count register. This address is always the same for a given device; thus it can be wired in and does not require a flip-flop register.

b. The contents of the specified address are read from memory and 1 is added before rewriting. If the contents of this register become 0 as a result of the addition, a WC Overflow pulse will be transmitted to the device. To transfer a block of N words, this register is loaded with -N during programmed initialization of the device. After the block has been fully transferred this pulse is generated to signify completion of the operation.

c. The next sequential location is read from memory as the current address register. Although the contents of this register are normally incremented before being rewritten, an increment CA inhibit (+ 1  $\rightarrow$  CA Inhibit) signal from the device may inhibit incrementation. To transfer a block of data beginning at location A, this register is program initialized by loading with A-1.

d. The contents of the previously read current address are transferred to the MA to serve as the address for the data transfer. This transfer may go in either direction in a manner identical to the single-cycle Data Break system. The three-cycle Data Break facility uses many of the gates and transfer paths of the single-cycle Data Break system, but does not preclude the use of standard Data Break devices. Any combination of three-cycle and single-cycle Data Break devices can be used in one system, as long as a multiplexer channel is available for each. Two additional control lines are provided with the three-cycle data break. These are:

Word Count Overflow – A level change from GND to +3V, from TP3 of the cycle requesting the word count to TP3 of the next cycle is transmitted to the device when the word count becomes equal to zero.

Increment CA Inhibit – When ground potential, this device-supplied signal inhibits incrementation of the current address word.

In summary, the three-cycle Data Break is entered similarly to the single-cycle Data Break, with the exception of supplying a ground-level Cycle Select signal to allow entry of the WC (Word Count) state to increment the fixed core memory location containing the word count. The device requesting the break supplies this address as in the single-cycle Data Break, except that this address is fixed and can be supplied by wired ground and +3V signals, rather than from a register. Following the WC state, a Current Address (CA) state is entered, in which the core memory location following the WC address is read, incremented by one, restored to memory, and used as the transfer address (by MB  $\rightarrow$  MA). Then the normal Break (B) state is entered to effect the transfer.

### 5.4 INTERFACE DESIGN AND CONSTRUCTION

This section describes the PDP-12 interface techniques, available modules, interface conventions, and interface connections.

### 5.4.1 PDP-12 Interface Modules

PDP-12 interfacing is constructed of Digital FLIP-CHIP modules. The Digital Logic Handbook describes more than 150 of these modules, their component circuits, and the associated acessories; i.e., power supplies and mounting panels. The user should study this catalog carefully before beginning the design of a special interface.

The interface modules of the PDP-12 are the M111, M906, M516, M660, and M623 modules. Interface signals to the computer use either a combination of the M111 and M906 modules or the M516 module. Interface signals from the computer will originate from a combination of M623 and M906 modules for data signals, and M660 modules for timing signals.

5.4.1.1 M111/M906 Positive Input Circuit (See Figure 5-23) – The M111 Inverter module is used in conjunction with the M906 Cable Terminator module, which clamps the input to prevent excursions beyond +3 volts and ground. The M906 also provides the pullup resistors to +5 volts.

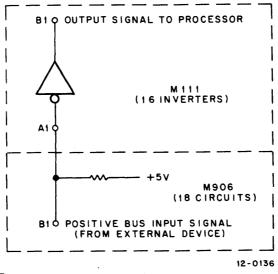


Figure 5-23. Typical M111/M906 Positive Input Circuit

5.4.1.2 M516 Positive Bus Receiver Input Circuit (See Figure 5-24) - Six four-input NAND gates with overshoot and undershoot clamp on one input of each gate. Pullup resistors connected to +5V are also provided.


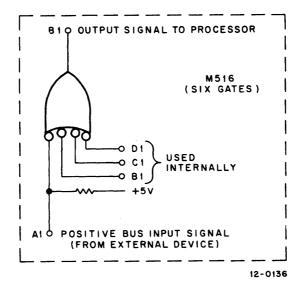


Figure 5-24. Typical M516 Positive Bus Receiver Input Circuit

5.4.1.3 M623/M906 Positive Output Circuit (See Figure 5-25) – The M623 Bus Driver module contains twelve circuits with negative NOR gates. Used in conjunction with the M906 Cable Terminator module, the output is clamped to prevent excursions beyond +3 volts and ground. Output can drive +5 milliamperes at the high level and sink 20 milliamperes at the low level.



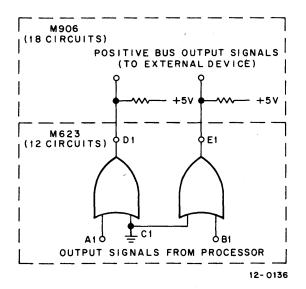

5.4.1.4 M660 Bus Driver Output Circuit (See Figure 5-26) – Three circuits which provide low impedance 100-ohm terminated cable driving capability using M Series levels or pulses of duration greater than 100 nanoseconds. The output can drive 5 ma at the high level and sink 20 ma at the low level, in addition to termination current required by the G717 termination module. The M660 module is used in the PDP-12 for the following output signals:

IOP 1, IOP 2, IOP 4, TS 2, TS 5


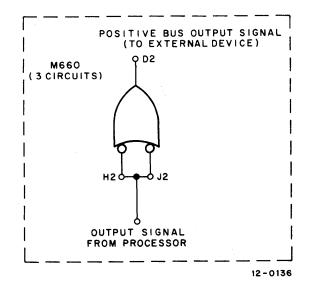


Figure 5-26. M660 Terminated Bus Driver Output Circuit

5.4.1.5 Module Selection for Interface Circuits of Peripheral Equipment – Two FLIP-CHIP modules are of particular interest in the design of equipment to interface with the PDP-12. Complete details on these and other FLIP CHIP modules can be found in the Digital Logic Handbook.

5.4.1.6 M103 Device Selector (See Figure 5-27) – The M103 selects an input/output device according to the code in the instruction word (being held in the memory buffer during the IOT cycle). M103 module includes diode protection clamps on input lines so that it may be used directly on the PDP-12 positive bus.

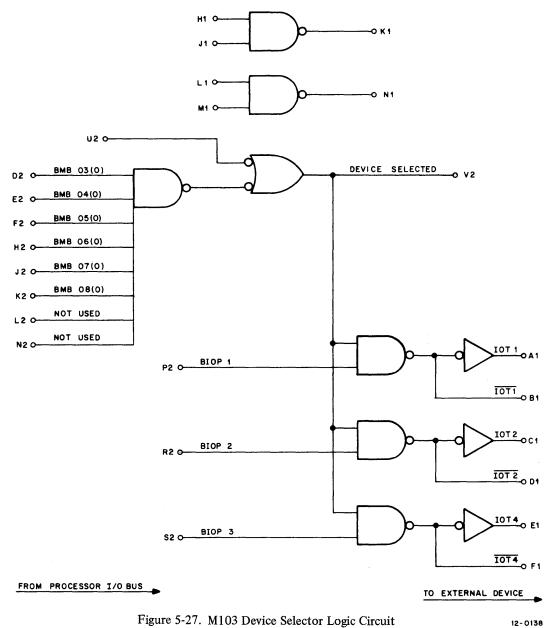

5.4.1.7 M101 Bus Data Interface (See Figure 5-28) – Fifteen two-input NAND gates with one input of each gate tied to a common line. For use in strobing data off of the PDP-12 I/O bus. The M101 module includes diode protection clamps on input lines so that it may be used directly on the PDP-12 positive bus.

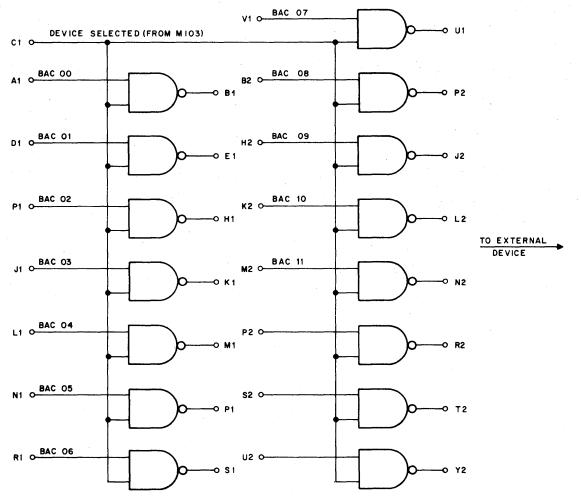


Figure 5-28. M101 Bus Data Interface Logic Circuit

12-0137

# 5.4.2 M Series Flip Chip Modules

The following is a list of M Series modules available from Digital Equipment Corporation that can be used in designing special interfaces and special devices. The majority of these modules are described in the Digital Logic Handbook. For those that cannot be found in the Handbook, contact the nearest Digital representative.

Туре	Function	Description
M002	15 Loads	Fifteen +3 volt sources each capable of driving ter unit loads. Can be used for tying off unused inputs
M040	Solenoid Driver	Output ratings of -70 volts and 0.6 amp allow these two drivers to be used with a variety of medium current loads.
M050	50 ma Indicator and Relay Driver	Output ratings of -20 volts and 50 ma. Allow any of the twelve circuits on this module to drive a variety of incandescent lamps. These drivers can also be used as slow speed open collector PNP level shifters to -3 volt systems.
M101	Bus Data Interface	Fifteen two-input NAND gates with one input o each gate tied to a common line. For use in strobing data off of the PDP-8/I or PDP-12 I/C bus. Pin compatible with M111.
M103	Device Selector	Similar to W103, but for use with PDP-8/I and PDP-12 options. Output pulses are not regenerated but only buffered.
M111	Inverter	Sixteen inverter circuits with a fan-in of one uni load and fan-out of ten unit loads.
M112	NOR Gate	Ten positive NOR gates with a fan-in of one uni load and fan-out of ten unit loads.
M113	10 2-Input NAND Gates	Ten two-input positive NAND gates with a fan-in of one unit load and fan-out of ten unit loads.
M115	8 3-Input NAND Gates	Eight three-input positive NAND gates with fan-in of one unit load and a fan-out of ten unit loads.
M117	6 4-Input NAND Gates	Six four-input positive NAND gates with a fan-in of one unit load and a fan-out of ten unit loads.
M119	3 8-Input NAND Gates	Three eight-input positive NAND gates with fan-in of one unit load and a fan-out of ten unit loads.
M121	AND/NOR Gates	Six gates which perform the positive logic function AB + CD. Fan-in on each input is one unit load and gate fan-out is ten unit loads.

# Table 5-2. M Series Module Summary

Туре	Function	Description		
M141	NAND/OR Gates	Twelve two-input positive NAND gates which can be used in a wired OR manner. Gates are grouped in a 4-4-3-1 configuration, with a fan-in of one unit load and a fan-out which depends on the number of gates ORed together.		
M160	Gate Module	Three general purpose multi-input gates which can be used for system input selection. Fan-in is one unit load and fan-out is ten unit loads.		
M161	Binary to Octal/ Decimal Decoder	A binary-to-eight line or BCD-to-ten line decoder. Gating is provided so that up to six binary bits can be decoded using only M161s. Accepts a variety of BCD codes.		
M162	Parity Circuit	Two circuits, each of which can be used to generate even or odd parity signals for four bits of binary input.		
M169	Gating Module	Four circuits that can be used for input selection. Each circuit is of an AND/OR configuration with four two-input AND gates.		
M202	Triple J.K. Flip-Flop	Three J-K flip-flops with multiple input AND gates on J and K. Versatile units for many control or counter purposes. All direct set and clear inputs are available at module pins.		
M203	Set-Reset Flip-Flops	Eight single-input set/reset flip-flops for use as buffer storage. Each circuit has a fan-in of one unit load and a fan-out of ten unit loads.		
M204	Counter-Buffer	Four J-K flip-flops which can be interconnected as a ripple or synchronous counter or used as general control elements.		
M206	Six Flip-Flops	Six D-type flip-flops which can be used in shift registers counters, buffer registers, and general purpose control functions.		
M207	Flip-Flops	Six single-input J-K type flip-flops for use in shift register, ripple counters, and general purpose control functions.		
M208	Buffer Shift Register	An internally connected 8-bit buffer or shift register. Provisions are made for gated single-ended parallel load, bipolar parallel output, and serial input.		

Table	5-2.	M Series	Module	Summar	y (cont)
-------	------	----------	--------	--------	----------

Туре	Function	Description		
M211	Binary Up/Down Counter	A six-bit binary up/down ripple counter with control gates for direction changes via a single control line.		
M212	6-Bit L-R Shift Register	An internally connected left/right shift register Provisions are made for gated single-ended paralle load, bipolar parallel output, and serial input.		
M213	BCD Up/Down Counter	One decade of 8421 up or down counting is possible with this module. Provisions are made for parallel loading, bipolar output, and carry features		
M230	Binary to BCD Shift Register Converter	One decade of a modified shift register which allows high speed conversion (100 nsec per binary bit) of binary data to 8421 BCD code. System use of this module requires additional modules.		
M302	One Shot Delay	Two pulse or level triggered one-shot delays with output delay adjustable from 50 nsec to 7.5 msec Fan-in is 2.5 unit loads and fan-out is 25 unit loads.		
M310	Delay Line	Fixed tapped delay line with delay adjustable in 50-nsec increments from 50 nsec to 500 nsec. Two digital output amplifiers and one driver are included.		
M360	Variable Delay	Continuously variable delay line with a range of 50 nsec to 500 nsec. Module includes delay line drivers and digital output amplifiers.		
M401	Clock	A gateable RC clock with both positive and negative pulse outputs. The output frequency is adjustable from 10 MHz to below 100 Hz.		
M405	Crystal Clock	Stable system clock frequencies from 5 kHz to 10 mHz are available with this module. Frequency drift at either the positive or negative pulse output is less than 0.01% of the specified frequency.		
M410	Reed Clock	A stable low frequency reed control clock similar to the M452. Stability in the range $0^{\circ}$ C to $70^{\circ}$ C is better than 0.15%. For use with communication systems and available with only standard teletype and data set frequencies.		
M452	Variable Clock	Provides square wave output of 880 Hz, 440 Hz and 220 Hz necessary for clocking the M706 and M707 in a 110-baud teletype system.		

# Table 5-2. M Series Module Summary (cont)

Туре	Function	Description
M501	Schmitt Trigger	Provides regenerative characteristics necessary for switch filtering, pulse shaping, and contact closure sensing. This circuit can be AND/OR expanded.
М502	Negative Input Converter	Pulses as short as 35 nsec can be level shifted from -3 volt systems to standard M Series levels by the two circuits in this converter. This module can also drive low impedance terminated cables.
М506	Negative Input Converter	This converter will level shift pulses as short as 100 nsec from -3 volt systems to M Series levels. Each of the six circuits on this module provides a low impedance output for driving unterminated long lines.
М507	Bus Converter	Six inverting level shifters which accept -3 and GND, as inputs and have an open collecter NPN transistor at the output. Output rise is delayed by 100 nsec for pulse spreading.
M516	Positive Bus Receiver	Six four-input NOR gates with overshoot and undershoot clamps on one input of each gate. Ir addition, one input of each gate is tied to +3 volts with the lead brought out to a connector pin.
M602	Pulse Generator	The two pulse amplifiers in this module provide standard 50-nsec or 110-nsec pulses for M Serie systems.
M617	6-4 Input NOR Buffers	Six four-input positive NOR gates with a fan-in o one unit load and a fan-out of 30 unit loads.
M627	Power Amplifier Module	Six four-input high speed positive NAND gate with a fan-in of 2.5 unit loads and a fan-out of 40 unit loads.
M650	Negative Output Converter	The three non-inverting level shifters on this module can be used to interface the positive level or pulses (duration greater than 100 nsec) of K and M Series to -3 volt logic systems.
M652	Negative Output Converter	These two circuits provide high-speed non-inverting level shifting for pulses as short as 35 nsec or level from M Series to -3 volt systems. The output can drive low impedance terminated cables.
M660	Positive Level Driver	Three circuits which provide low-impedance 100-ohm terminated cable driving capability, using M Series levels or pulses of duration greater than 100 nsec. Output drive capability is 50 ma at +2

# Table5-2.M Series Module Summary (cont)

Туре	Function	Description
M661	Positive Level Driver	Three circuits which provide low-impedance unterminated cable driving. Characteristics are similar to M660 with the exception that +3 volts drive is 5 ma.
М730	8/I Bus Positive Output Interfacer	General Purpose positive bus output module for use in interfacing many positive level (0 to +20 volt) systems to the PDP-8/I or PDP-12. Module includes device selector, 12-bit parallel output buffer, and adjustable timing pulses.
M731	8/I Bus Negative Output Interfacer	Identical to M730, except outputs are level shifted for 0 to -20 volt systems to the PDP-8/I or PDP-12. Module includes device selector, 12-bit parallel input buffer, and adjustable timing pulses.
М733	8/I Bus Negative	Identical to M732, except inputs are level shifted from negative voltage systems.
M901	Flexprint® Cable Connector	Double-sided 36-pin Flexprint cable connector. All pins are available for signals or grounds. Pins A2, B2, U1, and V1 have $10 \Omega$ resistors in series.
M902	Resistor Terminator	Double-sided 36-pin terminator module with 100 $\Omega$ terminations on signal leads. Alternate grounds are provided as in the M903 and M904.
M903	Connector	Double-sided 36-pin Flexprint cable connector with alternate grounds for I/O bus cables.
M906	Cable Terminator	18 load resistors clamped to prevent excursions beyond +3 volts and ground. It may be used in conjunction with the M623 to provide cable driving ability.

### Table 5-2. M Series Module Summary (cont)

# 5.4.3 Construction of Interfaces

This section provides the interface designer with information on design procedures, module layout, wiring, and cable selection. Additional help may be obtained from local DEC sales offices.

5.4.3.1 **Physical** – The PDP-12 was designed to provide the user maximum ease and flexibility in implementing special interfaces. External devices and interfaces are constructed and mounted outside of the basic machine, thereby eliminating the necessity for modifications to the basic processor. All signals to and from the computer are carried on coaxial or Flexprint cables.

®Flexprint is a registered trademark of Sanders Associates, Inc.

,

To implement several devices, the cables parallel-connect each peripheral in a serial type form (see Figure 5-29). Three dual cables are used for program interrupt cable connections in (or out). Two additional dual cables are used, for a total of five, when Data Break devices are implemented.

5.4.3.2 Module Layout – In general, module layout is based on the functional elements within a system and is primarily a matter of common sense.

Digital has, however, layout conventions for I/O cabling to extend devices. The interface designer may wish to use these conventions as a guide. The general rule is DO NOT DEAD END THE I/O BUS. This means that parallel connections should always be made at each device to handle possible future expansion.

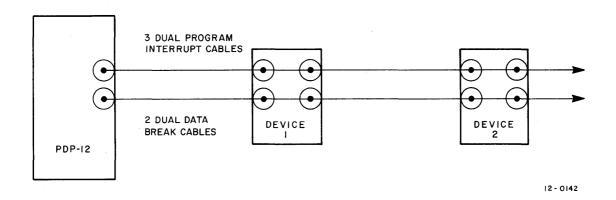


Figure 5-29. I/O Bus Configuration

Figure 5-30 shows the I/O cable connections in an option mounting panel. Module slot locations 1 through 3 (looking at the wiring pin side) are reserved for program transfer cable connections in (or out). Module slot locations 4 to 5 are reserved for data break cable connections in (or out). Slot 6 is used for Sense lines.

Module slot locations 1 through 6 in the bottom half of the option mounting panel are wired in parallel with the top module slot locations 1 through 6. To continue the I/O cabling to the next device, the bottom slots are used, and the I/O cable connections are exactly the same as mentioned above.

5.4.3.3 Cable Selection – Two types of cables are recommended for I/O interface connections.

The first is 9-conductor coaxial cable. This cable protects systems from radiated noise and cross talk between individual lines. Coax cable used and sold by Digital has the following nominal specs:

### $Z = 95 \pm 5 \Omega$

C = 13.75 pF/foot approx. (unterminated)


- L = 124 nH/foot approx.
- $R = 0.095 \Omega/foot nominal$
- Y = 79% of velocity of light, approx. (1.5 nsec/ft.)

The second type is a 19-conductor (9 signals and 10 grounds), #30 gauge flat copper Flexprint.

The total length of I/O cabling, from the PDP-12 to the last device, can be a maximum of 50 feet, and can be composed of 50 feet of coax or a combination of coax and Flexprint, in which case the Flexprint cannot exceed a total of 15 feet.

5.4.3.4 Connector Selection – Of the many connectors available in the module product line, several have particular application to I/O connectors. Price and ordering information is available on these and other connectors in the Digital Logic Handbook. Of particular interest are the M903 and M904 connectors described in the subsequent paragraphs.

		CABLE				
1	2	3	4	5	6	32
BAC 00 TO BAC 11 BIOP 1, 2, 4		AC 00 BUS TO AC 11 BUS	DATA ADD 00 TO DATA ADD 11	DATA 00 TO DATA 11		
BIOP 1, 2, 4 BT 53, 1		SKIP BUS	BRK RQST	3 CYCLE	SENSE	
BINITIALIZE		INT ROST BUS	DATA IN	CA INCREMENT	SENSE LINES	
	BMB 00 TO BMB 11	AC CLEAR BUS	MB INCREMENT	EXT DATA ADD		
			B ADD ACCEPTED			
1			B BREAK	B WC OVERFLOW		
		B RUN	BINITIALIZE	OVERFLOW		
		SAME ASSIGNME	ENTS AS ABOVE			
			4.			

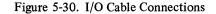

a. M903 Connector – Double sided 36-pin Flexprint cable connector with alternate grounds for I/O bus cables. (Two Flexprint cables are utilized with this connector module.)

b. M904 Connector – Double-sided 36-pin coaxial cable connector with alternate grounds for I/O bus cables. (Two coax cables are utilized with this connector module).

(1) Signals:

B1, D1, E1, H1, J1, L1, M1, P1, S1, D2, E2, H2, K2, M2, P2, S2, T2, V2

(2) Grounds:

A1, C1, F1, K1, N1, R1, T1, C2, F2, J2, L2, N2, R2, U2

Signal Terminating – The G717 module is used for terminating the following signals:

IOP 1, IOP 2, IOP 4, TS 2, TS 5.

This module contains five 100-ohm terminating resistors and should be located in the last device of the I/O cabling scheme.

*Wiring Hints* – These suggestions may help reduce mounting panel wiring time. They are not intended to replace . any special wiring instructions given on individual module data sheets or in application notes. For fast, neat wiring, the following order is recommended:

1. All power wiring (Pins A2, B2, C2, T1) and any horizontally bussed signal wiring. Use Horizontal Bussing Strips, Type 933. (Pin-B2 is bussed with -15V for modules requiring -15V.)

2. Vertical grounding wires interconnect chassis ground with Pins C2 and T1 grounds. Run these wires from the uppermost mounting panel to the bottom panel. On the first and last blocks of the mounting panel, connect the grounds to the chassis.

3. All other ground wires. Always use the nearest ground pin, unless a special grounding pin has been provided in the module.

4. Wire all signal wires in convenient order. Point-to-point wiring produces the shortest wire lengths, goes in fastest, is easiest to trace and change, and generally results in better appearance and performance than cabled wiring. Point-to-point wiring is strongly urged.

The recommended wire size for use with H803 mounting blocks and H911 mounting panel is #30. Larger or smaller wire may be used depending on the number of connections to be made to each lug. Solid wire and a heat resistant insulation is recommended. The H803 mounting blocks are only available with wire wrap pins which necessitates the use of a wire wrap tool. (Digital can supply #30 gauge wire in 1000 foot rolls.)

Adequate grounding is essential. In addition to the connections between mounting panels mentioned above, there must be continuity of grounds between cabinets and between the logic assembly and any equipment with which the logic communicates.

When wire wrapping is done on a mounting panel containing modules, the wire wrap tool must be grounded, except when all modules are removed from the mounting panel. This procedure must be followed because, even with tools isolated from the ac power line, such as those operated by batteries or compressed air, static charges may build to sufficient amplitudes so that damage to semiconductors may result.

Cooling – The low power consumption of M Series modules results in a total of about 15 watts dissipation in a typical H911 mounting panel containing 64 modules. Convection cooling is sufficient for a few mounting panels, but forced air cooling should be used when a very large system is built.

# 5.4.4 IOT Allocations

ΙΟΤ	Option
00	Interrupt
01	High Speed Reader Type PR12
02	High Speed Punch Type PP12
03	Teletype Keyboard/Reader
04	Teletype Teleprinter/Punch
05	Displays, Types VC8/I and KV8/I
06	Displays, Types VC8/I and KV8/I
07	Displays, Types VC8/I, and Light Pen Type 370
10	Power Fail Option KP12
11	Teletype System Type PT08
12	Teletype System Type PT08
13	Real Time Clock Type KW12
14	Mode Change (IOT 6141)
15	Tape Maintenance
16	
17	
20	Memory Extension Control Option Type MC12
21	Memory Extension Control Option Type MC12
22	Memory Extension Control Option Type MC12
23	Memory Extension Control Option Type MC12
24	Memory Extension Control Option Type MC12
25	Memory Extension Control Option Type MC12
26	Memory Extension Control Option Type MC12
27	Memory Extension Control Option Type MC12
30	User Interfaces
31	User Interfaces
32	User Interfaces
33	User Interfaces
34	User Interfaces
35	User Interfaces
36	User Interfaces
37	User Interfaces
40	Teletype System Type DP12
41	Teletype System Type DP12
42	Teletype System Type PT08
43	Teletype System Type PT08
44	Teletype System Type PT08
45	Teletype System Type PT08

5-43

46	Teletype System Type PT08
47	Teletype System Type PT08
50	Incremental Plotter Type XY12
51	Incremental Plotter Type XY12
52	Incremental Plotter Type XY12
53	General Purpose A/D Converters and Multiplexers, Types AF01A, AM02A,
	AM03A and AF04A Scanning Digital Voltmeter
54	General Purpose A/D Converters and Multiplexers, Types AF01A, AM02A,
	AM03A and AF04A Scanning Digital Voltmeter
55	D/A Converter Type AA01A
56	D/A Converter Type AA01A
57	D/A Converter Type AA01A, Sample and Hold Control Type AC01A and
	AF04A Scanning Digital Voltmeter
60	Random Access Disk File and Control Type DF32 and Synchronous Modem
	Interface Type DP01A
61	Random Access Disk File and Control Type DF32 and Synchronous Modem
	Interface Type DP01A
62	Random Access Disk File and Control Type DF32 and Synchronous Modem
	Interface Type DP01A
63	Card Reader Type CR12
64	Synchronous Modem Interface Type DP01A
65	Synchronous Modem Interface Type DP01A
66	Synchronous Modem Interface Type DP01A
67	Card Reader Type CR12 and Synchronous Modem Interface Type DP01A
70	Automatic Mag Tape Type TC58
71	Automatic Mag Tape Type TC58
72	Automatic Mag Tape Type TC58
73	Automatic Mag Tape Type TC58
74	Automatic Mag Tape Type TC58
75	
76	DECtape Control TC01
77	DECtape Control TC01

#### 5.4.5 Interface Connections

All interface connections to the PDP-12 are made at assigned module receptacle connectors in the Processor Mounting Frame. Capital letters designate vertical rows of modules within a mounting frame. The letters progress alphabetically from right to left when viewed from the wiring side. Module receptacles are numbered from top to bottom within a row. Terminals are assigned capital letters from right to left, with the letters G, I, O, and Q omitted. Double-sided connectors or modules use the suffix number 1 to designate the top side of a module and the suffix number 2 to designate the bottom side.

The module receptacles and assigned use for interface signal connections are:

Receptacle	Use	
N13	SENSE LINES	
N14	AC, IOP, TIMING OUTPUTS	
N15	MB OUTPUTS	
N16	AC, SKIP, INT. REQUEST INPUTS	
N17	DATA BREAK ADDRESS INPUTS	
N18	DATA BREAK DATA INPUTS	

Terminals A1, C1, F1, K1, N1, R1, T1, C2, F2, J2, L2, N2, R2, and U2 of these receptacles are grounded within the computer, and terminals B1, D1, E1, H1, J1, L1, M1, P1, S1, D2, E2, H2, K2, M2, P2, S2, T2, and V2 carry signals. Terminals A2 and B2 are not used. These terminals mate with either M903 or M904 Cable Connectors.

Interface connection to the PDP-12 can be established for all peripheral equipment by making series cable connections between devices. In this manner only one set of cables is connected to the computer and two sets are connected to each device; one receives the computer connection from the computer itself or the previous device, and one passes the connection to the next device. Where physical location of equipment does not make series bus connections feasible, or when cable length becomes excessive, additional interface connectors can be provided near the computer. All logic signals passing between the PDP-12 and input/output equipment are positive voltage levels, allowing direct TTL logic interface with appropriate diode clamp protection.

Positive level for a low logic state is 0 to 0.4 volts. Positive level for a high logic state is +3.6 volts.

The following table presents cable connections to the PDP-12 I/O Bus. A signal is true when its polarity matches the suffix character of its name (i.e., IOO BAC 00 (1) H will be high when AC 00 (1) and a program interrupt will be requested when the line EXT INT RQST BUS L is pulled low).

Signal	Connection	Signal	Connection
IOB XL 00 H	N13B1	IOB XL 11 H	N13D2
IOB XL 01 H	N13D1	IOB XL 12 H	N13E2
IOB XL 02 H	N13E1	IOB XL 13 H	N13H2
IOB XL 03 H	N13H1	NOT USED	N13K2
IOB XL 04 H	N13J1	NOT USED	N13M2
IOB XL 05 H	N13L1	NOT USED	N13P2
IOB XL 06 H	N13M1	NOT USED	N13S2
IOB XL 07 H	N13P1	NOT USED	N13T2
IOB XL 10 H	N13S1	NOT USED	N13V2
IOO BAC 00 (1) H	N14B1	IOO BAC 09 (1) H	N14D2
IOO BAC 01 (1) H	N14D1	IOO BAC 10 (1) H	N14E2
IOO BAC 02 (1) H	N14E1	IOO BAC 11 (1) H	N14H2
IOO BAC 03 (1) H	N14H1	IOO BIOP 1 H	N14K2
IOO BAC 04 (1) H	N14J1	IOO BIOP 2 H	N14M2
IOO BAC 05 (1) H	N14L1	IOO BIOP 4 H	N14P2
IOO BAC 06 (1) H	N14M1	100 BTS 5 (1) H	N14S2
IOO BAC 07 (1) H	N14P1	IOO BTS 2 (1) H	N14T2
IOO BAC 08 (1) H	N14S1	IOO BA INITIALIZE H	N14V2
IOO BMB 00 (1) H	N15B1	IOO BMB 06 (0) H	N15D2
IOO BMB 01 (1) H	N15D1	IOO BMB 06 (1) H	N15E2
IOO BMB 02 (1) H	N15E1	IOO BMB 07 (0) H	N15H2
IOO BMB 03 (0) H	N15H1	IOO BMB 07 (1) H	N15K2
IOO BMB 03 (1) H	N15J1	IOO BMB 08 (0) H	N15M2
IOO BMB 04 (0) H	N15L1	IOO BMB 08 (1) H	N15P2
IOO BMB 04 (1) H	N15M1	IOO BMB 09 (1) H	N15S2
IOO BMB 05 (0) H	N15P1	IOO BMB 10 (1) H	N15T2
IOO BMB 05 (1) H	N15S1	IOO BMB 11 (1) H	N15V2

Table 5-3. Cable Connections to the PDP-12 I/O Bus

EXT IO BUS 09L EXT IO BUS 10 L EXT IO BUS 11 L EXT SKIP BUS L EXT INT RQST BUS L EXT AC CLEAR BUS L IOO B RUN (0) H	N16D2 N16E2 N16H2 N16K2
EXT IO BUS 11 L EXT SKIP BUS L EXT INT RQST BUS L EXT AC CLEAR BUS L	N16H2 N16K2
EXT SKIP BUS L EXT INT RQST BUS L EXT AC CLEAR BUS L	N16K2
EXT INT RQST BUS L EXT AC CLEAR BUS L	
EXT AC CLEAR BUS L	
	N16M2
IOO B RUN (0) H	N16P2
	N16S2
NOT USED	N16T2
NOT USED	N16V2
EXT DATA ADD 09 L	N17D2
EXT DATA ADD 10 L	N17E2
EXT DATA ADD 11 L	N17H2
EXT BREAK RQST L	N17K2
EXT DATA IN H	N17M2
IOO BREAK (0) H	N17P2
IOO ADD	
ACCEPTED (0) H	N17S2
EXT INCREMENT MB L	N17T2
IOO BB INITIALIZE H	N17V2
EXT DATA 09 L	N18D2
EXT DATA 10 L	N18E2
EXT DATA 11 L	N18H2
EXT 3 CYCLE L	N18K2
IOB CA INCREMENT H	N18M2
IOO WC OVERFLOW (0) H	N18P2
EXT EXTEND DATA ADD 02 L	N18S2
EXT EXTEND DATA ADD 01 L	
	N18V2
	EXT EXTEND DATA ADD 02 L

Table 5-3. Cable Connections to the PDP-12 I/O Bus (cont)

# CHAPTER 6 PERIPHERAL DEVICES

### INTRODUCTION

This chapter contains descriptions of all the standard prewired I/O bus options which are available with the PDP-12. It describes the peripheral logic expander, BA12, and options contained within the panel, as well as the most commonly used PDP-8 and PDP-12 family of I/O bus options. In general, most PDP-8 family of options can be operated without modification on the PDP-12 I/O bus. The reader, therefore, should refer to the DEC Small Computer Handbook (1970) for additional information.

Prewired options and options contained in the BA12 Peripheral Expander panel derive their power from the PDP-12 power supply. The Peripheral Expander contains the necessary buffering to provide the isolation and current driving requirements for I/O devices. The control logic for these options is contained in plug-in modules; therefore, when one of these options is added, wiring changes or additions are not needed. Separate power supplies are normally included with all the other options.

<b>Option Groupings</b>	<b>Option Type Number</b>
a. Prewired	
Teletype Model 33 ASR	
Additional Teletype or Dataphone	DP12-A,B
Real-Time Interface	KW12-A
Fixed Interval Clocks	KW12-B,C
LINCtape to DECtape format converter	TC12-F
Digital Plotter and Control	XY12
Power Fail	KP12
b. Peripheral Expander Type BA12	
4-Station TTY Control	DC02-D,E
Line Printer	LP12
High-speed Paper Tape Reader/Punch	PC12, PP12, and PR12
Standard or Mark Sense Card Reader	CR12, CM12
Data Buffers	DB12-P, N

# **Option Groupings**

# **Option Type Number**

I/O Bus Stand Alone Peripherals	
32 Station TTY Control	DC02-F,G
1- and 2-Station TTY Control	PT08
Line Printer	LP08
Magnetic Tape Control	TC58
Magnetic Tape Transport	TU20
Disk Fixed Head, 32K	DF32, DS32
Disk Fixed Head, 256K	RF08, RS08
Disk Movable Head 800K	RK8, RK01
A-D Converter	AF01A
D-A Converter	AA01A
	32 Station TTY Control 1- and 2-Station TTY Control Line Printer Magnetic Tape Control Magnetic Tape Transport Disk Fixed Head, 32K Disk Fixed Head, 256K Disk Movable Head 800K A-D Converter

The above groupings represent the physical organization of the PDP-12; however, the options will be described in the following order:

<b>Option Descriptions</b>	Page Number
Teletype Controls (TTY)	6-3
Real-Time Interface and Clocks	6-18
Disks	6-27
Tapes	6-45
Line Printers	6-59
Card Readers	6-63
Plotters	6-68
High-Speed Paper Tape	6-71
Data Buffers	6-73
Power Fail/Restart	6-74
A-D Converter	6-76
D-A Converter	6-82

6-2

### 6.1 TELETYPE

### 6.1.1 Model 33 ASR

The Teletype Model 33 ASR is the standard Teletype device offered with the PDP-12. It may be used to type in or print out information at a rate of up to ten characters per second, or to read in or punch out perforated-paper tape at ten characters per second. Signals transferred between the Model 33 ASR and the control logic are standard, serial, 11-unit code, Teletype signals. The signals consist of marks and spaces which correspond to idle and bias current in the Teletype, and to zeros and ones in the teletype control and computer. The start mark and subsequent eight-character bits are one-unit-of-time duration, and are followed by the stop mark, which occupies two units. The 8-bit code used by the Model 33 ASR Teletype unit is the American Standard Code for Information Interchange (ASCII) modified. To convert the ASCII code to Teletype code, add 200 octal (ASCII +  $200_8$  = Teletype). Bits are numbered from right to left, from 1 through 8, with bit 1 having the least significance.

Figure 6-1 illustrates the relationship between paper tape information and the AC.

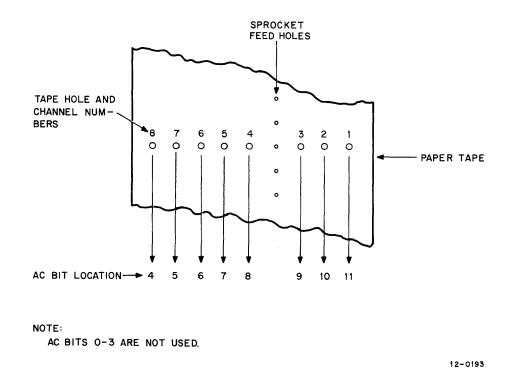


Figure 6-1. Relationship Between Paper Tape and Accumulator

The character (number) four (4) as it would be punched on paper tape is shown in Figure 6-2.

The Model 33 ASR set generates all assigned codes except 340 through 374 and 376. Generally codes 207, 212, 215, 240 through 337, and 377 are sufficient for Teletype operation. The Model 33 ASR detects all characters, but does not interpret all of the codes that it can generate as commands. The standard number of characters printed per line is 72. The sequence for proceeding to the next line is a carriage return followed by a line feed (as opposed to a line feed followed by a carriage return). Appendix F lists the character codes for the Teletype.

### 6.1.2 Model 33 KSR

This Teletype model is similar to the 33 ASR, except that it does not have either a paper tape reader or punch. The control logic, however, is the same as that used with the 33 ASR.

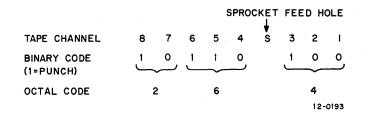


Figure 6-2. Punched Paper Tape Format for the Number 4

#### 6.1.3 Model 35 KSR

This unit is functionally the same as the 33 KSR. It is designed for heavy duty use and extended reliability. The control logic, however, is the same as that used in the 33 ASR.

### 6.1.4 Model 37 KSR

This Teletype is offered as part of the LT37-AD, AE (50 Hz) option. It has an expanded character set (i.e., upper and lower case) and control functions, and operates at 15 characters per second, both transmitting and receiving. The LT37-AD option has a front panel switch which can effectively convert the unit to operate as a 33 ASR. Only upper case characters would then be received or transmitted. The LT37 option provides the following programmed operations:

- a. Horizontal tab set and clear
- b. Motor control; on and off
- c. Vertical tab; set and clear at full line increments
- d. Ribbon color shift
- e. Reverse linefeed; full and half line increments

The LT37 is useful for the preparation of formal reports, business forms and graphical plots.

Table F-3 in Appendix F provides the character and control codes for each mode of operation.

#### 6.1.5 Teletype Controls

The basic programmed operation of the following devices is similar:

Console Teletype

Prewired Dataphone Option, Type DP12-A, B Add-on Single and Dual TTY Control, Type PT08-B, C

They all transmit and receive asynchronous, full-duplex, bit-word information. These devices use control modules M706 (Receiver) and M707 (Transmitter), which are positive logic modules, or W706 (Receiver) and W707

(Transmitter), which are the negative equivalent logic control modules. These modules are fully described in the Digital Logic Handbook. The main differences in these options being controlled are:

- a. Source of data (e.g., Dataphone, keyboard/display terminal, Teletype, etc.)
- b. Speed of operation

Slow speed devices such as Teletype are driven by the stabilized RC oscillator clock module (M452). Higher speed requires a high stability of the selected frequency; therefore, a crystal-controlled clock module (M405) is used. The frequency of operation must be specified for each separate device.

c. Voltage level of inputs

Typically, DEC equipment will interface directly with EIA RS-232-B industry standard devices or the standard 0, 20 mA Teletype current loop (sometimes referred to as 0, +3V logic level). As the console Teletype is typical of the three different controls discussed in this section, it will be described in detail. The differences which are noteworthy in the PT08 and DP12 will be further discussed.

6.1.5.1 **PDP-12 Console Teletype Control** – The Teletype control uses the standard M706 receiver, M707 transmitter, and M452 clock modules for basic logic. It will drive any one of the previously discussed Teletype models (the KSR-37 requires a slight adjustment of the clock to operate at 15 characters per second).

Serial information read or written by the Teletype unit is assembled or disassembled by the Teletype control for parallel transfer to the accumulator (AC). The control also provides the program flags that cause a program interrupt or an instruction skip depending on the availability of the Teletype and the processor.

In all programmed operation, the Teletype unit and control are considered as a Teletype in (TTI) for input data from the keyboard or the perforated-tape reader, and as a Teletype out (TTO) for computer output information to be printed and/or punched on tape. Therefore, two device select codes are used. Select code 03 initiates operations associated with the keyboard/reader (TTI) and select code 04 performs operations associated with the teleprinter/punch (TTO). Parallel input and output functions are performed by corresponding IOT pulses produced by the two device selectors. Pulses produced by the IOP1 pulse trigger skip gates; pulses produced by the IOP2 pulse clear the control flags and/or the accumulator; and pulses produced by IOP4 initiate data transfers to and from the control.

6.1.5.2 **Keyboard Reader** – The keyboard and tape reader control contains an 8-bit shift register (TTI) which assembles and holds the code for the last character struck on the keyboard or read from the tape. Teletype characters from the keyboard/reader are received serially by register TTI. The code of a Teletype character is loaded into the TTI so that spaces correspond to binary zeros and holes (marks) correspond to binary ones. Upon program command, the contents of the TTI are transferred in parallel to the accumulator.

When a Teletype character starts to enter the TTI, the control de-energizes a relay in the Teletype unit to release the tape feed latch. When released, the latch mechanism stops tape motion only when a complete character has been sensed, and before sensing of the next character is started. A keyboard is set when an 8-bit computer character has been assembled in the TTI from a Teletype character. The program must sense the condition of this flag with a KSF instruction, and, if the flag is set, issue a KRB instruction which clears the AC, clears the keyboard flag, transfers the contents of the TTI into the AC, and enables advance of the tape feed mechanism. Program interrupt can be controlled by the LINC mode instruction ESF (0004) (refer to Paragraph 3.3.16). This instruction either enables or inhibits interrupts when either the TTI or TTO flag is set.

6.1.5.3 Instructions – Instructions for use in supplying data to the computer from the Teletype are as follows:

# KSF Skip on Keyboard Flag

Octal code:	6031
Event time:	1
Execution time:	4.25 μs
Operation:	If the keyboard flag is set, the contents of the PC are incremented by one so that the next sequential instruction is skipped.
Symbol:	If Keyboard Flag = 1, then $PC + 1 \rightarrow PC$

KCC Clear Keyboard Flag

Octal code:	6032
Event time:	2
Execution time:	4.25 μs
Operation:	The AC and the keyboard flag are cleared. If there is tape in the reader and the reader is on,
	the character over the read head is loaded into the TTI and the tape advanced one frame. If
	there is no tape or the reader is off (STOP or FREE) the character struck on the keyboard is
	assembled into the TTI. In either case, when the character is completely assembled in the TTI,
	the hardware sets the keyboard flag.
Symbol:	$0 \rightarrow AC$
	$0 \rightarrow$ Keyboard flag allowing the hardware to cause:
	Keyboard/Tape Character → TTI
	$1 \rightarrow$ Keyboard flag (approximately 100 ms after issuing the instruction)

KRS Read Keyboard Buffer Static

Octal code:	6034
Event time:	3
Execution time:	4.25 μs
Operation:	The contents of the TTI are transferred into $AC_{4-11}$ . This is a static command in that neither
	the AC nor the keyboard flag is cleared. KRS can be microprogrammed with KCC.
Symbol:	TTI V $AC_{4-11} \rightarrow AC_{4-11}$
	$0 \rightarrow \text{Keyboard Flag}$

# NOTE

The KRS instruction has been redefined in a later version of the PDP-12 to permit clearing of the TTI flag without advancing the paper tape and assembling the next character.

KRB Read Keyboard Buffer Dynamic

Octal code:	6036
Event time:	2, 3
Execution Time:	4.25 μs
Operation:	This instruction combines the functions of the KCC and KRS. The AC and keyboard flag are
	both cleared and the contents of the TTI are transferred into AC <sub>4-11</sub> . Clearing the keyboard
	flag allows the hardware to begin assembling the next input character into the TTI (as
	described for KCC). When the character is completely assembled in the TTI, the hardware
	causes the flag to be set, indicating that TTI again has a character ready for transfer.
Symbol:	$0 \rightarrow AC \qquad \qquad C(TTI) \lor C(AC_{4-11}) \rightarrow AC_{4-11}$
	$0 \rightarrow$ Keyboard Flag allowing the hardware to cause:
	Tape Reader to advance 1 character
	Keyboard/Tape Character $\rightarrow$ TTI
	$1 \rightarrow$ Keyboard Flag when down (approximately
	100 ms after issuing instruction)

Form:	KST I
Octal code:	0415 + 201
Execution time:	1.6 μs
Condition:	A key has been struck on the ASR-33 keyboard, the character code has been assembled in the Teletype buffer, and the Keyboard flag is raised. (The flag is cleared when the character is read into the AC.)

The program example shown below will read 1 character from the keyboard.

*200		
INPUT,	KCC	/CLEAR KEYBOARD FLAG
	JMS LISN	
	DCA STORE	
	HLT	
LISN,	0	/SKIP ON KEYBOARD FLAG
	KSF	
	JMP1	
	KRB	/READ KEYBOARD BUFFER
	JMP I LISN	
STORE,	0	
\$		

The main program begins with KCC. In general, the main program should begin by clearing the flags of all devices to be used later in the program. If the above program is started at location 200, it will proceed to the KSF, JMP.-1 loop, and stay in this loop endlessly until a key on the Teletype unit is pressed or a paper tape is loaded into the reader. When the ASCII code for the character is assembled in the keyboard/reader buffer register, the flag will be set to a 1 and the program will skip out of the loop. The contents of the buffer will be transferred into the accumulator, and the buffer and flag will be cleared.

6.1.5.4 **Teleprinter/Punch** – On program command, a character is transferred from the accumulator (AC) to the output shift register (TTO) for transmission to the teleprinter/punch unit. The teleprinter control generates the start space, shifts the eight character bits serially into the printer selector magnets of the teletype unit, and then generates two stop marks. Bit transfer rate from the TTO to the teleprinter/punch unit is at the normal Teletype rate of 110 baud. A character transfer requires 100 milliseconds for completion. The teleprinter flag is set when the last bit of the character code is sent to the teleprinter/punch, indicating that the TTO is ready to receive a new character from the AC. The flag activates either the program interrupt synchronization element or the instruction skip element. When using instruction skip, the program checks the flag by means of TSF instruction. If the flag is set, the program must issue a TLS instruction which clears the flag and sends a new character from the AC to the TTO. AC to TTO transfer time is short compared to the print/punch time, so the program must wait for the flag to set before issuing another TLS. Instructions for use in outputting data to the teleprinter/punch are as follows:

TSF Skip on Teleprinter Flag

Octal code:	6041
Event time:	1
Execution time:	4.25 μs
Operation <sup>.</sup>	If the teleprinter flag is set, the contents of the PC are incremented by one so that the next
	sequential instruction is skipped.
Symbol:	If Teleprinter Flag = 1, then $PC + 1 \rightarrow PC$

# TCF Clear Teleprinter Flag

Octal code:	6042
Event time:	2
Execution time:	4.25 μs
Operation:	The teleprinter flag is cleared. Can be microprogrammed with TPC.
Symbol:	$0 \rightarrow \text{Teleprinter Flag}$

# TPC Load Teleprinter and Print

Octal Code:	6044
Event time:	3
Execution time:	4.25 µs
Operation:	$AC_{4-11}$ are parallel transferred to the TTO, then the hardware starts shifting the character out to the printer/punch unit. When the transfer is complete (approximately 100 ns), the TTO flag is set.
Symbol:	$C(AC_{4-11}) \rightarrow TTO$ causing: $C(TTO) \rightarrow printed$ and (if punch is on) punched

TLS Load Teleprinter Sequence

Octal Code:	_6046
Event time:	2, 3
Execution time:	4.25 μs
Operation:	This is an instruction that combines TCF and TPC. The teleprinter flag is cleared, then the contents of $AC_{4-11}$ are parallel transferred to the TTO, where the hardware serially shifts the character-bits out to the printer/punch unit. When the printer/punch has finished outputting the character, the hardware sets the teleprinter flag. The whole operation, from the time TLS clears the flag and TPC starts character transfer until the time the hardware finishes with the character and again sets the flag, requires 100 ms.
Symbol:	$0 \rightarrow$ Teleprinter flag
	$C(AC_{4-11}) \rightarrow TTO$ causing:
	$C(TTO) \rightarrow Printed$ and (if punch on) punched
	$1 \rightarrow$ Teleprinter flag when done (approximately 100 ns after issuing instruction)

Shown below are several programming examples illustrating the use of the TTO control.

.

0	
TLS	/LOAD TTO FROM AC AND PRINT/PUNCH
TSF	/TEST FLAG SKIP IF = 1
JMP1	/JMP BACK & TEST FLAG AGAIN AND AGAIN
CLA	/CLEAR CHARACTER FROM AC
JMP I TYPE	/EXIT TO MAIN PROGRAM
•	
•	
	TSF JMP1 CLA

By rearranging this subroutine, the 100 ms spent waiting for the character to be output and the flag to be set is used to continue the main program, making more efficient use of program time.

-

TYPE,

0	
TSF	/TEST FLAG TO SEE IF TELEPRINTER FREE, SKIP IF NOT
JMP1	/WAIT TILL IT IS BY TESTING AGAIN AND AGAIN
TLS	<b>/OUTPUT CHARACTER</b>
CLA CLL	/CLEAR CHARACTER FROM AC
JMP I TYPE	/EXIT TO CONTINUE PROGRAM
•	

This subroutine tests the flag first, and waits only if a previous character is still being output. It clears the AC and exits immediately after sending the character to the TTO, and continues to run the user's program instead of waiting while the teleprinter (a much slower device) is off typing/punching the last character. The user must initialize the control by setting the teleprinter flag to a one. Otherwise, the subroutine will "hang-up" the first time through (in the TSF, JMP .-1 loop). The initialization can be accomplished by issuing a TLS or TPC instruction at the beginning of the mainline program.

#### Format Routines

Input and output routines are very often written in the form of subroutines, like the TYPE subroutine in the previous example. The example below is a carriage return/line feed subroutine that calls the TYPE subroutine to execute a carriage return and line feed on the printer, thus advancing to a new line for the printing of information.

Carriage Return/Line Feed Subroutine:

CRLF,	0	
	<b>TAD K212</b>	
	JMS TYPE	
	<b>TAD K215</b>	
	JMS TYPE	
	JMP I CRLF	
K212,	212	<b>ASCII FOR CARRIAGE RETURN</b>
K215,	215	<b>ASCII CODE FOR A LINE FEED</b>
TYPE,	0	
,	TSF	
	JMP1	
	TLS	
	CLA CLL	
	JMP I TYPE	

Subroutines similar to the one above could be written to tab space the carriage a given number of spaces, or to ring the bell of Teletype Model 33 ASR by using the respective codes for these nonprinting control characters.

6.1.5.5 Single Teletype Control, Type DP12-A (prewired) – This internal option provides an interface which is programmed similar to the standard console Teletype. The device select codes are IOTs 40 and 41. Interrupts caused by either the transmitter or receiver flags can be disabled by the LINC mode instruction ESF (refer to Paragraph 3.3.16).

6.1.5.6 Dataphone Control, Type DP12-B – This option is a modification of the DP12-A, which permits communication to most standard Dataphone sets. An extra crystal-controlled clock permits the user to specify a baud rate from 110 to 100K baud in order to provide the necessary frequency stability required at higher baud rates. In addition, the option is supplied with a 25-ft cable, Type BC01A-25, which will connect (via a 25-pin connector) to a Dataphone set. This cable has a card connector (M850), which converts the EIA standard RS-232-B signals to DEC logic levels of 0 and +3V

6.1.5.7 Single and Dual TTY Control Type PT08 – The PT08 is a serial-to-parallel, parallel-to-serial converter which provides full-duplex communication between an asynchronous channel and a PDP-12 computer. Two basic configurations are offered: PT08-B (one full-duplex channel) and PT08-C (two full-duplex channels). Systems may be expanded up to five duplex channels by stacking PT08 units.

The PT08-B and C are designed to supply transmit and receive keying current that is intended for use with 20 mA, dc-keyed devices. Digital Equipment Corporation's Model 33 or 35 teleprinter units have been modified to be compatible with the PT08. Devices equivalent to the modified teleprinter units are also compatible with the PT08.

The PT08-B and C are negative bus options (0, -3V) and, therefore, a DW08-A negative-to-positive I/O bus converter must be used when connecting the PT08 to the PDP-12.

The PT08-F option provides EIA standard RS-232-B level conversion as well as a 25-ft cable designed to connect to a Dataphone set. Another option, the PT08-X, can be installed in any channel for customer selection of character format and speed. With the PT08-F and PT08-X options combined, the bit rate can be increased to 100K baud for driving medium-to-high-speed asynchronous modems. This combination can be used for an economical intercomputer communication channel, or for interfacing to special equipment with unique asynchronous speeds and character formats.

#### Specifications

Performance specifications are summarized in Table 6-1.


Specifications	
110 baud is standard; up to 100K (software limited) with PT08-X option.	
Standard: 1-unit start; 8 character bits; 2-unit stop.	
PT08-X Option: 5 or 8 character bits, 1- or 1.5-unit stop element at user's request.	
Full duplex.	
Standard: Supplies transmit and receive keying current that is intended for use with 20 mA, dc-keyed devices.	
PT08-F Options: Provides interface that conforms to EIA RS-232-B devices.	
1500-ft maximum (environment dependent) for local terminals.	
EIA interface transmission distance is limited only by characteristics of modem and associated communication facility. A 25-ft cable to the modem is supplied.	

Table 6-1. PT08 Specifications

Figure 6-3 illustrates the various PT08 equipment configurations for both the standard system expansion and interface provisions.

#### Programming

IOT instructions test for character-ready conditions and transfer assembled characters to and from the computer's accumulator. The same basic commands are used for all channels, with individual channels assigned different device selection codes. For PT08 channel 1, the devices codes are 40 and 41, etc. (See Table 6-2 for complete listings of PT08 device codes.) It will be noted that channel 1 IOTs are the same as assigned to the internal prewired option DP12-A or B. When channel 1 is implemented, the IOT for channel 1 must be revised to an unused device select code. This normally would be one of the device codes 30 through 37. The basic mnemonic plus the PT-number designator identifies the mnemonic for the specific channel.

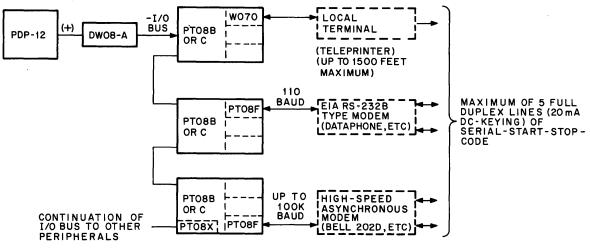

12-0206

### Figure 6-3. PT08 Equipment Configurations

 Table 6-2.
 PT08 Device Codes

Basic	Channel Number				
Mnemonic	1	2	3	4	5
KSF	6421	6441	6461	6111	6301
	KSFPT2	KSFPT3	KSFPT4	KSFPT5	KSFPT1
KCC	6422	6442	6462	6112	6302
	KCCPT2	КССРТ3	KCCPT4	KCCPT5	KCCPT1
KRS	6424	6444	6464	6114	6304
	KRSPT2	KRSPT3	KRSPT4	KRSPT5	KRSPT1
KRB	6426	6446	6466	6116	6306
	KRBPT2	KRBPT3	KRBPT4	KRBPT5	KRBPT1
TSF	6431	6451	6471	6121	6311
	TSFPT2	TSFPT3	TSFPT4	TSFPT5	TSFPT1
TCF	6432	6452	6472	6122	6312
	TCFPT2	TCFPT3	TCFPT4	TCFPT5	TCFPT1
TPC	6434	6454	6474	6124	6314
	TPCPT2	TPCPT3	TPCPT4	TPCPT5	TPCPT1
TLS	6436	6456	6476	6126	6316
	TLSPT2	TLSPT3	TLSPT4	TLSPT5	TLSPT1

### Instructions

The following instructions are used with the PT08:

# KSF Skip on Receive Flag

Event time:	1
Indicators:	IOT, Fetch, Pause
Execution time:	4.25 μs
Operation:	Causes the program to skip the next instruction if the receive flag is set, indicating that an assembled character is ready.
Symbol:	If receive flag = 1, $PC + 1 \rightarrow PC$

# KCC Clear Receive Flag and AC

Event time:	2
Indicators:	IOT, Fetch, Pause
Execution time:	4.25 μs
Operation:	Clears the accumulator and the receive flag.
Symbol:	$0 \rightarrow AC, 0 \rightarrow RF$

# KRS Read Receive Buffer (Static)

Event time:	3
Indicators:	IOT, Fetch, Pause
Execution time:	4.25 μs
Operation	Transfers an assembled character from the receive buffer to $AC_{4-11}$ . Does not reset AC or
	receive flag.
Symbol:	$RB \rightarrow AC_{4-11}$

KRB Read Receive Buffer (Dynamic)

Event time:	2, 3
Indicators:	IOT, Fetch Pause
Execution time:	4.25 μs
Operation:	Performs the functions of KCC and KRS together, so that the receive flag and AC are cleared
	before data is transferred from the receive buffer to the AC.
Symbol:	$0 \rightarrow AC, 0 \rightarrow RF$
	$RB \rightarrow AC_{4-11}$

TSF Skip on Transmit Flag

Event time:	1
Indicators:	IOT, Fetch, Pause
Execution time:	4.25 μs
Operation:	Causes the program to skip the next instruction if the transmit flag is set, indicating that the
	transmit flag = 1, PC + 1 $\rightarrow$ PC

# TCF Clear Transmit Flag

Event time:	2
Indicators:	IOT, Fetch, Pause
Execution time:	4.25 μs
Operation:	Resets the transmit flag.
Symbol:	$0 \rightarrow TF$

# TPC Load Transmit Character

Event time:	3
Indicators:	IOT, Fetch, Pause
Execution time:	4.25 μs
Operation:	Loads the transmit buffer from $AC_{4-11}$ and initiates transmission of a character.
Symbol:	$AC_{4-11} \rightarrow TB$

Event time:	2, 3
Indicators:	IOT, Fetch, Pause
Execution time:	4.25 μs
Operation:	Performs the functions of TCF and TPC together.
Symbol:	$0 \rightarrow \mathrm{TF}$
	$AC_{4-11} \rightarrow TB$

### Maximum Data Rates

In transmitting the PT08 provides a full character cycle for the program to deliver new data. In receiving, one bit time is required to read in necessary data. However, for maximum data transfer rates, the time at which data transfer can occur is limited to an aperture equal to the stop bit time plus half a bit time. This response time is measured from the beginning of a stop bit (the time at which the transmit or receive flag is reset), and the midpoint of the next character's start bit. If the program fails to respond within this time, a character is lost. Timing is illustrated in Figure 6-4.

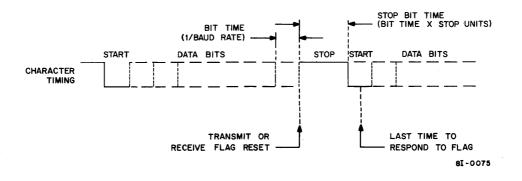


Figure 6-4. PT08 Program Response Time

For example, at 110 baud (9.09 ms bit time), response time is:

Stop bit time + half a data bit time =  $2 \times 9.09 + 9.09/2$ = 22.725 ms

Note that the number of bits per character need not be considered.

6.1.5.8 Multiple Teletype Control, Type DC02-E (see Table 6-3) – The DC02-E option, which is prewired in the BA12 Peripheral Expander, allows the user to add up to four serial-to-parallel, parallel-to-serial asynchronous data channels. It consists of a DC02-E multiple station control and from one to four DC02-D station interfaces (each full-duplex). A Type BC01A-25 cable is available that will connect to most Dataphones via a 25-pin connector and will convert EIA standard RS-232-B signals to DEC logic levels of 0 + 3 volts.

The control will handle teletypes at their normal baud rate of 110. In addition, higher speed devices may be operated by using crystal clocks. In this case the baud rate must be specified by the user. Up to two clocks may be used and may be connected by a jumper module in any combination to control the stations' transmitters and receivers.

# Table 6-3. DC02-E Specifications

Characteristics		Specifications
Speed	110 baud is st	andard; up to 100K baud crystal controlled.
Character Format	Standard:	1-unit start; 8 character bits; 2-unit stop.
	Option:	5 or 8 character bits 1- or 1.5-unit stop element at user's request.
Operating Mode	Full duplex.	
Interface	Standard:	Supplies transmit and receiver keying current that is intended for use with 20 mA, dc-keyed devices.
Transmission Distance	limited only b	mum (environment dependent) EIA interface transmission distance is by characteristics of modem and associated communication facility. A the modem is supplied. (BC01A-25).

# **DC02-E** Control Instructions

The following instructions are used with the DC02E control:

MTPF Multiple Teleprinter Flag

Octal code:	6113
Event time:	1, 2
Execution time:	4.25 μs
Operation:	Transfer status of teleprinter flags to AC 0-3.
Symbol:	Teleprinter flags $\rightarrow AC_{0-3}$ .
	$0 \to \mathrm{AC}_{4-11}.$

MINT Multiple Interrupt

Octal code:	6115
Event time:	3
Execution time:	4.25 μs
Operation:	Interrupt on if $AC_{11}$ is set (interrupt request if any flags).
Symbol:	$AC_{11} \rightarrow Interrupt Enable$

MTON Multiple Station Select

Octal code:	6117
Event time:	1, 2, 3
Execution time:	4.25 μs
Operation:	Transfer $AC_{0-3}$ to selection register (select stations when bit is set).
Symbol:	$AC_{0-3} \rightarrow SR$

# MTKF Multiple Keyboard Flag

Octal code:	6123
Event time:	1, 2
Execution time:	4.25 μs
Operation:	Transfer status of keyboard flags to $AC_{0-3}$ .
Symbol:	$KF \rightarrow AC_{0-3}$
1. J.	$0 \rightarrow AC_{4-11}$

# MINS Multiple Interrupt and Skip

Octal code:	6125
Event time:	1, 4
Execution time:	4.25 μs
Operation:	Skip if the interrupt request is active (if interrupt is on and any flag is raised).
Symbol:	If interrupt request is active, $PC + 1 \rightarrow PC$

## MTRS Read Station Select Status

Octal code:	6127
Event time:	1, 2, 3
Execution time:	4.25 μs
Operation:	Transfer the status of the selection register to $AC_{0-3}$ .
Symbol:	$SR \rightarrow AC_{0-3}$
	$0 \to AC_{4^{-1}1}$

# **DC02-D** Instructions

Decoder instructions for the DC02-D are in two basic groups: receiver and transmitter. The receiver instructions are 6111, 6112, 6114, and 6116; the transmitter instructions are 6121, 6122, 6124, and 6126. The "Station Select" flip-flop is gated with each device select code; therefore, these IOTs are effective only when a particular station is selected.

# MKSF Skip On Keyboard Flag

Octal code:	6111
Event time:	1
Execution time:	4.25 μs
Operation:	Skip if the selected keyboard flag is set.
Symbol:	If KF = 1, PC + 1 $\rightarrow$ PC

# \*MKCC Clear Keyboard Flags

Octal code:	6112
Event time:	2
Execution time:	4.25 μs
Operation:	Clear the keyboard flag of the selected station; clear AC. If the paper tape reader is on, the
	tape will advance 1 character and the receiver flag will be set approximately 100 ns after
	issuing the instruction.
Symbol:	$0 \rightarrow KF, 0 \rightarrow RF, 0 \rightarrow AC$

### MKRS Read Keyboard Register Static

Octal code:	6114
Event time:	3
Execution time:	4.25 μs
Operation:	Transfer the keyboard register contents to $AC_{4-11}$ .
Symbol:	$AC_{0-11}$ V KR to $AC_{0-11}$ .

<sup>\*</sup> On some systems a logic revision has been added which inhibits tape advance and consequent setting of the receiver flag.

### MKRB Load Keyboard Sequence

Octal code: Event time: Execution time: Operation:	6116 2,3 4.25 $\mu$ s Clear the keyboard and reader flags, clear AC; transfer the keyboard register contents to
	AC <sub>4-11</sub> (MKCC and MKRS combined).
Symbol:	$0 \rightarrow \text{KF}$
	$0 \rightarrow RF$
	$0 \rightarrow AC$
	$KR \rightarrow AC_{4-11}$

### MTSF Skip on Teleprinter Flag

Octal code:	6121
Event time:	1
Execution time:	4.25 μs
Operation:	Skip if the selected teleprinter flag is set.
Symbol:	If TF = 1, PC + 1 $\rightarrow$ PC

# MTCF Clear Teleprinter Flag

Octal code:	6122
Event time:	2
Execution time:	4.25 μs
Operation:	Clear the teleprinter flag of the selected keyboard station.
Symbol:	$0 \rightarrow TF$

MTPC Multiple Load Teleprinter Register and Print

Octal code:	6124
Event time:	3
Execution time:	4.25 μs
Operation:	Load $AC_{4-11}$ into the teleprinted register (begin print/punch).
Symbol:	$AC_{4-1 1} \rightarrow TR$

### MTLS Load Teleprinter Sequence

Octal code:	6126
Event time:	2, 3
Execution time:	4.25 μs
Operation:	Clear the teleprinter flag and load $AC_{4-11}$ into the teleprinter register (MTCF and MTPC combined).
Symbol:	$0 \rightarrow TF$
	$AC_{4-11} \rightarrow TR$

### Multiple Teletype Control, Type DC02-F

This control is similar to the DC02-E in operation and design. It consists of a double row of logic  $(10-1/2^{\circ} \times 19^{\circ})$  nominal rack space) complete with power supplies. This unit will handle up to eight stations. The DC02-F is designed so that four controls may be connected together in such a way that 32 stations total may be operated. A jumper module is used to enable selected signals when the system is expanded.

As in the four-station control DC02-E, the high order bits of the AC are used to select a station.  $AC_{0-7}$  are used to select the stations within one control and  $AC_{8-11}$  are used to select any one of up to four DC02-F controls. Up to

three separate clocks may be specified. In addition, two frequency divide registers are available with outputs at divide-by-8 and divide-by-128. The resultant timing pulses may be connected in any combination with jumper modules to provide timing for the transmitter and receiver modules of the stations.

The specifications for this control are the same as those of the DC02-E. The program instructions are likewise identical except for the following.

### MTPF Multiple Teleprinter Flag

Octal code:	6113
Event time:	1, 2
Execution time:	4.25 μs
Operation:	Transfer status of teleprinter flags $AC_{0-7}$ . $AC_{8-11}$ selects one of four controls.
Symbol:	Teleprinter flags $\rightarrow AC_{0-7}$
	$0 \rightarrow AC_{8-11}$

MTKF Multiple Keyboard Flag

Octal code:	6123
Event time:	1, 2
Execution time:	4.25 μs
Operation:	Transfer status of keyboard flags to AC <sub>0-7</sub>
Symbol:	$KF \rightarrow AC_{0-7}$
	$0 \rightarrow AC_{8-1}$

### MTON Multiple Teleprinter

Octal code:	6117
Event Time:	1, 2, 3
Execution time:	4.25µs
Operation:	Transfer $AC_{0-7}$ to selection register select stations when bits are set. $AC_{8-11}$ selects one of four controls.
Symbol:	$AC_{0-7} \rightarrow SR$
	$0 \rightarrow AC_{8-11}$

# MINS Multiple Interrupt and SKP

Octal code:	6125
Execution time:	4.25 μs
Operation:	Skip if the interrupt request is active (i.e., if interrupt is on and any flag is raised) $AC_{8-11}$ select one of four controls.
Symbol:	$0 \rightarrow AC_{8-1}$

MTRS	Multiple	Teleprinter	Read Status

Octal code:	6127
Event time:	1, 2, 3
Execution time:	4.25 μs
Operation:	Transfer the status of the selection register to $AC_{0-7}$ . $AC_{8-11}$ selects one of four controls.
	Transfer status of interrupt enable flip-flop to $AC_{11}$ . If $AC_{11} = 1$ , the interrupt enable is set.
Symbol:	$SR \rightarrow AC_{0-7}$
	Interrupt Enable $\rightarrow AC_{11}$
	$0 \rightarrow AC_{8-10}$

# 6.2 REAL TIME CLOCKS

# 6.2.1 Real Time Interface, Type KW12-A

The KW12-A (see Figures 6-5 and 6-6) is a prewired PDP-12 option with an input control panel, which mounts behind the vertical door on the left front of the PDP-12. The Real Time Interface can be used to synchronize the central processor to external events, count external events, measure intervals of time between events, or provide program interrupts at programmable intervals from 2.5  $\mu$ s to over 40 seconds. Some of the above mentioned operations can be done simultaneously.

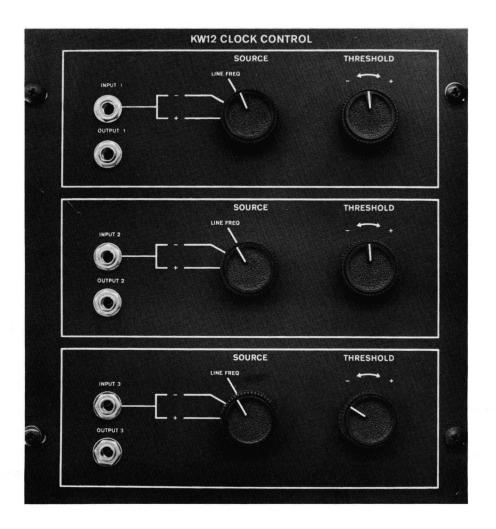


Figure 6-5. KW12-A Real Time Interface

### **Time Base**


The programmable time base provides count pulses to the counter register at any of the following rates derived from a 400 kHz crystal clock:


400 kHz	1 kHz	
100 kHz	100	Hz
10 kHz		

Input channel 1 may be used to enable an external source to drive the counter. This external source may be switch-selected to be either the power line waveform or an actual signal from a laboratory instrument. The programmable selection of the rate is accomplished with the three rate-bits of the clock control register.

#### Input Synchronizers

Three input channels are used to convert external events into a synchronized control and status signal for the clock. Each input channel consists of an input Schmitt trigger with pulse generator, five flip-flops, and associated control gating. The Schmitt trigger and pulse generator converts the preselected voltage threshold crossing by an external signal into a single event (pulse). This Schmitt trigger has level and slope selection controls available on the front panel. They provide selection of any threshold between  $\pm 6V$  and either positive or negative-going slope. The Schmitt trigger has a hysteresis of 0.3V.

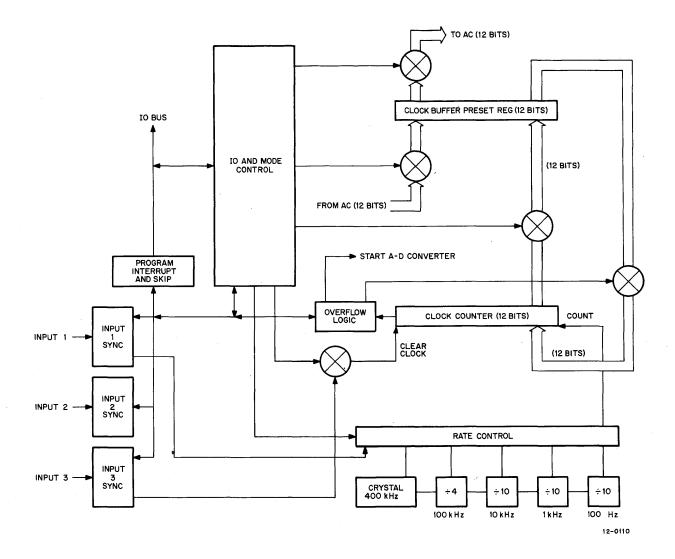

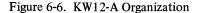

The five Input Circuits flip-flops are: INPUT ENABLE, INPUT, PRE-EVENT, EVENT, and ENABLE EVENT INTERRUPT (see Figure 6-7). Figure 6-8 shows a basic timing of the Input Synchronizer.

Not shown in Figure 6-7 is the logic which clears the EVENT and PRE-EVENT flip-flops when the CLSA instruction is given. This logic ensures that events occurring during the execution of the present CLSA instruction are indicated when the next CLSA instruction is given.

Input Enable Flip-Flop – Gates on and off input signals to the clock. It is set and cleared under program control.

Input Flip-Flop – Set by an external signal from the Schmitt trigger input or under program control with the CLLR instruction. The INPUT flip-flop provides synchronization between external timing and internal clock timing.

*Pre-Event Flip-Flop* – Strobed into the EVENT flip-flop by the strobe 1 signal. This clears the INPUT flip-flop if EVENT is clear.

*Event Flip-Flop* – Loaded with the PRE-EVENT flip-flop on the next strobe 1 and set to a 1 by the second strobe 1 following the setting of the INPUT flip-flop. Subsequent to EVENT being loaded, PRE-EVENT is cleared.

*Event Enable Interrupt Flip-Flop* – Permits external events to cause program interrupts. It is set and cleared by the CLEN instruction.

The occurrence of strobe 2 with EVENT (0) and PRE-EVENT (1) is the actual single event used by other parts of the clock logic such as counting and transfers from counter to buffer register.

The status of the EVENT and PRE-EVENT flip-flops is loaded into the AC under program control. When this transfer occurs, the corresponding INPUT, PRE-EVENT, and EVENT flip-flops are cleared.

If a second input occurs before the EVENT flip-flop is cleared, then both the PRE-EVENT and EVENT flip-flops will remain set, indicating an error.


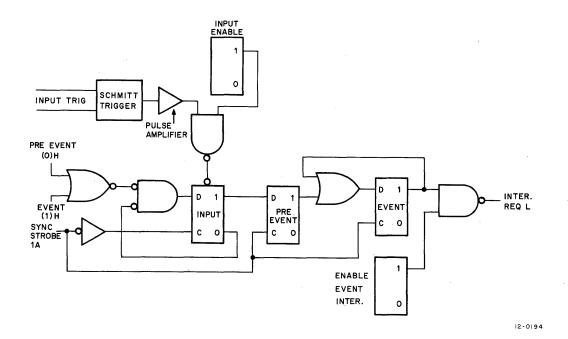


Figure 6-7. Simplified Input Synchronizer Logic Diagram

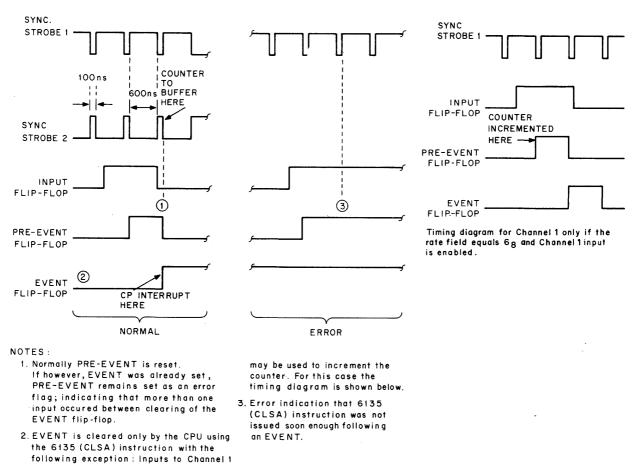

12-0205

#### Figure 6-8. KW12-A Timing Diagram

#### **Counter Register**

The counter register is a 12-bit counter that is loaded from the buffer-preset register or can be transferred into the buffer-preset register.

The counter may be used to count events, measure intervals of time between events, or provide processor interrupts at program selected intervals from  $2.5 \ \mu$ s to over 40 seconds.

OVERFLOW Flip-Flop – The OVERFLOW flip-flop is set by the most significant bit of the counter register going from 1 to 0.

Buffer-Preset Register – Used to buffer the current count in the clock register at the occurrence of an event when operating with Mode 1 (1). With Mode 1 (0) and Mode 2 (1), the buffer-preset register holds the number to be transferred into the counter when overflow occurs. The buffer-preset register can be loaded into the AC or the AC can be transferred into the buffer-preset register.

6.2.1.1 Use of Interface with A-D – With Mode 0 (1), the occurrence of overflow is used to start an A-D conversion if the A-D is in the Fast Sample Mode. With Clock Mode 0 (1), the A-D is triggered only by the clock. When a SAM instruction is given, the result of the last conversion is transferred to the AC, and a new analog channel is selected for the next conversion to be performed when the clock overflows. If the SAM instruction is given while a conversion triggered by the clock is in progress, the processor waits in timestate TS5 until the conversion is complete.

6.2.1.2 **KW12-A Input Panel** – The input panel for the clock is located behind the door on the left side of the front of the PDP-12. External signals (from up to three instrument/sources) are connected to the Input jacks on the front panel (see Figure 6-5) via standard 3-conductor telephone plugs. Each Input and Output jack is wired in parallel to permit convenient connection of the external input signals to the KW12-A and, if desired, the Analog-to-Digital Converter. The input is differential,  $\pm 5V$  range, input resistance greater than 10,000 ohms, and protected against inputs up to  $\pm 50V$ . A level control and a slope control are associated with each input. The level control selects the threshold voltage at which the trigger pulse is generated. The slope determines the polarity of the input signal causing a trigger pulse. The trigger pulse sets the associated input flip-flop of the clock if that input channel is enabled.

6.2.1.3 KW12-A Real Time Interface Instructions – The KW12-A is controlled by PDP-12 IOT instructions. These instructions can be used from either 8 or LINC mode. Execution time for the IOTs is 4.25  $\mu$ s when in 8 mode and 5.9  $\mu$ s when in LINC mode (using IOB).

### CLSK Skip On Clock Interrupt

Octal code:	6131
Event time:	1
Execution time:	4.25 μs
Operation:	Skip if clock interrupt condition exists. The interrupt conditions are as follows:

- a. Enable Event 1 Interrupt (1) and Event 1 (1).
- b. Enable Event 2 Interrupt (1) and Event 2 (1).
- c. Enable Event 3 Interrupt (1) and Event 3 (1).
- d. Enable Overflow Interrupt (1) and Overflow (1).

#### CLLR Load Clock Control Register

Octal code:	6132
Event time:	2
Execution time:	4.25 μs
Operation:	The contents of the AC are transferred to the clock control register. Three bits are used to
	provide simulated data input to each of the three Event input channels. The AC is unchanged.

Bit	Function
00	Count Rate Register Bit 0
01	Count Rate Register Bit 1
02	Count Rate Register Bit 2
03	Mode Control Register Bit 0
04	Mode Control Register Bit 1
05	Mode Control Register Bit 2
06	Not used
07	Simulate Input to Channel 1
08	Not used
09	Simulate Input to Channel 2
10	Not used
11	Simulate Input to Channel 3

The rate of the counter register input count pulses is determined by the contents of the count rate register.

Count Rate Register	Frequency of Count Pulses
000	Stop
001	400 kHz
010	100 kHz
011	10 kHz
100	1 kHz
101	100 Hz
110	Rate of Input Channel 1
111	Stop

# NOTE

When Channel 1 is used as the time base for the counter, the Event flag is automatically cleared and Channel 1 Interrupt Enable would normally be left off. Also the clock counter is advanced one count each time an IO PRESET is performed either manually or under program control.

The contents of the mode control register determine the method by which the clock system operates.

# **Program Example**

The following program rings the teleprinter bell once for every 10 inputs (60 Hz) on external channel three. If the source knob is turned to line frequency the Teletype bell will ring once/per second on computers connected to 60 Hz power lines.

	PMODE	/PSEUDO TO LAP6 DIAL ASSEMBLER
BEGIN,	CLA	/CLEAR AC
	CLLR	/CLEAR ALL MODES
	CLEN	/CLEAR ENABLES
	TAD K74	/NO. OF COUNTS
	CIA	/FORM 25 COMP
	CLAB	/LOAD PRESET REG
	CLA	/CLEAR AC
	TAD K0100	/SET AC05=1
	CLLR	/GENERATE CLEAR COUNTER
	CLSA	/CLEAR STATUS AND POSSIBLE OVERFLOW
	CLA	/CLEAR AC
	TAD K0320	/LOAD AC
	CLEN	/LOAD BUFFER INTO COUNTER, ENABLE INTERRUPT ON OVERFLOW,
		AND ENABLE IN
PUT CHAN	11	
	CLA	/CLEAR AC
	TAD K6100	/LOAD AC
	CLLR	/START CLOCK BY ENABLING RATE
LOOP,	CLSK	/SKIP ON CLOCK FLAG
	JMP LOOP	/WAIT
	CLSA	/CLEAR STATUS
	CLA	/CLEAR AC
	<b>TAD K207</b>	/LOAD AC
	TLS	/RING TELEPRINTER BELL
	JMP LOOP	<b>/RETURN TO WAIT LOOP</b>
K74,	74	CONSTANTS
K0100,	100	
K0320,	320	
K6100,	6100	
K207,	207	

# Mode Control Register

000	Free-run Counter runs selected rate. Overflow occurs every 4096 counts. The overflow flag remains set until cleared with CLSA instruction.
001	Preset Time
	Counter runs at selected rate. When overflow occurs, the contents of the Clock Buffer-Preset register are transferred automatically to the Counter which continues. The Overflow flag remains set until cleared with a CLSA instruction. When Mode is changed
	from X00 to X01, the clock counter is zeroed.
010	Time Base (measures intervals between events)
	Counter runs at selected rate. On the occurrence of an Input Event, the contents of the counter are transferred automatically to the Buffer Preset register, and the counter continues to count.
011	Time Base (measures intervals between events) This is identical to Mode 10, except that the Clock Counter register is cleared after its contents have been transferred to the Buffer Preset register on Event 3. Events 1 and 2 remain only to cause transfer from the clock counter to the Buffer Preset register.
100	When Mode bit 0 is set to a 1, the occurrence of Overflow is used to trigger the A-D
101	converter if A-D control also has the FAST-SAMPLE flip-flop set. This allows
110	analog-to-digital conversions to take place under the automatic timing control of the
111	clock. In this mode, A-D conversions are triggered only by the clock counter overflow. The SAM instruction reads the result of the previous conversion and sets the channel number for the next conversion. For details of the Analog-to-Digital converter, see Paragraph 6.11. The remaining two Mode Control bits are decoded exactly as above.

CLAB AC to Buffer Preset Register

Octal code:	6133
Event time:	2
Execution time:	4.25 μs
Operation:	Transfer AC to Buffer Preset register. The previous contents of the Buffer Preset registers are
	lost and the AC is unchanged.

CLEN Load Clock Enable Register

Octal code:	6134
Event time:	3
Execution time:	4.25 μs
Operation:	The contents of the AC are transferred to the Clock Enable register. The function of each bit is given below:

Bit

Function

00	Not used
01	Not used
02	Not used
03	Not used
04	Inclusive OR Clock Buffer into counter if mode = X01 and overflow = 0
05	Enable Interrupt when overflow (1)
06	Enable Interrupt on Event 1
07	Enable Input Channel 1
08	Enable Interrupt on Event 2
09	Enable Input Channel 2
10	Enable Interrupt on Event 3
11	Enable Input Channel 3

CLSA Clock Status to AC

Octal code:6135Event time:1,3Execution time: $4.25 \ \mu s$ Operation:This in

This instruction interrogates the CLOCK INPUT and OVERFLOW STATUS flip-flops. The clock status information is inclusive ORed into the AC. Then the AC status bits which are set are cleared. This ensures that only one occurrence of an EVENT will be transferred to the program.

AC Bit	Status Condition
00	OVERFLOW Flip-Flop
01	Not used
02	Not used
03	Not used
04	Not used
05	Not used
06	Event 1
07	Pre-Event 1
08	Event 2
09	Pre-Event 2
10	Event 3
11	Pre-Event 3

CLBA Buffer Preset Register to AC

Octal code:	6136
Event time:	2,3
Execution time:	4.25 μs
Operation:	The AC is cleared and the contents of the Clock Buffer Preset register are transferred into the AC.

CLCA Counter to AC

Octal code:	6137
Event time:	1,2,3
Execution time:	4.25 μs
Operation:	The AC is cleared and the contents of the Clock Counter are transferred to the
	BUFFER-PRESET register. Then the contents are transferred into the AC.

# 6.2.2 KW12-B and KW12-C Fixed-Interval Clocks

The KW12-B provides a means of interrupting the CP at intervals determined by a variable RC Oscillator. The KW12-C is similar to the KW12-B except that the RC oscillator is replaced by a crystal oscillator with a single fixed frequency. The KW12-B or KW12-C may be turned on or off under program control. However, variations in frequency require physically altering or changing the oscillator.

#### **Instruction Set**

The KW12-B and KW12-C are controlled by IOT instructions. These instructions can be used from either mode. Execution time for the Simple Clock IOTs is  $4.25 \ \mu$ s when in 8 mode and  $5.9 \ \mu$ s when in LINC mode (using IOB).

#### CSOF Skip on Clock Flag

Octal code:	6131	
Execution time:	4.25 μs	
Operation:	Skip if clock flag is set.	

## CTOC Turn Off Clock

Octal code:	6132
Execution time:	4.25 μs
Operation:	Turn off the clock, clear the clock flag, and disable the clock interrupt.

#### CTON Turn On Clock

Octal code:	6134
Execution time:	4.25 μs
Operation:	Turn the clock on and clear the flag.

#### CRUN Clock Running

Octal code:	6135
Execution time:	4.25 μs
Operation:	Turn on the clock, enable the clock interrupt, clear the clock flag, skip if the clock flag was set when the instruction was issued.

### **Frequency Range**

KW12-B

The KW12-B uses the M401 variable clock in slot F18 for a time base. The frequency may be varied with a range by adjusting a potentiometer on the module. Five frequency ranges are available. The KW12-B is nominally set to the 1.75 kHz-to-17.5 kHz frequency range by jumpering F18N2 to F18T2. Other frequency ranges may be achieved by removing the jumper from F18T2 and attaching as shown below. The exact frequency may be checked by observing the signal on F18D2 with an oscilloscope.

Frequency Range	Interconnections Required
17.5 kHz to 50 kHz	F18N2 – F18S2
1.75 kHz to 17.5 kHz	F18N2 – F18T2 (nominal setting)
175 Hz to 1.75 kHz	F18N2 – F18P2

KW12-C

The KW12-C uses the M405 crystal clock in slot F18 for a time base. The frequencies are fixed by a series resonant crystal oscillator to obtain a frequency stability of .01 percent of the specified value between  $0^{\circ}$ C and +55°C. The frequencies available are in the range of 5 kHz to 50 kHz and must be specified in advance by the customer.

## 6.3 DISK STORAGE

## 6.3.1 Random Access Disk File, Types DF/DS32 and DF/DS32-D

The DF32 and DF32-D operate through the three-cycle data break facility to provide 32,768 13-bit words (12 bits plus 1 parity bit) of storage, and are economically expandable to 131,072 13-bit words using the respective expander disk, DS32 or DS32-D.

The DF32 and DF32-D comprise two basic assemblies: the storage unit containing the read/write circuits and the computer interface logic. The storage unit contains a nickel cobalt plated disk driven by a hysteresis synchronous motor. Data is recorded on a single disk surface by 16 read/write heads in fixed positions. The disk motor, read/write data heads, and photocell assembly (on DF32) are all mounted on a rack assembly that permits sliding the unit in and out of a DEC 19-inch Standard Cabinet.

· · · · · · · · · · · · · · · · · · ·	DF32		DF32-D	
	60Hz	50Hz	60Hz	50Hz
Data Transfer rate (microseconds per word)	66	80	32	39
Average Access Time (milliseconds)	16.67	20	Same	Same
Timing and Address Track "Start & Finish" Sensing			-	t and Finish decoding on
Type of Logic	Negative		DF32DP – Po DF32DN – N	

The following table summarizes the DF32 and DF32-D:

#### Instructions

The DF32 and DF32-D disk systems share the following instruction set:

DCMA Clear Disk Memory Address Register

Octal code:	6601
Event time:	1
Execution time:	4.25 μs
Operation:	Clears Memory Address Register, parity error, and completion flags. This instruction clears the
	disk memory request flag and interrupt flags.
Symbol:	$0 \rightarrow \text{completion flag}$
	$0 \rightarrow \text{error flag}$

6-27

# DMAR Load Disk Memory Address Register and Read

Octal code: Event time:	6603 1.2
Execution time:	4.25 μs
Operation:	The contents of the AC are loaded into the disk memory address register and the AC is cleared.
	Begins to read information from the disk into the specified core location. Clears parity error and completion flags. Clears interrupt flags.
Symbol:	$AC_{0-11} \rightarrow DMA_{0-11}$
	$0 \rightarrow \text{completion flag}$
	$0 \rightarrow \text{error flag}$

# DMAW Load Disk Memory Address Register and Write

Octal code: Event time: Execution time:	6605 1,3 4.25 μs
Operation:	The contents of the AC are loaded into the disk memory address register and the AC is cleared.
	Begins to write information onto the disk from the specified core location. Clears parity error and completion flags. Clears interrupt flags. Data break must be allowed to occur within 66 microseconds after issuing this instruction.
Symbol:	$AC_{0-1,1} \rightarrow DMA_{0-1,1}$
	$0 \rightarrow \text{completion flag}$
	$0 \rightarrow \text{error flag}$

DCEA Clear Disk Extended Address Register

Octal code:	6611
Event time:	1
Execution time:	4.25 μs
Operation:	Clears the Disk Extended Address and Memory Address Extension register.
Symbol:	$0 \rightarrow \text{Disk Extended Address Register}$
	$0 \rightarrow$ Memory Address Extension Register

DSAC	Skip on	Address	Con	firmed	Flag
DSAU	Skip On	Audress	CON	jimeu	riug

Octal code:	6612
Event time:	2
Execution time:	4.25 μs
Operation:	Skips next instruction if address confirmed Flag is set. Flag is set for 16 $\mu$ s (AC is cleared).
Symbol:	If address confirmed flag = 1, then
	$PC + 1 \rightarrow PC$

DEAL Load Disk Extended Address


Octal code:	6615
Event time:	1,3
Execution time:	4.25 μs
Operation:	The disk Extended Address and Memory Address Extension registers are cleared and loaded with the track address data in the AC.
Symbol:	$AC_{6-8} \rightarrow Core Memory Extension$
	$AC_{1-5} \rightarrow Disk Address Extension 32K, 64K, 96K, 128K$
	$AC_{0}_{9-11}$ used in DEAC instruction
	(See NOTE on opposite page)

# DEAC Read Disk Extended Address Register

Octal code:	6616
Event time:	2,3
Execution time:	4.25 μs
Operation:	Clear the AC then load the contents of the disk Extended Address register into the AC allowing program evaluation. Skip next instruction if address confirmed flag is set.
Symbol:	Disk Address Extension 32K, 64K, 96K, 128K $\rightarrow$ AC <sub>1-5</sub>
	Core Memory Extension $\rightarrow AC_{6-8}$
	Photo-cell sync mark $\rightarrow AC_0$ (Available 200 $\mu$ s)
	Data Request Late flag $\rightarrow AC_9$
	Non-Existent or Write Lock switch on $\rightarrow AC_{10}$
	Parity Errors $\rightarrow AC_{11}$

# NOTE

For the DEAL and DEAC instructions, refer to the diagrams shown below.

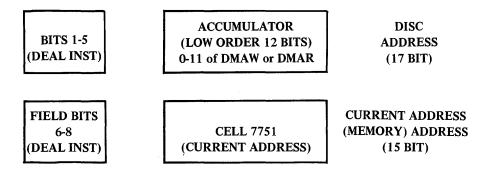

DFSE Skip on Zero Error Flag

Octal code:	6621
Event time:	1
Execution time:	4.25 μs
Operation:	Skips next instruction if parity error, data request late, and write lock switch flag are clear.
	Indicates no errors.
Symbol:	If Parity Error flag = 1
	and Data Request Late flag = 1,
	and Write Lock Switch flag = 1, then PC + $1 \rightarrow PC$

DFSC Skip on Data Completion Flag

Octal code:	6622
Event time:	2
Execution time:	4.25 μs
Operation:	Skips next instruction if the completion flag is set. Indicates data transfer is complete.
Symbol:	If Completion flag = 1, $PC + 1 \rightarrow PC$

DMAC Read Disk Memory Address Register

Octal code:	6626
Event time:	2,3
Execution time:	4.25 μs
Operation:	Clears the AC then loads contents of the Disk Memory Address register into the AC allowing
	program evaluation. During read, the final address is the last one transferred.
Symbol:	$DMA_{0-11} \rightarrow AC_{0-11}$

The computer can handle 12 bits; therefore, the high order bits for Disk and Memory addresses are manipulated by the DEAL and DEAC instructions. Low order bits are manipulated in the accumulator (AC).

The Disk address is a 17-bit value. Bit 1 of the DEAL and DEAC instructions is the most significant bit. The Memory address is a 17-bit value. Bit 6 of the DEAL and DEAC instructions is the most significant bit.

Note that the Word Count 7750 is the two's complement of the number of words to be transferred and that the Disk address is the desired starting address. The Memory or Current address (7751) is the desired address-1.

#### NOTE

Write Lock Switch status is true only when the disk module contains write instructions. The nonexistent disk condition will appear following the completion of a data transfer during read, where the address acknowledged was the last address of a disk and the next word to be addressed falls within a nonexistent disk. The completion flag for the data transfer is set by the nonexistent disk condition 16 microseconds following the data transfer.

#### 6.3.2 Disk Memory System Type RF/RS08

The RF08 control and RS08 disk combine as a fast, low-cost, random access bulk storage package for the PDP-12A. One RS08 and RF08 provide 262,144 13-bit words (12 bits plus parity) of storage. Up to four RS08 disks can be added to the RF08 control for a total of 1,048,576 words of storage.

Data transfer rate on 60 Hz power is 16.2 microseconds per word or 20 microseconds per word on 50 Hz. Data transfer is accomplished through the three-cycle data break system of the PDP-12A.

Average access time with a 60 Hz disk is 16.67 milliseconds, or 20 milliseconds at 50 Hz power. Worst case access time is 33 milliseconds on 60 Hz power, or 40 milliseconds on 50 Hz power.

The RS08 disk unit contains a nickel-cobalt plated disk driven by a hysteresis synchronous motor. Data is recorded on a single disk surface by 128 fixed read/write heads. The RF08 and RS08 are designed for mounting in a standard 19-inch DEC cabinet.

The input-output transfer instructions for the RF/RS08 Disk Memory system are identical with the input-output transfer instructions for the Type DF32 Random Access Disk file (Table 6-4).

#### Instructions

The RF/RS08 has the following DF32 Programming Compatibility:

DCMA Clear Disk Memory Address Register

Octal code:	6601
Event time:	1
Execution time:	4.25 μs
Operation:	Clear the Disk Memory Address register, and all other disk and maintenance flags except interrupt enable.

6-30

# DMAR Load Disk Memory Address Register and Read

Octal code:	6603
Event time:	1,2
Execution time	4.25 μs
Operation:	Load the low order 12 bits of the Disk Memory Address with information (initial address) in the accumulator. Then clear the AC. Begin to read information from the disk into the specified core location. Clear parity error and completion flags. Clear interrupt flags.
	During Read, the final address status is the last address transferred + 1.


When reading the last address of the last available disk the nonexistent disk flag is raised in coincidence with the completion flag.

DMAW Disk Memory Address Register and Write

Octal code:	6605
Event time:	1,3
Execution time:	4.25 μs
Operation:	Load the low order 12 bits of the Disk Memory Address register with information (initial address) in the accumulator (AC). Then clear the AC. Begin to write information onto the disk
	from the specified core location. Clear parity error and completion flags. Clear interrupt flags.

During Write, the final address status is the last address transferred.

Write Lock Switch status is true only when disk module contains a Write Command.

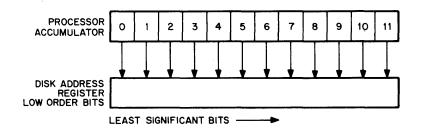

The DF32 maintenance instruction IOT 663X is not assigned to the RF08 system.

DCIM Clear Interrupt Enable and Core MA Extension Registers

Octal code:	6611
Event time:	1
Execution time:	4.25 μs
Operation:	Clears the disk interrupt enable and core memory address extension registers.


## DSAC Skip on Confirmed Flag

Octal code:	6612
Event time:	2
Execution time:	4.25 μs
Operation:	Maintenance Instruction Skip next instruction if the Address Confirmed flag is a 1. (AC is cleared.)

# DIML Clear Interrupt Enable and MA Extension Register and Load


Octal code:6615Event time:1,3Execution time: $4.25 \ \mu s$ Operation:Clears the security of the se


Clears the interrupt enable, and memory address extension register. Then loads the interrupt enable and memory address extension registers with data held in the accumulator. Then clears AC.

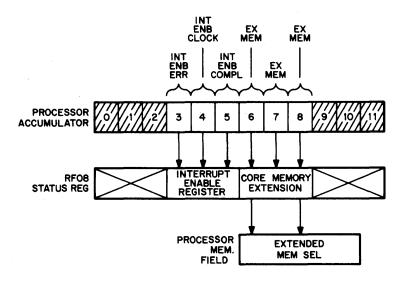

DIMA Clear AC and Load from Status

Octal code:	6616
Event time:	2,3
Execution time:	4.25 μs
Operation:	Clears the accumulator. Then loads the contents of the status into the accumulator to allow
	program evaluation

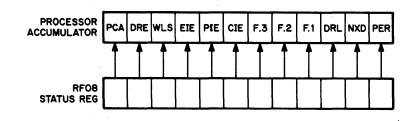

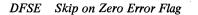

Octal code:	6621
Event time:	1
Execution time:	4.25 μs
Operation:	Skips the next instruction if there is a Parity Error, Data Request Late, Write Lock Status, or Nonexistent Disk flag set.

DFSC Skip on Data Completion Flag

Octal code:	6622
Event time:	2
Execution time:	4.25 μs
Operation:	Skips next instruction if the Completion flag is a 1 (data transfer is complete).

DISK Skip on Error or Completion Flag

Octal code:	6623
Event time:	1,2
Execution time:	4.25 μs
Operation:	Skips next instruction if either the Error or Completion flags or both are set.

DMAC Read Disk Memory Address Register


Octal code:	6626
Event time:	2,3
Execution time:	4.25 μs
Operation:	Clears the accumulator. Then loads the contents of the Disk Memory address register into the accumulator to allow program evaluation. This instruction must be issued when the completion flag is set.

DCXA Clear Address Register

Octal code:	6641
Execution time:	4.25 μs
Operation:	Clears the high order 8-bit disk address register.


DXAL Clear Address Register and Load from AC

Octal code:	6643	
Execution time:	4.25 μs	
Operation:	Clears the High Order 8 bits of the disk address register. Then loads the disk address register	
	from the data held in the accumulator. Then clears the AC.	

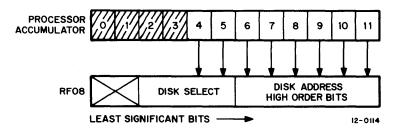

DXAC Clear AC and Load

Octal code:	6645
Execution time:	4.25 μs
Operation:	Clears the accumulator, then loads the contents of the High Order 8-bit disk address register into the accumulator.

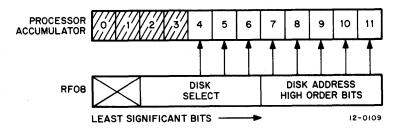

DMMT (Maintenance Instruction)

Octal code:	6646	
Execution time:	4.25 μs	
Operation: For maintenance purposes only, with the appropriate maintenance cable disk disconnected from the RS08 logic, the following standard signals m IOT's 646 and associated AC bits. AC is cleared. The maintenance reg issuing an IOT 601 command.		S08 logic, the following standard signals may be generated by
	$AC_{11}(1)$	Track A Pulse


$AC_{11}(1)$	- Hack A Fulse
$AC_{10}(1)$	Track B Pulse
AC <sub>9</sub> (1)	Track C Pulse
$AC_7(1)$	DATA PULSE (DATA HEAD #0)
$AC_6(1)$	+1 Photocell
AC <sub>0</sub> (1)	+1 DBR

Setting DBR to a 1 causes Data Break Request in computer.

### NOTE

TAP must be generated to strobe Track B signal into address comparison network.

Disk Address Register - 20 bits

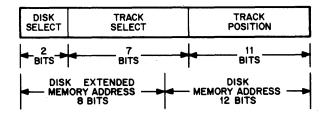

## **Programming Example**

A programming example that writes a block of data onto the disk is shown below. For simplicity, the example assumes that all data and instructions are within the same page, but in actual practice this may not be true.

DF32 Mnemonic	Octal Code	RF08 Mnemonic	RF08 to DF32 Comparison
DCMA	6601	same	Identical functions.
DMAR	6603	same	Identical functions.
DMAW	6605	same	Identical functions.
DCEA	6611	DCIM	Clears interrupt enable, does not clear EMA. On both units, clears memory address extension.
DSAC	6612	same	Identical functions.
DEAL	6615	DIML	Similar, except functions transmitted from the AC are different. EMA information not transmitted. See DXAL.
DEAC	6616	DIMA	Similar, except that functions transmitted to the AC are different. See DXAC.
DFSE	6621	same	Instruction is skip on error, rather than skip-no error. NXD added as an error.
DFSC	6622	same	Identical function.
(none)	6623	DISK	New instruction. Skips on error or data completion, or both. (DFSE and DFSC combined.) Skip enabled at IOP 2.
DMAC	6626	same	Identical functions.
(none)	6641	DCXA	Clears EMA.
(none)	6643	DXAL	Clear and load EMA with information in the accumulator.
(none)	6645	DXAC	Clear accumulator and load address in EMA into the accumulator.
(none)	6646	DMMT	Maintenance instruction. See description.

Table 6-4. DF32 Instructions Compared with RF/RS08 Instructions

.

/CALLING SEQUENCE	
JMS WRT	JUMP TO WRITE SUBROUTINE
0	CONTAINS WORD COUNT
0	<b>/CONTAINS INITIAL CORE MEMORY ADDRESS</b>
0	<b>/CONTAINS TRACK AND UNIT NUMBER</b>
0	<b>/CONTAINS TRACK ADDRESS</b>
XXX	<b>/CONTINUE WITH MAIN PROGRAM</b>
/WRITE SUBROUTINE	
0	/ENTER WRITE SUBROUTINE
TAD I WRT	/FETCH WORD COUNT
DCA WC	/DEPOSIT IN WORD COUNT REGISTER
ISZ WRT	/INCREMENT POINTER
TAD I WRT	/FETCH INITIAL CORE MEMORY ADDRESS
DCA CA	/DEPOSIT INTO CURRENT ADDRESS REGISTER
ISZ WRT	/INCREMENT POINTER
TAD I WRT	
DIML	х. 
ISZ WRT	
TAD I WRT	/FETCH TRACK AND UNIT NUMBER
DXAL	/DEPOSIT INTO REGISTER IN RF08 CONTROL
ISZ WRT	/INCREMENT POINTER
TAD I WRT	/FETCH TRACK ADDRESS
DMAW	/TRACK ADDRESS TO DMA IN DISK;
	/START WRITE OPERATION
	/WRITE OPERATION
DISK	/FOR ERROR OR COMPLETE
JMP1	/NO, WAIT
DFSE	/ANY ERRORS?
JMP .+2	/NO, SKIP OVER ERROR EXIT
JMP ERR	<b>/YES, TO ERROR SUBROUTINE</b>
ISZ WRT	/INCREMENT POINTER TO EXIT ADDRESS
JMP I WRT	/EXIT PROGRAM

#### NOTE

This coding assumes no live interrupts.

The calling subroutine must be set up so that the subsequent locations to SUB (SUB+1, SUB+2, etc) contain the parameters as shown in the comments column.

The JMS WRT instruction causes a subroutine jump location WRT with the contents of the PC-1 (which contains symbolic address SUB-1) deposited into location WRT. Since location WRT now contains SUB+1, the first instruction of the subroutine (TAD I WRT) loads the AC with the contents of SUB+1 or the word count. The word count is then deposited into the WC (Memory Address 7750) register. Similarly, the initial address is deposited into the CA (Memory Address 7751) register. The program then proceeds to set up the EMA and DMA registers and starts the write operation. After the DMAW instruction is issued, the data transfer operation begins and continues independently of the program; it operates under control of the data break facility to transfer data. When the transfer is complete, the DCF (Data Complete Flag) comes up and, when sensed by the DFSC control, passes to the DFSE instruction. DFSE then senses for errors; and if any are detected, control jumps to an error or diagnostic (not shown) routine. If no errors are found, control exits from the subroutine back to the main program to resume main processing.

It should be noted that, since the data transfer operates independently of the program, the subroutine could be exited following the DMAW instruction. An interrupt subroutine could handle the post data transfer processing, since the DCF and ERROR FLAGS generated an interrupt.

SUB,

WRT,

An identical program could handle data transfers for a read operation, except that the DMAW instruction is replaced by the DMAR instruction.

Specifications:

Storage Capacity	Each RS08 stores 262,144 13-bit words (12 plus one parity bit).	
Disks	Four RS08s may be controlled by one RF08 for 1,048,576 words.	
Data Transfer Path	Three-Cycle BreakAddress Locations7750 Word Count7751 Memory Address	
Data Transfer Rate	60 Hz Power 16.2 μs per word	50 Hz Power 20 μs per word
Minimum Access Time	258 µs	320 µs
Average Access Time	16.9 ms	20.3 ms
Maximum Access Time	33.6 ms	40.3 ms
Program Interrupt	33 ms Clock Flag Data Transmission Complete Error Flag	Flag
Write Lock Switches	Eight switches per disk capa word blocks in address 0 to 1	ble of locking out any combination of eight 16,384 31,071.
Data Tracks	128	
Words Per Track	2048	
Recording Method	NRZI	
Density	1100 BPI Maximum	
Timing Tracks	3 plus 3 spare	
Operating Environment	Recommended temperature $65^{\circ}$ to $90^{\circ}$ F. Relative humidity 20% to 80%. No condensation during storage or operating.	
Vibration/Shock	Good isolation is provided. Vibrating, shaking, or rocking of the cabinet with large, low frequency displacements can cause data errors. For example, hand fork lift trucks operating on wooden floors cause excessive vertical displacements which could cause errors. The RS08 is not designed for aircraft or shipboard mounting.	
Heat Dissipation	RF08: 150 watts RS08: 500 watts	
AC Power Requirements	115 ± 10 Vac, single phase, 5	$0 \pm 2 \text{ or } 60 \pm 2 \text{ Hz}$
RS08	Motor start 5.5 amps for $20 \pm 3$ sec. Motor run 4.0 amps continuous.	

Line Frequency StabilityMaximum line frequency drift 0.1 Hz/sec. A constant frequency motor-generator<br/>set or static ac/ac inverter should be provided for installations with unstable<br/>power sources.ReliabilitySix recoverable errors and one nonrecoverable error in 2 x 10° bits transferred. A<br/>recoverable error is defined as an error that occurs only once in four successive<br/>reads. All other errors are nonrecoverable. On-off cycling of the RS08 is not<br/>recommended. The RS08 motor control operates independently of the computer<br/>power control, thus eliminating on-off cycling except for power failures.CabinetA H950 cabinet is designed to accommodate one RF08, up to two RS08s, and<br/>power supplies. Two additional RS08s can be mounted in a second H950. Other<br/>equipment should not be mounted in disk cabinets.

### 6.3.3 RK8 Disk Cartridge Memory System


The RK08 Control and RK01 Disk Drive (RK8) are low cost, random access, removable disk storage devices. One RK08/RK01 provides 831,488 13-bit (12 bits plus parity) words of storage. Up to four RK01 disks can be operated by the RK08 Control for a total of 3,325,952 words of storage.

The removable cartridge utilized is an IBM 2315 disk pack or equivalent with a single aluminimum disk platter coated on both sides with magnetic oxide. Average access time is 154 milliseconds with the read/write head at random positions. Data transfer rate is 16.7 microseconds via the PDP-12 single-cycle data break facility. The RK8-P will operate off the positive I/O bus. An RK8-N is also available for connection to a negative I/O bus.

#### Instructions

#### DLDC Load Command Register

Octal code:6732Operation:Loads the Command Register from the AC, clears the AC.

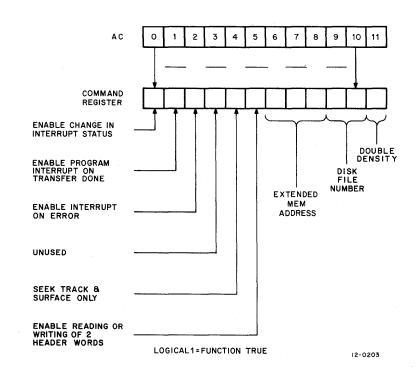

# \*DLDR Load Disk Address and Read

 Octal code:
 6733

 Operation:
 Loads track, surface, and sector address from AC, then clears AC and starts to read data from disk if Command Register bit 4 = 0.

### \*DLDW Load Disk Address and Write


 Octal code:
 6735

 Operation:
 Loads track, surface, and sector address from AC, then clears AC. Starts to write on disk if Command Register bit 4 = 0.

\*DCHP Load Disk Address and Check Parity

Octal code: 6737

Operation: Loads track, surface, and sector address from AC, then clears AC. Reads data and checks parity if Command Register bit 4 = 0.

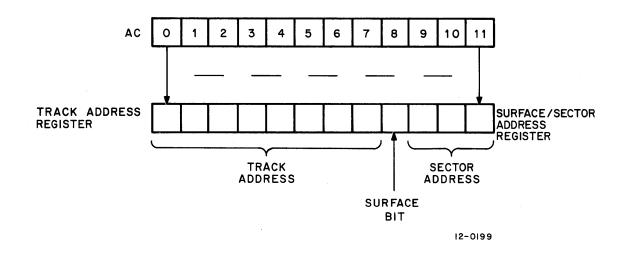

\*If command register bit 4 = 1, instruction will be executed only to seek track and surface. These three instructions start all disk operations.


Octal code: 6734 **Operation:** Clears AC and then reads Track Address Counter and surface/sector counter into AC.

DRDC Read Disk Command Register

6736 Octal code: **Operation**: Clears AC then reads Command Register into the AC.

## DRDS Read Disk Status Register

Octal code:	6741	
Operation:	Clears the AC and then reads the Status Register into the AC	

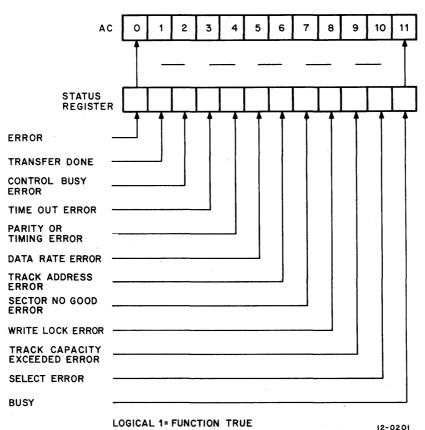

12-0201


# DCLS Clear Status Register

Octal code:	6742
Operation:	Clears the Status Register.

Octal Code: Operation:

### 6743

Loads Maintenance register from AC and carries out the operation specified. Bits will remain set until DMNT is issued with AC bits = 0.

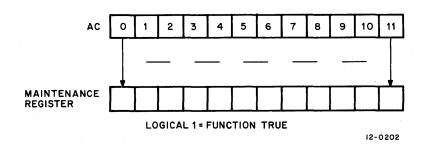

Transfer contents of Track address Register to Track counter Register.
Transfer Data Register to Serial Register.
Transfer Serial Register to Data Register.
Clear AC and Read Data Register into AC.
Shift a "1" into the Serial Register.
Shift a "0" into the Serial Register.
Unformatted Disk
Sector Pulse.
Index Pulse.
Not used.

DLDA Load Disk Address (Maintenance Only)

Octal code:6731Operation:Loads the disk address register with the content of AC.

DSKD Skip on Transfer Done Flag = 1

Octal code:6745Operation:Skips next instruction if the Transfer Done Flag is a 1.

DSKE Skip on Error Flag = 1

Octal code:6747Operation:Skip when Error flag is equal to 1.

DCLA Clear All

 Octal code:
 6751

 Operation:
 Clears selected Disk to Track 000. Then clears all control registers and flags except disk selection. Transfer done set when disk positioned on Track 000.

## DRWC Read Word Count Register

Octal Code: 6752 Operation: Clears AC, then reads the contents of the Word Count register into the AC.

DLWC Load Word Count Register

Octal code:	6753	
Operation:	Loads Word Count register from AC,	then clears the AC.

## DLCA Load Current Address Register

6755 Octal code: Operation: Load Current Address register from AC; then clears the AC.

DRCA Read Current Address Register

0

TAD CNT

Octal code: 6757 Clears the AC then reads the contents of the Current Address register into the AC. Operation:

/SUBROUTINE ENTRY POINT

/FETCH # OF WORDS TO BE READ

# Example of I/O Subroutine

DISKIO,		

DR
system)

RK08-P Positive Bus disk control

RK08-N Negative Bus disk control

\* See RK8 Manual for details.

# Specifications

Disks	Four RK01s per RK08 for 3,325,952 words.
Storage Capacity	Each RK01 stores 831,488, 12-bit words.
Data Transfer Rate	16.7 $\mu$ s per word
Transfer Path	Single-cycle Data Break
Minimum Access Time	2.35 ms
Average Access Time	154 ms
Maximum Access Time	477 ms
Settle Time	37 ms
Program Interrupt	Transfer Done Flag
Write lock	Two words at the beginning of each track contain status information that is automatically checked for write lock of sectors. Also total disk can be write-locked.
Data Tracks	200 plus 3 spare
Words per Track	4096 (2048 on each of two sides)
Sectors	16 per track
Words per Sector	256
Min. Block Size	256 words
Max. Block Size	4096 words
Recording Method	Double Frequency-Time plus Data
Density	1026 bits/inch max.
Speed	1500 rpm
Environmental Requirements	
Operating Temp	+65°F to 90°
Operating Humidity	20% to 80% excluding all conditions which would cause condensation.
Heat Dissipation	RK08 – 150 watts RK01 per drive; 700 watts, 1 KW, surge
AC Power Requirements	115 ±10 VAC, 60 ±½ Hertz 230 ±20 VAC, 60 ±½ Hertz

Mechanical Package

One standard DEC cabinet will accommodate the RK08 and one RK01. A second cabinet will house two RK01 units. A third cabinet will house a fourth RK01.

## 6.3.4 Disk Software

Mass Storage LAP6-DIAL-MS, commonly referred to as DIAL-MS or DISK-DIAL, is a modified version of LAP6-DIAL that may use a disk for the LAP6-DIAL System and/or user programs. The minimum hardware configuration required is 8K of core storage and two LINCtape transports. LAP6-DIAL-MS will support one of the following:

- a. One or two DF32 or FD32D Disks
- b. One to four RF08 Disks
- c. One RK8 Disk.

LAP6-DIAL-MS will use only one of the above; for example, the RK8 rather than a DF32, or a RK8 rather than a RF08, if more than one are installed in the system. It is not possible to operate a DF32 and a RF08 in the same system as the IOT instructions are similar.

A brief description of LAP6-DIAL-MS is provided in Paragraph 7.1.1.

#### 6.4 MAGNETIC TAPE

#### 6.4.1 Automatic Magnetic Tape Control, Type TC58

#### **Functional Description**

The Type TC58 will control the operation of a maximum of eight digital magnetic tape transports, Types TU20 and TU20A. The Type TC58 interfaces with the PDP-12 three-cycle data break facility, which it uses for data transfer directly between system core memory and magnetic tape. The tape transports offer industry compatibility (or IBM compatibility) in both 7- and 9-channel tape transports with the following characteristics:

Transport	Tape Speed (ips)	Densities (bpi)
TU20 (7-channel)	45	200/556/800
TU20A (9-channel)	45	800

Transfers are governed by the memory word count (WC) and current address (CA) registers associated with the assigned data channel (memory locations  $32_8$  and  $33_8$ ). Since the CA is incremented before each data transfer, its initial contents should be set to the desired initial address minus one. The WC is also incremented before each transfer and must be set to the two's complement of the desired number of data words to be transferred. In this way, the word transfer which causes the word count to overflow (WC becomes zero) is the last transfer to take place. The number of IOT instruction required for the TYPE TC58 is minimized by transferring all necessary control data (unit number, function, mode, direction, etc) from the PDP-12 accumulator (AC) to the control using IOT instructions. Similarly, all status information (status bits, error flags, etc) can be read into the AC from the control unit by IOT instructions.

During normal data reading, the control assembles 12-bit computer words from successive frames read from the information channels of the tape. During normal data writing, the control disassembles 12-bit words and distributes the bits so they are recorded on successive frames of the information channels.

Instructions

The instructions for the Magnetic Tape Control System are as follows:

MTSF Skip on Error Flag or Magnetic Tape Flag

Octal code:	6701
Event time:	1
Execution time:	4.25 μs
Operation:	The status of the error flag (EF) and the magnetic tape flag (MTF) are sampled. If either or both are set, the contents of the PC are incremented by one, skipping the next instruction.
Symbol:	If MTF or EF = 1, PC + 1 $\rightarrow$ PC

MTCR Skip on Tape Control Ready

Octal code:	6711
Event time:	1
Execution time:	4.25 μs
Operation:	If the tape control is ready to receive a command, the PC is incremented by one, skipping the next instruction.
Symbol:	If Tape Control Ready, $PC + 1 \rightarrow PC$

# MTTR Skip on Tape Transport Ready

Octal code:	6721		
Event time:	-		
Execution time:	4.25 μs		
Operation:	The next sequential instruction is skipped if the tape transport is ready.		
Symbol:	If tape unit ready, $PC + 1 \rightarrow PC$		

MTAF Clear Registers, Error Flag and Magnetic Tape Flag

Octal code:	6712
Event time:	4.25 μs
Operation:	Clears the status and command registers, and the EF and MTF if tape control is ready. If tape control is not ready, clears MTF and EF flags only.
Symbol:	If tape control is ready, $0 \rightarrow MTF$ , $0 \rightarrow EF$ , $0 \rightarrow command register$
	If tape control not ready, $0 \rightarrow MTF$ , $0 \rightarrow EF$

MTRC Inclusive OR Contents of Command Register

Octal code:	6724
Event time:	3
Execution time:	4.25 μs
Operation:	Inclusively OR the contents of the command register into $AC_{0-11}$ .
Symbol:	AC V command register $\rightarrow$ AC <sub>0-11</sub>

MTCM Inclusive OR Contents of Accumulator

Octal code:	6714
Event time:	3
Execution time:	4.25 μs
Operation:	Inclusively OR the contents of $AC_{0-5,9-1,1}$ into the command register: JAM transfer bits 6, 7,
	8 (command function).
Symbol:	$AC_{0-5}$ , $AC_{9-11}$ V command register $\rightarrow$ command register
	$AC_{6-8} \rightarrow \text{command register bits } 6-8$

MTLC Load Command Register

Octal code:	6716
Event time:	2,3
Execution time:	4.25 μs
Operation:	Load the contents of $AC_{0-1,1}$ into the command register.
Symbol:	$AC_{0-11} \rightarrow command register$

Inclusive OR Contents of Status Register

Octal code:	6704
Event time:	3
Execution time:	4.25 μs
Operation:	Inclusively OR the contents of the status register into $AC_{0-1 1}$
Symbol:	Status Register V $AC \rightarrow AC_{0-1 1}$

### MTRS Read Status Register

Octal code:	6706
Event time:	2,3
Execution time:	4.25 μs
Operation:	Read the contents of the status register into $AC_{0-11}$
Symbol:	Status Register $\rightarrow AC_{0-1}$

## MTGO Mag Tape GO

Octal code:	6722
Event time:	2
Execution time:	4.25 μs
Operation:	Set GO bit to execute command in the command register if command is legal.
Symbol:	None

MCLA Clear the AC

Octal code:	6702
Event time:	2
Execution time:	4.25 μs
Operation:	Clear the accumulator.
Symbol:	$0 \rightarrow AC$

Although any number of tapes may be rewinding simultaneously, data transfer may take place to or from only one transport at any given time. In this context, data transfer includes these functions: read or write data, write EOF (end of file), read/compare, and space. When any of these functions is in process, the tape control is in the not ready condition. A transport is said to be not ready when tape is in motion, when transport power is off, or when it is off line.

Data transmission may take place in either parity mode, odd-binary or even-BCD. When reading a record in which the number of characters is not a multiple of the number of characters per word, the final characters come into memory left-justified.

Ten bits in the magnetic tape status register retain error and tape status information. Some error types are combinations, such as lateral and longitudinal parity errors (parity checks occur after both reading and writing of data), or have a combined meaning, such as illegal command, to allow for the maximum use of the available bits.

The magnetic tape status register reflects the state of the currently selected tape unit. Interrupts may occur only for the selected unit. Therefore, other units which may be rewinding, for example, will not interrupt when done.

A special feature of this control is the Write Extended Inter-Record Gap capability. This occurs on a write operation when Command Register bit 5 is set. The effect is to cause a 3-inch inter-record gap to be produced before the record is written. The bit is automatically cleared when the writing begins. This is very useful for creating a gap of blank tape over areas where tape performance is marginal.

## **Magnetic Tape Functions**

For all functions listed below, upon completion of the data operation (after the end-of-record character passes the read head), the MTF (magnetic tape flag) is set, an interrupt occurs (if enabled), and errors are checked.

No Operation - A NO OP instruction defines no function in the command register. A MTGO instruction with NO OP will cause an illegal command error (set EF).

Space – There are two instructions for spacing records, SPACE FORWARD and SPACE REVERSE. The number of records to be spaced (two's complement) is loaded into the WC. CA does not need to be set. MTF (magnetic tape flag) is set, and an interrupt occurs at WC overflow, EOF (end of file), or EOT (end of tape), whichever occurs first. When issuing a space instruction, both the density and parity bits must be set to the density and parity in which the records were originally written.

Load Point or Beginning of Tape (BOT) detection during a backspace terminates the function with the BOT bit set. If a SPACE REVERSE instruction is given when a transport is set at BOT, the instruction is ignored, the illegal command error and BOT bits are set, and an interrupt occurs.

Read Data – Records may be read into memory in the forward mode only. Both CA and WC must be set; CA to the initial core address minus one, WC to the two's complement of the number of words to be read. Both density and parity bits must be set.

If WC is set to less than the actual record length, only the desired number of words are transferred into memory. If WC is greater than or equal to the actual record length, the entire record is read into memory. In either case, both parity checks are performed, the MTF is set, and an interrupt occurs when the end-of-record mark passes the read head. If either lateral or longitudinal parity errors or bad tape have been detected, or an incorrect record length error occurs (WC not equal to the number of words in the record), the appropriate status bits are set. An interrupt occurs only when the MTF is set.

To continue reading without stopping tape motion, MTAF (clear MTF) and MTGO instructions must be executed. If the MTGO command is not given before the shut down delay terminates, the transport will stop.

Write Data – Data may be written on magnetic tape in the FORWARD DIRECTION ONLY. For the WRITE DATA function, the CA and WC registers and density and parity bits must be set. WRITE DATA is controlled by the WC in such a way that, when the WC overflows, data transfer stops, and the EOR (end of record) character and IRG (inter-record gap) are written. The MTF is set after the EOR has passed the read head. To continue writing, a MTGO instruction must be issued before the shut-down delay terminates. If an error occurs, the EF will be set when the MTF is set.

Write EOF – The Write EOF instruction transfers a single character (17<sub>8</sub>) record to magnetic tape and follows it with the EOR character; CA and WC are ignored for WRITE EOF. The density bits must be set, and the command register parity bit should be set to even (BCD) parity. If it is set to odd parity, the control will automatically change it to even.

When the EOF marker is written, the MTF is set and an interrupt occurs. The tape transport stops, and the EOF status bit is set, confirming the writing of EOF. If odd parity is required after a WRITE EOF, it must be specifically requested through the MTLC instruction.

*Read/Compare* – The READ/COMPARE function compares tape data with core memory data. It can be useful for searching and positioning a magnetic tape to a specific record, such as a label or leader, whose content is known in core memory, or to check a record just written. READ/COMPARE occurs in the forward direction only; CA and WC must be set. If there is a comparison failure, incrementing of the CA ceases, and the READ/COMPARE error bit is set in the status register. Tape motion continues to the end of the record; the MTF is then set, and an interrupt occurs. If there has been a READ/COMPARE error, examination of the CA reveals the word that failed to compare.

Rewind – The high speed REWIND instruction does not require setting of the CA or WC. Density and parity settings are also ignored. The REWIND instruction rewinds the tape to loadpoint (BOT) and stops. Another unit may be selected after the instruction is issued and the rewind is in process. MTF is set, and an interrupt occurs (if the unit is selected) when the unit is ready to accept a new instruction. The selected unit's status can be read to determine or verify that REWIND is in progress.

## **Continued Operation**

a. To continue operating the same mode, the MTGO instruction is given before tape motion stops. The order of instructions required for continued operation are as follows:

(1) MTLC, if the instruction is to be changed.

(2) MTAF, clears only MTF and EF flags, since tape control will be in a Not Ready state.

(3) MTGO, if MTLC requested an illegal condition; the EF will be set at this time.

b. To change modes of operation, either in the same or opposite direction, the MTLC instruction is given to change the mode and a MTGO instruction is given to request the continued operation of the drive. If a change in direction is ordered, the transport will stop, pause, and automatically start up again.

c. If the WRITE function is being performed, the only forward change in command that can be given is WRITE EOF.

d. If no MTGO instruction is given, the transport will shut down in the inter-record gap.

## NOTE

Flags will not be set when the control or the transport becomes ready, except if the REWIND instruction is present in the command register and the selected drive reaches BOT and is ready for a new instruction.

e. If a WRITE (odd parity) instruction is changed to WRITE EOF, the parity is automatically changed to even.

## NOTE

Even parity will remain in the command register unless changed by a new command instruction, MTLC, which clears and loads the entire command register.

#### Status or Error Conditions

Twelve bits in the magnetic tape status register indicate status or error conditions. They are set by the control and cleared by the program.

The magnetic tape status register bits are:

Bit	Function (When Set)
0	Error flag (EF)
1	Tape rewinding
2	Beginning of tape (BOT)
3	Illegal command
4	Parity error (Lateral or Longitudinal)
5	End of file (EOF)
6	End of tape (EOT)
7	Read/Compare error
8	Record length incorrect
	WC = 0 (long)
	WC $\neq$ 0 (short)
9	Data request late
10	Bad tape
11	Magnetic tape flag (MTF) or job done

The register bits are equivalent in position to the AC bits (i.e.,  $SR_0 = AC_0$ , etc).

MTF(SR11) – The MTF flag is set under the following conditions:

a. Whenever the tape control has completed an operation (after the EOR mark passes the read head).

b. When the selected transport becomes ready following a normal REWIND function. These functions will also set the EF if any errors are present.

EOF (SR5) – End-of-file (EOF) is sensed and may be encountered for those functions which come under the heading of READ STATUS FUNCTION; i.e., SPACE, READ DATA, or READ/COMPARE and WRITE EOF. When EOF is encountered, the tape control sets EOF = 1. MTF is also set; hence, an interrupt\* occurs and the EOF status bit may be checked.

EOT (SR6) and BOT (SR2) – End-of-tape (EOT) detection occurs during any forward instruction when the EOT reflective strip is sensed. When EOT is sensed, the EOT bit is set, but the function continues to completion. At this time the MTF is set (and EF is set), and an interrupt occurs.

Beginning-of-tape (BOT) deflection status bit occurs only when the beginning-of-tape reflective strip is read on the transport that is selected.

When BOT detection occurs, and the unit is in reverse, the function terminates. If a tape unit is at load point when a REVERSE instruction is given, an illegal command error bit is set, causing an EF with BOT set. An interrupt then occurs.

<sup>\*</sup>All references to interrupts assume the tape flags have been enabled to the interrupt (command register bit 9 = 1) and the unit is selected.

Illegal Command Error (SR3) – The illegal command error bit is set under the following conditions:

- a. A command is issued to the tape control with the control not ready.
- b. A MTGO instruction is issued to a tape unit which is not ready when the tape control is ready.
- c. Any instruction which the tape control, although ready, cannot perform; e.g.:
  - (1) WRITE with WRITE LOCK condition
  - (2) 9-channel tape and incorrect density
  - (3) BOT and SPACE REVERSE

Parity (SR4) – Longitudinal and lateral parity checks will occur in both reading and writing. The parity bit is set for either lateral or longitudinal parity failure. A function is not interrupted, however, until MTF is set. Maintenance panel indicators are available to determine which type of parity error occurred.

*Read Compare Error (SR7)* – When READ/COMPARE function is underway, SR7 is set to 1 for a READ/COMPARE ERROR (see earlier section on READ/COMPARE for further details).


Bad Tape (SR10) – A BAD TAPE ERROR indicates detection of a bad spot on the tape. Bad tape is defined as three or more consecutively missing characters followed by data, within the period defined by the READ SHUTDOWN DELAY. The error bit is set by the tape control when this occurs. MTF and interrupt do not occur until the end of the record in which the error was detected.

Record Length Incorrect (SR8) – During a read or read/compare, this bit is set when the WC overflow differs from the number of words in the record. The EF flag is set.

Data Request Late (SR9) – This bit can be set whenever data transmission is in progress. When the DATA FLAG causes a break cycle, the data must be transmitted before a write pulse or a read pulse occurs. If it does not, this error occurs, and data transmission ceases. The EF flag and bit 9 of the status register are set when the MTF is set.

*Error Flag* (SRO) – The ERROR FLAG (EF) is set whenever an error status bit is present at the time that MTF is set. However, when an ILLEGAL COMMAND is given, the EF is set and the MTF is not set.

## **Command Register Contents**

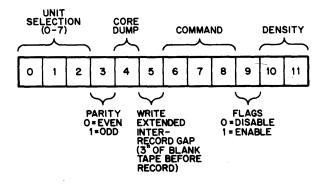

		Bits	
Unit	0	1	2
0	- 0	0	0
1	0	. 0	1
2	.0	1	0
3	0	1	1
4	1	0	0
5	1	0	- 1
6	1	1	0
7	1	1	1

# Density Selection

	Bit	S	
Density	10	11	
200 bpi	0	0	
556 bpi	0	1	
800 bpi	1 .	0	
800 bpi			
9 channel	1	1	

# Command Selection

	Bits		
Command	6	7	8
NO OP	0	. 0	0
Rewind	0	0	1
Read	0	1	0
Read/Compare	0	1	1
Write	1	0	0
Write EOF	1	0	1
Space Forward	1	1	1
Space Reverse	1	1	1

# Magnetic Tape Function Summary

LEGEND	$CA = Current Address Register = 33_8$
	WC = Word Count Register = $32_8$
	F = Forward
	$\mathbf{R} = \mathbf{R}\mathbf{e}\mathbf{v}\mathbf{e}\mathbf{r}\mathbf{s}\mathbf{e}$
	DS = Density Setting
	PR = Parity Setting
	EN = Enable Interrupt

Function	Characteristics	Status of Error Types
NO-OP	CA: Ignored	Illegal
	WC: Ignored	BOT
	DS: Ignored	Tape Rewinding
	PR: Ignored	
	EN: Ignored	
SPACE FORWARD	CA: Ignored	Illegal
	WC: 2's comp. of number	EOF
	of records to skip DS: Must be set	Parity Bad Tape
	PR: Must be set	MTF, BOT,
	EN: Must be set	EOT
SPACE REVERSE		Illegal
		EOF
		Parity
	Same as SPACE FORWARD	Bad Tape
		BOT
		MTF
READ DATA	CA: Core Address - 1	Illegal
	WC: 2's comp. of number of	EOF
	words to be transferred	Parity
	DS: Must be set	Bad Tape MTF
	PR: Must be set	EOT
	EN: Must be set	Data Request Late
•		Record Length
		Incorrect
WRITE DATA		Illegal
		EOT
		Parity
	Same as READ DATA	MTF Bad Tana
		Bad Tape Data Request Late
WDITE EOE	CA: Imported	
WRITE EOF	CA: Ignored WC: Ignored	Same as WRITE DATA plus EOF
	DS: Must be set	Surra pius DOI
	PR: Must be set	
	EN: Must be set	
READ/COMPARE		Illegal
		EOF
		Read/Compare Error
	Same as READ DATA	Bad Tape MTF
		EOT
-		Data Late
		Record Length Incorrec
DEWIND		Illogal
REWIND	CA: Ignored	Illegal Tape Rewinding
	WC: Ignored DS: Ignored	MTF
	PR: Ignored	вот

#### 6.4.2 Magnetic Tape Transports

The following paragraphs describe some of the Magnetic Tape Transports that are available for the PDP-12A. These machines are also compatible with the automatic Tape Control Type TC58.

6.4.2.1 Magnetic Tape Transport, Type TU20 (7-Channel) – The Type TU20 is a digital magnetic tape transport designed to be compatible with the Type TC58 Magnetic Tape Control. The transport operates at a speed of 45 inches per second, and has three selectable densities: 200, 556, and 800 bpi. The maximum rate is 36,000 six-bit characters per second. Standard seven-channel IBM-compatible tape format is used. The specifications for the unit are as follows:

Format: NRZI. Six data bits plus one parity bit. End and loadpoint sensing compatible with IBM 729 I-VI.

*Tape:* Width 0.5 in., length 2400 ft. (1.5 mil.). Reels are 10.5 in. in diameter, IBM-compatible, with file protect (WRITE LOCK) ring.

*Head:* Write-read gap 0.300 in., Dynamic and skew is less than 14 microseconds.

Tape Specifications: 45 ips speed. Start time is less than 5 milliseconds. Start distance is 0.080 in. (+0.035, -0.025 in.). Stop time is less than 1.5 milliseconds. Stop distance is 0.045 in.  $(\pm 0.05$  in.).

Density: 200, 556, and 800 bpi. Maximum transfer rate is 36 kHz.

Transport Mechanism: Pinch roller drive; vacuum column tension.

Controls: ON/OFF, ON LINE, OFF LINE, FORWARD, REVERSE, REWIND, LOAD, RESET.

*Physical Specifications:* Width 22-1/4 in., depth 27-1/6 in., height 69-1/8 in., weight 600 lbs.

Read (Read/Compare) Shutdown Delay: 3.6 milliseconds.


Write Shutdown Delay: Approximately 4.5 milliseconds.

#### 9-Track Operation

9- and 7-track transports may be intermixed on the Type TC58 control. When a transport is selected, it automatically sets the control for proper operation with its number of tracks.


Control of 9-track operation is identical to 7-track, except as noted below:

Write: A word in memory is written on tape with the following format:

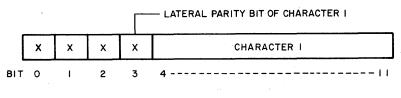

X- THESE BITS ARE IGNORED


Read – A word is read into memory from tape with the following format:

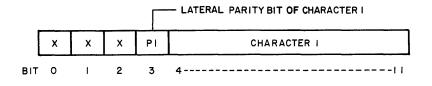

Read/Compare - A direct comparison of the characters on tape is made with those in memory. The parity bit is ignored, as are bits 0-3 in each memory word.

Core Dump Mode - This mode is used only with 9-track transports. It is entered by setting bit 4 of the command register.

Core dump mode permits the dumping of complete memory words in the form of two six-bit characters. The format is:

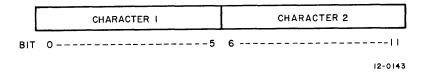

This is accomplished by utilizing only 7 of the 9 tracks on the tape.

Tape written in CORE DUMP MODE must be READ (READ/COMPARE) in this same mode. These operations are the same as for a 7-track transport.

6.4.2.2 Magnetic Tape Transport, Type TU20A (9-Channel) – The Type TU20A is a digital magnetic tape transport designed to be compatible with the Type TC58 Magnetic Tape Control. The transport operates at a speed of 45 inches per second, and a density of 800 bpi. The maximum transfer rate is 36,000 eight-bit characters per second. Standard nine-channel IBM-compatible tape format is used. The specifications for the unit are as follows:

Format: NRZI. Eight data bits plus one parity bit. End and loadpoint sensing compatible with IBM.

*Tape:* Width 0.5 in., length 2400 ft. (1.5 mil.). Reels are 10.5 in. in diameter, IBM-compatible, with file protect (WRITE LOCK) ring.

Heads: Write-read gap of 0.150 in. Dynamic and static skew is less than 14 microseconds.

*Tape Specifications:* 45 ips speed. Rewind time is less than 5 milliseconds. Start distance is 0.080 in. ( $\pm 0.035$ , -0.025 in.). Stop time is less than 1.5 milliseconds. Stop distance is 0.045 in. ( $\pm 0.015$  in.).

Density: 800 bpi. Maximum transfer rate is 36 kHz.

Transport Mechanism: Pinch roller drive; vacuum column tension.

Controls: ON/OFF, ON LINE, OFF LINE, FORWARD, REVERSE, REWIND, LOAD, RESET.

Physical Specifications: Width 22-1/4 in., depth 27-1/6 in., height 69-1/8 in. Weight 600 lbs.

Read (READ/COMPARE) Shutdown Delay: 3.6 milliseconds.

Write Shutdown Delay: Approximately 4.5 milliseconds.

### 6.4.2.3 Magnetic Tape Transport, Type TU20C

#### **General Description**

The TU20C connects to the PDP-12 via the TC58 Automatic Magnetic Tape Control. IOT instructions, issued by the PDP-12, control the operation of the tape transport; these instructions are decoded within the tape control unit to specify the type of tape transport operation. To write on tape, the tape control unit sends a motion-forward instruction and a write-enable instruction, and, for each character to be recorded, a record data pulse. For spacing and reading tape, the tape control unit sends the required motion instruction. Therefore, regardless of the operation, the tape is always being read and the data is always being transmitted to the tape control unit; this information is used for detecting end-of-record to terminate operation. The TU20C operates at 45 inches per second, and has the capability of recording in three densities, 200, 556, and 800 bpi; maximum transfer rate is, therefore, 800 x 45 = 36,000 six-bit characters per second. Standard seven-channel IBM-compatible tape format is used.

A nine-channel IBM-compatible version of the TU20C, designated TU20B, is also available; remaining characteristics of the TU20B are essentially the same as those for the TU20C.

#### Operation

Either version of the Tape Transport (TU20C, TU20B) may be operated in the local mode from the control panel or in the remote mode from the PDP-12. Local operation is selected by depressing the front panel OFF LINE control; this action causes the FORWARD, RESET, REVERSE, and REWIND switches to become operable. If either the FORWARD, REVERSE, or REWIND control is depressed, the tape moves in the specified direction until RESET is depressed, the beginning of the tape is detected for rewind, or the end of the tape is detected for FORWARD. Activating the front panel ON-LINE control places the Tape Transport in the remote mode, wherein it is controlled by the PDP-12; the Tape Transport must, however, be selected by the TC58 Tape Control.

#### Switches

The following switches are located on the control panel:

Switch	Function
POWER	Applies power to the tape transport.
ON LINE	Selects programmed (remote) operation by the computer.
OFF LINE	Selects local operation by the control panel.
FWD	In local operation, spaces the tape in the forward direction.
REV	In local operation, spaces the tape in the reverse direction.
REWIND	In local operation, rewinds the tape at high speed.
RESET	In local operation, terminates the space forward, space reverse, or rewind operation.
LOAD	Loads the tape into the tape column.
Unit Select Switch	Selects the tape transport unit by number. This number is used in the program to select the tape transport.

## Indicators

The following indicators are provided on the control panel:

Indicators	Meaning When Illuminated
SELECT	The tape transport is selected by the tape control (or program).
READY	The tape transport is ready (vacuum on, and settle-down delay complete), no motion.
LOAD POINT	The tape is at load point.
END POINT	The tape is at end point (end of tape).
WRITE LOCK	The write lock-out ring is missing from the tape reel, which prevents the write function.
WRITE STATUS	The program has enabled the write function in the tape transport.
9	This transport is a 9-track type.
7	This transport is a 7-track type.
REWIND	The tape transport is in the rewind operation.
LOAD	The vacuum is on and the tape is loaded into the vacuum columns.
REV	Reverse operation is specified.
RESET	No motion (forward, reverse, or rewind) is specified.
FWD	Forward motion of the tape is specified.
LOCAL	Local operation by the control panel.
REMOTE	Remote operation by the computer.
POWER	Power is applied to the tape transport.

#### 6.4.3 LINCtape Option TC12-F

The TC12-F option (prewired) in conjunction with the PRTC12-F program extends the TC12 LINCtape control to read and write DECtapes formatted on the PDP-8, PDP-9, PDP-10, and PDP-15 computers. It will operate on a standard PDP-12A system. Tape units 0 through 7 are selectable under program control. Description document DC-12-YIYA-D explains the differences between the LINCtape and DECtape formats and describes the PRTC12-F program.

Data is transferred between the tapes and the computer on the I/O bus. Two status flags enable the program to identify the information on tape. The BLOCK flag is set, indicating that a block mark was encountered on tape and the Block Number (BN) is in the tape accumulator. This number is then read into the PDP-12 AC and is processed to determine if the desired block has been found, or to initiate the necessary adjustments to access the desired block.

The WORD flag is set after four lines of data have been assembled and are ready to store in memory when reading from the tape. When writing data on tapes, the flag indicates that a 12-bit word has been written on tape and the control is ready to accept another word from the computer.

The system program PRTC12-F no. DC-12-YIYA-PB for this option is contained on the standard LAP6-DIAL system tape.

### NOTE

This option does <u>not</u> permit the user to execute tape operations using DEC tape instruction subroutines.

# Instructions

#### IOT 6152

Octal code:	6152
Event time:	2
Execution time:	4.25 μs
Operation:	As shown below

AC Bit	Function
5 (1)	Clear Block FF
5 (1)	Set Backward
6 (1)	Select unit 1
7 (1)	Set forward
9 (1)	Set motion
10 (1)	Select DECtape & AC <sub>11</sub> write
SWD 0457	Skip on word flag
STB 0414	Skip on block flag
TAPE PRESET	0 → DECtape write
TAPE PRESET	0 → Motion
TAPE PRESET	Deselect DECtape

#### 6.5 LINE PRINTERS

#### 6.5.1 Line Printer and Control, Type LP12

The Line Printer and Control Type LP12 allows the PDP-12 computer to output data at up to 600 lines per minute (depending upon which printer is used). Either the Mohawk Data Sciences Model 4000 or 5000 series line printers can be used.

Model	Lines Per Minute	Columns Per Line
4000	up to 300	132
5000	up to 600	132

## Total number of characters available: 64

A 6-bit line printer code is loaded into the LP12 buffer from  $AC_{6-11}$  with the instruction Load Printer Buffer (LLB). The Print (LPR) instruction causes the lineprinter to print the characters in the lineprinter buffer. After the buffer is filled the LPR instruction should be given to print the contents of the buffer. Two status flags indicate the line printer conditions. The Error Flag is set when a printer instruction is given if an error status exists, such as power off, paper supply low, or control circuits not reset. The Done Flag is set by a BUFF AVAILABLE pulse, generated by the line printer, after the following IOT instructions are given: Load Printer Buffer (LLB) 6654, Load Format Register and Print (LPR) 6664 and Clear Printer Buffer (LCB) 6662. The BUFF AVAILABLE pulse indicates that the line printer buffer is ready to receive another character or the lineprinter is ready to print a line. The Done Flag is cleared by the IOT instruction Clear Line Printer Flags (LCF) 6652 or the status of the Done Flag can be checked by the IOT instructions. Skip on Line Printer Done Flag (LSD) 6661.

A three-bit format register in the Printer is loaded from  $AC_{9-11}$  during a print command. This register selects one of eight channels of a perforated tape in the printer to control spacing of the paper.

The Print Flip-Flop is set when the print instruction is given and, when the Print Flip-Flop and the Done Flag are both set, a program interrupt request is generated, indicating that the printer has finished printing a line. The Print Flip-Flop can be cleared by an IOT instruction Clear Printer Buffer (LCB).  $AC_8$  is loaded into the Space Flip-Flop during a print instruction. If the Space Flip-Flop is set, the paper is advanced according to the selected channel of the format tape in the line printer. If the Space Flip-Flop is clear, the paper advance is inhibited.

LSE	Skip on	Line	Printer	Error	Flag
-----	---------	------	---------	-------	------

Octal code:	6651
Event time:	1
Execution time:	4.25 μs
Operation:	The status of the Printer Error Flag is sensed, and, if it is set, the contents of the PC are
	incremented by one, skipping the next sequential instruction.
Symbol:	If Printer Error Flag = 1, then $PC + 1 \rightarrow PC$

### LCF Clear Line Printer Flags

Octal code:	6652
Event time:	2
Execution time:	4.25 μs
Operation:	The Line Printer Error and Done Flags are cleared.
Symbol:	$0 \rightarrow$ Line Printer Error Flag
	$0 \rightarrow \text{Done Flag}$

## LLB Load Printer Buffer

Octal code:	6654
Event time:	4
Execution time:	4.25 μs
Operation:	The contents of $AC_{6-11}$ are loaded into the Printer Buffer.
Symbol:	$AC_{6-11} \rightarrow Printer Buffer$
	$AC_8 \rightarrow Space Flip Flop$
	$0 \rightarrow AC$ .

#### LSD Skip on Line Printer Done Flag

Octal code:	6661
Event time:	1
Execution time:	4.25 μs
Operation:	The status of the Line Printer Done Flag is sensed, and, if it is set, the contents of the PC are
	incremented by one, skipping the next sequential instruction.
Symbol:	If Line Printer Flag = 1, then $PC + 1 \rightarrow PC$

LCB Clear Printer Buffer

Octal code:	6662
Event time:	2
Execution time:	4.25 μs
Operation:	The Printer Buffer is cleared.
Symbol:	$0 \rightarrow$ Printer Buffer

LPR Load Format Register and Print Character

Octal code:	6664
Event time:	4
Execution time:	4.25 μs
Operation:	The contents of $AC_{9-11}$ are loaded into the line printer format register and the line contained
	in the printer buffer is printed. Paper is advanced in accordance with the selected channel of
	the format tape.
Symbol:	$C(AC_{9-11}) \rightarrow Format Register$
	$AC_8 \rightarrow Space Flip-Flop$
	Print Line
	$0 \rightarrow AC$

#### 6.5.2 Line Printer and Control, Type LP08

The LP08 Line Printer interface allows control of the four models of Data Products Line Printers by the PDP-12 or positive bus PDP-8 family of computers through the use of IOT instructions. The printers are available in 80-column and 132-column printing widths with either a 64 or 96 visible character set. The device select code for the LP08 is  $66_8$ .

The 80-column printer contains a 20-character (24-character in 132 column) buffer and prints 20 characters simultaneously when either the character buffer is full or a format control character (carriage return, paper feed, form feed) instruction is given. A paper feed or form feed command must be given to move the paper at the end of a line or overprinting will result. Characters and commands are given by loading the AC with the appropriate setting derived from the LP08 Character Code Chart (Appendix F-4) and issuing the IOT 6664 (LPC).

The three format commands in addition to initiating the print cycle are:

a. Paper Feed – Advances the paper one line. The perforation between pages is automatic.

b. Carriage Return - Returns the print position to the leftmost edge of the paper.

c. Form Feed – Advances the paper to a new page. Nonvisible characters are decoded as spaces if they are not control characters.

# Instructions

LSF Skip on Demand Character Flag

Octal code:	6661
Operation:	If printer is ready for the next character, this flag accounts for timing required to store
	character in buffer, print from buffer, and advance paper.
Symbol:	If Character Flag = 1, then PC + $1 \rightarrow PC$

LCF Clear Character Flag

Octal code:	6662
Operation:	The line printer character flag is cleared.
Symbol:	$0 \rightarrow$ Character Flag.

### LSR Skip on Not Ready

Octal code:	6663
Operation:	The next instruction is skipped if the error status flag is set. Such errors as out-of-paper, drum
	gate open, paper jam, etc. will set error status flag.
Symbol:	If Error Flag = 1, then $PC + 1 \rightarrow PC$

### LLC Load Buffer from AC

Octal code:	6664
Operation:	Load the character into the Print Buffer and print if buffer is full or character was a control
	function. This instruction does not clear the AC.
Symbol:	$AC \rightarrow Print Buffer$

LIN Set Program Interrupts Enable

Octal code:	6665
Operation:	Sets the device interrupt flip-flop to initiate program interrupt when the demand character flag
	is set or an error condition exists.
Symbol:	$1 \rightarrow Int Enable$

LPC Load Buffer from AC and Clear Flag

Octal code:	6666
Operation:	The print buffer is loaded from the AC and the character flag is cleared. Microprogram
	combination of LCF and LLC.
Symbol:	$AC \rightarrow Print Buffer, 0 \rightarrow Character Flag.$

LCP Clear Program Interrupt Enable

Octal code:	6667
Operation:	The program interrupt enable is cleared.
Symbol:	0 → Int Enable

#### Print rate

80 column model

64 character

96 character

132 column model

64 character

96 character

Format

Paper Feed

Paper slew speed

356 Lines/minute, columns 1-80 460 Lines/minute, columns 1-60 650 Lines/minute, columns 1-40 1110 Lines/minute, columns 1-20

253 Lines/minute, columns 1-80 330 Lines/minute, columns 1-60 478 Lines/minute, columns 1-40 843 Lines/minute, columns 1-20

245 Lines/minute, columns 1-132 290 Lines/minute, columns 1-110 356 Lines/minute, columns 1-88 460 Lines/minute, columns 1-66 650 Lines/minute, columns 1-44 1110 Lines/minute, columns 1-22

173 Lines/minute, columns 1-132
205 Lines/minute, columns 1-110
253 Lines/minute, columns 1-88
330 Lines/minute, columns 1-66
478 Lines/minute, columns 1-44
843 Lines/minute, columns 1-22

Top-of-form control, single line advance, and perforation step over.

One pair of pin-feed tractors for 1/2 inch hole center, edge-punched paper. Adjustable for any paper width from 4 inches to 9-7/8 inches on the 80 column model; or a maximum width of 14-7/8 inches for the 132 column model.

13 inches per second

#### 6.6 CARD READERS

#### 6.6.1 Card Reader and Control, Type CR12

The Card Reader and Control Type CR12 reads 12-row, 80-column punched cards at a nominal rate of 200 cards per minute by a photoelectric process. Cards are read by column, beginning with column 1. One select instruction starts the card moving past the read station. Once a card is in motion, all 80 columns are read. Column information can be read in one of two program selectable modes, alphanumeric or binary. In the alphanumeric mode, the 12 information bits in one column are automatically decoded and transferred into the least significant half of the AC as a 6-bit Hollerith code. In the binary mode, the 12 bits of a column are transferred directly into the AC so that the top row (12) is transferred into  $AC_{00}$  and the bottom row (9) is transferred into  $AC_{11}$ . A punched hole is interpreted as a binary 1, and the absence of a hole is interpreted as a binary 0.

Three program flags indicate card reader conditions. The data ready flag sets and a program interrupt is requested when a column of information is ready to be transferred into the AC. A read alphanumeric or read binary instruction must be issued within 1.4 milliseconds after the data ready flag is set to prevent data loss. The card done flag is set and a program interrupt is requested when the card leaves the read station. A new select instruction must be issued immediately after this flag is set to keep the reader operating at maximum speed. Sensing of this flag can eliminate the need for counting columns or, combined with column counting, can provide a check for data loss. The reader-not-ready flag can be sensed by a skip instruction to provide an indication of card reader power off, pick failure, a dark check indication, a stacker failure, hopper empty, stacker full, Sync failure, or light check indication. When the flag is set, the reader cannot be selected and select instructions are ignored. The reader-not-ready flag is not connected to the program interrupt facility, and cannot be cleared under program control. Manual operation is required to clear the reader-not-ready flag. Instructions for the CR12 are:

#### RCSF Skip on Data Ready

Octal code:	6631
Event time:	1
Execution time:	4.25 μs
Operation:	The status of the data ready flag is sensed, and if it is set (indicating information for one card column is ready to be read) the contents of the PC are incremented by one skipping the next sequential instruction.
Symbol:	If Data Ready Flag = 1, then $PC + 1 \rightarrow PC$

#### RCRA Read Alphanumeric

Octal code:	6632
Event time:	2
Execution time:	4.25 μs
Operation:	The 6-bit Hollerith code for the 12 bits of a card column is transferred into $AC_{6-11}$ and the
	data ready flag is cleared.
Symbol:	$AC_{6-11}$ V Hollerith $\rightarrow AC_{6-11}$
	$0 \rightarrow \text{Data Ready Flag}$

#### RCRB Read Binary

Octal code:	6634
Event time:	3
Execution time:	4.25 μs
Operation:	The 12-bit binary code for a card column is transferred directly into the AC, and the data ready flag is cleared. Information from the card column is transferred into the AC so that card rows 12, 11, and 0 enter $AC_{0-2}$ and card rows 1 through 9 enter $AC_{3-1}$ respectively.
Symbol:	$0 \rightarrow$ Data Ready Flag

## RCSD Skip on Card Done Flag

Octal code:	6671
Event time:	1
Execution time:	4.25 μs
Operation:	The status of the card done flag is sensed, and if it is set (indicating that the card has passed
	the read station) the contents of the PC are incremented, skipping the next instruction.
Symbol:	If Card Done Flag = 1, then $PC + 1 \rightarrow PC$

RCSE Select Card Reader and Skip if Ready

Octal code:	6672
Event time:	2
Execution time:	4.25 μs
Operation:	The status of the card reader flag is sensed and if the reader is ready, the PC is incremented skipping the next sequential instruction, a card is started toward the read station from the
	input hopper, and the card done flag is cleared.
Symbol:	If Reader Ready Flag = 1, then PC + 1 $\rightarrow$ PC 0 $\rightarrow$ Card Done Flag

RCRD Clear Card Done Flag

Octal code:	6674
Event time:	3
Execution time:	4.25 μs
Operation:	The card done flag is cleared. This instruction allows a program to stop reading at any point in
	the card deck.
Symbol:	$0 \rightarrow Card Done Flag$

A logical instruction sequence to read cards is:

START,	RCSE JMP NOT RDY	/START CARD MOTION AND SKIP IF READY /JUMP TO SUBROUTINE THAT TYPES OUT /"CARD READER MANUAL INTERVENTION /REQUIRED" OR HALTS
NEXT,	RCSF JMP DONE RCRA or RCRB DCA I STR	/DATA READY? /NO. CHECK FOR END OF CARD /YES. READ ONE CHARACTER OR ONE /COLUMN AND CLEAR DATA READY FLAG /STORE DATA
DONE,	RCSD JMP NEXT JMP OUT	/END OF CARD? /NO, READ NEXT COLUMN /YES, JUMP TO SUBROUTINE THAT CHECKS /CARD COUNT OR REPEATS AT START FOR /NEXT CARD

The CR12 does not perform validity checking, although a programmed validity check can be made by reading each card column in both the alphanumeric and binary mode (within the 1.4 millisecond time limitation), then performing a comparison check.

The following discussion and controls and indicators deal with the General Design Industries (GDI) Model 100 card reader. Other card readers can be used and will have similar controls and indicators.

Before commencing a card reading program, load the input hopper with cards and press Motor Start and Read Start pushbuttons. The functions of the manual controls and indicators are as follows (as they appear from left to right):

Control or Indicator	Function
A – POWER switch	On/Off toggle switch. Applies power to all circuits except drive motor.
B – MOTOR START	Momentary action pushbutton, with separate indicator. Applies power to main drive motor. Motor start is also used as a reset to clear error indicators, and therefore will not operate if there is an unremedied condition such as:
	<ol> <li>Input hopper is empty.</li> <li>Output hopper is full.</li> <li>All photo cells are not illuminated.</li> <li>Internal power supply is not operational.</li> </ol>
C – READ START	Momentary action pushbutton, with separate indicator. Causes ready line to go high, enabling card reading under control of the external read instructions. If read command is open or high, card reading begins immediately at full rated speed.
D – READ STOP	Momentary action pushbutton with indicator. Stops card reading if depressed without stopping drive motor. However, READ STOP light can indicate a stopped motor or a ready line low condition.
E – INDICATORS	Several detection circuits are incorporated in the card reader. Whenever any red indicator lights, the drive motor is stopped after completion of the current card cycle.
1. PICK FAIL Indicator	Lights when a card fails to enter the read station after two successive pick attempts.
2. DARK CHECK Indicator	After the card enters the read station, a check is made at the hypothetical 0th and 81st hole positions to be sure all photocells are dark. If not, the DARK CHECK indicator lights and data outputs are immediately inhibited.
3. STACKER FAIL Indicator	When three cards have passed the read station and none have been stacked, a STACK FAIL is indicated. Prevents more than three cards from being in the track at once.
4. HOPPER EMPTY Indicator	Indicates input hopper is empty.

5. STACKER FULL Indicator When approximately 400 cards are in the stacker hopper, indicator light lights.

#### 6. SYNC FAIL Indicator

#### 7. LIGHT CHECK INDICATOR

SYNC FAIL is indicated if the sync signal is lost. Internal timing signals are derived from an oscillator which is synced to the track speed.

The photocells must always be illuminated except during the time a card is being read. The LIGHT CHECK detector is inhibited each time a card enters the read station until position (count of) 84 is reached. If a card fails to leave the read station by this time, a LIGHT CHECK is indicated.

#### 6.6.2 Optical Mark Card Reader Type CM12

The GDI Model 100-MS is an optical-mark card reader that reads (12-row Hollerith) reflective data cards of various format designs at a rate of up to 200 cards per minute by a photoelectric process. Cards are read column by column, beginning with column 1. A single select instruction will cause the reader to feed and read a card. Once a card is in motion, all columns are read. Column information is read in one of two program-selectable modes, alphanumeric or binary. In the alphanumeric mode, the 12 information bits in one column are automatically decoded and transferred into the least significant half of the AC as a 6-bit Hollerith code. In binary mode, all 12 bits of a column are transferred directly into the AC so that the top row (12) is transferred into  $AC_{00}$  and the bottom row (9) is transferred into  $AC_{11}$ . A punched hole or a nonreflective spot (either nonreflective ink or No. 2 pencil) is interpreted as a binary 1, and the absence of a hole or reflective spot is interpreted as a binary 0.

#### Instructions

The instruction set associated with the optical mark reader is identical to that of the CR12 in Paragraph 6.6.1.

#### Characteristics

Size: The complete unit is 14 in. wide, 18 in. deep, and 18 in. high. The card deck is tilted back at a 45-degree angle.

Weight: Complete unit weighs 47 lbs.

Card Rate: 200 per minute.

Input Power: 115 VAC ±10 VAC, 60 ±5 Hz single phase, at 300 VA maximum.

*Card Specification*: The card reader is designed to read 7-3/8 in. x 3-1/4 in. optical mark cards conforming to the material and size requirements of EIA Standard RS-292 Media I. Format and printing requirements are specified in the DEC Mark Sense Card Specification.

*Card Capacity*: Both input hopper and output stacker hold 450 cards. Cards may be added or removed during reader operation.

Environment:

Operating:

Storage:

32° to 120°F ambient 15% to 80% relative humidity 30° to 150°F ambient 0% to 100% relative humidity

#### **Controls and Indicators**

Power Switch: An alternate action rocker-type switch used to apply AC power to the Card Reader.

*Start Switch*: A momentary pushbutton switch used to condition the unit to read cards. When it is depressed, the drive motor will start, and any error indicators will be reset if the error has been cleared. When it is released and the motor has reached operating speed, the reader may accept a "read command' and process cards.

Stop Switch: A momentary pushbutton switch used to stop the reader. When it is depressed, the motor will stop; if it is depressed during a time a card is in process, the card cycle will be completed before the motor stops.

Power: A green indicator to verify AC power on; mounted next to the POWER switch.

On Line: A green indicator to verify that the START switch has been depressed and the unit is ready to operate. Light will remain on until the STOP switch is depressed or an error condition is sensed; mounted next to START switch.

Cards: A red indicator to identify an input hopper empty or an output stacker full condition.

*Feed Error*: A red indicator to identify when a card has not been fed from the input hopper to the read station at the end of a feed cycle.

Stacker Error: A red indicator to identify when a card has not been properly delivered to the output stacker.

Motion Error: A red indicator to indicate a card jam in the read station.

L.D. Error: A red indicator to identify when a Light or Dark Check of the read station was not met.

#### 6.7 INCREMENTAL PLOTTERS

#### 6.7.1 Incremental Plotter and Control, Type XY12

Calcomp (California Computer Products) Models 563 and 565 available in three step-size models and four models of the Complot (Houston Instruments) digital plotters can be operated from a Digital Equipment Corporation Type XY12 Incremental Plotter Control. The characteristics of the recorders are summarized:

Name	Model	Paper Width (inches)	Speed (step/minute)	Step Size
Calcomp	563	30	12,000	.01-in. .005-in. .1-mm
а. С	565	12	18,000	.01-in. .005-in. .1-mm
Complot	DP-1-1 DP-1-5 DP-1-M2 DP-1-M1	12 12 12 12	18,000 18,000 18,000 18,000 18,000	.01-in. .005-in. .25-mm .1-mm

The principles of operation are basically the same for each of the recorders. Bidirectional rotary step motors are employed for both the X and Y axes.

Recording is produced by movement of a pen relative to the surface of the graph paper, with each instruction causing an incremental step. X-axis deflection is produced by motion of the drum; Y-axis deflection, by motion of the pen carriage. Instructions are used to raise and lower the pen from the surface of the paper. Each incremental step can be in any one of eight directions through appropriate combinations of the X and Y axis instructions. All recording (discrete points, continuous curves, or symbols) is accomplished by the incremental stepping action of the paper drum and pen carriage. Front panel controls permit single-step or continuous-step manual operation of the drum and carriage, and manual control of the pen solenoid. The recorder and control are connected to the computer program interrupt and instruction skip facility.

Instructions for the recorder and control are:

PLSF Skip on Plotter Flag

Octal code:	6501
Event time:	1
Execution time:	4.25 μs
Operation:	If the Plotter Flag is set, the contents of the PC are incremented by one so that the next sequential instruction is skipped.
Symbol:	If Plotter Flag = 1, then $PC + 1 \rightarrow PC$

PLCF Clear Plotter Flag

Octal code:	6502
Event time:	2
Execution time:	4.25 μs
Operation:	Clear the AC and Plotter Flag
Symbol:	$0 \rightarrow AC$
	$0 \rightarrow Plotter Flag$

# PLPU Pen Up

Octal code:	6504
Event time:	3
Execution time:	4.25 μs
Operation:	Raise the plotter pen from the paper surface.
Symbol:	None

# PLPR Pen Right

Octal code:	6511 (May be microprogrammed with PLDU or PLDD.)
Event time:	1
Execution time:	4.25 μs
Operation:	Move the plotter pen to the right in either the raised or lowered position.
Symbol:	None

# PLDU Drum Up

Octal code:	6512 (May be microprogrammed with PLPR.)
Event time:	2
Execution time:	4.25 μs
Operation:	Move the plotter paper drum upward. This instruction can be combined with the PLPR and PLPD commands.
Symbol:	None

# PLDD Drum Down

Octal code:	6514 (May be microprogrammed with PLPR.)
Event time:	3
Execution time:	4.25 μs
Operation:	Move the plotter paper drum downward.
Symbol:	None

# PLPL Pen Left

Octal code:	6521 (May be microprogrammed with PLUD, PLAD, or both.)
Event time:	1
Execution time:	4.25 μs
Operation:	Move the plotter pen to the left in either the raised or lowered position.
Symbol:	None

# PLUD Drum Up

Octal code:	6522 (May be microprogrammed with PLPL, PLPD, or both.)
Event time:	2
Execution time:	4.25 μs
Operation:	Move the plotter paper drum upward. This instruction is similar to the 6512 instruction except
	that it can be combined with the PLPL or PLPD instructions.
Symbol:	None

## PLPD Pen Down

Octal code:6524 (May be microprogrammed with PLPL, PLUD, or both.)Event time:3Execution time: $4.25 \ \mu s$ Operation:Lower plotter pen to the surface of the paper.Symbol:None

Program sequence assumes that the end location is known at the start of a routine since there is no means of specifying an absolute pen location in an incremental plotter. Pen location can be preset by the manual controls on the recorder. During the subroutine, the PDP-12 can track the location of the pen on the paper by counting the instructions that increment position of the pen and the drum.

#### 6.8 PAPER TAPE

#### 6.8.1 High-Speed Paper-Tape Punch and Reader, Type PC12

The High-Speed Paper-Tape Punch and Reader Type PC12 provides the user with a faster means of inputting or outputting information from paper tape to the PDP-12 than that provided by the standard Teletype tape reader/punch. The PC12 is functionally a PP12, High Speed Paper Tape Punch, and a PR12, High Speed Paper Tape Reader, configured mechanically in the same unit. The operating characteristics are discussed in the following paragraphs.

#### 6.8.2 High-Speed Paper-Tape Punch, Type PP12

The High-Speed Paper-Tape Punch option Type PP12 consists of a PC05-P paper-tape punch that perforates 8-hole fanfold paper-tape at a rate of 50 characters per second. Information to be punched in tape is loaded in an 8-bit punch buffer (PB) from  $AC_{4-11}$ . The punch flag is set at the completion of the punching action, signaling that new information may be transferred into the punch buffer and punching may be initiated. The control circuitry for this device is located in the BA12 Peripheral Expander. The punch flag is as described for the Teletype unit. The punch instructions are:

PSF Skip on Punch Flag

Octal code:	6021
Event time:	1
Execution time:	4.25 μs
Operation:	The punch flag is sensed, and, if it is set, the contents of the PC are incremented by one, skipping the next sequential instruction.
Symbol:	If Punch Flag = 1, the PC + $1 \rightarrow PC$

PCF Clear Punch Flag

Octal code:	6022
Event time:	2
Execution time:	4.25 μs
Operation:	The punch flag and the punch buffer are both cleared in preparation for receiving a new
	character from the computer.
Symbol:	$0 \rightarrow$ Punch Flag, PB

#### PPC Load Punch Buffer and Punch Character

Octal code:	6024
Event time:	3
Execution time:	4.25 μs
Operation:	An 8-bit character is transferred from $AC_{4-11}$ into the punch buffer, and then the character is punched. This instruction does not clear the punch flag or the punch buffer.
Symbol:	$AC_{4-11} \rightarrow PB \rightarrow PB$

# PLS Load Punch Buffer Sequence

Octal code:	6026	
Event time:	2,3	
Execution time:	4.25 μs	
Operation:	The punch flag and punch buffer are both cleared, the contents AC <sub>4-11</sub> are transferred	
	the punch buffer, the character in the PB is punched in tape, and the punch flag is set when	
	the operation is completed. Combines PCF and PPC.	
Symbol:	$0 \rightarrow Punch Flag, PB$	
	$AC_{4-1,1} \rightarrow PB$	
	$1 \rightarrow Punch Flag when done$	

A program sequence loop to punch characters when the punch buffer is "free" can be written as follows:

FREE,	PSF	/SKIP WHEN FREE
	JMP FREE	
	PLS	/LOAD PB FROM AC AND PUNCH CHARACTER
	JMP FREE	

#### 6.8.3 High-Speed Paper-Tape Reader, Type PR12

The High-Speed Paper-Tape Reader (PC05-R) option Type PR12 senses data in a 8-hole perforated-paper tape (unoiled) photoelectrically at 300 characters per second. The reader control requests reader movement, transfers data from the reader into the reader buffer (RB), and signals the computer when incoming data is present. Reader tape movement is started by clearing the Reader Flag. Data is assembled into the Reader Buffer from the perforated tape. The Reader Buffer is transferred into  $AC_{4-11}$  under program control. The Reader Flag is connected to the program interrupt and instruction skip facilities, and is cleared by IOT pulses. Control circuitry for this device is located in the BA12 Peripheral Expander. Computer instructions for the reader are:

RSF Skip on Reader Flag

Octal code:	6011
Event time:	1
Execution time:	4.25 μs
Operation:	The status of the Reader Flag is sensed, and, if it is set, the contents of the PC are incremented
	by one, skipping the next sequential instruction.
Symbol:	If Reader Flag = 1, then $PC + 1 \rightarrow PC$

**RRB** Read Reader Buffer

Octal code:	6012
Event time:	2
Execution time:	4.25 μs
Operation:	The contents of the reader buffer are transferred into $AC_{4-11}$ and the Reader Flag is cleared.
	This instruction does not clear the AC.
Symbol:	$RB V AC_{4-11} \rightarrow AC_{4-11}$
2	$0 \rightarrow \text{Reader Flag}$

RFC Reader Fetch Character

Octal code:	6014
Event time:	3
Execution time:	4.25 μs
Operation:	The Reader Flag and the reader buffer are both cleared. A character is loaded into the reader
	buffer from tape, and the Reader Flag is set when this operation is completed.
Symbol:	$0 \rightarrow \text{Reader Flag, RB}$
	Tape Data $\rightarrow$ RB
	$1 \rightarrow \text{Reader Flag when done.}$

A program sequence loop to read characters from perforated tape can be written as follows:

LOOK,	RFC	/FETCH CHARACTER FROM TAPE
	RSF	/SKIP WHEN RB FULL
	JMP LOOK	~
	CLA	
	RRB	<b>/LOAD AC FROM RB</b>
	JMP LOOK	

#### 6.9 DATA BUFFERS

#### 6.9.1 Data Buffer Type DB12-P, N

The DB12 option is an input/output transfer register, consisting of a 12-bit input bus driver and a 12-bit output buffer register. The basic logic for this option is contained on an M735 module, which is described in the Logic Handbook (1970). Three DB12 options are prewired in the BA12 Peripheral Expander. The device select gating and data lines provide the capability for transferring data into or out of the PDP-12 accumulator. The user selects a device code by inserting jumpers in the M921 Device Code Select Jumper module located in row A, slot 19, of the BA12 Peripheral Expander. Two I/O cables (Flexprint<sup>®</sup>) terminating in M903 connector modules are provided to connect the DB12 to the external I/O device. The output register is buffered to provide either positive (0, +3V) or negative (0, -3V) logic levels. The option designation is DB12-P (positive) or DB12-N (negative).

<sup>®</sup> Flexprint is a Registered Trademark of Sanders Associates Inc.

#### 6.10 POWER FAIL/RESTART

#### 6.10.1 Power Failure Option, Type KP12

#### General

The KP12 Power Failure Option protects an operating program upon failure or interruption of the computer's primary power source. In the event of a power abnormality, a program interrupt is initiated by the KP12 and enables continued operation of the central processor for 1 millisecond. During this interval, the interrupt routine identifies the power low condition as the initiator of the interrupt. The interrupt routine then stores the contents of active registers (AC, L, MQ, etc) and the program counter in known core memory locations. Upon restoration of power, the power low flag is cleared and a routine in the 8 mode beginning at address  $0000_8$  starts automatically, restoring the contents of the active registers and the program counter, and then continues the interrupted program.

#### Operation

A manual RESTART switch enables or disables the automatic restart operation upon restoration of primary power. When it is ON (down), the program counter is cleared and a signal which simulates the console START key (RCL START PC) is produced 200 milliseconds after power conditions become satisfactory. Operation is restarted (always in the 8 mode) by executing the instruction contained in address  $0000_8$ ; this instruction is a JMP to the starting address of a subroutine which restores the contents of the active registers and the program counter to the conditions that existed prior to the power low interrupt. The 200-millisecond delay assures that slow mechanical devices, such as Teletype equipment, have completed any previous operation before the program is resumed.

When the RESTART switch is OFF (up), the power low flag is cleared upon the return of normal power conditions, but the program must be manually restarted, possibly after resetting peripheral equipment.


#### Programming


SPL Skip on Power Low

Octal code:	6102
Event time:	2
Execution time:	4.25 μs
Operation:	The condition of the power low flag is sampled; if set (indicating a power failure has occurred), the contents of the PC are incremented by one, skipping the next sequential instruction.

Symbol: If Power Low Flag = 1, then  $PC + 1 \rightarrow PC$ 

Figures 6-9 and 6-10 illustrate the Automatic Restart Program Events and Typical Power Failure Program Service Routine, respectively.

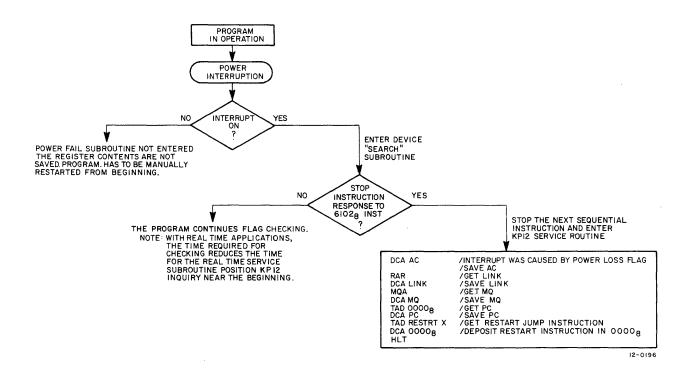

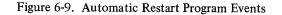

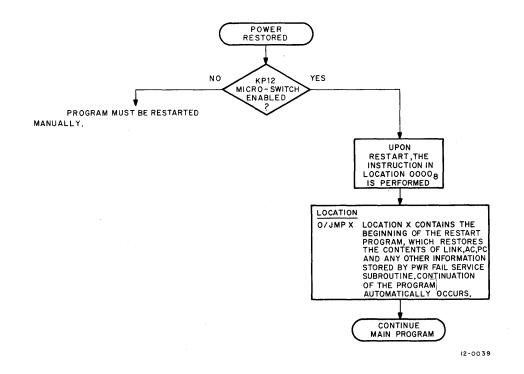


Figure 6-10. Typical Power Failure Program Service Routine

#### 6.11 ANALOG-TO-DIGITAL

#### 6.11.1 General Purpose Multiplexed Analog-to-Digital Converter System, Type AF01-A

The Type AF01-A General-Purpose Multiplexed Analog-to-Digital Converter combines a versatile, multipurpose converter with a multiplexer to provide a fast, automatic, multichannel scanning and conversion capability. It is intended for use in systems that sample and process analog data from sensors or other external signal sources at high rates of speed. The AF01-A is used when greater accuracy than that provided by the standard AD12 A-D converter is needed. The Type AF01-A option is used with the PDP-12 to multiplex up to 64 analog signals and to convert the signals to binary numbers. Analog data on each of 64 channels can be accepted and converted into 12-bit digital numbers 420 times per second.\*

Switching point accuracy in this instance is 99.975 percent, with an additional quantization error of half the analog value of the least significant bit (LSB).

#### A/D Converter Specifications

The Type AF01-A has a successive approximation converter that measures a 0 to -10 volt analog input signal and provides a binary output indication of the amplitude of the input signal. The characteristics of the A/D converter are as follows:

Accuracy and Conversion Times:	See Table 6-6 (includes all linearity and temperature errors)
Converter Recovery Time:	Zero.
Input and Input Impedance:	0 to -10V at 10 megohms standard. Input scaling may be specified using the amplifier or sample and hold options (see Table 6-5).
Input Loading:	$\pm 1 \ \mu A$ and 125 pf for 0 to -10V input signal.
Output:	Binary number of 6 to 12 bits, with negative numbers represented in two's complement notation. A OV input gives a $4000_8$ ; a -5V input a $0000_8$ and a -10V (minus 1 LSB) input gives $3777_8$ number.

Provision is made for using the Type A400 Sample and Hold Amplifier (AH02 option) between the multiplexer output and A/D converter input to reduce the effective aperture to less than 150 ns. The Type A400 may also be used to scale the signal input to accept  $\pm 10V$ , or 0 to  $\pm 10V$ . The Type A200 amplifier (AH03 option) may be substituted for the Type A400 to accomplish the same signal scaling without reducing the effective aperture. Both the AH02 and AH03 options may be used to obtain high input impedance and small aperture. (See Table 6-4.)

#### **Multiplexer Specifications**

The multiplexer can include from 1 to 16 Type A121 Switch Modules. Each module contains four single-pole, high-speed, insulated gate FET switches with appropriate gating. The Type A121 Switches are arranged as a 64-channel group of series-switching single-pole switches with a separate continuous ground wire for each signal input. The switched signal input wire and the continuous ground for each channel are run as twisted pairs to the input connectors mounted on the rear panel. The continuous grounds for all channels are terminated at the high quality ground of the AF01-A System. Specifications (measured at input connector) are as follows:

\*Conversion rate = [(35 + 2) (10 - 6) (64)] - 1 = 420 cycles/sec. = [(9 + 2) (10 - 6) (64)] - 1 = 1420 cycles/sec.

Input Operating Signal Voltages:	+10V to -10V
Current:	1 mA
On Resistance	500 ohm (max)
Voltage Offset	1 µV
"Off Leakage"	10 nA (max)
Capacitance	10 pf (max)
Speed 10% Input to within 1 LSB of output	2 µs
Operate Time	The time required to switch from one ch

The time required to switch from one channel to another is  $2 \mu s$  to within 1 LSB of the final voltage. This time is preset within the control and starts when a set or index command is received.

Configuration	Gain	Input Signal	Input Impedance (ohms)	Input Output	Option Designation
Standard		0	10 meg.	40008	
		-5	10 meg.	00008	STD
		-10	10 meg.	37778	
Sample &	-1	+5	10K	3777 <sub>8</sub>	
Hold	-1	0	10K	00008	AHO2
I	-1	-5	10K ·	4000 <sub>8</sub>	
Sample &	-1/2	+10	10K	3777 <sub>8</sub>	
Hold	-1/2	0	10K	00008	AHO2
	-1/2	-10	10K	40008	
Amplifier	+1	+5	>100 meg.	4000 <sub>8</sub>	-
1	+1	0	>100 meg.	00008	AHO3
	+1	-5	>100 meg.	37778	
Amplifier	+1/2	+10	>100 meg.	4000 <sub>8</sub>	
F	+1/2	0	>100 meg.	00008	AHO3
	+1/2	-10	>100 meg.	3777 <sub>8</sub>	
Amplifier	-1	+5 +10	>100 meg.	3777 <sub>8</sub>	AHO3
and Sample	or	0 or 0	>100 meg.	00008	&
& Hold	-1/2	-5 -10	>100 meg.	4000 <sub>8</sub>	AHO2

# Table 6-5. Input Signal Scaling

## NOTE

Unipolar signals (0 to +5, or 0 to +10v) may also be specified with either the AHO3 or AHO2 option.

#### System Operation

The Type AF01 System may be operated in either the random or sequential address modes. In the random address mode, the control routes the analog signal from any selected channel to the A/D converter input. In the sequential address mode, the multiplexer control advances its channel address by one each time an index instruction is received. After indexing through the maximum number of channels implemented, the address is returned to 0.

The multiplexer switch settling time is preset within the control to initiate the conversion process automatically after a channel has been selected in either the random or sequential address mode. A separate A/D Convert I/O Transfer instruction may also initiate one or more conversions on a currently selected channel.

A/D conversion times are increased by 2 microseconds when multiplexer channels are switched to allow for settling time of the analog signal at the multiplexer output. Conversion times are increased an additional 3 microseconds when AH03 is used. These items are added to the conversion times shown in Table 6-6 under selected channel conversion time, which is the only time required for each successive conversion on a selected channel.

When the Type AH02 Sample and Hold option is required, the multiplexer switch settling time and the sample and hold acquisition time are overlapped. The total conversion and switching time is increased by 10 microseconds. (See A400 specifications.)

#### A/D CONVERTER/MULTIPLEXER CONTROLS

Designation	Function
WORD LENGTH:	Rotary switch selects digital word length or conversion accuracy. Refer to Table 6-6 for corresponding conversion times.
POWER ON/OFF:	Applies 117 Vac power to internal power supplies.
CLR:	Clears multiplexer channel-address registers; i.e., selects analog channel 0 for conversion.
INDEX:	Advances multiplexer channel-address register by one each time it is depressed, enabling manual addressing of channels (up to 64) in sequential mode. Returns address to zero when maximum value is reached.
ADC:	Starts conversion of the analog voltage on the selected channel to a binary number when depressed.
A/D CONVERTER:	Indicates binary contents of A/D converter register.
MULTIPLEXER:	Indicates binary contents of multiplexer channel-address register.
POWER:	Indicates ON/OFF status.

# Programming

Programmed control of the converter/multiplexer by the PDP-12 is accomplished with the IOT instructions listed below. PDP-12 selects the converter/multiplexer with two device selection codes,  $53_8$  and  $54_8$ , depending upon whether conversion or multiplexing function is being selected. The converter/multiplexer interprets the device selection code to enable execution of the IOP command pulse generated by the IOT instruction.

		Selected Channel (A/D)	Random or Sequential (MPX & A/D)	AH03 MPX A/D	AH02 MPX A/D	AH02 AH03 MPX & A/D
Word Length (No. of Bits)	Max Switching Point Error*	Conversion Time (µs)**	Conversion Time (µs)**	Conversion Time (µs)**	Conversion Time (µs)**	Conversion Time (µs)**
6	±1.6%	9.0	11.0 (9.5)	14.0 (11.0)	19.0 (14.0)	21.0 (18.0)
7	±0.8%	10.5	12.5 (11.0)	15.5 (12.5)	20.5 (15.5)	22.5 (19.5)
. 8	±0.4%	12.0	14.0 (12.5)	17.0 (14.0)	22.0 (17.0)	24.0 (21.0)
9	±0.2%	13.5	15.5 (14.0)	18.5 (15.5)	23.5 (18.5)	25.5 (22.5)
10	±0.1%	18.0	20.0 (18.5)	23.0 (20.0)	28.0 (23.0)	30.0 (27.0)
11	±0.05%	25.0	27.0	30.0	35.0	37.0
12	±0.025%	35.0	37.0	40.0	45.0	47.0

Table 6-6. System Conversion Characteristics

 $*\pm 1/2$  LSB for quantizing error.

\*\*If system is to operate at less than 10 bits continuously, conversion times may be reduced to times shown in parentheses.

ADSF Skip on A-D Flag

Octal code:	6531
Event time:	1
Execution time:	4.25 μs
Operation:	The A-D converter flag is sensed, and if it is set (indicating that the conversion is complete) the contents of the PC are incremented by one, skipping the next instruction.
Symbol:	If A-D Flag = 1, then $PC + 1 \rightarrow PC$

ADCV	Convert	Analog	Voltage	to	Digital	Value
------	---------	--------	---------	----	---------	-------

Octal code:	6532
Event time:	2
Execution time:	This time is a function of the accuracy and word length switch setting as listed in Table 6-6.
Operation:	The A-D converter flag is cleared, the analog input voltage is converted to a digital value, and
	then the A-D converter flag is set. The number of binary bits in the digital-value word and the
	accuracy of the word are determined by the preset switch position.
Symbol:	$0 \rightarrow$ A-D Flag at start of conversion, then
	$1 \rightarrow A-D$ Flag when conversion is done.

ADRB Read A-D Converter Buff	ffer	Bι	verter	Conv	A-D	Read	ADRB
------------------------------	------	----	--------	------	-----	------	------

Octal code:	6534
Event time:	3
Execution time:	4.25 μs
Operation:	The converted number contained in the converter buffer (ADCB) is transferred into the AC left justified; unused bits of the AC are left in a clear state, and the A-D converter flag is cleared. This instruction must be preceded by a CLA instruction.
Symbol:	$ADCB \rightarrow AC$ $0 \rightarrow A-D$ Converter Flag

#### ADCC Clear Multiplexer Channel

Octal code:	6541
Event time:	1
Execution time:	4.25 μs
Operation:	The channel address register (CAR) of the multiplexer is cleared in preparation for setting of a
	new channel.
Symbol:	$0 \rightarrow CAR$

ADSC Set Multiplexer Channel

Octal code:	6542
Event time:	2
Execution time:	$4.25 \ \mu s$
Operation:	The channel address register of the multiplexer is set to the channel specified by $AC_{6-11}$ . A maximum of 64 single-ended input channels can be used.

ADIC Increment Multiplexer Channel

Octal code:	6544
Event time:	3
Execution time:	4.25 μs
Operation:	The contents of the channel address register of the multiplexer are incremented by one. If the maximum address is contained in the register when this instruction is given, the minimum address (00) is selected.
Symbol:	$CAR + 1 \rightarrow CAR$

The converter/multiplexer may be operated by the program in either the random or sequential addressing mode. In the random addressing mode, the analog channel is selected arbitrarily by the program for digitizing and the resultant binary word is read into the accumulator. A sample program for the random addressing mode is as follows:

TAD ADDR	<b>/YES-GET CHANNEL ADDRESS</b>
ADSC	<b>/AND SEND TO MULTIPLEXER</b>
ADCV	/CONVERT A TO D
CLA	/CLEAR AC
ADSF	/SKIP ON A/D DONE FLAG
JMP1	/WAIT FOR FLAG
ADRB	/AND READ INTO AC

In the sequential address mode, the program advances the multiplexer channel-address register to the next channel each time an analog value is converted and read into the accumulator.

Should the converter/multiplexer be operated in the interrupt mode, the computer will be signaled each time that a binary word is ready, enabling the system to use processor time more efficiently.

#### Amplifier, Sample and Hold Options for AF01-A

The AH03 consists of a DEC amplifier (part #1505379-10) mounted on an A990 Amplifier Board with appropriate scaling networks and gain trim and balance potentiometers.

2 x 10<sup>6</sup> Open loop gain (@ 10 ma) ±11V Rated output voltage Frequency response Unity Gain, small signal 10 MHz 1 MHz Full output voltage 100V/µs Slewing rate 50 µs Overload recovery Input voltage offset Adjustable to 0 Avg vs temp  $20 \,\mu v/^{\circ}C$ 15 μv/% Vs supply voltage  $10 \,\mu v/day$ Vs time Input current 50 pA max doubles every 10°C Avg vs temp Vs supply voltage 10 pA/% Input impedance (ohms)  $10^{10}$  (5 pF shunt c) Between inputs 10<sup>10</sup> (5 pF shunt c) Common mode Input Voltage ±15V Max common mode ±10V 50,000V Common mode rejection Power ±15 to 16V Voltage 40 ma Current at rated load A400 (standard gain options) Acquisition time to 0.01% (full- $< 12 \, \mu s$ scale step) <150 ns Aperture time <1 mv/ms Hold inaccuracy (droop) Temperature coefficient  $0.1 \text{ mv/ms/}^{\circ}\text{C}$ 1.0 or 0.5 Gain (negative) ±5.0 ±10.0 Input range (volts) <1.0 ohm **Output Impedance** 

#### 6.12 DIGITAL-TO-ANALOG

#### 6.12.1 Digital-to-Analog Converter, Type AA01-A

The general-purpose Digital-to-Analog Converter Type AA01-A converts 12-bit binary numbers into analog voltages. The basic option consists of three channels, each containing a 12-bit digital buffer register and a digital-to-analog converter (DAC). A common digital input to all three registers is provided by a 12-bit input channel which receives bussed output connections from the accumulator. Appropriate precision voltage reference supplies are provided for the converters.

One IOT microinstruction simultaneously selects a channel and transfers a digital number into the selected register. Each converter operates continuously on the contents of the associated register, providing an analog output voltage.

Type AA01-A options can be specified in a wide range of basic configurations; e.g., with from one to three channels, with or without output operational amplifiers, and with internally or externally supplied reference voltages. Configurations with double buffer registers in each channel are also available.

Each single-buffered channel is operated by a single IOT command. Select codes of 55, 56, and 57 are assigned to the AA01-A, making it possible to operate nine single-buffered channels or various configurations of double-buffered channels. A typical instruction for the AA01-A is:

#### DALI Load Digital-to-Analog Convert 1

Octal code:	6551
Event time:	1
Execution time:	4.25 μs
Operation:	The contents of the accumulator are loaded into the digital buffer register of channel 1.
Symbol:	$AC \rightarrow DAC1$

# CHAPTER 7 PROGRAM LIBRARY

Because of the dual nature of the PDP-12, virtually all PDP-8 classic LINC, and LINC-8 programs will run on the PDP-12 equipped with the necessary peripherals. The following programs are normally supplied with the PDP-12, and most will run on just the PDP-12A. There are other programs available from both Digital Equipment Corporation and from DECUS. These have not been included in the Standard Library. This chapter is divided into four sections: PDP-12 Programs, PDP-8 Programs, DECUS Programs, and Diagnostic Programs. This list is representative and subject to change. The Digital Program Library and the DECUS Program Library maintain the current program lists.

#### 7.1 PDP-12 PROGRAMS

The PDP-12 is delivered to the user complete with an extensive selection of system programs and routines making the full data processing capability of the new computer immediately available to each user, and eliminating many commonly experienced initial programming delays.

#### 7.1.1 LAP6-DIAL Display Interactive Assembly Language (DEC-12-SE2D-D)

LAP6-DIAL provides the PDP-12 user with an operating system that includes editing, assembling, and data handling capabilities. An interactive display permits quick user response; a File Index and Peripheral device Interchange Program (PIP) facilitate file manipulation. The minimum hardware configuration for using LAP6-DIAL is a 4K PDP-12B system. (The character editing facility is, however, designed primarily around the use of the AD12 Analog-to-Digital Converter and Multiplexer for the PDP-12A.) In addition, the system will utilize an additional 4K of memory to improve its efficiency significantly.

The LAP6-DIAL system is provided to the user on LINCtape. Each tape contains a reserved area occupied by LAP6-DIAL, a working area for temporary storage of user programs, and a file area for permanent storage of user programs. The LAP6-DIAL area of the tape contains the Editor, Assembly and Utility Programs, and a File Index. The Index stores the name, starting block number, and length of each stored file. User programs are saved as named files in the tile area of the system tape. The scope is used as a moving window to view source programs in the working area. Up to 17 lines with up to 40 characters per line can be displayed at a time on the scope (maximum of 256). In the edit mode, any portion of a program in the Working Area can be displayed by an appropriate locate request.

A LINCtape containing LAP6-DIAL is designated as the system tape, and is assigned to tape unit 0. Some operations may be performed with only one LINCtape containing LAP6-DIAL, but many procedures, such as assembling programs, require two tapes. Most efficient operation is achieved when both tapes contain LAP6-DIAL.

On startup the system automatically enters the edit mode. A source program may be typed in via the TTY keyboard. The program will reside in the Working Area and will be displayed on the CRT Display character-by-character as it is entered. The LAP6-DIAL Editor may be used at this time to add, modify, or delete characters, lines, or large sections of the program. A command may also be issued via the TTY keyboard to the Monitor. When called, the Monitor writes out its buffer pointers and is replaced by the called program. When the system program operation is completed, the Monitor is automatically called back into core and it retrieves its buffer pointers.

The Monitor Commands are summarized in the following table. Items in parentheses are optional; if they are omitted, the user's program that was most recently manipulated is used.

Commands		Functions	
AS	(N, U)	Assemble $(U = 0, 1)$	
LO	(N, U)	Load Binary	
LI	(L, L,) (N, U)	Assemble & List (U - 0, 1)	
QL	(L, L,) (N, U)	Assemble & Quick List $(U = 0, 1)$	
PS	(L(,L),) (N, U)	Print Source	
SB	N, U (,M[A])	Save Binary	
SP	N, U	Save Program (Source)	
AP	(L, L,) N, U or B, U	Add Program (Source)	
DX	(, U)	Display Index	
PX	(, U)	Print Index	
CL		Clear Working Area	
PI		Peripheral Interchange Program	
EX		Exit	
MC	X(Y), U	User's Monitor Command (READS IN	
		USER PROGRAM FROM FREE AREA)	

Legend:

N = File Name	M = Mode (L for LINC or P for PDP-8)
U = Tape Unit	A = Address (5 digits-used only if mode is specified)
L = Line Number	B = Tape Block Number

The assembler processes both LINC mode and 8 mode statements, assembling programs up to 8K in length. Six-character alphanumeric symbols can be defined; source listings, assembly listings, or abbreviated assembly listings may be optionally obtained on the Teletype or, if provided, the Line Printer. To facilitate the preparation of system programs and large programs, conditional assembly pseudo-operations are provided along with a facility to preserve the tag table definitions from one assembly to another assembly (or to several assemblies).

Upon loading, programs may be started automatically in either LINC or 8 mode at any memory location.

A second version of LAP6-DIAL, LAP6-DIAL-MS, provides the user of the PDP-12 (with 8K of memory and a disk) with a fully-integrated tape-disk system. The additional facilities include:

1. Mass storage capabilities to support DF32, RS08, or RK8 disks (or LINCtape).

- 2. Monitor commands to clear the Binary Working Area and to merge binary files.
- 3. I/O routines to read, write, or move data.

4. An automatic system built to specialize the system tape for the user's present configuration.

5. Increased assembler facilities for processing large programs.

#### 7.1.2 Peripheral Interchange Program (PIP)

The Peripheral Interchange Program provides a flexible means of transferring data among peripheral devices such as LINCtape, Teletype, High Speed Paper-Tape Reader/Punch, Line Printer, Disk, and Card Reader. Symbolic and binary files, as well as absolute data, are processed in response to scope-directed operator requests.

### 7.1.3 QUANDA (DEC-12-FISA-D)

QANDA is a subroutine which allows a user to display textual information on the CRT Display, ask questions of the viewer, allow editing of the input, and receive answers.

### 7.1.4 DATAM\* (DEC-L8-FDAA-D)

The DATAM program retrieves, displays, and stores individual data blocks from LINCtape and provides the user with a repertoire of mathematical operations for manipulating this data. These operations include high and low pass filtration, differentiation and integration, attenuation and amplification, inversion, addition of a constant, and plotting of a bar graph. The data or resulting waveforms are continuously displayed.

#### 7.1.5 GRAPHA\* (DEC-L8-UGAA-D)

The GRAPHA program allows data to be retrieved from LINCtape and displayed, and allows a graph to be composed for this data, with appropriate lettering and axes. The graph is assembled on the display and the finished product may be photographed, plotted on an incremental plotter, or saved on LINCtape for future reference.

#### 7.1.6 FRQANA\* (DEC-L8-FANA-D)

The FRQANA program performs a frequency analysis of 512 points of data, and resolves the resulting spectrum into 64 components. The sine, cosine, and rms spectra are subsequently displayed and can be scaled. A resynthesis from the spectra can then be performed to provide a comparative display of the original data and the resynthesized waveform.

#### 7.1.7 MAGSPY (DEC-12-UZSA-D)

The MAGSPY program provides a moving window for scanning data stored on LINCtape. The data is displayed on the scope and can be scanned at a rate determined by a potentiometer setting. The data is interpreted either as a binary point plot or as packed ASCII characters depending on a switch setting.

#### 7.1.8 COMPAR\* (DEC-L8-EUCA-D)

The COMPAR program compares contents of specified LINCtape blocks on a word by word basis.

#### 7.1.9 SEARCH\* (DEC-L8-EUSA-D)

The SEARCH program performs a search of blocks of LINCtape for a specific word. The user may specify the word to be searched and a mask of bits for comparison.

#### 7.1.10 CONVERT (DEC-12-ESYB-D)

The CONVERT program is used to convert symbolic text from LAP-4 and LAP-6 manuscripts for compatibility with the LAP6-DIAL Assembler.

\*LINC-8 Programs.

#### 7.1.11 MARK 12 (DEC-12-YITB-D)

The MARK 12 program is used to format tapes to be used with the PDP-12. Several format options are available and, by using the subroutines within MARK 12, the user can generate a tape of arbitrary format.

#### 7.1.12 L8SIM (DEC-12-SI1B-D)

The LINC-8 Simulator Trap Processor handles Teletype input and output for LINC-8 and classic LINC programs so they can be run on the PDP-12 without modifications. It must be loaded into the PDP-12 core memory with any LINC-8 or classic LINC program which uses the keyboard or the Teleprinter, in order for that program to be run on the PDP-12.

The trap processor operates by using the PDP-12 Instruction Trap Facility to detect execution of either of the two LINC-8 Teletype input/output instructions by the user's program. It responds to user's execution of a Teletype instruction by executing coding to simulate the instruction's LINC-8 or classic LINC effect. After simulation of the instruction, the trap processor returns control to the user program.

Users may easily adapt the LINC-8 Simulator Trap Processor to handle other devices or for their own purposes. Explicit instructions for a number of useful adaptations are provided in this document, along with enough information on the internal operation of the program to permit users to easily implement adaptations of their own invention.

An important limitation of the trap processor is that it is not interruptible. It may not be operated when the PDP-12 Program Interrupt facility is enabled.

#### 7.1.13 FRED (DEC-12-FZFA-D)

The File Replacement, Entry, and Deletion subroutine processes the LAP6-DIAL Index for the user, freeing him from the clerical function of maintaining the file entries. A second version Mildred (DEC-12-FZDA-D) performs these operations in a disk based system.

#### 7.1.14 PRTC 12-F (DEC-12-YIYA-D)

PRTC12-F is a PDP-12 program to utilize the TC12-F tape hardware option in transferring data between LINCtape and DECtape. The DECtape may have been formatted on a PDP-8, PDP-8/I, PDP-9, PDP-10, and PDP-15. For a complete description of the TC12-F hardware see Section 6.4.3.

### 7.1.15 SIGAVG/SINPRE (DEC-12-UZ1A-D/DEC-12-UW4A-D)

SIGAVG is a multisweep signal averager that allows the user to enhance signals with a low signal/noise ratio and display them on the CRT Display. SIGAVG will sample at rates ranging from 55 to 4095  $\mu$ s per point per instrument, supporting a maximum of five instruments. It can take up to 4096 sweeps, and can output averaged results to LINCtape. SINPRE converts the output of SIGAVG (two-word) to the commonly used one-word format.

#### 7.1.16 CATACAL (DEC-12-UW1A-D)

CATACAL is a "boxcar" averager and data manipulation program that acquires data from an external instrument at rates that range from .2 ms to 35 seconds per point. CATACAL is capable of reading and writing on LINCtape; it can output one or two data files (spectra) to either the CRT display or an X-Y recorder. It can also differentiate, integrate, edit (strip), and compare data files (spectra), and display the results on the scope. It has the capability of curve-fitting and deconvolution, using Lorentzian or Gaussian equations.

#### 7.1.17 NMRSIM (Nuclear Magnetic Resonance Simulation) (DEC-12-UW5A-D)

NMRSIM allows the user to calculate theoretical spectra of a wide variety of compounds. The user inputs the appropriate parameters from the keyboard (such as spin, chemical shifts, and coupling constants), and calculated

line-spectra are then displayed on the scope. NMRSIM can output spectra to LINCtape and can also read, merge, and display a series of spectra from LINCtape which effectively simulate large spin systems or mixtures of compounds.

#### 7.1.18 ADTAPE/ADCON (DEC-12-UW2A-D)

ADTAPE is a data acquisition program that allows the user to: sample simultaneously from 1 to 16 A/D channels at sampling rates ranging from 1000 points per second to 40 seconds per point; display the output of any two channels on the CRT display; and output all results to LINCtape in real time. ADTAPE has a setup mode that allows the user to define a wide variety of sampling schemes using either the keyboard, CRT display or LINCtape. The program ADCON is utilized upon completion of ADTAPE and allows the user to sort the ADTAPE LINCtape output for a given channel onto contiguous tape blocks for further processing.

#### 7.1.19 TISA (DEC-12-UW3A-D)

TISA can acquire asynchronous (time-independent) or synchronous data simultaneously from up to five instruments at rates that do not exceed 2 milliseconds per point. TISA stores data on LINCtape and supports up to 32K of core. Data is displayed on the CRT display via a moving window and cursor with X-Y decimal readout. TISA has a setup mode that allows the user to define a wide variety of parameters using either the keyboard/CRT display of LINCtape. TISA is capable of acquiring data from instruments that are interfaced via shaft encoders or potentiometers, or both. With the ability to call any LAP6-DIAL program, TISA is able to interact with all PDP-12 software.

#### 7.1.20 FOCAL 12

FOCAL-12 is an adaptation of the conversational FOCAL<sup>D</sup> (FOrmula CALculator) language designed specifically to optimize use of the PDP-12 computer and its standard peripheral devices. The LINCtape, console switches, external sense lines, and VR12 display can all be utilized effectively through FOCAL-12. Simple data acquisition and reduction tasks may be quickly programmed using FOCAL-12, and the language can be used to analyze previously generated data stored on LINCtape. FOCAL-12 requires 8K of memory.

## 7.2 PDP-8 PROGRAMS

The PDP-8 programs available to the user are listed in this section. The programs described in these abstracts come from two sources, past programming efforts on the PDP-5, 8, 8/S, 8/I, 8/L, and present and continuing programming effort on these machines plus the PDP-12. Thus the programming system takes advantage of the many man-years of program development and field testing by Digital computer users. There are over 3500 Family-of-8 systems already in the field.

Although all utility and functional program documentation is issued in a newer format than that introduced with the Family-of-8 computers, in many cases PDP-12 programs originated from previous Family-of-8 computers. Programs written by users of Family-of-8 computers and submitted to the DECUS library (DECUS – Digital Equipment Corporation User's Society) are immediately available to PDP-12 users. Consequently, users of all PDP-12 computers can take full advantage of continuing program developments.

#### 7.2.1 System Programs

**DEC-08-AJAD-D FOCAL** – FOCAL (for FOrmula CALculator) is an on-line, conversational service program for the PDP-8 family of computers, designed to help scientists, engineers, and students solve numerical problems. The language consists of short imperative English statements which are relatively easy to learn. Mathematical expressions are typed in standard notation for the most part. No previous programming experience is needed either to understand the manual or to use FOCAL at the Teletype console. However, the best way to learn the FOCAL language is to sit at the Teletype and try the commands, starting with the examples given in the Programming Languages Handbook.

**DEC-D8-SDAB-D Disk Monitor System (8 Mode)** – This system consists of a keyboard-oriented Monitor, which enables the user to efficiently control the flow of programs through his PDP-12, and a comprehensive software package, including a FORTRAN Compiler, Program Assembly Language (PAL-D), Edit program (EDITOR), Peripheral Interchange Program (PIP), and Dynamic Debugging Technique (DDT-0) program. Also provided is a program (BUILDER) for generating a customized monitor according to the user's particular machine configuration (amount of core, number of discs, etc).

The system is modular and open-ended, permitting the user to construct the software required in his environment, and allows the user full access to his disk (referred to as the system device) for storage and retrieval of his programs. By typing appropriate commands into the Monitor, the user can load a program (construct it from one or more units of binary coding previously punched out on paper tape or written on the disk by the Assembler, and assign it core locations), save it (write it out, with an assigned starting address, on the system device), and later call it (read it back into core from the system device) for execution. See Introduction To Programming for further details.

#### DEC-08-AFCO-D, 4K FORTRAN

The 4K FORTRAN Compiler lets the user express problems in a mixture of English words and mathematical statements. It reduces the time needed for program preparation and enables users with little or no knowledge of the computer's organization and operating language to write effective programs.

The 4K FORTRAN language consists of four general types of statements; arithmetic, logic, control, and input/output. FORTRAN functions include addition, subtraction, multiplication, division, sine, cosine, arctangent, square root, natural logarithm, and exponentiation.

#### DEC-08-KFXB-D, 8K FORTRAN

The 8K FORTRAN system translates a source program into relocatable binary code. The relocatable binary code is output on paper tape and then loaded into the computer for program execution. The 8K FORTRAN system features: USA Standard FORTRAN syntax; subroutines; two levels of subscripting; function subprograms; input/output supervisors; relocatable output loaded by the 8K Linking Loader; COMMON statements; I, F, E, A, X, and H format specifications; and arithmetic and trigonometric library subroutines.

The 8K FORTRAN system consists of a one-pass compiler, the 8K SABR Assembler, 8K Linking Loader, and a comprehensive Library of subprograms. The system requires a PDP-8 Family Computer with at least 8K words of core memory, an ASR33 Teletype, and a high-speed paper tape reader and punch. 8K FORTRAN utilizes all available core to 32K. 8K FORTRAN is a modified version of USASI Basic FORTRAN and is further described in Programming Languages Handbook.

#### DEC-08-CDDB-D, DDT

The Dynamic Debugging Technique provides a means for on-line program debugging at the symbolic or mnemonic level. By typing commands on the console teleprinter, memory locations can be examined and changed, program tapes can be inserted, selected portions of the program can be run, and the updated program can be punched. This and it's octal counterpart ODT-8 (DEC-08-C0C0-D) are described in Introduction To Programming.

#### DEC-08-YQYB-D, Floating-Point System

- A Basic System (DEC-08-YQ1B-PB)
- B Interpreter, I/O, I/O Controller (-YQ2B-)
- C Interpreter, I/O Functions (-YQ3B-)
- D Interpreter, I/O, I/O Controller, Functions (-YQ4B-)

As described in Programming Languages Handbook this includes Floating-Point Interpreter and I/O subsystems. Allows the programmer to code his problem in floating-point machine language.

Floating-point operations automatically align the binary points of operands, retaining the maximum precision available by discarding leading zeros. In addition to increasing accuracy, floating-point operations relieve the programmer of the scaling problems common in fixed-point operations. This system includes elementary function subroutines programmed in floating-point. These subroutines are sine, cosine, square root, logarithm, arctan, and exponential functions. Data being processed in floating-point is maintained in three words of memory (12-bit exponent, 24-bit mantissa). An accuracy of six digits is maintained.

#### **DEC-08-AFA2-PB, FORTRAN SYMBOL PRINT**

Loaded after the FORTRAN Compiler, this program lists the variables used and where they will be located in core. It also indicates the section of core not used by the compiled program and data.

#### 7.2.2 Elementary Function Routines

The following routines are described in the Program Library Math Routines Manual (DEC-08-FFAC-D) and in the Programming Languages Handbook.

#### Square Root Subroutine-Single Precision

Forms the square root of a single-precision number. An attempt to take the square root of a negative number will give 0 for a result.

#### Signed Multiply Subroutine-Single Precision

Forms a 22-bit signed product from 11-bit signed multiplier and multiplicand.

#### Signed Divide Subroutine-Single Precision

This routine divides a signed 11-bit divisor into a signed 23-bit dividend giving a signed 11-bit quotient and a remainder of 11 bits with the sign of the dividend.

#### Double-Precision Multiply Subroutine-Signed

This subroutine multiplies a 23-bit signed multiplicand by a 23-bit signed multiplier and returns with a 46-bit signed product.

#### Double-Precision Divide Subroutine-Signed

This routine divides a 23-bit signed divisor into a 47-bit signed dividend and returns with a 23-bit signed quotient and a remainder of 23 bits with the sign of the dividend.

#### Sine Routine-Double Precision

The Double-Precision sine subroutine evaluates the function Sin (X) for -4 < 4 (X is in radians). The argument is a double-precision word, two bits representing the integer part and 21 bits representing the fractional part. The result is a 23-bit fraction -1 < Sin(X) 1.

#### Cosine Routine-Double Precision

This subroutine forms the cosine of a double-precision argument (in radians). The input range is -4 < X < 4.

#### Four-Word Floating-Point Package

This is a basic floating-point package that carries data as three words of mantissa and one word of exponent. Common arithmetic operations are included as well as basic input/output control. No functions are included.

#### Logical Subroutines

Subroutines for performing the logical operations of inclusive and exclusive OR are presented as a package.

#### Arithmetic Shift Subroutines

Four basic subroutines, arithmetic shift right and arithmetic shift left at both single and double precision, are presented as a package.

#### Logical Shift Subroutines

Two basic subroutines, logical shift right at both single and double precision are presented as a package.

#### Digital-8-21-F Signed Multiply (Uses EAE) Single Precision

This subroutine forms a 22-bit signed product from an 11-bit signed multiplier and multiplicand using the Extended Arithmetic Element. It occupies less storage and takes less time to execute than its non-EAE counterpart, and it has the same calling sequence.

# Digital-8-22-F Signed Divide (Uses EAE) Single Precision

This subroutine divides a double-precision signed 22-bit dividend by a signed 11-bit divisor, producing a signed 11-bit quotient and a remainder of 11 bits having the sign of the dividend.

It makes use of the Extended Arithmetic Element instruction set and occupies less storage and takes less time to execute than its non-EAE counterpart. It has the same calling sequence except that the subroutine name is changed from DIVIDE to SPDIV.

#### Digital-8-23-F Signed Multiply (Uses EAE) Double Precision

This subroutine multiplies a 23-bit, signed 2's complement binary number by a 23-bit signed 2's complement binary number, giving a 46-bit product with two signs on the higher order end. It makes use of the Extended Arithmetic Element instruction set and, because of this, occupies less storage and takes less time to execute than its non-EAE counterpart. Its calling sequence is comparable with the non-EAE version.

#### **Digital-8-25-F EAE Floating-Point Package**

These packages perform the same tasks as the Floating-Point Packages (DEC-08-YQ1B through YQ4B), except that certain routines have been speeded up by the use of the Extended Arithmetic Element.

For a detailed description of floating-point arithmetic and the interpretive Floating-Point Packages, the reader is referred to DEC-08-YQYB-D or the Programming Languages Handbook.

### 7.2.3 Utility Program

#### DEC-08-LRAA-D, Read-In-Mode Loader

The RIM Loader is a minimum-sized routine for reading and storing the information in Read-In Mode coded tapes via the 33 ASR Perforated Tape Reader (also high speed reader version).

### DEC-08-LBAA-D, Binary Loader (33 ASR, PR12, MC12 Memory Extension)

The Binary Loader is a routine for reading and storing the information in binary-coded tapes via the 33 ASR Perforated Tape Reader or by means of the Type PR12 High-Speed Perforated Tape Reader.

#### DEC-08-PMP0-D, RIM Punch

This program provides a means of punching out the information in selected blocks of core memory as (Read-In Mode) RIM-coded tape via the 33 ASR Perforated Tape Reader or the High Speed Punch PP12.

# DEC-08-YX1A, Binary Punch (33 ASR) DEC-08-YX2A, Binary Punch (PP12)

This program provides a means of punching out the information in selected blocks of core memory as binarycoded tape via the 33 ASR Perforated Tape Punch or the High Speed Punch PP12.

#### DEC-08-YPPA, Octal Memory Dump

This routine reads the console switches to obtain the upper and lower limits of an area of memory, then types on the Teletype an absolute address plus the octal contents of the first four words specified; it repeats this until the block is exhausted, at which time the user may repeat the operation.

#### Digital-8-11-U Double Precision BCD-to-Binary by Radix Deflation

This subroutine converts a 6-digit BCD number to its equivalent binary value contained in two computer words.

#### Digital-8-12-U Incremental Plotter Subroutine

This subroutine moves the pen of an incremental plotter to a new position along the best straight line. The pen may be raised or lowered during the motion.

#### Digital-8-14-U Binary to Binary-Coded-Decimal Conversion

This subroutine provides the basic means of converting binary data to binary-coded-decimal (BCD) data for typeout, magnetic tape recording, etc.

#### Digital-8-15-U-SYM Binary-to-Binary-Coded-Decimal Conversion (Four Digit)

This subroutine extends the method used in Digital-8-14-U so that binary integers from 0 to 4095 in a single computer word may be converted to four binary-coded-decimal characters packed in two computer words.

#### **Digital-8-17-U EAE Instruction Set Simulator**

This routine permits the automatic multiply-divide hardware option to be simulated.

#### Digital-8-20-U-SYM Character String Typeout Subroutine

This basic subroutine types messages stored internally as a string of coded characters. All 33 ASR characters are legal.

#### Digital-8-21-U-SYM Symbolic Tape Formal Generator

The Format generator allows the user to create PDP-8 symbolic tapes with Formatting. It may be used to condense tapes with spaces by inserting tabs, or merely to align tabs, instructions, and comments.

# Digital-8-22-U-SYM Unsigned Decimal Print, Single Precision

This subroutine permits the typeout of the contents of a computer word as a four-digit, positive, decimal integer.

#### Digital-8-23-U-SYM Signed Decimal Print, Single Precision

This subroutine permits the typeout of the contents of a computer word as a signed two's complement number. If bit 0 of the computer word is a 1, the remaining bits represent a negative integer in two's complement form; if bit 0 equals 0, the remaining bits represent a positive integer. If the number is negative, a minus sign is printed; if positive, a space.

#### Digital-8-24-U-SYM Unsigned Decimal Print, Double Precision

This subroutine permits the typeout of a double-precision integer stored in the usual convention for double-precision numbers (see DEC-08-FFAC-D or Programming Languages Handbook). The one exception is that all 24 bits are interpreted as magnitude bits (i.e., the bit 0 of the high-order word is not a sign bit). The typeout is in the form of a seven-digit, positive, decimal integer.

#### Digital-8-25-U-SYM Signed Decimal Print, Double Precision

This subroutine permits the typeout of the contents of two consecutive computer words as one signed, double-precision, two's complement number. If bit 0 of the high order word is a 1, the remaining 23 bits represent a negative integer in two's complement form; if bit 0 equals 0, the remaining bits represent a positive integer. If the number is negative, a minus sign is printed; if positive, space.

#### Digital-8-28-U-SYM Single Precision Decimal-to-Binary Conversion & Input (ASR-33) Signed or Unsigned

This routine accepts a string of up to four decimal digits (single precision for the PDP-12) from the Teletype keyboard and converts it to the corresponding two's complement binary number. The string may contain as legal characters a sign (+, -, or space) and the digits from 0-9. If the first legal character is not a sign, the conversion is unsigned.

#### Digital-8-29-U-SYM Double Precision Decimal-to-Binary Conversion & Input (ASR-33) Signed or Unsigned

This routine accepts a string of up to eight decimal digits (double-precision for the PDP-12) from the Teletype keyboard and converts it to the corresponding two's complement binary number. The string may contain as legal characters a sign (+, -, or space) and the digits 0-9. If the first legal character is not a sign, the conversion is unsigned.

## 7.3 DECUS PROGRAM

DECUS is the Digital Equipment Corporation Users' Society, which collects, files, and distributes user-written programs for all DEC computers. Below is a partial list of PDP-8 programs available through DECUS. More detailed lists are available in the periodic DECUS program catalog.

## **DECUS No. 5-5, EXPANDED ADDING MACHINE**

Expanded Adding Machine is a minimum-space version of Expensive Adding Machine (DEC 5-43-D) using a table lookup method including an error space facility.

This is a basic version to which additional control functions can easily be added. Optional vertical or horizontal format, optional storage of intermediate result with reentry, fixed-point output of results within reason, and other features that can be had in little additional space under switch register control. (Write-up and Listing Only)

#### DECUS NO. 5/8-9, ANALYSIS OF VARIANCE PDP-5/8

An analysis of variance program for the standard PDP-5/8 configuration.

The output consists of:

- A. For each sample:
  - 1. sample number
  - 2. sample size
  - 3. sample mean
  - 4. sample variance
  - 5. sample standard deviation
- B. The grand mean
- C. Analysis of Variance Table

This is the standard analysis of variance table that can be used with the F test to determine the significance, if any, of the differences between sample means. The output is also useful as a first description of the data.

All arithmetic calculations are carried out by the Floating Point Interpretive Package DEC-08-YQYB-D described in Programming Languages Handbook.

#### DECUS NO. 5/8-18a, BINARY TAPE DISASSEMBLY PROGRAM

Disassembles a PDP-8 program, which is on tape in BIN format. It prints the margin setting, address, octal contents, and mnemonic interpretation (PAL) of the octal contents. A normal program or a program which uses Floating Point may be disassembled.

#### DECUS NO. 5/8-20, REMOTE OPERATOR FORTRAN SYSTEM

Program modification and instructions to make the FORTRAN OTS version dated 2/12/65 operate from remote stations.

#### DECUS NO. 5/8-21, TRIPLE PRECISION ARITHMETIC PACKAGE

An arithmetic package to operate on 36-bit signed integers. The operations are add, subtract, multiply, divide, input conversion, and output conversion. The largest integer which may be represented is  $2^{35}$  -1 or 10 decimal digits. The routines simulate a 36-bit (3 word) accumulator in core locations 40,41, and 42, and a 36-bit multiplier quotient register in core locations 43, 44, and 45. Aside from the few locations in page 0, the routines use less core storage space than the equivalent double-precision routines.

#### DECUS NO. 5-25, A PSEUDO RANDOM NUMBER GENERATOR

The random number generator subroutine, when called repeatedly, will return a sequence of 12-bit numbers which, though deterministic, appears to be drawn from a random sequence uniform over the interval  $0000_8$  to  $7777_8$ . Successive numbers will be found to be statistically uncorrelated. The sequence will not repeat itself until it has been called over 4 billion times.

# DECUS NO. 8-26a, COMPRESSED BINARY LOADER (CBL)

The CBL (Compressed Binary Loader) format, in contrast to BIN format, utilizes all eight information channels of the tape, thus achieving nearly 25% in time savings.

Whereas BIN tapes include only one checksum at the end of the tape, CBL tapes are divided into many independent blocks, each of which includes its own checksum. Each block has an initial loading address for the block and a word count of the number of words to be loaded.

The CBL loader occupies locations 7700 through 7777.

#### DECUS NO. 8-26c, XCBL – EXTENDED MEMORY CBL LOADER

XCBL is used to load binary tapes punched in CBL format into any 4K memory field. This loader occupies locations 7670 through 7777 of any memory field.

#### DECUS NO. 8-26d, XCBL PUNCH PROGRAM

This program permits a user to prepare an XCBL tape of portions of extended memory through the control of the keyboard of the on-line Teletype.

# DECUS NO. 5/8-27a, BOOTSTRAP LOADER AND ABSOLUTE MEMORY CLEAR

Bootstrap Loader inserts a bootstrap loading program in page 0 from a minimum of toggled instructions.

Absolute Memory Clear leaves the machine in an absolutely clear state and, therefore, cycling around memory, obeying an AND instruction with location zero. Should not be used unless one plans to reinsert the loader program.

### DECUS NO. 5/8-28a, PAL III MODIFICATIONS-PHOENIX ASSEMBLER

This modification of the PAL III Assembler speeds up assembly on the ASR-33/35 and operates only with this I/O device. Operation is essentially the same as PAL III, except that an additional pass has been added, Pass 0. This pass starts in the usual manner but, with the switches set to zero, reads the symbolic tape into a core buffer area. Subsequent passes then read the tape image from storage instead of from the Teletype.

#### DECUS NO. 5/8-29, BCD TO BINARY CONVERSION SUBROUTINES

These two subroutines improve upon the DEC-supplied conversion routine.

#### DECUS NO. 5-30, GENPLOT – GENERAL PLOTTING SUBROUTINE

This self-contained subroutine is for the PDP-5 with a 4K memory and a CALCOMP incremental plotter. The subroutine can move (with the pen in the up position) to location (x,y), make an x at this location, draw a line from this present position to location (x,y), and initialize the program location counters.

#### DECUS NO. 5-31, FORPLOT – FORTRAN PLOTTING PROGRAM

FORPLOT is a general-purpose plotting program for use in conjunction with the CALCOMP 560 Plotter. It is self-contained and occupies memory locations 0000 to 4177. FORPLOT accepts decimal data inputted on paper tape in either fixed or floating point formats. Formats can be mixed at will. FORTRAN output tapes are acceptable directly, and any comments on these are filtered out.

#### DECUS NO. 5/8-32a, PROGRAM TO RELOCATE AND PACK PROGRAM IN BINARY FORMAT

Provides a means to shuffle machine language program around in memory to make the most efficient use of computer storage.

#### DECUS NO. 5/8-33, TAPE TO MEMORY COMPARATOR

Tape to Memory Comparator is a debugging program which allows comparison of the computer memory with a binary tape. It is particularly useful for detecting reader problems, or during stages of debugging a new program. Presently uses high-speed reader, but may be modified for TTY reader.

# DECUS NO. 5/8-35, BCD TO BINARY CONVERSION SUBROUTINE AND BINARY TO BCD SUBROUTINE (DOUBLE PRECISION)

This program consists of a pair of relatively simple and straightforward double-precision conversions.

### DECUS NO. 5/3-38, FTYPE - FRACTIONAL SIGNED DECIMAL TYPE-IN

Enables a user to type fractions of the form: .582. -.73, etc, which will be interpreted as sign plus 11 bits (e.g., 0.5  $\mu$  2000). Subroutine reads into 300-3177 and is easily relocated, as it will work on any page without modifications.

# DECUS NO. 5/8-39, DSDPRINT, DDTYPE – DOUBLE-PRECISION SIGNED DECIMAL INPUT-OUTPUT PACKAGE

DSDPRINT, when given a signed 24-bit integer, types a space or minus sign, and then a 7-digit decimal number in the range -8388608 to +8388607. DDTYPE enables user to type in a signed decimal number in either single or double precision. These routines are already separately available, but the present subroutine package occupies only one memory page and allows for more efficient memory allocation. Located in 3000-3177, but will work on any page.

# DECUS NO. 5/8-43, UNSIGNED OCTAL-DECIMAL FRACTION CONVERSION

This routine accepts a four-digit octal fraction in the accumulator and prints it out as an N-digit decimal fraction where N = 12 unless otherwise specified. After N digits, the fraction is truncated. Programs are included for use with the Extended Arithmetic Element.

Storage requirements: 55 Octal locations for the PDP-5, 47 Octal locations for the PDP-8.

# DECUS NO. 8-44, MODIFICATIONS TO THE FIXED POINT OUTPUT IN THE PDP-8 FLOATING POINT PACKAGE (DEC-08-YQYA-D)

The Floating Point Package (DEC-08-YQYA-D) includes an Output Controller which allows output in fixed point as well as floating point format. This Output Controller takes the form of a certain number of patches to the "Floating Output E Format" routine, plus an additional page of coding.

Certain deficiencies were noted in the fixed-point output format, particularly the lack of any automatic rounding off. For example, the number 9, if outputted as a single digit, appears as 8. Modification attempts to provide automatic rounding off resulted in the Output Controller being completely rewritten with minor changes in the format.

This new version of the Output Controller is also in the form of patches to the Floating Output with an additional page of coding, thereby not increasing the size of the Floating-Point Package.

The following summarizes this new version:

1. The number output is automatically rounded off to the last digit printed, or the sixth significant digit, whichever is reached first. Floating point output is rounded off to six figures, since the seventh is usually meaningless.

2. A number less than one is printed with a zero preceding the decimal point (e.g., +0.5 instead of +.5).

3. A zero result, after rounding off, is printed as +0 instead of +.

4. The basic Floating Point Package includes the facility to specify a carriage return/line feed after the number using location 55 as a flag for this purpose. The patches for the Output Controller caused this facility to be lost. This version restores this facility.

#### DECUS NO. 8-47, ALBIN – A PDP-8 LOADER FOR RELOCATABLE BINARY PROGRAMS

ALBIN is a simple method for constructing relocatable binary formatted programs, using the PAL III Assembler. Allocation of these programs can be varied in units of one memory page  $(128_{10} \text{ registers.})$ . When loading an ALBIN program, the actual absolute addresses of indicated program elements (e.g., the keypoint of subroutines) are noted down in fixed program-specified location on page zero. In order to make a DEC symbolic program suitable for translation into its relocatable binary equivalent, minor changes are required which, however, do not influence the length of the program. Due to its similarity to the standard DEC BIN loader, the ALBIN loader is also able to read-in normal DEC binary tapes. ALBIN requires  $122_{10}$  locations, RIM loader included. Piling-up in core memory of ALBIN programs stored on conventional or DECtape can be achieved using the same method with some modifications.

#### DECUS NO. 5/8-48, MODIFIED BINARY LOADER MKIV

The Mark IV loader was developed to accomplish four objectives:

- 1. Incorporate the self-starting format described in DECUS 5/8-27, ERC Boot.
- 2. Select the reader in use automatically, without switch register settings.
- 3. Enable a newly-prepared binary tape to be checked prior to loading by calculating the checksum.

4. Reduce the storage requirements for the loader so that a special program would fit on the last page of memory with it.

#### **DECUS NO. 8-49, RELATIVISTIC DYNAMICS**

Prints tables for relativistic particle collisions and decay in the same format as the Oxford Kinematic Tables. It can be used in two ways:

1. Two-particle Collisions – Given the masses of incident, target, and emitted particles, the incident energy, and center-of-mass angles, the program calculates angles and energies of the emitted particles in the Lab frame. If the process if forbidden energetically, program outputs E, allowing the threshold energy to be found.

2. Single Particle Decays – By specifying M2 = 0 (target), the problem will be treated as a decay, and tables similar to the above will be printed.

## DECUS NO. 5/8-50, ADDITIONS TO SYMBOLIC TAPE FORMAT GENERATOR (DEC-8-21-U)

Performs further useful functions by the addition of a few octal patches. By making the appropriate octal patches via the toggles, the Format Generator can also format FORTRAN tapes, shorten tape by converting space to tabs, and convert the type of tape.

A short binary tape may be made and added on to the end of 8-21-U to edit an original tape that was punched off-line.

The rubout character will cause successive deletion of the previous characters until the last C. R. is reached but not removed. The use of  $\leftarrow$  will cause the current line to be restarted. Thus an input tape may be prepared off-line without attention to format spacing, with mistakes corrected as they occur, and finally passed through the Format Generator to create a correctly formatted, edited, and line-fed on either rolled or fanfold paper tape.

#### DECUS NO. 5/8-51, CHARACTER PACKING AND UNPACKING ROUTINES

ASCII characters may be packed two to a word and recovered. Control characters are also packable but are preceded by a 37 before being packed into the buffer. The two programs total  $663_{10}$  registers.

The program occupies  $72_{10}$  registers.

## DECUS NO. 5/8-54, TIC-TAC-TOE LEARNING PROGRAM - T<sup>3</sup>

This program plays Tic-tac-toe, basing its moves on stored descriptions of previously lost games. The main program is written in FORTRAN. There is a short subroutine written in PAL II used to print out the Tic-tac-toe board. The program comes already educated with about 32 lost games stored. Requires FORTRAN Object Time System.

#### DECUS NO. 5/8-56, FIXED POINT TRACE NO. 1

A minimum size monitor program which executes the user's program one instruction at a time and reports the contents of the program counter, the octal instruction, the contents of the accumulator and link, and the contents of the effective address by means of the ASR-33 Teletype. Storage Requirements: two pages.

#### DECUS NO. 5/8-57, FIXED POINT TRACE NO. 2

Similar to Fixed Point No. 1, except that the symbolic tape provided has a single origin setting instruction of (6000). Any four consecutive memory pages can be used, with the exception of page zero, by changing this one instruction.

#### DECUS NO. 8-58, ONE-PAGE DECTAPE ROUTINE (522 CONTROL)

A general-purpose program for reading, writing, and searching of magnetic tape. This program was written for the Type 552 Control. It has many advantages over both of the standard DEC routines and also over the DECUS No. 5-46. The routines are one page long and can be operated with the interrupt on or off. The DEC program delays the calling program while waiting for the unit and movement delays to time out. This routine returns control to the calling program. This saves 1/4 second every time the tape searches forward, and half that time when it reverses. In addition, it will read and write block O,. This program is an advantage over the previous one-page routines in that it allows interrupt operations, doesn't overflow by one location, interrupts the end zone correctly and not as an error, and provides a calling sequence identical to the DEC program.

### DECUS NO. 8-60, SQUARE ROOT FUNCTION BY SUBTRACTION REDUCTION

A single precision square routine using EAE. This routine is usually faster than the DEC routine and can easily be modified for double precision calculation at only twice the computation time.

### DECUS NO. 8-61, IMPROVEMENT TO DIGITAL 8-9 F SQUARE ROOT

An improved version of the DEC Single Precision Square Root Routine (without EAE). Saves a few words of storage and execution is speeded up by 12 per cent.

#### DECUS NO. 8-62, HIGH-SPEED READER OPTION FOR FORTRAN COMPILER

Program modification that allows the PDP-8 FORTRAN Compiler to read source tapes through the high-speed reader, and punch on the ASR-33. The program is loaded in over the compiler. It can be punched on an extension of the compiler tape so that, by depressing the CONTINUE key, it can be read in immediately following the compiler.

#### DECUS NO. 8-65, A PROGRAMMED ASSOCIATIVE MULTICHANNEL ANALYZER

The program describes the use of a small computer as an associate analyzer with special reference to the PDP-8. The advantages and limitations of the method are discussed in the write-up, and general program algorithms are presented.

#### DECUS NO. 8-68 a LABEL for PDP-8, ALP PROGRAM

The ALP Program punches labels for paper tapes. When a key is stuck on the on-line Teletype keyboard, no echo is performed, but the computer outputs a few characters to the Teletype punch which form the outline of the character associated with the key.

The character outlines have a fixed width of 5 lines of tape, followed by 3 blank lines for separation between characters; all 8 columns of the paper tape are used to provide the maximum height of character outlines.

#### DECUS NO. 5/8-69, LESQ29 and LESQ11

The purpose of the program is to fit the best sequences of parabolas to a given 400-point parabola least squares fit to approximate a given data curve. Approximately 400 individual parabolas are computed.

#### DECUS NO. 8-70, EAE ROUTINES FOR FORTRAN OPERATING SYSTEM (DEC-08-CFA3)

These are two binary patches to the FORTRAN Operating System which utilizes the Type 182 EAE hardware for single precision multiplication and normalization, replacing the software routines in FOSSIL (the operating system). The binary tape is loaded by the BIN Loader after FOSSIL has been loaded. Execution time of a Gauss-Jordan matrix inversion is reduced by approximately 30%.

Other Programs Needed: FORTRAN Operating System (DEC-08-CFA3-PB), dated March 2, 1967.

#### DECUS NO. 8-72, MATRIX INVERSION – REAL NUMBERS

The program inverts a matrix, up to size  $12 \times 12$ , of real numbers. The algorithm used is the Gauss-Jordan method. A unit vector of appropriate size is generated internally at each stage. Following the Gauss sweepout, the matrix is shifted in storage, another unit vector is generated, and the calculation proceeds.

Other Programs Needed: FORTRAN Compiler and FORTRAN Operating System.

Storage: This program uses essentially all core not used by the FORTRAN Operating System.

Execution time: Actual computation takes less than 10 seconds. Data read-in and read-out may take up to five minutes.

#### DECUS NO. 8-73, MATRIX INVERSION - COMPLEX NUMBERS

The program inverts a matrix, up to size  $6 \times 6$ , of complex numbers. The algorithm used is the Gauss-Jordan method, programmed to carry out complex number calculations. A unit vector of appropriate size is generated internally. Following the Gauss sweep-out, the matrix is shifted, another unit vector is generated, and the calculation proceeds. The print-out of the matrices uses the symbol J to designate the imaginary part; e.g., A = a + jb.

Other Programs Needed: FORTRAN Compiler and FORTRAN Operating System.

Storage: This program uses essentially all core not used by the FORTRAN Operating System.

Execution Time: Actual computation takes less than 10 seconds. Data read-in and read-out may take up to five minutes.

# DECUS NO. 8-74, SOLUTION OF SYSTEM OF LINEAR EQUATION: AX = B, BY MATRIX INVERSION AND VECTOR MULTIPLICATIONS

This program solves the set of linear algebraic equations AX = B by inverting matrix A, using a Gauss-Jordan method. When the inverse matrix has been calculated, it is printed out. At that point, the program requests the B-vector entries. After read-in of the B-vector, the product is computed and printed out. The program then loops back to request another B-vector, allowing the system to solve many sets of B-vectors without the need to invert matrix A again. Maximum size is  $8 \times 8$ .

Other Programs Needed: FORTRAN Compiler and FORTRAN Operating System.

Storage: This program uses essentially all core not used by the FORTRAN Operating System.

Execution Time: Actual computation is less than 10 seconds. Data read-in and read-out may take up to five minutes.

## DECUS NO. 8-75, MATRIX MULTIPLICATION - INCLUDING CONFORMING RECTANGULAR MATRICES

This program multiplies two matrices, not necessarily square but which conform for multiplication.

Other Programs Needed: FORTRAN Complier and FORTRAN Operating System.

Storage: This program uses essentially all core not used by the FORTRAN Operating System.

Execution Time: Actual computation takes less than 10 seconds. Data read-in and read-out may take up to five minutes.

#### DECUS NO. 8-76, PDP NAVIG 2/2

This program utilizes the output of the U.S. Navy's AN/SRN-9 satellite navigation receiver to obtain fixes. This program except for some details of input and output, follows very closely NAVIG 2 written for the IBM 1620, which, in turn, is derived from the TRIDON program written at the Applied Physics Laboratory of Johns Hopkins University for the IBM 7090.

PDP NAVIG 2/2 is written in PAL III for 4096-core machine using the ASR-33. Floating point numbers using two 12-bit words as mantissa and one 12-bit word as exponent are employed. The accuracy is slightly less than that when using 7 decimal digits per word.

## DECUS NO. 8-77, PDP-8 DUAL PROCESS SYSTEM

The purpose of this system is to expedite the programming of multiprocessing problems on the PDP-8. It maximizes both the input speed and the portion of real time actually used for calculations by allowing the program to run during the intervals between issuing I/O commands and the raising of the device flag to signal completion of the command. The technique also allows queuing of input data or commands so that the user need not wait while his last line is being processed, and so that each line of input may be processed as fast as possible regardless of its length. The system uses the interrupt facilities, and has about 0.1% overhead on the PDP-8.

This method is especially useful for a slower machine where the problem may easily be calculation-limited, but would, without such a system, become I/O Bound.

The system requires 600<sub>8</sub> registers for two TTYs plus buffer space. Several device configurations are possible.

## DECUS NO. 8-78, DIAGNOSE: A VERSATILE TRACE ROUTINE FOR THE PDP-8 COMPUTER WITH EAE

This trace routine will track down logical errors in a program (the *sick* program). Starting at any convenient location in the *sick* program, instructions are executed, one at a time, and a record of all operations is printed out via the Teletype. To avoid tracing proven subroutines, an option is provided to omit subroutine tracing. The present routine is significantly more versatile than two other trace routines in the DECUS library (DECUS Nos. 8-56 and 8-57 – Biavati) for the PDP-8 in that it is able to trace *sick* programs containing floating-point, extended arithmetical, and a variety of input-output instructions. Diagnose is, however, at a disadvantage compared with

Biavati's routines in requiring more memory space than his first one (DECUS No. 8-56) (five pages as opposed to two) and in not possessing the trace-suppression features of his second one (DECUS No. 8-57). The mode of operation of Diagnose is quite different from that of the trace routines of Biavati.

Minimum Hardware: PDP-8 with EAE

Other Programs Needed: Floating Point Package needed for floating point tracing.

Storage: 5(4) pages of memory.

Miscellaneous: Program is relocatable.

### DECUS NO. 8-79, TAC-TAC-TOE (TRINITY COLLEGE VERSION)

This TIC-TAC-TOE game is programmed, using internal logic, so that the computer will either win or stalemate, but not lose a game. Either the player or the computer may choose to go first. At the termination of a game, the program restarts for the next game by typing anew the grid code to be followed.

#### DECUS NO. 8-80, DETERMINATION OF REAL EIGENVALUES OF A REAL MATRIX

This is a two-part program for determining the real eigenvalues of a real-valued matrix. The matrix does not have to be symmetric. Part I uses the power method of iterating on an eigenvector to determine the largest eigenvalue of the matrix. Part II then deflates the matrix using the results of part I so as to produce a matrix of order one less than that solved for in Part I. Part I can then be reloaded, and the next eigenvalue in line may be calculated. In this manner, all the real eigenvalues may be computed in order.

#### DECUS NO. 5/8-83A AND B, OCTAL DEBUGGING PACKAGE (WITH AND WITHOUT FLOATING POINT)

This program is an on-line debugger which will communicate with the operator through the ASR-33 Teletype. It allows register examination and modification, octal dumping, binary punching, multiple and simultaneous breakpoints, starting a program, and running at a particular location with preset AC link. ODP is completely relocatable at the beginning of all pages except page zero, and is compatible with the PDP-5, the PDP-8, and the PDP-8/S.

Requirements: The high version of ODP requires locations 7000-7577. The low version requires locations 0200-0777. All versions will require three pages. Also, location 0002 is used for a breakpoint pointer to ODP.

Equipment: The standard PDP-8 with ASR-33 Teletype is required. A highspeed punch is optional.

#### DECUS NO. 5/8-85, SET MEMORY EQUAL TO ANYTHING

This program will preset all locations to any desired settings. Thus, combining a memory clear, set memory equal to HALT, etc, into a single program. The program is loaded via the switch registers into core.

#### DECUS NO. 5/8-126, CUMULATIVE GAUSSIAN DISTRIBUTION CURVE FITTING

This is a curve fitting program that will take a set of any number of points with any spacing describing a cumulative Gaussian distribution and determine the mean and standard deviation by an iterative least squares differentialcorrection technique. The mean square error of the final fitted curve is also computed. The program is coded in PDP-8 FORTRAN.

#### DECUS NO. 8-133, FIRST ORDER KINETICS

First order kinetic processes are common in chemistry and in other areas. This program accepts up to 42 data points, calculates the rate constant and intercept by the method of least squares, and gives the rms deviation, the correlation coeffecient, and an estimate of the error in slope. It permits graphical (CRT) examination of deviations from the least squares line and iteration to a "best" infinity value. It also provides options for plotting the deviation between observed and calculated quantities on a CRT, and may be used in other cases in which one wishes to correlate the natural logarithm of one quantity with another, as in linear free energy relationships.

### DECUS NO. 8-134, LSQ: LEAST SQUARES SUBROUTINE

The subroutine calculates the slope and intercept for the equation  $y_j = mx_j + b$  by the method of least squares. It also returns the ms deviation of y, the correlation coefficient, and an estimate of the error in the slope. The calculated values of y and the differences between the given and calculated values are also available on return from the subroutine.

Other Programs Needed: FLOAT, floating point interpreter "C" – (DEC-08-YQ3B-PB)

## DECUS NO. 8-136, FOURIER TRANSFORM PROGRAM IN FORTRAN II

The program, written in PDP-8 FORTRAN II, performs the discrete Fourier Transform of a function defined over N(N < 200) evenly spaced points. I/O is via the ASR-33. The program requests the number of function points, then that number of function values, and then prints out the values of the sine and cosine components of the function at each defined harmonic. A conventional (not Cooley-Tukey) algorithm is used, since I/O time relative to computing time is significant.

## DECUS NO. 8-143, FFTS-R: FAST FOURIER TRANSFORM SUBROUTINE FOR REAL VALUED FUNCTIONS

This subroutine computes the Fast Fourier Transform (FFT) or its inverse of a data sequence which has been stored in core. It will accommodate up to 2048 time samples, and will transform that number in under 5 seconds.

Minimum Hardware: PDP-8, PDP-8/I, or PDP-12 with EAE

#### DECUS NO. 8-144, FFTS-C: FAST FOURIER TRANSFORM SUBROUTINE FOR COMPLEX DATA

FFTS-C enables computation of the Discrete Fourier Transformation in a minimum amount of time. By using the Cooley-Tukey algorithm, up to 1024 points may be transformed in only 4.5 seconds, introducing a reduction of 99 percent in computation time.

Minimum Hardware: PDP-8, PDP-8/I, or PDP-12

### DECUS NO. 8-192, TALC (TAYLOR'S ALGEBRAIC LINEAR CALCULATOR)

TALC is a general-purpose calculator designed to evaluate a general algebraic equation, given all quantities involved in the equation. In effect, TALC turns any of the family-of-eight computers into a powerful desk calculator capable of evaluating complex algebraic, trigonometric, and logarthmic functions. In addition, TALC utilizes the concept of "idiot-proofing" to virtually eliminate the possibility of an operator error invalidating the equation. Thus, TALC is easy to use and presents unlimited possibilities in any field where fast and accurate calculations are required.

Minimum Hardware: 4K PDP-8 or PDP-12 High-Speed Reader, DF32 Disk File, and ASR-33/35

#### **DECUS NO. 8-195, POLY BASIC**

POLY BASIC is a compiler and operating stand-alone system designed for the PDP-8 family. It has a total user program storage of 32K characters in which the disk is utilized. Some of the features of the compiler are:

a. It has all BASIC system commands.

b. It has all BASIC operations.

c. It contains all built-in functions except TAN.

d. Its accuracy is 1 part in 2<sup>23</sup> rather than 1 part in 2<sup>35</sup>, because of word size difference.

e. Maximum program size is 6144 characters as in regular (Dartmouth) BASIC.

f. Maximum usable statement number 4095 rather than 99999.

g. Maximum array space is 3600 characters, and maximum number of statements is 330; however, these can be traded off against one another at the rate of 25 array elements per statement.

h. There are no matrix operations.

i. The argument "EDIT resequence" is implemented, and the command "EDID" renumbers the user file from line number 100 in steps of 10.

j. There is a set of error messages to signal compilation errors and a set for execution errors.

Minimum Hardware: PDP-8 or PDP-12 with DECtape, DF32 Disk, RF08 Disk, or LINCtape

#### DECUS NO. 8-202, PLOT

PLOT will plot data points on a graph, calculate and plot a linear, least squares regression line, and print out the coefficient of correlation, the equation of the regression line, and other pertinent parameters.

Minimum Hardware: 4K PDP-8 or PDP-12 with a Houston Instrument Complet Plotter Model 6650, DP-1-1, or equivalent

## DECUS NO. 12-2, PDP-12 UTILITY AND DATA REDUCTION PROGRAMS

Contains a variety of programs written for the classic LINC or LINC-8 and modified to run in the PDP-12. Included are data reduction programs which perform autocorrelation, fourier analysis, power spectral analysis, and convolution. Utility programs allow selected blocks of LINCtape to be searched, compared, or typed out. Also included are programs which allow the user to convert LAP-4 or LAP-6 manuscripts into LAP6-DIAL or to disassemble binary code into LAP6 or LAP6-DIAL source. The current version of this tape contains binary and/or source for the programs listed below. Also listed are the original authors. Documents, but no listings, are available from DECUS.

FREOAN	SIMONS
AUTOCOR	HANCE
QAFILTER	GLAESER
FFOURIER	BRYAN
FFSAMPLE	BRYAN
DATAM	HANCE
FRQANA	ENGEBRETSON
TAPEDUMP	LANAHAN
SEARCH	STEIN
COMPAR	DAVISSON
COMPARE	NICHOLS
LAP4-6	BJERKE
BINLAP6	BJERKE
L8SIM0	LANGBEIN
LAP4Q+A	McDONALD
DSCTABLE	OVERTON
PARAMS	NICHOLS
DIVSUB	STEIN
SPFLT	DILL
QIKDIV	HANCE
RANDOM	LEWIS
NU INDEX	CLAYTON

## DECUS NO. 12-3, 8K OPERATING SYSTEM

This modification of DECUS NO. L-80 adapts it to run on the PDP-12.

#### DECUS NO. 8-203, ALPHA

ALPHA is used for titling graphs on the plotter. It can be used in conjunction with DECUS NO. 8-202.

Minimum Hardware: 4K PDP-8 with a Houston Instrument Complot Plotter Model 6650, DP-1-1, or equivalent

Storage Requirement: 2, 10, 11, 12, 20-167, 200-3654, 4000-777 is reserved for storage.

Restriction: When used in conjunction with PLOT (DECUS No. 8-202), extended memory is required.

## DECUS NO. FOCAL-14, LEAST SQUARES FIT TO A STRAIGHT LINE

This is a program using the principle of least squares to fit a straight line to a set of up to 35 experimental data points.

The program requires one pass of the data. At the end of the pass the output gives the values of the slope and the intercept of the straight line equation. In addition, the calculated values of the experimental data based on the straight line equation are pointed out. Finally, the program gives the value of R which is a criterion of fitness of equation to the input data.

#### DECUS NO. FOCAL-15, LEAST SQUARES FIT TO A CUBIC POLYNOMIAL

This is a program using the method of least squares to fit a cubic polynomial to a set of experimental data. The program demands two passes of the data for its completion; however, the coefficients of the polynomial are outputted after the first pass, and, at the end of the second pass, the output gives the value of R which is a criterion of fitness and gives the calculated values of the experimental data based on the cubic polynomial.

In addition, a section of the program can be used as a self-contained program for solution of a set of N by N linear equations.

# DECUS NO. FOCAL-16, ONE-SAMPLE STATISTICS, TWO-SAMPLE STATISTICS, WELCH PROCEDURE; ONE-WAY ANALYSIS OF VARIANCE; SHEFFE'S CONTRAST BETWEEN MEANS

A three part program used to perform one-sample and two-sample statistics, Welch Procedure; One-way Analysis of Variance: and Sheffe's Contrast Between Means, which allows one to investigate more thoroughly the source of the difference between group means.

### DECUS NO. FOCAL-17, FOCAL: HOW TO WRITE NEW SUBROUTINES AND USE INTERNAL ROUTINES

The aim of this document is to help the user to code specific routines in FOCAL so that his dialect of FOCAL can be applied to his application (without being forced to understand in detail all the working of FOCAL). In this way, perhaps, each user can make his particular dialect of FOCAL "perfect".

It is assumed that the reader has a basic knowledge of PDP-8 processor instructions and PAL mnemonics, as well as a familiarity with the Floating Point Package. In addition, he should be familiar with the FOCAL language.

This document is an attempt to explain how user-developed software can be interfaced with the basic FOCAL package, without requiring the user to spend valuable time trying to understand all of its detailed workings. Section II deals with a general description of how FOCAL works. Section III is concerned with the philosophy of the language; and the last few sections are technically oriented toward helping the user actually code his additions. Several examples and ready-coded routines which may be used to simplify the user's problems are included.

### DECUS NO. FOCAL-25, PAYROLL CALCULATIONS (CALIFORNIA, 1968)

This routine is used to calculate payrolls. It is based on the California State Unemployment Insurance rate, FICA rate, and withholding tax.

This program could be modified easily to fit the rules of any particular state. If some of the pay ranges would not be used, they could be omitted from the two tables, making more room for other routines, such as providing running totals on gross pay, deductions, and net pay.

## **DECUS NO. FOCAL-26, CURVE FITTING**

This program finds the best curve of a set of points. There are three types of curves involved:

Exponential Curve  $Y = Ae^{BX}$ 

The variables solved for are A and B. The function is reduced to linear form by logarithms: LOG Y = BX + LOG A. A table of values is formed and solved simultaneously to get the values of A and B.

Power Curve  $Y = AX^N$ 

This function is reduced to linear form: LOG Y = N LOG X + LOG A. Once a table of values is made, it is solved simultaneously for A and N.

Linear Line Y = MX + B

A table is made and solved simultaneously for the value of M and B.

## DECUS NO. FOCAL-33, SQUARE MATRIX MULTIPLY

The arduous task of multiplying two square matrices is quickly done by this FOCAL Matrix Multiplication routine. The user inputs "N", indicating the number of rows and columns each matrix will have. The computer then requests input of the elements of the two matrices. The result of the multiplication is typed out in an understandable matrix-like format.

Notable characteristics of this program are:

a. It is expressed in only five lines of FOCAL script so that it loads quickly.

b. It will process matrices of varying dimensions. Size of each matrix is limited only by memory capacity. (In 4K FOCAL the limit is about 6 rows and columns.)

c. Because it inputs and outputs the matrix values in a matrix-like format, input transcription errors are less likely to occur.

# DECUS NO. FOCAL-37, Nth DEGREE POLYNOMIAL DATA POINT FITTING ROUTINE, Nth DEGREE POLYNOMIAL DATA POINT FITTING ROUTINE WITH RMS ERROR

a. Nth Degree Polynomial Data Point Fitting Routine – This program accepts the x- and y-coordinates for an unlimited number of data points and calculates for the equation

 $Y = A_0 + A_1 X + A_2 X^2 + \ldots + A_N X^N$ ,

the coefficients  $A_N$  which best fit the equation to the data points. The fitting criterion is "least squares". The program allows the user to select the degree, N, of the fitting equation. N may be as large as 7.

b. Nth Degree Polynomial Data Point Fitting Routine with RMS Error – This program is the same as Nth Degree Polynomial Fitting Routine except that it calculates the RMS error between the y-coordinates of the data points and the evaluated fitting equation. It will accept only a limited number of data points and the maximum equation degree allowed is inversely related to this number.

#### DECUS NO. FOCAL-40, SIMPLE CHI-SQUARE TEST

The program will type out the data matrix and cell contents. Each cell will contain two values, 0 = xxx.xxx and E = xxx.xxx. The "O=" number is the "OBSERVED" value which was typed in by the user. The "E=" value is the

expected value calculated by the program. The program will also type out row sums (RS=) and column sums (CS=), and the grand total (T=). The last line of output will be "X2=" and "DF=". These are the CHI-SQUARE and degrees of freedom.

#### DECUS NO. L-11, DATUM8

DATUM8 is a revision of an addition to DATAM by James Hance contained in the general library supplied with the LINC-8 computer. This program has retained all the features of DATAM. Some of the original routines have been changed in order to eliminate undesired features. In addition, DATUM8 has the ability to multiply, subtract, and display the data with two cursors. The data not included between the cursors can be suppressed, allowing, for instance, integration between definite limits. The program has been recoded to facilitate future modifications.

Minimum Hardware: LINC (2K) or LINC-8

#### DECUS NO. L-60, FORTRAN WITH LINCTAPE

The system adapts 4K PDP-8 FORTRAN to make use of the magnetic tape facility of the basic LINC-8 computer. FORTRAN programs can be called from the left-hand tape (unit 0) by statements in the FORTRAN program in the core; data can be stored and recalled by WRITE and READ statements, using the right-hand tape (unit 1).

The programs may be called in any order, and may be read in at less than full length in order to leave data in core. Data can be transferred to and from tape in blocks of any length which may be chosen to correspond with program variables. Incorporation of the program-calling facility does not involve any sacrifice of core space for program or data; use of the data transfer facilities uses from half to one page of core.

The system includes a modified, improved version of SYMBOL PRINT, increases the maximum length of the statement number tables, and corrects some errors in the compiler.

Other Programs Needed: PDP-8 FORTRAN System (DEC-08-AFCO)

Source Language: PAL III

#### DECUS NO. L-80 AND 12-3, 8K OPERATING SYSTEM

The 8K Operating System was developed at the University of Michigan (Cooley Electronics Lab). It is a two-tape-resident operating system for the LINC-8 with a special 33ASR reader modification. It allows a user to enter and edit programs from the Teletype keyboard, store them in files on magnetic tape, assemble or compile these files into PDP-8 machine language, and run the resulting program. These operations are done entirely from the Teletype keyboard without the use of paper tapes or manipulation of the switches. One of the language translators is the DEC 8-K FORTRAN system (February 1969 version).

The 8K Operating System consists of 3 system components: a filing system, a system of loaders for running programs, and a command language interpreter. A file is a collection of information (which the user generates) in machine-readable form; for example, it may be the set of characters comprising a FORTRAN program. Using the filing system, the user may name this set of characters and store it on magnetic tape. To use the file containing the program (for example, in a FORTRAN compilation) the user need only refer to the file name and the system will handle all bookkeeping necessary to communicate the file to the FORTRAN compiler. A user may change the contents of files, destroy files, and copy files from other users' tapes. The assembler processes both LINC mode and PDP-8 mode statements, assembling programs up to 8K in length. Six character alphanumeric symbols can be defined; source listings, assembly listings, or abbreviated assembly listings may be (optionally) obtained on the Teletype or, if present, the Line Printer. To facilitate the preparation of system programs and/or large programs,

conditional assembly pseudo ops are provided, along with a facility to preserve the tag table definitions from one assembly to another, or to several others.

Upon loading, programs may be started automatically in either LINC or PDP-8 mode at any memory location permanent file by means of a "SAVE" command.

The loading system contains two separate loaders, the absolute loader and the relocating loader. These loaders do not load programs directly into core memory, but rather into a core memory image kept on magnetic tape. (This intermediate step is necessary because of core space limitations and the flexibility desired of the loaders.) Both loaders take their binary (and core image) input from the system files; both include provisions for changing and viewing the contents of various core image locations.

The absolute loader operates on the binary output of either the MACRO-8 of PAL-III assemblers to produce a core image. It is capable of merging an extant core image into the core image it is building. It will also page-relocate binary input information to be within a different memory page from that for which it was assembled.

The relocating loader operates on FORTRAN compiler and SABR assembler output. It is the final part of the 3-part FORTRAN/SABR/Relocating Loader package, which allows the programmer to write programs for the PDP-8 disregarding the memory addressing structure of the machine. After the loading process is complete, the core image file containing the program is available to the user in -B, and may be saved or run immediately using the "RUN" command.

The "RUN" command software is also part of the loading system. It allows execution of a program contained in a core image file.

#### 7.4 DIAGNOSTIC PROGRAMS

#### PDP-12 PROCESSOR TESTS

## Maindec-12-DOAB Tests SKIPs and data handling (LINC mode).

These diagnostics test the LINC mode processor and memory control instructions.

## PDP-12 TAPE CONTROL TESTS (TC12)

## Maindec-12-D3AC Tests tape control logic and interregister transfers.

These diagnostics make use of the TC12 maintenance instructions to thoroughly test the tape control. After all static tests are performed, data transfers and dynamic characteristics are tested.

## PDP-12 DISPLAY TEST (VR12)

## Maindec-12-D6BA Tests display system using DIS and DSC instructions.

The diagnostic tests both the VC12 CRT display control and the VR12 CRT display oscilloscope.

## PDP-12 REAL-TIME INTERFACE TEST (KW12)

#### Maindec-12-D8CB

This diagnostic thoroughly tests the KW12-A Real-Time Interface.

#### PDP-12 A-D TEST (AD12)

## Maindec-12-D6CB-Tests A-D converter and calibration.

This test verifies the logic of the AD12 and allows checking and alignment of all 32 channels of the A-D converter.

#### Maindec-08-D03A-D Basic JMS and JMP Test

This is a diagnostic program for testing the JMP and JMS instructions of the PDP-8/I.

## Maindec-08-D04B-D Random JMP Test

This program tests the JMP instruction of the PDP-12. Most of memory is used as a JUMP field with a random number generator selecting each JUMP FROM and JUMP TO location.

#### Maindec-08-D05B-D Random JMP-JMS Test

This program tests the JMS instruction of the PDP-12. Random FROM and TO addresses are selected for each test. The JMP instruction is tested in that each test requires a JMP to reach JMS.

#### Maindec-08-D07B-D Random ISZ Test

This program tests the ISZ instruction of the PDP-12. An ISZ instruction is placed in a FROM location, and a TO location contains the OPERAND. Part 1 of the program selects FROM, TO, and OPERAND from a random number generator, with the option of holding any or all constant. Part 2 uses fixed set of FROM, TO, and OPERAND numbers.

#### Maindec-08-D0AA-D Instruction Test (EAE) Part 3A

This program tests the Extended Arithmetic Element Type KE12. The following instructions are tested: MQL, MQA, SHL, LSR, ASR, NMI, SCA. An attempt is made to detect and isolate errors to their most basic faults and to the minimum number of logic cards. Multiply and divide are tested by Maindec-08-D0BA-D.

#### Maindec-08-D0BA-D Instruction Test (EAE) Part 3B

Divide overflow detection hardware and divide and multiply hardware are tested by using a pseudo random-number generator to produce the parameters for each test. A software simulated divide and multiply are used to test the results of the hardware divide and multiply.

#### Maindec-08-D1AC-D Memory Power On/Off Test

This program is a Memory Data Validity Test to be used after a simulated power failure.

## Maindec-08-D1L1-D Memory Checkerboard Test Low Maindec-08-D1L2-D Memory Checkerboard Test High

Tests memory for core failure on half-selected lines under the worst possible conditions for reading and writing. It is used primarily for testing the operation of memory at marginal voltages.

#### Maindec-08-D1CA-D Extended Memory Control Part 1

This program exercises and tests Extended Memory instructions CDF, CIF, RDF, RIF, RMF, and RIB, for proper operation. Basically, this program tests the control section of the memory. Data is tested by tests Maindec-08-D1L1-D, Maindec-08-D1L2-D and Maindec-08-D1DA-D.

#### Maindec-08-D1DA-D Extended Memory Checkerboard Part 2

This preliminary program tests for core memory failures on half-selected lines under worst-case conditions of reading and writing. It is used to test memory module X while running the program in memory module Y.

#### Maindec-08-D2PE-D Teletype Reader Test

This program tests performance of the Teletype Model 33 Perforated Tape Reader, using the reader to scan a closed-top test page punched with alternating groups of character codes 000 to 377. Each character is tested for

bits dropped or gained while reading; each group of characters is checked for characters missed entirely or read more than once.

#### Maindec-08-D2BA-D Exerciser for the Teletype Paper-Tape Reader

This exerciser program tests for the Teletype Paper-Tape Reader. Test tapes are read in a random start-stop fashion and errors are reported on the Teletype printer.

#### Maindec-08-D2CA-D Teletype Punch Test

This program punches a test tape in a predetermined pattern. The tape passes directly from the Teletype punch to the Teletype reader, which checks the pattern for accuracy.

#### Maindec-08-D2DA-D Teleprinter Test

This program tests the Teleprinter performance of the Teletype 33 Keyboard Printer. There are two parts to the test, selectable by the operator. The first part tests keyboard input by immediately causing the character typed to be printed for comparison. The second part tests continuous operation of the teleprinter by causing a line consisting of the ASCII character set to be repeatedly printed. The latter also tests for correct functioning of the interrupt after a character has been printed.

#### Maindec-08-D2GF-D High Speed Reader Test

This program tests performance of the Type 750 High-Speed Perforated-Tape Reader and control by scanning a closed-loop tape for transmission accuracy. The reader control is tested for correct operation with the PDP-8 interrupt system.

#### Maindec-08-D2FA-D High Speed Reader Test (PR12)

This is a diagnostic program for the Digitronics 2500, the PR12, and the PR8/I High-Speed Paper-Tape Readers. The program is divided into three parts. The first is a test tape generator that punches test tapes for parts two and three on the high-speed punch. Part two is a series of specific tests with module isolation provided for error situations. Part three reads a preselected tape pattern with the choice of random or fixed block lengths and stalls between blocks.

#### Maindec-08-D2GA-D High Speed Punch Test

This program consists of two separate tests. The first causes the PP12 and PP8/I High-Speed Paper-Tape Punch to produce a tape containing a sequence of pseudo-random character codes. This tape is checked for accuracy, using either the high-speed reader or the Teletype reader.

In the second test, the character code represented by the setting  $SR_{4-11}$  is punched repeatedly. The switch setting may be changed while the test is running.

#### Maindec-08-D6CB-D Calcomp Plotter Test

This program tests the CALCOMP or HOUSTON Plotters and their control. All control and plotting functions are tested.

#### PDP-12 JMP SELF MAINDEC-12-D1BA-D

This program tests the ability of the read/write gates to switch rapidly between read and write.

## PDP-12 Instruction Test 1 MAINDEC-12-D0BA

This program tests for the basic overall test of most of the LINC mode instructions.

### PDP-12 Address Test (R/W Gate) MAINDEC-12-D1CA

This program tests the ability of the R/W gates to rapidly change addresses. It generates two random addresses, loads these addresses with jumps to each other, and allows the jump sequence to continue until interrupted.

## PDP-12 Memory Data Test (Float 1s and 0s) MAINDEC-12-D1EB

This program floats a single one then a single zero through all of memory to evaluate data handling.

## PDP-12 Memory Checkerboard MAINDEC-12-D1DA

Tests memory for core failure on half-select lines under the worst possible conditions for reading and writing. It is used primarily for testing the operation of memory.

## APPENDIX A LINC MODE INSTRUCTIONS

The following table lists all LINC mode instructions and their mnemonics, octal codes, and execution times. Full instruction descriptions are in Chapter 3.

Mnemonic	Function	Octal	Time (µs)
	ADD	- R <sub>k</sub> , <u>-</u> ,	
ADD	Add memory to AC (full address)	2000	3.2*
ADA	Add memory to AC (index class)	1100	3.2*
ADM	Add AC to memory (sum also in AC)	1140	3.2*
LAM	Add link and AC to memory (sum also in AC)	1200	3.2*
	MULTIPLY		
MUL	Signed multiply	1240	9*
	LOAD		
LDA	Load AC, full register	1000	3.2*
LDH	Load AC, half register	1300	3.2*
	STORE (sum also in AC)		
STC	Store and clear AC (full address)	4000	3.2
STA	Store AC (index class)	1040	3.2*
STH	Store half AC	1340	3.2*
	SHIFT/ROTATE	·	
ROL N	Rotate left N places	0240	1.6-6.4
ROR N	Rotate right N places	0300	1.6-6.4
SCR N	Scale right N places	0340	1.6-6.4

Table A-1. LINC Mode Instructions

\* See Note at end of table.

Mnemonic	Function	Octal	Time (µs)
	OPERATE		
HLT	Halt	0000	1.6
NOP	No operation	0016	1.6
CLR	Clear AC and LINC	0011	1.6
SET	Set register N to contents or register Y	0040	4.8
JMP	Jump to register Y	6000	1.6*
DJR	Disable JMP return save	0006	1.6
ESF	Enable Special Function	0004	1.6
SFA	Special Function to AC	0024	1.6
QAC	MQ transfer to AC	0005	1.6
	LOGICAL OPERATIONS		
BCL	Bit clear (any combination of 12-bits)	1540	3.2*
BSE	Bit set (any combination of 12-bits)	1600	3.2*
BCO	Bit complement (any combination of	1640	3.2*
COM	12 bits) Complement AC	0017	1.6
	SKIP		
	Skip next instruction if:		
SAE	AC equals memory register Y	1440	3.2*
SHD	Right half AC unequal to specified half	1400	3.2*
	of memory register Y		
SNS N	SENSE switch N is set	0440+N	1.6
SKP	Unconditional skip	0456	1.6
AZE	AC equals 0000 or 7777	0450	1.6
APO	AC contains positive number	0451	1.6
LZE	Link bit equals 0	0452	1.6
IBZ	Between blocks on LINC tape	0453	1.6
FLO	Add overflow is set	0454	1.6
QLZ	MQ low-order bit zero	0455	1.6
SXL N	External level N is low	0400+N	1.6
KST	Keyboard has been struck	0415	1.6
SRO	Rotate memory register right one place;	1500	3.2*
5110	then if bit 0 of Y equals 0, skip next	1000	
32012	instruction	0000	
XSK	Index memory register Y, skip when contents of Y equal 1777	0200	3.2
	INPUT/OUTPUT		с. 1971 г.
ATR	AC to relay buffer	0014	1.6
RTA	Relay buffer to AC	0015	1.6-18
SAM N	Sample analog chan N	0100+N	1.6**
DIS	Display point on oscilloscope	0140	3.2-23

 Table A-1. LINC Mode Instructions (cont)

\*\*See Note at end of table.

Mnemonic	Function	Octal	Time (µs)	
DSC	Display character on oscilloscope (2 x 6 matrix)	1740	4.8-56**	
RSW	RIGHT SWITCH register to AC	0516	1.6	
LSW	LEFT SWITCH register to AC	0517	1.6	
IOB	Execute input/output control through IO Bus	0500	5.9	
LINC	8 Mode to LINC Mode MEMORY	6141	4.25	
LIF	Load instruction field buffer with N	0600	1.6	
LDF	Load data field register with N	0640	1.6	
IOB		0500		
RIF	Read instruction field	6224	5.9	
IOB		0500		
RDF	Read data field	6214	5.9	
IOB		0500		
RIB	Read interrupt buffer (Save Field)	6234	5.9	
IOB		0500		
RMF	Restore memory fields	6244	5.9	
	LINC TAPE			
RDE	Read one block into memory	0702	3.2**	
RDC	Read and check one block	0700	3.2**	
RCG	Read and check N consecutive	0701	3.2**	
WRI	Write one block on tape	0706	3.2**	
WRC	Write and check one block	0704	3.2**	
WCG	Write and check N blocks	0705	3.2**	
СНК	Check one block of tape	0707	3.2**	
MTB	Move tape toward selected block	0703	3.2**	
AXO	AC to Tape Extended Operations Buffer	0001	1.6	
XOA	Extended Operations Buffer to AC	0021	1.6	
TMA	AC to TMA setup register	0023	1.6	
STD	Skip if tape idle	0416	1.6	
TWC	Skip if tape word complete	0417	1.6	

## Table A-1. LINC Mode Instructions (cont)

\*Indicates both direct and indirect addressing; add 1.6 µsec when indirect addressing is used.

\*\*Indicates additional time dependent on I/O device such as tape (Chapter 3 LINC Mode Instructions.)

## APPENDIX B 8-MODE INSTRUCTIONS

		Direc	Direct Addr.		et Addr.	
Mne- monic Symbol	Opera- tion Code	States En- tered	Execu- tion Time (μs)	States En- tered	Execu- tion Time (µs)	Operation
, AND Y	0000	F,E	3.2	F,D,E	4.8	Logical AND. The AND ope- ration is performed between the contents of memory location Y and the contents of the AC. The result is left in the AC, the ori- ginal contents of the AC are lost, and the contents of Y are re- stored. Corresponding bits of the AC and Y are operated upon independently. AC <sub>j</sub> $\land$ Y <sub>j</sub> $\rightarrow$ AC <sub>j</sub>
TAD Y	1000	F,E	3.2	F,D,E	4.8	Two's complement add. The con- tents of memory location Y are added to the contents of the AC in two's complement arithmetic. The result of this addition is held in the AC, the original contents of the AC are lost, and the con- tents of Y are restored. If there is a carry from $AC_0$ , the link is complemented. $AC + Y \rightarrow AC$

Table B-1. 8-Mode Memory Reference Instructions

		Direct	Addr.	Direct Addr. Indirect Addr.		
Mne- monic Symbol	Opera- tion Code	States En- tered	Execu- tion Time (μs)	States En- tered	Execu- tion Time (μs)	Operation
ISZ Y	2000	F,E	3.2	F,D,E	4.8	Increment and skip if zero. The contents of memory location Y are incremented by one. If the resultant contents of Y equal zero, the contents of the PC are incremented and the next in struction is skipped. If the re- sultant contents of Y do not equal zero, the program proceed to the next instruction. The in- cremented contents of Y are re- stored to memory. If resultant Y = 0, PC + 1 $\rightarrow$ PC.
DCA	3000	F,E	3.2	F,D,E	4.8	Deposit and clear AC. The contents of the AC are deposited if core memory at address Y and the AC is cleared. The previous contents of memory location Y are lost. $AC \rightarrow Y$ $0 \rightarrow AC$
JMS Y	4000	F,E	3.2	F,D,E	4.8	Jump to subroutine. The corr tents of the PC are deposited is core memory location Y and the next instruction is taken from core memory location $Y + 1$ . PC + 1 $\rightarrow$ Y Y + 1 $\rightarrow$ PC
ЈМР Ү		F	1.6	F,D	3.2	Jump to Y. Address Y is set int the PC so that the next instruc- tion is taken from core memor- address Y. The original content of the PC are lost. $Y \rightarrow PC$

Table B-1.	8-Mode	Memory	Reference	Instructions	(cont)

Mnemonic Symbol	Octal Code	Sequence	Operation
NOP	7000		No operation. Causes a 1.6 $\mu$ s program delay.
IAC	7001	3	Increment AC. The contents of the AC are incremented by one in two's complement arithmetic.
RAL	7004	4	Rotate AC and L left. The contents of the AC and the L are rotated left one place.
RTL	7006	4	Rotate two places to the left. Equivalent to two successive RAI operations.
RAR	7010	4	Rotate AC and L right. The contents of the AC and L ar rotated right one place.
RTR	7012	4	Rotate two places to the right. Equivalent to two successive RAR operations.
CML	7020	2	Complement L.
СМА	7040	2	Complement AC. The contents of the AC are set to the one' complement of its current contents.
CIA	7041	2,3	Complement and increment accumulator. Used to form two' complement number.
CLL	7100	1	Clear L. The L is cleared to contain a binary zero.
CLL RAL	7104	1,4	Shift positive number one left.
CLL RTL	7106	1,4	Clear Link, rotate two left.
CLL RAR	7110	1,4	Shift positive number one right.
CLL RTR	7112	1,4	Clear Link, rotate two right.
STL	7120	1,2	Set Link, the L is set to contain a binary one.
CLA	7200	1	Clear AC. To be used alone or in OPR 1 combinations.
CLA IAC	7201	1,3	Set $AC = 1$ .
GLK	7204	1,4	Get link, Transfer L into $AC_{11}$ .
CLA CLL	7300	1	Clear AC and L.
STA	7240	2	Set $AC = -1$ . Each bit of the AC is set to contain a binary one

Table B-2. 8 Mode Group 1 Operate Microinstructions

Table B-3. 8 Mode Group 2 Operate Microinstructions

Mnemonic Symbol	Octal Code	Sequence	Operation
HLT	7402	3	Halt. Stops the program after completion of the cycle in process. If this instruction is combined with others in the OPI 2 group, the other operations are completed before the end o the cycle.
OSR	7404	3	OR with Right Switch register. The OR function is performe between the contents of the RSW and the contents of the AC with the result left in the AC.
SKP	7410	1	Skip, unconditional. The next instruction is skipped.
SNL	7420	1	Skip if $L \neq 0$ .
SZL	7430	1	Skip if $L = 0$ .
SZA	7440	1	Skip if $AC = 0$ .
SNA	7450	1	Skip if $AC \neq 0$ .

Mnemonic Symbol	Octal Sequence Code		Sequence			Sequence	Operation
SZA SNL	7460	1	Skip if $AC = 0$ , or $L = 1$ , or both.				
SNA SZL	7470	1	Skip if $AC \neq 0$ and $L = 0$ .				
SMA	7500	1	Skip on minus AC. If the AC contains a negative number, the next instruction is skipped.				
SPA	7510	1	Skip on positive AC. If the AC contains a positive number, the next instruction is skipped.				
SMA SNL	7520	1	Skip if $AC < 0$ , or $L = 1$ , or both.				
SPA SZL	7530	1	Skip if $AC \ge 0$ and if $L = 0$ .				
SMA SZA	7540	1	Skip if $AC \leq 0$ .				
SPA SNA	7550	1	Skip if $AC \ge 0$ .				
CLA	7600	2	Clear AC. To be used alone or in OPR 2 combinations.				
LAS	7604	2,3	Load AC with SR.				
SZA CLA	7640	1,2	Skip if $AC = 0$ , then clear AC.				
SNA CLA	7650	1,2	Skip if $AC \neq 0$ , then clear AC.				
SMA CLA	7700	1,2	Skip if $AC < 0$ , then clear AC.				
SPA CLA	7710	1,2	Skip if $AC > 0$ , then clear AC.				

Table B-3. 8 Mode Group 2 Operate Microinstructions (cont)

 Table
 B-4. 8 Mode Extended Arithmetic Element Microinstructions

Mnemonic Symbol	Octal Code	Sequence	Operation
MUY	7405	3	Multiply. The number held in the MQ is multiplied by the number held in core memory location PC + 1 (or the next successive core memory location after the MUY Command). At the conclusion of this instruction the most significant 12 bits of the product are contained in the AC and the least significant 12 bits of the product are contained in the MQ. Y x MQ $\rightarrow$ AC,MQ
DVI	7407	3	Divide. The 24-bit dividend held in the AC (most significant 12 bits) and the MQ (least significant 12 bits) is divided by the number held in core memory location PC + 1 (or the next successive core memory location following the DVI instruction). At the conclusion of this instruction the quotient is held in the MQ, the remainder is in the AC, and the L contains a 0. If the L contains a 1, divide overflow occured so the operation was concluded after the first cycle of the division. AC,MQ $\div Y \rightarrow MQ$ .
NMI	7411	3	Normalize. This instruction is used as part of the conversion of a binary number to a fraction and its exponent for use in floating-point arithmetic. The combined contents of the AC and the MQ are shifted left by this one instruction until the content of $AC_0$ is not equal to the content of $AC_1$ , thus forming the fraction. Zeros are shifted into vacated $MQ_{11}$ positions for each shift.

Mnemonic Symbol	Octal Code	Sequence	Operation
			At the conclusion of this operation, the step counter contains number equal to the number of shifts performed. The content of L is lost. $AC_j \rightarrow AC_{j-1}$ $AC_0 \rightarrow L$ $MQ_0 \rightarrow AC_{11}$ $MQ_j \rightarrow MQ_{j-1}$ $0 \rightarrow MQ_{11}$ until $AC_0 \neq AC_1$
SHL	7413	3	Shift left. This instruction shifts the combined contents of th AC and MQ to the left one position more than the number of positions indicated by the contents of the core memory and address PC + 1 (or the next successive core memory location following the SHL instruction). During the shifting, zeros ar shifted into vacated MQ <sub>11</sub> positions. Shift Y + 1 positions a follows: $AC_j \rightarrow AC_{j-1}$ $AC_0 \rightarrow L$ $MQ_0 \rightarrow AC_{11}$ $MQ_j \rightarrow MQ_{j-1}$ $0 \rightarrow MQ_{11}$
ASR	7415	3	Arithmetic shift right. The combined contents of the AC and the MQ are shifted right one position more than the numbe contained in memory location PC + 1 (or the next successiv core memory location following the ASR instruction). The sign bit, contained in AC <sub>0</sub> , enters vacated positions, the sign bit i preserved, information shifted out of MQ <sub>11</sub> is lost, and the L i undisturbed during this operation. Shift Y + 1 positions a follows: AC <sub>0</sub> $\rightarrow$ AC <sub>0</sub> AC <sub>j</sub> $\rightarrow$ AC <sub>j</sub> + 1 AC <sub>11</sub> $\rightarrow$ MQ <sub>0</sub> MQ <sub>j</sub> $\rightarrow$ MQ <sub>j</sub> + 1
LSR	7417	3	$MQ_j \rightarrow MQ_j + 1$ Logical shift right. The combined contents of the AC and MC are shifted right one position more than the number contained in memory location PC + 1 (or the next successive core memory location following the LSR instruction). This instruction is similar to the ASR instruction except that zeros enter vacated positions instead of the sign bit. Information shifted out of $MQ_{11}$ is lost and the L is undisturbed during this operation Shift Y + 1 positions as follows: $0 \rightarrow AC_0$ $AC_j \rightarrow AC_j + 1$ $AC_{11} \rightarrow MQ_0$ $MQ_j \rightarrow MQ_j + 1$

Table B-4. 8 Mode Extended Arithmetic Element Microinstructions (cont)

Mnemonic Symbol	Octal Code	Sequence	Operation
MQL	7421	2	Load multiplier quotient. This instruction clears the MQ, loads the contents of the AC into the MQ, then clears the AC. $0 \rightarrow MQ$ AC $\rightarrow MQ$ $0 \rightarrow AC$
SCA	7441	2	Step counter load into accumulator. The contents of the step counter are transferred into the AC. The AC should be cleared prior to issuing this instruction or the CLA instruction may be combined with the SCA to clear the AC, then effect the transfer. SC V AC $\rightarrow$ AC
SCL	7403	3	Step counter load from memory. Loads complement of bits 7 through 11 of the word in memory following the instruction into the step counter. Two's MB <sub>7-11</sub> $\rightarrow$ SC PC + 2 $\rightarrow$ PC
MQA	7501	2	Multiplier quotient load into accumulator. The contents of the MQ are transferred into the AC. This instruction is given to load the 12 least significant bits of the product into the AC following a multiplication or to load the quotient into the AC following a division. The AC should be cleared prior to issuing this instruction or the CLA instruction can be combined with the MQA to clear the AC then effect the transfer. MQ V AC $\rightarrow$ AC
CLA	7601	1	Clear accumulator. The AC is cleared during sequence 1, allowing this instruction to be combined with other EAE instructions that load the AC during sequence 2 (such as SCA and MQA). $0 \rightarrow AC$
CAM	7621	1,2	Clear accumulator and multiplier quotient. CAM = CLA MQL

Table B-4. 8 Mode Extended Arithmetic Element Microinstructions (cont)

## APPENDIX C I/O BUS INSTRUCTIONS

In the 8 mode these instructions are given directly, whereas in the LINC mode they must be preceded by the instruction IOB (0500).

Mnemonic	Octal	Operation
Program Inter	rupt	
ION	6001	Turn interrupt on and enable the computer to respond to an interrupt request. When this instruction is given, the computer executes the next instruction, then enables the interrupt. The additional instruction allows exit
IOF	6002	from the interrupt subroutine before allowing another interrupt to occur. Turn interrupt off; i.e., disable the interrupt.
High-Speed Pe	erforated-Tape R	eader and Control Type PR12
RSF	6011	Skip if reader flag is a 1.
RRB	6012	Read the contents of the reader buffer and clear the reader flag. (This instruction does not clear the AC). RB V $AC_{4-11} \rightarrow AC_{4-11}$
RFC	6014	Clear reader flag and reader buffer, fetch one character from tape and load it into the reader buffer, and set the reader flag when done.
High-Speed Pe	erforated-Tape Pu	unch and Control Type PP12
PSF	6021	Skip if punch flag is a 1.
PCF	6022	Clear punch flag and punch buffer.
PPC	6024	Load the punch buffer from $AC_{4-11}$ and punch the character. (This instruction does not clear the punch flag or punch buffer). $AC_{4-11} V PB \rightarrow PB$
PLS	6026	Clear the punch flag, clear the punch buffer, load the punch buffer from $AC_{4-11}$ , punch the character, and set the punch flag when done.

Table C-1. IOT Instructions

Mnemonic	Octal	Operation
Teletype Keyl	ooard/Reader	
KSF	6031	Skip if keyboard flag is a 1.
KCC	6032	Clear AC and clear keyboard flag.
KRS	6034	Read keyboard buffer static. (This is a static command in that neither th AC nor the keyboard flag is cleared.) TTI V AC <sub>4-11</sub> $\rightarrow$ AC <sub>4-11</sub>
KRB	6036	Clear AC, clear keyboard flag, and read the contents of the keyboard buffe into AC <sub>4-11</sub> . TTO VAC <sub>4-11</sub> $\rightarrow$ AC <sub>4-11</sub>
Teletype Tele	printer/Punch	
TSF	6041	Skip if teleprinter flag is a 1.
TCF	6042	Clear teleprinter flag.
TPC	6044	Load the TTO from $AC_{4-11}$ and print and/or punch the character.
TLS	6046	Load the TTO from $AC_{4-11}$ , clear the teleprinter flag, and print and/or punch the character.
Power Fail/Re	start Type KP12	
SPL	6102	Skip if power is low.
Memory Exter	nsion Control Ty	pe MC12
CDF	62N1	Change to data field N. The data field register is loaded with the selected field number (0 to 7). All subsequent memory requests for operands are automatically switched to that data field until the data field number is changed by a new CDE instruction.
CIF	62N2	changed by a new CDF instruction. Prepare to change to instruction field N. The instruction buffer register is loaded with the selected field number (0 to 7). The next JMP or JMS instruction causes the new field to be entered.
RDF	6214	Read data field into $AC_{6-8}$ . Bits 0-5 and 9-11 of the AC are not affected.
RIF	6224	Same as RDF except reads the instruction field.
RIB	6234	Read interrupt buffer. The instruction field and data field stored during ar interrupt are read into $AC_{6-8}$ and $AC_{9-11}$ respectively.
RMF	6244	Restore memory field. Used to exit from a program interrupt.
Incremental P	lotter and Contro	ol Type XY12
PLSF	6501	Skip if plotter flag is a 1.
PLCF	6502	Clear plotter flag.
PLPU	6504	Plotter pen up. Raise pen off paper.
PLPR	6511	Plotter pen right.
PLDU	6512	Plotter drum (paper) upward.
PLDD	6514	Plotter drum (paper) downward.

Table C-1. IOT Instructions (Cont)

Mnemonic	Octal	Operation					
PLPL	6521	Plotter pen left.					
PLUD	6522	Plotter drum (paper) upward. (Same as 6512).					
PLPD	6524	Plotter pen down. Lower pen to paper.					
Random Acce	ss Disk File Typ	e DF32					
DCMA	6601	Clears memory address register, parity error and completion flags. This instruction clears the disk memory request flag and interrupt flags.					
DMAR	6603	The contents of the AC are loaded into the disk memory address register and the AC is cleared. Begin to read information from the disk into the specified core location. Clears parity error and completion flags. Clears interrupt flags.					
DMAW	6605	The contents of the AC are loaded into the disk memory address register and the AC is cleared. Begin to write information into the disk from the specified core location. Clears parity error and completion flags.					
DCEA	6611	Clears the disk extended address and memory address extension register.					
DSAC	6612	Skips next instruction if address confirmed flag is a 1 (AC is cleared).					
DEAL	6615	The disk extended address extension registers are cleared and loaded with the track data held in the AC.					
DEAC	6616	Clears the AC, then loads the contents of the disk extended address register into the AC to allow program evaluation. Skips next instruction if address confirmed flag is a 1.					
DFSE	6621	Skips next instruction if parity error, data request late, or write lock switch flag is a zero. Indicates no errors.					
DFSC	6622	Skips next instruction if the completion flag is a 1. Indicates data transfer is complete.					
DMAC	6626	Clears the AC, then loads contents of disk memory address register into the AC to allow program evaluation.					
isk Control a	nd Disk File Typ	e RF08/RS08					
DCMA	6601	Clears memory address register, parity error and completion flags. This instruction clears the disk memory request flag and interrupt flags.					
DMAR	6603	The contents of the AC are loaded into the disk memory address register and the AC is cleared. Begin to read information from the disk into the specified core location. Clears parity and completion flags. Clears interrupt flags.					
DMAW	6605	The contents of the AC are loaded into the disk memory address register and the AC is cleared. Begin to write information into the disk from the specified core location. Clears parity error and completion flags.					
DCIM	6611	Clears the disk interrupt flag and memory address extension register.					
DSAC	6612	Skips next instruction if address confirmed flag is a 1 (AC is cleared).					
DIML	6615	Accumulator to interrupt enables and memory extension register.					
DIMA	6616	Status to AC.					
DFSC	6621	Skip on error condition.					
DFSC	6622	Skip next instruction if the completion flag is a 1. Indicates data transfer is complete.					
DMAC	6626	Clears the AC then loads contents of disk memory address register into the					

Table C-1. IOT Instructions (Cont)

## Table C-1. IOT Instructions (cont)

Mnemonic	Octal	Operation
Disk Cartridge	Memory Type	RK8/RK01
DLDC	6732	Loads the command register from the AC and then clears the AC.
DLDC	6733	Loads the track, surface, and sector address from the AC; the instruction then clears the AC and starts to read data from the disk if command register bit 4 is a 0.
DLDW	6735	Loads the track, surface, and sector address from the AC. The instruction then clears the AC and starts to write on the disk if command register bit 4 is a 0.
DCHP	6737	Loads the track, surface, and sector address from the AC. The instruction then clears the AC and reads data and checks parity if command register bit 4 is a 0.
DRDA	6734	Clears the AC and then reads the Track Address Counter and surface/sector counter into the AC.
DRDC	6736	Clears the AC and then reads the command register into the AC.
DRDS	6741	Clears the AC and then reads the status register into the AC.
DCLS	6742	Clears the status register.
DMNT	6743	Load maintenance register. This instruction loads the maintenance register from the AC and carries out the operation specified. The bits will remain set until DMNT is reissued with all AC bits cleared to 0.
DLDA	6731	Loads the disk address. This instruction is a maintenance operation.
DSKD	6745	Skip On Transfer Done flag equal to 0.
DSKE	6747	Skip when the error flag is set to 1.
DCLA	6751	Clear All. This instruction clears the selected disk to Track 000 and then clears all the control registers and status flags except the disk selection. Transfer Done is set when the disk is positioned on Track 000.
DRWC	6752	Read word count register. This instruction clears the AC, then reads the contents of the word count register into the AC.
DLWC	6753	Load word count register. This instruction loads the word count register from the AC and then clears the AC.
DLCA	6755	Load current address register. This instruction loads the current address register from the AC and then clears the AC.
DRCA	6757	Read current address register. This instruction clears the AC and then reads the contents of the current address register into the AC.
Real Time Inte	erface Type KW	12A

CLSK	6131	Skip if Clock Interrupt condition exists
CLLR	6132	AC to Clock Control register
CLAB	6133	AC to Clock Buffer-Preset register
CLEN	6134	AC to Clock Enable register
CLSA	6135	Clock Status to AC
CLBA	6136	Clock Buffer-Preset register to AC
CLCA	6137	Clock Counter to Buffer Preset register and AC.

## Fixed-Interval Clock Type KW12-B, C

CSOF	6131	Skip on clock flag.
CTOC	6132	Turn off the clock, clears the clock flag and disables the clock interrupt.
CTON	6134	Turn the clock on and clears the flag.

Mnemonic	Octal	Operation				
Fixed-Interval	Clock Type KW	/12-B,C (cont)				
CRUN	6135	Clock running. Turns on the clock, enables the clock interrupt, and clears the clock flag. If the clock flag was set when the instruction was issued, it will skip.				
Automatic Li	ne Printer and Co	ntrol Type LP12				
LSE	6651	Skip if the printer done flag is a 1.				
LCF	6652	Clear both sections of the printing buffer.				
LLB	6654	Skip if line printer error flag is a 1.				
LSD	6661	Clear line printer done and error flags.				
LCB	6662	Load printing buffer from the contents of $AC_{6-11}$ and clear the AC.				
LPR	6664	Clear the format register, load the format register from the contents of $AC_{9-11}$ , print the line contained in the section of the printer buffer loaded last, clear the AC, and advance the paper in accordance with the selected channel of the format tape if the content of $AC_8 = 1$ . If the content of $AC_8 = 0$ , the line is printed and paper advance is inhibited.				
Line Printer	Type LP08					
LSF	6661	Skip on character flag.				
LCF	6662	Clear the character flag.				
LSR	6663	Skip on error status line. (Error status line monitors interrupts caused by th printer not being ready; i.e., power error, paper jam, out of paper, etc.)				
LPC	6664	Load the character into the print buffer and print if buffer is full or characte was a control function. This instruction does not clear the AC.				
LIN	6665	Set the program interrupts. Enable				
LLS	6666	Microprogram combination of LCF and LPC.				
LIF	6667	Clear the program interrupt flag.				
Card Reader a	and Control Type	CR12				
RCSF	6631	Skip if card reader data ready flag is a 1.				
RCRA	6632	The alphanumeric code for the column is read into $AC_{6-11}$ , and the data ready flag is cleared.				
RCRB	6634	The binary data in a card column is transferred into $AC_{0-11}$ , and the data ready flag is cleared.				
RCSP	6671	Skip if card reader card done flag is a 1.				
RCSE	6672	Clear the card one flag, select the card reader and start card motion towards the read station, and skip if the reader-not-ready flag is a 1.				
RCRD	6674	Clear card done flag.				
Automatic M	agnetic Tape Con	trol Type TC58				
MTSF	6701	Skip on error flag or magnetic tape flag. The status of the error flag (EF) and the magnetic tape flag (MTF) are sampled. If either or both are set to 1, the contents of the PC are incremented by one skipping the next sequential instruction.				

Mnemonic	Octal	Operation						
Automatic Magnetic Tape Control Type TC58 (cont)								
MTCR	6711	Skip on tape control ready (TCR). If the tape control is ready to receive an instructionn, the PC is incremented by one skipping the next sequential instruction.						
MTTR	6721	Skip on tape transport ready (TTR). The next sequential instruction is skipped if the tape transport is ready.						
MTAF	6712	Clear the status and command registers, and the EF and MTF if tape control ready. If tape control not ready, clears MTF and EF flags only.						
MTRC	6724	Inclusively OR the contents of the command register into $AC_{0-1}$ .						
MTCM	6714	Inclusively OR the contents of $AC_{0-5}$ and $AC_{9-11}$ into the command register; JAM transfer bits 6, 7, 8 (command function).						
MTLC	6716	Load the contents of $AC_{0-11}$ into the command register.						
	6704	Inclusively OR the contents of the status register into $AC_{0-11}$ .						
MTRS	6706	Read the contents of the status register into $AC_{0-11}$ .						
MTGO	6722	Set "to" bit to execute instructions in the command register if instruction is legal.						
MCLA	6702	Clear the accumulator.						
General Purpo	se Converter and	Multiplexer Control Type AF01A						
ADSF	6531	Skip if A/D converter flag is a 1.						
ADVC	6532	Clear A/D converter flag and convert input voltage to a digital number; flag will set at end of conversion. Number of bits in converted number determined by switch setting, 11 bits maximum.						
ADRB	6534	Read A/D converter buffer into AC, left justified, and clear flag.						
ADCC	6541	Clear multiplexer channel address register.						
ADSC	6542	Set up multiplexer channel as per $AC_{6-11}$ . Maximum of 64 single-ended on 32 differential input channels.						
ADIC	6544	Index multiplexer channel address (present address + 1). Upon reaching address limit, increment will cause channel 00 to be selected.						

## APPENDIX D 8-MODE PERFORATED - TAPE LOADER

#### **READIN MODE LOADER**

The readin mode (RIM) loader is a minimum length, basic, perforated-tape reader program for the 33 ASR. It is initially stored in memory by manual use of the operator console keys and switches. The loader is permanently stored in 18 locations of page 37.

A perforated tape to be read by the RIM loader must be in RIM format:

Tap	e Ch	anne	1			,		
8	7	6	5	4	S	3	2	1
1	0	0	0	0		0	0	0
0	1		<b>1</b>			A2		
0	0	A	.3		•	A4		
0	0	Х	(1			X2		
0	0	Х	3		•	X4		
0	1		1			A2		
0	0	A	.3		•	X2		
0	0	Х	(1			X2		
0	0		3			X4		
	•		tc.)	•		~	•	•
1	0	0	0	0	•	0	0	0

The RIM loader can only be used in conjunction with the 33 ASR reader (not the high-speed perforated-tape reader). Because a tape in RIM format is, in effect, twice as long as it need be, it is suggested that the RIM loader be used only to read the binary loader when using the 33 ASR. (Note that some PDP-12 diagnostic program tapes are in RIM format.)

Absolute Address	Octal Content	Tag	Instruction 1 Z	Comments
7756	6032	BEG,	KCC	/CLEAR AC AND FLAG
7757	6031		KSF	/SKIP IF FLAG = 1
7760,	5357		JMP-1	<b>/LOOKING FOR CHARACTER</b>
7761,	6036		KRB	<b>/READ BUFFER</b>
7762,	7106		CLL RTL	
7763,	7006		RTL	/CHANNEL 8 IN ACO
7764,	7510		SPA	/CHECKING FOR LEADER
7765,	5357		JMP BEG+1	/FOUND LEADER
7766,	7006		RTL	/OK, CHANNEL 7 IN LINK
7767,	6031		KSF	
7770,	5367		JMP-1	
7771,	6034		KRS	/READ, DO NOT CLEAR
7772,	7420		SNL	/CHECKING FOR ADDRESS
7773,	3776		DCA 1 TEMP	<b>/STORE CONTENT</b>
7774,	3376		DCA TEMP	/STORE ADDRESS
7775,	5356		JMP BEG	/NEXT WORD
7776,	0	TEMP,	0	/TEMP STORAGE
7777,	5XXX		JMP X	/JMP START OF BIN LOADER

The complete PDP-12 RIM loader (SA = 7756) is as follows:

Manually loading the RIM loader in core memory is accomplished as follows:

1. Set the starting address 7756 in the Left Switches.

2. Set the first instruction (6032) in the Right Switches.

3. Press the FILL Switch and then press the FILL STEP Switch.

4. Set the next instruction (6031) in the Right Switches.

5. Press the FILL STEP Switch.

6. Repeat steps 4 and 5 until all 16 instructions have been deposited.

7. To ensure that RIM is in core, press Exam. The MA will = 7756, and the MB should = the first RIM instruction (6032 for low-speed reader).

8. To check sequential core locations, press Step Exam, and observe the contents of the MB.

To load a tape in RIM format, place the tape in the reader, set the Left Switches to the starting address 7756 of the RIM loader (not of the program being read), press the START LS key, and start the Teletype reader.

Refer to Digital Program Library document Digital-8-1-U for additional information on the Readin Mode Loader program.

#### **BINARY LOADER (8 MODE)**

The binary loader (BIN) is used to read machine language tapes (in binary format) produced by the program assembly language (PAL). A tape in binary format is about one half the length of a comparable RIM format tape. It can, therefore, be read about twice as fast as a RIM tape and is, for this reason, the more desirable format to use with the 10 cps 33 ASR reader or the Type PR12 High-Speed Perforated-Tape Reader.

The format of a binary tape is as follows:

LEADER: About 2 feet of leader-trailer codes.

BODY: Characters representing the absolute, machine language program in easy-to-read binary (or octal) form. The selection of tape may contain characters representing instructions (channels 8 and 7 not punched) or origin resettings (channel 8 not punched, channel 7 punched), and is concluded by 2 characters (channels 8 and 7 not punched) that represent a checksum for the entire section.

TRAILER: Same as leader.

BODY: Characters representing the absolute, machine language program in easy-to-read binary (or octal) form. The selection of tape may contain characters representing instructions (channels 8 and 7 not punched) or origin resettings (channel 8 not punched, channel 7 punched), and is concluded by 2 characters (channels 8 and 7 not punched) that represent a checksum for the entire section.

TRAILER: Same as leader.

			Men								
8	7	6	5	4	S	3	2	1	Location	Content	Comments
1	0	0	0	0		0	0	0			leader-trailer code
0	1	0	0	0		0	1	0			origin setting
0	0	0	0	0	•	0	0	0		0200	
0	0	1	1	1		0	1	0			
0	0	0	0	0	•	0	0	0	0200	CLA	
0	0	0	0	1		0	1	0			
0	0	1	1	1		1	1	1	0201	TAD 277	
0	0	0	1	1	•	0	1	0			
0	0	1	1	1	•	1	1	0	0202	DCA 276	
0	0	1	1	- 1		1	0	0			
0	0	0	0	0	•	0	1	0	0203	HLT	
0	1	0	0	0		0	1	0			
0	0	1	1	1	•	1	1	1		0277	origin setting
0	0	0	0	0	•	0	0	0			
0	0	1	0	1	•	0	1	1	0277	0053	
0	0	0	0	1	•	0	0	0			
0	0	0	0	0	•	1	1	1		1007	sum check
1	0	0	0	0	•	0	0	0			leader-trailer code

To load BIN

1. Select the 8 mode.

2. Press the IO Preset switch twice.

3. Put tape in the TTY reader, turn the reader on.

4. Press Start LS (still set to 7756).

5. When tape is read in, turn the reader off and stop the computer by pressing the Stop switch.

To load binary tapes with the BIN loader

1. Place 7777 in Left Switches.

2. Set bit 0 of Right Switches to 1 for low-speed reader (TTY) or set bit 0 of Right Switches to 0 for high-speed reader.

3. Press Start LS.

4. Tape is read in and computer halts.

5. If AC unequal to 0000 a checksum error has occurred.

After a BIN tape has been read in, one of the two following conditions exists:

a. No checksum error: halt with AC = 0

b. Checksum error: halt with AC = (computed checksum) – (tape checksum)

Operation of the BIN loader in no way depends upon or uses the RIM loader. To load a tape in BIN format place the tape in the reader, set the Left Switches to 7777 (the starting address of the BIN loader), set Right Switch register  $bit_{00}$  up for loading via the Teletype unit or down for loading via the high-speed perforated-tape reader, then press the START LS key, and start the tape reader.

Refer to Digital Program Library document Digital-8-2-U-RIM for additional information on the Binary Loader program.

# APPENDIX E TAPE MAINTENANCE INSTRUCTIONS

#### E.1 GENERAL

In the Maintenance Mode, all signals from the tape transport are inhibited and data is simulated under program control. This mode is especially useful for troubleshooting and checking the operation of the TC12 Tape Control Logic.

#### **E.2 TAPE MAINTENANCE INSTRUCTIONS**

#### E.2.1 IOT 6151

This instruction is used to load the Tape Maintenance Instruction Register (used with IOT 6154) and to provide data and timing information to the TC12 tape control unit when it is operating in the maintenance mode. It also checks the status of the Tape Done flag. This instruction is not to be microprogrammed and it should not be used to generate timing information during tape transfers, although it can be used to set the Tape Maintenance Instruction Register at any time.

Any deviation from the above should be carefully checked with the logic diagrams to determine the expected result. The functions of the AC bits during this instruction are shown in Table E-1.

AC Bit Number	Function	
00	Load into the Tape Maintenance Register (Bit 0)	
01	Load into the Tape Maintenance Register (Bit 1)	
02	Load into the Tape Maintenance Register (Bit 2)	
03	Load into the Tape Maintenance Register (Bit 3)	
04	Clear the Tape Done Flag	
05	Skip if Tape Done Flag is set	
06	Generate TT0	
07	Generate TT3	
08	Simulate input data Mark Channel	
09	Simulate input data Data Channel 1	
10	Simulate input data Data Channel 2	
11	Simulate input data Data Channel 3	

Table E-1. AC Bit Functio
---------------------------

#### E.2.2 IOT 6152

This instruction is used to generate various control pulses within the TC12 Tape control unit. These control signals are used primarily for maintenance purposes. In special situations these controls are useful for handling nonstandard tape formats.

The bits of instruction 6152 are gated with individual bits of AC register to generate a specific control function. These functions are intended to be used singly, and not while a tape instruction is in progress, and this instruction cannot be microprogrammed. Any deviation from the above should be carefully checked with the logic diagrams to determine the exact result. The functions of the AC bits during this instruction are shown in Table E-2.

AC Bit Number	Function	
00	Tape Preset	
01	Shift RWB	
02	$TB \rightarrow RWB$	
03	$TB + TAC \rightarrow TAC$	
04*	Clear 8 Block	
05*	Set Direction Backward	
06*	Select Unit number 1	
07*	Set Direction Forward	
08*	Set Write Sync	
09*	Set Motion. Set Direction Forward if motion was cleared	
10*	Select 8 Tape	
11*	$AC_{11} \rightarrow 8$ Write Flip-Flop	

Table	E-2.	AC	Bit	Functions
-------	------	----	-----	-----------

\*These Bits are used in the TC12-F Tape Control

#### E.2.3 IOT 6154

This instruction is used to load and examine the various registers of the TC12 Tape Control Unit. The action of this instruction is controlled by the contents of the Tape Maintenance Instruction Register and this action is shown in Table E-3. This instruction is not to be used during the operation of a tape instruction.

Register Contents				
Contents of bi	Contents of bits 0, 1, 2, & 3 Function Performed			
Binary	Octal			
0000	00	$AC \rightarrow TB$		
0001	01	$AC \rightarrow TBN$		
0010	02	$AC \rightarrow TAC$		
0011	03	$AC \rightarrow TMA$		
0100	04	TMA Setup $\rightarrow$ AC		
0101	05	$TBN \rightarrow AC$		

Register Contents Contents of bits 0, 1, 2, & 3		Function Performed
Binary	Octal	
0110	06	$TB \rightarrow AC$
0111	07	$RWB \rightarrow AC$
1000	10	Mark Window $\rightarrow$ AC
1001	11	Control States, Timing $\rightarrow$ AC
1010	12	Units & MTN $\rightarrow$ AC
1011	13	Tape Inst $\rightarrow$ AC
1100	14	Misc. Status $1 \rightarrow AC$
1101	15	Misc. Status $2 \rightarrow AC$
1110	16	$TMA \rightarrow AC$
1111	17	

Table E-3. IOT 6154 Effect of Tape Maintenance Instruction (cont)

#### E.2.4 IOT 6154 Detailed Transfer Information

The Tape Maintenance Instruction Register is decoded to give a count of  $00_8$  to  $17_8$ . These count levels generate the signals necessary to enable the selected data onto the Tape Bus for a 12-bit parallel transfer between the AC and the Tape Registers. The following tables show the contents of the AC after the instruction associated with each table is given.

Mar	$\mathbf{k}$ Window $\rightarrow$ AC
AC Bit	Data Read into AC
00	LWN Wind Shade (1)
01	LWN Wind 00 (1)
02	LWN Wind 01 (1)
03	LWN Wind 02 (1)
04	LWN Wind 03 (1)
05	LWN EM
06	LWN CM
07	LWN GM
08	LWN DM
09	LWN FM
10	LWN BM
11	LWN IM

Table E-4. Tape Maintenance Instruction Register Equal 108

Control States & Timing → AC		
AC Bit	Data Read Into AC	
00	TAC = 7777	
01	LCS Idle (1)	
02	LCS Search (1)	
03	LCS Block (1)	
04	LCS Check Word (1)	
05	LCS Turn Around (1)	
06	LCS Write (1)	
07	LCS Write Cycle (1)	
08	LTD ACIP	
09	LTD TTOK	
10	LTD Timing OK	
11	LTD Tape Fail Delay	

Table E-5. Tape Maintenance Instruction Register Equals 118

Table E-6. Tape Maintenance Instructions Register Equals 128

Units & Motion – AC		
AC Bit	Data Read Into AC	
00	LTC Unit 0 (0)	
01	LTC Unit 1 (0)	
02	LTC Unit 2 (0)	
03	LTC Unit 3 (0)	
04	LTC Unit 4 (0)	
05	LTC Unit 5 (0)	
06	LTC Unit 6 (0)	
07	LTC Unit 7 (0)	
08	LMU motion (1)	
09	LMU Direction (1)	
10	LCS Tape OK (1)	
11	LTC Write EN (1)	

Table E-7. Tape Maintenance Instruction Register Equals  $13_8$ 

TINSTR AC		
AC Bit	Data Read Into AC	
00	LIN RDC	
01	LIN RCG	
02	LIN RDE	
03	LIN MTB	
04	LIN WRC	
05	LIN WRG	
06	LIN WRI	

TINSTR AC		
AC Bit	Data Read Into AC	
07	LIN CHK	
08	LIN I (1)	
09	LGP GP 0 (1)	
10	LGP GP 1 (1)	
11	LGP GP 2 (1)	

Table E-7. Tape Maintenance Instruction Register Equals 138 (cont)

Table E-8. Tape Maintenance Instruction Register Equals 148

MSC	Status 1
AC Bit	Data Read Into AC
00	LTS PHASE
01	LIP IN PROGRESS (1)
02	LTS LC 00 (1)
03	LTS LC 01 (1)
04	Mark Chan Write
05	Data Chan 1 Write
06	Data Chan 2 Write
07	Data Chan 3 Write
08	LGP GP = GPC (1)
09	LGP GPCNT 0 (1)
10	LGP GPCNT 1 (1)
11	LGP GPCNT 2 (1)

Table E-9. Tape Maintenance Instruction Register Equals 158

MSC Status 2					
AC Bit	Data Read Into AC				
$ \begin{array}{c} 00\\ 01\\ 02\\ 03\\ 04\\ 05\\ 06\\ 07\\ 08\\ 09\\ 10\\ 11\\ \end{array} \right\} $	TC12-F WRITE SEL (1) TC12-F TAPE SEL (1) Not used				

## APPENDIX F TABLES OF CODES

Character	8-Bit Code	Character	8-Bit Code
	(in octal)		(in octal)
Α	301	!	241
В	302	"	242
С	303	#	243
D	304	\$	244
E	305	%	245
F	306	&	246
G	307	,	247
н	310	(	250
1	311	)	251
J	312	*	252
к	313	+	253
L	314	,	254
Μ	315	_	255
N	316		256
0	317	1	257
Р	320	:	272
Q	321	;	273
R	322	<	274
S	323	=	275
т	324	>	276
U	325	?	277
v	326	@	300
W	327	[	333
х	330	λ	334
Y	331	]	335
Z	332	1	336
		← •	337
0	260		
1	261	Leader/Trailer	200
2	262	Line-Feed	212
3	263	Carriage-Return	215
4	264	Space	240
5	265	Rub-out	377
6	266	Blank	000
7	267	alt-mode	375
8	270	escape	233
9	271		

### Table F-1. Model 33/35 ASR/KSR Teletype Code (ASCII) in Octal Form

F-1

1 = HOLE PUNCHE 0 = NO HOLE PUNC												
			(									14
@	SPACE	NULL/IDLE	1	Г	Г	Γ	0	0		0	0	0
A	!	START OF MESSAGE	1				0	0		0	0	1
в		END OF ADDRESS	1		1	$\vdash$	0	0	H	ò	1	0
C	#	END OF MESSAGE	1		Γ		0	0		0	1	1
D	\$	END OF TRANSMISSION	1				0	0		1	0	0
E	%	WHO ARE YOU	1				0	0		1	0	1
F	&	ARE YOU	1				0	0	H	1	1	0
G	,	BELL	1				0	0	Η	1	1	1
н	(	FORMÁT EFFECTOR	1				0	1	H	0	0	0
		HORIZONTAL TAB	1	-			0	1		0	0	1
	•	LINE FEED	1			Π	0	1		0	1	0
К	+	VERTICAL TAB	1				0	1	$\square$	0	1	1
	,	FORM FEED	1				0	1		1	0	0
M	_	CARRIAGE RETURN					0	1		1	0	1
N		SHIFT OUT					0	1		1	1	0
0		SHIFT IN	1	-	-		0	1		1	1	1
P	0	DCO					1	o		0	0	0
	1	READER ON					1	0		0	0	1
R	2	TAPE (AUX ON)			-		1	0		0	1	0
S	3	READER OFF					1	0		0	1	1
Т	4	(AUX OFF)					1	0		1	0	0
	5	ERROR					1	0		1	0	1
v	6	SYNCHRONOUS IDLE	1				1	0		1	1	0
	7	LOGICAL END OF MEDIA					1	0		1	1	1
x	8	so	1				1	1		0	0	0
	9	S 1					1	1		0	0	1
Z	:	\$2					1	1		0	1	0
		\$3					1	1	1	0	1	1
	<	S 4					1	1		1	0	0
	=	S 5					1	1		1	0	1
		\$6					1	ĭ		1	1	0
RUB OUT	?	\$7					1	1	-+	1	1	1
	<b>_</b>	Ă		5	~	5			~			
			4						<u>~</u>			2
		L	→	1	0	0			SAN	٨Ę		
	L		->	1	0	1			SAN	٨E		
			→	1	1	0			SAN	٨E		
			->	1	1	1			SAN	٨E		

Table F-2. Model 33 ASR/KSR Teletype Code (ASCII) in Binary Form

37 KSR MODE			33 ASR MODE				
SHIF	Г	NOT SH	IFT	SHIF	<u>Т</u>	NOT SH	IFT
CHARACTER	CODE	CHARACTER	CODE	CHARACTER	CODE	CHARACTER	CODE
Α	101	a	341			Α	301
В	102	b	342			В	302
С	303	с	143			C	303
D	104	d	344			D	304
E	305	e	145			E	305
F	306	f	146			F	306
G	107	g	347			G	307
Н	110	h	350			Н	310
Ι	311	i '	151			I	311
J	312	j	152			J	312
К	113	k	353			K	313
L	314	1	154			L	314
Μ	115	m ·	355			М	315
Ν	116	n	356			N	316
0	317	0	157	1		0	317
Р	120	р	360			Р	320
Q	321	q	161			Q	321
R	322	r	162			R	322
S	123	s	363			S	323
Т	324	t	164			Т	324
U	125	u	365			U	325
V	126	v	366			V .	326
W	327	w	167			W	327
Х	330	x	170			Х	330
Y	131	у	371			Y	331
Z	132	z	372			Z	332
SPACE	240	0	60	SPACE	240	0	260
!	41	1	261	!	241	1	261
"	42	2	262	"	242	2	262
#	243	3	63	#	243	3	263
\$	44	4	264	\$	244	4	264
%	245	5	65	%	245	5	265
å	246	6	66	&	246	6	266
>	47	7	267	,	247	7	267
(	250	8	270	(	250	8	270
)	251	9	71	)	251	9	271
:	72	*	252	l í	272	*	252
•	273	+	53	;	273	+	253
<	74	,	254	, <	274		254
=	275		55	=	275	•	255
>	276		56	>	276		256
?	77		257	c ?	277		250
@	300		140	@	300	1	201
	333	,	140	[	333		
\ \	134		374		333 334		
<b>X</b>	154	1	5/4		557		

### Table F-3. LT-37 Transmit and Receive Code Table

	MODE	33 ASR MODE						
SHIFT		NOT SHIF	SHIFT SHIFT NOT SHIFT		SHIFT		IFT	
CHARACTER	CODE	CHARACTER	CODE	CHARACTER	CODE	CHARACTER	CODE	
]	335	}	175	]	335	ALT	375	
1	336	~	176	1	336	OR MODE		
$\rightarrow$	137	DEL	377	$\rightarrow$	337	DEL	377	
NULL	000	DLE	220	NULL	200	DLE	220	
SOH	201	DC1	21	SOH	201	DC1	221	
STX	202	DC2	22	STX	202	DC2	222	
ETX	3	DC3	223	EXT	203	DC3	223	
EOT	204	DC4	24	EOT	204	DC4	224	
ENQ	5	NAK	225	ENQ	205	NAK	225	
ACK	6	SYNC	226	ACK	206	SYNC	226	
BELL	207	ETB	27	BELL	207	ETB	227	
BACK SPACE	210	CANCEL	30	BACK SPACE	210	CANCEL	230	
$\rightarrow$ TAB	11	EM	231	→ TAB	211	EM	231	
NEW LINE	12	SUB	232	NEW LINE	212	SUB	232	
v TAB	213	ESCAPE	33	v TAB	213	ESCAPE	233	
FORM	14	FS	234	FORM	214	FS	234	
RETURN	215	GS	35	RETURN	215	GS	233	
So	216	RS	36	So	216	RS	236	
Si	217	QS	237	Si	217	QS	237	
			i				•	

Table F-3. LT-37 Transmit and Receive Code Table (cont)

#### NOTE

Letter codes <u>transmitted</u> from the 37 KSR keyboard in 33 mode will be upper case regardless of the position of the shift key; however, letter codes <u>received</u> by the KSR 37 in 33 mode will be printed in upper or lower case, as received.

#### Table F-4. Card Reader Codes

The following table gives the octal representation of the internal (binary) codes for the listed punch combinations. These internal codes are generated by the card reader and are transmitted to the PDP-12 upon execution of the appropriate IOT instruction. Any combination of punches which is not shown in the table is invalid, and the card reader can not detect invalid combinations.

Card C Zone	ode Num.	Internal Code	Character	Card Code Zone Num.	Internal Code	Character
_	_	00 0000	Space	12 7	11 0111	G
12	8•2	11 1010	[	12 8	11 1000	Н
12	8.3	11 1011	•	12 9	11 1001	I
12	8•4	11 1100	<	11 1	10 0001	J
12	8.5	11 1101	(	11 2	10 0010	K
12	8•6	11 1110	+	11 3	10 0011	L
12	8•7	11 1111	1	11 4	10 0100	М
12		11 0000	&	11 5	10 0101	N
11	8•2	10 1010	!	11 6	10 0110	0
11	8•3	10 1011	\$	11 7	10 0111	Р
11	8•4	10 1100	*	11 8	10 1000	Q
11	8.5	10 1101	· · · )	11 9	10 1001	R
11	8•6	10 1110	;	0 2	01 0010	S
11	8•7	10 1111	Λ	0 3	01 0011	Т
11		10 0000		0 4	01 0100	U
0	1	01 0001	. 1	0 5	01 0101	v
0	8•2	01 1010	]	06	01 0110	W
0	8•3	01 1011	,	0 7	01 0111	X
0	8•4	01 1100	%	0 8	01 1000	Y
0	8•5	01 1101	←	09	01 1001	Z
0	8•6	01 1110	>	- 0	00 1010	0
0	8•7	01 1111	?	- 1	00 0001	1
-	8•3	00 1011	#	- 2	00 0010	2
_	8•4	00 1100	@	- 3	00 0011	3
_	8.5	00 1101	,	- 4	00 0100	4
-	8•6	00 1110	=	- 5	00 0101	5
_	8•7	00 1111	"	- 6	00 0110	6
12	1	11 0001	Α	- 7	00 0111	7
12	2	11 0010	В	- 8	00 1000	8
12	3	11 0011	С	- 9	00 1001	9
12	4	11 0100	D			[
12	5	11 0101	Е			
12	6	11 0110	F			

F-5

AC <sub>5</sub>	AC <sub>6</sub>	AC	7	0 0 0	0 1 0	0 1 1	1 0 0	1 0 1	1 1 0	1
AC <sub>8</sub>	AC <sub>9</sub>	AC <sub>10</sub>	AC <sub>11</sub>							
0	0	0	0		Space	0	@	р	6	р
0	0	0	1		!	1	Α	Q	а	q
0	0	1	0		"	2 3	В	R	b	r
0	0	1	1		#		C	S	с	s
0	1	0	0		\$ % &	4	D	Т	d	t
0	1	0	1		%	5	E	U	e	u
0	1	1	0		&	6	F	V	f	v
0	1	1	1			7	G	W	g	w
1	0	0	0		(	8	Н	X	h	х
1	0	0	1		)	9	I	Y	i	У
1 1	0	1	0	PF	*	:	J	Z	j	z
	0	1	1		+	;	K	1	k	{
1	1	0	0	FF	1 '	<	L	♦ 1	1	, <u> </u>
1	1	0	1	CR	-	=	М	]	m	
1	- 1	1	0		•	>	N	Λ	n	
1	1	1	1		/	?	0	$\heartsuit$	0	

## Table F-5. LP08 Line Printer Code

#### 64-Character Printer

96-Character Printer

Character (ASCII)	6-Bit Code (in octal)	Character (ASCII)	6–Bit Code (in octal)	
 @	0		40	
Ā	1	1	41	
В	2	u u	42	
С	3	#	43	
D	4	\$	44	
E	5	%	45	
F	6	&	46	
G	7	4	47	
н	10	(	50	
Ι	11	ĵ	51	
J	12	*	52	
к	13	+	53	
Ĺ	14		54	
Μ	15	, -	55	
N	16		56	
0	17		57	
P	20	Ó	60	
Q	21	1	61	
R	22	2	62	
S	23	3	63	
T	24	4	64	
Ŭ	25	5	65	
v	26	6	66	
Ŵ	27	7	67	
X	30	8	70	
Ŷ	31	9	71	
Z	32		72	
ī	33	•	73	`
Ň	34	; <	74	
ı	35	=	75	
- t	36	>	76	
+	37	?	77	

 Table F-6.
 LP12 Automatic Line Printer Code

## APPENDIX G CABLE CONNECTIONS TO PDP-12 FRONT PANEL

Access to analog channels 10-17 and the extension scope socket is by means of the relay and analog input panel (see Figure 2-3). The addition of 16 channels of analog input with the AG12 option, 16 additional preamplifiers, connects channels  $20_8$  to  $37_8$  to the analog extension panel supplied with the option.

Analog knobs  $0_8$  to  $7_8$ , analog channels  $10_8$  to  $37_8$ , console scope display, and extension scope display utilize the following connectors and connect to the following module slots in the EM12 memory wing:

Device	Front Panel Connector	Module Slot
Analog Knobs 08-78	5K, 10-turn Potentiometers	F33
Analog Chan 10 <sub>8</sub> -17 <sub>8</sub>	Switchcraft JAX #13B	F32
Analog Chan 20 <sub>8</sub> -27 <sub>8</sub>	Amphenol 26-4401-32P	F31
Analog Chan 30 <sub>8</sub> -37 <sub>8</sub>	Amphenol 26-4401-32P	F30
Extension Scope Display	Amphenol 26-4401-24P	F39
Console Display	Amphenol 57-30240	F38

Table G-1 lists cable connections and signal names from each front panel termination to its corresponding slot in the EM12 memory wing.

DEVICE	SIGNAL NAME	FRONT PANEL PIN	SIGNAL NAME	FRONT PANEL PIN	MODULE SLOT PIN
DEVICE	SIGIVAL IVAME	TAINEL TIIN	SIGNAL NAME		SLOTTIN
Analog Knobs 0-7 Analog Channels 10-17	+7 volts - 7 volts Analog Chan 7 Analog Chan 6 Analog Chan 5 Analog Chan 4 Analog Chan 3 Analog Chan 2 Analog Chan 1 Analog Chan 0	All Knobs All Knobs Knob 7 Knob 6 Knob 5 Knob 4 Knob 3 Knob 2 Knob 1 Knob 0	<ul> <li>Analog Chan 10</li> <li>Analog Chan 10</li> <li>Analog Chan 11</li> <li>Analog Chan 11</li> <li>Analog Chan 12</li> <li>Analog Chan 12</li> <li>Analog Chan 13</li> <li>Analog Chan 13</li> <li>Analog Chan 13</li> <li>Analog Chan 14</li> <li>Analog Chan 14</li> <li>Analog Chan 15</li> <li>Analog Chan 15</li> <li>Analog Chan 16</li> <li>Analog Chan 17</li> <li>Analog Chan 17</li> </ul>	Analog Phone Jack 10 Analog Phone Jack 10 Analog Phone Jack 11 Analog Phone Jack 11 Analog Phone Jack 12 Analog Phone Jack 12 Analog Phone Jack 13 Analog Phone Jack 13 Analog Phone Jack 14 Analog Phone Jack 14 Analog Phone Jack 15 Analog Phone Jack 15 Analog Phone Jack 15 Analog Phone Jack 16 Analog Phone Jack 17 Analog Phone Jack 17	A1 B1 C1 D1 E1 H1 J1 K1 L1 M1 N1 P1 S1 T1 U1 V1
Analog Channels 20-37	<ul> <li>Analog Chan 20</li> <li>Analog Chan 20</li> <li>DRAIN</li> <li>Analog Chan 21</li> <li>Analog Chan 21</li> <li>DRAIN</li> <li>Analog Chan 21</li> <li>DRAIN</li> <li>Analog Chan 22</li> <li>Hanalog Chan 22</li> <li>DRAIN</li> <li>Analog Chan 23</li> <li>Hanalog Chan 23</li> <li>DRAIN</li> <li>Analog Chan 24</li> <li>Analog Chan 24</li> <li>Hanalog Chan 25</li> <li>DRAIN</li> <li>Analog Chan 25</li> <li>DRAIN</li> <li>Analog Chan 26</li> <li>Hanalog Chan 26</li> <li>Hanalog Chan 27</li> <li>Analog Chan 27</li> <li>DRAIN</li> </ul>	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 32 31 30 29 28 27 26 25	<ul> <li>Analog Chan 30</li> <li>Analog Chan 30</li> <li>DRAIN</li> <li>Analog Chan 31</li> <li>Analog Chan 31</li> <li>DRAIN</li> <li>Analog Chan 32</li> <li>Hanalog Chan 32</li> <li>DRAIN</li> <li>Analog Chan 33</li> <li>Hanalog Chan 33</li> <li>DRAIN</li> <li>Analog Chan 34</li> <li>Hanalog Chan 35</li> <li>Hanalog Chan 35</li> <li>BRAIN</li> <li>Analog Chan 36</li> <li>Hanalog Chan 37</li> <li>Hanalog Chan 37</li> <li>Hanalog Chan 37</li> <li>Hanalog Chan 37</li> </ul>	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 32 31 30 29 28 27 26 25	A1 B1 GND C1 D1 GND E1 H1 GND J1 K1 GND L1 M1 GND N1 P1 GND S1 T1 GND U1 V1 GND
Console Display and Extension Scope Display	DSX Chan Sel. (1) H System GND DRAIN DSC Intensity L System GND DRAIN X HQ GND DSX X Defl. DRAIN Y HQ GND DSY Y Defl. DRAIN	1 2 3 4 5 6 7 8 9 10 11 12	х.		A1 B1 GND C1 D1 GND E1 H1 GND J1 K1 GND
Type 503 Scope Connections	503 Intensify System GND DRAIN	19 20 21			S1 T1 GND

Table G-1. Cable Connections for PDP-12 Front Panel

# APPENDIX H MATHEMATICAL DATA

#### Scales of Notation 2<sup>×</sup> IN Decimal 2' х 2' х 2' 2 55500 56719 94797 90029 21257 07193 38266 56067 49238 41377 57608 41121 66836 23067 80405 61380 01824 53360 0.001 0.002 0.003 0.004 0.005 0.006 0.007 0.008 0.009 0.01 0.02 0.03 0.04 0.05 0.06 0.07 0.08 0.09 0.1 0.2 0.3 0.4 0.5 0.6 0.7 0.8 0.9 .02101 035 1.04240 1.04971 1.05701 1.06437 10<sup>+n</sup> IN Octal 10 10-" 10' 10-\* n n 1.000 000 0.063 146 0.005 075 0.000 406 0.000 032 000 000 00 463 146 31 270 243 66 570 651 77 530 704 15 10 11 12 13 14 0.000 000 0.000 000 0.000 000 0.000 000 0.000 000 1 12 144 1 750 23 420 000 631 217 564 613 402 762 035 564 451 210 634 520 036 440 000 314 341 111 155 000 000 000 000 000 01234 66 77 32 35 11 000 006 000 000 000 000 000 000 000 000 240 100 200 400 706 64 055 37 152 75 561 06 276 41 56780 022 01 001 63 000 14 157 327 257

n log<sub>10</sub> 2, n log 2 10 IN Decimal

n	n log <sub>10</sub> 2	n log <sub>2</sub> 10	n	n log <sub>10</sub> 2	n log <sub>2</sub> 10
1	0.30102 99957	3.32192 80949	6	1.80617 99740	19.93156 85693
2	0.60205 99913	6.64385 61898	7	2.10720 99696	23.25349 66642
3	0.90308 99870	9.96578 42847	8	2.40823 99653	26.57542 47591
4	1.20411 99827	13.28771 23795	9	2.70926 99610	29.89735 28540
5	1.50514 99783	16.60964 04744	10	3.01029 99566	33.21928 09489

#### Addition and Multiplication Tables

Addition

 $0 + 1 = {0 + 0 = 0 \\ 1 + 0 = 1 \\ 1 + 1 = 10}$ 

Binary Scale

$$0 \times 1 = 1 \times 0 = 0$$
  
 $1 \times 1 = 1$ 

Multiplication

#### Octal Scale

0	01	02	03	04	05	06	07
1	02	03	04	05	06	07	10
2	03	04	05	06	07	10	11
3	04	05	06	07	10	11	12
	05	06	07	10	11	12	13
5	06	07	10	11	12	13	14
6	07	10	11	12	13	14	15
7	10	11	12	13	14	15	16

#### Mathematical Constants in Octal Scale

$\pi = 3.11037$	552421.	e =	2.557 <b>6</b> 0	521305.	γ =	0.44742	147707.
$\pi^{-1} = 0.24276$	301556:	e-! =	0.27426	530661.	$\ln \gamma = -$	0.43127	233602
$\sqrt{\pi} = 1.61337$	611067:	√ <b>e</b> =	1.51411	230704	$\log_2 \gamma = -$	0.62573	030645
$\ln \pi = 1.11206$	404435:	logie e =	0.33626	754251.	<b>√2</b> =	1.32404	746320
$\log_2 \pi = 1.51544$	163223.	log <sub>2</sub> e =	1.34252	166245.	In 2 =	0.54271	027760
$\sqrt{10} = 3.12305$	407267	log: 10 =	3.24464	741136.	In 10 =	2.23273	067355

Powers of Two

Octal-Decimal	Integer	Conversion	Table

											ר									n
		<b></b>	0	1	2	3	4	5	6	7			0	1	2	3	4	5	6	7
0000	0000	0000	0000			0003						0400	0256	0257	0258	0259	0260	0261	0262	0263
0777	0511	0010	1.1.1.1.1	0009		0011													0270	
(Octal) (	(Decimal)	0020		0017	0018	0019													0278 0286	
		0040			0034														0294	
	Sa simal	0050			0042						Į								0302	
Octal D		0060			0050														0310	
10000 - 20000 -		0070	0050	0057	0058	0059	0060	0061	0062	0063		0470	0312	0313	0314	0315	0316	0317	0318	0319
30000 - 1		0100	0064	0065	0066	0067	0068	0069	0070	0071		0500	0320	0321	0322	0323	0324	0325	0326	0327
40000 - 1		0110	0072	0073	0074	0075	0076	0077	0078	0079									0334	
50000 - 2		0120		0081		0083													0342	
60000 - 2 70000 - 2					0090 0098														0350 0358	
70000-2	20072				0106														0366	
		0160	0112	0113	0114	0115	0116	0117	0118	0119									0374	
		0170	0120	0121	0122	0123	0124	0125	0126	0127		0570	0376	0377	0378	0379	0380	0381	0382	0383
		0200	0128	0129	0130	0131	0132	0133	0134	0135		0600	0384	0385	0386	0387	0388	0389	0390	0391
					0138														0398	
					0146														0406	
					0154														0414 0422	
					0162 0170														0430	
					0178														0438	
		0270	0184	0185	0186	0187	0188	0189	0190	0191		0670	0440	0441	0442	0443	0444	0445	0446	0447
		0300	0192	0193	0194	0195	0196	0197	0198	0199		0700	0448	0449	0450	0451	0452	0453	0454	0455
					0202							1							0462	1
			0208		0210			0213											0470	
					0218			0221											0478 0486	
					0226 0234			0229											0494	
					0242														0502	
		0370	0248	0249	0250	0251	0252	0253	0254	0255		0770	0504	0505	0506	0507	0508	0509	0510	0511
		-																		
									6	7	)								-	
		<b>_</b>	0	1	2	3	4	5	6	7			0	1	2	3	4	5	6	7
1000	0512		0512	0513	0514	0515	0516	0517	0518	0519		1400	0768	0769	0770	0771	0772	0773	0774	0775
to	to	1010	0512 0520	051 <b>3</b> 0521	0514 0522	0515 0523	0516 0524	0517 0525	0518 0526	0519 0527		1410	0768 0776	0769 0717	0770 0778	0771 0779	0772 0780	0773 0781	0774 0782	0775 0783
to 1777		1010 1020	0512 0520 0528	0513 0521 0529	0514 0522 0530	0515 0523 0531	0516 0524 0532	0517 0525 0533	0518 0526 0534	0519 0527 0535		1410 1420	0768 0776 0784	0769 0777 0785	0770 0778 0786	0771 0779 0787	0772 0780 0788	0773 0781 0789	0774 0782 0790	0775 0783 0791
to 1777	10 1023	1010 1020 1030	0512 0520 0528 0536	0513 0521 0529 0537	0514 0522 0530	0515 0523 0531 05 <b>3</b> 9	0516 0524 0532 0540	0517 0525 0533 0541	0518 0526 0534 0542	0519 0527 0535 0543		1410 1420 1430	0768 0776 0784 0792	0769 0777 0785 0793	0770 0778 0786 0794	0771 0779 0787 0795	0772 0780 0788 0796	0773 0781 0789 0797	0774 0782	0775 0783 0791 0799
to 1777	10 1023	1010 1020 1030 1040 1050	0512 0520 0528 0536 0544 0552	0513 0521 0529 0537 0545 0553	0514 0522 0530 0538 0546 0554	0515 0523 0531 0539 0547 0555	0516 0524 0532 0540 0548 0556	0517 0525 0533 0541 0549 0557	0518 0526 0534 0542 0550 0558	0519 0527 0535 0543 0551 0559		1410 1420 1430 1440 1450	0768 0776 0784 0792 0800 0808	0769 0777 0785 0793 0801 0809	0770 0778 0786 0794 0802 0810	0771 0779 0787 0795 0803 0811	0772 0780 0788 0796 0804 0812	0773 0781 0789 0797 0805 0813	0774 0782 0790 0798 0806 0814	0775 0783 0791 0799 0807 0815
to 1777	10 1023	1010 1020 1030 1040 1050 1060	0512 0520 0528 0536 0544 0552 0560	0513 0521 0529 0537 0545 0553 0561	0514 0522 0530 0538 0546 0554 0562	0515 0523 0531 0539 0547 0555 0563	0516 0524 0532 0540 0548 0556 0564	0517 0525 0533 0541 0549 0557 0565	0518 0526 0534 0542 0550 0558 0566	0519 0527 0535 0543 0551 0559 0567		1410 1420 1430 1440 1450 1460	0768 0776 0784 0792 0800 0808 0816	0769 0777 0785 0793 0801 0809 0817	0770 0778 0786 0794 0802 0810 0818	0771 0779 0787 0795 0803 0811 0819	0772 0780 0788 0796 0804 0812 0820	0773 0781 0789 0797 0805 0813 0821	0774 0782 0790 0798 0806 0814 0822	0775 0783 0791 0799 0807 0815 0823
to 1777	10 1023	1010 1020 1030 1040 1050	0512 0520 0528 0536 0544 0552 0560	0513 0521 0529 0537 0545 0553	0514 0522 0530 0538 0546 0554 0562	0515 0523 0531 0539 0547 0555	0516 0524 0532 0540 0548 0556 0564	0517 0525 0533 0541 0549 0557 0565	0518 0526 0534 0542 0550 0558 0566	0519 0527 0535 0543 0551 0559 0567		1410 1420 1430 1440 1450	0768 0776 0784 0792 0800 0808 0816	0769 0777 0785 0793 0801 0809 0817	0770 0778 0786 0794 0802 0810	0771 0779 0787 0795 0803 0811 0819	0772 0780 0788 0796 0804 0812 0820	0773 0781 0789 0797 0805 0813 0821	0774 0782 0790 0798 0806 0814 0822	0775 0783 0791 0799 0807 0815 0823
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070	0512 0520 0528 0536 0544 0552 0560 0568 0576	0513 0521 0529 0537 0545 0553 0561 0569 0577	0514 0522 0530 0538 0546 0554 0562 0570 0578	0515 0523 0531 0539 0547 0555 0563 0571 0579	0516 0524 0532 0540 0548 0556 0564 0572 0580	0517 0525 0533 0541 0549 0557 0565 0573 0581	0518 0526 0534 0542 0550 0558 0566 0574 0582	0519 0527 0535 0543 0551 0559 0567 0575 0583		1410 1420 1430 1440 1450 1460 1470 1500	0768 0776 0784 0792 0800 0808 0816 0824 0832	0769 0777 0785 0793 0801 0809 0817 0825 0833	0770 0778 0786 0794 0802 0810 0818 0826 0834	0771 0779 0787 0795 0803 0811 0819 0827 0835	0772 0780 0788 0796 0804 0812 0820 0828 0828	0773 0781 0789 0797 0805 0813 0821 0829 0837	0774 0782 0790 0798 0806 0814 0822 0830 0838	0775 0783 0791 0799 0807 0815 0823 0831 0839
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585	0514 0522 0530 0538 0546 0554 0562 0570 0578 0586	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588	0517 0525 0533 0541 0549 0557 0565 0573 0581 0581	0518 0526 0534 0542 0550 0558 0566 0574 0582 0590	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591		1410 1420 1430 1440 1450 1460 1470 1500 1510	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841	0770 0778 0786 0794 0802 0810 0818 0826 0834 0834	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584 0592	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585 0593	0514 0522 0530 0538 0546 0554 0562 0570 0578 0586 0594	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596	0517 0525 0533 0541 0549 0557 0565 0573 0581 0581 0589 0597	0518 0526 0534 0542 0550 0558 0566 0574 0582 0590 0598	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848	0769 0717 0785 0793 0801 0809 0817 0825 0833 0841 0849	0770 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585 0593 0601	0514 0522 0530 0538 0546 0554 0562 0570 0578 0586 0594 0602	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0605	0518 0526 0534 0542 0550 0558 0566 0574 0582 0590 0598 0606	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520 1530	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856	0769 0717 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857	0770 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850 0858	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1140 1150	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584 0592 0600 0608 0616	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585 0593 0601 0609 0617	0514 0522 0530 0538 0546 0554 0562 0570 0578 0586 0586 0594 0602 0610 0618	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603 0611 0619	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0605 0613 0621	0518 0526 0534 0542 0550 0558 0566 0574 0582 0590 0598 0606 0614 0622	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520 1530 1540 1550	0768 0776 0784 0792 0800 0808 0816 0824 0832 0832 0832 0848 0856 0864 0872	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873	0770 0778 0786 0794 0802 0810 0818 0826 0834 0834 0850 0858 0858 0866 0874	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0859 0867 0875	0772 0780 0788 0796 0804 0812 0820 0828 0836 0836 0836 0844 0852 0860 0868 0876	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0854 0862 0870 0878	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1140 1150 1160	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584 0576 0584 0592 0600 0608 0616 0624	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585 0593 0601 0609 0617 0625	0514 0522 0530 0538 0546 0554 0562 0570 0578 0586 0594 0602 0610 0618 0626	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603 0611 0619 0627	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628	0517 0525 0533 0541 0549 0557 0565 0573 0581 0581 0589 0597 0605 0613 0621 0629	0518 0526 0534 0542 0550 0558 0566 0574 0582 0598 0606 0614 0622 0630	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623 0631		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520 1530 1540 1550 1560	0768 0776 0784 0792 0800 0808 0816 0824 0832 0832 0832 0840 0848 0856 0864 0872 0880	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881	0770 0778 0786 0794 0802 0810 0818 0826 0834 0834 0850 0858 0866 0874 0882	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867 0875 0883	0772 0780 0788 0796 0804 0812 0820 0828 0836 0836 0836 0852 0860 0868 0876 0884	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877 0885	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0862 0870 0878 0886	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879 0887
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1140 1150 1160	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584 0576 0584 0592 0600 0608 0616 0624	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585 0593 0601 0609 0617 0625	0514 0522 0530 0538 0546 0554 0562 0570 0578 0586 0586 0594 0602 0610 0618	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603 0611 0619 0627	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628	0517 0525 0533 0541 0549 0557 0565 0573 0581 0581 0589 0597 0605 0613 0621 0629	0518 0526 0534 0542 0550 0558 0566 0574 0582 0598 0606 0614 0622 0630	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623 0631		1410 1420 1430 1440 1450 1460 1470 1500 1510 1520 1530 1540 1550 1560	0768 0776 0784 0792 0800 0808 0816 0824 0832 0832 0832 0840 0848 0856 0864 0872 0880	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881	0770 0778 0786 0794 0802 0810 0818 0826 0834 0834 0850 0858 0866 0874 0882	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867 0875 0883	0772 0780 0788 0796 0804 0812 0820 0828 0836 0836 0836 0852 0860 0868 0876 0884	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877 0885	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0854 0862 0870 0878	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879 0887
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1150 1160 1170	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584 0592 0600 0608 0616 0624 0632 0640	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585 0593 0601 0609 0617 0625 0633 0641	0514 0522 0530 0538 0546 0554 0554 0578 0578 0578 0584 0594 0602 0610 0618 0626 0634 0642	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603 0611 0619 0627 0635 0643	0516 0524 0532 0540 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628 0636 0644	0517 0525 0533 0541 0557 0555 0573 0581 0581 0589 0597 0605 0613 0621 0629 0637 0645	0518 0526 0534 0550 0558 0566 0574 0582 0598 0606 0614 0622 0630 0628 0646	0519 0527 0535 0543 0559 0567 0575 0583 0591 0599 0607 0615 0623 0631 0639 0647		1410 1420 1430 1440 1440 1460 1470 1500 1510 1520 1530 1540 1550 1550 1570	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864 0872 0880 0888 0896	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881 0889 0897	0770 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850 0858 0866 0874 0882 0890 0898	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867 0875 0883 0891 0899	0772 0780 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0866 0868 0876 0884 0892	0773 0781 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877 0885 0893 0901	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0854 0878 0878 0878 0894	0775 0783 0799 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879 0887 0895
to 1777	10 1023	1010 1020 1030 1050 1060 1070 1100 1120 1130 1140 1150 1160 1170 1200 1210	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584 0576 0584 0592 0600 0608 0616 0624 0632 0640 0648	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585 0593 0601 0609 0617 0625 0633 0641 0649	0514 0522 0530 0538 0546 0554 0554 0570 0578 0586 0594 0694 0610 0618 0626 0634 0642 0650	0515 0523 0531 0539 0547 0555 0563 0571 0579 0587 0595 0603 0611 0619 0627 0635 0643 0651	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628 0636 0644 0652	0517 0525 0533 0541 0549 0557 0565 0573 0581 0581 0587 0605 0613 0621 0629 0637 0645 0653	0518 0526 0534 0550 0558 0566 0574 0582 0598 0606 0614 0622 0630 0638 0646 0654	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623 0631 0639 0647 0655		1410 1420 1430 1440 1440 1460 1470 1500 1510 1520 1530 1540 1550 1550 1570 1600 1610	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864 0872 0880 0888 0896 0904	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881 0889 0897 0905	0770 0778 0786 0794 0802 0810 0818 0826 0834 0842 0850 0856 0856 0874 0882 0890 0898 0906	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0851 0859 0867 0875 0883 0891 0899 0907	0772 0780 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0868 0868 0884 0892 0900 0908	0773 0781 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877 0885 0893 0901 0909	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0862 0870 0878 0886 0894 0902 0910	0775 0783 0791 0799 0807 0815 0833 0831 0839 0847 0855 0863 0871 0879 0887 0895
to 1777	10 1023	1010 1020 1030 1050 1050 1070 1100 1110 1120 1130 1140 1150 1160 1170 1200 1210	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584 0592 0600 0608 0616 0624 0632 0640 0648 0656	0513 0521 0529 0537 0545 0553 0561 0569 0577 0585 0593 0601 0609 0617 0625 0633 0641 0649 0657	0514 0522 0530 0538 0546 0554 0554 0578 0578 0578 0584 0594 0602 0610 0618 0626 0634 0642	0515 0523 0531 0539 0547 0555 0563 0571 0595 0603 0611 0619 0627 0635 0643 0659	0516 0524 0532 0548 0556 0564 0572 0580 0588 0596 0588 0596 0604 0612 0628 0636 0644 0652 0660	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0597 0605 0613 0629 0637 0645 0653 0661	0518 0526 0534 0550 0558 0566 0574 0582 0590 0598 0606 0614 0628 0646 0658	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0607 0615 0623 0631 0639 0647 0655 0663		1410 1420 1420 1450 1460 1460 1510 1510 1520 1530 1540 1550 1570 1600 1610 1620 1630	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864 0872 0880 0888 0896 0904 0912 0920	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0865 0873 0889 0897 0905 0913 0921	0770 0778 0786 0794 0802 0810 0818 0826 0834 0826 0834 0858 0858 0858 0858 0858 0858 0858 085	0771 0779 0785 0803 0811 0819 0827 0835 0843 0851 0859 0867 0875 0883 0891 0899 0907 0915 0923	0772 0780 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0876 0884 0892 0900 0908 0916 0924	0773 0781 07897 0805 0813 0829 0837 0845 0853 0861 0869 0877 0885 0893 0901 0909 0917 0925	0774 0782 0790 0798 0806 0814 0822 0830 0838 0846 0854 0862 0870 0878 0876 0878 0894 0902 0910 0910 0926	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879 0887 0895 0903 0911 0927
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1140 1150 1170 1200 1210 1220 1230 1240	0512 0520 0528 0536 0544 0552 0560 0588 0576 0582 0690 0608 0616 0624 0632 0640 0648 0656 0664	0513 0521 0529 0537 0545 0553 0561 0569 0657 06609 06617 0625 0633 0641 0649 0667 0665 0663	0514 0522 0530 0538 0546 0554 0554 0570 0578 0586 0592 0610 0618 0662 0634 0658 0656 0656 0656 0656 06666 06674	0515 0523 0531 0539 0547 0555 0563 0571 0595 0603 0611 0619 0627 0635 0663 0651 0659 0667	0516 0524 0532 0540 0548 0556 0564 0572 0580 0588 0596 0604 0612 0620 0628 0636 0636 0664 0668 0668	0517 0525 0533 0541 0549 0557 0565 0573 0581 0589 0605 0613 0669 0637 0663 0663 0669 0669 0669	0518 0526 0534 0550 0558 0568 0574 0598 0696 0614 0622 0630 0638 0646 0654 0664 0670	0519 0527 0535 0543 0551 0559 0567 0575 0583 0591 0599 0667 0667 0667 0663 0663 06647 0655 0663		1410 1420 1420 1440 1450 1460 1470 1500 1510 1520 1530 1540 1550 1570 1600 1610 1620 1630 1640	0768 0776 0784 0792 0800 0808 0816 0824 0832 0840 0848 0856 0864 0856 0884 0856 0888 0886 0984 09912 0920	0769 0777 0785 0793 0801 0809 0817 0825 0817 0825 0841 0849 0857 0857 0857 0857 0857 0889 0897 0905 0921	0770 0778 0786 0794 0802 0810 0818 0826 0834 0858 0858 0858 0858 0858 0859 0859 0859	0771 0779 0787 0795 0803 0811 0819 0827 0843 0851 0843 0851 0867 0875 0883 0891 0899 0907 0915	0772 0780 0788 0796 0804 0812 0820 0828 0844 0852 0860 0868 0856 0866 0884 0892 0900 0908 0916 0924 0922	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877 0885 0893 0901 0909 0917 0925 0933	0774 0782 0790 0798 0806 0814 0822 0830 0848 0846 0854 0862 0870 0862 0854 0862 0894 0902 0910 0918 0926 0924	0775 0783 0791 0799 0815 0823 0831 0839 0847 0855 0863 0871 0879 0887 0895 0887 0895
to 1777	10 1023	1010 1020 1030 1050 1060 1070 1100 1110 1120 1130 1140 1150 1160 1170 1220 1220 1220 1240 1250	0512 0520 0528 0536 0544 0552 0560 0568 0576 0584 0592 0600 0608 0616 0624 0624 0648 0664 0656 0664	0513 0521 0529 0537 0545 0553 0569 0585 0593 0601 0609 0617 0625 0633 0641 0649 0657 0665 0673 0661	0514 0522 0530 0538 0546 0554 0562 0570 0578 0594 0618 0626 0618 0626 0634 0626 0658 0666 0658	0515 0523 0531 0539 0547 0555 0563 0595 0603 0611 0619 0627 0635 0663 0659 0667 0675	0516 0524 0532 0540 0548 0564 0564 0564 0658 0658 0658 0658 0658 0620 0620 0628 0620 0628 0620 0628 0626 0664 06652 06660 06684	0517 0525 0533 0541 0549 0557 0565 0553 0589 0597 0605 0613 0629 0629 0629 0629 0629 0629 0629 0629	0518 0526 0534 0554 0550 0558 06566 0654 06590 0622 0630 0622 0630 0628 0646 0654 0662 0678 0668	0519 0527 0535 0543 0551 0559 0667 0615 0623 0631 0639 0647 0655 0663 0671 0679 0687		1410 1420 1440 1440 1450 1460 1510 1510 1520 1530 1550 1550 1550 1550 1560 1570 1600 1610 1620 1640 1650	0768 0776 0784 0792 0800 0808 0816 0824 0840 0848 0856 0864 0848 0856 0864 0888 0888 0896 0904 0912 0928 0928	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881 0889 0897 0905 0913 0929 0929	0770 0778 0786 0786 0786 08794 0802 0818 0826 0834 0842 0850 0842 0850 0842 0850 0842 0850 0842 0850 0842 0850 0882 0890 09898	0771 0779 0787 0785 0803 0811 0859 0843 0859 0867 0875 0883 0891 0889 0907 0915 0923 0931	0772 0780 0788 0786 0804 0812 0820 0828 0836 0844 0852 0860 0864 08660 0864 0852 08660 0864 08692 0900 0908 0916 0932 0940	0773 0781 0789 0797 0805 0813 0829 0837 0845 0845 0863 0861 0869 0877 0885 0893 0901 0909 0917 0925 0933 0941	0774 0782 0790 0798 0806 0814 0822 0830 0846 0854 0854 0856 0876 0876 0876 0878 0902 0910 0918 0926	0775 0783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879 0879 0895 0893 0891 0891 09919 0927 0935 0943
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1100 1110 1120 1130 1140 1150 1170 1220 1220 1220 1220 1240 1260	0512 0520 0528 0536 0544 0552 0560 0558 0556 0568 0608 0608 0608 0608	0513 0529 0537 0545 0553 0569 0569 06593 0661 0625 0625 0641 06659 0665 06633 0641	0514 0522 0530 0538 0546 0554 0554 0554 0556 0558 0594 0610 0618 0626 0634 0642 0650 0658 0658 0658	0515 0523 0531 0539 0547 0555 0563 0571 0595 0603 0611 0627 0627 0625 0643 0651 06627 0675 0663 0661	0516 0524 0532 0540 0548 0564 0572 0580 0588 0658 0658 0658 0620 0628 0620 0628 0644 0652 06620 06628 06620	0517 0525 0533 0541 0549 0557 0565 0573 0589 06597 0605 0629 0629 0629 0629 0629 06537 0645 0663 0663 0663	0518 0526 0534 0554 0550 0558 0566 0574 0580 0598 0690 0614 0622 0630 0654 0654 0654 0654 0654 06578	0519 0527 0535 0543 0559 0559 0557 0559 0567 0559 0607 0615 0623 0631 0639 0643 0663 0663 0663 0663		1410 1420 1430 1440 1450 1450 1550 1550 1550 1550 155	0768 0776 0784 0792 0800 0808 0816 0824 0840 0848 0856 0864 0848 0856 0888 0886 0888 0896 0994	0769 0777 0785 0793 0801 0809 0817 0825 0833 0841 0849 0857 0865 0873 0881 0889 0887 0905 0905 0905 0905	0770 0778 0786 0794 0802 0810 0810 0818 0826 0834 0858 0858 0856 0858 08666 0874 0882 0890 0888 0906 0914 0922 0938 0946	0771 0779 0787 0795 0803 0811 0827 0827 0855 0843 0851 0859 0867 0883 0881 0889 0907 0915 0923 0931 0939 0947	0772 0780 0788 0786 0804 0812 0820 0828 0836 0844 0852 0860 0868 0852 0860 0868 0876 0900 0908 0916 0922 0940 0948	0773 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0877 0885 0893 0901 0909 0917 0925 0933 0941	0774 0782 0790 0798 0806 0814 0822 0830 0854 0854 0854 0862 0870 0878 08866 0894 0902 0910 0918 0916 0934 0942 0950	0775 0783 0791 0799 0807 0815 0823 0831 0839 0845 0855 0863 0871 0855 0863 0871 0895 0895 0903 0911 0927 0935 0943
to 1777	10 1023	1010 1020 1030 1040 1050 1070 1100 1110 1120 1130 1140 1150 1160 1170 1220 1240 1240 1240 1240	0512 0520 0528 0536 0552 0560 0552 0560 0552 0560 0552 0560 0658 0600 0608 0616 0648 0646 0648 0648 0648 0680 0688 0696	0513 0521 0529 0537 0545 0553 0553 0553 0553 0553 0593 06609 0617 0625 0633 0641 0669 0657 0665 0673 0681 0689 0697	0514 0522 0530 0538 0546 0554 0554 0554 0558 0662 0662 0662 0658 0664 0658 0664 0662 0658 0662 06690 06688	0515 0523 0531 0539 0547 0555 0563 0571 0595 0603 0611 0619 0627 0635 0643 0651 0659 0663 0683 06691	0516 0524 0532 0540 0556 0556 0556 0556 0588 0596 0604 0612 0628 0660 0652 06660 06684 0652 0664 06692 0700	0517 0525 0533 0541 0549 0557 0565 0613 06605 06605 06605 06637 06645 06533 06611 06699 0677 06855 06893 0701	0518 0526 0534 0558 0558 0558 0558 0598 0606 0614 0622 0630 0646 0654 0654 0662 0678 0686 0694 0702	0519 0527 0535 0543 0559 0559 0559 0567 0575 0667 0667 0667 0647 0655 0663 0671 0679 0687 0687 0687		1410 1420 1430 1443 1443 1443 1443 1540 1510 1510 1510 1520 1550 1550 1560 1550 1560 1560 1660 1610 1620 1640 1640 1640	0768 0776 0784 0792 0800 0808 0816 0824 0848 0856 0856 0856 0856 0888 0896 0904 0912 0920 0994 0952	0769 0777 0785 0793 0801 0889 0887 0889 0857 0865 0873 0889 0897 0905 0913 0929 0937 0945 0953	0770 0778 0786 0794 0802 0810 0818 0826 0834 0858 0858 0858 0858 0858 0858 0858 085	0771 0779 0787 0795 0803 0811 0819 0827 0843 0851 0859 0867 0875 0883 0891 0899 0907 0915 0923 0931 0939 0947 0955	0772 0780 0788 0796 0804 0812 0820 0828 0826 0844 0852 0868 0868 0886 08868 0892 0900 09908 09908 09916 0992 09940 09932	0773 0781 0789 0797 0805 0813 0821 0845 0853 0861 0869 0877 0885 0893 0901 0909 0917 0925 0933 0941 0949 0957	0774 0782 0790 0798 0806 0814 0822 0830 0854 0862 0854 0862 0854 0862 0854 0862 0854 0902 0910 0918 0926 0934 0950 0958	0775 0783 0791 0799 0807 0815 0823 0839 0847 0855 0863 0871 0855 0863 0879 0887 0899 0987 0919 0927 0935 0951 0959
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1100 1110 1120 1130 1140 1150 1140 1210 1220 1230 1240 1220 1240 1250 1240 1250 1260 1270	0512 0520 0528 0536 0552 0560 0552 0560 0552 0560 0552 0650 0658 0656 0664 0640 0648 0664 0668 0664 06688 06696	0513 0521 0529 0537 0545 0553 0553 0553 0553 0553 0659 0659 0669 0669 0657 0665 0653 06649 0657 0665 0673 0689 0689 0689	0514 0522 0530 0538 0546 0554 0554 0554 0554 0554 0554 0554	0515 0523 0523 0555 0555 0555 0603 0557 0603 0611 0619 0627 0635 0651 0659 0663 0651 0659 0683 0699 0707	0516 0524 0532 0540 0548 0556 0556 0556 0556 0654 0558 0604 0612 0620 0628 0636 0663 0663 0663 0663 0668 0662 0668 0692 0700 0708	0517 0525 0533 0541 0549 0557 0565 0573 0565 0573 0605 0643 0641 0649 06437 0645 0653 0661 0669 0677 0685 0671 0685 0693 0701	0518 0526 0534 0550 0558 0558 0556 0558 0556 0558 0556 0558 0666 0654 0662 0654 0662 0670 0678 0662 0670 0678 0664 0662 0670 0702	0519 0527 0543 0553 0559 0559 0559 0659 0623 0623 0623 0663 0663 0663 0663 0663		1410 1420 1430 1443 1443 1443 14430 14430 14470 1500 1520 1520 1520 1520 1530 1550 1550 1550 1550 1550 1660 1660 1650 1660 1650 1660 1650	0768 0776 0784 0792 0830 0816 0824 0840 0840 0840 0864 0856 0864 0888 0856 0904 0912 0920 0920 0922 0936 0944 0952	0769 0777 07785 0793 0801 0809 0809 0885 0883 0881 0885 0865 0873 0885 0885 0885 0885 0885 0885 0885 0905 090	0770 07786 0786 0794 0802 0810 0818 0826 0850 0850 0850 0854 0862 0890 0874 0922 0930 0922 0930 0924 0954 0954	0771 0779 0787 0795 0803 0811 0859 0843 0851 0857 0867 0867 0867 08875 0883 0891 0899 0907 0915 0923 0931 0939 0935 0939	0772 0780 0780 0788 0796 0804 0820 0822 0820 0828 0844 0852 0868 0884 0868 0884 0892 0900 0908 0916 0924 0935 0940	0773 0781 0789 0797 0805 0813 0829 0837 0845 0853 0861 0869 0877 0885 0893 0909 0909 0917 0925 0931 0941 0949 0957	0774 0782 0780 0782 0806 0806 0884 0846 0854 0854 0854 0854 0856 0854 0876 0902 0918 0926 0926 0958 0956	0775 07783 0799 0807 0815 0823 0839 0839 0839 0839 0839 0839 0839 083
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1140 1150 1150 1150 1220 1220 1220 1220 1230 1250 1250 1250 1250 1250 1250 1250 125	0512 0520 0528 0536 0544 0552 0560 0552 0560 0588 0516 0592 0600 0624 0624 0624 06542 0664 06648 0656 06648 06566 06648 06566 06648 0656 06688 0656 06688 0696	0513 0521 0527 0545 0553 0553 0553 0553 0553 0553 0553	0514 0522 0530 0538 0546 0554 0554 0554 0556 0554 0586 0594 0662 0650 0658 0656 0654 0656 0656 0666 0666 0668 06690 0698	0515 0523 0531 0539 0547 0555 0563 0571 0595 0603 0611 0619 0627 0635 0667 0663 0667 0667 0667 0669 0699 0707	0516 0524 0532 0540 0556 0556 0556 0556 0596 0604 0628 0660 0628 0660 0668 0668 0668 0668	0517 0525 0533 0541 0549 0557 0565 0573 0581 0605 0613 0629 0637 0669 0669 0669 0669 0669 0669 0669 066	0518 0526 0534 0542 0550 0558 0558 0558 0558 0598 0606 0598 0646 0654 06630 0630 0630 06636 06634 06636 06636 06636 0670 0678 0686 0694 0702	0519 0527 0543 0543 0559 0559 0607 0615 0623 0631 0639 0647 0655 0663 0671 0695 0703 0711		1410 1420 1430 1443 1443 1445 1500 1510 1550 1550 1550 1550 1550	0768 0776 0784 0792 0800 0808 0816 0824 0832 0848 0856 0864 0872 0880 0888 0896 0904 0912 0920 0928 0934 0952 0960	0769 0777 0785 0793 0801 0809 0817 0825 0849 0849 0857 0865 0873 0881 0889 0897 0905 0921 0929 0937 0945 0953 0961 0969	0770 0778 0786 0794 0802 0810 0818 0826 0834 0850 0850 0858 0850 0858 0850 0858 0856 0874 0988 0996 0930 0930 0930 0930 0954 0954	07711 07799 0787 0795 0803 0811 0819 0827 08453 08451 0859 0867 0875 08683 0891 08899 0907 0915 0923 0931 0939 0947 0955	0772 0780 0786 0786 0804 0812 0820 0828 0836 0844 0852 0860 0868 0866 0864 0892 0900 0908 0916 0924 0932 0940 0956	0773 0781 0789 0797 0805 0813 0821 0843 0853 0853 0861 0865 0885 0885 0885 0885 0885 0885 0885	0774 0782 0782 0790 0798 0806 0814 0822 0830 0844 0854 0854 0854 0854 0854 0886 0886 0886 0886 09894 0910 0918 0926 0958 0956 0974	0775 07783 0791 0799 0807 0815 0831 0831 0833 0831 0835 0847 0855 0847 0855 0847 0855 0903 0911 0919 0927 0943 0959 0959
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1140 1150 1220 1240 1250 1250 1250 1250 1250 1250 1250 125	0512 0520 0520 0544 0552 0560 0568 0576 0584 0558 0600 0608 0632 0660 0632 0664 0652 0664 0654 0654 0654 0664 0654 0664 0656 0664 0704 0712 0728	0513 0521 0527 0545 0553 0553 0553 0553 0553 0659 0659 0657 0665 06657 06657 06657 06657 06657 06659 06657 06659 06697	0514 0522 0530 0546 0554 0562 0570 0578 0578 0578 0578 0578 0578 0578	0515 0523 0531 0539 0547 0555 0563 0555 0603 0619 0659 0663 0659 0663 0659 0663 0659 0667 0663 0669 0667 0669 0699 0707 0715	0516 0524 0532 0540 0556 0556 0556 06596 06596 0620 0620 06620 06620 06680 06680 06680 06680 06692 0700 0708 0716 0724	0517 0525 0533 0541 0557 0565 0573 0565 0573 06597 0605 0621 0629 0637 0661 0669 0667 0663 0661 0669 0677 0685 0693 0701	0518 0526 0526 0552 0550 0558 0558 0558 0558 0558 0558	0519 0527 0535 0543 0551 0559 0567 0575 0623 0639 0647 0655 0663 0639 0647 0655 0703 0671 0679 0687 0703		1410 1420 1430 1440 1450 1460 1550 1550 1550 1550 1550 1550 1550 15	0768 0776 0784 0792 0800 0808 0816 0824 0848 0856 0864 0864 0864 0864 0864 0868 0866 0888 0896 0904 0912 0920 0920 0922 0926 0952 0960 0964 0968	0769 0777 0785 0793 0801 0809 0817 0825 0849 0857 0865 0873 0881 0889 0875 09013 0921 0921 0923 0945 0953	0770 0778 0786 0788 0784 0802 0810 0884 0858 0858 0858 0858 0856 0874 0852 0850 0890 0890 0922 0930 0922 0930 0924 0954 0954	07711 0779 0787 0795 0803 0811 0819 0827 0845 08451 0859 08675 0883 0891 0875 0883 0891 0907 0915 0923 0931 0939 0947 0955 0947	0772 0780 0780 0786 0804 0820 0828 0820 0828 0834 0852 0860 0868 0884 0852 0860 0868 0990 0900 0908 0916 0924 0948 0955 0948 0956	0773 0781 0781 0789 0797 0805 0805 0883 0861 0853 0861 0869 0877 0885 0893 0901 0905 0917 0925 0933 0941 0949 0957 0945 0949 0957	0774 0782 0790 0806 0814 0826 0834 0854 0854 0854 0854 0854 0854 0854 085	0775 07783 0799 0807 0815 0823 0831 0839 0847 0855 0863 0871 0879 0885 0890 0885 0903 0911 0919 0927 0935 0943 0959
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1140 1150 1240 1250 1260 1240 1250 1260 1260 1260 1260 1260 1260 1260 126	0512 0520 0528 0536 0544 0552 0560 0568 0568 06584 06592 0608 0648 0652 0648 0656 06648 0656 06648 0656 06680 0672 0672 0680 0704 0712 0720 0720 0736	0513 0521 0521 0529 0537 0545 0553 0569 0585 0593 0601 0669 0669 06637 06649 06637 06649 06637 06649 06637 06649 06637 06649 06697 0705 0718 0715 0718	0514 0522 0530 0538 0554 0554 0556 0570 0578 0586 0594 0610 0618 0620 0658 0663 0658 0663 0658 0663 0664 06698 0706 0714 0738	0515 0523 0523 0531 0537 0555 0563 0571 0579 0635 0663 0661 0659 0663 06651 06659 0663 06651 06659 06675 06683 0699 0707 0715 0723 0731	0516 0524 0532 0540 0556 0568 0556 0588 0596 0604 0612 0620 0620 0620 06620 06620 06636 0664 0652 0660 06684 0692 0700 0708 0770 0708 0716 0724 0724 0740 0740 0740 0740	0517 0525 0533 0549 0557 0565 0573 0565 0573 0605 0613 0621 0629 0637 06653 0661 0663 0661 0663 0667 06653 0670 0701 0709 0717 07253 0731	0518 0526 0526 0550 0558 0550 0558 0574 0582 0630 0614 0622 0630 0654 0654 0654 0654 0654 0702 0710 0728	0519 0527 0535 0543 0551 0559 0657 0675 0615 0623 0631 0639 0647 0695 0663 0679 0667 0679 0667 0703 0711 0719 0727 0735		1410 1420 1430 1440 1450 1450 1500 1510 1510 1530 1550 1550 1550 1640 1650 1640 1650 1640 1650 1640 1650 1640 1650 1640 1710 1770	0768 0776 0776 0776 0784 0792 0800 0808 0808 0824 0824 0824 0824 082	0769 0777 0785 0793 08801 08804 08804 08805 08813 08849 08857 0865 08833 0881 0889 08905 09055 09937 09455 0953 09561 09969 09977	0770 0778 0788 0788 0784 0802 0810 0810 0842 0850 0852 0850 0854 0852 0850 0854 0866 0874 0882 0890 0994 09954 0954 0954 0954	07711 0779 0787 0795 0803 0811 0819 0827 0843 0851 0853 0867 0875 0883 0891 0907 0915 0907 0915 0923 0955 0953	0772 0780 0780 0788 0796 0804 0820 0828 0844 0852 0860 0884 0886 0884 0852 0864 0892 0900 0908 0916 0924 0940 0940 0955 0954	0773 0781 0781 0789 0797 0805 0813 0821 0829 0845 0845 0845 0845 0845 0845 0845 0893 0801 0909 0917 0925 0933 0941 0949 0957 0955 0957	0774 0782 0790 0798 0806 0814 0822 0830 0846 0854 0854 0856 0894 0902 0910 0918 0924 0950 0958 0958	0775 07783 0791 0799 0807 0815 0831 0831 0833 0831 0835 0847 0855 0847 0855 0847 0855 0967 0911 0919 0959 0959
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1120 1130 1140 1130 1140 1150 1210 1220 1240 1240 1250 1240 1250 1250 1310 1320 1310 1320	0512 0520 0528 0536 0544 0552 0560 0568 0568 0568 06568 0664 06642 06642 0664 06642 06640 06648 06664 0664 06640 0704 0710 0720 0720 0720 0724	0513 0521 0521 0529 0537 0545 0553 0561 0569 0569 0569 0667 06625 06633 0661 0669 0665 0673 0665 0673 0665 0673 0665 0673 0705 0705 0711 0729 0737	0514 0522 0530 0546 0554 0554 0554 0554 0552 0554 0554 0652 0650 0658 0660 0658 0666 0654 0656 0666 0666 0666 0668 0668 0668 0706 0722 0730 0722 0730 0746	0515 0523 0523 0539 0547 0555 0563 0657 0655 0663 0667 06675 0667 06675 0667 06675 0667 0667	0516 0524 0532 0540 0556 0564 0556 0556 0556 0604 0620 0620 0620 0620 0660 0668 0660 0668 06660 0668 0660 0700 070	0517 0525 0533 0549 0557 0565 0573 0565 0613 0621 0629 0637 0663 0661 0663 0663 0661 0669 0677 0665 0693 0701 0701 0707 0775 0733 0741 0749	0518 0526 0526 0550 0550 0550 0558 0574 0582 0630 0638 0646 0654 0662 0670 0662 0670 0662 0670 0662 0670 0664 0702 0718 0726	0519 0527 0535 0543 0551 0559 0567 0575 0599 0607 0615 0623 0631 0639 0663 0663 0663 0663 0663 0663 0663		1410 1420 1430 1440 1450 1460 1460 1510 1500 1510 1500 1530 1540 1550 1550 1550 1550 1560 1610 1620 1640 1650 1660 1670 1700 1710 1720 1720	0768 0776 0784 0792 0800 0808 0816 0840 0842 0840 0844 0842 0840 0844 0856 0864 0876 0880 0888 0896 0994 0992 09920 0920 0920 0924 0952 0960 0976 0984 0976 0976 0976 0976 0976 0976 0976 0976	0769 0777 0785 0793 0801 0801 0825 0833 0841 0849 0857 08657 08657 08657 08657 08657 08657 08659 08905 09915 0991 0921 0925 0933 0945 0953 0961 09677 0985 09973 1001	0770 0778 0786 0788 0784 0802 0810 08818 0826 0834 0858 0858 0858 0858 0858 0858 0858 085	0771 0779 0787 0795 0803 0811 0819 0827 0835 0843 0859 0867 0875 0883 0891 0899 0907 0915 0923 0931 0939 0947 0955 0963 0979 0987 0957	0772 0780 0788 0796 0804 0812 0820 0828 0836 0844 0852 0860 0868 0876 0884 0876 0884 0876 0968 0970 0900 0908 0990 0990 0994 0994 0956 0944 0975 0940 0956 0964 0975 0980 0988 0986 0988 0986 0988 0986 0988 0988	0773 0781 0781 0789 0797 0805 0813 0821 0829 0837 0845 0853 0861 0869 0875 0893 0901 0905 0993 0941 0949 0957 0945 0949 0957	0774 0782 0782 0798 0806 0814 0822 0830 0838 0846 0854 0854 0854 0856 0874 0902 0918 0926 0934 0945 0958 0958 0958	0775 07783 0799 0807 0815 0823 08839 0847 0855 0863 0887 0895 0903 0981 0995 0993 0991 0959 0967 0975
to 1777	10 1023	1010 1020 1030 1040 1050 1060 1070 1100 1110 1120 1130 1140 1150 1220 1240 1250 1240 1250 1260 1310 1320 1310 1320 1330	0512 0520 0520 0544 0552 0560 0568 0568 06584 06584 06586 06648 0652 0648 0652 0648 0652 0648 0656 0664 0752 0704 0712 0728 0736 0736	0513 0521 0521 0529 0537 0545 0553 0569 0569 0569 0569 0569 0669 0669 0663 0669 0663 0665 0665 0673 0665 0705 0705 0705 0705 0705 0705 0705	0514 0522 0530 0538 0554 0554 0556 0570 0578 0586 0594 0610 0618 0620 0658 0663 0658 0663 0658 0663 0664 06698 0706 0714 0738	0515 0523 0523 0531 0547 0555 0603 0571 0635 0663 0667 0663 0667 0663 0667 0663 0667 0667	0516 0524 0532 0548 0556 0568 0598 0598 0598 0598 0604 0612 0620 0628 0669 0668 0668 0668 0668 0668 0668 0700 0708 0716 0732 0740 0732 0756	0517 0525 0533 0549 0557 0565 0573 0581 0589 0597 0605 0613 0621 0629 0637 0645 0669 0701 0769 0701 0709 0717 0725 0733 0741 0749	0518 0526 0526 0550 0558 0550 0574 0582 0630 0590 0598 0696 0614 0622 0630 0638 0664 0654 0662 0670 0702 0710 0718 0726 0734 0734	0519 0527 0535 0543 0551 0559 0575 0653 06591 0591 0639 0647 0645 0663 0647 0645 0663 0671 0689 0687 0679 0687 0703 0703 0711 0719 0727 0735 0743 0759		1410 1420 1430 1440 1450 1450 1550 1550 1550 1550 155	0768 0776 0776 0784 0792 0800 0808 0808 0824 0824 0840 0848 0840 0848 0846 0848 0856 0864 0856 0864 0856 0888 0896 0904 0912 0920 0928 0934 0952 0960 0984 0984 0992	0769 0777 0785 0793 0801 0804 0817 0825 0833 0841 0849 0857 0865 0873 0881 0889 0995 0995 0929 0937 0945 0953 0953 0953 1001	0770 0778 0786 0788 0784 0802 0810 0884 0850 0858 0858 0866 0874 0852 0850 0858 0906 0914 0922 0930 0930 0930 0934 0954 0954	07711 0779 0787 0795 0803 0811 0819 0827 0843 0851 0843 0851 0843 0851 0843 0851 0843 0851 0843 0891 0931 0931 0931 0935 0947 0955 0963 0971 10979	0772 0780 0780 0786 0796 0804 0812 0820 0828 0836 0844 0852 0868 0886 0886 0886 0886 0886 0886 088	0773 0781 0781 0789 0797 0805 0813 0821 0829 0845 0853 0845 0853 0861 0869 08877 0885 0893 0901 0909 0917 0925 0933 0941 0949 0957 0955 0957 0985 0989 0989	0774 0782 0780 0782 0806 0814 0822 0830 0846 0854 0854 0856 0894 0969 0910 0918 0922 0950 0958 0958	0775 07783 0791 0799 0807 0815 0823 0831 0839 0847 0855 0863 0867 0879 0887 0885 0863 0891 0993 0991 0959 0959 0959

0000	0000
to	to
0777	0511
(Octal)	(Decimal
10000 20000 30000 40000 50000 60000	Decimal - 4096 - 8192 - 12288 - 16384 - 20480 - 24576 - 28672

H-3

### Octal-Decimal Integer Conversion Table (Cont)

	·																	1			
	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7				
2000	1024	1025	1026	1027	1028	1029	1030	1031	240	0 1280	1281	1282	1283	1284	1285	1286	1287		,	2000	1024
2010	1032	1033	1034	1035	1036	1037	1038	1039	241	0 1288	1289	1290	1291	1292	1293	1294	1295			to	to
	1040									0 1296										2777 Octal)	1535 (Decimal)
2040	1056	1057	1058	1059	1060	1061	1062	1063	244	0 1312	1313	1314	1315	1316	1317	1318	1319				(Decing)
	1064 1072									0 1320											
	1080									0 1336											Decimal
2100	1088	1089	1090	1091	1092	1093	1094	1095	250	0 1344	1345	1346	1347	1348	1 349	1350	1351				4096 8192
2110	1096	1097	1098	1099	1100	1101	1102	1103		0 1352									30	- 0000	12288
	1104									0 1360											16384 20480
	1112									0 1368 0 1376											24576
	1128									0 1384									70	- 0000	28672
	1136 1144								256		1393 1401										
	1152 1160									0 1408											
	1168									0 1424											
	1176									0 1432											
	1184 1192									0 1440											
	1200								266	0 1456	1457	1458	1459	1460	1461	1462	1463				
2270	1208	1209	1210	1211	1212	1213	1214	1215	267	0 1464	1465	1466	1467	1468	1469	1470	1471				
	1216									0 1472											
	1224								271	0 1480	1481										
	1240									0 1496											
	1248									0 1504											
	1256 1264									0 1512 0 1520											
2370	1272	1273	1274	1275	1276	1277	1278	1279		0 1528											
	0	1	2	3	4	5	6	7	]	0	1	2	3	4	5	6	7				
3000	+								340										-	1000	1534
3010	1536 1544	1537 1545	1538 1546	1539 1547	1540 1548	1541 1549	1542 1550	1543 1551	341	0 179:	1793	1794 1802	1795 1803	1796 1804	1797 1805	1798 1806	1799 1807,		3	3000 to	1 536 to
3010 3020	1536 1544 1552	1537 1545 1553	1538 1546 1554	1539 1547 1555	1540 1548 1556	1541 1549 1557	1542 1550 1558	1543 1551 1559	34	00 179: 10 1800 20 1800	1793 1801 1809	1794 1802 1810	1795 1803 1811	1796 1804 1812	1797 1805 1813	1798 1806 1814	1799 1807, 1815		3	to 777	to 2047
3010 3020 3030	1536 1544	1537 1545 1553 1561	1538 1546 1554 1562	1539 1547 1555 1563	1540 1548 1556 1564	1541 1549 1557 1565	1542 1550 1558 1566	1543 1551 1559 1567	34 34 34	0 179:	1793 1801 1809 1817	1794 1802 1810 1818	1795 1803 1811 1819	1796 1804 1812 1820	1797 1805 1813 1821	1798 1806 1814 1822	1799 1807, 1815 1823		3	to	to
3010 3020 3030 3040 3050	1536 1544 1552 1560 1568 1576	1537 1545 1553 1561 1569 1577	1538 1546 1554 1562 1570 1578	1539 1547 1555 1563 1571 1579	1540 1548 1556 1564 1572 1580	1541 1549 1557 1565 1573 1581	1542 1550 1558 1566 1574 1582	1543 1551 1559 1567 1575 1583	341 342 342 344 345	00 1793 10 1800 20 1800 30 1810 10 1824 50 1833	1793 1801 1809 1817 1825 1833	1794 1802 1810 1818 1826 1834	1795 1803 1811 1819 1827 1835	1796 1804 1812 1820 1828 1836	1797 1805 1813 1821 1829 1837	1798 1806 1814 1822 1830 1838	1799 1807, 1815 1823 1831 1839		3	to 777	to 2047
3010 3020 3030 3040 3050 3050	1536 1544 1552 1560 1568	1537 1545 1553 1561 1569 1577 1585	1538 1546 1554 1562 1570 1578 1586	1539 1547 1555 1563 1571 1579 1587	1540 1548 1556 1564 1572 1580 1588	1541 1549 1557 1565 1573 1581 1581	1542 1550 1558 1566 1574 1582 1590	1543 1551 1559 1567 1575 1583 1591	34 34 34 34 34 34 34	00 1793 10 1800 20 1800 30 1810 30 1810 30 1824 50 1833 50 1840	1793 1801 1809 1817 1825 1833 1841	1794 1802 1810 1818 1826 1834 1842	1795 1803 1811 1819 1827 1835 1843	1796 1804 1812 1820 1828 1836 1844	1797 1805 1813 1821 1829 1837 1845	1798 1806 1814 1822 1830 1838 1846	1799 1807, 1815 1823 1831 1839 1847		3	to 777	to 2047
3010 3020 3030 3040 3050 3060 3070	1536 1544 1552 1560 1568 1576 1584 1592	1537 1545 1553 1561 1569 1577 1585 1593	1538 1546 1554 1562 1570 1578 1586 1594	1539 1547 1555 1563 1571 1579 1587 1595	1540 1548 1556 1564 1572 1580 1588 1596	1541 1549 1557 1565 1573 1581 1589 1597	1542 1550 1558 1566 1574 1582 1590 1598	1543 1551 1559 1567 1575 1583 1591 1599	341 343 344 344 344 344 344	00 179: 10 1800 20 1800 30 1810 30 182 50 183 50 183 50 184 70 184	1793 1801 1809 1817 1825 1833 1841 1849	1794 1802 1810 1818 1826 1834 1842 1850	1795 1803 1811 1819 1827 1835 1843 1851	1796 1804 1812 1820 1828 1836 1844 1852	1797 1805 1813 1821 1829 1837 1845 1853	1798 1806 1814 1822 1830 1838 1846 1854	1799 1807, 1815 1823 1831 1839 1847 1855		3	to 777	to 2047
3010 3020 3030 3040 3050 3060 3070 3100	1536 1544 1552 1560 1568 1576 1584 1592 1600	1537 1545 1553 1561 1569 1577 1585 1593 1601	1538 1546 1554 1562 1570 1578 1586 1594 1602	1539 1547 1555 1563 1571 1579 1587 1595 1603	1540 1548 1556 1564 1572 1580 1588 1596 1604	1541 1549 1557 1565 1573 1581 1589 1597 1605	1542 1550 1558 1566 1574 1582 1590 1598 1606	1543 1551 1559 1567 1575 1583 1591 1599 1607	341 343 344 344 344 344 344 345	00 1793 10 1800 20 1801 30 1810 10 1824 50 1833 50 1840 70 1844 50 1850	1793 1801 1809 1817 1825 1833 1841 1849	1794 1802 1810 1818 1826 1834 1842 1850 1858	1795 1803 1811 1819 1827 1835 1843 1851 1859	1796 1804 1812 1820 1828 1836 1844 1852 1860	1797 1805 1813 1821 1829 1837 1845 1853 1861	1798 1806 1814 1822 1830 1838 1846 1854 1862	1799 1807, 1815 1823 1831 1839 1847 1855 1863		3	to 777	to 2047
3010 3020 3030 3040 3050 3050 3060 3070 3110 3110 3120	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623	341 342 344 344 344 344 344 344 344 344 344	00 179: 0 180: 0 180: 0 180: 0 181: 0 182: 0 183: 0 184: 0 184: 0 185: 0 186: 0 186: 0 186:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879		3	to 777	to 2047
3010 3020 3030 3040 3050 3060 3070 3110 3110 3120 3130	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631	341 342 344 344 344 344 344 344 344 344 355 355	00         179:           00         180:           20         180:           30         181:           40         182:           50         183:           50         184:           70         184:           90         185:           90         185:           90         186:           90         186:           90         186:           90         186:           90         186:           90         186:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887		3	to 777	to 2047
3010 3020 3030 3050 3060 3070 3110 3120 3130 3140	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626 1634	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639	341 342 344 344 344 344 344 344 354 351 351 351 351	00 179: 0 180: 0 180: 0 180: 0 181: 0 182: 0 183: 0 184: 0 184: 0 185: 0 186: 0 186: 0 186:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1894	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895		3	to 777	to 2047
3010 3020 3030 3040 3060 3060 3070 3100 3110 3120 3130 3150 3160	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632 1640 1648	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626 1634 1642 1650	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636 1644 1652	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1629 1637 1645 1653	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646 1634	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647 1655	341 343 344 344 344 344 345 355 355 355 355	00         179:           180:         180:           20         180:           180:         180:           180:         180:           180:         181:           181:         182:           182:         184:           184:         184:           184:         184:           184:         186:           186:         186:           188:         188:           189:         189:           190:         189:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905	1794 1802 1810 1818 1826 1834 1842 1850 1858 1856 1874 1882 1890 1898 1906	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1899 1907	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1868 1876 1884 1892 1900 1908	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893 1901 1909	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1866 1894 1902 1910	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911		3	to 777	to 2047
3010 3020 3030 3050 3060 3050 3100 3110 3120 3130 3140 3150 3160 3170	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632 1640 1648 1656	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626 1634 1642 1650 1658	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651 1659	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636 1644 1652 1660	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1653 1661	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646 1634 1662	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647 1655 1663	341 343 344 344 344 344 345 355 355 355 355	00         179:           10         180:           20         180:           30         181:           40         182:           50         183:           50         184:           70         185:           60         185:           60         185:           60         186:           60         186:           10         188:           60         188:           60         188:           60         189:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905	1794 1802 1810 1818 1826 1834 1842 1850 1858 1856 1874 1882 1890 1898 1906	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1899 1907	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1868 1876 1884 1892 1900 1908	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893 1901 1909	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1866 1894 1902 1910	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911		3	to 777	to 2047
3010 3020 3030 3040 3050 3060 3110 3120 3140 3140 3150 3140 3150 3170	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632 1640 1648 1656	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626 1634 1642 1650 1658 1666	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651 1659 1667	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636 1644 1652 1660	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1629 1637 1645 1653 1661 1669	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646 1634 1662 1670	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647 1655 1663	341 342 343 344 344 347 352 352 355 355 355 355 355 355 355 355	00         179:           00         180:           180:         180:           180:         180:           180:         180:           180:         180:           180:         180:           180:         182:           180:         183:           184:         184:           00         185:           00         186:           00         186:           00         188:           00         188:           00         189:           00         190:           10         190:           10         190:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1898 1906 1914	1795 1803 1811 1819 1827 1835 1843 1851 1859 1865 1875 1875 1875 1883 1891 1899 1907 1915	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892 1900 1908 1916	1797 1805 1813 1821 J829 1837 1845 1853 1861 1869 1877 1885 1893 1901 1909 1917	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1894 1902 1910 1918	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911 1919		3	to 777	to 2047
3010 3020 3030 3040 3050 3060 3100 3120 3130 3140 3150 3160 3170 3220 3220	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632 1640 1648 1656	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657 1665 1673	1538 1546 1554 1552 1570 1578 1586 1594 1602 1610 1618 1626 1634 1642 1650 1658 1666 1674	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651 1659 1667	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1628 1636 1644 1652 1660 1668 1676	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1653 1661	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646 1634 1662 1670 1678	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647 1655 1663	341 343 344 344 341 355 355 355 355 355 355 355 355 355 35	00         179:           00         180:           180:         180:           100         181:           100         182:           100         182:           100         182:           100         183:           100         183:           100         184:           100         185:           100         186:           100         188:           100         188:           100         189:           100         189:           100         189:           100         199:           100         199:           100         192:           100         192:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913 1921 1929	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1898 1906 1914 1922 1930	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1899 1907 1915 1923 1931	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892 1900 1908 1916 1924	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893 1901 1909 1917 1925 1933	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1894 1902 1910 1918 1926 1934	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911 1919 1927 1935		3	to 777	to 2047
3010 3020 3030 3040 3050 3070 3100 3110 3120 3130 3140 3150 3160 3170 3220 3220 3220	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632 1640 1648 1656 1664 1656 1664 1672 1680 1688	1537 1545 1553 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657 1665 1673 1689	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626 1634 1650 1658 1666 1674 1682 1682	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651 1659 1667 1675 1683 1691	1540 1548 1556 1564 1572 1580 1588 1596 1604 1612 1620 1628 1636 1644 1652 1660 1668 1676 1688 1676	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1629 1637 1645 1653 1661 1669 1677 1685 1693	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1638 1646 1634 1662 1670 1678 1686 1694	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647 1655 1663 1671 1679 1687 1695	341 342 343 344 344 350 352 355 355 355 355 355 355 355 355 355	00         179:           00         1800           02         1800           03         1810           10         182:           00         183:           00         183:           00         185:           00         185:           00         185:           00         185:           00         186:           00         188:           00         189:           00         189:           00         190:           00         192:           00         192:           00         193:           00         193:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913 1921 1929 1937 1945	1794 1802 1810 1818 1826 1834 1850 1858 1850 1858 1866 1874 1882 1890 1898 1906 1914 1922 1930 1938 1946	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 18875 18875 18875 18875 18875 18875 18875 18875 1891 1997 1915 1923 1931 1939 1947	1796 1804 1812 1820 1828 1836 1844 1852 1860 1884 1852 1860 1884 1892 1900 1908 1916 1924 1932 1948	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1877 1885 1893 1901 1917 1925 1933 1941	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1886 1894 1902 1910 1918 1926 1934 1950	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1903 1903 1911 1919 1927 1935		3	to 777	to 2047
3010 3020 3030 3040 3060 3060 3060 3100 3110 3120 3140 3150 3140 3170 3220 3220 3220 3220 3220 3220	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1632 1640 1648 1656 1664 1672 1680 1688 1696	1537 1545 1553 1551 1561 1569 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657 1665 1673 1689 1689	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1626 1634 1658 1666 1674 1689	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651 1659 1667 1675 1683 1691	1540 1540 1541 1556 1564 1572 1580 1588 1596 1604 1612 1628 1636 1644 1652 1660 1668 1668 1668 1668 1692 1700	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1629 1637 1645 1653 1661 1669 1677 1685 1693 1701	1542 1550 1558 1566 1574 1582 1590 1698 1614 1622 1630 1638 1646 1634 1662 1670 1678 1684 1694 1702	1543 1551 1559 1567 1575 1583 1591 1699 1607 1615 1623 1631 1639 1647 1655 1663 1671 1679 1687 1695 1703	344 344 344 344 344 344 350 355 355 355 355 355 355 355 355 355	00         179:0           00         1800           01         1800           02         1800           030         1810           10         182:0           00         183:3           00         185:0           00         185:0           00         185:0           10         186:0           10         186:0           10         186:0           10         186:0           10         190:0           10         190:0           10         192:0           10         192:0           10         193:0           10         193:0           10         194:0           10         194:0	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913 1921 1929 1937 1945 1953	1794 1802 1810 1818 1826 1834 1842 1850 1874 1882 1890 1898 1906 1914 1922 1930 1938	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1899 1907 1915 1923 1931 1939 1947	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1884 1892 1900 1908 1916 1924 1932 1940 1948	1797 1805 1813 1829 1837 1845 1853 1861 1869 1877 1885 1893 1901 1909 1917 1925 1933 1941 1949 1957	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1884 1902 1910 1918 1926 1934 1942 1950	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1903 1911 1919 1927 1935 1951		3	to 777	to 2047
3010 3030 3030 3040 3060 3060 3060 3100 3110 3110 3130 3140 3150 3140 3170 3210 3210 3220 3220 3220 3220 3220 322	1536 1544 1552 1560 1568 1576 1584 1576 1688 1616 1622 1640 1648 1656 1664 1656 1668 1668 1668 1688	1537 1545 1553 1561 1563 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657 1665 1673 1681 1689 1697 1705	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1664 1634 1658 1658 1666 1658 1666 1674 1682 1698 1706 1714	1539 1547 1555 1563 1571 1579 1603 1611 1619 1627 1635 1643 1651 1659 1667 1675 1683 1681 1699 1707	1540 1548 1556 1556 1564 1572 1580 1588 1596 1604 1612 1628 1636 1644 1652 1660 1668 1676 1684 1692 1700 1708	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1623 1663 1661 1665 1653 1661 1685 1685 1685 1709	1542 1550 1558 1558 1566 1574 1590 1598 1606 1614 1622 1630 1638 1646 1634 1662 1678 1686 1694 1702	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647 1655 1663 1671 1679 1687 1687 1703 1711	341 342 343 344 350 355 355 355 355 355 355 355 355 355	00         179: 00           00         180: 00           00         180: 00           00         181: 00           00         181: 00           00         182: 00           00         184: 00           00         185: 00           00         186: 00           00         186: 00           00         189: 00           00         190: 00           00         190: 00           00         192: 00           00         192: 00           00         192: 00           00         192: 00           00         192: 00           00         192: 00           00         194: 00	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913 1929 1937 1945 1953 1954	1794 1802 1810 1818 1826 1834 1842 1850 1858 1850 1858 1874 1882 1890 1938 1946 1954 1954 1962 1970	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1975 1923 1931 1939 1947 1955 1963 1963	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892 1900 1908 1916 1924 1932 1940 1944 1956 1964 1972	1797 1805 1813 1821 1829 1837 1845 1853 1869 1869 1867 1885 1893 1901 1917 1925 1933 1941 1949 1957 1965	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1894 1902 1910 1918 1926 1934 1942 1950 1958 1946	1799 1807, 1815 1823 1831 1833 1831 1855 1863 1871 1879 1887 1895 1903 1911 1919 1927 1935 1943 1951 1955		3	to 777	to 2047
3010 3030 3030 3040 3060 3060 3060 3100 3110 3110 3130 3140 3150 3140 3170 3210 3210 3220 3220 3220 3220 3220 322	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1618 1616 1648 1656 1648 1656 1664 1672 1680 1688 1696	1537 1545 1553 1561 1563 1577 1585 1593 1601 1609 1617 1625 1633 1641 1649 1657 1665 1673 1681 1689 1697 1705	1538 1546 1554 1562 1570 1578 1586 1594 1602 1610 1618 1664 1634 1658 1658 1666 1658 1666 1674 1682 1698 1706 1714	1539 1547 1555 1563 1571 1579 1603 1611 1619 1627 1635 1643 1651 1659 1667 1675 1683 1681 1699 1707	1540 1548 1556 1556 1564 1572 1580 1588 1596 1604 1612 1628 1636 1644 1652 1660 1668 1676 1684 1692 1700 1708	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1623 1663 1661 1665 1653 1661 1685 1685 1685 1709	1542 1550 1558 1558 1566 1574 1590 1598 1606 1614 1622 1630 1638 1646 1634 1662 1678 1686 1694 1702	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1639 1647 1655 1663 1671 1679 1687 1687 1703 1711	341 342 343 344 350 355 355 355 355 355 355 355 355 355	00         179:           00         1800;           02         1800;           030         1811;           100         182;           00         183;           00         184;           100         185;           00         185;           00         186;           100         186;           100         186;           100         188;           100         189;           100         190;           100         192;           100         192;           100         192;           100         192;           100         193;           100         194;           100         195;	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913 1929 1937 1945 1953 1954	1794 1802 1810 1818 1826 1834 1842 1850 1858 1850 1858 1874 1882 1890 1938 1946 1954 1954 1962 1970	1795 1803 1811 1819 1827 1835 1843 1851 1859 1867 1875 1883 1891 1975 1923 1931 1939 1947 1955 1963 1963	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1892 1900 1908 1916 1924 1932 1940 1944 1956 1964 1972	1797 1805 1813 1821 1829 1837 1845 1853 1869 1869 1867 1885 1893 1901 1917 1925 1933 1941 1949 1957 1965	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1894 1902 1910 1918 1926 1934 1942 1950 1958 1946	1799 1807, 1815 1823 1831 1833 1831 1855 1863 1871 1879 1887 1895 1903 1911 1919 1927 1935 1943 1951 1955		3	to 777	to 2047
3010 3020 3030 3060 3060 3060 3060 3100 3110 3120 3140 3150 3140 3170 3210 3220 3220 3220 3220 3220 3220 322	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1600 1608 1648 1656 1648 1656 1664 1672 1688 1696 1712 1712	1537 1545 1553 1561 1569 1577 1585 1593 1601 1607 1665 1633 1641 1649 1657 1665 1673 1689 1697 1705 1713 1721	1538 1546 1554 1554 1556 1578 1586 1594 1602 1610 1618 1626 1634 1658 1666 1674 1682 1690 1698 1706 1714 1722	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1659 1667 1675 1643 1651 1659 1667 1675 1683 1691 1699 1707 1715 1723	1540 1548 1556 1564 1562 1580 1580 1580 1588 1596 1604 1612 1620 1628 1634 1632 1660 1668 1676 1684 1692 1700 1708 1716 1724	1541 1549 1557 1565 1573 1581 1581 1589 1597 1605 1613 1621 1629 1637 1645 1653 1661 1669 1677 1685 1693 1701 1717 1725	1542 1550 1558 1568 1564 1574 1582 1590 1598 1606 1614 1622 1630 1634 1646 1654 1662 1670 1678 1686 1694 1710 1718 1718	1543 1559 1567 1575 1583 1591 1607 1615 1623 1631 1639 1647 1655 1663 1647 1655 1663 1671 1679 1687 1703 1711 1719	344 344 344 344 344 350 355 355 355 355 355 355 355 355 355	00         179: 00           00         180: 00           00         180: 00           00         181: 00           00         181: 00           00         182: 00           00         184: 00           00         185: 00           00         186: 00           00         186: 00           00         189: 00           00         190: 00           00         190: 00           00         192: 00           00         192: 00           00         192: 00           00         192: 00           00         192: 00           00         192: 00           00         194: 00	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1881 1889 1897 1905 1913 1921 1929 1937 1945 1953 1961 1969 1977	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1898 1906 1914 1922 1930 1938 1946 1954 1954 1954	1795 1803 1801 1811 1819 1827 1835 1843 1851 1859 1867 1875 1863 1891 1899 1907 1915 1923 1931 1939 1945 1953 1951 1959	1796 1804 1812 1820 1828 1836 1836 1844 1852 1860 1868 1864 1884 1892 1900 1908 1916 1924 1932 1940 1940 1940 1944 1972 1980	1797 1805 1813 1821 1823 1845 1845 1845 1845 1845 1893 1909 1907 1925 1933 1941 1949 1957 1957 1957 1957	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1846 1894 1910 1918 1926 1934 1942 1958 1956 1974 1982	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1871 1875 1903 1911 1919 1927 1943 1951 1959 1967 1959		3	to 777	to 2047
3010 3020 3030 3040 3060 3060 3070 3100 3100 3120 3140 3150 3140 3150 3220 3220 3220 3220 3220 3220 3220 32	1536 1544 1552 1560 1588 1576 1584 1592 1600 1688 1616 1622 1640 1648 1656 1664 1672 1688 1696 1704 1712 1720	1537 1545 1553 1553 1561 1577 1585 1593 1601 1625 1633 1641 1649 1657 1665 1673 1689 1697 1713 1721 1721 1729 1737	1538 1546 1554 1554 1556 1578 1586 1594 1602 1610 1618 1622 1634 1662 1658 1666 1674 1682 1682 1690 1698 1706 1714 1722	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1635 1643 1651 1659 1667 1675 1683 1691 1699 1707 1715 1723	1540 1548 1556 1564 1562 1580 1580 1580 1588 1596 1604 1612 1620 1628 1636 1644 1652 1660 1668 1652 1660 1668 1670 1688 1700 1708	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1653 1661 1669 1677 1685 1693 1701 1709 1717 1725	1542 1550 1558 1568 1568 1574 1582 1590 1598 1606 1614 1622 1630 1638 1644 1662 1634 1654 1654 1654 1702 1710 1718 1726	1543 1559 1567 1575 1583 1591 1607 1615 1623 1631 1639 1647 1655 1663 1671 1675 1665 1703 1711 1719 1727 1735	341 342 343 344 344 355 355 355 355 355 355 355	00         179:9:           00         179:9:           00         180:           00         180:           00         180:           00         182:           00         182:           00         183:           00         183:           00         184:           00         186:           00         186:           00         186:           00         180:           00         180:           00         190:           00         192:           00         192:           00         192:           00         192:           00         194:           00         194:           00         194:           00         196:           00         196:           00         198:           00         198:           00         198:           00         198:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1889 1897 1905 1913 1921 1929 1937 1945 1953 1961 1977	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1874 1882 1890 1918 1906 1914 1922 1930 1938 1946 1954 1970 1978	1795 1803 1811 1819 1827 1855 1843 1851 1859 1867 1875 1883 1891 1907 1915 1923 1931 1947 1947 1947 1947 1947 1979	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1908 1908 1916 1924 1938 1948 1956 1956 1956 1956 1950 1988	1797 1805 1813 1821 1827 1845 1853 1861 1865 1893 1901 1909 1917 1925 1933 1941 1949 1957 1957 1973 1981	1798 1806 1814 1822 1830 1858 1854 1854 1862 1870 1878 1886 1894 1910 1918 1926 1934 1958 1956 1958 1958 1958 1957 1982	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1887 1903 1971 1919 1927 1943 1951 1959 1963 1951 1975 1983		3	to 777	to 2047
3010 3020 3030 3060 3060 3060 3070 3100 3110 3110 3140 3130 3140 3170 3220 3220 3220 3220 3220 3220 3220 32	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1600 1608 1648 1656 1648 1656 1664 1672 1688 1696 1712 1712	1537 1545 1553 1561 1569 1577 1585 1593 1601 1607 1617 1625 1633 1641 1649 1657 1665 1673 1681 1681 1687 1705 1713 1721	1538 1546 1554 1554 1554 1552 1570 1578 1578 1578 1578 1578 1578 1626 1634 1642 1650 1658 1666 16574 1658 1706 1714 1722 1730	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1643 1651 1643 1651 1643 1651 1683 1691 1683 1691 1707 1715 1723	1540 1548 1556 1564 1557 1580 1580 1588 1596 1604 1620 1628 1644 1652 1660 1684 1684 1684 1684 1708 1778 1778	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1621 1629 1637 1645 1653 1661 1669 1677 1685 1693 1709 1717 1725	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1646 1634 1646 1634 1666 1694 1700 1718 1726 1730	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1631 1637 1635 1663 1671 1687 1687 1687 1703 1711 1719 1727	344 344 344 344 344 344 350 355 355 355 355 355 355 355 355 355	00         179:9:           00         179:9:           00         180:           00         180:           00         180:           00         183:           00         183:           00         183:           00         183:           00         186:           00         186:           00         183:           00         180:           00         193:           00         191:           01         192:           01         193:           01         193:           01         193:           01         194:           01         193:           01         194:           01         194:           01         194:           01         194:           01         194:           01         194:           01         194:           01         194:           01         194:           01         194:           01         194:           01         194:           01 <td>1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1913 1897 1905 1913 1929 1937 1945 1953 1953 1953 1959 1977</td> <td>1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1914 1922 1930 1938 1946 1954 1956 1957 1978</td> <td>1795 1803 1811 1819 1827 1835 1843 1851 1855 1883 1851 1875 1883 1875 1889 1907 1915 1939 1937 1939 1947 1953 1971 1979 1963</td> <td>1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1876 1884 1890 1900 1908 1916 1921 1940 1948 1956 1954 1950 1980</td> <td>1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1917 1925 1933 1941 1949 1957 1965 1973 1981 1981</td> <td>1798 1806 1814 1822 1830 1838 1846 1854 1866 1854 1878 1878 1878 1878 1878 1878 1878 1902 1910 1918 1942 1950 1954 1942 1950 1974 1982 2006</td> <td>1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911 1919 1927 1935 1943 1951 1943 1951 1967 1978 1999</td> <td></td> <td>3</td> <td>to 777</td> <td>to 2047</td>	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1913 1897 1905 1913 1929 1937 1945 1953 1953 1953 1959 1977	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1914 1922 1930 1938 1946 1954 1956 1957 1978	1795 1803 1811 1819 1827 1835 1843 1851 1855 1883 1851 1875 1883 1875 1889 1907 1915 1939 1937 1939 1947 1953 1971 1979 1963	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1876 1884 1890 1900 1908 1916 1921 1940 1948 1956 1954 1950 1980	1797 1805 1813 1821 1829 1837 1845 1853 1861 1869 1917 1925 1933 1941 1949 1957 1965 1973 1981 1981	1798 1806 1814 1822 1830 1838 1846 1854 1866 1854 1878 1878 1878 1878 1878 1878 1878 1902 1910 1918 1942 1950 1954 1942 1950 1974 1982 2006	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911 1919 1927 1935 1943 1951 1943 1951 1967 1978 1999		3	to 777	to 2047
3010 3020 3030 3040 3050 3060 3070 3100 3100 3140 3150 3140 3150 3220 3220 3220 3220 3220 3220 3220 32	1536 1544 1552 1560 1588 1576 1588 1576 1588 1600 1688 1656 1640 1648 1656 1704 1712 1720 1728 1736 1744 1752 1760	1537 1545 1553 1561 1569 1577 1585 1593 1601 1665 1633 1641 1649 1657 1665 1665 1667 1713 1689 1697 1705 1713 1721 1729 1737 1745	1538 15546 1554 1554 1554 1554 1558 1578 1578 1578 1578 1578 1690 1634 1642 1650 1658 1666 1674 1682 1690 1698 1714 1722 1730 1738 1746 1754	1539 1547 1555 1563 1571 1579 1587 1587 1603 1661 1611 1619 1627 1643 1651 1659 1667 1707 1715 1689 1707 1717 1723 1731 1731 1739	1540 1548 1556 1564 1562 1572 1580 1588 1596 1604 1612 1620 1628 1636 1644 1652 1660 1668 1666 1684 1676 1682 1700 1708 1714 1724 1732 1740 1744 1756	1541 1549 1557 1565 1557 1563 1581 1583 1587 1605 1663 1661 1663 1663 1661 1669 1667 1683 1661 1709 1717 1725 1733 1741 1745	1542 1550 1558 1566 1574 1582 1590 1606 1614 1622 1630 1638 1646 1638 1646 1638 1646 1638 1662 1702 1710 1718 1726 1734	1543 1551 1559 1567 1575 1583 1599 1607 1615 1623 1631 1639 1647 1655 1663 1663 1671 1667 1667 1703 1711 1719 1727 1735 1743 1751	341 342 343 344 344 355 355 355 355 355 355 355	00         179:9:0           00         179:9:0           00         180:0           00         180:0           00         180:0           00         182:0           00         183:0           00         183:0           00         183:0           00         184:0           00         186:0           00         186:0           00         188:0           00         189:0           00         192:0           00         192:0           00         192:0           00         194:0           00         194:0           00         194:0           00         194:0           00         194:0           00         194:0           00         194:0           00         193:0           00:00:0         200:0           00:00:0         200:0	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1873 1889 1897 1905 1913 1921 1929 1937 1945 1953 1961 1977 1975 1993 2001 2017	1794 1802 1810 1818 1826 1826 1858 1858 1858 1856 1874 1882 1890 1898 1906 1914 1922 1930 1938 1954 1954 1954 1954 1958 1986	1795 1803 1811 1819 1827 1845 1845 1845 1845 1867 1875 1863 1891 1907 1915 1947 1955 1963 1971 1979 1987 1995 2003 2011 2019	1796 1804 1812 1820 1828 1836 1844 1852 1940 1908 1916 1924 1932 1948 1956 1964 1974 2012 2002	1797 1805 1813 1821 1829 1837 1845 1853 1869 1877 1865 1893 1901 1909 1917 1925 1933 1941 1957 1965 1973 1981 1981 1989 1987 20013 20013	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1878 1876 1874 1902 1910 1918 1926 1934 1942 1950 1958 1954 1954 1955 1958 1956 2014 2004	1799 1807, 1825 1823 1831 1831 1847 1855 1903 1911 1919 1927 1955 1943 1951 1959 1967 1975 1983 1991 1999 1991		3	to 777	to 2047
3010 3020 3030 3060 3060 3060 3070 3100 3110 3110 3140 3140 3150 3140 3170 3220 3220 3220 3220 3220 3220 3220 32	1536 1544 1552 1560 1568 1576 1584 1592 1600 1608 1616 1624 1640 1648 1656 1664 1648 1656 1664 1672 1780 1704 1712 1720 1728 1744 1752 1760	1537 1545 1553 1561 1569 1577 1585 1593 1601 1617 1625 1633 1641 1649 1657 1665 1673 1681 1689 1677 1713 1721 1729 1737 1745 1745 1745 1745	1538 1546 1554 1554 1552 1570 1578 1586 1594 1602 1618 1642 1650 1658 1666 1634 1642 1650 1658 1666 1674 1762 1730 1738 1746 1754 1746 1754	1539 1547 1555 1563 1571 1579 1587 1595 1603 1611 1619 1627 1643 1651 1643 1651 1663 1691 1663 1691 1707 1715 1723 1731 1739 1747 1747 1747 1747 1747 1747	1540 1548 1556 1564 1557 1580 1580 1588 1596 1684 1622 1660 1628 1644 1652 1660 1684 1684 1684 1684 1700 1778 1778 1778 1778 1746 1748 1746 1748 1756	1541 1549 1557 1565 1573 1581 1589 1597 1605 1613 1621 1629 1637 1645 1653 1661 1645 1653 1661 1685 1697 1709 1717 1725 1733 1741 1749 1757 1757	1542 1550 1558 1566 1574 1582 1590 1598 1606 1614 1622 1630 1646 1634 1646 1634 1662 1670 1678 1686 1694 1702 1710 1718 1726 1734 1750 1758 1758	1543 1551 1559 1567 1575 1583 1591 1599 1607 1615 1623 1639 1647 1655 1663 1639 1647 1655 1663 1647 1655 1763 1771 1775 1743 1751 1759	344 344 344 344 344 346 355 355 355 355 355 355 355 355 355 35	00         179:9:           00         179:9:           00         180:           00         180:           00         180:           00         182:           00         183:           00         183:           00         183:           00         184:           00         185:           00         184:           00         185:           00         184:           00         183:           00         184:           00         184:           01         184:           01         184:           01         184:           01         184:           01         184:           01         193:           01         194:           01         195:           01         194:           01         194:           01         194:           01         194:           01         200:           01         200:           02         201:	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1913 1897 1905 1913 1929 1937 1945 1937 1945 1939 1977 1945 2001 2009 2017 2025	1794 1802 1810 1818 1826 1834 1842 1850 1858 1868 1874 1882 1890 1914 1922 1930 1938 1946 1954 1956 1957 1978 1986 1997 1978	1795 1803 1811 1819 1827 1835 1843 1851 1855 1883 1851 1875 1883 1891 1907 1915 1923 1931 1939 1947 1955 1957 1955 2003 2011 2019	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1876 1884 1890 1900 1908 1916 1921 1940 1948 1956 1954 1950 1980 1980 1980 1980	1797 1805 1813 1821 1837 1845 1853 1861 1869 1917 1925 1933 1941 1949 1957 1965 1973 1981 1981 1981 1989 1997 2005 2013 2021	1798 1806 1814 1822 1830 1838 1846 1854 1862 1870 1918 1922 1910 1918 1924 1942 1950 1944 1942 1950 1944 1942 1950 1944 2024 2006 2014 2024	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911 1919 1927 1935 1943 1951 1943 1951 1967 1978 1983		3	to 777	to 2047
3010 3020 3030 3060 3060 3060 3060 3060 3100 3110 3120 3140 3150 3140 3150 3210 3220 3220 3220 3220 3220 3220 322	1536 1544 1552 1560 1588 1576 1588 1576 1588 1600 1688 1656 1640 1648 1656 1704 1712 1720 1728 1736 1744 1752 1760	1537 1545 1545 1553 1569 1577 1585 1593 1601 1669 1633 1641 1649 1657 1665 1665 1665 1669 1713 1721 1729 1737 1745 1753 1761 1753	1538 1546 1554 1566 1554 1570 1578 1586 1692 1634 1642 1658 1666 1674 1688 1766 1698 1706 1698 1706 1714 1722 1730 1738	1539 1547 1555 1563 1571 1579 1587 1603 1651 1611 1619 1627 1663 1651 1659 1667 1667 1669 1707 1715 1723 1731 1731 1735 1747 1755	1540 1548 1556 1564 1562 1572 1580 1588 1596 1604 1612 1620 1628 1660 1668 1664 1652 1700 1708 1766 1774 1772 1740 1756 1764 1752	1541 1549 1557 1565 1573 1581 1573 1581 1597 1605 1613 1629 1637 1645 1653 1661 1669 16677 1685 1653 1701 1707 1717 1725 1733 1741 1757 1757 1757 1757 1757 1757 1757	1542 1550 1558 1566 1574 1582 1598 1606 1614 1622 1630 1638 1646 1634 1646 1634 1646 1634 1646 1654 1702 1710 1718 1726 1734 1742 1758 1758 1758 1758 1758 1758 1759 1694 1774 1758 1758 1759 1759 1759 1759 1759 1759 1759 1759	1543 1551 1559 1567 1575 1583 1599 1607 1615 1623 1639 1647 1655 1703 1647 1655 1703 1711 1779 1727 1735 1743 1759 1767	341 342 343 344 344 355 355 355 355 355 355 355	00         179:9:0           00         179:9:0           00         180:0           00         180:0           00         180:0           00         182:0           00         183:0           00         183:0           00         183:0           00         184:0           00         186:0           00         186:0           00         188:0           00         189:0           00         192:0           00         192:0           00         192:0           00         194:0           00         194:0           00         194:0           00         194:0           00         194:0           00         194:0           00         194:0           00         193:0           00:00:0         200:0           00:00:0         200:0	1793 1801 1809 1817 1825 1833 1841 1849 1857 1865 1913 1897 1905 1913 1921 1929 1937 1945 1953 1961 1969 1977 1985 1963 2001 2009 2017 2025	1794 1802 1810 1818 1826 1834 1842 1850 1858 1866 1914 1922 1930 1938 1946 1954 1956 1970 1978 1986 1994 2002 2010 2018 2026	1795 1803 1811 1819 1827 1835 1843 1851 1855 1843 1851 1875 1875 1875 1883 1891 1907 1915 1939 1947 1939 1947 1955 2003 2003 2003 2003	1796 1804 1812 1820 1828 1836 1844 1852 1860 1868 1876 1884 1990 1908 1916 1924 1930 1948 1956 2004 2004 2012 2020 2028 2036	1797 1805 1813 1821 1827 1845 1853 1861 1867 1885 1893 1901 1909 1917 1925 1933 1941 1949 1957 1949 1957 1941 1949 1957 1941 2052 2005 2013 2021 2022	1798 1806 1814 1822 1830 1838 1846 1854 1862 1910 1918 1926 1934 1942 1950 1958 1942 1950 1958 2006 2004 2020 2038	1799 1807, 1815 1823 1831 1839 1847 1855 1863 1871 1879 1887 1895 1903 1911 1919 1927 1943 1951 1943 1951 1967 1963 1991 1995 1983		3	to 777	to 2047

H-4

## Octal-Decimal Integer Conversion Table (Cont)

								<u> </u>	۱	1	<u> </u>							-
	0	1	2	3	4	5	6	7			0	1	2	3	4	5	<u> </u>	7
4000 1 2048 4000	2048	2049	2050	2051	2052	2053	2054	2055									2310	
4010	2056																2318	
	2064																2326 2334	
	2072																2342	
	2088																2350	
	2096																2358	
	2104	2105	2106	2107	2108	2109	2110	2111		4470	2360	2361	2362	2363	2364	2365	2366	2367
20000 - 8192	2112	2113	2114	2115	2116	2117	2118	2119		4500	2368	2369	2370	2371	2372	2373	2374	2375
	2120																2382	
50000 - 20480 4120	2128	2129	2130	2131	2132	2133	2134	2135									2390	
	2136																2398	
	2144 2152																2406 2414	
	2152																2422	
	2168									4570	2424	2425	2426	2427	2428	2429	2430	2431
1																		
	2176 2184																2438 2446	
	2184																2454	
	2200									4630	2456	2457	2458	2459	2460	2461	2462	2463
4240	2208	2209	2210	2211	2212	2213	2214	2215									2470	
	2216																2478	
4260	2224	2225	2226	2227	2228	2229	2230	2239									2486 2494	
4270	2232	2233	2234	2233	2230	6231	-230			1010	2100	2103	2430	8731	2736	2733		
	2240																2502	
	2248																2510	
	2256																2518	
	2264 2272																2526 2534	
	2280																2542	
	2288																2550	
4370	0000	0007	2200	2200	2200	2301	2302	2202		4770	2552	2553	2554	2555	2556	2557	2558	2559
	2290	2291	2290	2233	2300	2001	2302	2303	ו נ	41.10		2000		2333	2330		2000	
	2290	2291	2290	2235	2300	2001		2303	J	1110		2000		2333	2330		2000	
	F							7		1110	<del></del>							
	0	1	2	3	4	5	6	7			0	1	2	3	4	5	6	7
5000   2560   5000	0 2560	1 2561	2 2562	3 2563	4 2564	5 2565	6 2566	7 2567		5400	0 2816	1 2817	2 2818	3 2819	4 2820	5 2821	6 2822	7 2823
5000 2560 5000 to to 5010	0 2560 2568	1 2561 2569	2 2562 2570	3 2563 2571	4 2564 2572	5 2565 2573	6 2566 2574	7 2567 2575		5400 5410	0 2816 2824	1 2817 2825	2 2818 2826	3 2819 2827	4 2820 2828	5 2821 2829	6 2822 2830	7 2823 2831
5000 2560 5000 to to 5010 5777 3071 5020	0 2560 2568 2576	1 2561 2569 2577	2 2562 2570 2578	3 2563 2571 2579	4 2564 2572 2580	5 2565 2573 2581	6 2566 2574 2582	7 2567 2575 2583		5400 5410 5420	0 2816 2824 2832	1 2817 2825 2833	2 2818 2826 2834	3 2819 2827 2835	4 2820 2828 2836	5 2821 2829 2837	6 2822 2830 2838	7 2823 2831 2839
5000 2560 5000 to to 5010 5777 3071 5020 (Octai) (Decimal) 5030	0 2560 2568	1 2561 2569 2577 2585	2 2562 2570 2578 2586	3 2563 2571 2579 2587	4 2564 2572 2580 2588	5 2565 2573 2581 2589	6 2566 2574 2582 2590	7 2567 2575 2583 2591		5400 5410 5420 5430	0 2816 2824 2832 2840	1 2817 2825 2833 2841	2 2818 2826 2834 2842	3 2819 2827 2835 2843	4 2820 2828 2836 2844	5 2821 2829 2837 2845	6 2822 2830	7 2823 2831 2839 2847
5000         2560         5000           to         to         5010           5777         3071         5020           (Octal)         (Decimal)         5030	0 2560 2568 2576 2584 2592 2600	1 2561 2569 2577 2585 2593 2601	2 2562 2570 2578 2586 2594 2602	3 2563 2571 2579 2587 2595 2603	4 2564 2572 2580 2588 2596 2604	5 2565 2573 2581 2589 2597 2605	6 2566 2574 2582 2590 2598 2606	7 2567 2575 2583 2591 2599 2607		5400 5410 5420 5430 5440, 5450	0 2816 2824 2832 2840 2848 2856	1 2817 2825 2833 2841 2849 2857	2 2818 2826 2834 2842 2850 2858	3 2819 2827 2835 2843 2851 2859	4 2820 2828 2836 2844 2852 2860	5 2821 2829 2837 2845 2853 2853 2861	6 2822 2830 2838 2846 2854 2854 2862	7 2823 2831 2839 2847 2855 2863
5000         2560         5000           to         to         5010           5777         3071         5020           (Octel)         (Decimal)         5040           5050         5060         5060	0 2560 2568 2576 2584 2592 2600 2608	1 2561 2569 2577 2585 2593 2601 2609	2 2562 2570 2578 2586 2594 2602 2610	3 2563 2571 2579 2587 2595 2603 2611	4 2564 2572 2580 2588 2596 2604 2612	5 2565 2573 2581 2589 2597 2605 2613	6 2566 2574 2582 2590 2598 2606 2614	7 2567 2575 2583 2591 2599 2607 2615		5400 5410 5420 5430 5440 5450 5460	0 2816 2824 2832 2840 2848 2856 2864	1 2817 2825 2833 2841 2849 2857 2865	2 2818 2826 2834 2842 2850 2858 2856	3 2819 2827 2835 2843 2851 2859 2867	4 2820 2828 2836 2844 2852 2860 2868	5 2821 2829 2837 2845 2853 2861 2869	6 2822 2830 2838 2846 2854 2862 2862 2870	7 2823 2831 2839 2847 2855 2863 2871
5000         2560         5000           to         to         5010           5777         3071         5020           (Octal)         (Decimal)         5030	0 2560 2568 2576 2584 2592 2600 2608	1 2561 2569 2577 2585 2593 2601 2609	2 2562 2570 2578 2586 2594 2602	3 2563 2571 2579 2587 2595 2603 2611	4 2564 2572 2580 2588 2596 2604 2612	5 2565 2573 2581 2589 2597 2605 2613	6 2566 2574 2582 2590 2598 2606 2614	7 2567 2575 2583 2591 2599 2607 2615		5400 5410 5420 5430 5440 5450 5460	0 2816 2824 2832 2840 2848 2856 2864	1 2817 2825 2833 2841 2849 2857 2865	2 2818 2826 2834 2842 2850 2858 2856	3 2819 2827 2835 2843 2851 2859 2867	4 2820 2828 2836 2844 2852 2860 2868	5 2821 2829 2837 2845 2853 2861 2869	6 2822 2830 2838 2846 2854 2854 2862	7 2823 2831 2839 2847 2855 2863 2871
5000         2560         5000           to         to         5010           5777         3071         5020           (Octal)         (Decimal)         5030           5050         5060         5070	0 2560 2568 2576 2584 2592 2600 2608	1 2561 2569 2577 2585 2593 2601 2609 2617	2 2562 2570 2578 2586 2594 2602 2610 2618	3 2563 2571 2579 2587 2595 2603 2611 2619	4 2564 2572 2580 2588 2596 2604 2612 2620	5 2565 2573 2581 2589 2597 2605 2613 2621	6 2566 2574 2582 2590 2598 2606 2614 2622	7 2567 2575 2583 2591 2599 2607 2615 2623		5400 5410 5420 5430 5440 5450 5460 5470	0 2816 2824 2832 2840 2848 2856 2864 2872	1 2817 2825 2833 2841 2849 2857 2865 2873	2 2818 2826 2834 2842 2850 2858 2856 2874	3 2819 2827 2835 2843 2851 2859 2867 2875	4 2820 2828 2836 2844 2852 2860 2868 2876	5 2821 2829 2837 2845 2853 2861 2869 2877	6 2822 2830 2838 2846 2854 2862 2862 2870	7 2823 2831 2839 2847 2855 2863 2871 2879
5000         2560         5000           10         10         5010           5777         3071         5030           (Octol)         (Decimal)         5040           5050         5060         5060           5070         5100         5110	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633	2 2562 2570 2578 2586 2594 2602 2610 2618 2626 2634	3 2563 2571 2579 2587 2595 2603 2611 2619 2627 2635	4 2564 2572 2580 2588 2596 2504 2612 2620 2628 2636	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637	6 2566 2574 2582 2590 2598 2606 2614 2622 2630 2638	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2631 2639		5400 5410 5420 5430 5440 5450 5460 5470 5500 5510	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889	2 2818 2826 2834 2842 2850 2858 2866 2874 2882 2890	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2892	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893	6 2822 2830 2838 2846 2854 2862 2870 2878 2886 2894	7 2823 2831 2839 2847 2855 2863 2871 2879 2887 2895
5000         2560         5000           to         to         5010           5777         3071         5030           (Octal)         (Decimal)         5050           5060         5070         5100           5100         5110         5120	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641	2 2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2626 2634 2642	3 2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643	4 2564 2572 2580 2588 2596 2504 2612 2620 2628 2636 2636 2644	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645	6 2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647		5400 5410 5420 5430 5440, 5450 5460 5470 5500 5510 5520	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897	2 2818 2826 2834 2850 2858 2856 2874 2882 2890 2898	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901	6 2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902	7 2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903
5000 2560 5000 to to 5010 5777 3071 5020 (Octal) (Decimal) 5040 5050 5060 5070 5110 5110 5120 5130	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649	2 2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2626 2634 2642 2650	3 2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651	4 2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653	6 2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655		5400 5410 5420 5430 5440, 5450 5460 5470 5500 5510 5520 5530	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905	2 2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909	6 2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910	7 2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911
5000         2560         5000           10         10         5020           5777         3071         5030           (Octal)         (Decimal)         5040           5050         5060         5060           5070         5100         5110           5120         5130         5140	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657	2 2562 2570 2578 2594 2602 2610 2618 2626 2634 2626 2634 2650 2658	3 2563 2571 2577 2595 2603 2611 2619 2627 2625 2643 2651 2659	4 2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2660	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661	6 2566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2654 2654	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663		5400 5410 5420 5430 5440 5450 5460 5470 5500 5510 5520 5530 5520 5530	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913	2 2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906 2914	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907 2915	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908 2916	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917	6 2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910 2918	7 2823 2831 2839 2845 2863 2871 2879 2887 2895 2903 2911 2919
5000         2560         5000           to         10         5010           577         3071         5020           (Octol)         (Decimol)         5040           5050         5060         5070           5100         5110         5120           5120         5130         5140           5150         5150         5140	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665	2 2562 2570 2578 2594 2602 2610 2618 2626 2634 2626 2634 2650 2658 2656	3 2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667	4 2564 2572 2580 2588 2598 2598 2598 2604 2612 2620 2628 2634 2634 2634 2652 2660 2668	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2669	6 2566 2574 2590 2598 2606 2614 2622 2630 2638 2638 2638 2634 2654 2654 2662 2670	7 2567 2575 2583 2599 2607 2615 2623 2631 2631 2639 2647 2655 2663 2671		5400 5410 5420 5430 5440 5450 5460 5470 5500 5510 5520 5530 5520 5530	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912 2920	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921	2 2818 2826 2834 2850 2858 2856 2874 2882 2890 2898 2906 2914 2922	3 2819 2827 2835 2843 2859 2867 2875 2883 2891 2899 2907 2915 2923	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908 2916 2924	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2925	6 2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2902 2910	7 2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911 2919 2927
5000 2560 5000 to to 5010 5777 3071 5020 (Octal) (Decimal) 5060 5050 5060 5110 5120 5120 5130 5130 5130 5130 5140 5130 5140 5150	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2648 2648 2656 2664	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673	2 2562 2578 2578 2594 2602 2610 2618 2626 2634 2642 2658 2666 2658 2666 2674	3 2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667 2675	4 2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2636 2636 2660 2668 2676	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2661 2669 2677	6 25566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2654 2654 2662 2670 2678	7 2567 2575 2583 2599 2607 2615 2623 2631 2639 2647 2655 2663 2667 2655 2663		5400 5410 5420 5430 5440 5450 5460 5470 5510 5510 5520 5510 5520 5530 5550	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912 2920 2928	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921 2921	2 2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906 2914 2922 2930	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907 2915 2923 2931	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908 2916 2924 2932	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2909 2917 2901 29017 2925 2933	6 2822 2830 2838 2846 2854 2862 2870 2878 2886 2894 2994 2910 2918 2918 2926	7 2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911 2919 2927 2935
5000         2560         5000           to         to         5010           5777         3071         5030           (Octal)         (Decimal)         5040           5060         5050         5060           5070         5100         5110           5130         5140         5140           5070         5100         5110           5120         5130         5130           5130         5150         5150           5150         5150         5150           5160         5170         5170	0 2560 2568 2576 2584 2592 2608 2616 2624 2632 2640 2648 2656 2664 2672 2680	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681	2 2562 2570 2578 2586 2594 2600 2618 2610 2618 2626 2634 2642 2650 2658 2666 2674 2682	3 2563 2571 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2667 2675 2683	4 2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2660 2668 2676 2684	5 2565 2573 2581 2589 2597 2603 2613 2621 2629 2637 2645 2653 2661 2669 2677 2685	6 25566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2662 2670 2678 2686	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2671 2679 2687		5400 5410 5420 5430 5430 5430 5440 5540 5510 5520 5550 5550 5550 5550 5550 555	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912 2920 2928 2936	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2887 2905 2913 2921 2929 2937	2 2818 2826 2834 2842 2850 2858 2866 2874 2882 2890 2898 2906 2914 2922 2930 2938	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907 2915 2923 2931 2939	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908 2916 2924 2932 2940	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2925 2933 2941	6 2822 2830 2838 2846 2854 2854 2878 2878 2878 2894 2902 2910 2918 2926 2934 2942	7 2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911 2919 2927 2935 2943
5000         2560         5000           to         5010         5020           5777         3071         5030           (Octal)         (Decimal)         5060           5070         5050         5060           5070         5100         5110           5120         5130         5140           5120         5160         5160           5160         5170         5120	0 2560 2568 2576 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2656 2664 2672 2680 2688	1 2561 2569 2577 2585 2593 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681 2689	2 2562 2570 2578 2586 2594 2612 2618 2626 2634 2642 2650 2658 2666 2674 2682 2690	3 2563 2571 2579 2587 2595 2603 2611 2619 2635 2643 2651 2659 2667 2675 2683 2691	4 2564 2572 2580 2588 2596 2504 2612 2620 2628 2636 2644 2652 2660 2668 2652 2668 2652 2684 2692	5 2565 2573 2581 2589 2697 2605 2613 2621 2629 2637 2645 2665 2669 2677 2685 2693	6 2566 2574 2582 2590 2598 2606 2614 2622 2638 2646 2654 2662 2670 2678 2686 2686 2694	7 2567 2575 2583 2599 2607 2615 2623 2631 2639 2647 2655 2663 2671 2679 2687 2695		5400 5410 5420 5430 5440 5450 5540 5510 5520 5530 5550 5550 5550 5550 5550 555	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912 2920 2928 2936 2934	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921 2929 2937 2929 2937	2 2818 2826 2824 2850 2858 2850 2858 2874 2882 2890 2898 2906 2914 2922 2930 2938 2946	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2899 2907 2915 2923 2931 2939 29347	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 28900 2900 2908 2916 2924 2932 2940 2948	5 2821 2829 2837 2845 2853 2861 2865 2893 2901 2909 2917 2925 2909 2917 2925 2933 2941 2949	6 2822 2830 2838 2846 2854 2870 2878 2878 2890 2910 2912 2910 2918 2926 2934 2942 2950	7 2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911 2919 2927 2935 2943 2951
5000         2560         5000           to         5010         5020           5777         3071         5030           (Octal)         (Decimal)         5040           5050         5060         5060           5070         5100         5110           5120         5130         5140           5150         5160         5160           5170         5120         5130           5140         5150         5160           5160         5160         5160           5160         5160         5160	0 2560 2568 2576 2584 2592 2608 2616 2624 2632 2640 2648 2656 2664 2672 2680	1 2561 2569 2577 2585 2601 2609 2617 2625 2633 2641 2649 2657 2665 2673 2665 2667 26681 2689	2 2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2650 2658 2666 2674 2682 2666 2674 2682 26690 2698	3 2563 2571 2579 2587 2603 2611 2619 2627 2643 2651 2657 2667 2667 2667 2667 2667 2667 2667	4 2564 2572 2580 2588 2596 2604 2612 2620 2628 2636 2644 2652 2668 2668 2668 2668 2668 2668 2668	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2659 2669 2669 2669 2669 2669 2669 2701	6 25566 2574 2592 2598 2606 2614 2622 2638 2646 2654 2654 2670 2678 2686 2686 2694 2702	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2663 2671 2679 2687 2687 2695 2703		5400 5410 5420 5430 5450 5450 5510 5510 5550 5550 5550 555	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912 2920 2928 2936 2924 2936	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921 2929 2937 2925 3	2 2818 2826 2834 2842 2850 2858 2858 2866 2874 2882 2890 2994 2912 2922 2930 2938 2946 2954	3 2819 2827 2835 2843 2851 2867 2875 2883 2891 2899 2907 2915 2923 2923 2923 2923 2923 2939 2947 2955	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2892 2900 2908 2914 2924 2924 2924 2924 2924 2956	5 2821 2829 2837 2845 2853 2853 2869 2877 2885 2893 2901 2909 2917 2925 2933 2941 2949 2957	6 2822 2830 2838 2846 2854 2852 2870 2878 2886 2894 2902 2918 2925 2924 2925 29258	7 2823 2831 2839 2847 2855 2863 2871 2879 2887 2895 2903 2911 2919 2925 2943 2943 2951 2959
5000         2560         5000           to         to         5010           577         3071         5030           (Octal)         (Decimal)         5040           5060         5050         5060           5070         5100         5100           5100         5050         5060           5070         5100         5110           5120         5130         5150           5160         5170         5200           5210         5210         5210	0 2560 2588 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2654 2654 2654 2654 2654 2654 2654	1 2561 2569 2577 2583 2601 2609 2617 2625 2631 2641 2649 2657 2665 2663 2663 2663 2663 26689 26689 2705	2 2562 2570 2578 2586 2694 2602 2618 2626 2638 2662 2638 2662 2658 26658 26658 26658 26642 2658 26642 2658 26698 26698 2706	3 2563 2571 2587 2595 2603 2611 2619 2627 2633 2643 2651 2659 2667 2663 2665 2663 2669 2667 2675 2683 2691 2699	4 2564 2572 2580 2588 2596 2612 2604 2612 2620 2628 2636 2644 2652 2668 2668 2668 2668 2668 2668 2668	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2669 2669 2669 2669 2669 2669 2669 266	6 25566 2574 2592 2598 2606 2614 2622 2630 2638 2646 2654 2654 2670 2678 2686 2694 2702 2770	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2663 2671 2679 2687 2695 2703 2711		5400 5410 5420 5430 5440 5450 5540 5550 5550 5550 555	0 2816 2824 2832 2840 2848 2856 2864 2872 2880 2888 2896 2904 2912 2920 2928 2936 2934	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2913 2921 2929 2937 2945 2953 2961	2 2818 2826 2834 2850 2858 2866 2874 2890 2898 2906 2914 2922 2930 2938 2938 2934	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2907 2915 2923 2931 2939 2947 2955 2963	4 2820 2828 2836 2844 2852 2860 2868 2876 2884 2900 2900 2908 2916 2924 2932 2940 2948 2956 2954	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2925 2933 2941 2949 2957 2955	6 2822 2830 2838 2846 2854 2870 2878 2878 2890 2910 2912 2910 2918 2926 2934 2942 2950	7 2823 2831 2839 2847 2855 2863 2871 2879 2885 2903 2911 2919 2927 2935 2943 2951 2959 2967
5000         2560         5000           to         5010         5020           5777         3071         5030           (Octal)         (Decimal)         5060           5070         5100         5100           5110         5130         5130           5150         5160         5150           5160         5160         5160           5120         5130         5140           5120         5120         5120           5160         5160         5160           5160         5160         5160           5120         5200         5210           5220         5220         5220           5230         5240         5240	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2652 2664 2664 2664 2664 2664	1 2561 2567 2577 2585 2593 2601 2607 2617 2625 2633 2641 2649 2655 2665 2665 2665 2665 2665 2665 266	2 2562 2570 2578 2594 2610 2618 2626 2634 2658 2654 2656 2654 2656 2654 2666 2658 2666 2698 2704 2698 2704 2722	3 2563 2571 2579 2603 2611 2619 2627 2655 2643 2651 2657 2667 2667 2667 2667 2667 2667 2667	4 2564 2572 2580 2596 2604 2612 2620 2628 2636 2644 2652 2668 2668 2668 2668 2668 2668 2700 2708 2716 2712	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2669 2669 2669 2669 2669 2701 2709 2701 2701 2701 2701	6 25566 2574 2592 2599 2598 2606 2614 2622 2638 2646 2654 2654 2662 2670 2678 26686 2694 2710 2718 2718	7 25677 25755 25939 26077 26155 26233 26331 2639 26477 26555 26633 26637 26679 26877 26955 2703 2711 2777		5400 5410 5420 5430 5450 5450 5540 5550 5550 5550 555	0 2816 2824 2840 2848 2856 2864 2872 2880 2892 2904 2912 2920 2928 2936 2952 2968 2956 2956	1 2817 2825 2833 2841 2849 2857 2865 2873 2889 2905 2913 2921 2929 2937 2945 2953 2969 2977	2 2818 2826 2834 2850 2858 2866 2874 2890 2914 2922 2930 2938 2946 2954 2954 2970 2978	3 2819 2827 2835 2843 2851 2859 2867 2875 2899 2907 2915 2923 2931 2939 2947 2955 2963 2955 2963	4 2820 2828 2836 2852 2864 2852 2868 2876 2900 2908 2916 2924 2932 2940 2924 2932 2940 2954 2954	5 2821 2829 2837 2845 2853 2861 2869 2877 2909 2917 2925 2933 2941 2949 2957 2955 2973 2981	6 28222 28300 28388 2854 2854 28562 28700 2910 2918 2902 2910 2918 2926 2934 2942 2950 2958 2956 2974 2982	7 2823 2839 2847 2855 2863 2863 2863 2903 2911 2919 2927 2935 2943 2951 2959 2963
5000         2560         5000           to         10         5010           5071         5020         5030           (Octol)         (Decimol)         5040           5050         5060         5060           5070         5100         5110           5120         5130         5140           5150         5150         5160           5170         5220         5220           5220         5230         5240           5240         5250         5240           5250         5250         5250	0 25560 25584 2576 2584 2592 2600 2618 2616 2624 2632 2648 2656 2664 2656 2664 2670 2688 2680 2680 2680 2704 2712 2720	1 2561 2585 2593 2609 2617 2649 2649 2649 2649 2665 2673 2681 2681 2681 2681 2683 2681 2683 2681 2705 2713 2721	2 2552 2570 2578 2594 2612 2610 2618 2626 2634 2650 2658 2650 2658 2662 2652 2652 2652 2652 2652 2652	3 2563 2579 2587 2595 2603 2611 2619 2627 2635 2643 2651 2659 2665 2683 2683 2683 2683 2699 2707 2715 2723 2731	4 2564 2572 2580 2596 2604 2612 2620 2628 2636 2634 2632 2664 2662 2664 2662 2676 2684 2676 2676 2678 2700 2708 2716	5 2565 2573 2584 2597 2605 2613 2621 2629 2637 2645 2653 2661 2669 2667 2665 2677 2685 2701 2709 2717 2725 2773	6 2566 2574 2590 2614 2622 2638 2646 2654 2662 2678 2668 2668 2678 2678 2678 2678	7 25677 25755 25833 2599 26077 26155 26233 2631 2633 2637 2655 2663 2679 2687 2679 2687 2679 2687 2679 2679 2679 2679 2677 2773		5400 5410 5420 5430 5440 5450 5540 5550 5550 5550 555	0 2816 2824 2832 2840 2848 2856 2904 2912 2920 2928 2936 2936 2936 2945 2950 2960 2962 2960 2964 2956	1 2817 2825 2833 2841 2857 2865 2873 2887 2905 2913 2921 2929 2937 2945 2953 2953 2953 2951 2953	2 2818 2826 2834 2850 2858 2866 2874 2890 2898 2906 2938 2938 2944 2952 2938 2945 2962 2978 2962 2978 2978	3 2819 2827 2835 2843 2851 2857 2867 2875 2883 2891 2997 2997 2997 2915 2923 2931 2939 2947 2953 2963 2971 2979	4 2820 2828 2836 2844 2852 2860 2868 2866 2884 2892 2990 29908 29908 2992 2990 2992 2932 2940 2948 2956 2954 29780 2998	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2893 2901 2909 2917 2925 2933 2941 2933 2941 2957 2955 2973 2989	6 28222 2830 2846 2854 2862 2870 2878 2886 2894 2910 2918 2926 2934 2942 2942 2958 2956 2974 2955 2956	7 2823 2831 2839 2847 2855 2863 2867 2895 2901 2911 2919 2919 2919 2919 2919 2943 2943 2955 2967 2955 2963 2991
5000         2560         5000           to         5010         5020           577         3071         5030           (Octal)         (Decimal)         5060           5050         5060         5050           5010         5050         5060           5070         5100         5110           5120         5130         5140           5150         5160         5160           5160         5160         5160           5210         5220         5220           5220         5220         5220           5240         5250         5250           5250         5260         5260	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2654 2654 2654 2664 2654 2664 2654 2664 266	1 2561 2577 2585 2593 2609 2617 2625 2633 2641 2649 2657 2665 2673 2681 2689 2697 2705 2713 2721 2729 2737	2 25562 25770 25788 25866 2594 2610 2618 26264 2658 2658 2658 2658 2658 2658 2658 2658	3 2563 2571 2579 2587 2595 2603 2651 2659 2667 2659 2667 2659 2667 2659 2667 2659 2669 2669 2669 2691 2699 2707 2715 2773	4 2564 2572 2588 2596 2604 2622 2620 2628 2636 2644 2650 2660 2668 2660 2668 2660 2668 2660 2668 2724 2700 27732 27740	5 2565 2573 2581 2589 2597 2605 2653 2661 2669 2661 2669 2661 2669 2677 2685 2661 2663 2701 2709 2717 2725 2733 2741	6 25566 2574 2590 2598 2606 2658 2662 2652 2662 2662 2662 2662 266	7 2567 2573 2591 2599 2607 2615 2623 2663 2663 2663 2663 2663 2663 266		5400 5410 5420 5430 5450 5550 5550 5550 5550 5550 555	0 2816 2824 2832 2840 2848 2852 2888 2896 2904 2912 2920 2928 2936 2936 2952 2944 2950 2968 2976	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2921 2929 2937 2953 2954 2961 2969 2977 2965	2 2818 2826 2834 2850 2858 2866 2858 2866 2858 2988 2906 2938 2914 2922 2930 2938 2946 2954 2952 2970 2978	3 2819 2827 2835 2843 2851 2859 2867 2883 2899 2907 2915 2923 2931 2939 2947 2955 2963 2971 2979	4 2820 2828 2836 2844 2852 2864 2868 2876 2884 2892 2900 2908 2916 2924 2932 2940 2954 2954 2954 2954 2956 2958 29958	5 2821 2829 2837 2845 2853 2861 2867 2885 2937 2901 2907 2917 2925 2933 2941 2957 2949 2957 2965 2973 2989 2997	6 28222 28300 28388 2854 2854 28562 28700 2910 2918 2902 2910 2918 2926 2934 2942 2950 2958 2956 2974 2982	7 2823 2831 2847 2855 2863 2879 2887 2903 2903 2911 2919 2927 2927 2927 2943 2951 2959 2967 2963 2991
5000         2560         5000           to         10         5010           5071         5020         5030           (Octol)         (Decimol)         5040           5060         5060         5060           5070         5100         5110           5120         5130         5140           5150         5160         5170           5220         5220         5220           5220         5230         5240           5250         5260         5270	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2664 2656 2664 2672 2688 2696 2688 2696 2704 2712 2720 27720 27720 27720 27726	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2667 2665 2667 2681 2689 2697 2713 2729 2737 2745	2 2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2652 2658 2662 2658 2666 2674 2682 2698 2706 2714 2730 2738 2736	3 2563 2571 2579 2587 2595 2603 2611 2619 2627 2633 2651 2659 2667 2667 2667 2667 2667 2667 2663 2691 2691 2691 2707 2715 2723 2731 2739 2747	4 2564 2570 2588 2596 2604 2602 2628 2636 2644 2652 2662 2668 2676 2684 2692 2708 2708 2708 2718 2714 2724	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2633 2665 2663 2667 2685 2693 2701 2709 2717 2725 2733 2741 2749	6 25566 2574 2582 2590 2598 2606 2638 2646 2654 2654 2654 2656 2670 2678 2686 2694 2710 2718 2710 2716 2774 27750	7 2567 2573 2583 2591 2599 2607 2615 2623 2663 2663 2665 2663 2667 2665 2667 2667 2667 2671 2679 2703 2711 2712 2727 2775 2743 2751		5400 5410 5420 5430 5440 5540 5540 5550 5550 5550 555	0 2816 2824 2842 2842 2856 2864 2904 2902 2928 2936 2929 2929 2929 2936 2945 2960 2968 2960 2968 2960 2968 2976 2984 2992 3000	1 2817 2825 2833 2841 2849 2857 2865 2873 2881 2889 2897 2905 2905 2921 2929 2937 2945 2953 2961 2965 2977 2985 2993 3001	2 2818 2826 2852 2853 2858 2858 2858 2858 2890 2914 2922 2930 2938 2944 2954 2954 2976 2978 2986 2994 3002	3 2819 2827 2843 2851 2859 2867 2875 2899 2907 2915 2923 2931 2939 2947 2955 2963 2971 2979 2987 2987 2987 2987	4 2820 2828 2836 2844 2852 2868 2868 2892 2900 2908 2916 2924 2932 2940 2948 2940 2948 2956 2954 2956 2954 2958 2956 3004	5 2821 2829 2837 2845 2853 2861 2885 2893 2909 2917 2925 2933 2941 2949 2941 2949 2957 2961 2957 2961 2989 2997 3005	6 2822 2830 2848 2846 2854 2862 2870 2910 2918 2926 2934 2926 2934 2942 2958 2958 2976 2978 2996 2978 2990 2998 3006	7 2823 2831 2847 2855 2863 2863 2871 2879 2903 2911 2917 2935 2943 2959 2959 2967 2975 2983 2991 2999 3007
5000         2560         5000           to         to         5010           5777         3071         5020           (Octal)         (Decimal)         5050           5060         5060         5060           5070         5100         5110           5120         5120         5120           5150         5160         5160           5170         5200         5210           5220         5220         5220           5220         5220         5220           5220         5220         5220           5220         5220         5220           5220         5220         5220           5220         5230         5240           5250         5260         5260           5260         5270         5300	0 2560 2568 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2654 2654 2654 2654 2654 2654 2654 2654	1 2561 2569 2677 2585 2593 2609 2617 2625 2631 2649 2657 2665 2673 2665 2667 2665 2667 2705 2713 2721 2729 2737 2745	2 2562 2570 2586 2598 2586 2594 2602 2610 2618 2626 2632 2662 2632 2664 2650 2658 2764 2698 2704 2698 2714 2732 2738 27746	3 2563 2571 2587 2587 2587 2587 2663 2661 2651 2667 2663 2667 2667 2663 2667 2667 2667	4 2564 2572 2580 2588 2596 2612 2620 2628 2632 2644 2652 2668 2668 2668 2668 2668 2700 2708 2700 2716 2724 2710 2712 2740 2748 2756	5 2565 2573 2581 2589 2597 2613 2622 2635 2645 2645 2669 2677 2685 2669 2701 2709 2701 2709 2717 2725	6 2566 2574 2592 2590 2598 2614 2622 2630 2638 2634 2654 2654 2662 2670 2678 2686 2694 2702 2718 2726 2714 2722 2715	7 2567 2575 2693 2593 2593 2593 2607 2615 2623 2637 2635 2647 2655 2663 2671 2679 2687 2695 2703 2711 2719 2727 2735 2743 2751 2759		5400 5410 5420 5430 5450 5450 5550 5550 5550 5550 555	0 2816 2824 2832 2840 2848 2856 2864 2872 2888 2904 2912 2920 2928 2936 2944 2952 2968 2976 2968 2976 2984 2973 3000 3008	1 2817 2825 2833 2841 2865 2873 2887 2905 2913 2929 2937 2929 2937 2945 2953 2969 2977 2965 2969 2977 2965 2969 2977 2985 3001	2 2818 2826 2854 2852 2858 2866 2874 2890 2914 2990 2914 2992 2930 2938 2946 2954 2954 2970 2978 2976 2978 2986 2954 3002	3 2819 2827 2835 2843 2851 2859 2867 2875 2883 2891 2907 2915 2923 2931 2939 2947 2955 2963 2971 2979 2987 2995 3003 3011	4 2820 2828 2836 2844 2852 2860 2868 2876 2908 2916 2924 2932 2940 2948 2956 2954 2956 2954 2956 2956 2956 2956 2956 2956 2956 2956	5 2821 2829 2837 2845 2861 2869 2877 2885 2893 2909 2917 2925 2933 2941 2949 2957 2955 2933 2941 2949 2957 2963 2973 3005 3013	6 2822 2830 2858 2858 2852 2878 2886 2894 2902 2910 2918 2926 2934 2934 2950 2958 2954 2954 2954 2954 2954 2954 2954 2954	7 2823 2831 2847 2855 2863 2863 2879 2887 2903 2911 2919 2927 2927 29243 2951 2955 2943 2951 2955 2967 2993 3007 3015
5000         2560         5000           to         to         5020           3071         5020         5030           (Octal)         (Decimal)         5040           5060         5060         5050           5070         5100         5120           5120         5130         5140           5120         5210         5220           5220         5220         5220           5220         5220         5220           5220         5230         5220           5230         5240         5250           5260         5260         5260           5310         5310         5310	0 25560 2558 2576 2584 2592 2600 2608 2616 2624 2648 2648 26648 26648 26648 26648 26648 26646 2664 26696 2704 2712 27720 27728 27736 27744 27742 27740	1 2561 2567 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2663 26649 26657 2665 2663 2673 2703 2713 2712 2713 2745 2745 2753	2 2562 2578 2586 2598 2598 2602 2610 2618 2626 2634 2650 2658 2650 2658 2656 2658 2666 2698 2704 2714 2722 2738 2714 2738 2746	3 2563 2579 2587 2599 2603 2661 2659 2663 2651 2659 2665 2663 2665 2665 2665 2665 2665 2665	4 2564 25780 2588 2596 2588 2604 2612 2620 2628 2636 2644 2652 2660 2668 2668 2668 2676 2684 2700 2708 2716 2714 27156 2776	5 25655 2573 2581 2584 2587 2605 2605 2663 2653 2653 2663 2667 2685 2693 2701 2709 2717 2725 2733 2741 2749 2749 2749	6 25566 2574 2582 2590 2598 2606 2614 2622 2630 2638 2646 2654 2654 2654 2654 2678 2658 2658 2658 2658 2658 2712 2718 2716 2738	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2639 2647 2655 2663 2663 2679 2687 2679 2687 2703 2711 2719 2727 2735 2743 2751 2759		5400 5410 5420 5440 5450 5540 5550 5550 5550 555	0 2816 2824 2842 2842 2856 2864 2872 2880 2904 2912 2920 2928 2932 2952 2952 2952 2952 2954 2954 2954 295	1 2817 2825 2833 2841 2857 2865 2873 2905 2913 2921 2929 2933 2921 2929 2933 2953 2953 2961 2965 2993 3009 3009	2 2818 2826 2834 2842 2850 2858 2858 2858 2896 2914 2922 2930 2938 2934 2922 2930 2938 2946 2954 2954 2954 2954 2958 3002	3 2819 2827 2845 2843 2859 2867 2875 2923 2931 2935 2923 2931 2937 2955 2955 2953 2979 2987 2995 3003 3011	4 2820 2828 2836 2844 2852 2860 2868 2876 2924 2930 2900 2908 2916 2924 2930 2932 2940 2956 2956 2956 2958 2956 3004 3012	5 2821 2829 2837 2845 2853 2861 2869 2877 2901 2901 2901 2902 2933 2941 2957 2955 2957 2965 2973 2981 2989 2987 3005 3013 3021	6 2822 2830 2848 2846 2854 2854 2854 2894 2902 2910 2918 2926 2934 2942 2958 2958 2958 2956 2954 2959 2958 2959 3006 3014	7 2823 2831 2839 2847 2853 2863 2871 2879 2903 2911 2927 2935 2943 2959 2959 2959 2959 2959 2959 2967 2975 2963 2991 2999 2991 2999 3007 3015 3023
5000         2560         5000           to         10         5010           5071         5020         5030           (Octol)         (Decimol)         5040           5050         5060         5070           5100         5120         5130           5140         5150         5160           5170         5220         5220           5220         5220         5230           5240         5250         5260           5270         5300         5310           5310         5310         5310           5310         5320         5320	0 25560 2558 2576 2584 2592 2600 2608 2616 2624 2632 2640 2648 2656 2656 2664 2672 2788 2664 2672 2788 2704 2712 2720 27720 27720 27720 2774 27758	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2665 2665 2665 2665 2665 2713 2705 2712 2705 2712 2729 2737 2745 2753 2769	2 2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2652 2658 2662 2658 2666 2674 2658 2666 2674 2768 2774 2730 2738 2774 2730 2738 2746	3 2563 2571 2579 2587 2595 2603 2611 2619 2627 2633 2651 2659 2667 2667 2667 2667 2667 2667 2669 2707 2715 2723 2731 2739 2747 2735 2733 2731	4 2564 2572 2580 2588 2596 2604 2612 2620 2628 2668 2668 2668 2668 2668 266	5 2565 2573 2581 2589 2597 2605 2613 2621 2629 2637 2645 2653 2669 2677 2685 2669 2677 2685 2699 2717 2709 2717 2773 2741 2749 2757 2757 2773	6 25566 2574 2592 2606 2614 2622 2638 2646 2654 2654 2654 2654 2654 2654 2670 2718 2710 2718 2750 2734 2750 2758 2756	7 2567 2575 2583 2591 2597 2607 2615 2623 2631 2639 2647 2655 2663 2663 2663 2663 2663 2663 2703 2711 2719 2775 2775 2775 2775		5400 5410 5420 5430 5450 5450 5550 5510 5550 5550 5550 555	0 2816 2824 2842 2842 2856 2864 2904 2902 2928 2936 2929 2928 2936 2950 2950 2954 2950 2954 2950 2954 2950 2954 2956 2956 2957 3000 3008 3016 3024	1 2817 2825 2833 2841 2867 2865 2873 2887 2905 2913 2929 2937 2929 2937 2945 2953 2961 2965 2993 3001 3009 3017	2 2818 2826 2834 2852 2858 2858 2858 2858 2894 2906 2914 2922 2930 2938 2944 2954 2954 2954 2954 2978 2986 2994 3002	3 2819 2827 2835 2843 2859 2867 2875 2883 2899 2907 2915 2923 2939 2947 2955 3003 3011 3019	4 2820 2828 2836 2844 2852 2860 2868 2876 2900 2908 2900 2908 2916 2924 2932 2940 2924 2932 2940 2948 2956 2958 2996 3004 3012 3020	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2933 2901 2907 2925 2933 2941 2949 2957 2955 2973 2989 2997 3005 3023 3021	6 2822 2830 2846 2854 2862 2870 2878 2886 2894 2910 2918 2926 2934 2942 2958 2958 2958 2958 2956 2974 2990 2998 3006 3014 3023	7 2823 2831 2847 2855 2863 2863 2871 2859 2903 2911 2917 2935 2943 2951 2957 2957 2955 2967 2975 2999 3007 3015
5000         2560         5000           to         to         5010           5777         3071         5020           (Octal)         (Decimal)         5050           5060         5060         5060           5070         5100         5110           5120         5120         5130           5140         5150         5160           5170         5220         5230           5220         5220         5220           5220         5220         5230           5240         5250         5240           5230         5240         5230           5240         5250         5240           5230         5240         5230           5240         5250         5240           5230         5240         5250           5240         5250         5240           5320         5320         5320           5320         5330         5330	0 25560 2558 2576 2584 2592 2600 2608 2616 2624 2648 2648 26648 26648 26648 26648 26648 26646 2664 26696 2704 2712 27720 27728 27736 27744 27742 27740	1 2561 2569 2607 2609 2617 2625 2633 2641 2649 2657 2665 2673 2665 2673 2665 2673 2665 2673 2713 2729 2737 2745 2753 2753 2761 2765	2 2562 2578 2586 2598 2586 2602 2610 2618 2626 2632 2662 2650 2658 2656 2657 2656 2657 2656 2674 2682 2714 2730 2778 2778 27754 27754 27754	3 2563 2571 2587 2587 2587 2587 2663 2661 2653 2663 2667 2665 2663 2667 2667 2667 2667 2667 2667 2667	4 2564 2572 2580 2588 2596 2612 2620 2628 2632 2644 2652 2668 2668 2668 2668 2668 2668 2700 2708 2700 2716 2724 2732 2740 2748 2756 2764 2775	5 2565 2573 2605 2613 2622 2635 2663 2665 2669 2677 2685 2669 2677 2685 2701 2701 2701 2701 2701 2717 2725 2733 2741 2749 2757 2761	6 25566 2574 2592 2590 2598 2614 2622 2630 2638 2634 2654 2654 2670 2678 2686 2694 2702 2718 2726 2734 2742 2750 2758 2756 2774 27758	7 2567 2575 2607 2615 2623 2631 2639 2647 2655 2663 2663 2671 2679 2687 2695 2703 2703 2719 2727 2743 2743 2743 2751 2775		5400 5410 5420 5430 5450 5450 5510 5550 5550 5550 5550 555	0 2816 2824 2840 2848 2856 2864 2872 2880 2904 2912 2920 2928 2932 2952 2952 2952 2952 2956 2954 2994 2995 2976 2994 2995 2976 3008 3008 3008 3024 3032	1 2817 28252 2833 2841 2857 2865 2873 2905 2913 2929 2933 2953 2953 2953 2953 3001 3009 3003 3003 3004	2 2818 2826 2834 2842 2850 2858 2858 2858 2858 2896 2914 2922 2930 2934 2922 2934 2922 2934 2954 2954 2954 2954 2954 2958 3002 3010 3018 3026	3 2819 2827 28453 28451 2859 2867 2875 2899 2907 2915 2923 2931 2933 2931 2939 2947 2955 2955 2979 2987 2997 2995 3003 3011 3019 3027 3035	4 2820 2828 2836 2844 2852 2860 2868 2876 2992 2990 2908 2994 2992 2944 2932 2956 2956 2956 2958 2996 2988 2996 2988 3004	5 2821 2829 2837 2845 2853 2861 2869 2877 2905 2901 2909 2917 2905 2933 2941 2949 2957 2955 2957 2965 2973 3005 3013 3021 3029 3037 3045	6 2822 2830 2848 2846 2854 2854 2892 2910 2918 2902 2910 2918 2926 2934 2942 2958 2958 2958 2958 2958 2958 2990 3006 3014 3022 3030 3038	7 2823 2831 2839 2847 2853 2863 2871 2879 2903 2911 2927 2935 2943 2959 2959 2959 2967 2975 2963 2991 2999 3007 3015 3023 3031 3039
5000         2560         5000           to         3071         5020           5777         3071         5030           (Octol)         (Decimal)         5050           5060         5070         5060           5070         5100         5110           5120         5130         5140           5150         5220         5220           5220         5230         5240           5250         5260         5270           5310         5310         5310           5320         5330         5340           5310         5320         5330           5310         5320         5330           5320         5330         5340	0 25500 2558 2576 2584 2592 2600 2608 2616 2624 2640 2648 2656 2664 2656 2688 2696 2688 2696 2704 2712 2720 27720 27720 27720 27720 27720 2774 27760 27764 27760 27764 27760 27764 27760 27764 277764 277764 277764 277764 277764 277764 277764 277764 277764 277764 277764 277764 277764 27777777777	1 2561 2569 2577 2585 2593 2601 2609 2617 2625 2633 2641 2649 2657 2665 2665 2665 2665 2713 2705 2713 2705 2713 2729 2737 2745 2753 2769 2777 2765 2777 2785	2 2562 2570 2578 2586 2594 2602 2610 2618 2626 2634 2652 2658 2666 2634 2658 2666 2674 2658 2666 2714 2722 2730 2738 2746 2732 2770 2778 2776	3 2563 2571 2579 2587 2597 2587 2603 2611 2619 2627 2643 2651 2663 2667 2667 2667 2663 2669 2667 2667 2707 2715 2707 2717 2739 2747 2755 2763 2771 2779 2777 2775 2763 2771 2779 2777	4 2564 2572 2580 2588 2596 2604 2622 2660 2668 2668 2668 2668 2668 2668	5 2565 2573 2581 2589 2605 2613 2621 2629 2637 2645 2653 2669 2669 2669 2669 2669 2669 2709 2717 2725 2733 2741 2749 2757 2757 2757 2773 2773 2771 2773 2773	6 25566 2574 2592 2606 2614 2622 2638 2644 2652 2638 2644 2652 2670 2678 2662 2670 2768 2710 2718 2710 2718 2758 2758 2758 2774 2774 27750 2778	7 2567 2575 2583 2591 2599 2607 2615 2623 2631 2632 2647 2655 2663 2663 2663 2663 2703 2703 2711 2719 2775 2773 2775 2775 2775 2775		5400 5410 5420 5430 5450 5450 5550 5510 5550 5550 5550 555	0 2816 2824 2842 2842 2856 2864 2904 2902 2928 2936 2929 2928 2936 2950 2950 2950 2954 2950 2953 2954 2950 2954 2956 2956 2956 2956 2957 3000 3016 3016 3024 3040	1 2817 2825 2833 2841 2867 2865 2873 2887 2905 2913 2929 2937 2929 2937 2945 2953 2961 2965 2993 3001 3009 3017 3005 3003 3041	2 2818 2826 2858 2858 2858 2858 2858 2858 285	3 2819 2827 2835 2843 2859 2867 2875 2883 2899 2907 2915 2923 2939 2947 2955 3003 3011 3019 3027 3025	4 28200 2828 2836 2844 2852 2860 2868 2876 2884 29900 2900 2900 2900 2924 2932 2940 2924 2932 2940 2948 2958 2954 2958 2954 2958 2954 2958 2956 3004 3012 3028 3034 3052	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2933 2901 2907 2925 2933 2941 2949 2957 2965 2973 2989 2997 3005 3023 3029 3037 3045 3053	6 2822 2830 2846 2854 2862 2870 2878 2886 2894 2990 2910 2918 2926 2934 2942 2950 2958 2956 2974 2990 2998 3006 3014 3023 3030 3034 3030 3054	7 2823 2831 2847 2855 2863 2863 2871 2859 2903 2911 2917 2935 2943 2951 2957 2957 2957 2953 2951 2959 3007 3015 3023 3031 3039 3047
5000         2560         5000           to         3071         5020           5777         3071         5030           (Octal)         (Decimal)         5050           5060         5060         5060           5070         5100         5110           5120         5120         5130           5140         5150         5160           5170         5200         5210           5220         5230         5240           5250         5260         5270           5300         5310         5320           5230         5230         5240           5320         5320         5320           5320         5320         5320           5320         5320         5320           5320         5320         5320           5320         5320         5320           5320         5320         5320           5320         5320         5320           5320         5320         5320           5320         5320         5320           5320         5320         5320           5320         5320         5320 <td>0 25560 2556 2576 2584 2592 2600 2608 2616 2624 2648 2648 2664 2664 2664 2664 266</td> <td>1 2561 2569 2607 2609 2617 2625 2633 2641 2649 2657 2665 2673 2665 2673 2665 2673 2665 2673 2713 2729 2717 2745 2753 2761 2777 2775 2775 27753 2785</td> <td>2 2562 2578 2586 2594 2602 2610 2618 2626 2632 2662 2632 2662 2650 2658 2666 2674 2682 2666 2674 2690 2698 2714 2732 2738 2736 2734 27754 27754 27786 27786</td> <td>3 2563 2571 2587 2587 2587 2587 2603 2611 2619 2627 2633 2651 2653 2667 2667 2667 2667 2667 2667 2667 266</td> <td>4 2564 2572 2580 2588 2596 2612 2620 2628 2632 2664 2652 2668 2668 2668 2668 2668 2668 2700 2708 2716 2724 2732 2740 2732 2748 2756 2764 2776 2788 2776</td> <td>5 25655 25733 2581 2589 2597 2605 2613 2622 2635 2669 2677 2685 2669 2677 2685 2669 2701 2701 2701 2717 2725 2733 2741 2749 2757 2765 2773 2773 2781 2781 2789 2797 2805</td> <td>6 25566 2574 2592 2600 2598 2614 2622 2630 2638 2634 2654 2654 2662 2678 2686 2694 2702 2718 2736 2734 2732 2734 2735 2734 2735 2734 2735 2735 2734 2735 2734 2735 2734 2735 2734 2735 2734 2735 2734 2735 2734 2735 2735 2735 2735 2735 2735 2735 2735</td> <td>7 2567 2575 2607 2615 2623 2631 2639 2631 2639 2647 2655 2663 2663 2671 2679 2687 2695 2703 2703 2703 2743 2743 2743 2751 2775 2775 2775 2775 2775 2775 2775</td> <td></td> <td>5400 5410 5420 5430 5450 5450 5550 5550 5550 5550 555</td> <td>0 2816 2824 2832 2840 2840 2846 2856 2864 2872 2880 2904 2912 2920 2920 2920 2920 2920 2928 2936 2934 2956 2956 2956 2956 2956 2958 2976 2958 2976 2958 2956 2958 2976 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2956 2956 2956 2956 2956 2956 2956</td> <td>1 2817 2825 2833 2841 2849 2857 2865 2873 2887 2905 2913 2929 2937 2929 2937 2945 2953 2969 2977 2965 2953 2969 2977 2985 3001 3009 3017 3025 3033 3041 3049</td> <td>2 2818 2826 2858 2858 2858 2858 2858 2858 2906 2914 2922 2930 2938 2946 2954 2954 2954 2954 2954 2954 2970 2978 2986 2954 3002 3010 3018 3028 3034 3058</td> <td>3 2819 2827 2835 2843 2859 2867 2875 2883 2891 2907 2915 2923 2923 2923 2931 2939 2947 2955 3003 3011 3019 3027 3045 3045</td> <td>4 2820 2828 2836 2844 2852 2860 2988 2910 2990 2990 2990 2990 2990 2990 2990</td> <td>5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2901 2909 2917 2925 2933 2941 2925 2933 2941 2957 2925 2973 2989 2997 3005 3013 3021 3021 3037 3045</td> <td>6 2822 2830 2848 2846 2854 2854 2892 2910 2918 2902 2910 2918 2926 2934 2942 2958 2958 2958 2958 2958 2958 2990 3006 3014 3022 3030 3038</td> <td>7 2823 2831 2847 2855 2847 2853 2879 2887 2903 2911 2919 2927 2935 2943 2951 2959 2957 2953 2959 2959 3007 3015 3023 3039 3047 3053</td>	0 25560 2556 2576 2584 2592 2600 2608 2616 2624 2648 2648 2664 2664 2664 2664 266	1 2561 2569 2607 2609 2617 2625 2633 2641 2649 2657 2665 2673 2665 2673 2665 2673 2665 2673 2713 2729 2717 2745 2753 2761 2777 2775 2775 27753 2785	2 2562 2578 2586 2594 2602 2610 2618 2626 2632 2662 2632 2662 2650 2658 2666 2674 2682 2666 2674 2690 2698 2714 2732 2738 2736 2734 27754 27754 27786 27786	3 2563 2571 2587 2587 2587 2587 2603 2611 2619 2627 2633 2651 2653 2667 2667 2667 2667 2667 2667 2667 266	4 2564 2572 2580 2588 2596 2612 2620 2628 2632 2664 2652 2668 2668 2668 2668 2668 2668 2700 2708 2716 2724 2732 2740 2732 2748 2756 2764 2776 2788 2776	5 25655 25733 2581 2589 2597 2605 2613 2622 2635 2669 2677 2685 2669 2677 2685 2669 2701 2701 2701 2717 2725 2733 2741 2749 2757 2765 2773 2773 2781 2781 2789 2797 2805	6 25566 2574 2592 2600 2598 2614 2622 2630 2638 2634 2654 2654 2662 2678 2686 2694 2702 2718 2736 2734 2732 2734 2735 2734 2735 2734 2735 2735 2734 2735 2734 2735 2734 2735 2734 2735 2734 2735 2734 2735 2734 2735 2735 2735 2735 2735 2735 2735 2735	7 2567 2575 2607 2615 2623 2631 2639 2631 2639 2647 2655 2663 2663 2671 2679 2687 2695 2703 2703 2703 2743 2743 2743 2751 2775 2775 2775 2775 2775 2775 2775		5400 5410 5420 5430 5450 5450 5550 5550 5550 5550 555	0 2816 2824 2832 2840 2840 2846 2856 2864 2872 2880 2904 2912 2920 2920 2920 2920 2920 2928 2936 2934 2956 2956 2956 2956 2956 2958 2976 2958 2976 2958 2956 2958 2976 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2958 2956 2956 2956 2956 2956 2956 2956 2956	1 2817 2825 2833 2841 2849 2857 2865 2873 2887 2905 2913 2929 2937 2929 2937 2945 2953 2969 2977 2965 2953 2969 2977 2985 3001 3009 3017 3025 3033 3041 3049	2 2818 2826 2858 2858 2858 2858 2858 2858 2906 2914 2922 2930 2938 2946 2954 2954 2954 2954 2954 2954 2970 2978 2986 2954 3002 3010 3018 3028 3034 3058	3 2819 2827 2835 2843 2859 2867 2875 2883 2891 2907 2915 2923 2923 2923 2931 2939 2947 2955 3003 3011 3019 3027 3045 3045	4 2820 2828 2836 2844 2852 2860 2988 2910 2990 2990 2990 2990 2990 2990 2990	5 2821 2829 2837 2845 2853 2861 2869 2877 2885 2901 2909 2917 2925 2933 2941 2925 2933 2941 2957 2925 2973 2989 2997 3005 3013 3021 3021 3037 3045	6 2822 2830 2848 2846 2854 2854 2892 2910 2918 2902 2910 2918 2926 2934 2942 2958 2958 2958 2958 2958 2958 2990 3006 3014 3022 3030 3038	7 2823 2831 2847 2855 2847 2853 2879 2887 2903 2911 2919 2927 2935 2943 2951 2959 2957 2953 2959 2959 3007 3015 3023 3039 3047 3053

.

## Octal-Decimal Integer Conversion Table (Cont)

	r									<u> </u>									
	0	1	2	3	4	5	6	7		0	1	2	3	4	5	6	7		
6000	2072	2072	3074	2075	3076	2077	3078	3070	6400	3328	3 3 2 9	3330	3331	3332	3333	3334	3335	6000	3072
6000	3080				3084				6410	3336	3337	3338	3339	3340	3341	3342	3343	to	10
6020	3088	3089	3090	3091	3092	3093	3094	3095		3344								6777	3583
					3100				6430 6440	3352	3353 3361			3356				(Octal)	(Decimal)
					3108 3116				6450					3372					
6060					3124				6460	3376	3377			3380				Octal	Decimal
6070	3128	3129	3130	3131	3132	3133	3134	3135	6470	3384	3385	3386	3387	3388	3389	3390	3391		- 4096
100	21.26	2127	21.20	21 20	3140	2141	2142	3142	6500	3302	3 3 9 3	3394	3395	3396	3397	3398	3399		- 8192
					3148					3400				3404					- 12288
6120	3152	3153	3154	3155	3156	3157	3158	3159	6520		3409			3412					- 16384 - 20480
					3164					3416									- 24576
					3172 3180				6540		3425 3433			3428				70000	- 28672
					3188					3440									
					3196				6570	3448	3449	3450	3451	3452	3453	3454	3455		
	2000		-	2009	2004	-	2206	2007	6600	2456	3457	2450	9450	2460	2461	3462	2463		
					3204 3212				6610		3465								
					3220				6620		3473								
					3228					3480									
					3236				6640 6650		3489 3497								
	3240				3252	3245 3253			6660		3505								
					3260				6670		3513								
1												26.00		25.04	25.05	25.96	25.27		
					3268	3269 3277			6700	3520	3521								
	3272 3280					3285				3536									
	3288			3291	3292	3293	3294	3295		3544	3545	3546	3547	3548	3549	3550	3551		
	3296				3300				6740			3554		3556					
					3308 3316					3560 3568				3564					
					3324					3576				3580					
										<b>.</b>									
										·									
[	0	1	2	3	4	5	6	7		0	1	2	3	4	- 5	6	7		
						5		7	7400									7000	3584
170101	3584	3585	3586	3587 3595	3588 3596	5 3589 3597	3590 3598	7 3591 3599		0 3840 3848	3841	3842 3850	3843 3851	3844 3852	3845 3853	3846 3854	3847 3855	to	to
7010	3584 3592 3600	3585 3593 3601	3586 3594 3602	3587 3595 3603	3588 3596 3604	5 3589 3597 3605	3590 3598 3606	7 3591 3599 3607	7410 7420	3840 3848 3856	3841 3849 3857	3842 3850 3858	3843 3851 3859	3844 3852 3860	3845 3853 3861	3846 3854 3862	3847 3855 3863	to 7777	to 4095
7010 7020 7030	3584 3592 3600 3608	3585 3593 3601 3609	3586 3594 3602 3610	3587 3595 3603 3611	3588 3596 3604 3612	5 3589 3597 3605 3613	3590 3598 3606 3614	7 3591 3599 3607 3615	7410 7420 7430	3840 3848 3856 3864	3841 3849 3857 3865	3842 3850 3858 3866	3843 3851 3859 3867	3844 3852 3860 3868	3845 3853 3861 3869	3846 3854 3862 3870	3847. 3855 3863 3871	to 7777	to
7010 7020 7030 7040	3584 3592 3600 3608 3616	3585 3593 3601 3609 3617	3586 3594 3602 3610 3618	3587 3595 3603 3611 3619	3588 3596 3604 3612 3620	5 3589 3597 3605 3613 3621	3590 3598 3606 3614 3622	7 3591 3599 3607 3615 3623	7410 7420 7430 7440	3840 3848 3856 3864 3872	3841 3849 3857 3865	3842 3850 3858 3866 3874	3843 3851 3859 3867 3875	3844 3852 3860	3845 3853 3861 3869 3877	3846 3854 3862 3870 3878	3847. 3855 3863 3871 3879	to 7777	to 4095
7010 7020 7030	3584 3592 3600 3608 3616 3624 3632	3585 3593 3601 3609 3617 3625 3633	3586 3594 3602 3610 3618 3626 3634	3587 3595 3603 3611 3619 3627 3635	3588 3596 3604 3612 3620 3628 3636	5 3589 3597 3605 3613 3621 3629 3637	3590 3598 3606 3614 3622 3630 3638	7 3591 3599 3607 3615 3623 3631 3639	7410 7420 7430 7440 7450 7450	3840 3848 3856 3864 3872 3880 3888	3841 3849 3857 3865 3873 3881 3889	3842 3850 3858 3866 3874 3882 3890	3843 3851 3859 3867 3875 3883 3891	3844 3852 3860 3868 3868 3876 3884 3892	3845 3853 3861 3869 3877 3885 3893	3846 3854 3862 3870 3878 3886 3886 3894	3847, 3855 3863 3871 3879 3887 3887 3895	to 7777	to 4095
7010 7020 7030 7040 7050	3584 3592 3600 3608 3616 3624 3632	3585 3593 3601 3609 3617 3625 3633	3586 3594 3602 3610 3618 3626 3634	3587 3595 3603 3611 3619 3627 3635	3588 3596 3604 3612 3620	5 3589 3597 3605 3613 3621 3629 3637	3590 3598 3606 3614 3622 3630 3638	7 3591 3599 3607 3615 3623 3631 3639	7410 7420 7430 7440 7450	3840 3848 3856 3864 3872 3880 3888	3841 3849 3857 3865 3873 3881	3842 3850 3858 3866 3874 3882 3890	3843 3851 3859 3867 3875 3883	3844 3852 3860 3868 3868 3876 3884 3892	3845 3853 3861 3869 3877 3885 3893	3846 3854 3862 3870 3878 3886 3886 3894	3847, 3855 3863 3871 3879 3887 3887 3895	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7060	3584 3592 3600 3608 3616 3624 3632 3640	3585 3593 3601 3609 3617 3625 3633 3641	3586 3594 3602 3610 3618 3626 3634 3642	3587 3595 3603 3611 3619 3627 3635 3643	3588 3596 3604 3612 3620 3628 3636 3636 3644	5 3589 3597 3605 3613 3621 3629 3637 3645	3590 3598 3606 3614 3622 3630 3638 3646	7 3591 3599 3607 3615 3623 3631 3639 3647	7410 7420 7430 7440 7450 7460 7470	3840 3848 3856 3864 3872 3880 3888	3841 3849 3857 3865 3873 3881 3889 3897	3842 3850 3858 3866 3874 3882 3890 3898	3843 3851 3859 3867 3875 3883 3891 3899	3844 3852 3860 3868 3876 3884 3892 3900	3845 3853 3861 3869 3877 3885 3893 3901	3846 3854 3862 3870 3878 3878 3886 3894 3902	3847. 3855 3863 3871 3879 3887 3887 3895 3903	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7060	3584 3592 3600 3608 3616 3624 3632 3640	3585 3593 3601 3609 3617 3625 3633 3641 3649	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658	3587 3595 3603 3611 3619 3627 3635 3643 3651 3651	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660	5 3589 3597 3605 3613 3621 3629 3637 3645 3653 3661	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663	7410 7420 7430 7440 7450 7460 7470 7500 7510	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918	3847, 3855 3863 3871 3879 3887 3895 3903 3903 3911 3919	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7060 7070 7100 7110 7120	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3658 3666	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668	5 3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654 3662 3670	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671	7410 7420 7430 7440 7450 7460 7470 7500 7510 7510	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926	3847. 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110 7110 7120 7130	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3658 3666 3674	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3678	5 3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669 3677	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654 3662 3670 3678	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3679	7410 7420 7430 7440 7450 7460 7470 7500 7510 7520 7530	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920 3928	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934	3847. 3855 3863 3871 3879 3887 3895 3903 3903 3911 3919 3927 3935	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110 7120 7130 7140	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675 3683	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3676 3684	5 3589 3597 3605 3613 3621 3629 3637 3645 3653 3661 3669 3677 3685	3590 3598 3606 3614 3622 3630 3638 3646 3654 3662 3670 3678 3686	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3679 3687	7410 7420 7430 7440 7450 7460 7470 7500 7510 7510	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920 3928 3936	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930 3938	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934 3942	3847 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935 3943	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7070 7110 7110 7110 7110 7130 7140 7150 7160	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3656 3664 3688 3696	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3697	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682 3690 3698	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675 3683 3691 3699	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3676 3684 3692 3700	5 3589 3597 3605 3613 3621 3629 3637 3645 3663 3661 3669 3677 3685 3693 36701	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654 3654 3670 3678 3686 3694 3702	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3695 3687 3695 3703	7410 7420 7430 7450 7460 7460 7470 7510 7510 7520 7530 7550 7550 7550 7550	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920 3928 3936 3944 3952	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3937 3945 3953	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930 3938 3946 3954	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939 3947 3955	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940 3948 3956	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934 3926 3934 3950 3958	3847, 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935 3943 3951 3959	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7070 7110 7110 7110 7110 7130 7140 7150 7160	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3656 3664 3688 3696	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3697	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682 3690 3698	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675 3683 3691 3699	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3678 3678 3678 3684 3692	5 3589 3597 3605 3613 3621 3629 3637 3645 3663 3661 3669 3677 3685 3693 36701	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654 3654 3670 3678 3686 3694 3702	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3695 3687 3695 3703	7410 7420 7430 7450 7460 7470 7500 7510 7520 7520 7530 7540 7550	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920 3928 3936 3944 3952	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3937 3945	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930 3938 3946 3954	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939 3947 3955	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940 3948	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957	3846 3854 3862 3870 3878 3886 3894 3902 3910 3918 3926 3934 3926 3934 3950 3958	3847 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935 3943 3951	to 7777	to 4095
7010 7020 7030 7050 7060 7070 7110 7110 7120 7130 7130 7140 7150 7160 7170	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680 3688 3696 3704	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3697 3705	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682 3690 3698 3706	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3675 3683 3691 3699 3707	3588 3596 3604 3612 3620 3628 3636 3636 3644 3652 3660 3668 3678 3684 3692 3700 3708	5 3589 3597 3605 3613 3621 3629 3637 3645 3663 3661 3669 3677 3685 3693 3701 3709	3590 3598 3606 3614 3622 3630 3638 3654 3654 3654 3654 3678 3678 3686 3698 3698 3710	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3679 3687 3695 3703 3711	7410 7420 7430 7440 7450 7540 7510 7510 7520 7530 7540 7550 7550 7550 7550	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920 3928 3936 3944 3952 3960	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3937 3945 3953 3953	3842 3850 3858 3866 3874 3890 3898 3906 3914 3922 3930 3938 394 3954 3962	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939 3947 3955 3963	3844 3852 3860 3868 3876 3892 3900 3908 3916 3924 3932 3940 3940 3956 3964	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957 3965	3846 3854 3862 3870 3878 3886 3894 3992 3910 3918 3926 3934 3956 3958 3966	3847, 3855 3863 3871 3879 38875 3903 3993 3993 3993 3927 3935 3943 3959 3967	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7070 7110 7110 7110 7110 7110 7150 715	3584 3592 3600 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680 3688 3696 3704 3712	3585 3593 3601 3607 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3697 3705 3713	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682 3690 3698 3706 3714	3587 3595 3603 3611 3619 3627 3635 3643 3651 3653 3651 3655 3683 3691 3699 3707 3715	3588 3596 3604 3612 3628 3636 3644 3652 3660 3668 3676 3684 3692 3700 3708 3716	5 3589 3597 3605 3613 3629 3637 3645 3665 36653 3665 36653 3665 3667 3685 3693 3701 3709 3717	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654 3654 3670 3678 3686 3694 3710 3718	7 3591 3599 3607 3615 3623 3631 3637 3647 3647 3647 3647 3679 3679 3679 3679 3679 3703 3711	7410 7420 7430 7440 7450 7460 7510 7550 7550 7550 7550 7550 7550 7560 756	3840 3848 3856 3864 3872 3880 3888 3896 3904 3912 3920 3928 3936 3934 3952 3960 3968 3976	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3937 3945 3953 3961 3969 3977	3842 3850 3858 3866 3874 3890 3898 3906 3914 3922 3930 3938 3946 3954 3954 3962 3970	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3931 3939 3947 3955 3963 3971 3979	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940 3948 3956 3964 3972 3980	3845 3853 3861 3869 3877 3885 3893 3909 3917 3929 3917 3933 3941 3949 3957 3965 3973 3981	3846 3854 3852 3870 3878 3886 3894 3902 3910 3918 3926 3934 3942 3950 3958 3966 3974	3847. 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935 3943 3951 3959 3967 3975 3983	to 7777	to 4095
7010 7020 7040 7050 7060 7070 7110 7110 7110 7110 7110 7150 7140 7150 7160 7170 7200 7210 7220	3584 3592 3600 3616 3624 3632 3640 3648 3656 3664 3656 3664 3672 3688 3696 3704 3712 3728	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3697 3705 3713 3721 3721	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682 3698 3706 3714 3722 3730	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3665 3683 3699 3707 3715 3723 3731	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3664 3684 3692 3700 3708 3716 3716 3724	5 3589 3597 3605 3613 3621 3629 3637 3645 3663 3669 3669 3667 3665 3693 3701 3701 3701 3701 3701 3701 3702 3713	3590 3598 3606 3614 3622 3630 3638 3646 3654 3662 3670 3678 3686 3694 3702 3710 3718 3726 3734	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3679 3677 3695 3703 3711 3719 3727 3735	7410 7420 7430 7450 7450 7470 7570 7550 7550 7550 755	3840 3848 3856 3864 3872 3880 3896 3896 3994 3920 3928 3936 3944 3952 3960 3968 3976 3988	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3929 3937 3945 3953 3961 3969 3977 3985	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930 3938 3946 3954 3954 3954 3954 3970 3978	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939 3947 3955 3963 3971 3979 3987	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940 3948 3956 3964 3972 3980 3988	3845 3853 3861 3869 3877 3885 3893 3901 3909 3917 3925 3933 3941 3949 3957 3965 3973 3981 3989	3846 3854 3854 3870 3878 3886 3894 3902 3910 3918 3926 3934 3934 3958 3958 3956 3958 3966 3974	3847. 3855 3863 3871 3879 3887 3895 3903 3911 3919 3927 3935 3943 3951 3959 3967 3975 3983 3991	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7070 7110 7110 7110 7110 7130 7140 7150 7150 7170 7200 7210 7220 7230	3584 3592 3608 3616 3624 3632 3640 3648 3656 3664 3672 3680 3688 3696 3704 3712 3720 3736	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3705 3713 3721 3723 3729 3737	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3682 3698 3706 3714 3722 3730 3738	3587 3595 3603 3611 3627 3635 3643 3651 3659 3667 3683 3691 3707 3715 3723 3731	3588 3596 3604 3612 3620 3628 3636 3644 3652 3660 3668 3678 3678 3692 3700 3708 3716 3724 3732 3740	5 3589 3597 3605 3613 3621 3629 3637 3645 3663 3665 3693 3701 3709 3717 3725 3733 3741	3590 3598 3604 3614 3622 3630 3638 3646 3654 3654 3654 3678 3678 3678 3686 3694 3702 3710 3718 3726 3734	7 3591 3615 3623 3631 3639 3647 3655 3663 3679 3679 3679 3679 3703 3711 3719 3727 3735 3743	7410 7420 7430 7450 7460 7460 7510 7550 7550 7550 7550 7550 7550 7560 756	3840 3848 3856 3864 3872 3880 3896 3994 3992 3928 3936 3944 3952 3960 3968 3976 3988 3976	3841 3849 3857 3865 3873 3881 3889 3897 3905 3913 3921 3921 3937 3945 3953 3953 3961 3969 3977 3993	3842 3850 3858 3866 3874 3882 3890 3898 3906 3914 3922 3930 3938 3946 3954 3954 3970 3978 3994	3843 3851 3859 3867 3875 3883 3891 3899 3907 3915 3923 3931 3939 3947 3955 3963 3971 3979 3979	3844 3852 3868 3868 3876 3884 3892 3900 3908 3916 3924 3932 3940 3948 3956 3956 3972 3980 3988 3996	3845 3853 3861 3869 3877 3885 3893 3901 3917 3925 3931 3941 3949 3941 3947 3957 3965 3973 3981 3989 3997	3846 3854 3862 3870 3878 3886 3894 3902 3910 3910 3910 3910 3926 3934 3942 3950 3958 3956 3974 3950 3974	3847 3855 3863 3879 3887 3895 3903 3911 3919 3927 3943 3951 3959 3967 3959 3967 3993	to 7777	to 4095
7010 7020 7030 7050 7050 7050 7050 7150 7110 7110 7120 7110 7140 7150 7160 7150 7160 7120 7210 7220 7230 7240	3584 3592 3600 3616 3624 3648 3656 3664 3656 3664 3672 3680 3688 3696 3704 3712 3720 3728 3736 3744	3585 3593 3609 3617 3625 3633 3641 3649 3657 3665 3673 3673 3673 3681 3689 3697 3705 3713 3723 3723 3745	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3664 3674 3682 3690 3698 3706 3714 3722 3730 3738 3746	3587 3595 3603 3611 3619 3627 3635 3643 3651 3657 3663 3667 3663 3667 3667 3667 3667	3588 3596 3604 3612 3620 3628 3636 3644 3652 3668 3668 3668 3676 3678 3700 3708 3716 3724 3732 3740	5 3589 3597 3605 3613 3629 3637 3645 3663 3669 3667 3689 3669 3677 3685 3693 3701 3709 3717 3725 3733 3741	3590 3598 3606 3614 3622 3630 3638 3646 3654 3678 3678 3678 3678 3678 3702 3710 3718 3726 3734 3742 3742	7 3591 3599 3607 3615 3623 3631 3633 3647 3655 3663 36647 3695 3671 3695 3703 3711 3719 3727 3735 3743 3751	7410 7420 7430 7450 7460 7450 7510 7550 7550 7550 7550 7550 7550 75	3840 3848 3856 3864 3872 3880 3888 3996 3994 3992 3920 3928 3944 3952 3960 3944 3952 3960 3968 3976	3841 3849 3857 3865 3865 3865 3865 3887 3987 3995 3991 3995 3993 3995 3995 3995 3995	3842 3850 3858 3866 3874 3882 3996 3914 3922 3938 3946 3954 3954 3954 3978 3988 3978 3988	3843 3859 3867 38875 3883 3891 3915 3923 3939 3939 3939 3947 3955 3963 3971 3979 3987 3995	3844 3852 3860 3868 3876 3988 3910 392 3940 3948 3956 3964 3956 3964 3972 3980 3988 3996	3845 3853 3861 3869 3877 3885 3893 3901 3917 3925 3933 3941 3949 3957 3965 3973 3981 3981 3981 3987	3846 3854 3862 3870 3878 3886 3992 3910 3918 3924 3950 3954 3954 3954 3954 3954 3954 3954 3954	3847, 3855, 3863, 3871, 3879, 3887, 3903, 3903, 3903, 3935, 3943, 3955, 3943, 3955, 3943, 3955, 3943, 3957, 3958, 3999, 4007,	to 7777	to 4095
7010 7020 7030 7050 7060 7050 7060 7110 7110 7110 7130 7130 7140 7150 7140 7150 7170 7200 7220 7220 7230 7240 7250 7260	3584 3592 3600 3608 3616 3624 3632 3640 3652 3664 3656 3664 3672 3688 3688 3696 3704 3712 3720 3728 3728 3728 3742 3750	3585 3593 3609 3617 3625 3633 3641 3649 3657 3665 36657 36657 36657 36657 36657 36657 36657 37653 3705 3705 37713 37429 37373 37429 3753 3753	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3698 3706 3714 3722 3730 3748 3745 3754	3587 3595 3603 3611 3619 3627 3643 3643 3643 3667 3667 3663 3667 3663 3667 3663 3699 3707 3715 3723 3737 3739 3747 3755	3588 3596 3604 3612 3628 3636 3644 3652 3666 3668 3676 3684 3692 3700 3708 3710 3708 3712 3740 3712 3740 3745 3756	5 3589 3597 3605 3613 3629 3637 3645 3663 3663 3663 3663 3663 3663 3663	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654 3654 3670 3678 3686 3694 3710 3718 3726 3726 3724 3758 3758	7 3591 3599 3607 3615 3623 3631 3647 3655 3663 3647 3665 3703 3711 3779 3735 3743 3751 3759	7410 7420 7430 7450 7460 7460 7510 7520 7530 7550 7550 7550 7550 7560 7660 7650 765	3840 3848 3856 3864 3872 3880 3988 39912 3928 3936 3936 3936 3936 3936 3936 3936 3952 3960 3966 3976 3984 3992 4000	3841 3849 3857 3865 3873 3889 3897 3993 3991 3921 3921 3923 3937 3945 3953 3961 3965 3993 4001 4009	3842 3850 3858 3866 3874 3882 3890 3930 3930 3934 3946 3954 3954 3954 3970 3978 3998 4002 4010	3843 3859 3867 3875 38873 3897 3915 3923 3931 3939 3947 3955 3955 3953 3971 3979 3987 3995 4001 4011	3844 3852 3860 3868 3876 3884 3990 3990 3990 3990 39916 3992 39940 39956 39956 39956 39964 4002 4002	3845 3853 3861 3869 3877 3885 3993 3901 3917 3925 3933 3941 3949 3957 3957 3957 3981 3981 3981 3981 4003	3846 3854 3862 3870 3878 3986 3992 3910 3918 3926 3934 3942 3950 3958 3942 3956 3956 3956 4096 4014 1022	3847, 3855 3863 3871 3879 3887 3903 3903 3903 3991 3927 3935 3943 3951 3959 3959 3959 3995 3995 3995 399	to 7777	to 4095
7010 7020 7030 7050 7060 7050 7060 7110 7110 7110 7130 7130 7140 7150 7140 7150 7170 7200 7220 7220 7230 7240 7250 7260	3584 3592 3600 3608 3616 3624 3632 3640 3652 3664 3656 3664 3672 3688 3688 3696 3704 3712 3720 3728 3728 3728 3742 3750	3585 3593 3609 3617 3625 3633 3641 3649 3657 3665 36657 36657 36657 36657 36657 36657 36657 37653 3705 3705 37713 37429 37373 37429 3753 3753	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3698 3706 3714 3722 3730 3748 3745 3754	3587 3595 3603 3611 3619 3627 3643 3643 3643 3667 3667 3663 3667 3663 3667 3663 3699 3707 3715 3723 3737 3739 3747 3755	3588 3596 3604 3612 3620 3628 3636 3644 3652 3668 3668 3668 3676 3678 3700 3708 3716 3724 3732 3740	5 3589 3597 3605 3613 3629 3637 3645 3663 3663 3663 3663 3663 3663 3663	3590 3598 3606 3614 3622 3630 3638 3646 3654 3654 3654 3670 3678 3686 3694 3710 3718 3726 3726 3724 3758 3758	7 3591 3599 3607 3615 3623 3631 3647 3655 3663 3667 3703 3711 3719 3725 3743 3751 3759	7410 7420 7430 7450 7460 7460 7510 7520 7530 7550 7550 7550 7550 7560 7660 7650 765	3840 3848 3856 3864 3882 3888 3904 3912 3928 3936 3944 3952 3946 3956 3944 3952 3960 3958 3976 3984 3976	3841 3849 3857 3865 3873 3889 3897 3993 3991 3921 3921 3923 3937 3945 3953 3961 3965 3993 4001 4009	3842 3850 3858 3866 3874 3882 3890 3930 3930 3934 3946 3954 3954 3954 3970 3978 3998 4002 4010	3843 3859 3867 3875 38873 3897 3915 3923 3931 3939 3947 3955 3955 3953 3971 3979 3987 3995 4001 4011	3844 3852 3860 3868 3876 3884 3990 3990 3990 3990 39916 3992 39940 39956 39956 39956 39964 4002 4002	3845 3853 3861 3869 3877 3885 3993 3901 3917 3925 3933 3941 3949 3957 3957 3957 3981 3981 3981 3981 4003	3846 3854 3862 3870 3878 3986 3992 3910 3918 3926 3934 3942 3950 3958 3942 3956 3956 3956 4096 4014 1022	3847, 3855 3863 3871 3879 3887 3903 3903 3903 3991 3927 3935 3943 3951 3959 3959 3959 3995 3995 3995 399	to 7777	to 4095
7010 7020 7030 7040 7050 7060 7070 7100 7110 7120 7120 7130 7140 7150 7140 7150 7140 7210 7220 7220 7220 7240 7240 7240	3584 3592 3600 3608 3616 3624 3652 3640 3658 36648 3656 36648 3656 36648 3662 36648 3662 36648 3662 36648 3662 3664 3764 3772 3752 3756 3758	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3687 3765 3713 37429 37429 37429 37457 3745 37457 37457 37457	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3674 3682 3698 3714 3722 3730 3738 3774 3774 37754 37762 3770	3587 3595 3603 3611 3619 3627 3635 3643 3651 3659 3667 3683 3699 3707 3715 3723 3773 3773 3773 3775 3763 3771	3588 3596 3604 3612 3620 3628 3636 3644 3652 3668 3668 3668 3678 3678 3700 3716 3716 3716 3724 3732 3748 3756 3764 3772	5 3589 3597 3605 3613 3629 3637 3645 3663 3663 3663 3663 3663 3663 3663	3590 3598 3606 3614 3622 3630 3638 3646 3654 3662 3678 3678 3678 3702 3718 3718 3726 3734 3745 3776 3758 3776	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3763 3671 3679 3687 3703 3711 3719 3727 3775 3743 3751 3759 3767 3775	7410 7420 7430 7440 7450 7460 7510 7550 7550 7550 7550 7560 7560 7560 7660 76	3840 3848 3856 3864 3872 3880 3980 3912 3928 3936 3944 3952 3946 3952 3956 3956 3956 3976 3984 3996 4008 4016 4024	3841 3849 3857 3865 3873 3881 3889 3995 3913 3929 3937 3945 3953 3953 3961 3969 39977 3985 39977 3985 39974 4001 4009 4017	3842 3850 3858 3866 3874 3994 3994 3993 3936 3954 3954 3954 3954 3954 3954 3954 3962 3970 3978 3986 3994 4002 4010	3843 3851 3859 3867 3915 3923 3939 3939 3947 3955 3955 3955 3963 3971 3979 3987 3979 3987 3979 4003 4011 4019 4027	3844 3852 3860 3866 3876 3992 3900 3918 3932 3940 3948 3956 3956 3956 3958 3956 3964 4012 4020 4028	3845 3853 3861 3869 3877 3885 3901 3909 3917 3925 3933 3941 3949 3957 3949 3957 3949 4005 40013 4002	3846 3854 3862 3870 3878 3986 3990 3910 3918 3926 3934 3958 3958 3958 3958 3996 3974 3982 3990 3998 4006 4014 1022 4030	3847 3855 3863 3863 3867 3889 3933 3911 3919 3927 3935 3943 3951 3959 3967 3953 3951 3959 3967 3975 3983 3991 39991 39991 39991 3991 3991 3	to 7777	to 4095
70100 70200 70300 70500 70600 70700 7100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71100 71200 72200 72200 72200 72200 72300 72700 72300 7200 72	3584 3592 3600 3608 3616 3624 3652 3640 3648 3656 3656 3664 3656 3664 3656 3668 3704 3712 3720 3728 3736 3748 3752 3756 3776	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3681 3689 3697 3705 3713 3721 37429 3737 3745 3753 3753 3753 3753 3753 3753	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3664 3662 3664 3664 3662 3664 3662 3664 3662 3674 3762 3776 3754 3756 3776	3587 3595 3603 3611 3619 3627 3643 3651 3653 3663 3663 3663 3663 3663 366	3588 3596 3604 3612 3628 3636 3644 3652 3660 3668 3676 3768 3708 3708 3716 3716 3714 3740 3743 3756 3756 3756 3776	5 3589 3597 3605 3613 3629 3637 3645 3663 3667 3665 33677 3685 3701 3709 3717 3725 3733 3741 3745 3773 3745 3773 3781	3590 3598 3606 3614 3622 3630 3654 3654 3654 3666 3694 3702 3710 3718 3726 3758 3758 3774 3758	7 3591 3599 3607 3615 3631 3639 3647 3655 3663 3671 3679 3687 3675 3703 3711 3719 3727 3743 3743 3751 3759 3743 3757 3775	7410 7420 7430 7450 7460 7460 7510 7500 7510 7550 7550 7550 7560 7560 7660 7650 7660 7650 7660 7650 7660 7650	3840 3848 3856 3864 3872 3880 3896 3904 3912 3920 3928 3936 3944 3952 3960 3952 3964 3954 3954 3984 3992 4000 4008 4016 4024	3841 3849 3857 3865 3873 3881 3989 3991 3929 3937 3995 3995 3995 3995 3995 3995 399	3842 3850 3858 3866 3874 3990 39914 3920 3930 3938 3946 3954 3962 3978 3986 3994 4002 4018 4026 4034	3843 3851 3859 3867 3883 3899 3907 3915 3931 3939 3947 3955 3963 3979 3987 3995 4003	3844 3852 3860 3868 3876 3992 3900 3916 3924 3940 3948 3956 3964 3976 3988 3996 4002 4002 4002 4028 4012	3845 3853 3861 3869 3877 3909 3917 3925 3933 3941 3949 3957 3965 3973 3981 3989 3989 3989 39897 4005 4013	3846 3854 3862 3870 3878 39878 39886 3992 3910 3918 3926 3934 3942 39942 39942 39942 39942 39958 39966 3974 3988 4014 1022 4030 4038	3847 3855 3863 3871 3879 3903 3991 3995 3943 3951 3953 3953 3953 3953 3953 3953 395	to 7777	to 4095
7010( 7020) 7030( 7050) 7050( 7060) 7060( 7070) 7120( 7130) 7130( 7130) 7140( 7130) 7140( 7130) 7240( 7240) 7240( 7240) 7240( 7320) 7370( 7310)	3584 3592 3600 3608 3616 3614 3655 3644 3655 3664 3664 3664 3664 366	3585 3593 3501 3607 3625 3633 3641 3649 3657 3665 3763 3687 3763 3773 3775 3775 3775 3775 37765 37767 37765	3586 3594 3602 3610 3618 3626 3634 3642 3650 3658 3666 3674 3698 3706 3714 3722 3730 3778 3778 3778	3587 3595 3603 3611 3619 3627 3635 3643 3651 3667 3683 3699 3707 3715 3723 3739 3747 3735 3763 3771 3779	3588 3596 3604 3612 3620 3628 3636 3644 3652 3668 3668 3668 3668 3668 3668 3700 3708 3716 3724 3730 3748 3756 3772 3780	5 3589 3597 3605 3613 3621 3637 3645 3663 3667 36653 3667 36653 3667 36653 3667 36653 3677 3685 3693 3709 3717 3725 3733 3741 3757 3745 3757 3769 3773 3781	3590 35598 3606 3614 3622 3630 3638 3646 3654 3664 3664 3664 3664 3664 3664	7 3591 3599 3615 3623 3631 3639 3647 3655 3663 3671 3675 3679 3679 3773 3771 3775 3743 3751 3753 3743 3775 3783 3775	7410 7420 7430 7440 7450 7460 7510 7520 7550 7550 7550 7560 7550 7560 7560 7660 76	3840 3848 3856 3864 3872 3880 3982 3920 3928 3936 3944 3952 3944 3952 3944 3956 3944 3996 4008 4008 4008 4008 4008 4008 4040 4048	3841 3849 3857 3865 3873 3881 3889 3993 39913 3921 3923 3945 3953 3945 3953 3945 3953 3946 3953 3946 3953 3945 3993 4001 4001 4002 4001	3842 3850 3858 3866 3874 3882 3890 3998 3914 3952 3930 3958 3956 3956 3996 402 4020 4018 4026 4034 4042	3843 3851 3857 3867 3875 3883 3891 3997 3915 3931 3939 3947 3955 3963 3971 3979 3987 3987 3987 4003 4001 4019 4027 4043	3844 3852 3860 3868 3876 39876 3990 3990 3990 39948 39948 39948 39948 39956 3964 39972 39808 39988 39988 39986 40012 40228 40012 4028	3845 3853 3861 3869 3877 3925 3933 3901 3909 3917 3957 3957 3957 3957 3957 3957 3957 395	3846 3854 3854 3854 3878 3878 3898 3898 39902 3918 39902 39342 3930 3938 3950 3958 3956 3958 3956 3954 3950 3998 4004 1022 4030 4034 4054	3847, 3855 3863 3871 3879 3907 3935 3943 3951 3959 3967 3975 3993 39991 3999 3997 3995 3995 3995 3995 3995 3995	to 7777	to 4095
7010() 7020) 7030() 7050() 7060() 7060() 7060() 7070() 7100() 7110() 7110() 7110() 7110() 7110() 7130() 7230() 7250() 7250() 7250() 7250() 7250() 7310() 7320() 730	3584 3592 3600 3608 3616 3624 3656 3656 36646 3656 36646 3656 36646 36563 3764 3712 3728 3736 3774 37728 3774 37768 3776 37768 3776	3585 3593 3601 3609 3617 3625 3633 3641 3649 3665 36657 36657 36657 36657 36657 3763 36657 3761 3763 3775 3775 3775 3775 3775 3769 3777 3785 3779 33801	3586 3594 3602 3610 3618 3626 3634 3642 3658 3668 3668 3668 3668 3668 3668 3668	3587 3595 3603 3611 3619 3627 3635 3643 3651 3663 3667 3663 3667 3663 3667 3663 3763 3707 3715 3723 3731 3739 3747 3775 3771 3779 3787 3779	3588 3596 3604 3612 3620 3628 3636 3644 3652 3760 3708 37740 3778 3772 3770 3778 3774 3772 3774 3778 3772 3780 3788 3796	5 3589 3597 3605 3613 3629 3637 3645 3663 3667 36653 3667 36653 3667 3733 3767 3773 3773	3590 3598 3606 3614 3622 3630 3638 3646 3654 3670 3678 3686 3686 3770 3718 3726 3734 3726 3734 3758 3774 3758 3774 3758 3776	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3663 3671 3679 3687 3703 3711 3719 3727 3743 3751 3743 3743 3751 3743 3775 3783 3791	7410 7420 7430 7450 7460 7460 7510 7520 7550 7550 7550 7550 7560 7550 7560 7550 7560 756	3840 3848 3856 3864 3872 3880 3896 39920 3928 3936 3944 3952 3960 3954 3968 3976 3984 4000 4008 4016 4024 4016 4024	3841 3849 3857 3865 3873 3881 3989 3993 3991 3929 3937 3945 3953 3961 3969 3977 3985 3993 4001 4009 4001 4025 4033 4041	3842 3850 3858 3868 3874 3882 3980 3914 3922 3930 3938 3946 3954 3954 3954 3954 402 4010 4012 4018 4026 4034 4042 4050	3843 3851 3859 3867 3883 3891 3907 3915 3923 3931 3939 3947 3955 3963 3971 3979 4003 4011 4019 4027 4043 4051	3844 3852 3860 3868 3876 3884 3892 3900 3908 3916 3924 3948 3956 3964 3956 3964 3958 3988 3988 3988 4004 4012 4020 4028 4036 4044	3845 3853 3861 3869 3887 3985 3993 3991 3995 3993 3995 3995 3995 399	3846 3854 3852 3870 3878 3886 3894 3902 3918 3926 3934 3942 3934 3942 3958 3956 3958 3956 3974 3988 4006 4014 1022 4030 4038 4046	3847 3855 3863 3871 3879 3887 3993 3903 3911 3927 3935 3943 3951 3951 3959 3967 3983 3991 3999 4007 4015 4023 4031 4039	to 7777	to 4095
7010() 7020) 7030() 7050() 7060() 7060() 7060() 7070() 7120() 7130() 7130() 7140() 7130() 7140() 7140() 7140() 7210() 7220() 7230() 7240() 7320() 730	3584 3592 3600 3608 3616 3614 3632 3640 3656 3666 3666 3666 3704 3712 3726 3736 3734 3752 3768 3776 3778 4 37752 3768	3585 3593 3601 3607 3625 3633 3641 3649 3657 3665 3673 3661 3689 3705 3713 3705 3713 3775 37753 3765 37753 3769 37777 37785 3793 3801	3586 3594 3610 3618 3626 3634 3642 3658 3658 3668 3668 3668 3668 3668 3668	3587 3595 3603 3619 3627 3635 3643 3659 3663 36691 36693 36693 36693 3707 3715 3763 37715 3763 37715 3763 37747 37755 3763 37779 3787 3787 3787 3787 3787 3787 37	3588 3596 3604 3612 3620 3628 3636 3644 3652 3684 3684 3684 3684 3692 3700 3708 3716 3772 3740 3778 3778 3778 3778 3778 3778 3788 3778	5 3589 3597 3605 3613 3621 3623 3645 3663 3667 36653 3667 36653 36673 36675 3693 3767 3733 3773 3773 3741 37749 37757 3749 37757 3749 3773 3781 37781 3789 37797 3805	3590 3598 3606 3614 3622 3630 3638 3646 3654 3662 3670 3686 3694 3702 3710 3718 3726 3734 3750 3758 3756 3758 3774 37782 37782 37782 3790 3798 38066	7 3591 3599 3615 3623 3631 3639 3647 3655 3663 3671 3675 3763 3771 3775 3775 3743 3771 3755 3743 3751 3757 3783 3775 3783 37791 3799	7410 7420 7430 7450 7460 7510 7550 7550 7550 7550 7550 7550 755	3840 3848 3868 3867 3880 3880 3982 3912 3920 3928 3936 3944 3952 3936 3944 3952 3936 3944 3956 3984 4056 4002 4008 4016 4048 4056	3841 3849 3857 3865 3873 3881 3987 39913 39913 39913 39913 39913 39913 3993 3995 3993 39961 39965 39977 3985 39977 3985 39974 4001 4001 4001 4001 4005	3842 3850 3858 3860 3874 3882 3890 3993 3994 3994 3994 3994 3994 3994 39	3843 3851 3859 3867 3883 3893 3915 3923 3931 3939 3947 3955 3963 3971 3987 3987 3987 3987 4003 4001 4019 4027 4035 4043 4043	3844 3852 3860 3868 3884 3892 3900 3916 3924 3936 3940 3948 3956 3964 4012 4020 4028 4004 4012 4020 4028	3845 3863 3863 3863 3887 3885 3893 39901 3995 3931 3949 3957 3949 3957 3965 3973 3981 3989 3997 4013 4029 4037 4045 4045 4061	3846 3854 3854 3854 3878 3878 3878 39878 39902 3910 3992 3938 3992 3938 3942 3950 3958 3956 3974 3950 3978 3998 4014 1022 4030 4038 40046 4054 4062	3847 3855 3863 3875 3875 3875 3897 3993 3919 3927 3935 3943 3951 3959 3943 3951 3959 3967 3975 3983 3991 4023 4007 4015 4023 4031 4039 4047	to 7777	to 4095
7010 7030 7040 7050 7060 7060 7070 7100 7110 7120 7120 7120 7150 7150 7150 7150 7150 7150 7150 715	3584 3592 3600 3608 3616 3616 3623 3640 3646 3656 3664 3656 3664 3672 3688 3688 3696 3704 3712 3720 3728 3776 3776 3776 3778 3776 3776 3776 377	3585 3593 3601 3609 3617 3625 3633 3641 3649 3657 3665 3673 3665 3673 3689 3689 3689 3705 3713 3723 3743 3775 3753 3775 3753 3761 3769 3777 3785 3793 3801	3586 3594 3602 3610 3618 3626 3634 3642 3658 3668 3668 3668 3668 3668 3668 3668	3587 3595 3603 3611 3627 3635 3643 3659 3667 3663 3663 3663 3663 3663 3663 366	3588 3596 3604 3612 3628 3638 3644 3652 33648 3678 3708 3708 3716 3723 3740 3778 3740 3778 3740 3778 3740 3778 3772 3780 3788 3786 3788 3796 3780 3788 3796 3804	5 3589 3597 3605 3613 3629 3637 3645 3663 3663 3663 3663 3663 3663 3663	3590 3598 3614 3622 3630 3638 3646 3654 3664 3664 3664 3664 3702 3710 3718 3734 3742 3750 3758 3766 3774 3758 3766 3774 3788 3766 3774	7 3591 3599 3607 3615 3623 3631 3639 3647 3655 3763 3773 3773 3773 3775 3743 3759 3767 3775 3783 3799 3807 3815	7410 7420 7430 7440 7450 7460 7510 7520 7550 7550 7550 7550 7560 7550 7560 7550 7660 7650 765	3840 3848 3856 3864 3872 3880 3988 3996 3922 3936 39344 39352 3944 39352 3944 3936 3944 3936 4008 4008 4008 4008 4008 4048 4056 4058	3841 3849 3857 3865 3873 3881 3889 3993 3993 3993 3993 3995 3995 3995	3842 3850 3858 3866 3874 3882 3890 3998 3914 3952 3930 3954 3954 3956 3970 3978 3996 39970 3978 3996 4002 4014 4026 4024 4042 4050 4056 4074	3843 3851 3857 3867 3883 3891 3907 3915 3931 3939 3947 3955 3963 3971 3979 3987 3987 3987 3987 4003 4001 4019 4027 4043 4051 4053	3844 3852 3860 3868 3876 3984 3990 3900 3916 3924 3948 3956 3948 3956 3964 3972 3988 3996 4004 4020 4028 4002 4028 4044 4052 4068 4076	3845 3853 3853 3853 3853 3893 3901 3905 3933 3949 3957 3949 3957 3965 3973 3989 3997 4005 4001 4029 4034 4053 4061 4059	3846 3854 3854 3854 3878 3878 3878 3898 3992 3990 3994 3934 3950 3958 3956 3954 3956 3954 3956 3956 3954 3950 3998 4004 4004 4034 4054 4054 4052 4078	3847 3855 3863 3871 3887 3903 3911 3927 3935 3943 3951 3953 3951 3959 3967 3975 3985 39951 39991 4007 4005 4003 4031 4031 4033 4047 4055	to 7777	to 4095
7010 7030 7030 7050 7060 7060 7060 7070 7100 7110 7110 7130 7130 7130 7140 7150 7140 7220 7250 7250 7250 7250 7250 7350 7350 7350 7350	3584 3592 3600 3608 3624 3632 3640 3656 3664 3656 3664 3656 3664 3656 3668 3696 3764 3712 3728 3774 3772 3778 3776 3778 3776 3778 3776 3778 3776 3778 3776 3778 3776 3800 3808 3816 3824	3585 3593 3601 3607 3625 3633 3641 3649 3657 3665 3673 3681 3687 3705 3771 3775 3775 3775 3775 3775 3775 377	3586 3594 3602 3610 3618 3626 3634 3642 3658 3668 3668 3668 3668 3668 3668 3668	3587 3595 3603 3611 3619 3627 3635 3643 3651 3663 3667 3663 3667 3683 3667 3683 3763 3771 3739 3777 3775 3773 3773 3779 3787 3779 3783 3771 3779 3787 3785 3803 3811 3819	3588 3596 3604 3612 3620 3628 3636 3644 3652 3684 3684 3684 3684 3692 3700 3708 3716 3772 3740 3778 3778 3778 3778 3778 3778 3788 3778	5 3589 3597 3605 3613 3629 3637 3645 3663 3667 3685 3693 3701 3709 3717 3725 3733 3741 3745 3773 3745 3773 3745 3773 3781 3789 3797 3781 3789 3797 3781 3789	3590 3598 3606 3614 3622 3630 3638 3646 3654 3670 3678 3686 3670 3718 3726 3710 3718 3726 3734 3734 3758 3774 3758 3774 3758 3774 3758 3774 3758 3774 3798 3798 3806 3814 3800	7 3591 3599 3607 3615 3623 3631 3639 3647 3675 3665 3663 3671 3679 3687 3703 3711 3719 3725 3743 3775 3743 3775 3743 3767 3775 3743 3767 3775 3783 3791	7410 7420 7430 7440 7450 7460 7510 7550 7550 7550 7550 7560 7550 7660 7550 7660 7650 7660 7650 7660 7650 765	3840 3848 3868 3867 3880 3880 3982 3912 3920 3928 3936 3944 3952 3936 3944 3952 3936 3944 3956 3984 4056 4002 4008 4016 4048 4056	3841 3849 3857 3865 3873 3881 3989 3993 3991 3929 3937 3995 3995 3995 3995 3995 3995 399	3842 3850 3858 3866 3874 3882 3989 3914 3922 3930 3938 3994 39954 39954 39954 39954 39954 39962 3970 3978 4002 4018 4028 4034 4042 4050 4058 4058 4058 4058	3843 3851 3859 3867 3883 3891 3907 3915 3931 3939 3947 3955 3963 3971 3975 3987 3995 4003 4011 4019 4027 4035 4041 4051 4051 4051	3844 3852 3860 3868 3876 3884 3990 3900 3908 3916 3924 3948 3956 3964 3956 3964 4012 4020 4028 4004 4012 4028 4036 4044	3845 3853 3861 3869 3887 3985 3993 3991 3995 3993 3995 3995 3995 399	3846 3854 3854 3870 3878 3886 3894 3902 3918 3926 3934 3942 3934 3942 3958 3958 3958 3958 3958 3958 39590 3998 4006 4014 1022 4030 4018 4046 4054 4065	3847 3855 3863 3871 3879 3887 3903 3911 3919 3927 3935 3951 3951 3953 3951 3953 3951 3959 3967 3983 3991 4007 4015 4023 4031 4039 4047	to 7777	to 4095

Octal-Decimal	Fraction	Conversion	Table
---------------	----------	------------	-------

OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.
. 000	. 000000	. 100	. 125000	. 200	. 250000	. 300	. 375000
.001	.001953	. 101	. 126953	. 201	. 251953	. 301	. 376953
.002	. đo3906	. 102	. 128906	. 202	. 253906	. 302	. 378906
. 003	.005859	. 103	. 130859	. 203	. 255859	. 303	. 380859
.004	.007812	. 104	. 132812	. 204	.257812	. 304	.382812
.005	.009765	. 105	. 134765	. 205	. 259765	. 305	. 384765
. 006	.011718	. 106	. 136718	. 206	. 261718	. 306	.386718
.007	.013671	. 107	. 138671	. 207	. 263671	. 307	.388671
. 010	.015625	. 110	. 140625	. 210	. 265625	. 310	. 390625
.011	.017578	. 111	. 142578	.211	. 267578	. 311	. 392578
.012	.019531	. 112	. 144531	. 212	. 269531	. 312	. 394531
.013	.021484	. 113	. 146484	. 213	. 271484	. 313	. 396484
.014	.023437	. 114	. 148437	. 214	. 273437	.314	. 398437
.015	.025390	. 115	. 150390	. 215	. 275390	.315	. 400390
.016	.027343	. 116	. 152343	. 216	. 277343	.316	. 402343
.017	.029296	.117	. 154296	.217	. 279296	.317	. 404296
				1			
. 020	.031250	. 120	. 156250	. 220	. 281250	. 320	. 406250
. 021	.033203	. 121	. 158203	. 221	. 283203	. 321	. 408203
. 022	.035156	. 122	. 160156	. 222	. 285156	. 322	.410156
. 023	.037109	. 123	. 162109	. 223	. 287109	. 323	. 412109
. 024	.039062	. 124	. 164062	. 224	. 289062	. 324	.414062
. 025	.041015	. 125	. 166015	. 225	. 291015	. 325	.416015
. 026	.042968	. 126	. 167968	. 226	. 292968	. 326	.417968
.027	.044921	. 127	. 169921	. 227	. 294921	. 327	. 419921
. 030	.046875	. 130	. 171875	. 230	. 296875	. 330	.421875
. 031	.048828	. 131	.173828	. 231	. 298828	. 331	. 423828
. 032	.050781	. 132	. 175781	. 232	. 300781	. 332	. 425781
. 033	. 052734	. 133	. 177734	. 233	. 302734	. 333	. 427734
. 034	. 054687	. 134	. 179687	. 234	. 304687	. 334	. 429687
. 035	.056640	. 135	. 181640	. 235	. 306640	. 335	.431640
. 036	. 058593	. 136	. 183593	. 236	. 308593	. 336	. 433593
. 037	.060546	. 137	. 185546	. 237	.310546	. 337	. 435546
. 040	.062500	. 140	. 187500	. 240	. 312500	. 340	437500
.041	.064453	. 141	. 189453	. 241	.314453	.341	. 439453
.042	.066406	. 142	. 191406	. 242	.316406	. 342	.441406
.043	.068359	. 143	. 193359	. 243	.318359	. 343	. 443359
.043	.070312	. 144	. 195312	. 244	. 320312	. 344	.445312
.045	.072265	. 145	. 197265	. 245	. 322265	. 345	.447265
. 045	.074218	. 145	. 199218	.245	. 324218	. 346	. 449218
.040		. 148	. 201171	. 247		. 347	.451171
	.076171				.326171		
. 050	.078125	. 150	. 203125	. 250	.328125	. 350	.453125
. 051	.080078	. 151	. 205078	. 251	. 330078	. 351	.455078
. 052	.082031	. 152	. 207031	. 252	. 332031	. 352	.457031
.053	.083984	. 153	. 208984	. 253	. 333984	. 353	. 458984
. 054	.085937	. 154	. 210937	. 254	. 335937	. 354	, 460937
.055	.087890	. 155	. 212890	. 255	.337890	. 355	.462890
.056	.089843	. 156	. 214843	. 256	. 339843	. 356	.464843
. 057	.091796	. 157	. 216796	. 257	.341796	. 357	.466796
. 060	.093750	. 160	. 218750	. 260	. 343750	. 360	. 468750
.061	.095703	. 16 1	. 220703	. 261	.345703	. 361	. 470703
.062	. 097656	. 162	. 222656	. 262	.347656	. 362	. 472656
. 063	. 099609	. 163	. 224609	. 263	. 349609	. 363	474609
.064	. 101562	. 164	. 226562	. 264	. 351562	. 364	476562
. 065	. 103515	. 165	. 228515	. 265	. 353515	. 365	478515
.066	. 105468	. 166	. 230468	. 266	. 355468	. 366	460468
.067	. 107421	. 167	. 232421	. 267	. 357421	. 367	482421
.070	. 109375	. 170	. 234375	. 270	. 359375	. 370	.484375
.071	. 111328	. 171	. 236328	.271	.361328	.371	. 486328
.072	. 113281	. 171	. 238281	.272	.363281	.372	.488281
	. 115234						.490234
.073		. 173	. 240234	. 273	. 365234	. 373	.490234
.074	. 117187	. 174	. 242187	.274	.367187	. 374	
.075	. 119140	. 175	. 244140	.275	.369140	.375	.494140
.076	. 121093		. 246093	.276	.371093	1	.496093
.077	. 123046	. 177	. 248046	.277	. 373046	.377	.498046
1						l	
L				l		í	

OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.
. 000000	.000000	.000100	. 000244	. 000200	. 000488	. 000300	. 000732
000001	.000003	.000101	.000247	.000201	.000492	.000301	.000736
. 000002	.000007	.000102	.000251	.000202	.000495	. 000302	. 000740
, 000003	.000011	.000103	.000255	. 000203	. 000499	. 000303	.000743
000004	.000015	.000104	. 000259	.000204	.000503	.000304	. 000747
000005	.000019	.000105	.000263	. 000205	.000507	. 000305	.000751
000006	.000022	.000106	.000267	. 000206	.000511	.000306	.000755
000007	.000026	.000107	.000270	.000207	.000514	.000307	.000759
000010	.000030	,000110	. 000274	.000210	.000518	.000310	.000762
000011	.000034	.000111	.000278	.000211	.000522	.000311	.000766
000012	.000038	.000112	.000282	.000212	.000526	.000312	.000770
000013	.000041	.000113	.000286	.000213	.000530	.000313	.000774
000014	.000045	.000114	.000289	.000214	.000534	.000314	.000778
000015	.000049	.000115	.000293	.000215	.000537	.000315	. 000782
000016	.000053	.000116	. 000297	.000216	.000541	.000316	. 000785
000017	.000057	.000117	.000301	.090217	.000545	.000317	.000789
000020	.000061	.000120	.000305	.000220	.000549	. 000320	.000793
000021	.000064	.000121	.000308	.000221	.000553	.000321	. 000797
000022	.000068	.000122	.000312	.000222	.000556	.000322	.000801
000023	.000072	.000123	.000316	.000223	. 000560	.000323	.000805
000024	.000076	.000124	. 000320	.000224	.000564	. 000324	.000808
000025	.000080	.000125	.000324	.000225	. 000568	.000325	.000812
000026	.000083	.000126	.000328	.000226	.000572	.000326	.000816
000027	.000087	.000127	.000331	.000227	.000576	.000327	.000820
000030	.000091	.000130	.000335	. 000230	.000579	. 000330	.000823
000031	.000095	.000131	. 000339	.000231	.000583	.000331	.000827
000032	. 000099	.000132	.000343	.000232	.000587	. 000332	.000831
000033	.000102	.000133	.000347	.000233	.000591	. 000333	.000835
000034	.000106	.000134	.000350	.000234	. 000595	.000334	, 000839
000035	.000110	.000135	.000354	.000235	.000598	.000335	.000843
000036	.000114	.000136	.000358	.000236	.000602	.000336	.000846
000037	.000118	.000137	.000362	.000237	.000606	.000337	,000850
000040	.000122	.000140	. 000366	.000240	.000610	.000340	.000854
000041	.000125	.000141	.000370	.000241	.000614	.000341	.000858
000042	.000129	.000142	.000373	.000242	.000617	.000342	. 000862
000043	.000133	.000143	. 000377	.000243	.000621	.000343	. 000865
000044	.000137	.000144	.000381	.000244	.000625	.000344	. 000869
000045	.000141	.000145	.000385	.000245	.000629	.000345	. 000873
.000046 .000047	.000144	.000146	.000389	.000246	.000633	.000346	.000877
	.000148	.000147	.000392	.000247	.000637	.000347	.000881
000050	.000152	.000150	. 000396	. 000250	.000640	.000350	.000885
000051	.000156	.000151	.000400	.000251	.000644	.000351	.000888
000052	.000160	.000152	.000404	.000252	.000648	.000352	. 090892
000053	.000164	.000153	.000408	.000253	. 000652	. 000353	. 000896
000054	.000167	.000154	.000411	.000254	.000656	.000354	.000900
000056	.000171	.000155	.000415	.000255	.000659	.000355	
000058	.000175	.000156	.000419	.000256	.000663	.000356	.000907
	.000179	.000157	.000423	.000257	.000667		
000060	.000183	.000160	.000427	.000260	,000671	. 000360	.000915
000061 000062	.000186 .000190	.000161	.000431 .000434	.000261	.000675 .000679	.000361	.000919
000062	.000190	.000162	.000434	.000262	.000679	.000362	.000923
000063	.000198	.000164	.000438	.000263	. 000686	.000364	.000920
000065	.000202	.000165	. 000446	.000265	.000690	.000365	.000934
000065	.000202	.000165	. 000410	.000265	.000694	.000366	.000938
000067	.000209	.000167	.000453	.000267	. 000698	. 000367	. 000942
000070	-			.000270	.000701	.000370	.000946
	.000213	.000170	.000457				.000946
000071	.000217 .000221	.000171	.000461	.000271	.000705	.000371	.000945
000072	.000221	.000172	.000465 .000469	.000272	.000709	.000372	.000953
000073	.000225	.000173	.000469	.000273	.000713 .000717	.000373	.000951
	.000232	.000174	.000475	.000275	.000720	.000375	.000965
000075							
000075	000236	1 000174	000480		000724	1 000376	000965
000075 000076 000077	.000236 .000240	.000176	.000480 .000484	.000276	.000724 .000728	.000376	.000968

Octal-Decimal Fraction Conversion Table (Cont)

Octal-Decima	Fraction	Conversion	Tabl	le (Cont)
--------------	----------	------------	------	-----------

OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.	OCTAL	DEC.
.000400	. 000976	. 000500	.001220	,000600	.001464	.000700	,001708
.000401	. 000980	.000501	.001224	.000601	.001468	.000701	.001712
.000402	.000984	.000502	.001228	.000602	.001472	.000702	.001716
.000403	.000988	.000503	.001232	,000603	.001476	.000703	.001720
.000404	.000991	.000504	.001235	.000604	.001480	.000704	.001724
. 000405	. 000995	.000505	.001239	.000605	.001483	.000705	.001728
.000406	. 000999	.000506	.001243	.000606	.001487		.001728
.000407	.001003	.000507	.001243	.000607		.000706	
					.001491	.000707	.001735
.000410	.001007	.000510	.001251	.000610	.001495	.000710	.001739
.000411	.001010	.000511	.001255	.000611	.001499	.000711	.001743
.000412	.001014	.000512	.001258	.000612	.001502	.000712	.001747
.000413	.001018	.000513	.001262	.000613	.001506	.000713	.001750
.000414	.001022	.000514	.001266	.000614	.001510	.000714	.001754
.000415	.001026	.000515	.001270	.000615	.001514	.000715	.001758
.000416	.001029	.000516	.001274	.000616	.001518	.000716	.001762
.000417	.001033	.000517	.001277	.000617	.001522	.000717	.001766
.000420	.001037	. 000520	.001281	. 000620	.001525	.000720	.001770
.000421	.001041	.000521	.001285	.000621	.001529	.000721	.001773
.000422	.001045	. 000522	.001289	. 000622	.001533	. 000722	.001777
. 000423	.001049	. 000523	.001293	. 000623	.001537	. 000723	.001781
.000424	.001052	. 000524	.001296	. 000624	.001541	.000724	.001785
.000425	.001056	.000525	.001300	. 000625	.001544	.000725	.001789
.000426	.001060	.000526	.001304	.000626	.001548	.000726	.001792
.000427	. 001064	.000527	.001308	.000627	.001552	.000727	.001796
. 000430	.001068	.000530	.001312	. 000630	.001556	.000730	.001800
.000431	.001071	.000531	.001316	. 000631	.001560	.000731	.001804
.000432	.001075	. 000532	.001319	.000632	.001564	.000732	.001808
.000433	. 001079	.000533	.001323	,000633	.001567	.000733	.001811
.000434	.001083	.000534	.001327	.000634	.001571	.000734	.001815
.000435	.001087	.000535	.001331	.000635	.001575	.000735	.001819
.000436	.001091	.000536	.001335	. 000636	.001579	.000736	.001823
.000437	.001094	.000537	.001338	.000637	.001583	.000737	.001827
.000440	.001098	.000540	.001342	1	.001586		
.000441	.001102	.000540	.001346	.000640	.001590	.000740	.001831 .001834
.000442	.001102	1		.000641		.000741	
.000443	.001110	.000542	.001350	.000642	.001594	.000742	.001838
.000444			.001354	. 000643	.001598	.000743	.001842
.000445	.001113 .001117	.000544	.001358	.000644	.001602	.000744	.001846
.000446	.001121	.000545	.001361	.000645	.001605	.000745	.001850
.000447	. 001125	.000547	.001365	. 000646	.001609	.000746	.001853
			.001369	.000647	.001613	.000747	.001857
.000450	.001129	.000550	.001373	. 000650	.001617	.000750	.001861
.000451	.001132	.000551	.001377	.000651	.001621	.000751	.001865
.000452	.001136	.000552	.001380	.000652	.001625	.000752	.001869
.000453	.001140	.000553	.001384	. 000653	.001628	.000753	.001873
.000454	.001144	.000554	.001388	. 000654	.001632	.000754	.001876
.000455	.001148	.000555	.001392	. 000655	.001636	.000755	.001880
.000456	.001152	.000556	.001396	.000656	.001640	.000756	.001884
. 000457	.001155	.000557	.001399	.000657	.001644	.000757	.001888
.000460	.001159	.000560	.001403	.000660	.001647	.000760	.001892
.000461	.001163	.000561	.001407	.000661	.001651	.000761	.001895
.000462	.001167	.000562	.001411	.000662	.001655	.000762	.001899
.000463	.001171	. 000563	.001415	. 000663	.001659	.000763	.001903
.000464	.001174	.000564	.001419	000664	.001663	.000764	.001907
.000465	.001178	.000565	.001422	.000665	.001667	.000765	.001911
.000466	.001182	.000566	.001426	. 000666	.001670	.000766	.001914
.000467	.001186	. 000567	.001430	000667	.001674	. 000767	.001918
.000470	.001190	.000570	.001434	. 000670	.001678	. 000770	.001922
.000471	.001194	.000571	.001438	. 000671	.001682	.000771	.001926
.000472	.001197	.000572	.001441	. 000672	.001686	.000772	.001930
.000473	. 0012	. 000573	.001445	. 000673	.001689	. 000773	.001934
.000474	.001205	.000574	.001449	.000674	.001693	.000774	.001937
.000475	.001209	.000575	.001453	. 000675	.001697	. 000775	.001941
.000476	.001213	. 000576	.001457	.000676	. 001701	.000776	.001945
.000477	.001216	. 0005 77	.001461	. 000677	. 001705	. 000777	. 001949
			·····				

## Index

1	Ł	
ŀ	٩	

AA01-A Digital-To-Analog	6-82
Accumulator (AC), Description	1-3
Accumulator, I/O Transfers	5-9
A-D Converter Controls	6-78
A-D Converter Instructions	6-78
AD12 Analog-Digital Converter and Multiplexer	3-35
Addressing: a-Class	3-6
Addressing, Combination of	
Extended Memory Programming	4-21
Addressing Methods, 8 Mode	4-2
Addressing Methods, Memory	3-3
Addressing: a-Class	3-6
β-Register	3-4
β-Register Indexing	3-5
Direct Addressing, LINC mode	3-3
Indirect Addressing: β-Class	3-3
AF01-A A-D Converter Specifications	6-76
AF01-A Analog-To-Digital Converter	6-76
AF01-A Sample and Hold Options	6-81
a-Class, Addressing	3-6
a-Class and Non-Memory Reference Format	3-6
a-Class and Others	3-6
a-Class Operations	3-14
Analog-To-Digital Converter AF01-A	6-76
Analog Inputs	1-5,3-35
Analog Inputs, Equipment	1-1
Analog Knobs and Power Switch Panel	2-8
Analog-To-Digital	6-76
A-D Converter Controls	6-78
Analog-To-Digital Converter AF01-A	6-76
Instructions, A-D Converter	6-78
Sample and Hold Options, AF01-A	6-81
Specifications, AF01-A A-D Converter	6-76
ASR-33 Character Set Display Pattern	3-34
Autoindexing, Extended Memory Programming	4-21
Autoindexing, 8 Mode	4-4
Auxiliary Scope Connector	1-5

### B

BA12 Peripheral Expander	1-6
β-Class Format	3-6
$\beta$ -Class Instruction Format	3-4
β-Register	3-4
$\beta$ -Register Indexing	3-5
Block, (LINCtape)	3-39
Block Number (BM)	3-39
Break Field Register, Extended Memory	4-19

### С

Cable Connections, Front Panel	G-1
Cable Connections to I/O Bus	5-45
Cable Selection	5-40
Card Readers	6-63
Card Reader and Control CR12	6-63
CM12 Optical Mark Card Reader	6-66
CM12 Optical Mark Card Reader Instructions	6-66
Controls and Indicators CM12	6-67
Control or Indicator, CR12	6-65
Instructions, CM12 Optical Mark	
Card Reader	6-66
Instructions, CR12 Card Reader	6-63
Optical Mark Card Reader, CM12	6-66
Card Reader and Control CR12	6-63
Central Processor, Logic Description	1-1
Accumulator (AC), Description	1-3
Instruction Field Register (IF), 5-Bits	1-4
Instruction Register (IR), 12 Bits	1-3
Link (L) 1 Bit	1-3
Memory Address Register (MA) 12 Bits	1-3
Memory Buffer (MB), 12 Bits	1-3
Mode Status Register 1 Bit	1-3
Program Counter (PC) 12 Bits	1-3
Central Processor, Major State Indicators	2-3
Central Processor, Miscellaneous Indicators	2-4
Central Processor, Register Indicators	2-3

Character Displays	3-32
Character Set	3-33
Character Size	1-5,3-29
Checksum (CM)	3-39
Check Words (CW)	3-39
Classic LINC	1-4
CM12 Optical Mark Card Reader	6-66
Controls and Indicators CM12	6-67
Codes, Table of	F-1
Combining Group 1 Operations	<b>4-</b> 9
Combined Operations: Group 1	4-8
Combined Skips In Group II	4-11
Command Register, Contents, Magnetic Tape	6-51
Configuration of, PDP-12	1-1
Connections, Front Panel Cable	G-1
Connections, Interface	5-44
Connections, I/O Bus Cable	5-45
Connector Selection	5-41
Console Controls and Indicators	2-1
Console Key Functions	2-6
Console Switches	3-22
Console Toggle Switches	3-7
Console Teletype Control	6-5
Controls and Indicators	2-1
Control Registers	3-40
Continued Operations, Magnetic Tape	6-49
Construction of Interfaces	5-39
Converting ASCII Code to PDP-12 Teletype	6-3,F-3
Conventions, Logic	5-3
CRT Display Character Size	1-45
CRT Display, Equipment	1-1
CRT Display, Remote	3-31
CRT Display, VR12	2-1,3-31
ASR-33 Character, See Display Pattern	3-34
Character Displays	3-32
Character Set	3-33
DIS Display (a-Class)	3-32
DSC Display Character (β-Class)	3-32
DSC Display Pattern for	3-33
Half-Size Characters	3-33
Point Displays	3-32
CR12 Card Reader and Control	6-63
CR12 Card Reader, Control or Indicator	6-65
CR12 Card Reader Instructions	6-63
Counter Register, KW12-A	6-62
Current Address, Three Cycle Data Break	5-29
of the but brown	5 47

I		1	
	E		,

Dataphone Control, Type DP12-B	6-9
Dataphone Interface DP12-B	1-6
Data Break, Input Data Transfers	5-22
Input Interface Logic	5-24
Memory Increment	5-27
Output Data Transfers	5-23
Output Interface Logic	5-26
Output Transfer Timing	5-25
Request for	5-22
Single Cycle	5-21
Single Cycle Timing	5-23
Three Cycle	5-21,5-29
Three Cycle Timing	5-29

Data Break Transfers	5-2,5-21
Data Break Input Interface Logic	5-24
Data Break Output Interface Logic	5-26
Data Break Output Transfer Timing	5-25
Data Break Single Cycle Timing	5-23
Data Break Transfer Interface	5-21
Increment CA Inhibit, Three Cycle Data Break	5-30
Input Data Transfers, Data Break	5-22
Memory Increment, Data Break	5-27
Memory Increment, Data Break Timing	5-28
Output Data Transfers, Data Break	5-23
Three Cycle Data Break Three Cycle Data Break Timing	5-29
Word Count Overflow, Three Cycle Data Break	5-29 5-30
Data Break Transfer Interface	5-30
Data Break, Types of	5-21
Data Buffer DB12-P, N	5-21
Data Field	3-1
Data Field in Memory	1-4
Data Field Register, Extended Memory	4-19
Data Field Reserved Locations	3-2
Data, Mathematical Table	H-1
Data Path	3-39
Data Terminal	1-5,3-35
Analog Extension Panel	2-1
ATR AC to Relays	3-37
Clock Input Panel	2-1
Fast Sample	3-36
Power Switch Panel	2-1
Relay and Analog Input Panel	2-7
Relay Terminals and Corresponding AC Bits	3-36
RTA Relays to AC	3-37
SAM Sample	3-36
Data Transfers, see Programmed Data Transfers	5-2
Data Transfers, Input	5-10
Data Transfers, Output	5-11
Data Transfer Timing	5-6
Data Words (DM, FM)	3-39
DB12-P, N Data Buffer	6-73
DC02-D Instructions	6-15
DC02-E Control Instructions	6-14
DC02-E Multiple Teletype Control	6-13
DC02-F Multiple Teletype Control	6-16
DC02-F Instructions	6-17
Decoding, Instruction IOT	54
Device Selector	5-7
DF/DS32, -D Random Access Disk File, Instructions	6-27
Digital-To-Analog	6-82
Digital-To-Analog AA01-A	6-82
Digital-To-Analog AA01-A Digital-To-Analog AA01-A	6-82
Direct Address	3-6
Direct Addressing	3-0 4-2
Direct Address Format of	3-3
DIS Display (a-Class)	3-32
Disable Teletype Interrupt	3-32
Disk Cartridge Memory, RK8/RK01	6-38
Disk Memory System, RF/RS08	6-30
Disk, RK8-P, RK8-N, RK01, RK01-K	6-43
Disk, Kiko-I,	6-27
DF/DS32, -D Instructions	6-27
Disk Cartridge Memory, RK8/RK01	6-38

Disk Memory System, RF/RS08	6-30
Instructions, RF32 to RF/RS08 Comparison	6-35
Instructions, RK08/RK01	6-38
Programming, Disk Software	6-44
Programming, RK08/RK01 I/O Subroutine	6-42
Random Access Disk File,	
DF/DS32 and DF/DS32-D	6-27
RF/RS08 Instructions	6-30
RF/RS08 Programming, Example	6-34
Specifications, RF/RS08	6-37
Specifications, RK9/RK01	6-43
Display	1-5
Display Scope Controls	2-11
Division	4-18
Division of 24-bit numbers	
EAE Programming	4-17
DM12	5-20
DSC Display Character (β-Class)	3-32
DSC Display Pattern for,	3-33
DW08A I/O and Bus Converter	1-6

Ð		
EAE Instruction Format	4-13	
EAE Instructions		
ASR Arithmetic Shift Right	4-16	
ASR, Shift Path for	4-16	
CLA Clear AC	4-14	
DVI Divide	4-15	
LSR Logical Shift Right	4-16	
LSR, Shift Path for	4-16	
MQA Place MQ in AC	4-14	
MQL Load MQ from AC	4-14	
MUL Multiply	4-15	
NMI Normalize	4-15	
NMI, SHL Shift Path for,	4-15	
SCA Step Counter to AC	4-14	
SCL Load Step Counter	4-14	
SHL Shift Left	4-15	
Effective Address, 8 Mode	4-4	
Effective Addressing	3-3	
8 Mode Instructions	B-1	
8 Mode Perforated Tape Loader	D-1	
End-around carry	3-8	
Extended Address Format	3-46	
Extended Arithmetic Element,		
Programming for	4-16	
Extended Arithmetic Element (EAE), KE12	1-6,4-13	
Extended Arithmetic Element, KE12	4-13	
Extended Memory	4-2,4-19	
Addressing Combination of Extended		
Memory Programming	4-21	
Autoindexing, Extended Memory Programming	4-21	
Break Field Register, Extended Memory	4-19	
Data Field Register, Extended Memory	4-19	
Extended Memory, Calling A Subroutine		
Across Fields	4-21	
Instruction Field Buffer, Extended Memory	4-19	
Instruction Field Register, Extended Memory	4-19	
Instructions, Extended Memory	4-19	
CDF Change Data Field	4-20	
CIF Change Instruction Field	4-20	
RDF Read Data Field	4-20	

<b>RIB Read Interrupt Buffer</b>	4-20
<b>RIF Read Instruction Field</b>	4-20
RMF Restore Memory Field	4-20
Program Interrupt, Extended Memory	4-22
Programming, Extended Memory	4-21
Register, Extended Memory	4-19
Save Field Register, Extended Memory	4-19
Extended Memory, 8 Mode see also	
LINC mode control	3-22
Extended Operations	3-45
Extended Operations Buffer	3-41
Extended Operations, LINCtape	3-40
Extended Tape Addressing	1-4
Hold-motion	1-4
No-Pause	1-4
Program Interrupt	1-4
Tape Interrupt	1-4
with Core	1-4
Extended Units	3-47
External Level Lines	3-20
External Skips	3-20

F

Fast Sample	3-29
Field Address, Use of	3-2
First Word	3-42
Fixed Interval Clocks	6-25
Format Routines	6-7
Frequency Range, KW12-B,C	6-26
Front Panel Cable Connections	G-1
Full-Word Arithmetic	3-8
Full-Word Comparison	3-12
Full-Word Data Transfers	3-7
Full-Word Instructions	3-7
Full-Word Logic	3-11
Functional Description, Magnetic	
Tape Control	6-45

## G

General Description, System PDP-12	1-1
Group I, Operate Class Instruction Format	4-7
Group II, Combined Skips	4-11
Group II, Operate Class	4-9
Guard Word (GM)	3-39

H

Half-Size Characters	3-33
Half-Word Addressing, defined	3-13,3-14
Hold-Motion, Extended Tape Addressing	1-4
Hold Unit Motion	3-48

I

I-Bit	3-4
I-Bit, Octal Value	3-7
I-Bit, 8 Mode Addressing	4-4
Increment CA Inhibit, Three Cycle	
Data Break	5-30
Incremental Plotter XY12	1-6

I-3

Incremental Plotter and Control	
Type XY12	6-68
Indexing, $\beta$ -Register	3-5
Indicators & Controls	2-3
Analog Knobs and Power Switch Panel	2-8
Central Processor Major State Indicators	2-3
Central Processor Miscellaneous Indicators	2-4
Central Processor Register Indicators	2-3
Console Key Functions	2-6
Display Scope Controls	2-11
Individual Console Toggle Switches	.3-7
Tape Processor Major State Indicators	2-4
Teletype Model 33ASR Controls	2-14
Toggle Switch Registers	2-1-
TU55 Tape Transport Controls and Indicators	2-12
Indirect Address, $\beta$ -Class	3-6
Indirect Addressing	
6	3-3,4-3
Input Data Transfers	5-10
Input Data Transfers, Data Break	5-16
Input/Output Bus Description	3-22,5-1
Input/Output Facilities and Display,	
LINC mode, I/O Bus	1-5
Analog Inputs	1-5
Auxiliary Scope Connector	1-5
Dataphone Interface DP12-B	1-6
Data Terminal	1-5
Display	1-5
Extended Arithmetic Element (EAE) KE12	1-6
Incremental Plotter XY12	1-6
Input/Output I/O Bus	1-6
Keyboard/Printer	1-6
LINCtape	1-5
Programmable Real-Time Interface KW12A	1-6
Relay Buffer	1-5
Sense Lines	1-5
TTY Interface, DP12-A	1-6
Input/Output Skip	5-8
Input/Output Transfer Class	4-12
Interaction between Modes Switching	1-5
Interface Connections	5-44
Interface Construction	5-39
Interface Design and Construction	5-30
Cable Connections to I/O Bus	5-45
Cable Selection	5-40
Connector Selection	5-41
Construction of Interfaces	
Interface Connections	5-39
Interface Modules	5-44
	5-30
IOT Allocations, Octal	5-43
Module Cooling	5-43
Module Layout	5-40
Module Selection for Interface Circuit of	
Peripheral Equipment	5-32
M-Series Flip Chip Modules	5-34
M-Series Module Summary	5-35
M101 Bus Data Interface	5-33
M103 Device Selector	5-33
M111/M906 Positive Input Circuit	5-30
M516 Positive Bus Receiver Input Circuit	5-31
M623/M906 Positive Output Circuit	5-31
M660 Bus Driver Output Circuit	5-32
Wiring Hints	5-32

Interface Modules	5-30
Interrupt, LINC mode,	
data path during	3-27
Interrupt, LINC Mode Service Routine	3-29
Interrupt OFF, IOF	4-13
Interrupt ON, ION	4-12
Interrupts, LINC Mode M	3-26
Instruction Decoding, IOT	5-4
Instruction Descriptions, see Instructions	3-7
Instruction Field	3-1
Instruction Field Buffer (IB)	3-24
Instruction Field and Data Field Registers	3-2
Instruction Field Register (IF), 5-Bits	1-4
Instruction Field Register,	
Extended Memory	4-19
Instruction Field Reserved Locations	3-2
Instruction Format	3-7,3-41
Instruction Format, Group II Operate Class	4-10
Instruction Formats, Direct Address,	
Indirect Address $\beta$ -Class, <i>a</i> -Class and others	3-6
Instruction Register (IR), 12 Bits	1-3
Instruction Set, 8 Mode	3-1,4-5,B-1
AND Logical And to AC	4-6
CIA Complement and Increment AC	4-9
CLA Clear Accumulator	4-10
CLL Clear Link	4-7
CMA Complement Accumulator	4-7
CML Complement Link	4-8
DCA Deposit and Clear Accumulator	4-5
GLK Set Link	4-9
HLT Halt	4-11
IAC Increment Accumulator	4-8
ISZ Increment and Skip if Zero	4-6
JMP Jump	4-6
JMS Jump to Subroutine	4-6
LAS Load Accumulator from Switches	4-10
LINC Switch to LINC mode	4-10
NOP No Operation	4-7
OSR OR Switch Register with AC	4-11
RAL Rotate Accumulator Left	4-8
RAR Rotate Accumulator Right	4-8
RTL Rotate Two Places Left	4-8
RTR Rotate Two Places Right	4-8
SKP Skip Unconditionally	4-10
SMA Skip on Minus AC	4-10
SNA Skip on Non-Zero AC	4-10
SNL Skip on Non-Zero Link	4-10
SPA Skip on Plus AC	4-10
STA Set Accumulator	4-9
STL Set Link	4-9
SZA Skip on Zero AC	4-10
SZL Skip on Zero Link	4-10
TAD Two's Complement Add to AC	4-10
Instruction Trap	3-29,3-30,3-49
Instructions,	5-29,5-50,5-49
A-D Converter	6-78
CM12 Optical Mark Card Reader	6-66
CR12 Card Reader	6-63
Console Teletype Control	6-5
DC02-D	6-15
DC02-E	6-13
Descriptions	3-7
resemptions	3-1

DF/DS32, -D	6-27	LINC Mode Instructions	3-2,A-1
EAE	4-13	Character Size	3-29
Extended Memory	4-19	Console Switches	3-22
Format Explanation of	3-7	Disable Teletype Interrupt	3-29
I/O Bus	C-1	Fast Sample	3-29
IOT	1-4	Full-Word Arithmetic	3-8
LINC	3-1,3-6,A-1	Full-Word Comparison	3-12
KP12	6-74	Full-Word Data Transfers	3-7
KW12-A	6-22	Full-Word Instructions	3-7
KW12-B,C	6-26	ADA Add to Accumulator ( $\beta$ -Class)	3-9
LP08 Line Printer	6-60	ADD Add to Accumulator	3-8
LP12 Line Printer	6-59	ADM Add to Memory ( $\beta$ -Class)	3-9
Magnetic Tape Control	6-45	APO Accumulator Positive	3-19
PC12, PP12 Paper Tape		AZE Accumulator Zero	3-19
Readers and Punch	6-71	BCL Bit Clear ( $\beta$ -Class)	3-11
PR12 Reader	6-72	BCO Bit Complement ( $\beta$ -Class)	3-12
PT08	6-11	BSE Bit Set ( $\beta$ -Class)	3-11
RF32 to RF/RS08 Comparison	6-35	CLR Clear	3-21
RF/RS08	6-30	COM Complement AC	3-21
RK08/RK01	6-38	DJR Disable JUMP Return	3-21
Tape Maintenance	E-1	ESF Enable Special Functions	3-28
Two-word	1-4	FLO Overflow	3-30
XY12 Plotter	6-68	HLT Halt	3-20
IOB I/O Bus Enable	3-23		
IOB/IOT	3-25	IBZ LINCtape Inter-Block Zone	3-20
I/O Bus Access	1-4	IOB-IOF Interrupt Off	3-26
I/O Bus Cable Connections	5-45	IOB-ION Interrupt On	3-26
I/O Bus External Level Lines	3-43	IOB-RIB Read Interrupt Buffer	3-27
I/O Bus Instructions		IOB-RDF Read Data Field	3-26
•	C-1	IOB-RIF Read Instruction Field	3-25
I/O Control	5-4	IOB-RMF Restore Memory Fields	3-27
I/O Handler, LINC-8 Simulator		JMP Jump	3-15
Trap Processor	1-4	KST Key Stuck	3-21
IOP Generation	5-5	LAM Link Add to Memory (β-Class)	3-9
IOP Generation and Timing	5-6	LDA Load Accumulator ( $\beta$ -Class)	3-8
I/O Preset Pulse	3-29	LDF Load LINC Data Field Register	3-25
I/O Program Interrupt	5-11	LDH Load Half	3-14
IOS, Multiple Inputs	5-13	LIF Load LINC Instruction Field Buffer	3-24
IOS and Program Interrupts,		LINC Switch to the LINC Mode (see PDP)	
Multiple Inputs	5-13	LSW Left Switches	3-22
IOT Allocations, Octal	5-43	LZE Link Zero	3-19
IOT Command Pulse Generation	5-7	MUL Multiply (β-Class)	3-10
IOT Instruction	1-4	NOP No Operation	3-21
IOT Instruction Decoding	1-4	PDP Switch to the 8 Mode	3-22
		QAC Place MQ in AC	3-21
J-K		QLZ MQ Low-Order Bit Zero	3-19
Keyboard Reader	6-5	ROL Rotate Left	3-16
Keyboard/Printer	0-5 1-6	ROR Rotate Right	3-17
KF12B	5-15	RSW Right Switches	3-22
KP12 Instructions		SAE Skip if Accumulator Equal to	
KP12 Power Failure Option	6-74	Operand (B-Class)	3-12
-	6-74	SCR Scale Right	3-18
KP12 Power Fail/Restart	6-74	SET Set a-Register	3-10
KW12-A Input Panel	6-22	SFA Place Special Function Flip-Flops in A	
KW12-A Instructions	6-22	SHD Skip if Half Differs	3-14
KW12-A Real-Time Interface	6-18	SKP Skip Unconditionally	3-14
KW12-A with A-D	6-22		3-20
KW12-B, KW12-C	6-25	SNS Sense Switch	
KW12-B, C Instructions	6-26	SRO Skip and Rotate ( $\beta$ -Class)	3-13
· L		STA Store Accumulator ( $\beta$ -Class)	3-8
LAP6-DIAL-MS	C A A	STC Store and Clear (Direct Address)	3-7
	6-44	STH Store Half	3-14
LINC Instruction Trap	3-24	SXL Skip on External Level	3-20
LINC Mode Direct Access Devices	1-4	XSK Index and Skip	3-15

Full-Word Logic	3-11
Half-Word Addressing, defined	3-13,3-14
LINC Mode I/O Bus Access	1-4
LINC Mode IOT Instructions	3-25
LINC Mode, Memory Modules	1-4
LINC Mode Programming	3-1
LINC Mode Program Interrupt	3-26
LINC Mode Provisions of	1-4
LINC Switch to LINC Mode	4-12
LINCtape, Equipment Required	1-1,1-5
LINCtape Formats	3-37
LINCtape Instructions	3-43
LINCtape Option, TC12-F	6-57
LINCtape Processor Information Paths	3-40
LINCtape Programming	3-41
LINCtape Registers	3-39
	2-1
LINCtape Transport, Type TU55	3-37
LINCtape TC12 Plack (UNCtape)	3-37
Block (LINCtape) Block Number (BM)	3-39
Check Words (CM)	3-39
Checksum	3-39
Control Registers	3-40
Data Path	3-39
Data Words (DM, FM)	3-39
Extended Address Format	3-46
Extended Operations	3-45
Extended Operations Buffer	3-41
Extended Units	3-47
First Word	3-42
Guard Word (GM)	3-39
Hold Unit Motion	3-48
Instruction Format	3-41
LINCtape Instructions	3-43
AXO AC to XOB	3-46
CHK Check One Tape Block	3-45
IOB-LMR Load Maintenance Register	3-48
MTB Move Toward Block	3-45
RDC Read and Check	3-43
RDE Read Tape	3-43
RDG Read and Check Group	3-43
STD Skip if Tape Done	3-48
TAC Tape Accumulator to AC	3-45
TMA Load TMA Setup Register	3-46
TWC Skip on Tape Word Complete	3-49
XOA XOB to AC	3-46
WCG Write and Check Group	3-44
WRC Write and Check	3-44
WRU Write Tape	3-44
LINCtape Processor Information Paths	3-44
LINCtape Programming	3-40
Maintenance Mode	3-41
Mark Condition	
	3-48
No Pause Condition	3-48
Organization of Data	3-37
Organization of LINCtape Data, Schematic	3-38
Read/Write Buffer (RWB)	3-39
Reverse Block Number (RBM)	3-39
Second Word	3-42
Subprocessor, LINCtape	3-39
Tape Accumulator (TAC)	3-40
Tape Block Number (TBN)	3-41

Tape Buffer (TB)	3-40
Tape Interrupt Enable	3-47
Tape Memory Address (TMA)	3-41
Tape Motion	3-42
Таре Тгар	3-49
Tape Word Skip	3-49
LINC-8, Comparison with PDP-12	1-1
LINC-8 Programs	3-31,3-49
LINC-8 Program Changes	1-4
Line Printers	6-59
Instructions, LP08 Line Printer	6-60
Instructions, LP12 Line Printer	6-59
Line Printer and Control LP08	6-60
Line Printer and Control, LP12	6-59
LP08 Line Printer Specifications	6-62
Line Printer and Control LP08	6-60
Line Printer and Control, LP12	6-59
Link	3-8,3-9
Link (L) I Bit	1-3
Logic Conventions	5-3
Logic Symbols, Figure 5-1	5-3
LP08 Line Printer and Control	6-60
LP08 Line Printer Instructions	6-60
LP08 Line Printer Specifications	6-62
LP12 Line Printer and Control	6-59
LP12 Line Printer Instructions	6-59
LT37-AD Option, Teletype	6-4,F-3

#### М

Magnetic Tape	6-45
Command Register Contents, Magnetic Tape	6-51
<b>Continued Operations, Magnetic Tape</b>	6-49
Functional Description, Magnetic Tape Control	6-45
General Description, TU20C	6-56
Instructions, Magnetic Tape Control	6-45
LINCtape Option, TC12-F	6-57
Magnetic Tape Control, TC58	6-45
Magnetic Tape Functions	6-47
Magnetic Tape Transports	6-54
Magnetic Tape Transports, TU20	
(7 Channel, 9-Track)	6-54
Magnetic Tape Transport, TU20C	6-56
Magnetic Tape Control, TC58	6-45
Magnetic Tape Control Instructions	6-45
Magnetic Tape Functions	6-47
Magnetic Tape Transports	6-54
Magnetic Tape Transports, TU20	
(7 Channel, 9-Track)	6-54
Magnetic Tape Transport, TU20C	6-56
Maintenance Mode	3-49
Mark Condition	3-48
MARK 12 Program	3-48
Mathematical Tables	H-1
Maximum Data Rates PT08	6-13
Memory Address Control	3-24
Memory Addressing Methods	4-2
Autoindexing, 8 Mode	4-4
Direct Addressing	4-2
Indirect Addressing	4-3
Memory Reference Instruction Format	4-3
Summary Addressing Methods,	
8 Mode, Table of	4-4

Memory Address Register (MA) 12 Bits	1-3
Memory Buffer (MB), 12 Bits	1-3
Memory Control Programming	3-24
Memory, Description, Organization of,	
Segments of, Pages of	1-4
Memory Extension Control	4-19
Memory Increment, Data Break	5-27
Memory Increment Data Break Timing	5-28
Memory, Organization of	3-1
Memory Reference Instructions	4-1,4-3,4-5
Memory Size, PDP-12	1-1
Microprogrammable	4-7
Microprogrammable EAE Instructions	4-13
Microprogramming Operate Class Group II	4.9
Mode Control	3-22
Mode Control, from 8 to LINC	4-12
Mode Programming,	4-1
Extended Memory	4-2
Organization of Memory, 8 Mode	4-2
Page 0	4-1
Mode Status Register 1 Bit	1-3
Model 33ASR, Teletype	6-3
Model 33KSR, Teletype	6-3
Model 35KSR, Teletype	6-4
Model 37KSR, Teletype	6-4
Modes of Operation, LINC and 8	1-1
Module Cooling	5-43
Module Lavout	5-40
Module Selection for Interface	540
Circuits of Peripheral Equipment	5-32
M-Series Module Summary	5-35
Multiplication of 12-bit Numbers	5-55
EAE Programming	4-17
M-Series Flip-Chip Modules	5-34
M101 Bus Data Interface	5-33
M103 Device Selector	5-33
M105 Device Sciector M111/M906 Positive Input Circuit	5-30
M516 Positive Bus Receiver Input Circuit	5-31
M623/M906 Positive Output Circuit	5-31
M660 Bus Driver Output Circuit	5-32
M706 Receiver, Teletype Control	6-5
M700 Receiver, Teletype Control M707 Transmitter, Teletype Control	6-5
Multi-Level Automatic Priority Interrupt	5-15
Multiple Teletype Control DC02-E	6-13
Multiple Teletype Control, DC02-F	6-16
Multiple Use of IOS and Program Interrupt	5-14
	4-16
Multiplication	- <b>10</b>
Ν	
Non-Bus I/O Devices	1-5
No Pause Condition	3-48
No Pause, Extended Tape Addressing	1-4
, , , , , , , , , , , , , , , , , , , ,	

## 0

Operands	3-3
Operate Class: Group I	4-7
Operate Class: Group II	4-9
Operate Class Instructions	4-6
Operation of EAE	4-13
Operating Modes	1-4
Character Size, CRT Display	1-5

CRT Display, Character Size	1-5
Extended Tape Addressing with Core,	
Tape Interrupt, Program Interrupt,	
No-Pause, Hold-motion	1-4
Hold-Motion, Extended Tape Addressing	1-4
Interaction between Mode Switching	1-5
I/O Bus Access	1-4
No-Pause, Extended Tape Addressing	1-4
Special Functions, LINC Programming	1-5
Tape Interrupt, Extended Tape Addressing	1-4
Operation, Program Interrupt	4-12
Optical Mark Card Reader, CM12	6-66
Option Groupings, Peripheral Devices	6-1
Organization of Data	3-37
Organization of LINCtape Data, Schematic	3-38
Organization of Memory, 8 Mode	4-2
Organization of Memory, General	3-1
Data Field Reserved Locations	3-2
Field Address, Use of	3-2
Instruction Field and Data Field Registers	3-2
Instruction Field Reserved Locations	3-2
Program Counter, LINC mode	3-2
Reserved Field Address, 8 and LINC mode	3-2
Output, Data Transfers	5-11
Output, Data Transfers, Data Break	5-23
Overflow, defined	3-8

#### P

Page 0	4-1
Pages, Memory	4-1
Paper Tape Punch and Reader PC12	6-71
Paper Tape	6-71
Instructions, PC12, PP12 Paper Tape	
Readers and Punch	6-71
Paper Tape Punch and Reader PC12	6-71
PC12 Paper Tape Punch and Reader	6-71
PC12, PP12 Instructions	6-71
PDP-8 Options used with PDP-12	6-1
Perforated Tape Loader	D-1
Peripheral Devices	6-1
Peripheral Equipment requirements of	5-4
Peripheral Expander, BA12	6-1
Peripheral Status Testing	5-9
Point Displays	3-32
PP12 Paper Tape Punch	6-71
Prewired, Optional Groupings	6-1
Power Fail/Restart	6-74
Instructions, KP12	6-74
KP12 Power Fail/Restart	6-74
KP12 Power Failure Option	6-74
Program Control	3-15
Program Counter, LINC mode	3-2
Program Counter (PC) 12 Bits	1-3
Program Interrupt	4-12,5-12
Program Interrupt, see LINC	
Mode and 8 Mode Programming	
Programmed Data Transfers	5-2
Conventions, Logic	5-3
Data Break Transfers	5-2
Logic Symbols	5-3

Program Interrupt	5-2
Signal Names	5-2
Programmed Data Transfers and I/O Control	5-4
Accumulator, I/O Transfers	5-9
Data Transfer Timing	5-6
Data Transfers, Input	5-10
Device Selector	5-7
Input Data Transfers	5-10
Input/Output Skip	5-8
IOS and Program Interrupt	
Multiple Inputs	5-13
IOT Command Pulse Generation	5-7
IOT Instruction Decoding	
Multiple Use of IOS and Program Interrupt	5-14
Output Data Transfers	5-11
Peripheral Status Testing	5-9
Programmed Data Transfer Interface Diagram	5-5
Programmed Data Transfer Timing	5-6
Programmed Interrupt, I/O	5-11
Timing and IOP Generator	5-6
Program Interrupt	4-12
IOF Interrupt Off	4-13
ION Interrupt On	4-12
Program Interrupt, Using the	4-13
Program Interrupt, Extended Memory Programming	4-22
Program Interrupt, Extended Tape Addressing	1-4
Program Interrupt LINC mode	3-26,4-13
Program Interrupt, Multiple Inputs	5-13
Program Interrupt Request	5-12
Program Interrupt, Using the	4-13
Programmable Real-Time Interface KW12A	1-6
Programmed Data Transfers description of	5-1
Programmed Data Transfer Interface Diagram	5-5
Programmed Data Transfer Timing	5-6
Programmed Interrupt, I/O	5-11
Programmed Interrupt and Instruction Trap	3-31
Programming	
Disk Software	6-44
EAE	4-16
Extended Memory	4-21
Format Routine, Teletype	6-7
LINC Mode	3-1
PT08	6-10
RK8/RK01 I/O Subroutine	6-42
Teletype	6-7
8 Mode	4-1
PR12 Paper Tape Reader PR12 Paper Tape Reader Instructions	6-72 6-72
PT08 Equipment Configuration	
PT08 Equipment Configuration PT08 Instructions	6-11
	6-11 6-10
PT08 Programming PT08 Specifications	6-10 6-10
PT08 Specifications	0-10
O-R	

Random Access Disk File,	
Types DF/DS32 and DF/DS32-D	6-27
Read/Write Buffer (RWB)	3-39
Real Time Clocks	6-18
Counter Register, KW12-A	6-22
Frequency Range, KW12-B, C	6-26
Input Synchronizers, KW12-A	6-19

KW12-A Input Panel	6-22
KW12-A Instructions	6-22
KW12-A with A-D	6-22
KW12-B, KW12-C	6-25
KW12-B, C Instructions	6-26
Real Time Interface, KW12-A	6-18
Register, Extended Memory	4-19
Relays	3-36
Relay Buffer Equipment Description	1-1,1-5
Relay Terminals and Corresponding AC Bits	3-36
Reserved Field Address, 8 and LINC Mode	3-2
Reverse Block Number (RBM)	3-39
RF/RS08 Disk Memory System	6-30
RF/RS08 Instructions	6-30
RF/RS08 Programming, Example	6-34
RF/RS08 Specifications	6-37
RK08/RK01 Disk Cartridge Memory	6-38
RK08/RK01 Instructions	6-38
RK08/RK01 I/O Subroutine Programming Example	6-43
RK08/RK01 Specifications	6-43
· ·	

 $\mathbf{S}$ 

Sample and Hold Options AF01A	6-81
Save Field Register, Extended Memory	4-19
Save Field Register, purpose	3-24
Scaling, defined, see Shift and Rotate Operations	3-16
Second Word	3-42
Sense Lines	1-5
Shift and Rotate Operations	3-16
SHL, NMI Shift Path for	4-15
Signal Names	5-2
Sign-bit	3-8
Single and Dual TTY Control,	
Type PT08 Teletype Control	6-10
Single Teletype Control Type DP12-A	6-9
Skip, defined	3-19
Skip Instructions	3-19
Skip loop programming example	3-23
Skips external	3-20
Skips, Miscellaneous	3-21
Special Functions, LINC mode	3-29
Special Functions, LINC programming	1-5
Specifications, AF01-A A-D Converter	6-76
Specifications, DC02-E	6-14
Specifications, RF/RS08	6-37
Specifications, RK08/RK01	6-43
Stand Alone Peripherals, list of	6-2
Standard Mode Addressing, LINCtape	3-42
Standard Mode, LINCtape	3-40
Status or Error Conditions,	
Magnetic Tape	6-49
Subprocessor, LINCtape	3-39
Summary Addressing Methods, 8 Mode	
Table of	4-4
Symbols and Abbreviations	1-6
System Configuration	1-1
Analog Inputs, Equipment	1-1
CRT Display, Equipment	1-1
LINCtape, Equipment Required	1-1
Relay Buffer, Equipment Description	1-1

Table of Codes	F-1
Tape Accumulator (TAC)	3-40
Tape Block Number (TBN)	3-41
Tape Buffer (TB)	3-40
Tape Interrupt Enable	3-47
Tape Interrupt, Extended Tape Addressing	1-4
Tape Maintenance Instructions	E-1
Tape Motion	3-42
Tape Memory (TMA)	3-41
Tape Processor Major State Indicators	2-4
Таре Тгар	3-21,3-31,3-49
Tape Word Skip	3-49
TC12-F LINCtape Option	6-57
TC58 Instructions	6-45
TC58, Magnetic Tape Control	6-45
Teleprinter/Punch	6-7
Teletype Code, discussion	6-3
Teletype	6-3
Console Teletype Control	6-5
Dataphone Control, DP12-B	6-9
DC02-D Instructions	6-15
DC02-E Control Instructions	6-14
Format Routines	6-7
Instructions, Console Teletype Control	6-5
Instructions, PT08	6-11
Keyboard Reader	6-5
LT37-AD Option, Teletype	6-4
Maximum Data Rates, PT08	6-13
Model 33ASR, Teletype	6-3
Model 33KSR, Teletype	6-3
Model 35KSR, Teletype	6-4
Model 37KSR, Teletype	6-4
Multiple Teletype Control, DC02-E	6-13
Multiple Teletype Control, DC02-F	6-16
Option Groupings, Peripheral Devices	6-1
Prewired, Optional Groupings	6-1
Programming the PT08	6-10

PT08 Equipment Configuration	6-11
PT08 Specifications	6-10
Single Teletype Control, DP12-A	6-9
Specifications, DC02-E	6-14
Stand Alone Peripherals, List of	6-2
Teleprinter/Punch	6-7
Teletype Controls	6-4
Teletype Interface, DP12-A	1-6
Teletype Model 33ASR Controls	2-1,2-14
Teletype, Subroutine	6-7
Ten Bit indexing, Program Counter	3-2
Three Cycle Data Break	5-29
Three Cycle Data Break Timing	5-29
Timing and IOP Generator	5-6
Toggle Switch Registers	2-6
Transfer Class, Input/Output	4-12
Transfers, Data Break	5-15
Transports, Magnetic Tape	6-54
Turnaround State, Tape	3-42
TU20 Magnetic Tape Transport,	
General Description	6-54,6-56
TU20C Magnetic Tape Transport	6-56
TU55 Tape Transport Controls and Indicators	2-12
TU55/56 Tape Transports	1-5
Two-Word EAE Instructions	4-14
Two-Word Instruction	1-4

### U-V-W

Wiring Hints	5-42
Word Count Overflow, Three Cycle Data Break	5-30

## X-Y-Z

XY Plotters	6-68
Incremental Plotter and Control,	
XY12	6-68
Instructions XY12 Plotter	6-68