


A7  
8080A

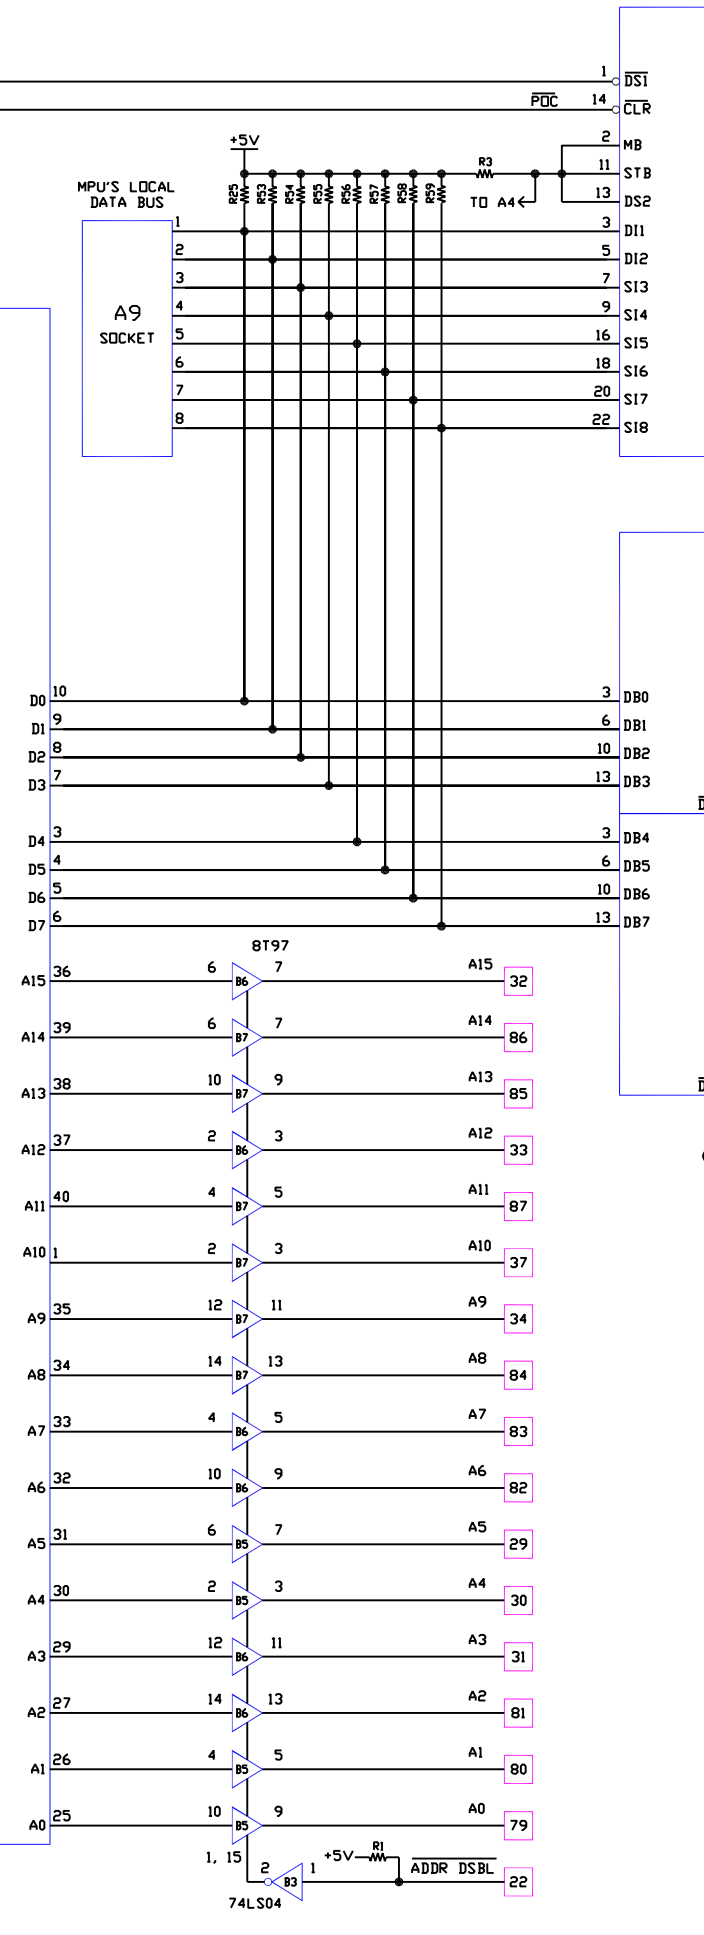

DATA IN ENABLE  
ie DATA DIRECTION CONTROL  
0: CPU RECEIVES DATA FROM S100 BUS  
1: CPU SENDS DATA TO S100 BUS  
THIS APPLIES TO THE CPU AND/OR THE CPU LOCAL BUS

	pHLDA	pDBIN	RUN	SS	SSV	DBIN	DBEAT	
0	1	1	1	0	1			RUN MODE, CPU DRIVEN BY LOCAL BUS, READ FRONT PANEL SWITCHES
0	0	1	1	1	1			RUN MODE, CPU DRIVING THE S-100 BUS, WRITE MEMORY OR I/O
0	1	1	1	1	0			RUN MODE, CPU DRIVEN BY S-100 BUS, READ MEMORY OR I/O
1	0	1	1	1	0			HOLD MODE, CPU DRIVEN BY S-100 BUS
0	1	0	1	1	0			STOP MODE, LOCAL BUS DRIVEN BY THE S-100 BUS, DISPLAY CURRENT RAM ADDRESSED
0	X	0	0	1	1			STOP MODE, CPU DRIVEN BY LOCAL BUS FOR EXAMINE (JMP) AND NEXT (NDP)
0	0	0	0	1	1			STOP MODE, LOCAL BUS DRIVING THE S-100 BUS FOR RAM DEPOSIT (WRITE)

### IMSAI 8080

MPU  
THIS IS NOT AN ORIGINAL SCHEMATIC. I HIGHLY RECOMMEND AN ORIGINAL REPRINT OF THE MANUAL FROM WWW.IMSAI.NET THIS DOCUMENT IS ONLY INTENDED TO ASSIST IN REPAIRS AND IS NOT A SUBSTITUTE FOR THE ORIGINAL MANUALS. THIS IS NOT AN OFFICIAL IMSAI DOCUMENT. THE SCHEMATIC AND OPERATION NOTES HERE WERE CREATED IN THE SPIRIT OF THOSE COMPUTER PIONEERS THAT WERE REQUIRED TO HAVE KNOWLEDGE OF ELECTRONICS AND DID MODIFICATIONS AND DOCUMENTATION IN THEIR OWN GROUPS. THIS DOCUMENT IS NOT MEANT TO DILUTE HISTORY, INSTEAD TO KEEP THESE MACHINES AND THE LEGACY VERY MUCH ALIVE. DATE OF REDRAW: MARCH 16, 2012