

*Bill Wilkins*

DISTRIBUTION

Eastern Region

Paramus

Tom Strasser - Regional Data Products Sales Mgr.  
Larry Lotito - Data Center Mgr.  
Charles Chernack - Data Center Training Mgr.  
Don Barkley - District Mgr.  
George Tibaldi - Systems Analyst

Norwalk

Dave Denman - Systems Analyst

Lexington

Ted Doyle - District Mgr.  
Steve Rosen - Systems Analyst

King of Prussia

Stroud Custer - Systems Analyst

Rockville

Ed Hayes - District Mgr.  
Ken Kelley - Systems Analyst

Midwestern

Skokie

Ed Pulsifer - Regional Data Products Sales Mgr.  
Lloyd Kusak - Data Center Mgr.  
Thurman Gladden - Systems Analyst  
Larry Mills - Systems Analyst  
Bill Alexander - Systems Analyst  
Stan Baker - Systems Analyst  
Rick Walsh - Systems Analyst

Neely

No. Hollywood

Jim Schmidt - Regional Data Products Sales Mgr.  
Jerry Allen - Systems Analyst  
Tom Winker - Systems Analyst

Englewood

Geo. Taylor - Systems Analyst

Fullerton

Rick Connella - District Mgr.  
Olen Morain - Data Center Mgr.  
Diane Miller - Systems Analyst  
Lee Kesky - Systems Analyst

Neely (Cont'd.)

Palo Alto

Bill Krause - District Mgr.  
Frank Jackson - Systems Analyst  
Larry Wear - Systems Analyst  
Mike Leavell - Systems Analyst

Southern

Atlanta

Neil Fisk - Regional Data Products Sales Mgr.  
 Phil Carter - Data Center Mgr.  
 Dave McClellan - Systems Analyst  
~~Frank Berman~~ - " "

Richardson

Bill Swanson - Systems Analyst (D.P.)  
~~Jack Olander~~ - " " (SYSTEMS)

Cupertino Division

Janet Baran  
Dave Blecki  
Bob Bond  
Joe Dietzgen  
~~Marc Cumocio~~  
Dave Harris  
George Moore  
John Pavone  
Dick Peake  
Larry Walsh  
Galen Wampler  
Bill Williams

HEWLETT *hp* PACKARD

CUPERTINO DIVISION • 11000 Wolfe Road, Cupertino, California 95014, Telephone 408/257-7000.

C. Ackerman

RECEIVED October 19, 1970

Distribution

REASON Systems Analyst DOS-M Course in  
Paramus and Atlanta

This memo confirms the dates of December 8 - 10, 1970 and December 15 - 17, 1970 for the DOS-M Seminars to be held in Paramus and Atlanta respectively.

BILL Williams, who in conjunction with Joe Dietzgen is providing factory DOS-M support, will be presenting these seminars. BILL's work schedule at each Data Center will be as follows:

Monday, Dec. 7 - Paramus  
Monday, Dec. 14 - Atlanta

Arrive at Data Center, taking care of last minute preparations as necessary for a Tuesday, 8:00 A.M. Seminar starting time.

Tues.-Thur. Dec. 8-10 Par.  
Tues.-Thur. Dec. 15-17 Atl.

Conduct the DOS-M Seminar  
Lecture 8:00 A.M. - 2:30 P.M.  
Lab 2:30 P.M. - 8:00 P.M.  
where a DOS-M system would be available.

Fri. Dec. 11 - Paramus  
Fri. Dec. 18 - Atlanta

Remain at Data Center providing additional system training & assistance as requested by regional personnel.

I am sure you will find these seminars the answer to many of your DOS-M system questions.

*Chuck*

## DOS-M SEMINAR - PARAMUS: December 8-10, 1970

ATLANTA: December 15 - 17, 1970

TIME	MONDAY	TUESDAY	WEDNESDAY	THURSDAY	FRIDAY	SATURD
8:00	Arrive at Data Making Necessary Preparations.	<u>Introduction</u>  - Hardware Req. - Adv./Disadv. - IOMEC - System Software	<u>Installation (Cond)</u>  - Starting Gen. - Formatting Disc - DOS-M Bootstrap	<u>Internal Sys. Oper.</u>  - Bootstrap - I/O - Drivers	Provide Addi- tional training & assistance as requested	
9:00						
10:00		<b>COFFEE</b>				
11:00		<u>DOS/DOS-M DIFF.</u>  - Starting Sys. - New Directives - New Exec. Calls - LOADR - Libraries - I/O		- On-line Mods & patches - System bugs		
12:00						
1:00		<u>Installation</u>  - Generation - DSGEN - Prelim. Consid.	<u>Internal Sys. Org.</u>  - Overview Core Alloc. Disc Alloc.			
2:00						
3:00		<b>COFFEE</b>				
4:00		<u>DOS-M Lab</u>	<u>DOS-M Lab</u>	<u>DOS-M Lab</u>		
5:00						
6:00						

## SYSTEMS ANALYST DOS-M COURSE OUTLINE

I

### INTRODUCTION

- A. Minimum hardware Requirements
  - 1. DOS and DOS-M
  - 2. Cost Comparison
    - a. DOS to DOS-M
    - b. DOS (HP) to Competitor (1130)
- B. Advantages and Disadvantages
- C. IOMEc Disc Overall Description
  - 1. Controller
    - a. Connection to Drives
    - b. Disc Protect Override Switch
  - 2. Drive
    - a. Fixed Disc
    - b. Cartridge (Removable Pack)
    - c. Power ON/OFF and READY
    - d. Cartridge LOCK/UNLOCK
    - e. Maximum of Four Per Controller
  - 3. Discs
    - a. Physical Layout (Heads Etc.)
    - b. Addressing (Subchannel, Cylinder, Track, Sector)
    - c. Sector Address Field
    - d. Storage Capacity Breakdown
    - e. Difference Between Physical and Logical Track
    - f. Programming Commands
    - g. Diagnostic Program
- D. System Software
  - 1. Components
  - 2. Minimum Core 16K For ALGOL
  - 3. Disc Space Used by System
  - 4. Concept of SYSTEM and USER Discs
    - a. Labels, Sys. Gen. Code, Sys. Proprietary Code
    - b. Allocation (System, Work, JBIN, "USER")

II

### OPERATIONAL DIFFERENCES FROM DOS

- A. Starting System
  - 1. Bootstrap Rather Than BBDL
  - 2. No "FRESH", "CONTINUATION" Requirement
- B. New Directives
  - 1. Change User Disc (:UD)
  - 2. Disc to Disc Dump (:DD)
  - 3. System Search (:S)
  - 4. Initialize (:IN)
  - 5. Abort without Job Termination (:OFF)
- C. Minor Changes to Some DOS Directives

- III      PROGRAMMING DIFFERENCES FROM DOS
- A. New EXEC Call (change user disc)
  - B. Minor Changes to Some DOS EXEC Calls
  - C. Use of LOADR
  - D. Libraries
  - E. I/O

- IV      INSTALLATION
- A. Introduction to System Generation
    - 1. Tapes Needed & Program Names
    - 2. Preliminary Consideration
      - a. Core Size
      - b. Speed of System Operation Desired
      - c. System and User Disc Placement
      - d. Particular Needs For Application Used
      - e. Whether Another System is Around
      - f. Medium For Input of System Modules
      - g. Hardware Required
    - 3. Preparation of DSGEN (SIO Environment)
    - 4. Starting Generator
      - a. All Equipment on, Disc Drive "ON" and "READY"
      - b. Disc Protect Override "ON"
      - c. Load DSGEN to Memory and Start at 100 Octal
      - d. Description of the Four PHASES and Ability to Restart Each in Case of Error
  - B. System Generation Procedure (and EXAMPLE)
    - 1. Initialization Phase
    - 2. Program Input Phase
    - 3. Parameter Input Phase
    - 4. Disc Loading Phase
      - a. Parallel Memory Block Diagram
      - b. Parallel Memory Octal Dump
  - C. Formatting User Discs or Cartridges
    - 1. Why and When Necessary
    - 2. What System Actually Does
    - 3. Operation Procedure
  - D. Configuring DOS-M Bootstrap
    - 1. Function Performed
    - 2. Clear up Confusion Between
      - a. Prepare Configured Bootstrap
      - b. Configured Bootstrap
      - c. Disc Resident Bootstrap
    - 3. Hardware Required
    - 4. Operation Procedure

V

INTERNAL SYSTEM ORGANIZATION

A. Brief Review of Core Layout

1. Block Diagram
2. Core Dump (Octal)

B. Disc Layout

1. Block Diagram
2. Disc Dump (Octal)

C. DOS-M Drivers

VI

INTERNAL SYSTEM OPERATION

A. Prepare Configured Bootstrap Program Study

1. Listing
2. Execution of Configured Bootstrap

B. Disc Resident Bootstrap Study

1. Listing
2. Execution

C. Trace I/O Operation Through Flowcharts Involving the Following Programs:

1. Disc Monitor (DISCM)
2. Input Output Control (\$EX18)
3. Example Driver (DVR01)

D. On-Line System Modification and Patches

1. In Case Line Printer Goes Down
2. Memory Protect Considerations

E. Known System Bugs in Version Being Shipped

1. Symptoms
2. Patches

OCTAL TO DECIMAL CONVERSION

TEN - THOUS.		THOUSAND		HUND.		TEN		UNIT	
OCT.	DEC.	OCT.	DEC.	OCT.	DEC.	OCT.	DEC.	OCT.	DEC.
0	0	0	0	0	0	0	0	0	0
1	4,096	1	512	1	64	1	8	1	1
2	8,192	2	1,024	2	128	2	16	2	2
3	12,288	3	1,536	3	192	3	24	3	3
4	16,384	4	2,048	4	256	4	32	4	4
5	20,480	5	2,560	5	320	5	40	5	5
6	24,576	6	3,072	6	384	6	48	6	6
7	28,672	7	3,584	7	448	7	56	7	7

"A" VERSION IOMEC

SYSTEM ANALYST DOS-M COURSE

DECEMBER 1969

Jan 1971

## SYSTEM ANALYST DOS-M COURSE OUTLINE

### I. INTRODUCTION

- A. Minimum Hardware Requirements
- B. Advantages and Disadvantages (Compared to DOS)
- C. IOMECA Overall Description
- D. DOS-M Software
- E. System Startup Description
- F. DOS-M I/O Request Processing

### II. OPERATIONAL DIFFERENCES FROM DOS

- A. System Startup
- B. New Directives
- C. Operational Difference Summary

### III. PROGRAMMING DIFFERENCES FROM DOS

- A. New EXEC Call
- B. Negative Request Codes
- C. EXEC Calls Difference Summary
- D. Other Important Points

### IV. INSTALLATION

- A. Introduction to Generation
- B. System Generation Procedure and Example
- C. Formatting User Discs and Cartridges

### V. INTERNAL SYSTEM ORGANIZATION

- A. Disc File(s) Format
- B. Disc Dump of Generation Example
- D. System Base Page Communication Area Description

### VI. INTERNAL SYSTEM OPERATION

- A. Iomec Command Sequences
- B. Supplied DOS-M Bootstrap
- C. Disc Resident Bootstrap
- D. DOS-M System HALTS
- E. I/O Request Processing Example

### VII. DOS-M FLOWCHARTS

## 1. INTRODUCTION

### A. Minimum Hardware Requirements

1. Why DOSM?
2. DOS/DOSM minimum hardware [SLIDE 1]
3. Cost Comparison
4. Comparison to competitor - (IBM 1130) [SLIDE 1A]
5. DOSM Hardware options [SLIDE 1B] 12K with C.I. Corp.

### B. Advantages and Disadvantages [SLIDE 2]

#### I. ADVANTAGES (Special Points)

- a. Another cabinet and power supply needed when number of drives is expanded to 3 or 4.
- b. User could operate in his own instrument driver environment if no MP (Memory Protect).
- c. If User does not want EAU or clock, he is not forced to have it. Gains one more I/O channel without TBG option.
- d. Easy creation of System Backup (which will not be hardware protected) on Cartridge.
- e. Multiple System Discs with different configurations on separate drives.
- f. Exchange of user files between systems even though systems may be configured differently.
- g. Hardware protection scheme using DISC PROTECT OVERRIDE SWITCH and PCI (Protected Cylinder Indicator).
- h. Operation with USER DISCS Labeled to avoid using incorrect cartridge.
- i. Minimum core resident system reduced from DOS (DVR05 and DVR31 changes).

## 2. DISADVANTAGES (Special Points)

- a. Three bootstraps (cover details later).  
Method of System Start-up.
- b. No plans at present for moving head RTE or TSB. Some talk for ISS system (ISS disc cost about \$ 35,000 and has about 12 million word storage).
- c. Better to lose sale rather than deliver an 8K system that will "strangle" customer's programs (during loading or execution). Just because JOBPR will fit is not any indication that system will be adequate.

## C. IOMEC Overall Description

### I. CONTROLLER [SLIDE 3]

- a. Interface between computer and drive(s).
- b. Interface cards on computer side.
  - (1) Identical electronically except for positions of jumper wires.
  - (2) Signals inverted from positive-true/ground-false logic to ground-true/positive-false to be compatible with controller.
  - (3) DATA CHANNEL - Transfers data, status, and addressing information. DMA controls data; program controls status and addressing.
  - (4) COMMAND CHANNEL - Transfers commands, drive selection, and drive attention bits (LSB). All under program control.

2. DRIVE (Maximum of 4 per controller)
  - a. Fixed Disc and Removable Cartridge.
  - b. Movable heads and their numbers.
  - c. Power ON/OFF.
  - d. Cartridge LOCK/UNLOCK and light.
  - e. READY light.
  - f. Physical description of PACK.
    - (1) Opening at rear for heads entry.
    - (2) Opening underneath for forced air.
    - (3) Rim markers for TRACK/SECTOR origins.
3. DISC
  - a. Physical storage capacity breakdowns [SLIDE 4].
  - b. Physical layout [SLIDE 5].
  - c. Addressing [SLIDE 6].
    - (1) Physical (Drive, Cylinder, Head, Sector).
    - (2) Logical (Subchannel, Track, Sector).  
Software inverts (complements) lower order bit of subchannel # for higher order bit of head #.
  - d. Sector Address and Data Fields [SLIDE 7].
    - (1) INITIALIZE WRITE COMMAND is used for controller to construct and write the Sector Address Field with PCI=DCI=Ø (only disc formatting section of generator does this).
    - (2) WRITE PROTECTED COMMAND is used for controller to set PCI=1 in Sector address field (only generator does this).
    - (3) WRITE DEFECTIVE COMMAND is used for controller to set DCI=1 in Sector Address Field Only \$EX2Ø makes this call (DVR31 will accept under system operation).

(Continued)

~~NOT  
TRUE~~

- Error
- (4) Controller does not send back ~~any~~ status bit =  
~~on PCI or DCI if DISC PROTECT OVERRIDE~~  
~~SWITCH is "ON" (i.e. UP). This switch~~  
~~must be "ON" when executing (1), (2), or~~  
~~(3) on the preceding page!~~

#### D. DOSM Software and Relationship to Discs

1. Components [SLIDES 8A, 8B, 8C, 8D].
2. Disc to Memory Transfers [SLIDE 9].
3. DOSM General Core Layout [SLIDE 10A].
  - a. EQT Format [SLIDE 10B].
  - b. DRT Format [SLIDE 10C].
  - c. INT Table Format [SLIDE 10D]
4. Discs Layout
  - a. Concept of "SYSTEM" and "USER" Discs.
  - b. Oversimplified "SYSTEM" disc layout [SLIDE 11A].
  - c. More detailed "SYSTEM" disc layout [SLIDE 11B].
  - d. User disc layout [SLIDE 11C].
  - e. Label Sectors
    - (1) System Disc [SLIDE 12A].
    - (2) User Disc [SLIDE 12B].

#### E. System Startup Operation Example with block diagrams.

1. Execution of Configured Supplied Bootstrap [SLIDE 13A.1]:
  - a. Loads Disc Resident Bootstrap into high core, relocating it as necessary.
  - b. Transfers control to start of DRB just loaded.

E. SYSTEM Startup Operation Example with block diagrams.

2. Execution of Disc Resident Bootstrap [SLIDE 13A.2].

- a. Loads Core Resident System from System Disc in four parts.
- b. Configures continuator section of DVRØ5 and DVR3I.
- c. Transfers control to \$STRT in DISC MONITOR by JMP 3,I.

3. Disc Monitor First Entry [SLIDE 13A.3].

- a. \$STRT calls \$MDLD to transfer control to \$EX12 (System Startup).
- b. \$MDLD makes decision whether to load \$EX12 from Disc (if Disc Resident) then transfers control to \$EX12.

4. Execution of \$EX12 [SLIDE 13A.4].

- a. Sets (MP FENCE ADDRESS = UMFWA) with OTA 5.
- b. Reads System Buffer Sector to Base Page.
- c. Builds new System Buffer Sector and writes back on disc if not valid one (i.e., does not end with "SB").
- d. Calls \$SY10 to output "INPUT :DATE,XXXXXX,H,M" on System TTY.
- e. Sets input request code = "DA" and transfers control to \$TYPE for System K.B. Input.

5. Execution of \$TYPE for System K.B. Input [SLIDE 13A.5].
  - a. Calls \$SY10 to output (CR) (LF) @.
  - b. Calls \$SY10 to input 72 characters into JOB INPUT BUFFER.
  - c. \$SY10 calls \$TEST routine to force :DA input.
  - d. If :DA not inputted, calls \$SY10 to output "IGNORED" and goes to b. above.
  - e. If :DA inputted, transfers control to \$JLOD to load and branch to JOBPR.
6. Execution of \$JLOD to load JOBPR [SLIDE 13A.6].
  - a. \$JLOD calls DISCX twice to read in JOBPR (MAIN and Base Page) and then transfers control to JOBPR main entry point.
  - b. Each call to DISCX results in call to \$DISC which in turn calls \$SY10 to read DISC.
7. Execution of JOBPR to Update System Buffer Sector [SLIDE 13A.7].
  - a. Date routine in JOBPR reads System Buffer Sector from Disc to its own internal buffer by JSB EXEC call.
  - b. Updates DATE, LU TABLE entries, and Default User Label in System Buffer Sector.
  - c. Writes updated System Buffer Sector back on Disc by JSB EXEC call.
8. Execution of JOBPR to report Default USER DISC SUBCHANNEL # and LABEL [SLIDE 13A.8].
  - a. Date Routine continues by executing EXEC call to request CURRENT USER DISC SUBCHANNEL # and LABEL.
  - b. \$EXIT is used just as if :UD directive had been entered.

- c. Point out that if GENERATION CODE or PROPRIETARY CODE do not agree with System Disc, ERROR MESSAGE may be printed here.
  - d. At end JOBPR then calls \$TYPE for System TTY to output CR LF and @ and to input from Keyboard.
9. Summary of 1-8 above.
- a. JOBPR is a USER PROGRAM and must do all I/O by JSB EXEC.
  - b. At end of 8 above, the JOBPR remains in memory until :PROG,X entered or :OFF given in response to \* (here \$CLER loads JOBPR fresh).
  - c. No part of Core Resident System ever does any I/O by JSB EXEC; always does by \$SYIO.
  - d. MP and Interrupt System "ON" when in USER AREA. MP and Interrupt System "OFF" when in System Area.
  - f. DOSM I/O REQUEST PROCESSING [LARGE CHART].

DOS / DOSM MINIMUM HARDWARE COST COMPARISON

**PROVIDES MINIMUM HARDWARE CONFIGURATION CONSISTING OF:**

1. 2116B Computer with 8192 Word Memory
2. Direct Memory Access, Accessory No. 12578A
3. Extended Arithmetic Unit, Accessory No 12579A
4. Memory Parity Check, Accessory No. 12591A
5. Time Base Generator, Accessory Kit No. 12539A
6. Memory Protect, Accessory Kit No. 12581A
7. Teleprinter Input/Output consisting of:  
    HP 2752A Teleprinter (Modified Teletype ASR-33) with  
    HP 12531B Teleprinter Input/Output Interface Kit
8. Teleprinter Input/Output, consisting of:  
    HP 2754B Heavy-Duty Teleprinter (modified Teletype ASR-35) with  
    HP 12531B Teleprinter Input/Output Interface Kit
9. Disc Memory consisting of:  
    HP 2770A Disc Memory (368,640 words non-expandable)  
    HP 2772A Disc Memory Power Supply  
    HP 12606A Disc Memory Interface Kit
10. 2886A Single-Bay Cabinet

TOTAL COST

		PRICE	
		115V 60Hz	230V 50Hz
\$20,000		\$20,000	
3,000		3,000	
3,000		3,000	
1,000		1,000	
1,000		1,000	
2,000		2,000	
1,250		1,450	
750		750	
3,850		4,250	
750		750	
17,000		17,200	
2,500		2,700	
4,000		4,000	
900		900	
\$61,000		\$62,000	

(Four-Year Lease @ \$1,690/month)

**PROVIDES MINIMUM HARDWARE CONFIGURATION CONSISTING OF:**

1. 2114B Computer with 8K memory
2. Direct Memory Access, Accessory Kit No. 12607A
3. Memory Parity Check with Interrupt, Accessory Kit No. 12598A
4. System Console, consisting of:  
    HP 2752A Teleprinter (Modified Teletype ASR-33) with  
    HP 12531B Teleprinter Input/Output Interface Kit
5. System Input, consisting of:  
    HP 2748A Punched Tape Reader with  
    HP 12597A-002 Punched Tape Interface Kit
6. Cartridge Disc Memory System, consisting of:  
    HP 2870A Disc Drive (includes HP 12536A Disc Cartridge)  
    HP 2871A Disc Controller  
    HP 2881A Power Supply  
    HP 2882A Cabinet  
    HP 12557A Disc Interface Kit

TOTAL COST

		PRICE	
		115V 60 Hz	230V 50 Hz
\$13,000		\$13,100	
1,500		1,500	
1,000		1,000	
1,250		1,450	
750		750	
1,500		1,600	
600		600	
13,500		13,650	
2,500		2,500	
\$35,600		\$36,150	

(Five-Year Lease @ \$765/Month)

HP DOS<sup>M</sup>/IBM 1130 COST COMPARISON

HP DOS-M	IBM 1130
MINIMUM SYSTEM (WITH PAPER TAPE)	PURCHASE
2114B (2.0 MICROSEC) OPTION 4 (8K MEMORY TOTAL)	\$ 8,500 4,500
12591A MEMORY PARITY CHECK	1,000
12067A DIRECT MEMORY ACCESS	1,500
2870A CARTRIDGE DISC DRIVE	8,700
2871A DISC CONTROLLER	2,800
12557A DISC INTERFACE	2,500
2882A DISC CABINET	600
2881A DISC POWER SUPPLY	1,400
2752A TELEPRINTER ASR-33	1,250
12531B TELEPRINTER INTERFACE	750
2784A PAPER TAPE READER (500 CHARACTERS/SEC)	1,500
12597A P.T. READER INTERFACE	600
\$ 35,600	<span style="border: 1px solid black; border-radius: 50%; padding: 2px;">\$ 38,130</span>
TYPICAL SYSTEM	PURCHASE
2114B (2.0 MICROSEC) OPTION 4 (8K MEMORY TOTAL)	\$ 8,500 4,500
12591 MEMORY PARITY CHECK	1,000
2870A CARTRIDGE DISC DRIVE	8,700
2871A DISC CONTROLLER	2,800
12557A DISC INTERFACE	2,500
2882A DISC CABINET	600
2881A DISC POWER SUPPLY	1,400
2752A TELEPRINTER ASR-33	1,250
12531B TELEPRINTER INTERFACE	750
2784A PAPER TAPE READER (500 CHAR/SEC)	1,500
12597A P.T. READER INTERFACE	600
2753A PAPER TAPE PUNCH (120 CHAR/SEC)	3,300
12597A P.T. PUNCH INTERFACE	600
2767A LINE PRINTER (80 COL. 356-1110 LMP)	10,000
12653A LINE PRINTER INTERFACE	2,500
\$ 52,000	<span style="border: 1px solid black; border-radius: 50%; padding: 2px;">\$ 49,110</span>
MINIMUM SYSTEM (WITH PAPER TAPE)	PURCHASE
1131-2A (3.6 MICROSEC) TTY/PRINTER CONSOLE 4K CORE, 500K DISC	\$ 34,610
1134 PAPER TAPE READER (60 CHARACTERS/SEC)	1,270
3623 P.T. READER ATTACHMENT	450
1055 PAPER TAPE PUNCH (14.8 CHARACTER/SEC)	900
7923 P.T. PUNCH ATTACHMENT	900
\$ 34,610	<span style="border: 1px solid black; border-radius: 50%; padding: 2px;">\$ 12,750</span>
TYPICAL SYSTEM	PURCHASE
1131-3B (2.2 MICROSEC) TTY/PRINTER CONSOLE 8K CORE, 500K DISC	\$ 58,050
1134 PAPER TAPE READER (60 CHAR/SEC)	1,270
3623 P.T. READER ATTACHMENT	450
1055 PAPER TAPE PUNCH (14.8 CHAR/SEC)	900
7923 P.T. PUNCH ATTACHMENT	900
1132 LINE PRINTER 82 LPM ALPHAMERIC 110 LPM NUMERIC	11,350
2310 DISC DRIVE 500K WORDS	12,150
\$ 85,070	

# HP DOS-M / IBM 1130 COST COMPARISON

HP DOS-M		IBM 1130	
MINIMUM SYSTEM (with paper tape)	PURCHASE	MINIMUM SYSTEM (with paper tape)	PURCHASE
2114B (2.0 microsec) Option 4 (8K memory total)	\$8,500 4,500	1131-2A (3.6 microsec) TTY/Printer Console 4K core, 500K disc	\$34,610
12591A Memory Parity Check	1,000	1134 Paper Tape Reader (60 characters/sec)	1,270
12067A Direct Memory Access	1,500	3623 P.T. Reader Attachment	450
2870A Cartridge Disc Drive	8,700	1055 Paper Tape Punch (14.8 character/sec)	900
2871A Disc Controller	2,800	7923 P.T. Punch Attachment	900
12557A Disc Interface	2,500		
2882A Disc Cabinet	600		
2881A Disc Power Supply	1,400		
2752A Teleprinter ASR-33	1,250	(with card I/O)	\$38,130
12531B Teleprinter Interface	750	1131-2A as shown above	\$34,610
2748A Paper Tape Reader (500 characters /sec)	1,500	1442 Card Reader/Punch (160 columns/sec)	12,750
12597A P.T. Reader Interface	600	4419 Card Reader/Punch Attachment	1,525
	\$35,600	3630 1442 Interface	225
			\$49,110
TYPICAL SYSTEM		TYPICAL SYSTEM	
TYPICAL SYSTEM	PURCHASE	TYPICAL SYSTEM	PURCHASE
2114B (2.0 microsec) Option 4 (8K memory total)	\$8,500 4,500	1131-3B (2.2 microsec) TTY/Printer Console 8K core, 500K disc	\$58,050
12591A Memory Parity Check	1,000	1134 Paper Tape Reader (60 char/sec)	1,270
12067A Direct Memory Access	1,500	3623 P.T. Reader Attachment	450
2870A Cartridge Disc Drive	8,700	1055 Paper Tape Punch (14.8 char/sec)	900
2871A Disc Controller	2,800	7923 P.T. Punch Attachment	900
12557A Disc Interface	2,500		
2882A Disc Cabinet	600		
2881A Disc Power Supply	1,400		
2752A Teleprinter ASR-33	1,250	1132 Line Printer 82 LPM Alphabetic 110 LPM Numeric	11,350
12531B Teleprinter Interface	750	2310 Disc Drive 500K words	12,150
2748A Paper Tape Reader (500 char/sec)	1,500		
12597A P.T. Reader Interface	600		
2753A Paper Tape Punch (120 char/sec)	3,300		
12597A P.T. Punch Interface	600		
2767A Line Printer (80 col. 356-1110 lpm)	10,000		
12653A Line Printer Interface	2,500		
	\$52,000		\$85,070

[ SLIDE 4A ]

FROM WALL STREET JOURNAL OCT. 29, 1970

## IBM Enters the Mini-Computer Market As It Unveils 2 New Models, Its Cheapest

By a WALL STREET JOURNAL Staff Reporter

NEW YORK — International Business Machines Corp. introduced two small computers for office and industrial applications.

The two are the least expensive that the world's largest computer-maker has offered, and one of them, at least, puts IBM into competition for the first time with makers of what have come to be called mini-computers.

Digital Equipment Corp. of Maynard, Mass., has been the dominant manufacturer of mini-computers, which generally are priced under \$20,000 and as low as \$5,000. Such computers have been used largely for calculations by scientists and engineers, but they are being applied increasingly to industrial processes and some small-business uses. Other leading manufacturers include Honeywell Inc., Varian Associates Inc., Hewlett-Packard Co. and Data General Corp.

Trading in Digital Equipment's stock on the American Stock Exchange yesterday reacted sharply to IBM's announcement. Digital Equipment closed at \$61.875, down 37½ cents a share. During the day it traded as low as \$57.50. IBM, traded on the New York Stock Exchange, closed at \$296.50, up \$5.50 a share.

The new IBM model that can be considered a mini-computer is the System 7, designed specifically to monitor and control industrial and laboratory processes. It may be purchased for a minimum of \$16,060 or rented for \$852 a month and up. First deliveries to customers are scheduled for November 1971.

In Maynard, a Digital Equipment spokesman said the System 7 appeared to be priced too high to be a mini-computer by his company's standard. He added that Digital Equipment products had competed very well with IBM's previous process-control model and that "we think we will continue to do well."

The System 7, operating unattended, can measure, test, analyze or control processes in petroleum and chemical plants, electric-utility substations, steel mills and laboratories and in a variety of other industries. It can take as many as 250,000 readings a second from instruments, analyze them, and, if desired, forward the data to a larger central computer.

As do several mini-computers already on the market, the System 7 has a main memory made of integrated electronic circuits, rather than of the usual magnetic cores.

The System 7 isn't designed for business data processing or for direct use by an engineer or scientist, IBM said. However, F. G. Rodgers, president of IBM's Data Processing division, was asked if the System 7 would be available for purchase as a component by other assemblers of control systems, who currently represent a large share of the market for mini-computers. "We'll be delighted to sell this to anybody," Mr. Rodgers replied.

IBM's other new computer is the System 3 Model 6, an extension of the System 3 small-scale computer, since designated the Model 10, that was introduced in 1969. System 3 computers are aimed for the most part at businesses

that haven't previously used computers. IBM has said that more than 1,000 System 3 computers have been delivered this year.

Designed for business data processing, a typical Model 6 can be purchased for \$48,250 or rented for \$1,015 a month. First deliveries of it, in contrast to those of the System 7, are scheduled within 60 days. IBM demonstrated the first production units of the Model 6 in more than 40 cities yesterday.

The Model 6 can be used for accounting functions, including the processing of standard ledger cards, and also for engineering calculations in a "conversational" mode, IBM said. It stores data on magnetic disks and can communicate with other IBM computers.

The two new computers aren't part of the System 370 family of medium and large, general-purpose computers announced by IBM in June. Both small computers are being pro-

duced at a plant in Boca Raton, Fla. The System 3 Model 6 also is in production in Vimercate, Italy.

MODEL 6  
SYSTEM 3 (small business)  
(used discs)  
Typical \$48,250

SYSTEM 7  
mainly for  
scientific applications  
\$16,060

November 4, 1970

Copy



Operator's Console and Memory Cabinet



Model 6 Ledger Card Unit

Keyboard Oriented

See Page 4 on BAS

# System/3 Model 6 Includes Disk, Ledger Card, Basic Language

By Frank Piasta

CW Staff Writer

WHITE PLAINS, N.Y. — The newest version of the IBM System/3, the Model 6, is designed to appeal to a variety of users:

- The business-oriented user who has been doing his data processing on bookkeeping machines and desk calculators.
- The scientific-oriented problem solvers, such as engineers and scientists, who can use the system to perform computations that would not justify a larger machine.
- The large computer installation that needs programmable terminals that can tolerate the restricted I/O facilities of the Model 6.

Priced at about \$1,000/mo for a typical configuration, the small system will be available for first deliveries in less than 60 days, IBM said.

**Restricted Card-Handling**

One group that will not find its requirements met are the card-

oriented users. The restricted card handling capability of the new system will force these users to look to the original System/3, now called the Model 10, to fulfill their needs.

Card handling equipment is limited to the System/3 Data Recorder, which can read, punch and print 96-column cards at 22 card/min, on-line as an optional

feature.

IBM has joined GE, Burroughs Honeywell, and others in supplying a keyboard-oriented computer with disk capability.

The system can process ledger cards similar to those used in bookkeeping machine applications, using the serial printer as its principal output device.

The software packages supplied with the Model 6, RPG II and Basic compilers, are used in conjunction with the keyboard to achieve an interactive mode of operation, with the operator keying in the data. Fortran, IBM said, will not be available.

A typical System/3 Model 6 keyboard entry configuration would consist of a central processing unit with an 8K byte main memory, a 2.45 million character disk file and an 85-char/sec serial printer.

Core capacities can range from 8K to 16K bytes. Memory cycle time is 1.52  $\mu$ sec. Add time is 26  $\mu$ sec for two 5-digit numbers.

The system can be used as part of a network or as a stand-alone unit. The type and number of sensing points is determined by the configuration of input-output modules attached to the central processor, IBM said.

The system's all-monolithic memory can be expanded at the user's site, IBM said.

A "host" computer attachment allows System/7 to operate with an IBM 1130, 1800, System/370 or models 25 and up of the System/360 for additional I/O and computational capability.

(Continued on Page 4)

## IBM Adds Small Process Control Unit, System/7

WHITE PLAINS, N.Y. — System/7, a low-cost process control computer announced by IBM, provides sensor-based data processing related to either relay or solid-state multiplexer points. The company said the smallest configuration of the System/7 would rent for \$352/mo or sell for \$16,000.

The system can be used as part of a network or as a stand-alone unit. The type and number of sensing points is determined by the configuration of input-output modules attached to the central processor, IBM said.

The system's all-monolithic memory can be expanded at the user's site, IBM said.

A "host" computer attachment allows System/7 to operate with an IBM 1130, 1800, System/370 or models 25 and up of the System/360 for additional I/O and computational capability.

(Continued on Page 4)

**Model 6 Peripherals**

Printers available with System/3 Model 6 include three 13-in.-wide models (132-print positions) available for conventional printing and two 22-in.-wide models (220-print positions).

(Continued on Page 4)

## Hospital of Hospitals Reported Tied With Vendor Support

"Health Care Industry," was compiled by Harris, Kerr, Chervenak, and Co.

The survey is based on questionnaire and interview responses from 2,800 of the 7,137 members of the American Hospital Association in the 48 contiguous states.

The survey revealed many hospitals where costs were clearly out of proportion to results and suggested: "Too often the hospital seems to have wandered into data processing with insufficient expertise; without first defining its requirements fully and realistically, and without establishing its short- and long-range objectives."

Of the respondents, 503 had installed computers, 75 had computers on order, and 1,106

an integrated manner.

None of the computer manufacturers has provided such packages to cover all — or even most — of the major hospital reporting areas. All of them con-

(Continued on Page 4)

## Hearings to Probe Status

# Are Programmers Professionals?

By Edward J. Bride

CW Staff Writer

WASHINGTON, D.C. — Computer programmers who insist they should be considered "professionals" will have their day in court soon, when the Labor Department opens two-pronged hearings to define the term "professional."

An offspring of achieving such official status

industry," and have been trying to achieve that status "through their various societies like DPMA and ACM."

"I think we would want to upgrade them in that area, too," Dreyer commented.

"Problem Is Inconsistency"

Adapso will appear at the December hearings.

# 3/6 Appeals to Different Users

(Continued from Page 1)  
tions) that accommodate ledger cards.

Model 6 printers use a serial wire matrix printhead with a speed of 85 char/sec. One 13-in. and one 22-in. printer offer bidirectional capability. As one line is completed with the printhead moving from left to right, the next line is printed on the return, right to left.

The 22-in. printers equipped with ledger card device allow a

single card to be positioned, posted and stacked in about four seconds.

A Data Recorder can be attached to the Model 6 for batch input of programs and data using the 96-column punched card. It can be used both on-line and off-line. During the on-line use, the data recorder can operate at 22 card/min - reading, punching, or punching and printing.

Ledger cards can be handled in sizes up to 11 in. by 14 in., and

can be used on both sides. The ledger card stacker can accommodate up to 100 cards.

An additional output device, an optional IBM 2265 CRT display unit, can be used to provide interaction with the system and access to stored information.

To provide additional functional flexibility, particularly for small banks, an optional Serial Input/Output Channel (Sioc) is offered for System/3 Model 6. The Sioc allows attachment of input-output units such as the IBM 1255 magnetic character reader.

System/3 Model 6 can be used as a terminal/processor. A Binary Synchronous Communications Adapter (BSCA) is available that allows Model 6 users to exchange data over switched, leased or private lines with remotely located System/3s, and with 360 and 370 models.

A typical System/3 Model 6 will rent for \$1,015/mo, or may be purchased for \$48,250.

## Basic as Well as RPG II Offered With Model 6

By Don Leavitt  
CW Staff Writer

WHITE PLAINS, N.Y. - The Model 6 user has a choice of programming languages. RPG II is available for commercial data processing and Basic can be used for problem-solving.

The user is not faced with an "either/or" choice: both language processors can reside on the same disk cartridge.

RPG II, the only language that

was available on the earlier S/3, Model 10, has been modified to make use of the hardware capabilities of the Model 6.

The Basic compiler includes software paging techniques which allow the Model 6 to operate as if it had 64K bytes in its main memory.

According to IBM, this paging allows programs containing up to 990 statements to run on a Model 6 with only 8K bytes of main memory.

### Model 10 Batch-Oriented

The S/3 Basic, accessible to only one user at a time, is a version of Call/360 Basic. Basic for the Model 6 is not adaptable to the Model 10, since that is essentially a batch-oriented machine, IBM noted.

RPG II handles the new I/O features, including ledger card processing and the display station output.

The Basic compiler will be licensed at \$110/mo, available with first customer shipments in December. The RPG II compiler for the Model 6 will be licensed at \$35/mo, and will be available

(Continued from Page 1)

IBM System/7 includes a 16-bit processor module, I/O modules, and an operator station. The processor module and from one to 11 input-output modules are housed in enclosures that also provide internal power and signal distribution.

The processor module features 2,048 to 16,384 words of monolithic storage in 2,048-word increments.

Although the System/7 has a 400 nsec cycle time and its input modules can scan 128 relay or solid-state multiplexer points, it is limited to four priority interrupt levels.

By contrast, IBM's 1800 pro-

Model Features	GE 58	H 115	Singer System 10	Burroughs L 4000	IBM Sys Mod. 10	IBM Sys./3 Model 6
Main Mem. (K Words)	5 to 10 (bytes)	16 to 32 (6-bit)	10 to 110 (bytes)	1,024 (8-byte) (fixed disk)	8 to 32 (bytes)	8 to 16 (bytes)
Cycle Time (usec)	1.2	2.75	3.3	5 msec (av. access time)	1.52	1.52
Auxiliary Random Access Storage (millions)	11.5 (bytes)	36.8 (char)	10 to 100 (char) (bytes)	No	2.5 to 9.8 (bytes)	2 to 9.8 (bytes)
Ledger Card Handling	No	No	Yes	Yes	No	Yes
Languages	Gesal, Gecol	Easy- coder, Cobol, Fortran	Assem- bler, Fortran, Simulator	Cobol (sub-set), Assem- bler	RPG II	RPG II Basic
Rental (\$K)	0.9 to 2.2	1.9 to 6.8	1.4 to 6.5	0.4 to 0.6	0.9 to 4.0	0.9 to 2.7
First Delivery	10/70	6/70	9/70	7/70	1/70	12/70

Chart compares new System/3 Model 6 with other small business computers.

## Process Control Unit Added to IBM Line

**COMPUTERWORLD**  
THE NEWSWEEKLY FOR THE COMPUTER COMMUNITY  
TM Reg. U.S. Pat. Off.

ROBERT M. PATTERSON, executive editor; V.J. FARMER, news editor; RONALD A. FRANK, technical news editor; EDWARD BRIDE, LESLIE FLANAGAN, JOSEPH HANLON, DONALD LEAVITT, MICHAEL MERRITT, ANNE NOLAN, FRANK PIASTA, staff writers; CHRISTINE FREDERICKSON, librarian; MARVIN ARONSON, MARY UPTON, copy editors; E. DRAKE LUNDELL JR., computer industry editor.

ALAN DRATTELL, Washington bureau; PHYLLIS HUGGINS, Los Angeles bureau; THOMAS J. MORTON, Chicago bureau; J.H. BONNETT, European bureau.

NEAL WILDER, national sales man-

of interrupt but operates depending on the model, at speeds of only 2 usec or 4 usec.

There are two types of input-output modules available with System/7, the IBM 5014 analog input module and the 5012 multifunction module. In each, the external sensor wiring connects by plug-in termination cards.

The operator station consists of a typewriter-like keyboard and request key, printer, paper tape reader, and paper tape punch. Operation is under program control. Switches permit the system to be used as a source program preparation device, the company said.

not have access to a host computer is accomplished through the IBM System/7 Assembler.

The IBM 2790 data communication system devices supported by System/7 include the 2791 and 2793 area stations, 2795 and 2796 data entry units, 1053 printers and 1035 badge readers.

Monthly rental is \$352 for the smallest IBM System/7, including the processor, 2,048 words of monolithic memory and one I/O module. The purchase price is \$16,060. Additional memory increments of 2,048 words rent for \$105.

The required IBM 5028 operator station is available, pur-

chase only at \$2,240.


## DOSM HARDWARE OPTIONS

1. ADDITIONAL MEMORY  
16,384 OR 32,768 WORDS ON 2116B
2. ADDITIONAL I/O CHANNELS  
EXTENDERS ARE AVAILABLE FOR 2114B OR 2116B
3. TIME BASE GENERATOR (TBG)
4. EXTENDED ARITHMETIC UNIT (EAU)  
AVAILABLE ONLY ON 2116B
5. MEMORY PROTECT (MP)  
AVAILABLE ONLY ON 2116B
6. PHOTOREADER
7. PAPER TAPE PUNCH
8. LINE PRINTER (2778A CDC OR 80 COLUMN D.P.)
9. MARK SENSE CARD READER
10. MAGNETIC TAPE (3030A OR 7970A)
11. CALCOMP PLOTTER
12. UP TO THREE ADDITIONAL DRIVES

## DOSM ADVANTAGES AND DISADVANTAGES WITH RESPECT TO DOS

ADVANTAGES	DISADVANTAGES
<ol style="list-style-type: none"><li>1. LOWER INITIAL SYSTEM COST.</li><li>2. LOWER DISC EXPANDABLE COST.</li><li>3. FLEXIBILITY IN OPTIONS (EAU, TBG, MP) SELECTION.</li><li>4. USE OF 2114B OR 2116B.</li><li>5. FLEXIBILITY IN DISC STORAGE MEDIUM WITH REMOVEABLE CARTRIDGE.</li><li>6. DISC CONTENT PROTECTION.</li><li>7. DISC LABELING CAPABILITY.</li><li>8. LOWER CORE RESIDENT SYSTEM.</li><li>9. INTERDISC FILE(S) TRANSFER.</li></ol>	<ol style="list-style-type: none"><li>1. SLOWER DISC AVERAGE ACCESS TIME (ABOUT 100 MILLISECONDS).</li><li>2. CUMBERSOME AND SOMEWHAT CONFUSING SYSTEM BOOTSTRAP.</li><li>3. NO OTHER HP DISC BASED SYSTEM (RTE, TSB).</li><li>4. OVERSELLING 8K FEATURE.</li></ol>

## COMPUTER/DISC CONTROLLER/DISC DRIVES LAYOUT

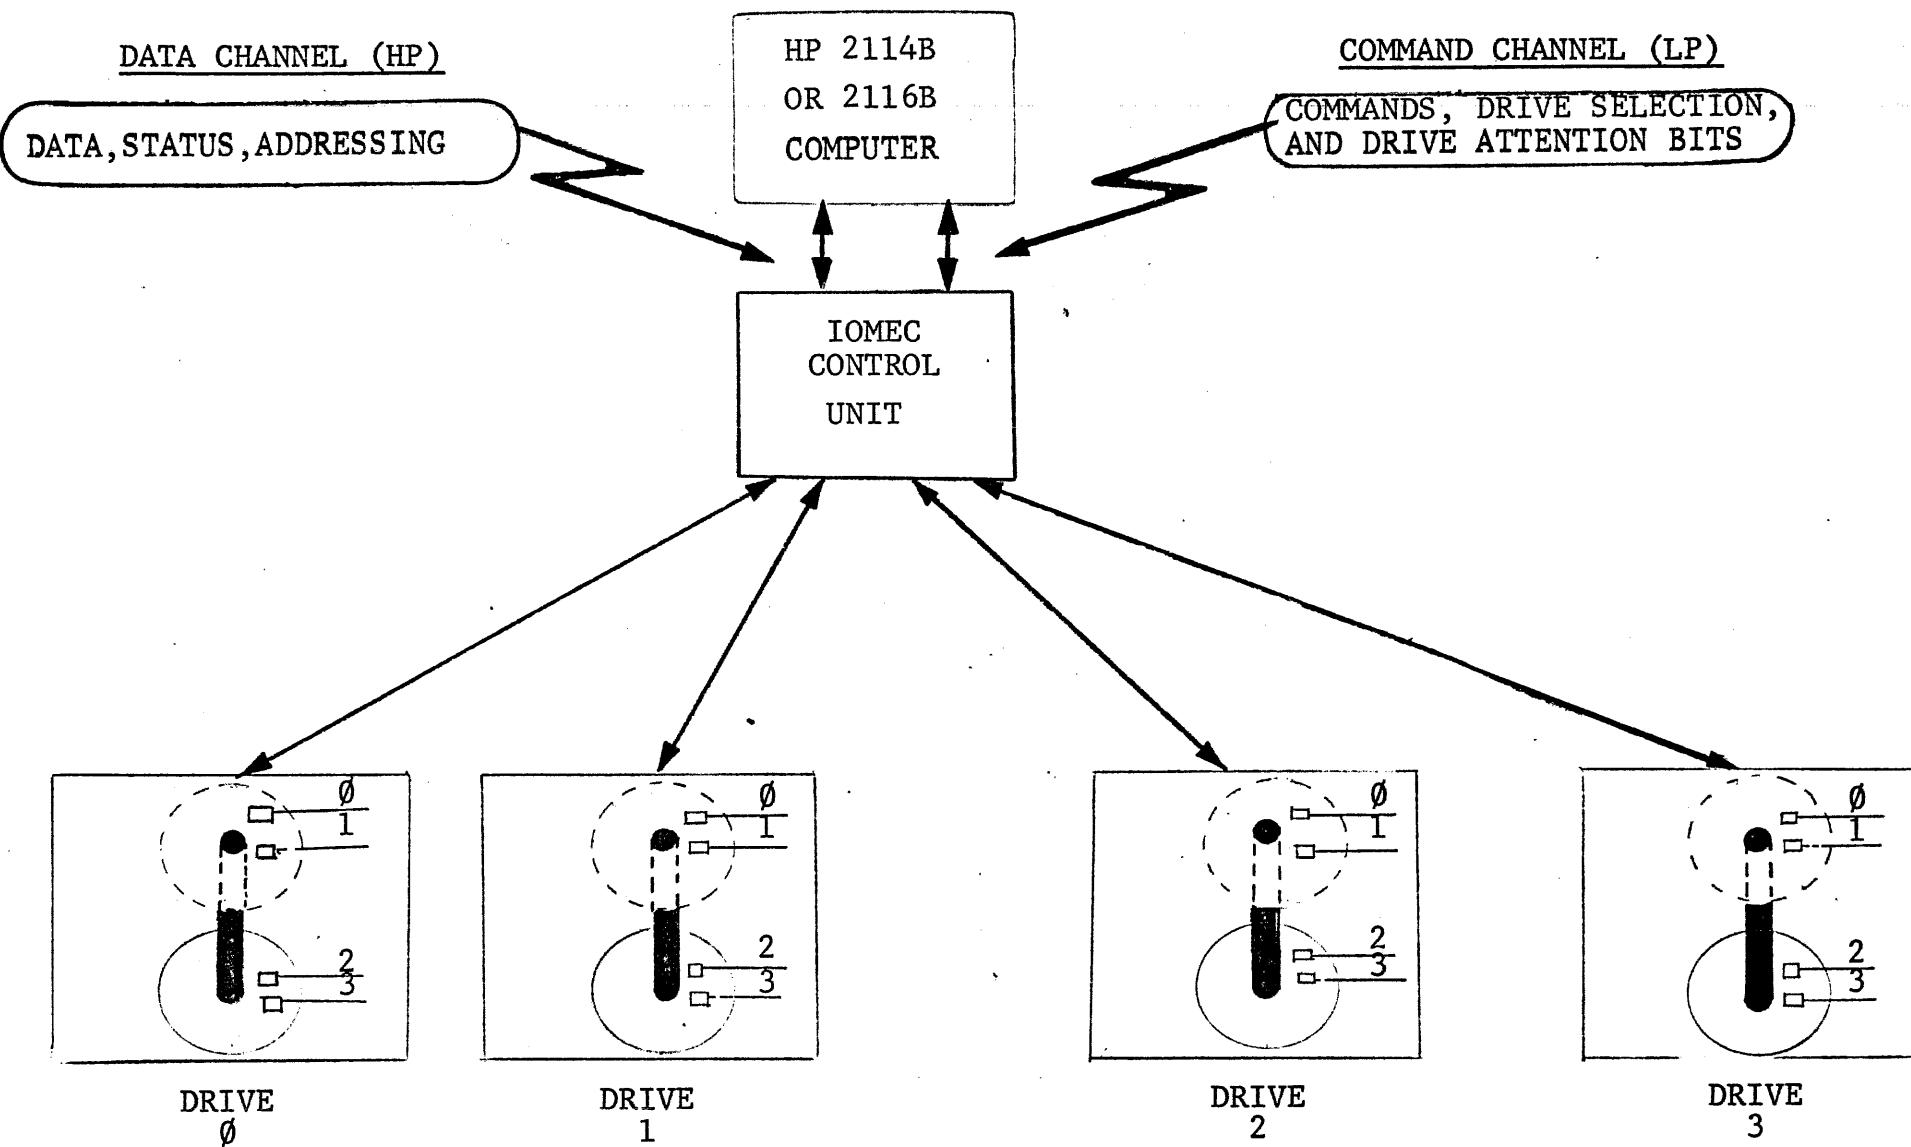

PHYSICAL ALLOCATION FOR EACH DRIVE

203 CYLINDERS  
4 TRACKS PER CYLINDER  
12 SECTORS PER TRACK  
128 WORDS PER SECTOR


∴ TOTAL WORD CAPACITY PER DRIVE IS  
 $203 \times 4 \times 12 \times 128 = 1,247,232$  WORDS

PHYSICAL ALLOCATION FOR EACH DISC

203 CYLINDERS  
2 TRACKS PER CYLINDER  
12 SECTORS PER TRACK  
128 WORDS PER SECTOR


∴ TOTAL WORD CAPACITY PER DISC IS  
 $203 \times 2 \times 12 \times 128 = 623,616$  WORDS

TWO PHYSICAL TRACKS ON CARTRIDGE DISC

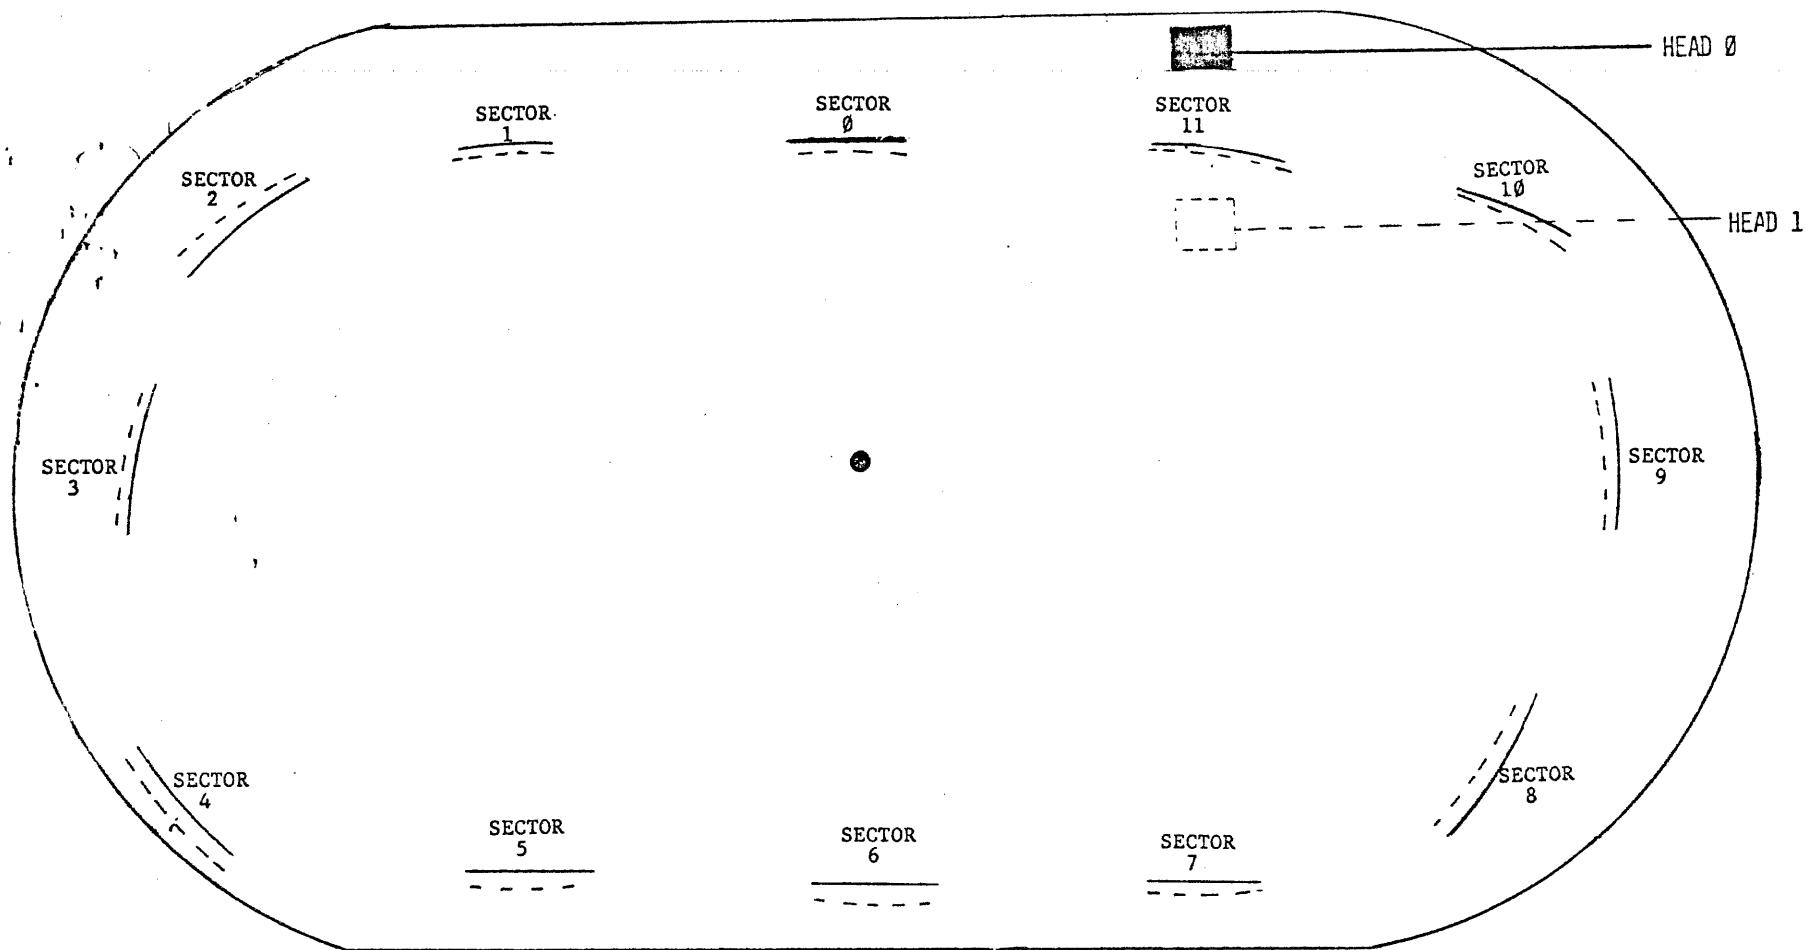


"TOP" SURFACE IS ONE PHYSICAL TRACK (12 SECTORS) FOR THIS POSITION OF HEAD 0  
"BOTTOM" SURFACE IS ONE PHYSICAL TRACK (12 SECTORS) FOR THIS POSITION OF HEAD 1  
THERE ARE 202 OTHER POSITIONS (CYLINDERS) THESE HEADS MAY BE MOVED TO!

## DISC ADDRESSING

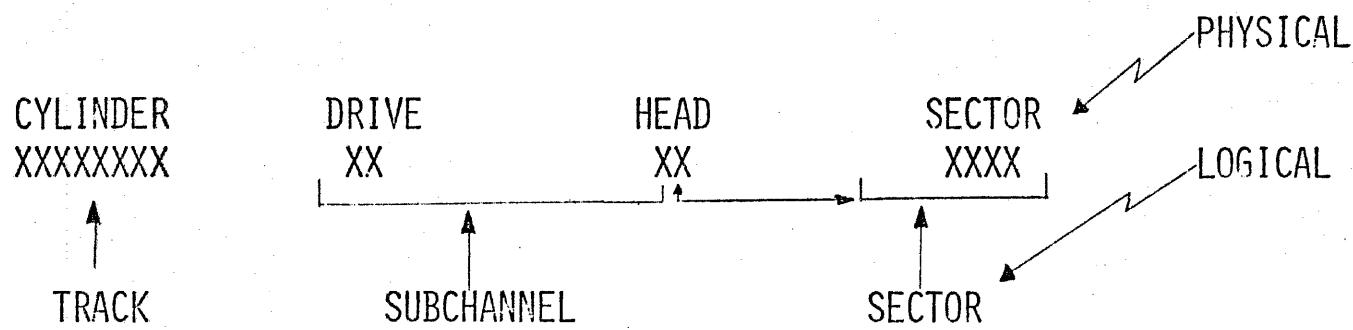

SUBCHANNEL	DRIVE	HEADS	ADDRESSED DISC
000	00	10 11	FIXED DISC DRIVE 0 HEADS 2 & 3
001		00 01	CARTRIDGE DISC DRIVE 0 HEADS 0 & 1
010	01	10 11	FIXED DISC DRIVE 1 HEADS 2 & 3
011		00 01	CARTRIDGE DISC DRIVE 1 HEADS 0 & 1
100	10	10 11	FIXED DISC DRIVE 2 HEADS 2 & 3
101		00 01	CARTRIDGE DISC DRIVE 2 HEADS 0 & 1
110	11	10 11	FIXED DISC DRIVE 3 HEADS 2 & 3
111		00 01	CARTRIDGE DISC DRIVE 3 HEADS 0 & 1

## CONTENTS OF EACH SECTOR

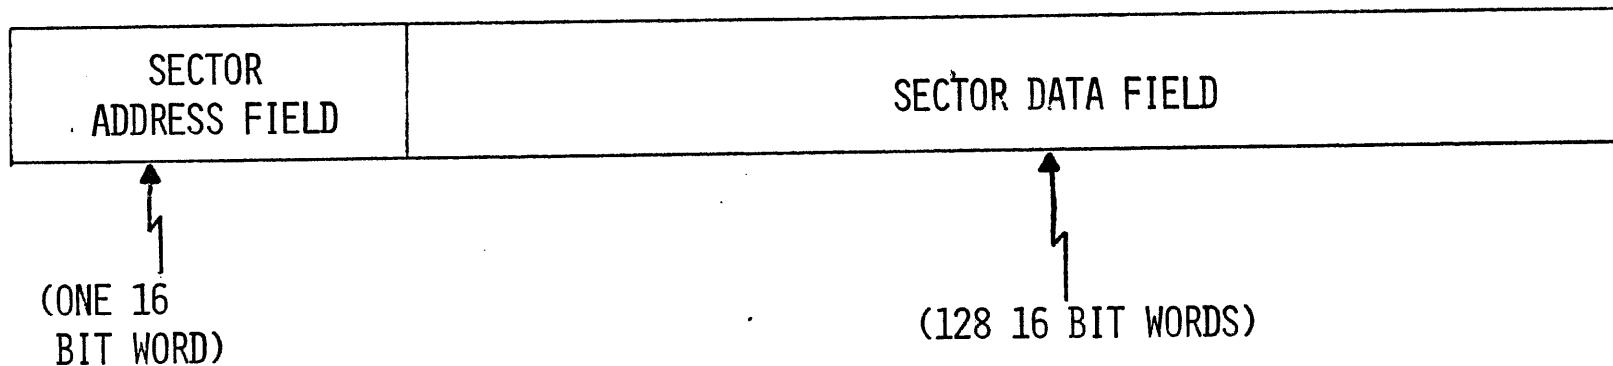

1. SECTOR ADDRESS FIELD CONTAINS:
  - 8 BITS FOR CYLINDER #
  - 2 BITS FOR HEAD #
  - 4 BITS FOR ITS SECTOR #
  - 1 BIT USED FOR DCI (DEFECTIVE CYLINDER INDICATOR)
  - 1 BIT USED FOR PCI (PROTECTED CYLINDER INDICATOR)
2. SECTOR DATA FIELD CONTAINS DATA TRANSFERRED TO AND FROM COMPUTER

NOTE: BOTH FIELDS ARE CYCLIC CHECKED BY CONTROLLER

## DOSM SOFTWARE COMPONENTS (PART 1)

<u>PROGRAM</u>	<u>NAME(S)</u>	<u>GENERAL FUNCTION(S)</u>
System Generator <sup>(*)</sup>	DSGEN	DOSM System Generation User Disc and Cartridge Formatting
System Bootstrap <sup>(*)</sup>	BOOTSTRAP	Preparation of configured System bootstrap
Disc Monitor	DISCM	Interrupt Processing (\$CIC) Executive Processor (EXEC) I/O Processor (\$IORQ)
Executive Modules	\$EX01 \$EX02 \$EX03 \$EX04 \$EX05 → \$EX06 \$EX07 \$EX08 \$EX09 \$EX10 → \$EX11 \$EX12 \$EX13 \$EX14 \$EX15 \$EX16 \$EX17 → \$EX18 \$EX19 \$EX20	Disc Work Track Status Disc Work Track Limits Program Completion Program Suspension Program Segment Load User File Name Search Current Time Processor Real-Time Disc Allocation Execution Time :EQ Processor Load and Execute Program System File Name Search → System Startup Error Message Processor Execution Time :UP, :DN, :LU Processor Abort and Post Mortem Dump :GO Parameter Processor :UD Processor I/O Initiation Processor :IN Processor → Disc Parity Error Processor
Executive Module Subroutines	\$LBL \$SRCH \$ADDR ASCII DUMRX	Service Routines for Label Checking Search System or User Directory Buffer Address Validity Check Convert Binary to ASCII RTE simulation routines
Special DOSM Drivers	DVR05 DVR31	System Teleprinter Driver Moving Head Disc Driver

<sup>(\*)</sup> This is an ABSOLUTE program executed in a separate process from the DOSM system

## DOSM SOFTWARE COMPONENTS (PART 2)

<u>PROGRAM</u>	<u>NAME(S)</u>	<u>GENERAL FUNCTION(S)</u>
Job Processor	JOBPR	Directive Processing File Management
Relocating Loader	LOADR	Relocates relocatable binary code created by Assembler or Compilers.
Assembler	ASMB ASMBD ASMB1 ASMB2 ASMB3 ASMB4 ASMB5	Translates Assembly language source code into binary. EAU or NON-EAU options included.  (MAIN SECTION) (6 SEGMENTS)
HP Basic FORTRAN Compiler	FTN FTNØ1 FTNØ2 FTNØ3 FTNØ4	Translates HP Basic FORTRAN source code into NON-EAU relocatable binary.  (MAIN SECTION) (4 SEGMENTS)
ALGOL Compiler <sup>①</sup>	ALGOL ALGL1	Translates HP ALGOL source code into Non-EAU relocatable binary.  (MAIN SECTION) (1 SEGMENT)
FORTRAN IV Compiler (4K user)	FTN4 ⋮	Translates ASA FORTRAN IV source code into Non-EAU relocatable binary. Consists of one MAIN section and 18 SEGMENTS.
FORTRAN IV Compiler (10K user)	FTN4 ⋮	Translates ASA FORTRAN IV source code into NON-EAU relocatable binary. Consists of one MAIN section and 2 SEGMENTS.
CROSS REFERENCE TABLE GENERATOR	XREF	Generates Cross Reference Table for Assembly Language Source Code.

① Requires minimum 16K environment

DOSM SOFTWARE COMPONENTS (PART 3)

DOS AND DOSM DRIVERS

EQUIPMENT TYPE CODE (DVR_ )	DEVICE	DOS ONLY	DOSM ONLY	BOTH	DMA
00	Teleprinter			X	
01	Photoreader			X	
02	Punch			X	
05	Teleprinter		X		
10	Plotter			X	
12	2778A CDC Line Printer			X	
15	Mark Sense Card Reader			X	X
<del>16</del> 12	Data Products Line Printer <sup>2767A</sup> (80 column)			X	
22	3030 Mag. Tape			X	X
23	7970 Mag. Tape			X	X
30	Fixed Head Disc	X			X
31	Moving Head Disc (IOMEC)		X		X
<del>32</del> 31	Moving Head Disc (ISS)		X		X

Equipment Type Code Numbering Convention

00 - 07 Paper Tape Devices  
 10 - 17 Unit Record Devices  
 20 - 37 Mass Storage Devices

Odd # for INPUT  
 Even # for OUTPUT

## DOSM SOFTWARE COMPONENTS (PART 4)

\*\*\*\*\*  
\* LIBRARIES \*  
\*\*\*\*\*


<u>NAME</u>	<u>RELOCATABLE LIBRARY TYPE</u>
F2N.V	NON-EAU RTE/DOS/DOSM (no Formatter)
F2E.V	EAU RTE/DOS/DOSM (no Formatter)
F4D.V.	RTE/DOS/DOSM FORTRAN IV with FORTRAN IV Formatter (Double Precision)
_____	RTE/DOS/DOSM HP FORTRAN Formatter (no Double Precision)
_____	RTE/DOS/DOSM Plotter

where V = the revision letter (A, B, C ....)

NOTES :


1. System must include F2N.V or F2E.V even if FORTRAN IV library (F4D.V) is to be included. This is because the FORTRAN IV library references routines whose entry points are in F2N.V and F2E.V libraries.
2. RTE/DOS/DOSM HP FORTRAN Formatter is separate from F2N.V and F2E.V due to FORTRAN IV library (F4D.V) containing a formatter.

## DOSM DISC TO MEMORY TRANSFERS (GENERAL)

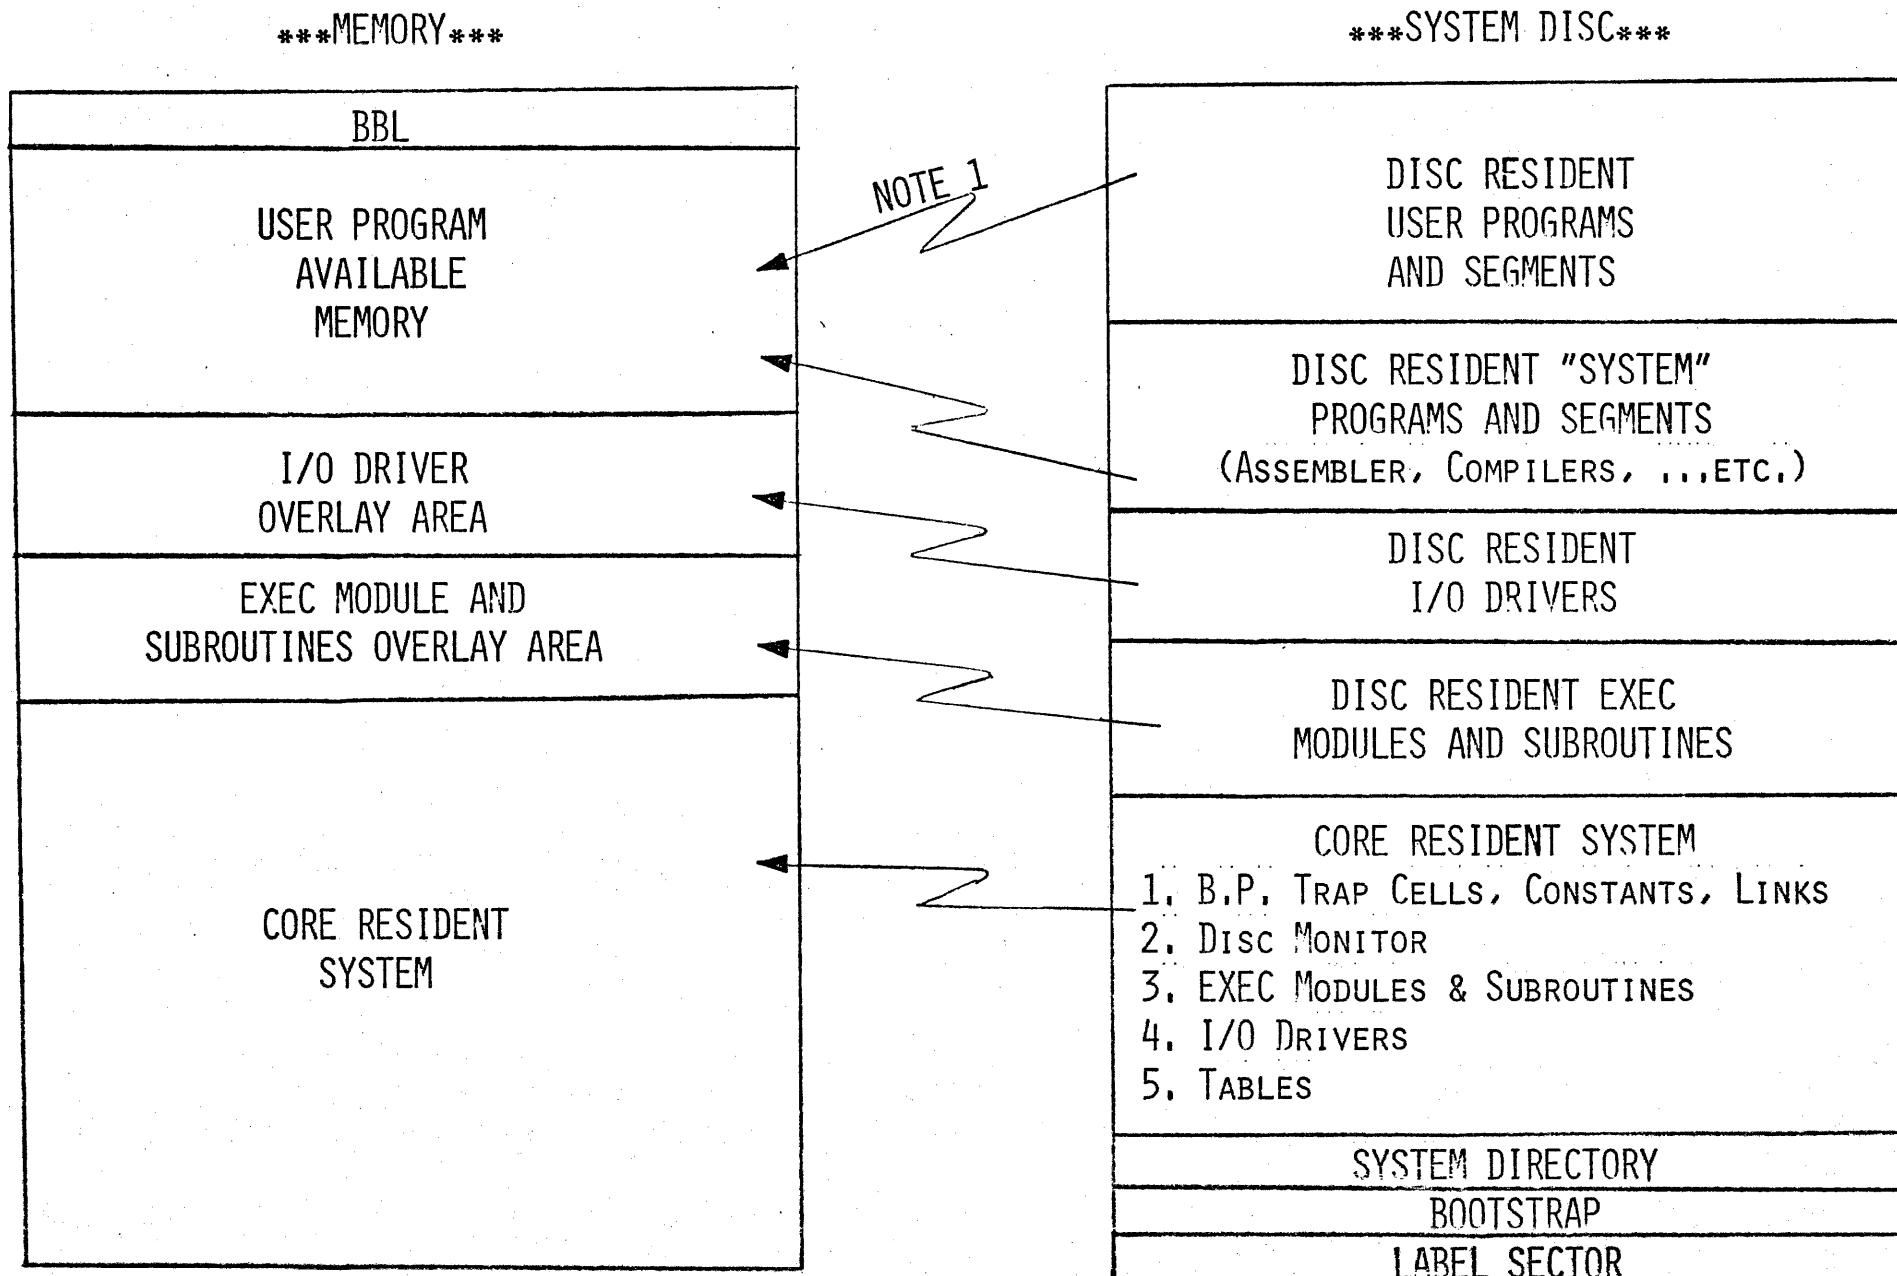

NOTE 1: MAY BE FROM "SYSTEM" DISC OR USER DISC(s)

# DOSM GENERAL CORE LAYOUT

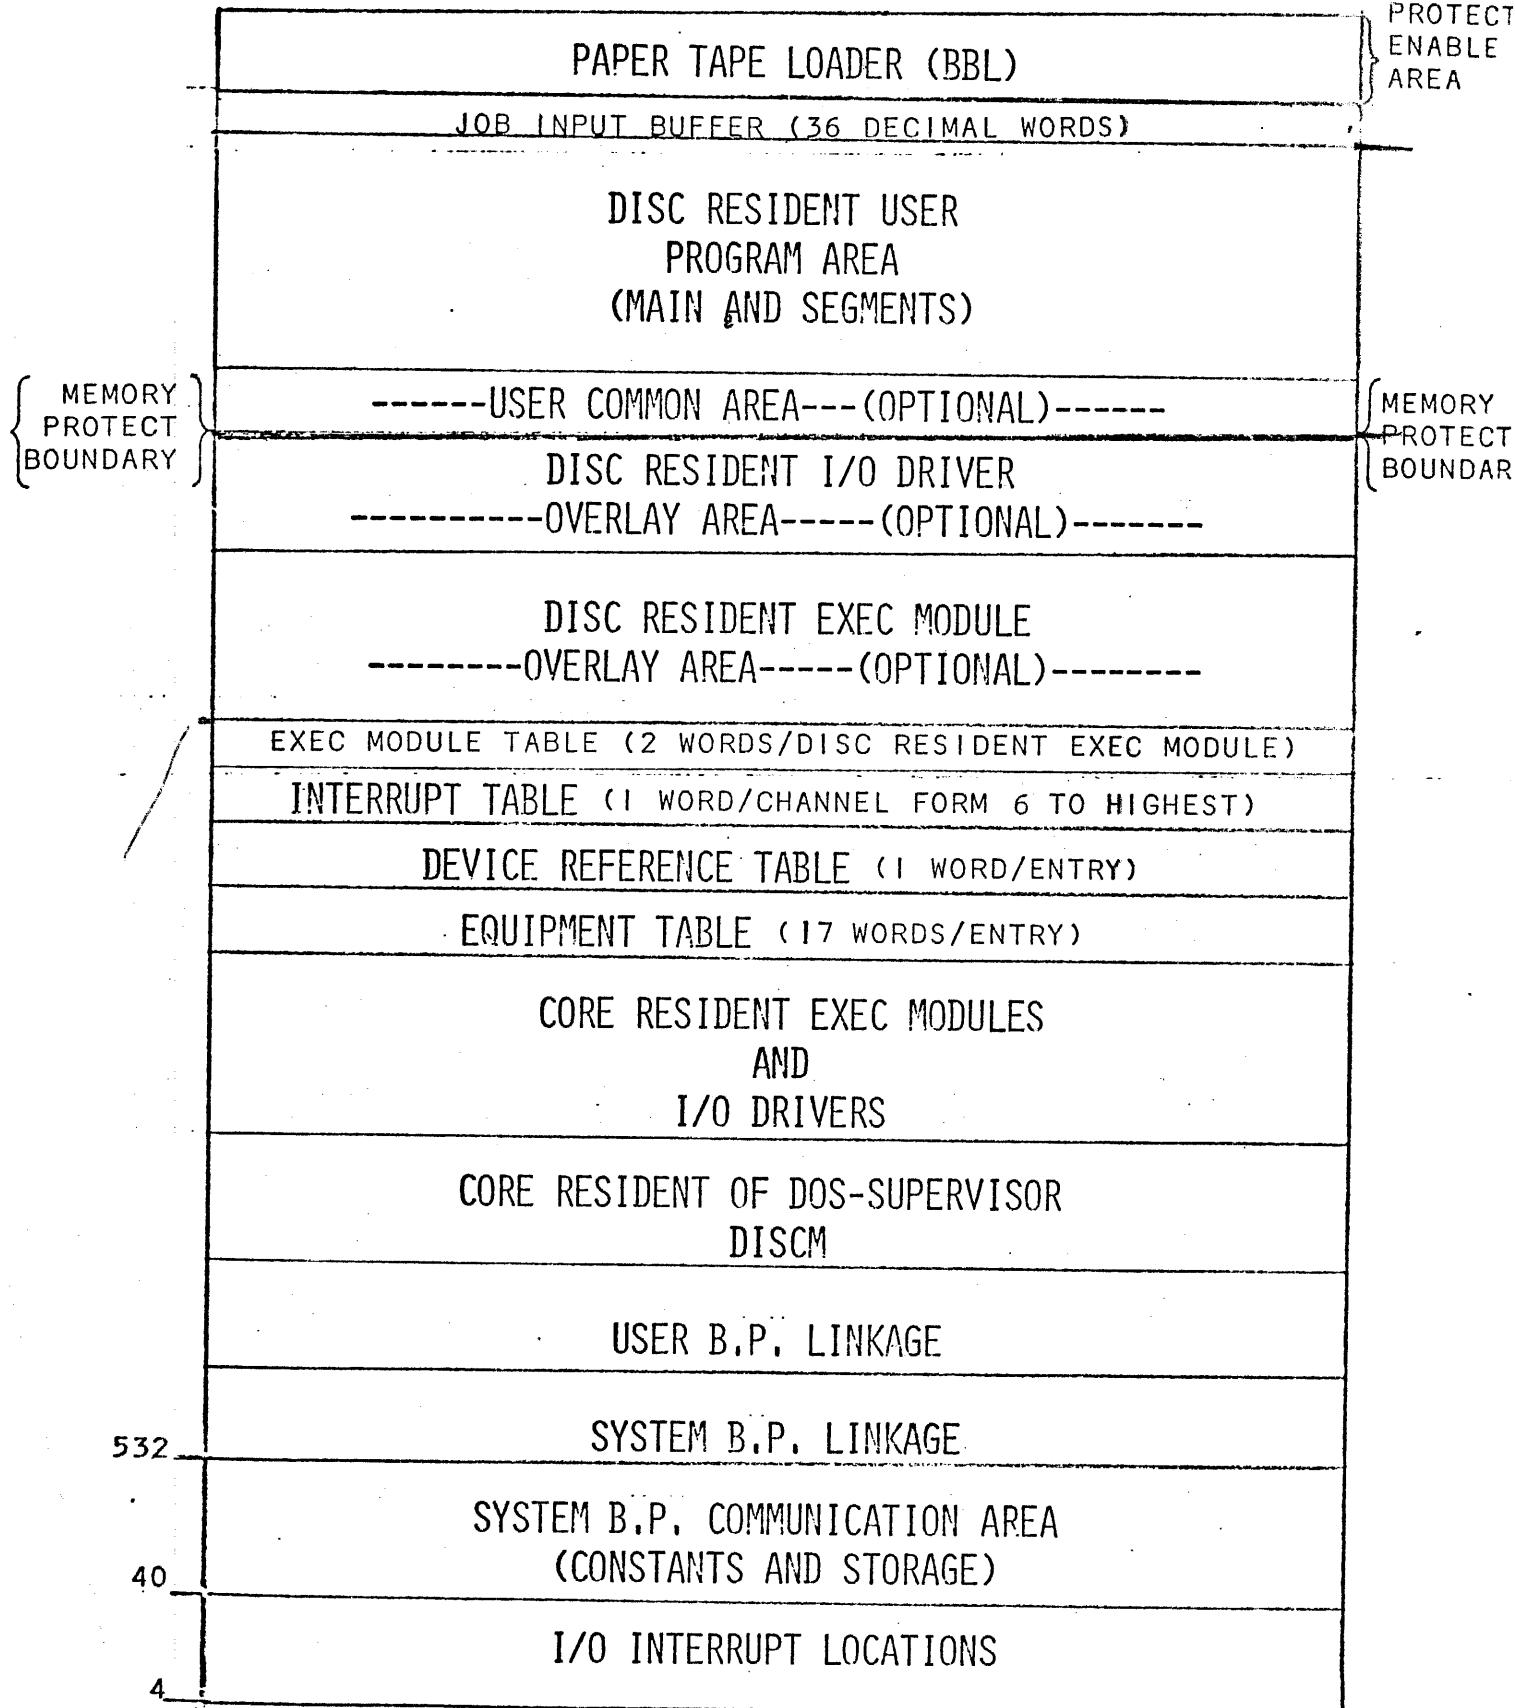

## EQUIPMENT TABLE ENTRY FORMAT

WORD	CONTENTS																					
1	DRIVER "INITIATION" SECTION ADDRESS																					
2	DRIVER "CONTINUATION" SECTION ADDRESS																					
3	D	R	UNIT #				CHANNEL #															
4	Av		EQUIPMENT TYPE CODE				STATUS															
5	(SAVED FOR DRIVER USE)																					
6	(SAVED FOR DRIVER USE)																					
7	REQUEST RETURN ADDRESS																					
8	REQUEST CODE																					
9	CURRENT I/O REQUEST CONTROL WORD																					
10	REQUEST BUFFER ADDRESS																					
11	REQUEST BUFFER LENGTH																					
12	TEMPORARY OR DISC TRACK #																					
13	TEMPORARY OR STARTING SECTOR #																					
14	TEMPORARY STORAGE FOR DRIVER																					
15	UPPER MEMORY ADDRESS OF MAIN DRIVER AREA																					
16	UPPER MEMORY ADDRESS OF DRIVER LINKAGE AREA																					
17	STARTING TRACK #				STARTING SECTOR #																	
BITS	15	14	13	12	11	10	9	8	7	6	5	4										
	3	2	1	0																		

D = 1 IF DMA CHANNEL REQUIRED.  
 R = 1 IF DRIVER TYPE IS CORE-RESIDENT.  
 UNIT # MAY BE USED FOR SUB-CHANNEL ADDRESSING.  
 CHANNEL # I/O SELECT CODE FOR DEVICE (LOWER NUMBER IF MULTIBOARD INTERFACE.)

Av = 0 - UNIT NOT BUSY AND AVAILABLE  
 = 1 - UNIT DISABLED (DOWN)  
 = 2 - UNIT BUSY  
 = 3 - UNIT WAITING FOR AN AVAILABLE DMA CHANNEL

THIS FIELD  
SET BY SYSTEM

STATUS - ACTUAL OR SIMULATED UNIT STATUS AT END OF OPERATION.  
(DRIVER MUST SET THIS FIELD)

EQUIPMENT TYPE CODE - IDENTIFIES TYPE OF DEVICE AND ASSOCIATED SOFTWARE DRIVER. ASSIGNED EQUIPMENT TYPE CODES IN OCTAL ARE:


00-07	PAPER TYPE DEVICES
00	TELEPRINTER
01	PUNCHED TAPE READER
02	HIGH SPEED PUNCH
05	TELETYPE (SYSTEM)
10-17	UNIT RECORD DEVICES
10	RESERVED FOR PLOTTER
12	LINE PRINTER
15	MARK SENSE CARD READER
20-37	MAGNETIC TAPE/MASS STORAGE AND OTHER DEVICES CAPABLE OF BOTH INPUT AND OUTPUT.
22	3030 MAGNETIC TAPE
31	MOVING-HEAD DISC

FOR EQUIPMENT TYPE CODES 1 THROUGH 17, ODD NUMBER INDICATE INPUT DEVICES AND EVEN NUMBER INDICATE OUTPUT DEVICES (EXCEPT 05, WHICH IS BOTH INPUT AND OUTPUT).

AVAILABLE  
FOR  
DRIVER  
TEMPORARY


## THE DEVICE REFERENCE TABLE

THE DEVICE REFERENCE TABLE PROVIDES FOR LOGICAL ADDRESSING OF PHYSICAL UNITS DEFINED IN THE EQUIPMENT TABLE. THE DRT CONSISTS OF ONE WORD ENTRIES CORRESPONDING TO THE RANGE OF USER-SPECIFIED LOGICAL UNITS (1 TO N, WHERE N ≤ 63). THE CONTENTS OF THE WORD CORRESPONDING TO A LOGICAL UNIT IS THE RELATIVE POSITION OF THE EQT ENTRY DEFINING THE PHYSICAL UNIT.

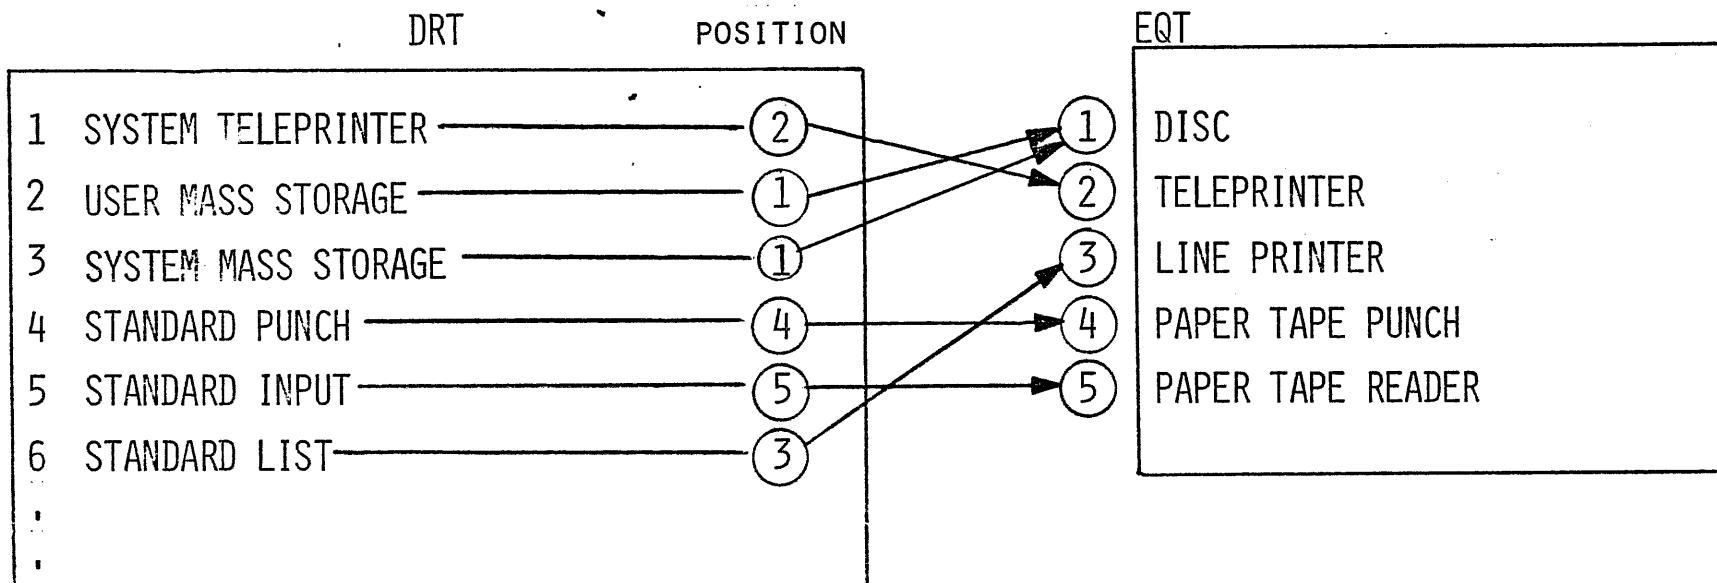


## THE INTERRUPT TABLE

THE INTERRUPT TABLE CONTAINS A ONE WORD ENTRY FOR EACH I/O DEVICE. THESE ENTRIES CONTAIN THE ADDRESSES OF EQUIPMENT TABLE ENTRIES FOR DEVICES ASSOCIATED WITH THESE CHANNELS.

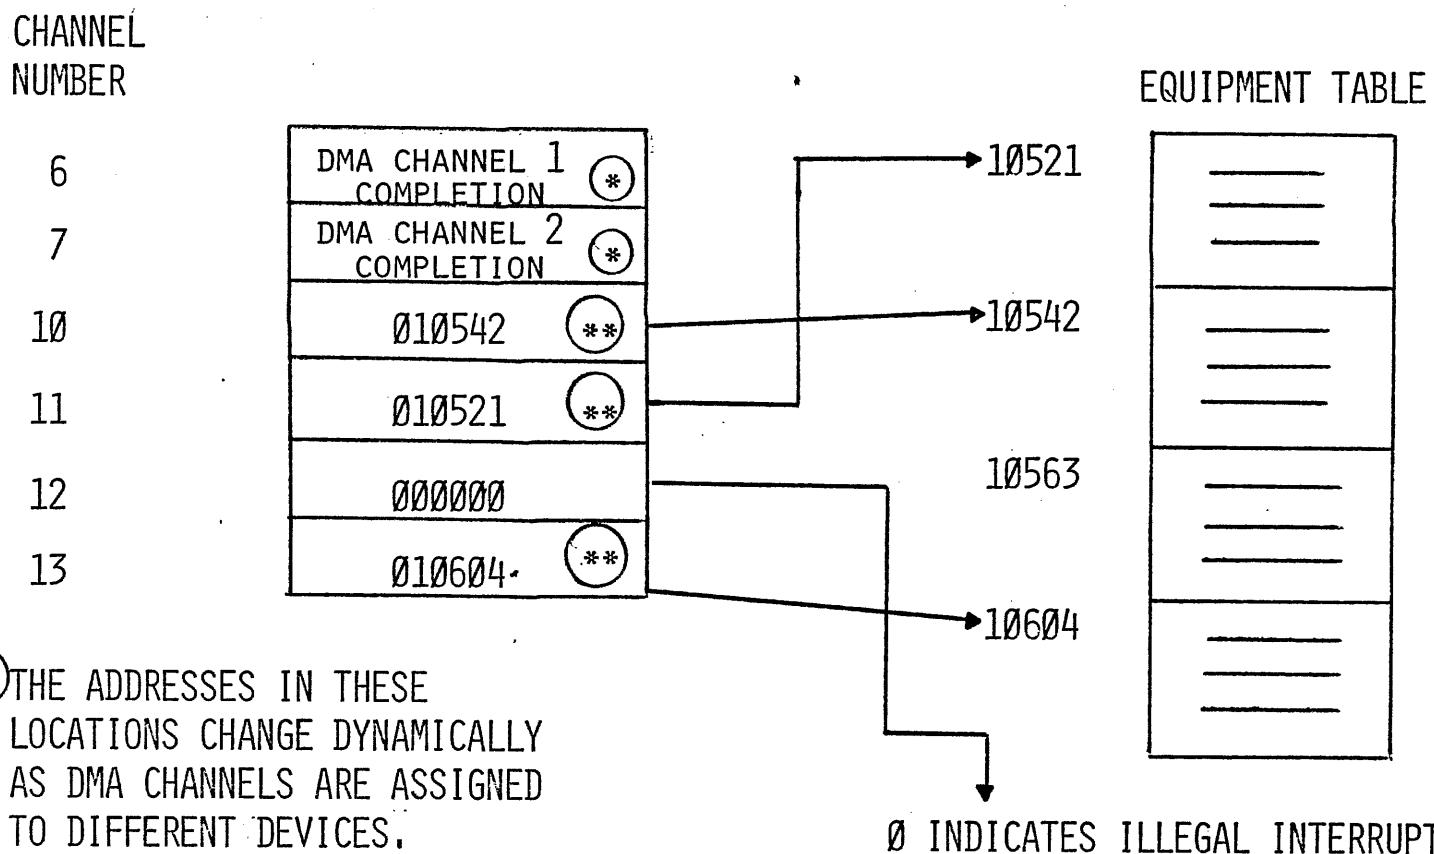


SYSTEM DISC ALLOCATION

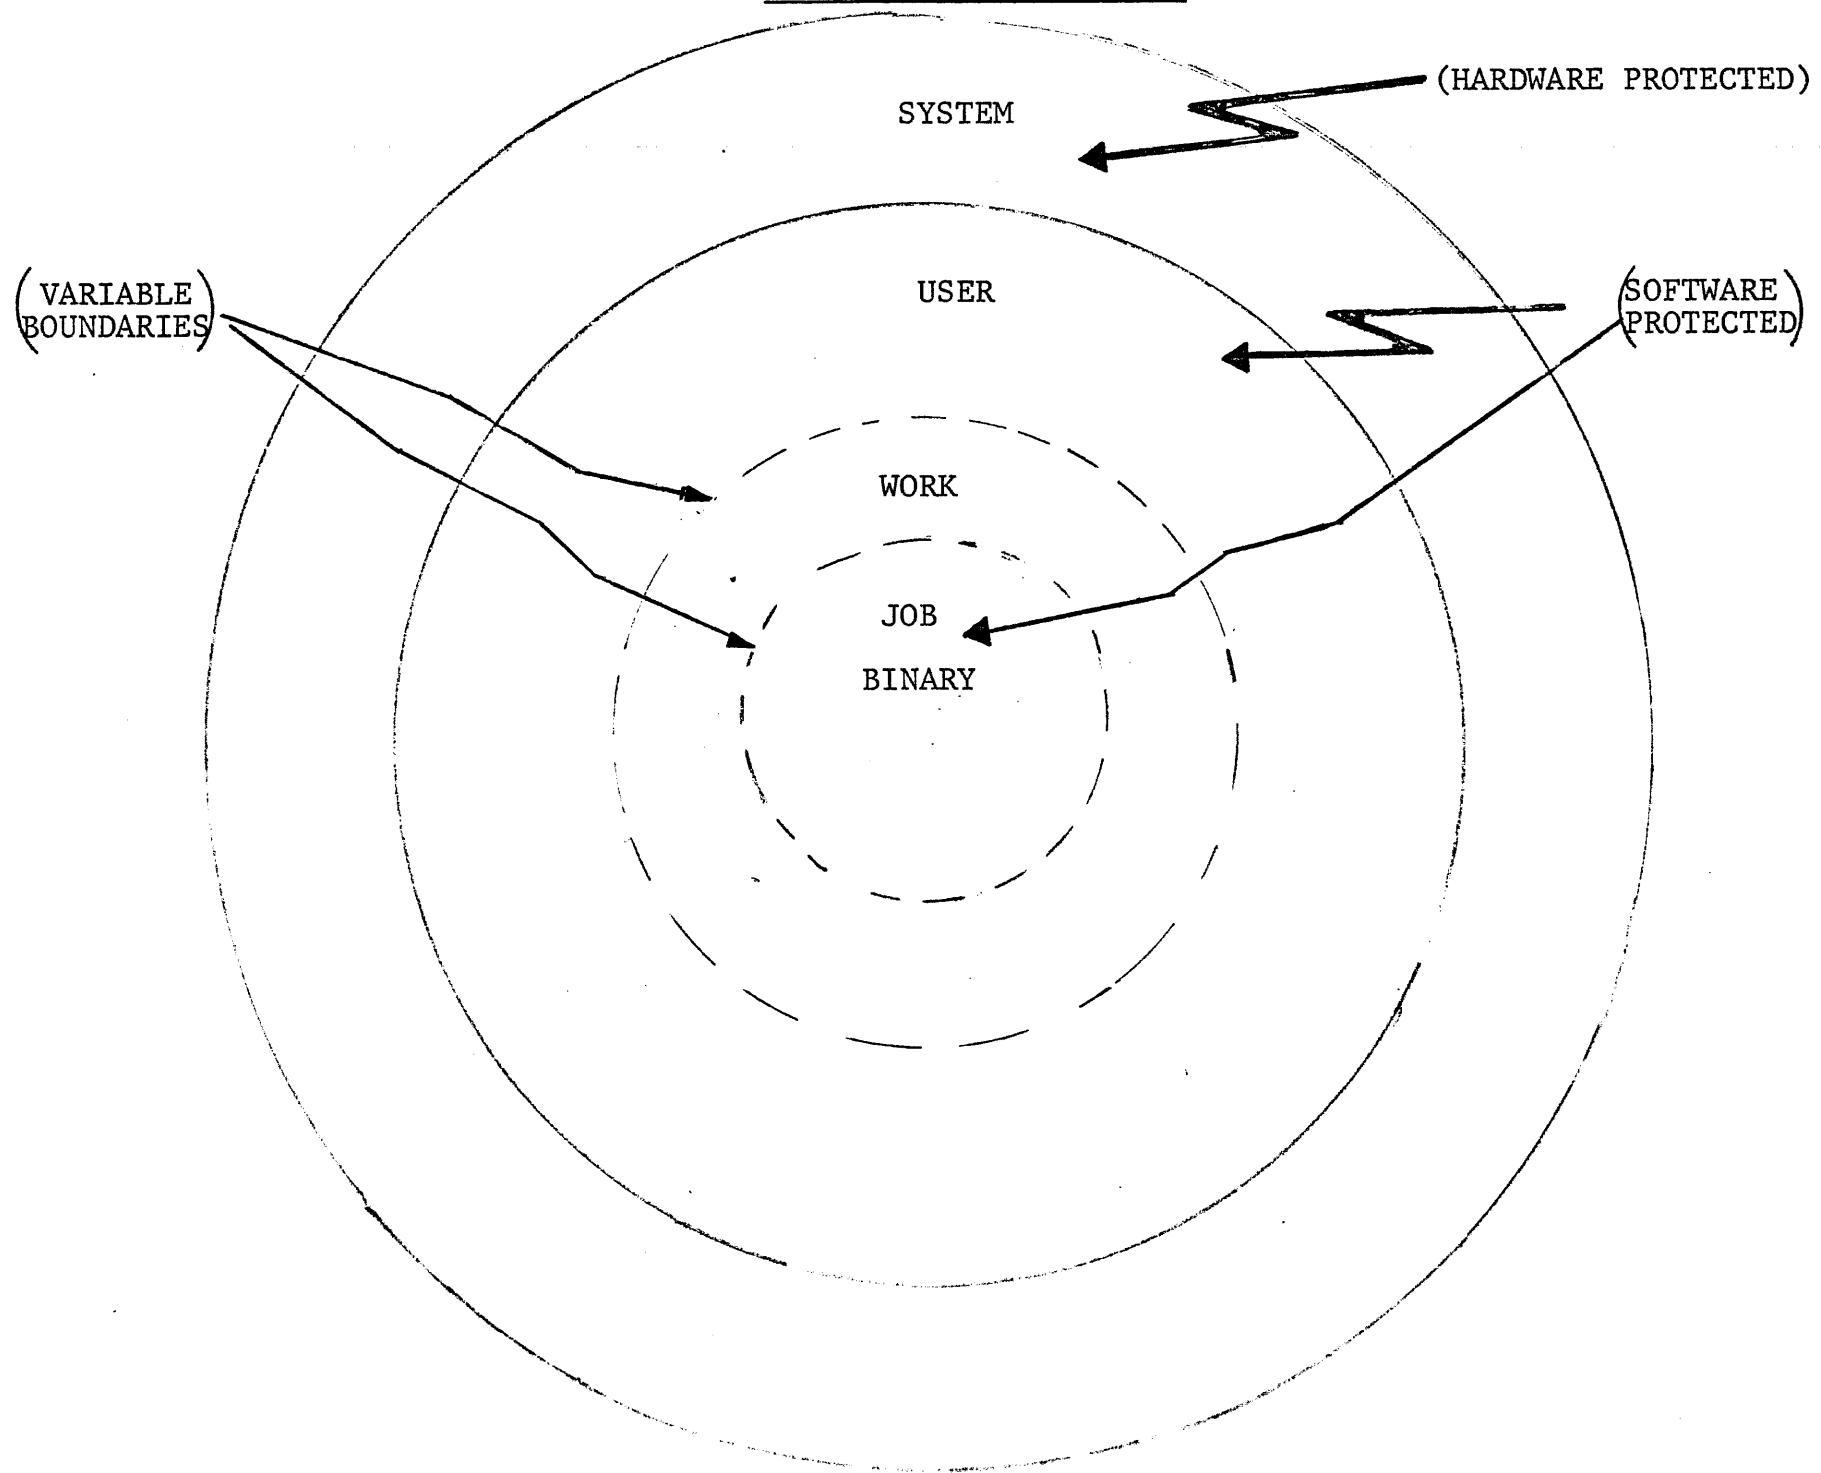


# DOSM "SYSTEM" DISC LAYOUT

INCREASING  
DISC  
ADDRESSES

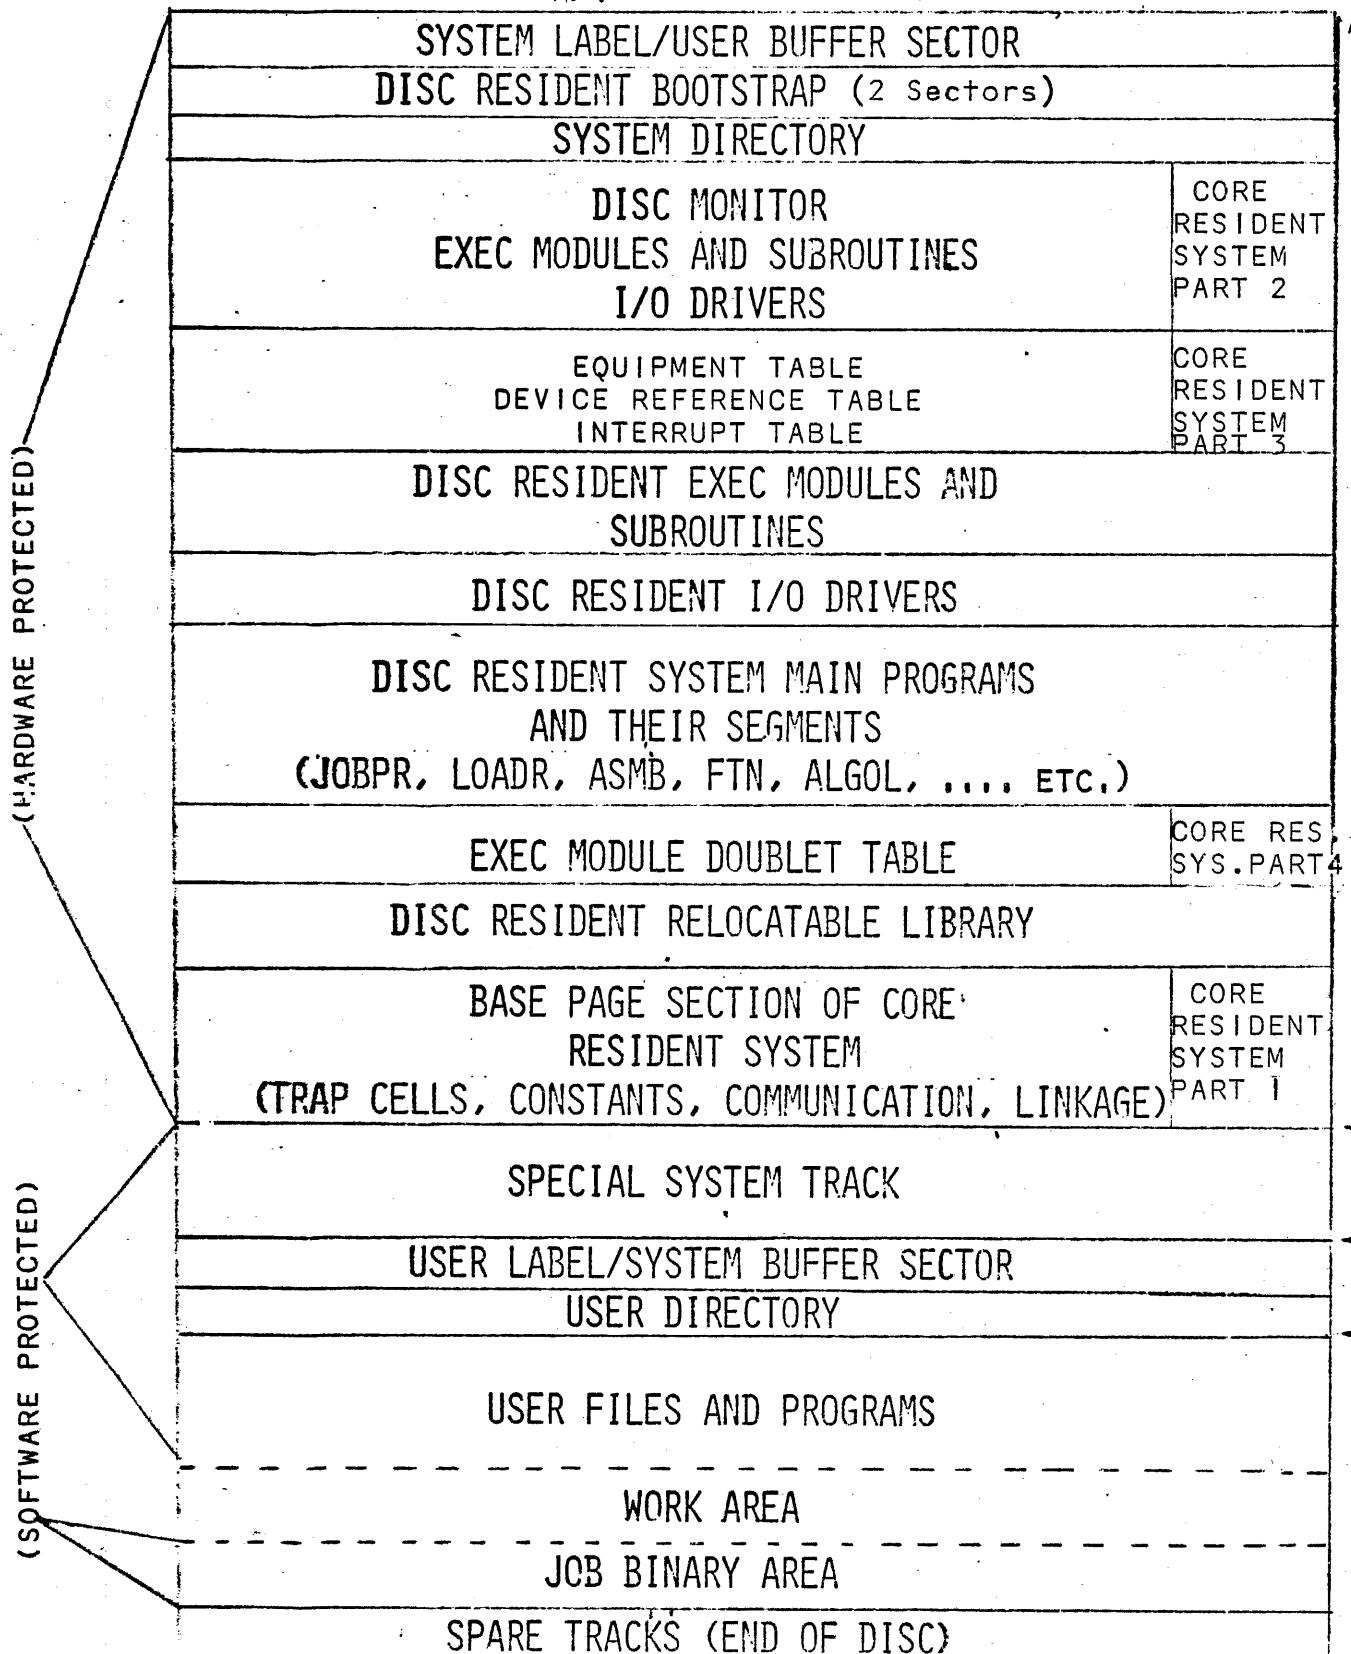


T = STARTS ON TRACK BOUNDARY

## DOSM "USER" DISC LAYOUT

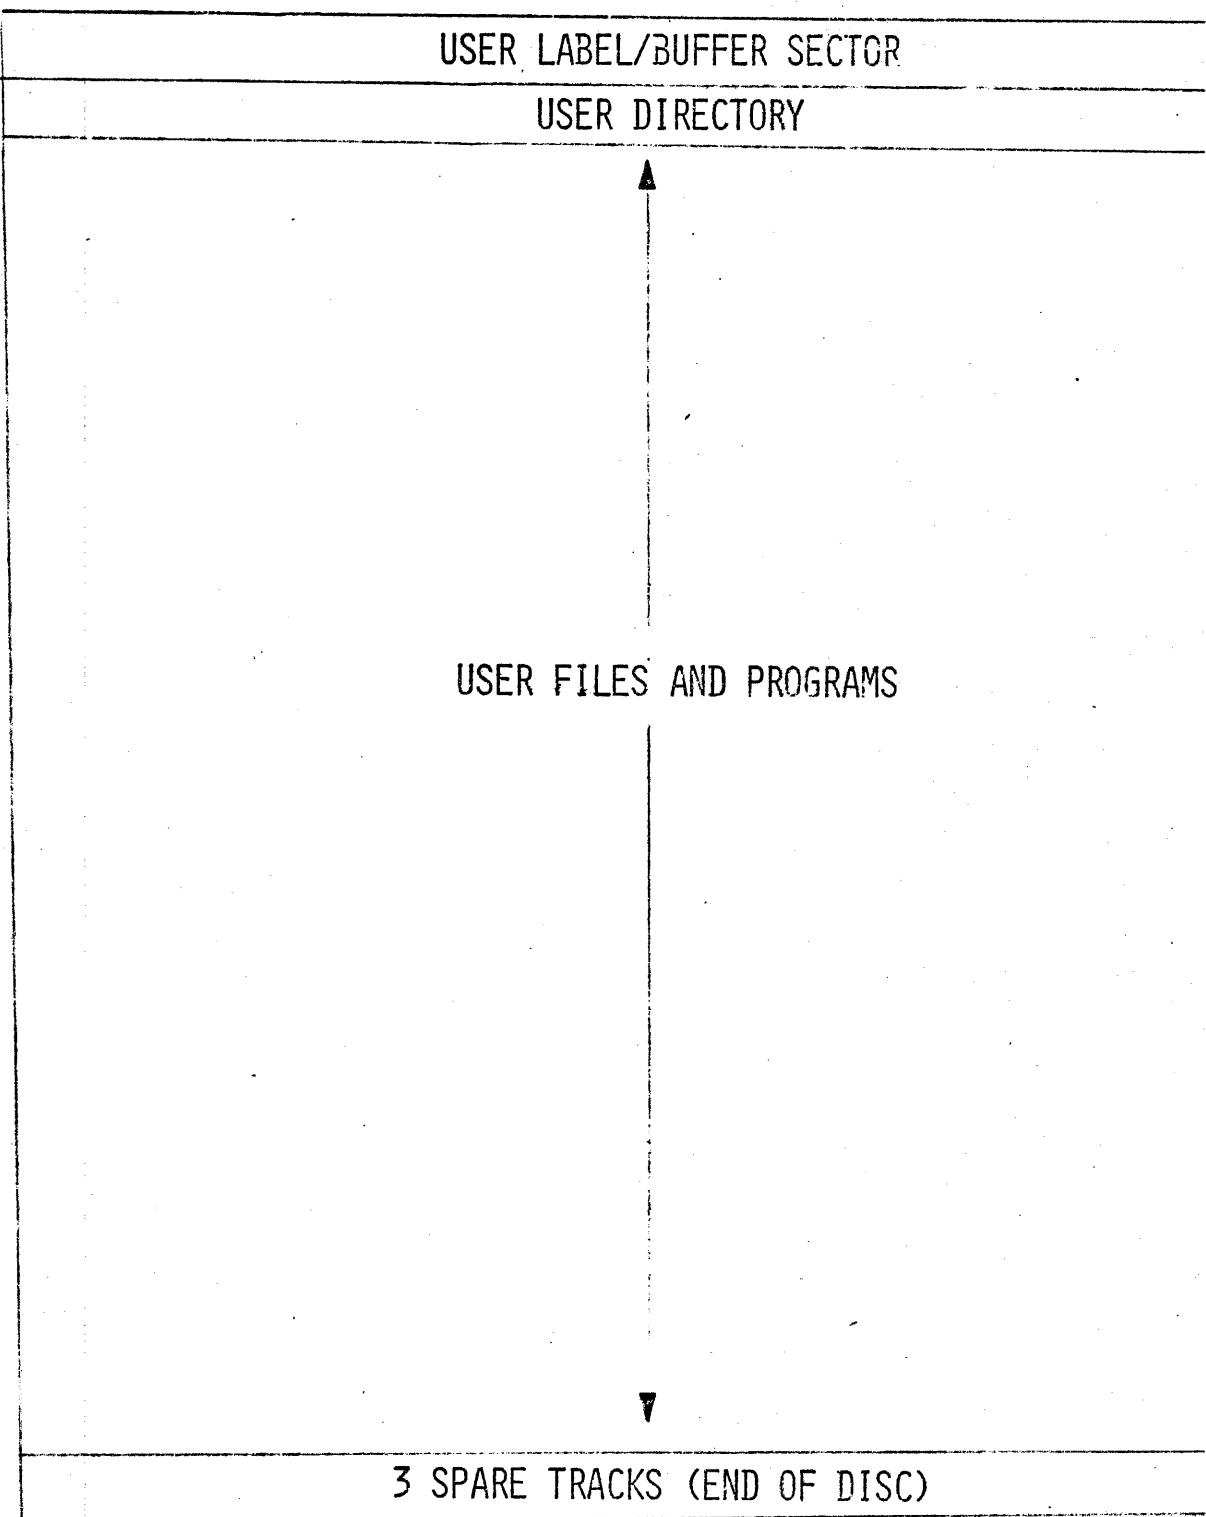


INCREASING  
DISC  
ADDRESS


"SYSTEM" DISC (LABEL SECTORS DESCRIPTION)

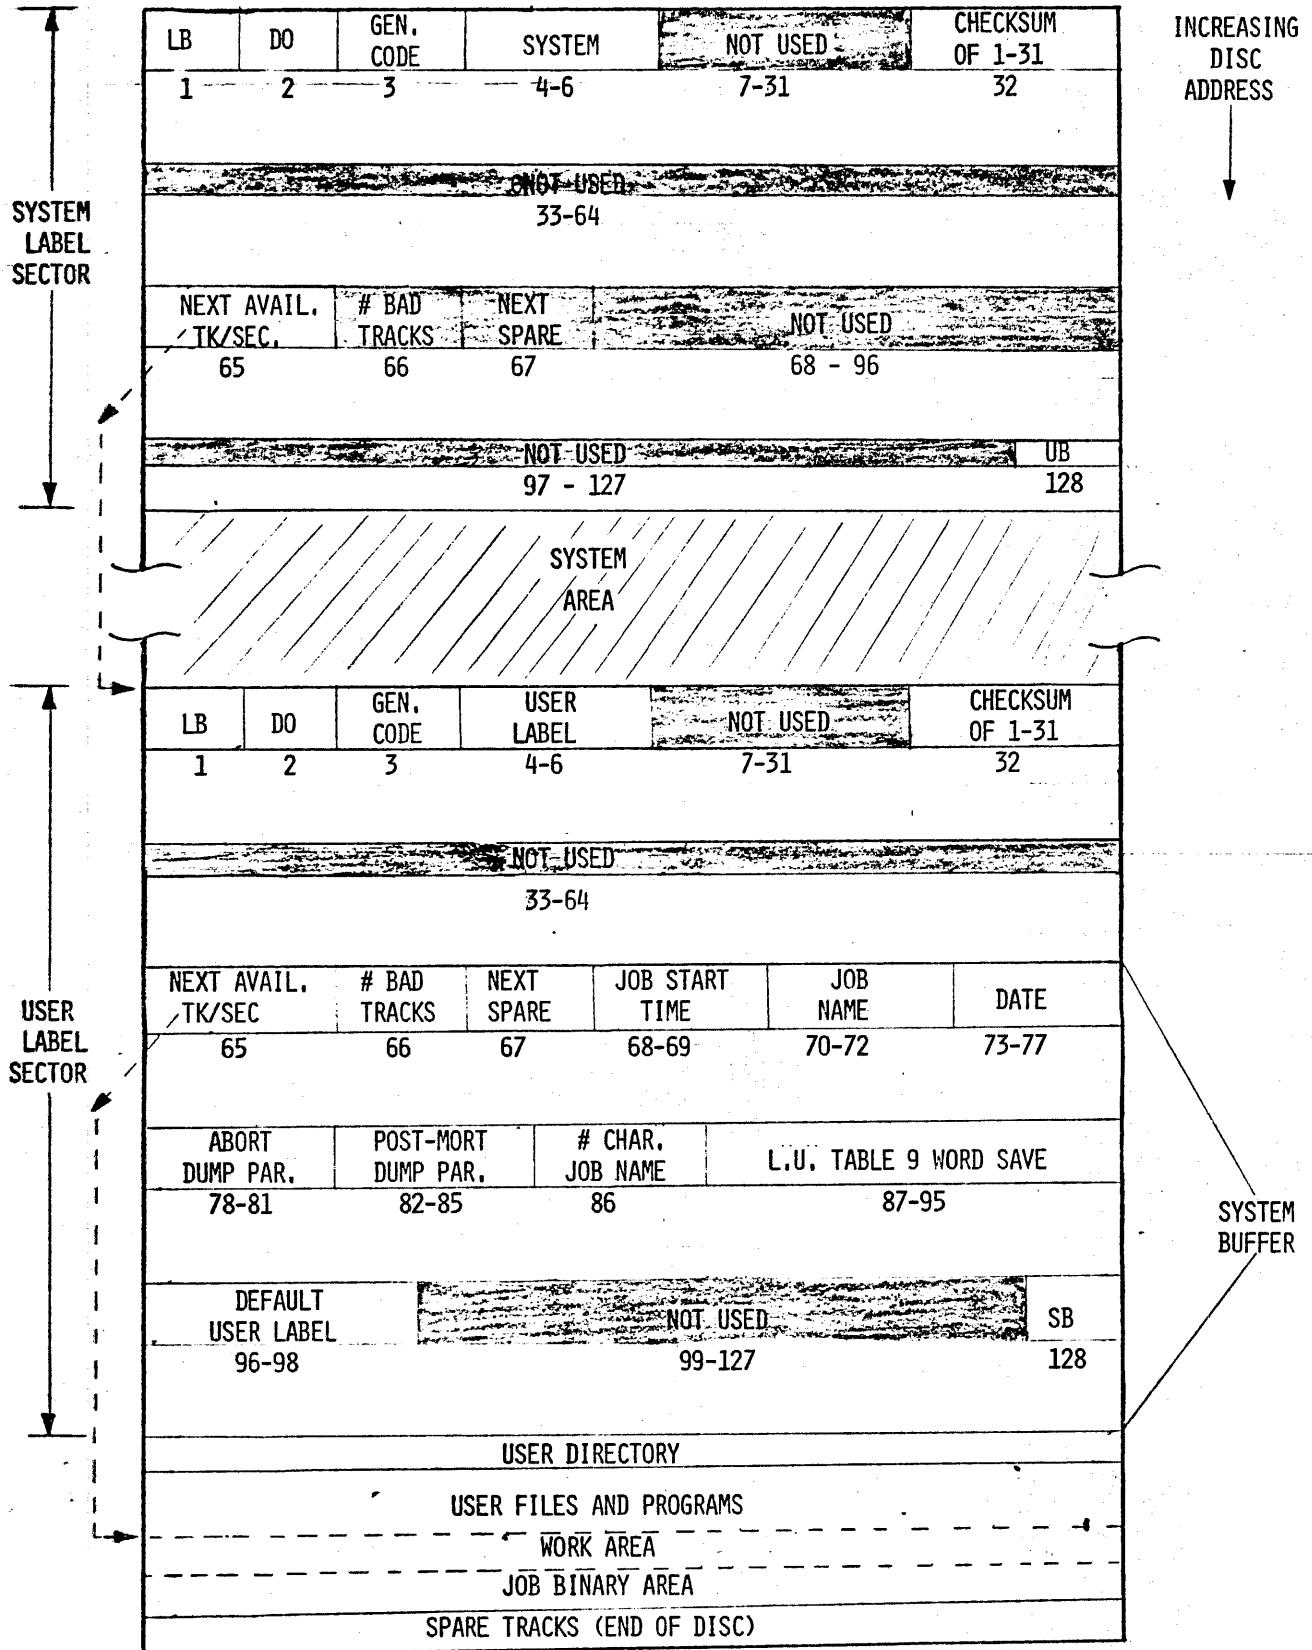


"USER" DISC (LABEL SECTOR DESCRIPTION)

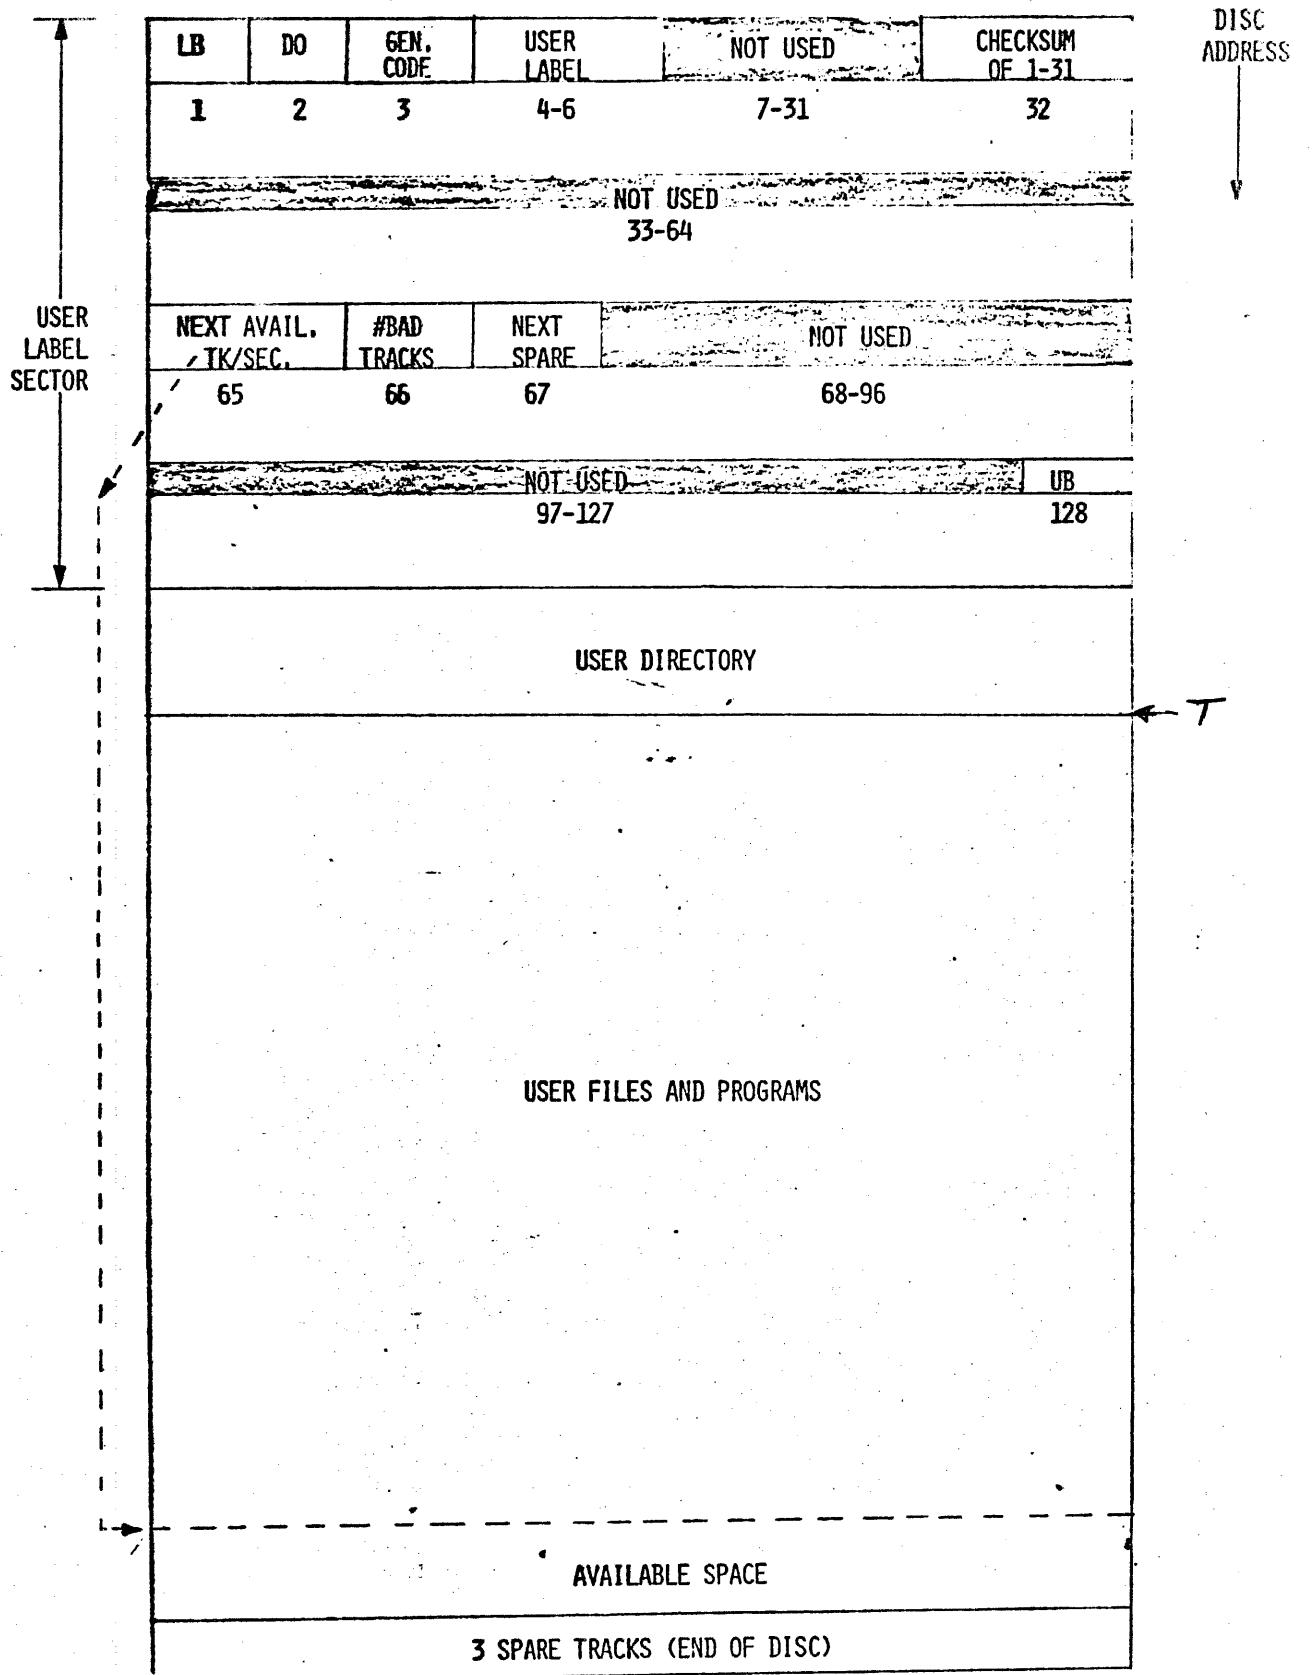


SYSTEM STARTUP (PART 1)  
(EXECUTION OF CONFIGURED BOOTSTRAP)

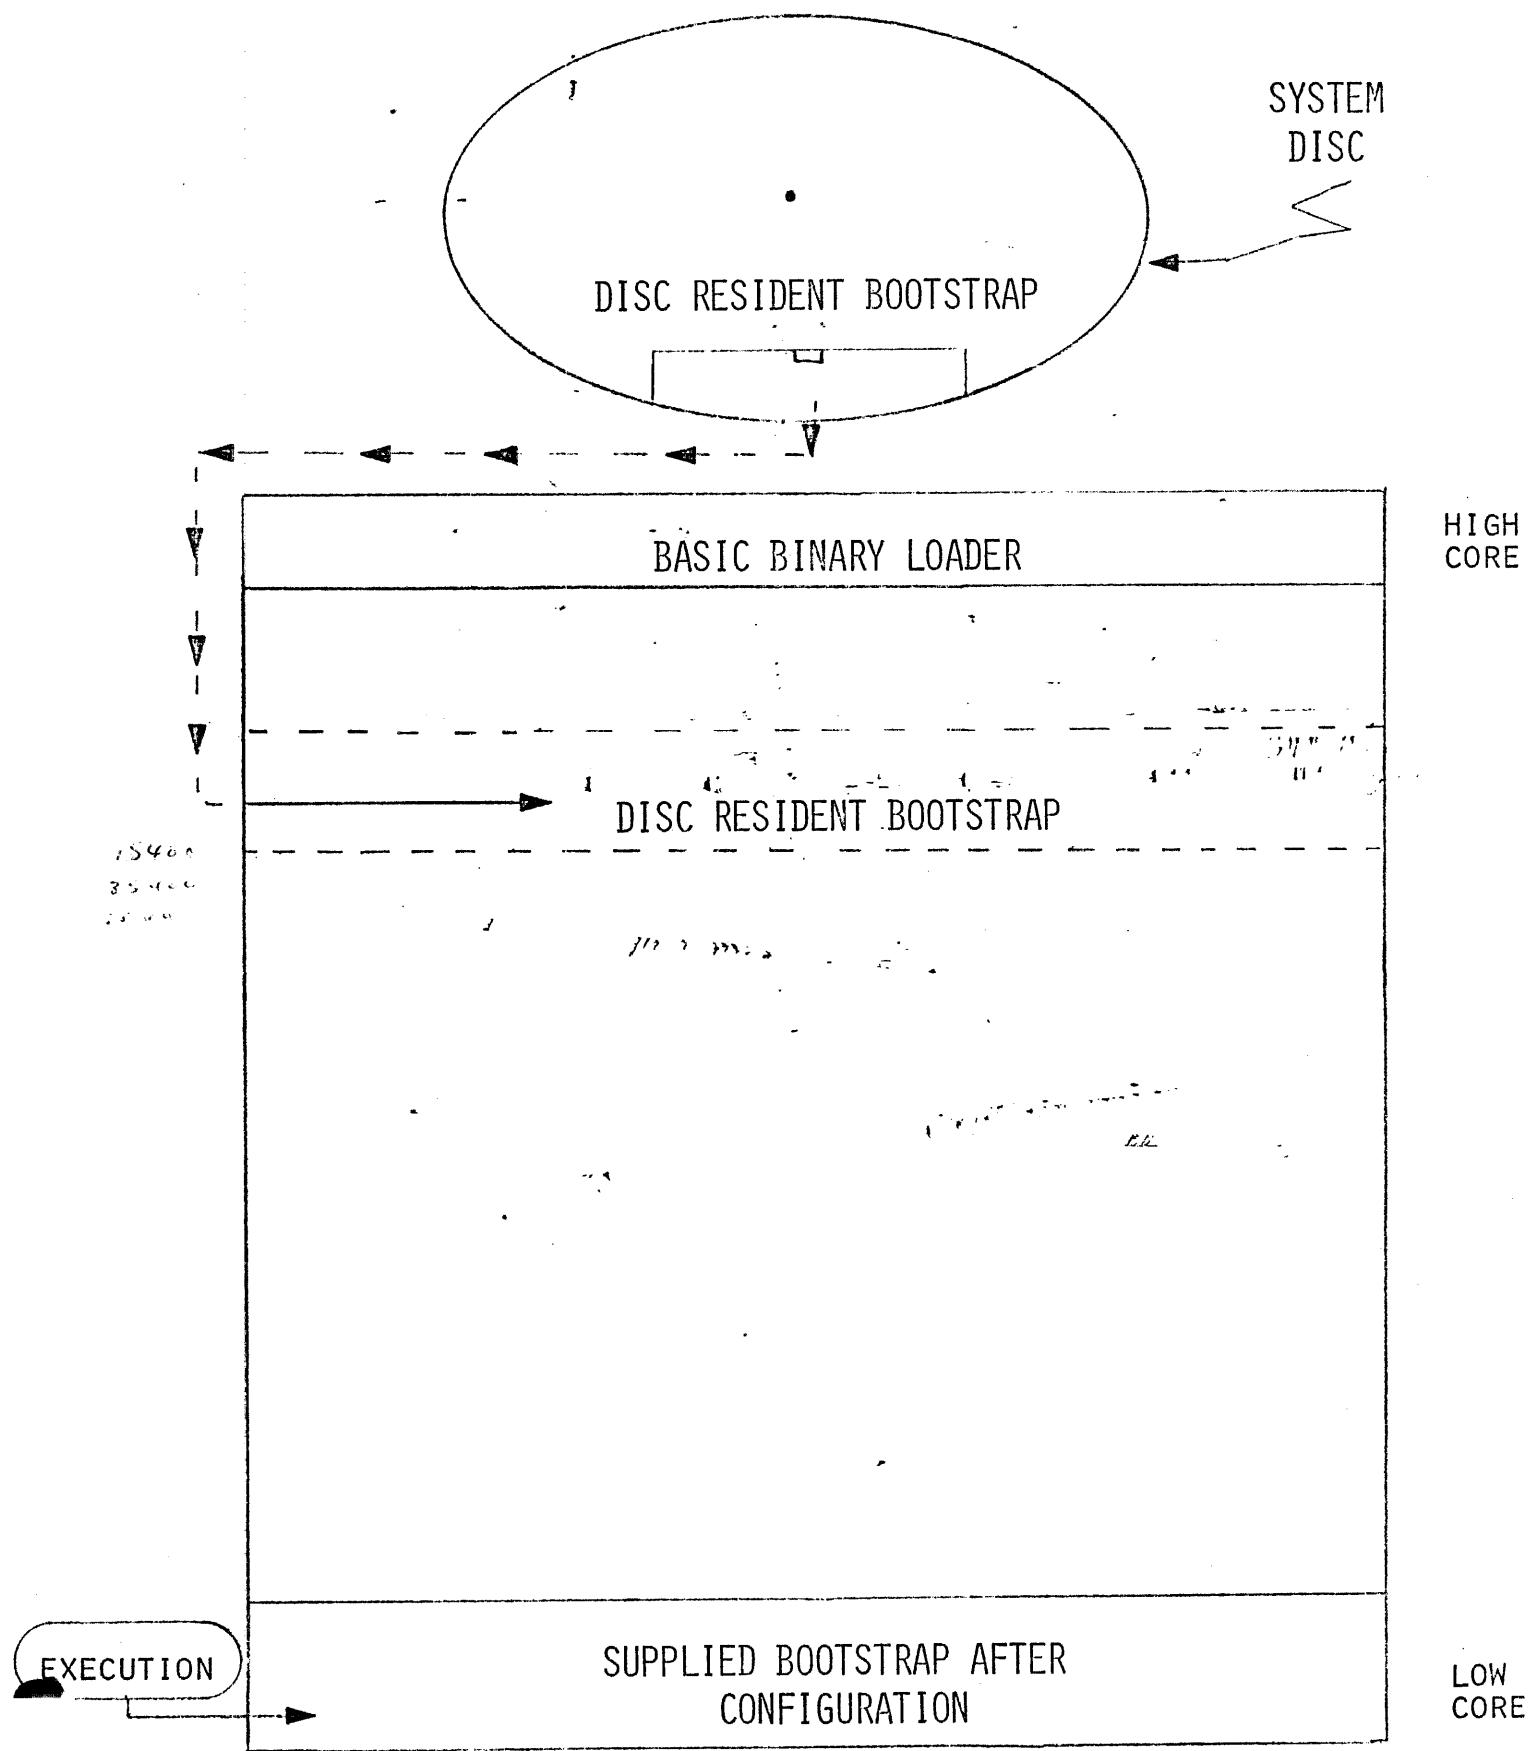


SYSTEM STARTUP (PART 2)  
(EXECUTION OF DISC RESIDENT BOOTSTRAP)

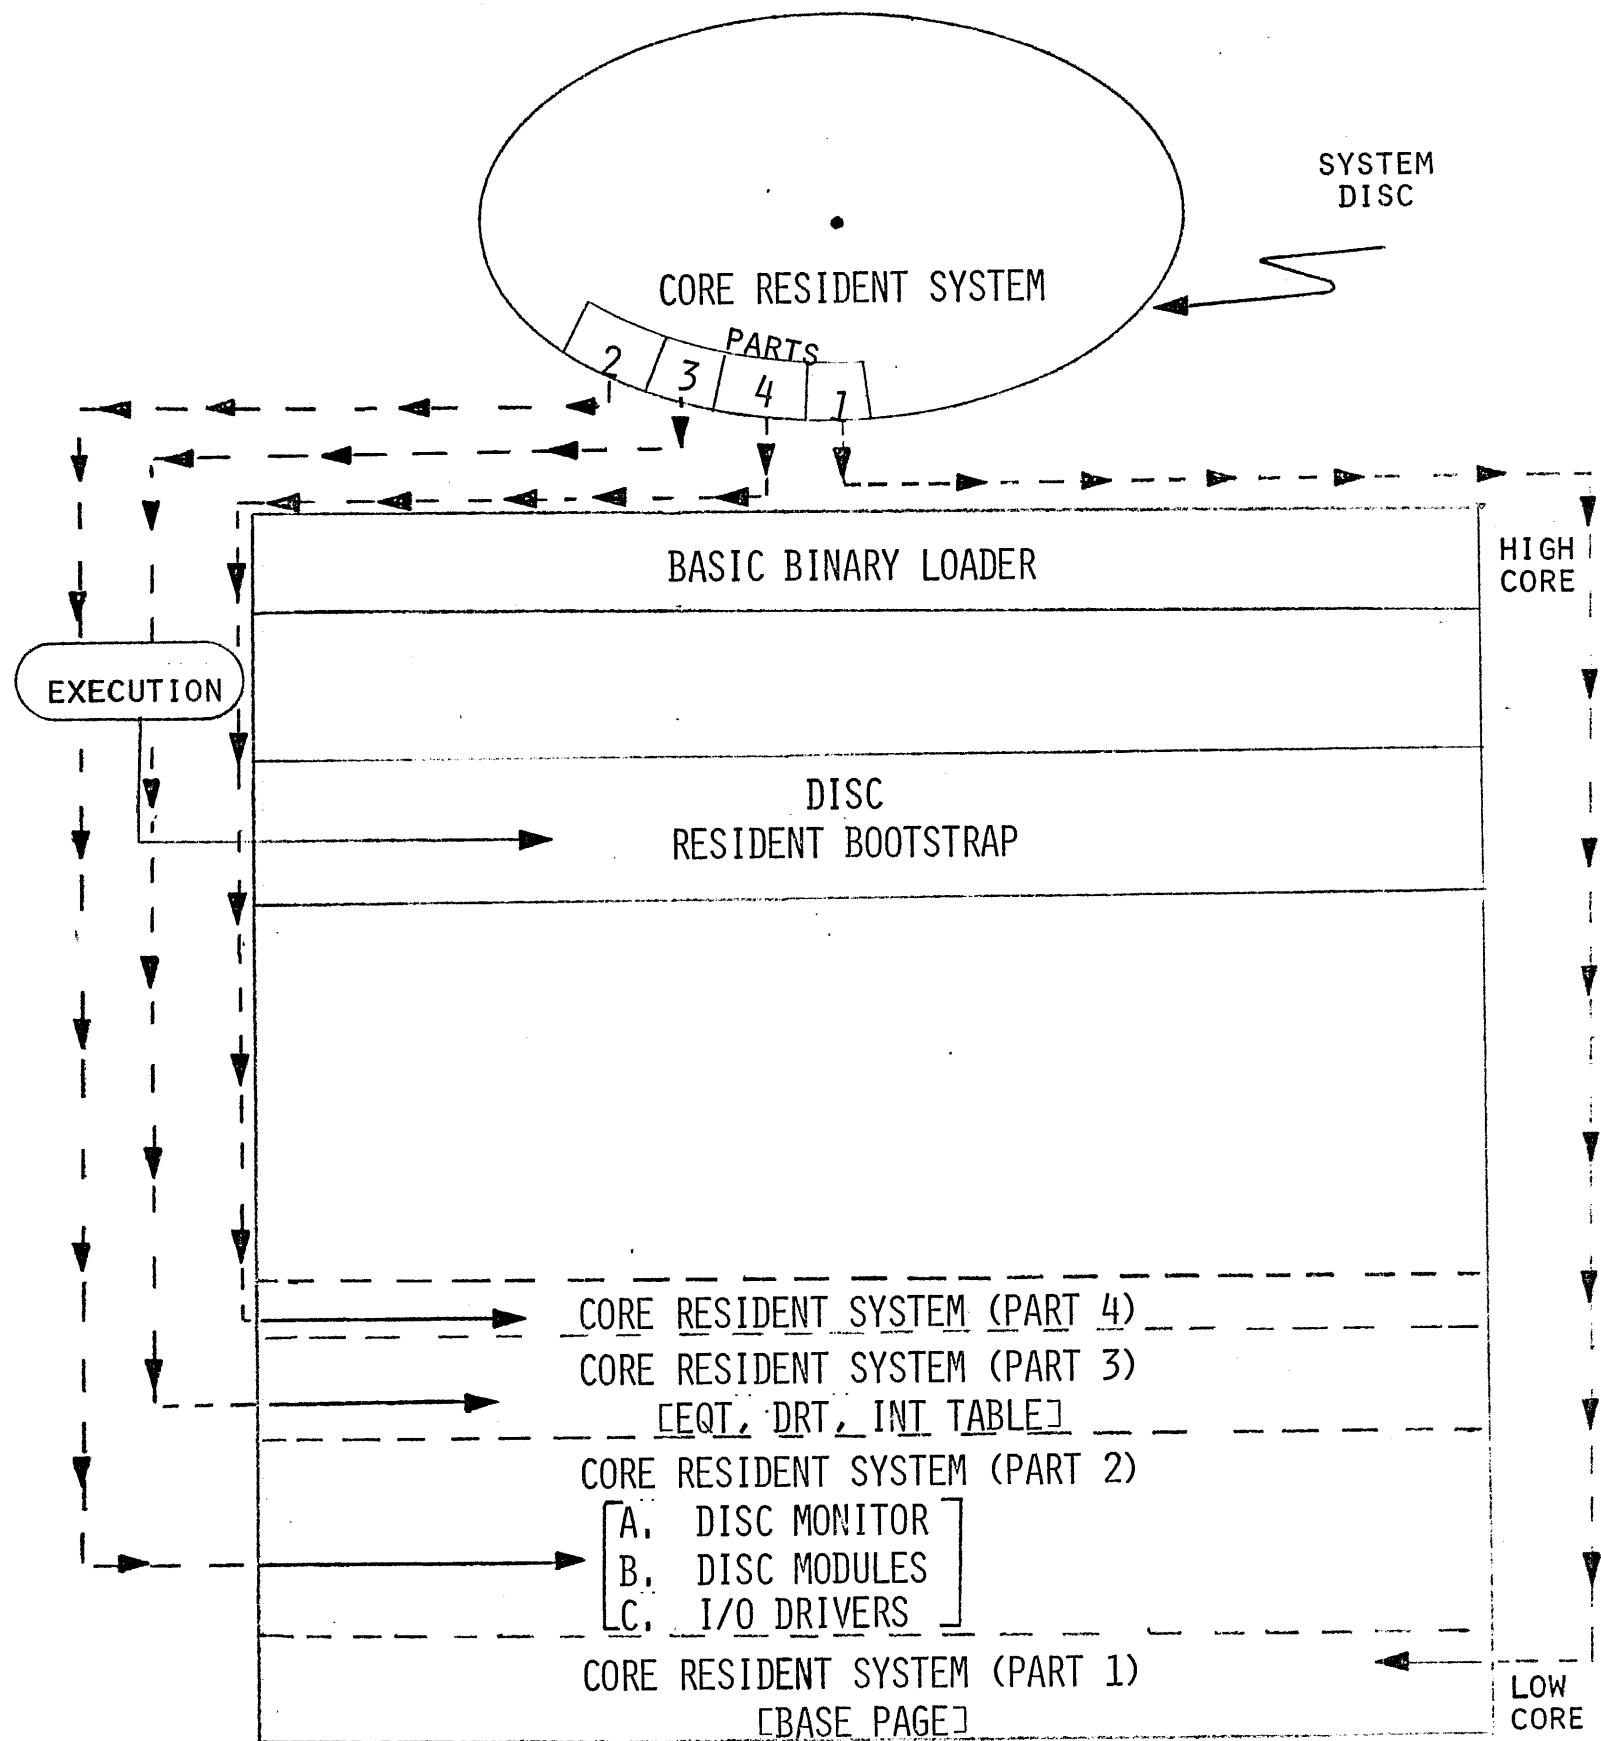


SYSTEM STARTUP (PART 3)  
(DISC MONITOR FIRST ENTRY)

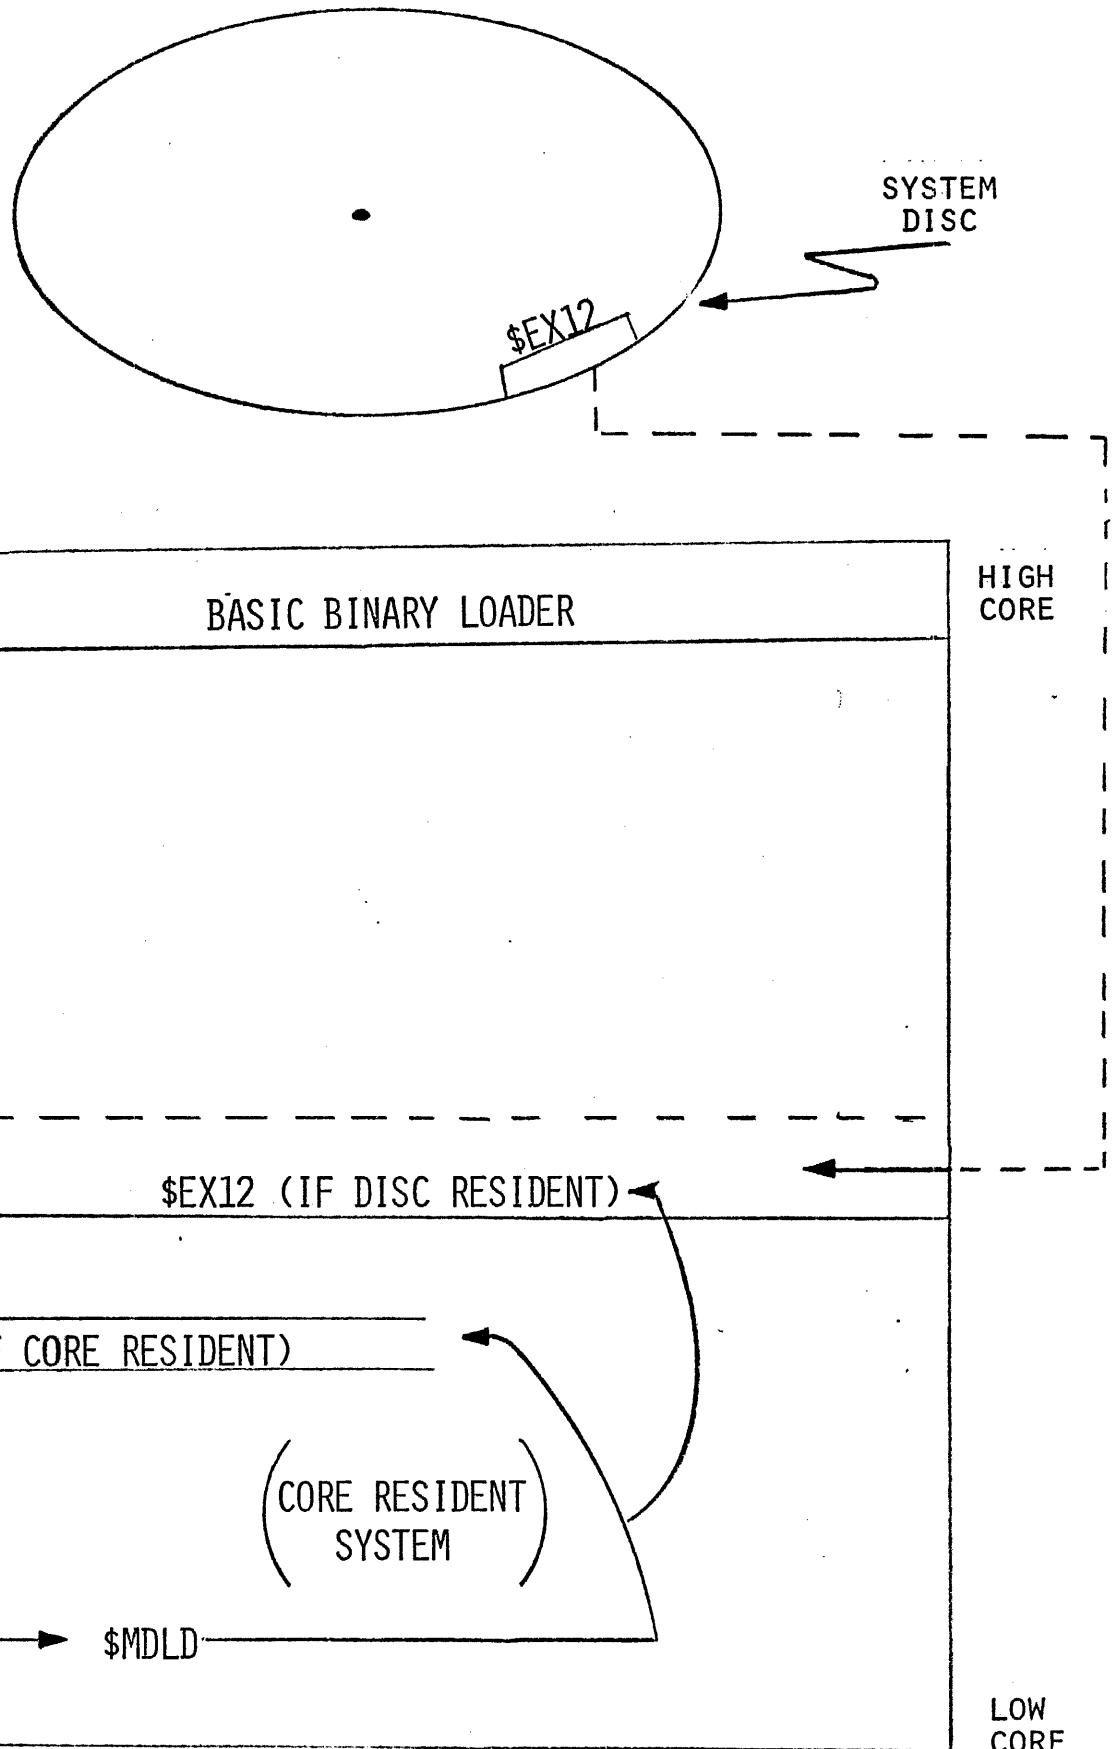


SYSTEM STARTUP (PART 4)  
(EXECUTION OF \$EX12 EXEC MODULE)

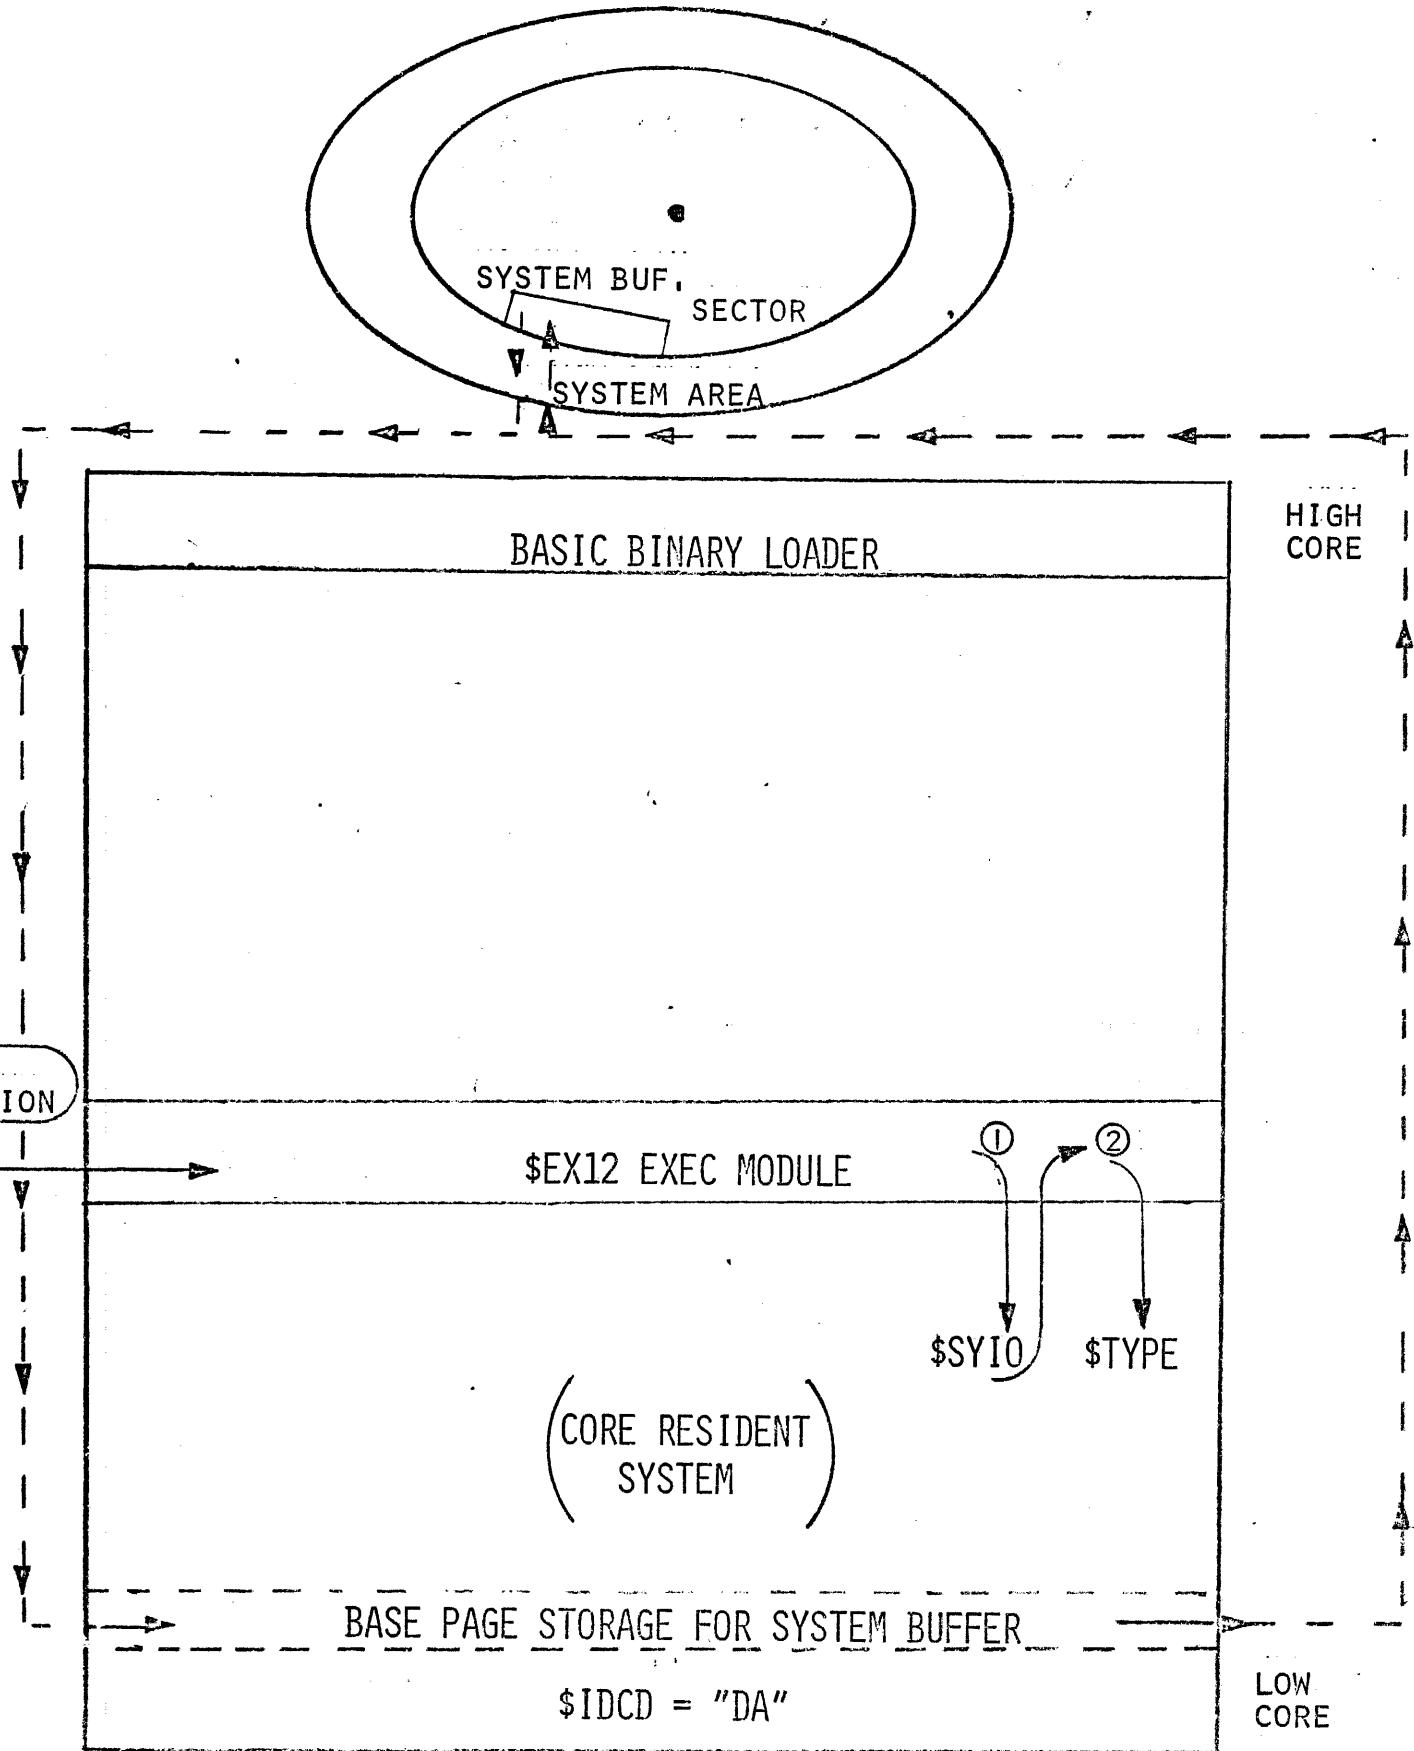



SYSTEM STARTUP (PART 5)  
(EXECUTION OF \$TYPE FOR ":DATE" INPUT)

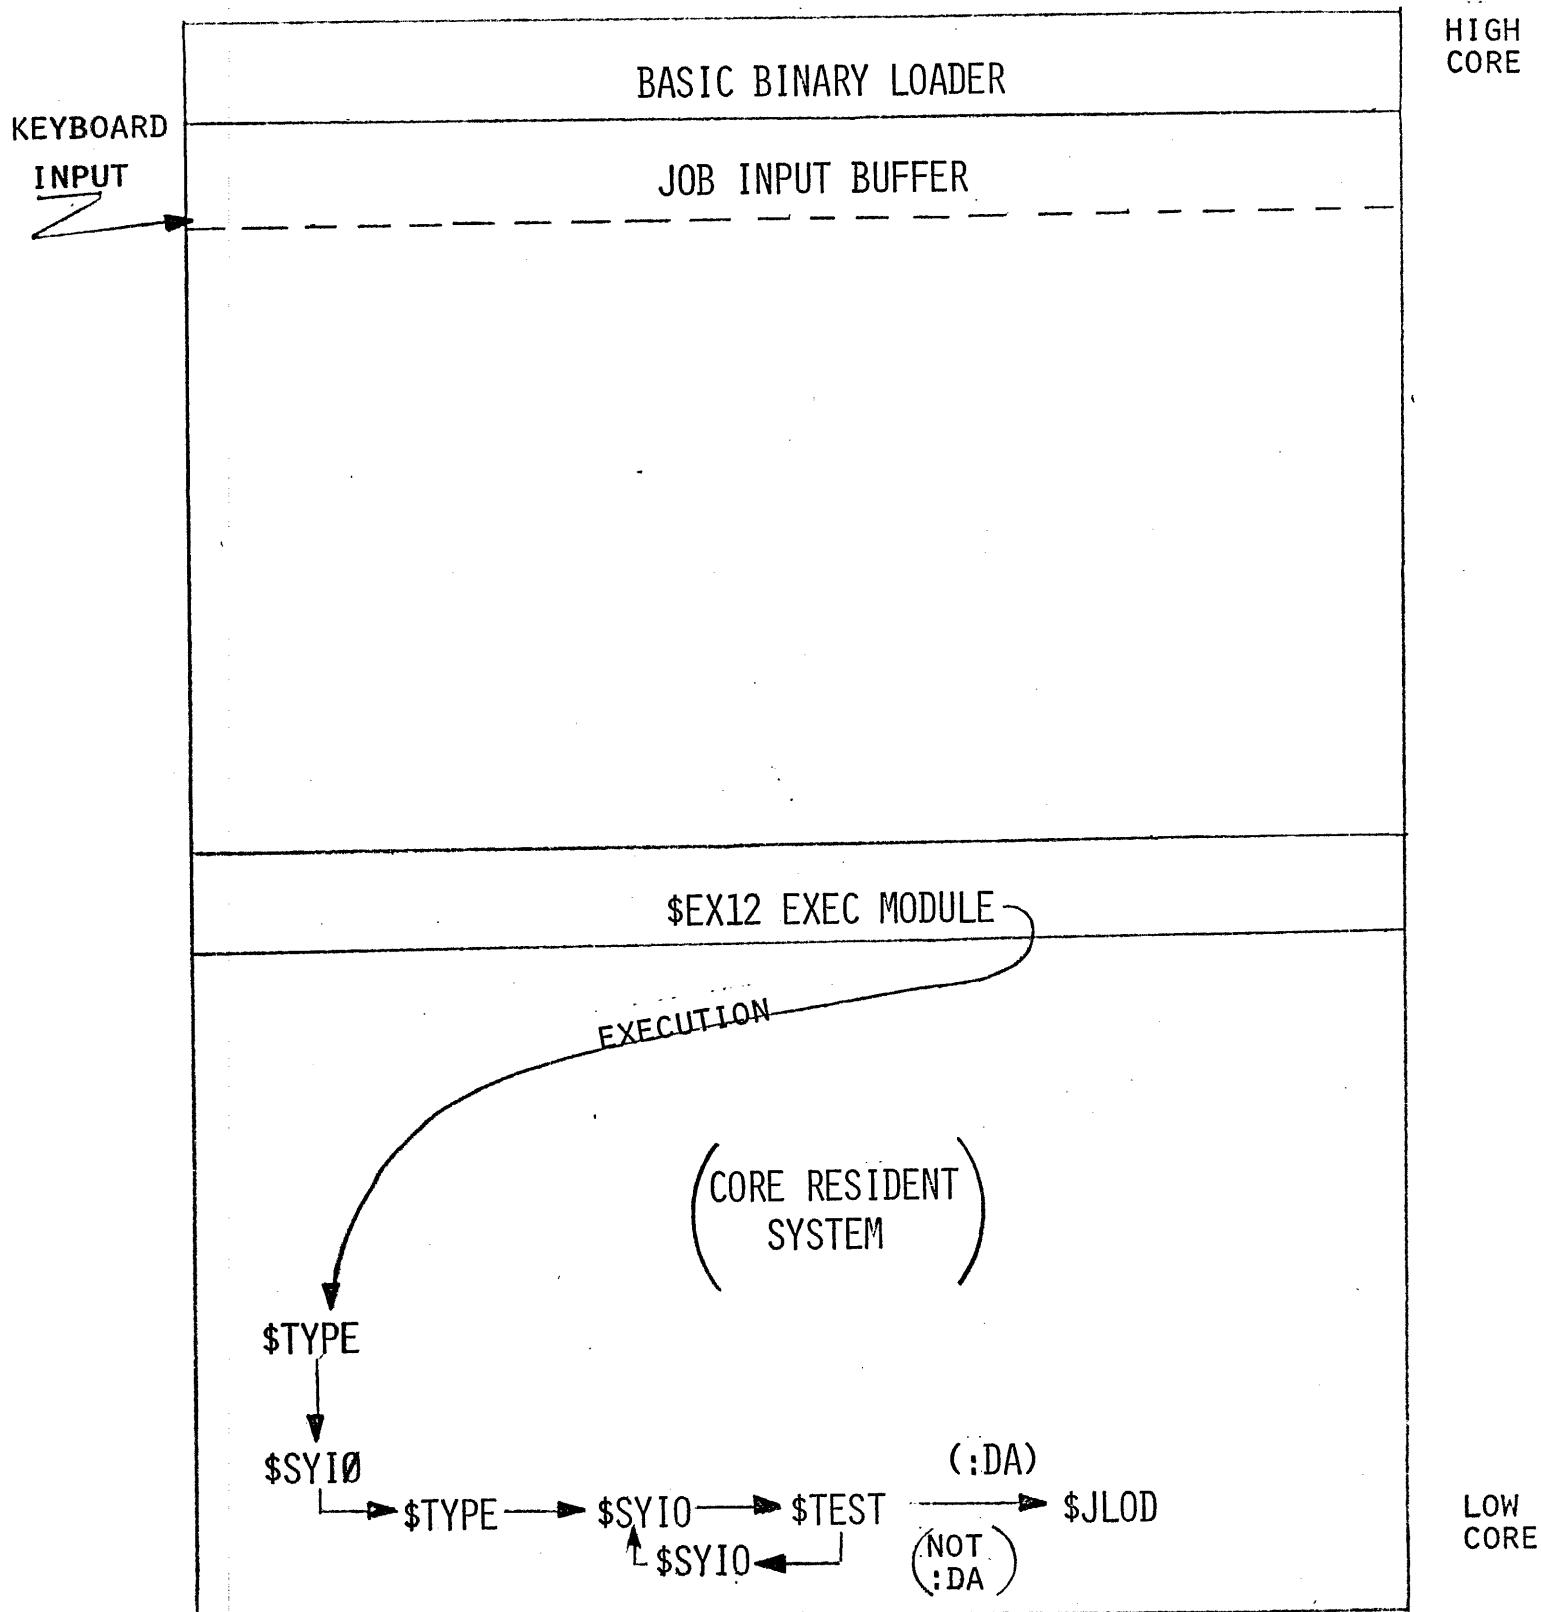


SYSTEM STARTUP (PART 6)  
(EXECUTION OF \$JLOD TO LOAD JOB PROCESSOR)

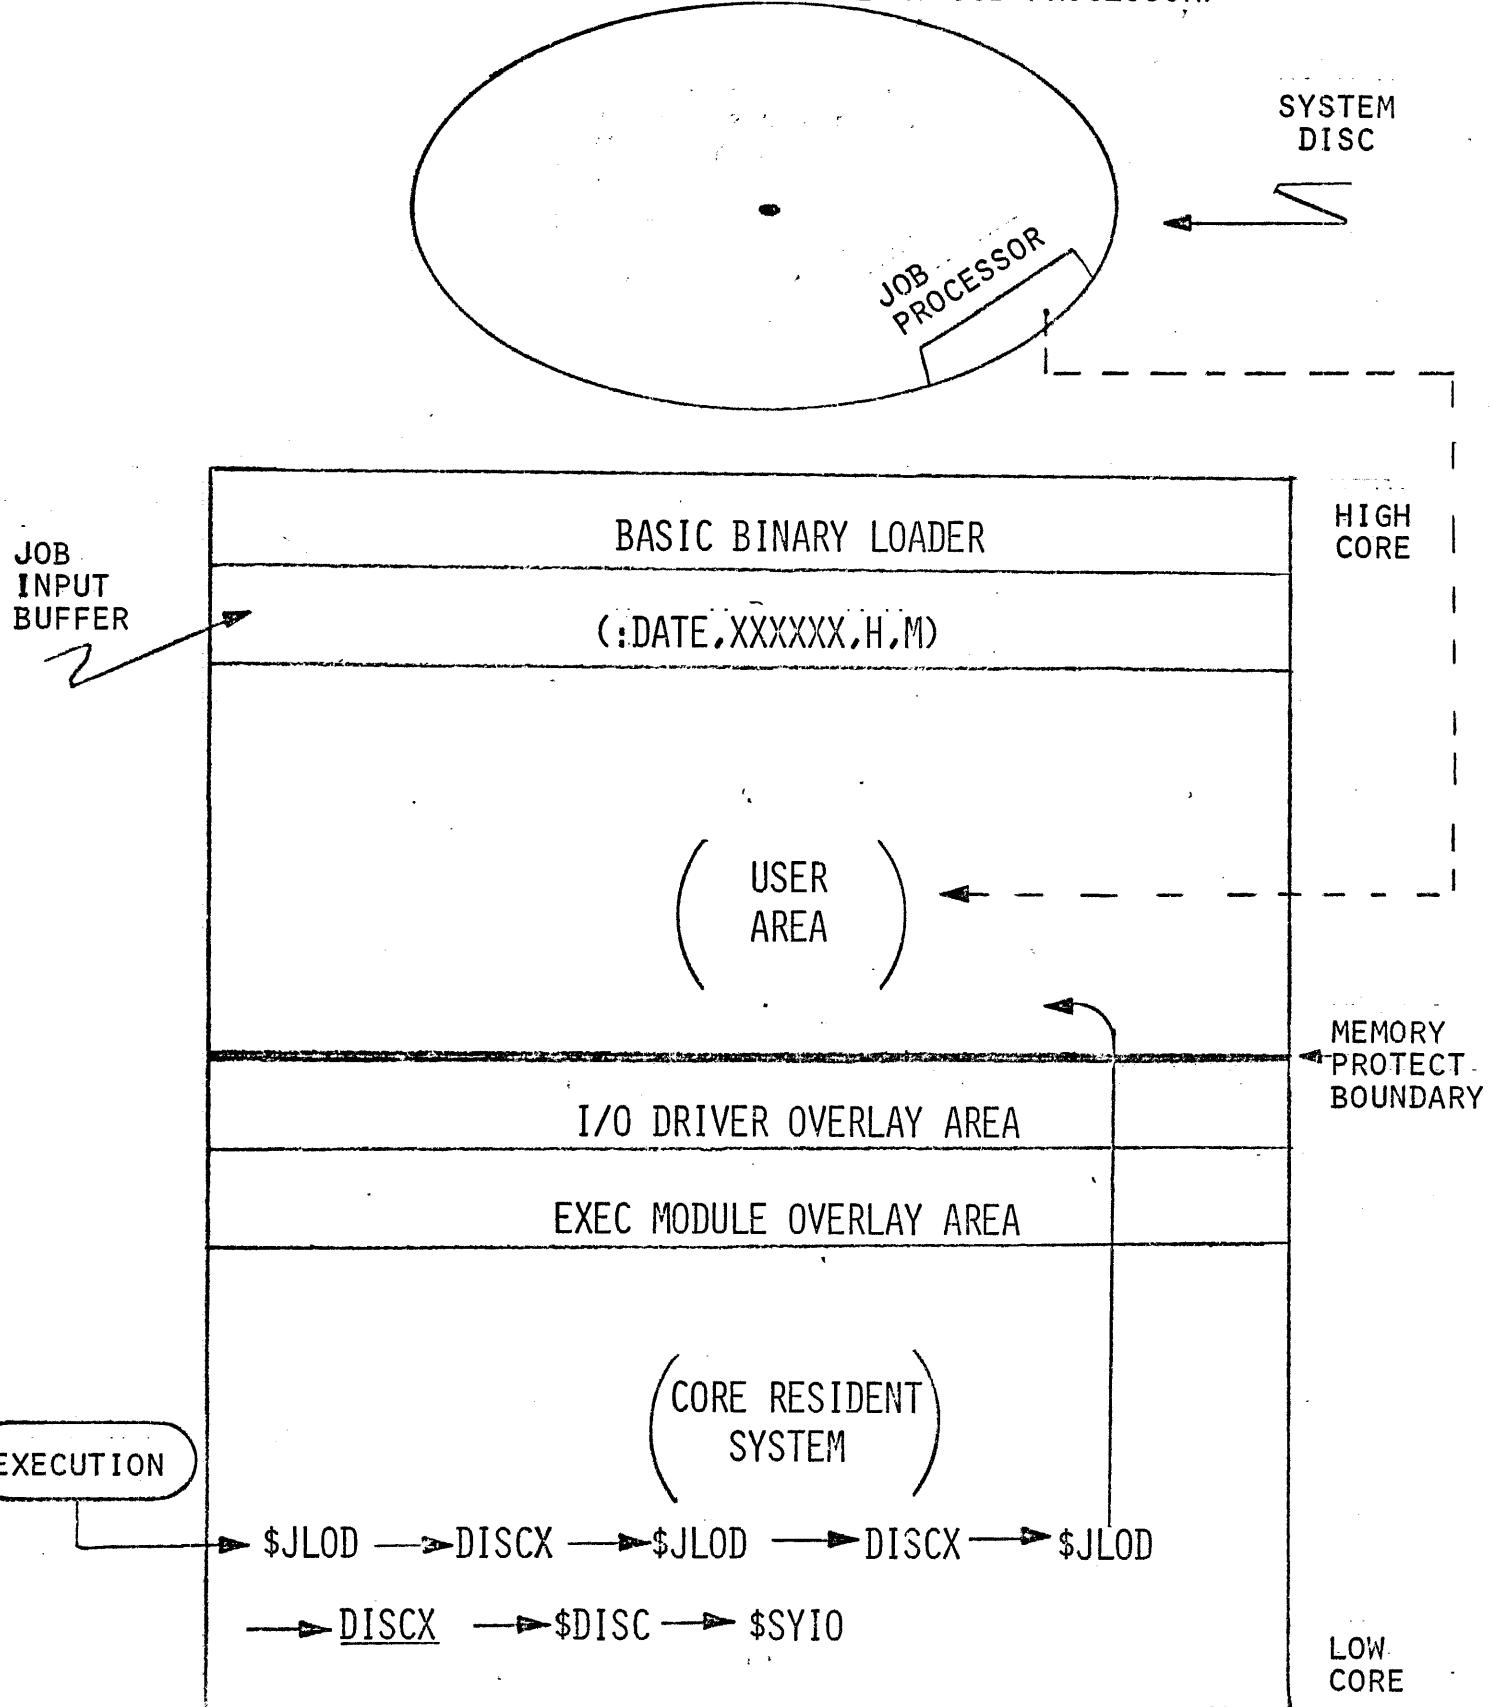

SYSTEM STARTUP (PART 7)  
(EXECUTION OF JOBPR TO UPDATE SYSTEM BUFFER SECTOR)

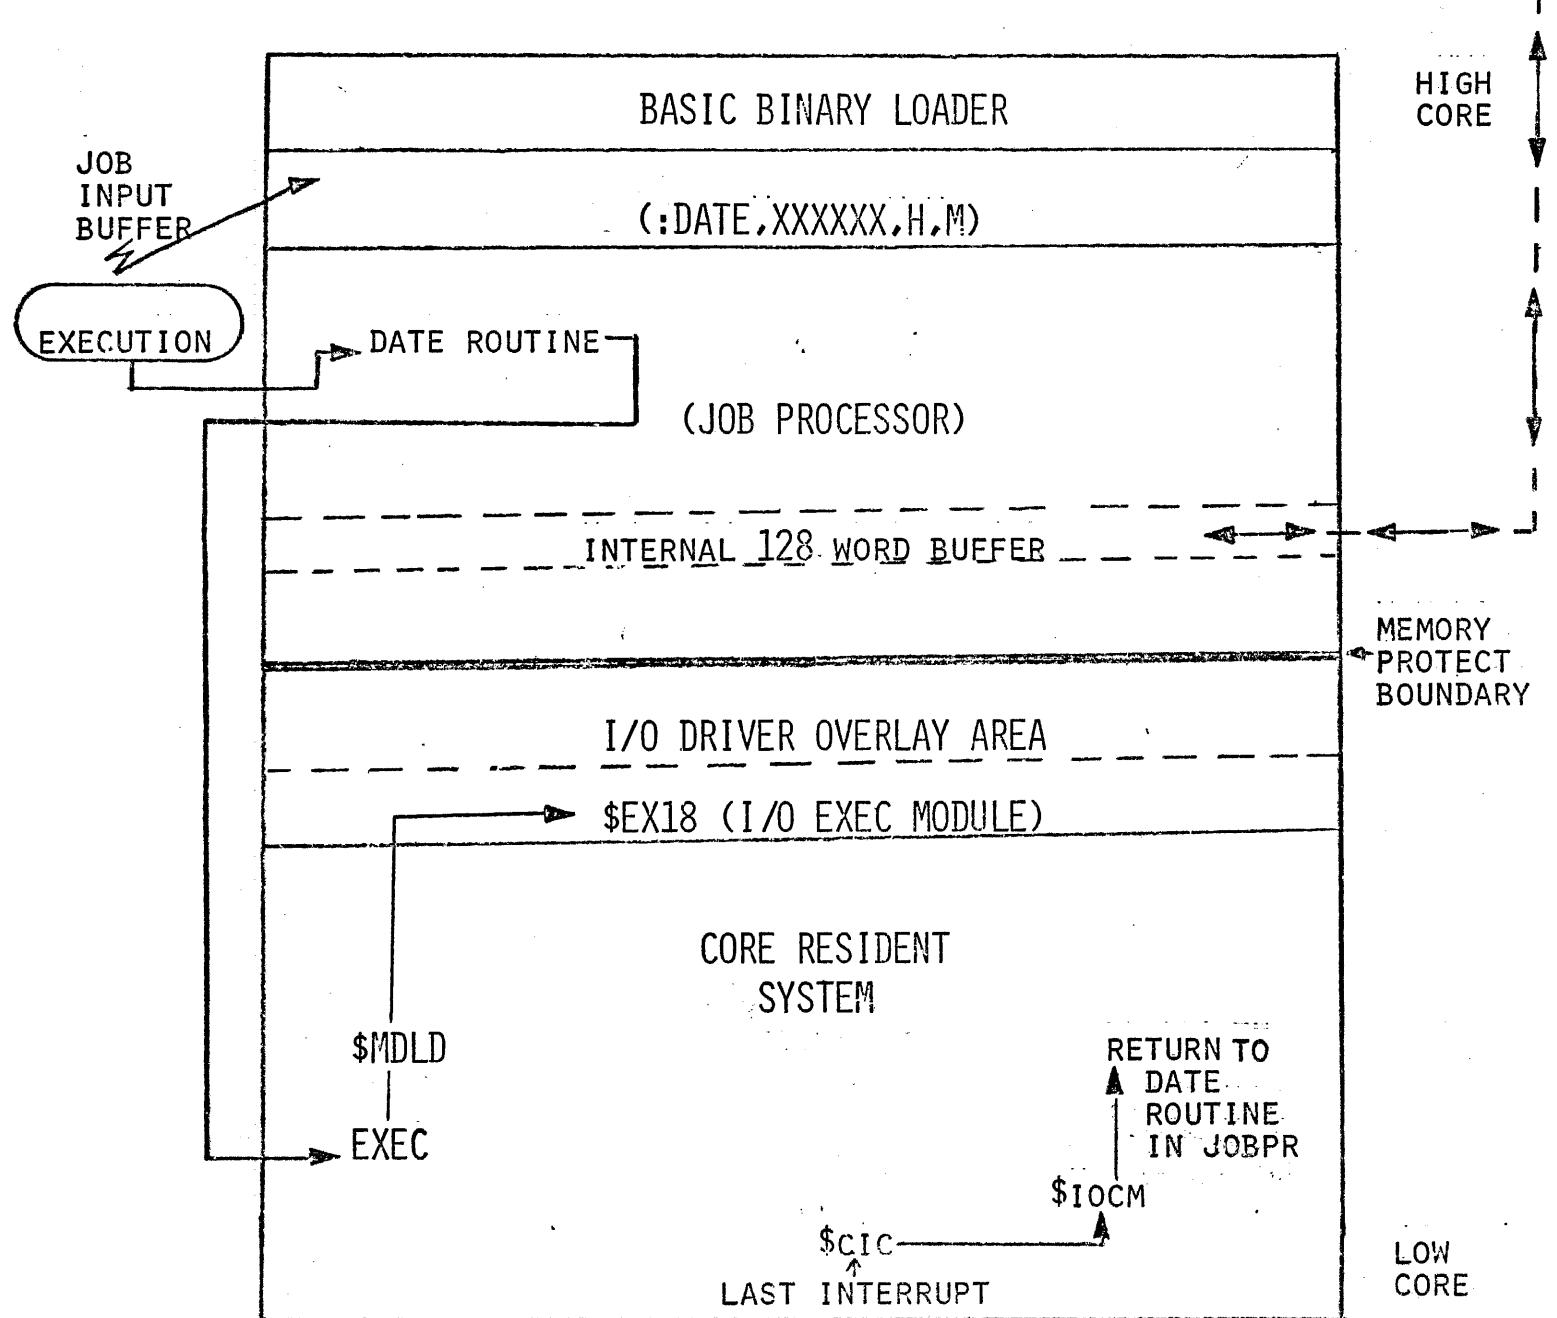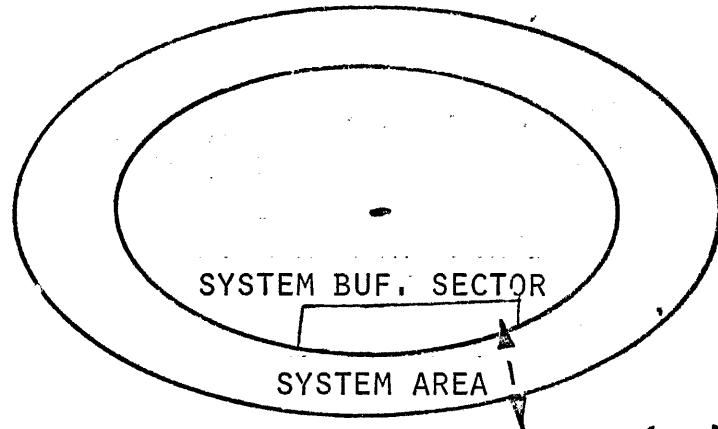

SYSTEM STARTUP (PART 8)  
(REPORTING OF DEFAULT USER DISC SUBCHANNEL AND LABEL)

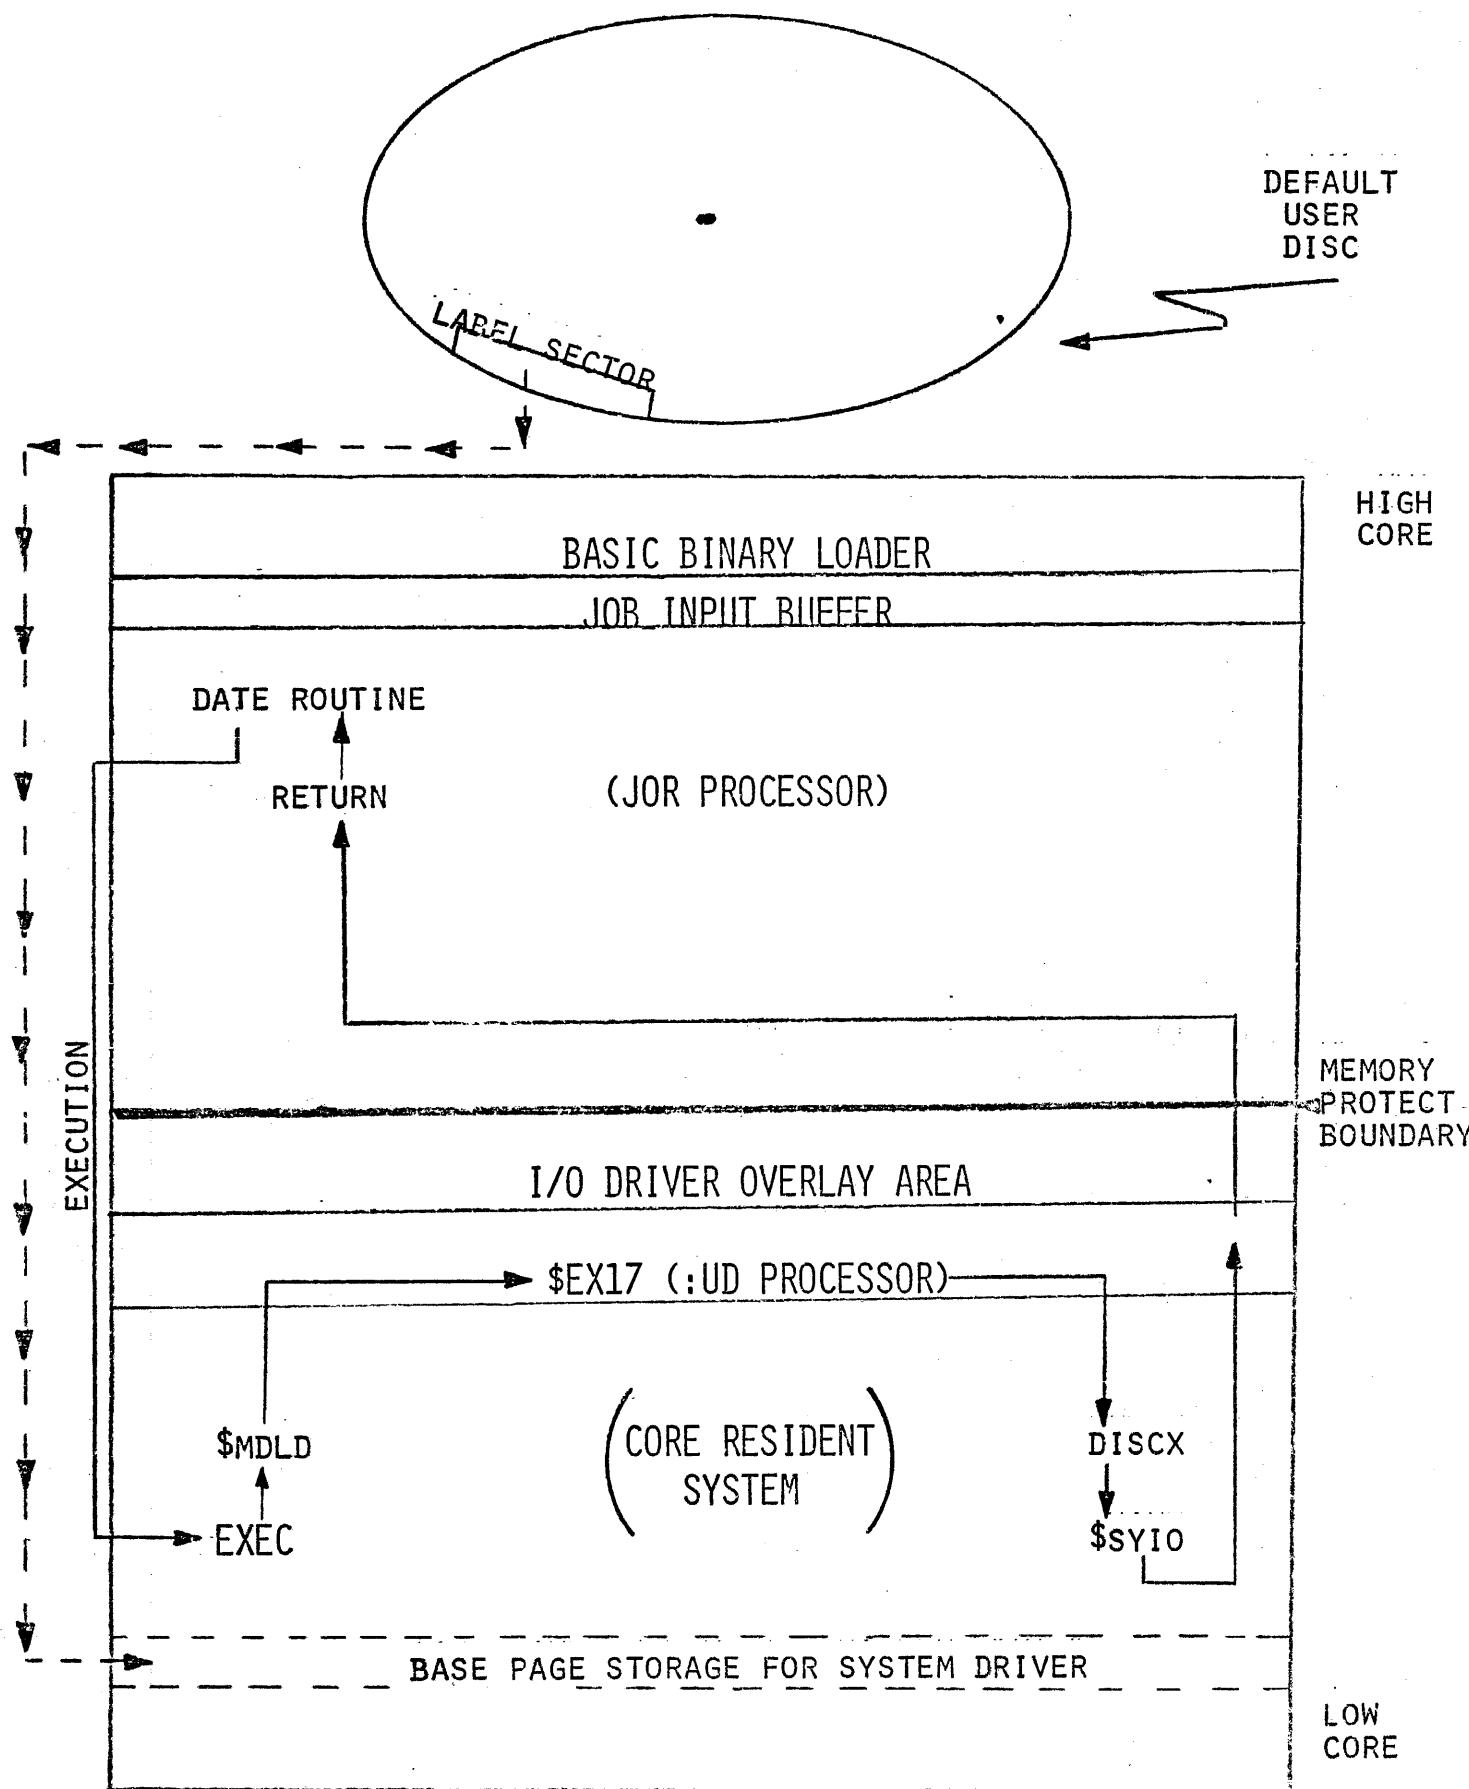

## II. OPERATIONAL DIFFERENCES FROM DOS

### A. System Startup

1. Bootstrap rather than BBDL (at X7760).
  - a. DOS procedure using BBDL.
  - b. DOSM procedure using Bootstrap [SLIDES 14A & 14B].
    - (1) Configure and execute.
    - or (2) Configure, punch configured bootstrap,  
load configured bootstrap.
  - c. No "FR" or "CO" entry statement as in DOS.


### B. NEW DIRECTIVES

1. :OFF [SLIDE 15].
    - a. Does not clear Job Binary Area.
  2. :IN [SLIDE 16A & 16B]
    - a. Can prepare discs for use in DOSM that were  
formatted by other software
    - b. DISC PROTECT OVERRIDE SWITCH must be "ON"  
to purge a protected Disc (PCI=1).
  3. :UD [SLIDES 17A, 17B].
  4. :DD [SLIDE 18].
    - a. No SDUMP with DOSM; do not need!
    - b. Source Disc for User Area is current user  
disc.
  5. :SS [SLIDES 19A, 19B].
    - a. Duplicate file handling
  6. Example Slides using the above directives.  
[SLIDES 20A, 20B, 20C].
- C. Operational Difference Summary [SLIDES 21A, 21B,  
21C, 21D].


### III. PROGRAMMING DIFFERENCES FROM DOS

- A. New EXEC call to change user disc [SLIDES 22A, 22B, 22C].
  - 1. :EJOB resets changes made.
  - 2. Error messages if incorrect SYSTEM GENERATION or SYSTEM PROPRIETARY CODE, but assignment still made.
- B. DOS/DOSM EXEC calls with negative request codes [SLIDE 23A].
- C. DOSM Disc I/O with EXEC calls [SLIDE 23B].
- D. EXEC calls difference summary [SLIDE 24].
- E. Other important points.
  - 1. If MP option not used the following are valid.
    - a. All I/O instructions and HALT
    - b. Base page modifications.
    - c. Special interaction with DISC MONITOR (DISCM).
  - 2. LOADR is unaffected by :SS condition. File searches it initiates are for only current user disc. Order of scanning is:
    - a. JOB BINARY (if any programs in it)
    - b. USER FILES (if any given)
    - c. PAPER TAPE (if specified)
    - d. DISC RESIDENT RELOCATABLE LIBRARY

BOOTSTRAPPING DOSM UP FROM DISC

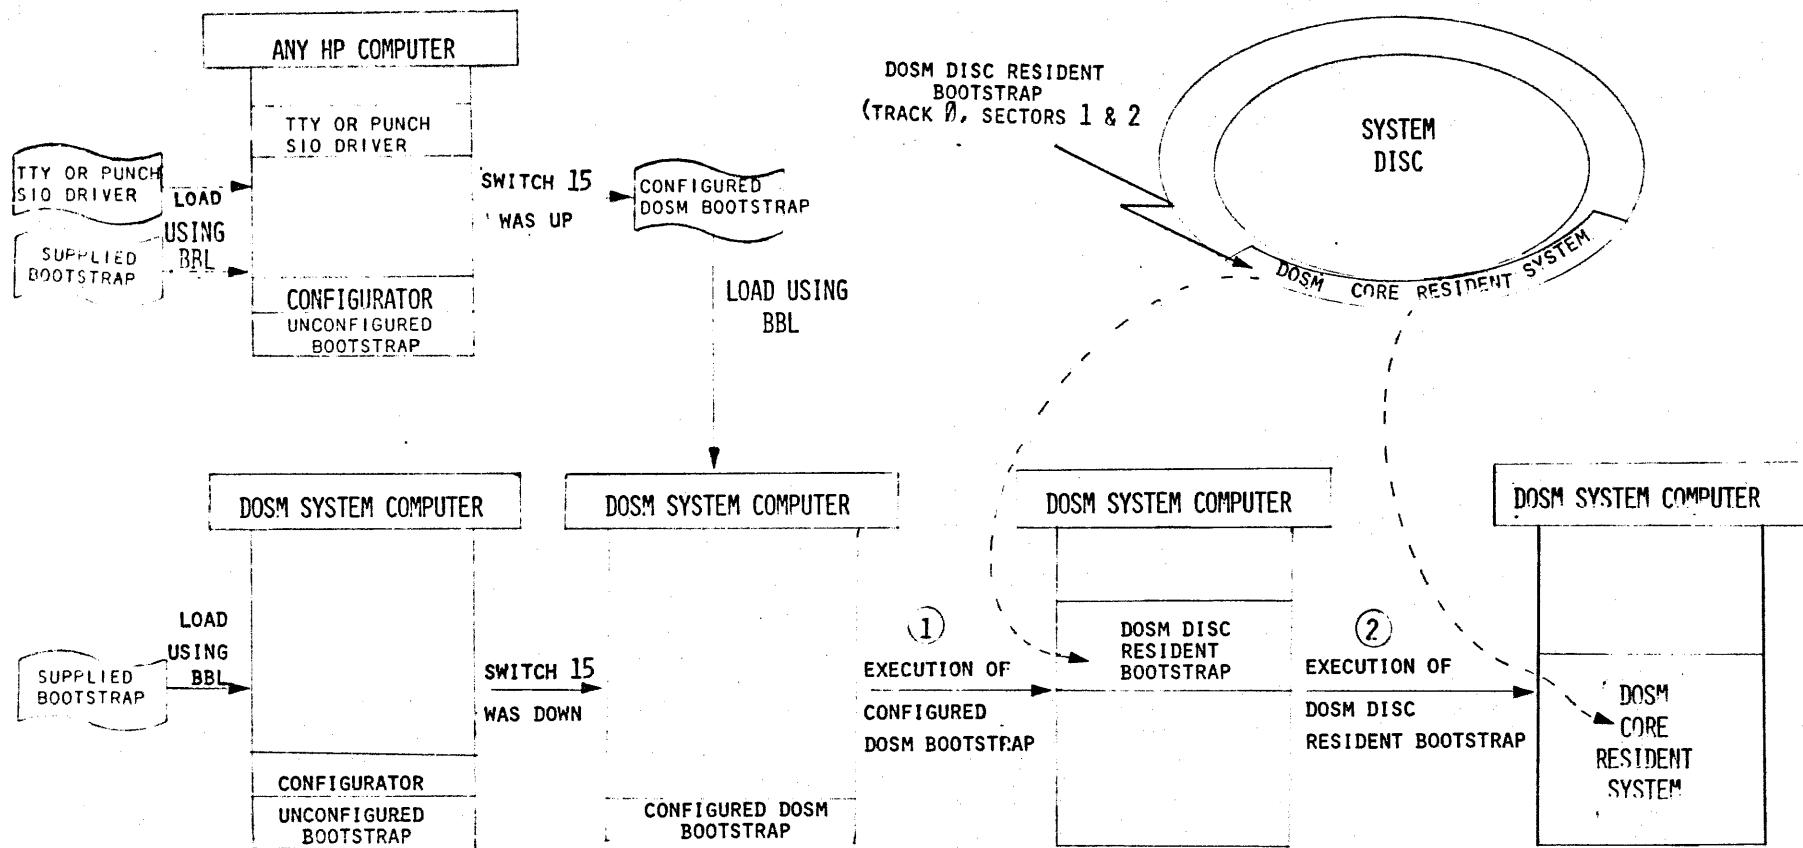

## DOSM SYSTEM START-UP

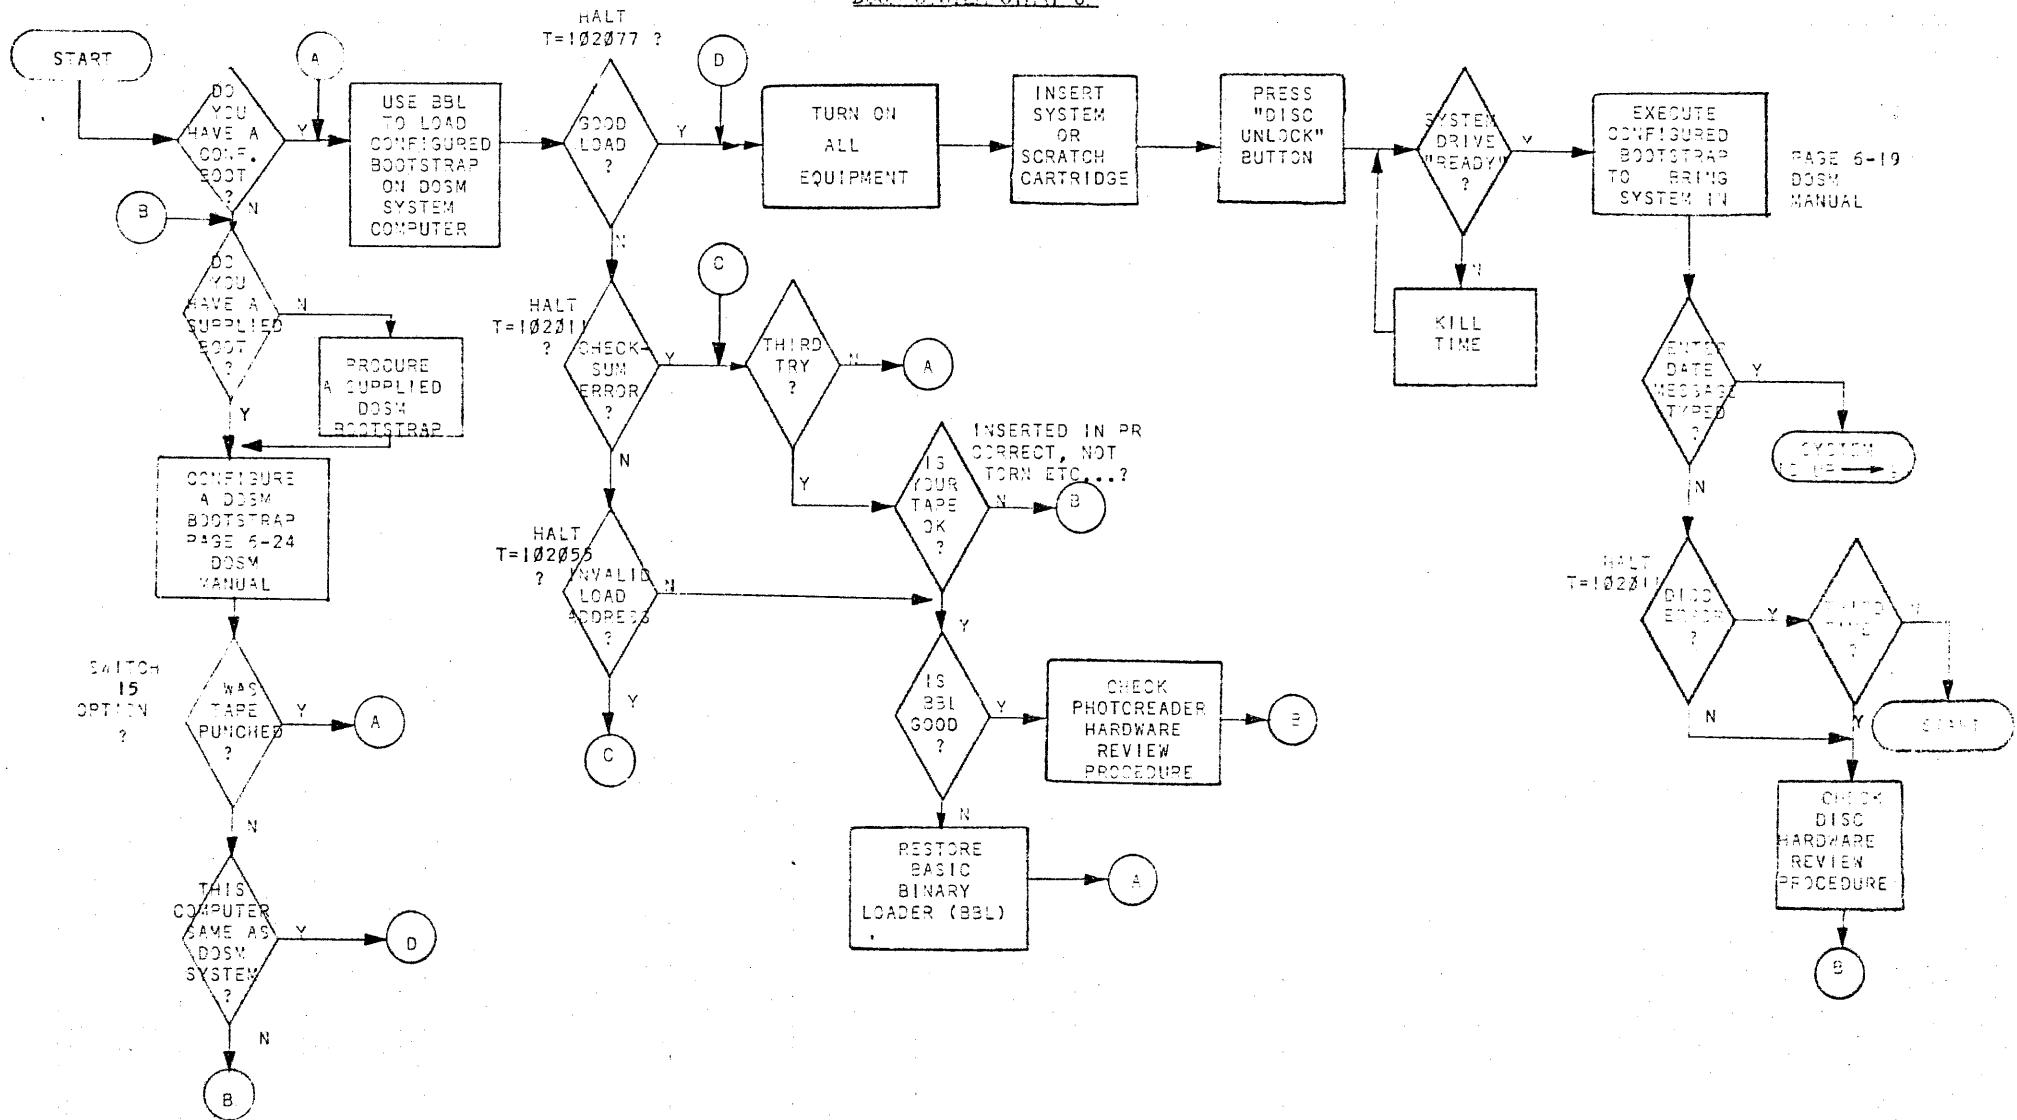

## OFF DIRECTIVE

PURPOSE: TO ABORT CURRENTLY EXECUTING USER PROGRAM OR SYSTEM OPERATION WITHOUT TERMINATING THE JOB.

FORMAT: :OFF

- NOTES:
1. RETURNS SYSTEM TO KEYBOARD MODE.
  2. CAN BE USED TO TERMINATE UNDESIRED LISTS, EDITS, DISC-TO-DISC DUMPS, PROGRAM LOOPS, LOADER OPERATIONS, ASSEMBLIES, AND COMPILENTIONS.
  3. CANCELS ANY :DD, :AD, OR :PD DIRECTIVES, UNLESS A PROGRAM IS RUNNING, IN WHICH CASE A PENDING :AD IS EXECUTED.
  4. MUST NEVER BE GIVEN DURING A PURGE (:PURGE DIRECTIVE) OR FOLLOWING /E IN AN EDIT LIST.

## INITIALIZE DIRECTIVE

PURPOSE: TO LABEL OR UNLABEL THE CURRENT USER DISC.

FORMAT: :IN,LABEL

WHERE THE LABEL IS A SIX-CHARACTER NAME TO BE WRITTEN IN WORDS 4-6 OF THE LABEL SECTOR ON THE CURRENT USER DISC. A "\*" IS ENTERED TO UNLABEL THE DISC. THE FIRST LETTER OF LABEL MUST NOT BE "CONTROL@".

NOTES: 1. IF THE CURRENT USER DISC IS ALREADY LABELED, DOSM PRINTS THE FOLLOWING MESSAGE:

{TSB}  
DOS  
???

LABEL XXXXXX (WHERE XXXXXX IS EXISTING LABEL)

OK TO PURGE?

THE OPERATOR THEN ANSWERS "YES" OR "NO".

2. :IN,\* EXECUTION PURGES ALL FILES ON THE CURRENT USER DISC AS FOLLOWS BELOW:

- A. LABEL PRESENCE CODE SET = Ø.
- B. FIRST AVAILABLE TK/SEC SET TO START OF USER AREA (IF USER DISC) OR START OF SYSTEM DIRECTORY TRACK +1 (IF SYSTEM DISC).
- C. SETS FIRST WORD IN DIRECTORY = Ø TO INDICATE END-OF-DIRECTORY.
- D. \* SET IN FIRST CHARACTER OF LABEL FIELD.
- E. SETS SYSTEM GENERATION CODE AND PROPRIETARY CODE = TO THAT ON SYSTEM LABEL SECTOR.
- F. GENERATES NEW CHECKSUM.

INITIALIZE DIRECTIVE - NOTES CONTINUED:

3. :IN, NEWLB PURGES UNPROTECTED SYSTEM AND MOVES ANY USER FILES DOWN TO LOW DISC IF THE CURRENT USER DISC IS LABELED "SYSTEM" AND IS NOT HARDWARE PROTECTED (I.E., IT WAS CREATED WITH :DD,X DIRECTIVE).
4. SYSTEM GENERATION CODE AND SYSTEM PROPRIETARY CODE ARE SET EQUAL TO THOSE IN THE CURRENT SYSTEM.

[SLIDE 16B]

## CHANGE USER DISC DIRECTIVE (PART 1)

PURPOSE: TO CHANGE SUBCHANNEL ASSIGNMENT FOR THE CURRENT USER DISC.

FORMAT: :UD [, [LABEL] [, N]]  
WHERE LABEL IS A SIX-CHARACTER LABEL OR  
\*IF UNLABELED DISC.  
AND N IS THE SUBCHANNEL NUMBER.

NOTES: 1. SIX BASIC FORMS ARE POSSIBLE (PART 2).

2. IF THE DISC ON SUBCHANNEL #N HAS  
A SYSTEM PROPRIETARY CODE NOT EQUAL  
TO "DO", THE ASSIGNMENT IS STILL MADE  
AND THE SYSTEM PRINTS THE FOLLOWING:

{TSB  
{??? } DISC

3. IF THE DISC ON SUBCHANNEL #N HAS  
A SYSTEM GENERATION CODE NOT EQUAL  
TO THAT OF THE CURRENT SYSTEM, THE  
ASSIGNMENT IS STILL MADE AND THE SYSTEM  
PRINTS THE FOLLOWING:

DISC GEN CODE XXXX NOT SYS GEN CODE YYY ERR POSS

4. USER DISC SUBCHANNEL ASSIGNMENTS MADE  
BY THIS DIRECTIVE ARE ONLY TEMPORARY;  
THE USER DISC SUBCHANNEL ASSIGNMENT IS  
RESET TO THAT SPECIFIED DURING SYSTEM  
GENERATION AT THE END OF EACH JOB.

5. USED IMMEDIATELY FOLLOWING :DD (DISC DUMP)  
DIRECTIVE TO SPECIFY DESTINATION DISC.

## CHANGE USER DISC DIRECTIVE (PART 2)

EXAMPLE	ACTION
:UD (WITHOUT LABEL OR SUBCHANNEL)	INTERROGATES THE CURRENT USER DISC SUBCHANNEL AND PRINTS ITS LABEL ON THE SYSTEM TELEPRINTER: SUBCHAN = n LBL = label (or UNLBL)
:UD,,n (NO LABEL)	IF n IS LABELED, DOS-M PRINTS: LBL = label (OR UNLBL) No ASSIGNMENT IS MADE.
:UD,label (NO SUBCHANNEL)	DOS-M SEARCHES FOR THE label, STARTING WITH THE HIGHEST NUMBER SUBCHANNEL (DETERMINED AT SYSTEM GENERATION). IF label IS FOUND, DOS-M MAKES IT THE USER DISC AND PRINTS: SUBCHAN = n IF label IS NOT FOUND, DOS-M PRINTS: DISC NOT ON SYS
:UD,label,n	IF n IS LABELED WITH THE SPECIFIED label, DOS-M ASSIGNS n AS THE USER DISC. IF n IS UNLABELED OR HAS A DIFFERENT label, DOS-M PRINTS: LBL = label (OR UNLBL) OPERATOR CAN THEN REISSUE :UD,label,n WITH THE CORRECT LABEL.
:UD,*,n	IF n IS UNLABELED, DOS-M ASSIGNS n AS THE USER DISC. IF n IS LABELED, DOS-M MAKES NO ASSIGNMENT AND PRINTS: LBL = label
:UD,*	ASSIGNS THE HIGHEST NUMBER UNLABELED DISC AS THE USER DISC AND PRINTS: SUBCHAN = n IF THERE ARE NO UNLABELED DISC, DOS-M PRINTS: DISC NOT ON SYS

## DISC-TO-DISC DUMP DIRECTIVE

PURPOSE: TO DUMP ONTO ANOTHER SUBCHANNEL

1. AN ENTIRE DISC USING :DD
2. THE SYSTEM AREA (INCLUDING SYSTEM BUFFER) USING :DD,X.
3. ALL OR SPECIFIED FILES OF THE USER AREA (OPTIONALLY ASSIGNING SOME NEW FILE NAMES) USING

:DD,U[X,FILE 1 [(FILE A)],FILE 2[(FILE B)],...]

WHERE X SPECIFIES THE SYSTEM AREA

U SPECIFIES THE USER AREA

FILE 1, FILE 2, ... SPECIFY THE FILES TO BE  
DUMPED

FILE A, FILE B, ... SPECIFY THE OPTIONAL NEW  
NAMES FOR FILE 1, FILE 2, ...

NOTES:

- A. RENAMED FILES MAY BE INTERMIXED WITH UNCHANGED FILES IN 3. ABOVE.
- B. THE DESTINATION DISC MUST BE SPECIFIED BY THE :UD DIRECTIVE IMMEDIATELY FOLLOWING THE :DD DIRECTIVE. FOR :DD,:DD,X THE FOLLOWING :UD DIRECTIVE MUST BE :UD,\*,n WHERE n IS NOT THE SYSTEM Disc.
- C. WHEN THE DESTINATION DISC FOR A :DD,U IS A SYSTEM Disc (OTHER THAN CURRENT SYSTEM), THE USER FILES ARE DUMPED IN THE USER AREA FOLLOWING THE SYSTEM FILES.
- D. IF FILES OF THE SOURCE DISC WILL NOT COMPLETELY FIT ON THE DESTINATION DISC, THE SYSTEM WILL TRANSFER AS MANY WHOLE FILES AS POSSIBLE AND PRINT: TRAC # TOO BIG.

## SYSTEM SEARCH DIRECTIVE (PART 1)

PURPOSE: TO SPECIFY A LIST OF DISC SUBCHANNELS TO BE SEARCHED BY SYSTEM FOR FILE NAMES OTHER THAN THE CURRENT USER DISC.

FORMATS: :SS

ALL ACTIVE SUBCHANNELS ARE SEARCHED IN THE FOLLOWING ORDER:

1. CURRENT USER DISC SUBCHANNEL
  2. HIGHEST ACTIVE SUBCHANNEL IN SYSTEM
  3. Next HIGHEST ACTIVE SUBCHANNEL IN SYSTEM
- !            !  
!            !  
!            !

LOWEST ACTIVE SUBCHANNEL IN SYSTEM

:SS,N1,N2,N3,...

ALL ACTIVE SUBCHANNELS (WITHIN N1,N2,N3,...LIST)  
ARE SEARCHED IN THE FOLLOWING ORDER:

1. CURRENT USER DISC SUBCHANNEL
  2. LOWEST NUMBERED ACTIVE SUBCHANNEL SPECIFIED  
IN N1,N2,N3,...LIST.
  3. Next LOWEST NUMBERED ACTIVE SUBCHANNEL  
SPECIFIED IN N1,N2,N3,...LIST.
- !            !  
!            !  
!            !

HIGHEST NUMBERED ACTIVE SUBCHANNEL SPECIFIED  
IN N1,N2,N3,...LIST.

:SS,99

ONLY THE CURRENT USER DISC SUBCHANNEL IS SEARCHED. THIS  
IS THE DEFAULT CONDITION. EVERY JOB STARTS OUT IN THIS  
CONDITION.

## SYSTEM SEARCH DIRECTIVE (PART 2)

### NOTES:

1. THIS IS AN OPTIONAL DIRECTIVE VALID ONLY IF "YES" WAS RESPONSE TO ALLOW :SS? QUESTION DURING SYSTEM GENERATION.
2. THE :SS CONDITION SET APPLIES TO ALL EXEC CALLS AND DIRECTIVES THAT REQUIRE A FILE SEARCH.
3. CURRENT USER DISC SUBCHANNEL NUMBER IS CHANGED TO THE SUBCHANNEL CONTAINING THE FILE THAT INITIATED THE FILE SEARCH. THIS IS REPORTED BY SYSTEM EACH TIME IT CHANGES WITH TTY PRINTOUT, SUBCHAN = n IF THE JOB PROCESSOR IS IN CORE (I.E., NO OTHER USER PROGRAM EXECUTING).
4. IF SEARCH DOES NOT FIND THE DESIRED FILE, THE CURRENT USER DISC SUBCHANNEL NUMBER IS RESTORED TO ITS VALUE BEFORE SEARCH.
5. IF SEARCH IS INTERRUPTED BEFORE COMPLETION, THE CURRENT USER DISC SUBCHANNEL NUMBER WILL BE ON WHATEVER SUBCHANNEL NUMBER THE SYSTEM WAS SEARCHING WHEN INTERRUPTION OCCURRED.
6. :LIST,U DIRECTIVE DOES NOT STOP ON DUPLICATE FILE NAMES, BUT CONTINUES SEARCHING AND PRINTING USER DIRECTORY. AT COMPLETION, THE CURRENT USER DISC SUBCHANNEL IS RESTORED TO NUMBER BEFORE THIS DIRECTIVE ENTERED.
7. MORE THAN ONE :SS CONDITION MAY BE SET DURING A JOB. EACH ONE SET REMAINS IN EFFECT UNTIL A NEW ONE IS ENTERED OR THE JOB IS ENDED.
8. :SS CONDITIONS SET ARE NOT FOLLOWED BY RELOCATING LOADER (LOADR) OR TO DISC DUMPS INITIATED BY :DD DIRECTIVE.

:UD, :DD, :OFF, :SS, :IN DIRECTIVE EXAMPLE

Brought up System from PACK

INPUT :DATE,XXXXXXXXXX,H,M

→ @:DA,19.OCT.70,14,0  
SUBCHAN=1  
LBL=QQQQQ > System reports default User Disc Subchannel =  
2nd Label

→ :JOB,EXMP1  
JOB EXMP1 19.OCT.70 TIME=0840 MIN. 13.4 SECS.  
@

→ :UD  
SUBCHAN=1  
LBL=QQQQQ  
@ Declared entire Disc to Disc dump

→ :DD ← Declared mind - bailed out of DD condition

→ :OFF ← Changed mind - bailed out of DD condition

→ :DD,X ← Declared System Area Only Disc dump

→ :DD,\* ← Declared Fixed Disc as destination disc

→ :UD,\*,0 ← Declared Fixed Disc as destination disc  
LBL=SYSTEM  
DISC GEN CODE 1013 NOT SYS GEN CODE 9000 ERR POSS  
RE-ENTER STATEMENT ON TTY.  
@

→ :UD  
MISSING PARAMETER  
RE-ENTER STATEMENT ON TTY. > System still waiting for  
destination Disc

→ :OFF ← Bailed out of DD,X Condition

→ :UD  
SUBCHAN=1  
LBL=QQQQQ  
@

→ :UD,SYSTEM,0 ← Changed Current User Disc to Fixed Disc  
DISC GEN CODE 1013 NOT SYS GEN CODE 9000 ERR POSS  
@

→ :UD ← Checked to see if assignment was made  
SUBCHAN=0  
LBL=SYSTEM > YES !  
DISC GEN CODE 1013 NOT SYS GEN CODE 9000 ERR POSS  
@

→ :IN,\* ← Entry to unlabeled the Fixed Disc

DOS LABEL SYSTEM  
OK TO PURGE?

→ YES ← Told system to purge "SYSTEM" label, Gen. Code

→ :UD  
SUBCHAN=0  
UNLBL > Now System has unlabeled Fixed Disc  
@

→ :UD,QQQQQ,1 Reassigned PACK as current user Disc  
 @  
 → :UD checked to make sure assignment made  
 SUBCHAN=1  
 LBL=QQQQQ  
 @  
 → :DD,X Declared System area only Disc dump  
 @  
 → :UD,\*,@ Declared Destination Disc  
 @  
 → :UD  
 SUBCHAN=0  
 LBL=SYSTEM  
 @  
 → :UD,,0 checked Label on Subchannel # ≠ (fixed Disc)  
 LBL=SYSTEM  
 @  
 → :UD  
 SUBCHAN=0  
 LBL=SYSTEM  
 @  
 → :LI,U Incorrect Statement Entered  
 MISSING PARAMETER  
 RE-ENTER STATEMENT ON TTY.  
 @  
 → :LI,U,1 List User Directory  
 NAME TYPE SCTRS DISC ORG PROG LIMITS B.P. LIMITS ENTRY LIBR. P-BIT  
 SUBCHAN=0 NOTHING on Fixed Disc to be listed  
 @  
 → :SS Set System Search for all active subchannels  
 @  
 → :LI,U,1  
 NAME TYPE SCTRS DISC ORG PROG LIMITS B.P. LIMITS ENTRY LIBR. P-BIT  
 SUBCHAN=0  
 SUBCHAN=1  
 XREF UM 0013 T023 000 12000 14750 01002 01036 12000 14071  
 GET1 SS 0001 T023 013  
 WEOT UM 0002 T023 014 12000 12013 01002 01003 12000 12013  
 → \*:OFF Bailed out of long listing  
 @  
 → :SS,99 Reset default System Search  
 @  
 → :LI,U,1 List User Directory  
 NAME TYPE SCTRS DISC ORG PROG LIMITS B.P. LIMITS ENTRY LIBR. P-BIT  
 SUBCHAN=1  
 XREF UM 0013 T023 000 12000 14750 01002 01036 12000 14071  
 → \*:OFF Bailed out  
 @  
 → :UD  
 SUBCHAN=1  
 LBL=QQQQQ Note how Current user Disc is still I  
 @

SUBCHAN=1  
LBL=QQQQQ

@

→ :DD,U ← Declared User Area only Disc Dump

@

→ :UD,SYSTEM,0 ← Destination Disc

XREF

EOT1

WEOT

XREFR

D1SCM

EXECS

DVR05

DVR31

LIBRY

DVR02

DVR01

DVR22

LODR

JOBP

ASMBL

ASMD

ASM3

ASM4

ASM5

FRTN

FTN1

FTN2

FTN3

FTN4

ASM1

ASM2

SIO1

BASC1

BOOT

FTNH

EOF

FSPCE

RWIND

D.00S

TSRTS

TSRTR

CLEAR

@

→ :UD

SUBCHAN=0

LBL=SYSTEM

@

→ :LI,U,1 ← List user Directory

NAME	TYPE	SCTRS	DISC	ORG	PROG	LIMITS	B.P. LIMITS	ENTRY	LIBR.	P-BIT
SUBCHAN=0										
XREF	UM	0013	T024	000	12000	14750	01002	01036	12000	14071
EOT1	SS	0001	T024	013						
WEOT	UM	0002	T024	014	12000	12013	01002	01003	12000	12013

→ \*:ABORT ← Bailed out and aborted

JOB ABORTED!

END JOB EXMP1 RUN=0011 MIN. 52.2 SEC. EXEC=0000 MIN. 00.0 SEC.

System Reported Each User File Name  
Transferred as transfer done

OPERATIONAL DIFFERENCE SUMMARY (PART 1)

CONDITION	DOS	DOSM
SYSTEM START-UP	Outputs the following: INPUT FR = FRESH; CO = CONTINUATION	Does not output this message. Outputs INPUT :DATE,XXXXXXXXX,H,M (H and M are omitted if system does not have Time Base Generation)
:OFF Directive	Does not exit. Must use :ABORT to terminate the current job.	New Directive to abort without terminating current job.
:DD Directive	Does not exist. SDUMP program must be used to create backup copies on Mag. Tape	New Directive to perform disc to disc dumps. Backup copy may be put on cartridge disc.
:SS Directive	Does not exist.	New Directive to enable multi-disc file searching.
:IN Directive	Does not exist. Discs are not labeled.	New Directive to label or unlabel discs.
:UD Directive	Does not exist.	New Directive to change current user disc.
System Recognition of Operator Attention by outputting *	Following are valid entries at this time: :ABORT, :DN, :EQ, :LU, :TYPE, :UP	Following are valid entries at this time: :OFF, :PAUSE, :ABORT, :DN, :EQ, :LU, :TYPE, :UP
:JOB Directive	Current time is always printed on the System Teleprinter and List device along with the job name and date. TBG is System requirement.	Current Time is only printed on the system Teleprinter and list device when Time Base Generator is in system. TBG is an option.

OPERATIONAL DIFFERENCE SUMMARY (PART 2)

CONDITION	DOS	DOSM
:EJOB Directive	Not Applicable	System resets :SS condition to be only standard user disc.
	System condenses User file. Only one User File Area.	System condenses all user discs following :SS condition.
	Not Applicable	User Disc subchannel assignment reset to standard subchannel # unless standard is "NOT READY" or new cartridge has been inserted with different label.
	Message is printed on System Teletypewriter and standard List device with job name, execution and run times. TBG is a System Requirement.	Execution and Run times are not printed if the Time Base Generator is not in the system. TBG is optional.
:PROG Directive	Not Applicable Only one user area in system.	File Search for program specified follows :SS condition. User files are searched first, then system files.
:RUN Directive	Optional "time parameter" always used. TBG is System requirement.	"Time parameter" is ignored if Time Base Generator is not in system. TBG is optional.
	Not Applicable. Only one user area in system.	File search for <u>User</u> program follows :SS condition.

OPERATIONAL DIFFERENCE SUMMARY (PART 3)

CONDITION	DOS	DOSM
:TRACKS DIRECTIVE	REQUIRES THAT THE OPERATOR INFORM SYSTEM OF THE FAULTY TRACKS ON A FRESH START-UP FOLLOWING THE DATE DIRECTIVE.	DOES NOT INCLUDE THIS OPTION BECAUSE A RECORD IS MAINTAINED IN THE LABEL SECTOR ON EACH DISC FOR NUMBER OF FAULTY TRACKS, THE ADDRESS OF NEXT SPARE TRACK, ETC...
	REPORTS TRACK NUMBERS THAT ARE FAULTY.	REPORTS TOTAL NUMBER OF TRACKS THAT HAVE BEEN REPLACED BY SPARES.
:STORE DIRECTIVE	CHECKS USER AREA FOR DUPLICATE FILE NAMES.	CHECKS ALL ACTIVE SUBCHANNELS (ACCORDING TO :SS CONDITION) FOR DUPLICATE FILE NAME. STORE ACTUALLY DONE ON CURRENT USER DISC.
	ONE SECTOR = 64 WORDS	ONE SECTOR = 128 WORDS
:JFILE DIRECTIVE	SOURCE FILE SPECIFIED IS IN ONE USER AREA.	SOURCE FILE SPECIFIED MAY BE ON ANY ACTIVE SUBCHANNEL (ACCORDING TO :SS CONDITION).
:EDIT DIRECTIVE	SOURCE FILE SPECIFIED IS IN ONE USER AREA.	SOURCE FILE SPECIFIED MAY BE ON ANY ACTIVE SUBCHANNEL (ACCORDING TO :SS CONDITION).
	UPDATED OR NEW SOURCE FILE IS STORED IN ONLY ONE USER AREA.	IF NEW FILE NAME IS SPECIFIED, THIS FILE IS STORED ON SAME SUBCHANNEL AS OLD FILE.
:PURGE DIRECTIVE	FILES SPECIFIED ARE ONLY IN ONE USER	FILES SPECIFIED MAY BE ON ANY ACTIVE SUBCHANNEL (ACCORDING TO :SS CONDITION). ALL ASSOCIATED USER DISCS ARE REPACKED FOR EFFICIENCY. USE :IN,* TO PURGE ALL USER FILES ON A GIVEN USER DISC.

OPERATIONAL DIFFERENCE SUMMARY (PART 4)

CONDITION	DOS	DOSM
:LIST DIRECTIVE	DOSE NOT HAVE P-BIT FIELD FOR DIRECTORY LISTINGS.	HAS ALL FIELDS OF DOS WITH ADDITIONAL FIELD, P-BIT. ENTRY UNDER THIS FIELD WILL BE "T" TO INDICATE THAT THE ASSOCIATED FILE IS TEMPORARY AND WILL BE PURGED AT :EJOB IF NOT STORED WITH :STORE.
	USER DIRECTORY IS ONLY ON ONE DISC.	USER DIRECTORY LISTING HAS SUBCHANNEL NUMBERS PRECEDING USER FILES ON THAT SUBCHANNEL.
	NOT APPLICABLE	CURRENT USER DISC SUBCHANNEL NUMBER IS RESTORED FOLLOWING :LIST,U.
	SOURCE FILE SPECIFIED IS ON ONE USER AREA.	SOURCE FILE SPECIFIED MAY BE ON ANY ACTIVE SUBCHANNEL (ACCORDING TO :SS CONDITION).
:DUMP DIRECTIVE	USER FILES ONLY ON ONE DISC.	FILE SPECIFIED MAY BE ON ANY ACTIVE SUBCHANNEL (ACCORDING TO :SS CONDITION)
:SA OR :SO DIRECTIVES	CALLED DISC DUMP	CALLED SECTOR DUMP TO DISTINGUISH FROM :DD (DISC DUMP).
	DUMP IS TO SYSTEM TELEPRINTER (LU # 1)	DUMP IS TO STANDARD LIST DEVICE (LU #6).
	ANY PORTION OF DISC(S) ON SYSTEM MAY BE DUMPED.	DUMP ANY PORTION OF CURRENT USER DISC EVEN IF USER AREA IS ON SYSTEM DISC.
:DATE DIRECTIVE	HOURS AND MINUTES ENTRIES ARE ALWAYS MEANINGFUL. TBG IS SYSTEM REQUIREMENT	IF TIME BASE GENERATOR IS NOT PRESENT IN SYSTEM, HOURS AND MINUTES ARE SET TO ZERO.

## CHANGE USER DISC EXEC CALL

(GENERAL FORMAT)

### PURPOSE

To CHANGE THE SUBCHANNEL ASSIGNMENT FOR THE USER DISC.

### ASSEMBLY LANGUAGE

EXT EXEC

JSB EXEC	(TRANSFER CONTROL TO DOS-M)
DEF *+3 (OR 4)	(POINT OF RETURN FROM DOS-M)
DEF RCODE	(REQUEST CODE)
DEF LABEL	(DISC LABEL)
DEF SUBCH	(DISC SUBCHANNEL; OPTIONAL)
RETURN POINT	
RCODE DEC 23	(REQUEST CODE = 23)
LABEL ASC 3, xxxxxxx	(LABEL = xxxxxxx)
SUBCH DEC (0 TO 7)	

### FORTRAN

```
IRCDE = 23
DIMENSION LABEL (3)
LABEL (1) = xx
LABEL (2) = xx
LABEL (3) = xx
ICHNL = M      (0 THROUGH 7)
CALL EXEC (IRCDE, LABEL, ICHNL)
```

CHANGE USER DISC EXEC CALL -- FORM # 1  
 (LABEL AND SUBCHANNEL SPECIFIED)

CALLING SEQUENCE:

JSB EXEC	TRANSFER CONTROL TO EXEC
DEF *+4	DEFINE RETURN POINT
DEF RCODE	DEFINE REQUEST CODE LOCATION
DEF LABEL	DEFINE LABEL LOCATION
DEF SUBCH	DEFINE SUBCHANNEL LOCATION
(RETURN POINT)	

RCODE DEC 23	23 FOR REQUEST CODE
LABEL ASC 3,xxxxxx	6 CHARACTER DISC LABEL OR "/*"
SUBCH DEC N	N = 0-7 FOR SUBCHANNEL #

SYSTEM ACTION	OPERATOR ACTION
CHECKS IF SUBCHANNEL N IS LABELED AS SPECIFIED IN CALL (LABEL NAME OR "/*")	NONE REQUIRED
<u>MATCH</u> - MAKES ASSIGNMENT AND RETURNS	NONE REQUIRED
<u>No MATCH</u> - PRINTS MESSAGE: LBL = (LABEL NAME FOUND ON SUBCHANNEL N) OR UNLBL IF "/*" xxxxx SUSP WHERE xxxx IS NAME OF EXECUTING PROGRAM.	<ol style="list-style-type: none"> <li>1. <u>IF CORRECTLY LABELED DISC ON HAND:</u> MOUNT IN DRIVE AND "READY" DRIVE. THEN ENTER :GO FOR SYSTEM TO EXECUTE AT START OF EXEC CALL. <u>OR</u></li> <li>2. <u>IF NO PROPERLY LABELED DISC ON HAND:</u> ENTER :ABORT OR :OFF</li> </ol>

## CHANGE USER DISC EXEC CALL -- FORM # 2

(ONLY LABEL SPECIFIED)

### CALLING SEQUENCE:

JSB EXEC  
 DEF \*+3  
 DEF RCODE  
 DEF LABEL  
 (RETURN POINT)

TRANSFER CONTROL TO EXEC  
 DEFINE RETURN POINT  
 DEFINE REQUEST CODE LOCATION  
 DEFINE LABEL LOCATION

RCODE DEC 23  
 LABEL ASC 3,xxxxxx

23 FOR REQUEST CODE  
 6 CHARACTER LABEL OR "/\*"

SYSTEM ACTION	OPERATOR ACTION
SEARCHES FOR LABEL OR "/*" DISC STARTING WITH THE HIGHEST SUBCHANNEL NUMBER.	NONE REQUIRED
MATCH - MAKES ASSIGNMENT AND RETURNS	NONE REQUIRED
No MATCH - PRINTS MESSAGE: DISC NOT ON SYST xxxxx SUSP  WHERE xxxx IS NAME OF EXECUTING PROGRAM.	<ol style="list-style-type: none"> <li>1. <u>IF PROPERLY LABELED DISC ON HAND:</u> MOUNT IN DRIVE AND "READY" DRIVE. THEN ENTER :GO FOR SYSTEM TO EXECUTE AT START OF EXEC CALL. <u>OR</u></li> <li>2. <u>IF NO APPROPRIATELY LABELED DISC ON HAND:</u> ENTER: :ABORT OR :OFF</li> </ol>

DOS/DOSM GENERAL PURPOSE EXEC CALLS WITH NEGATIVE REQUEST CODES

REQUEST CODE	FUNCTION	CALLING SEQUENCE
-19	BASE PAGE STORE (STA B,I)	LDA "VALUE TO STORE" LDB "DESTINATION ADDRESS" JSB EXEC DEF *+2 DEF RCODE (RETURN WITH B = FORMER VALUE +1)  RCODE DEC - 19
-20	TO LOAD AND START EXECUTION OF A PROGRAM WHOSE DIRECTORY ENTRY IS IN LOCATIONS 141-153 OCTAL	STORE DIRECTORY ENTRY OF DESIRED PROGRAM IN LOCATIONS 141-153B JSB EXEC DEF *+2 DEF RCODE (RETURN)  RCODE DEC - 20
-21	TO INITIALIZE TBG (IF IN SYSTEM) FOR .1 SECOND TIMED INTERRUPTS	JSB EXEC DEF *+2 DEF RCODE (RETURN)  RCODE DEC - 21
-22	TO EXECUTE AN I/O INSTRUCTION	LDA "I/O INSTRUCTION" JSB EXEC DEF *+2 DEF RCODE (RETURN)  RCODE DEC - 22

DOSM DISC I/O WITH EXEC CALLS

(ABSOLUTE DISC ADDRESSING)

GENERAL CALLING SEQUENCE:

JSB EXEC (TRANSFER TO EXEC)  
 DEF RTN (DEFINE RETURN ADDRESS)  
 DEF RCODE (SEE BELOW)  
 DEF CNTLW (SEE BELOW)  
 ✓DEF BUFFR (DEFINE BUFFER ADDRESS)  
 DEF BUFFL (DEFINE BUFFER LENGTH)  
 - DEF TRCK (DEFINE TRACK #)  
 ✓DEF SECT (DEFINE SECTOR #)  
 RTN (RETURN POINT)

RCODE	CNTLW	DISC AREA ADDRESSED
+1 (READ) +2 (WRITE)	2	"WORK AREA" ON <u>SYSTEM DISC</u> ONLY. SYSTEM CHECKS FOR LEGALITY OF TRCK/SECT IN CALL.
	3	→ 3 → Avail. Area on CUD.
	2	"ANY AREA" ON <u>SYSTEM DISC</u> . SYSTEM DOES NOT CHECK FOR LEGALITY OF TRCK/SECT IN CALL.
-1 (READ) -2 (WRITE)	3	"ANY AREA" ON <u>CURRENT USER DISC</u> . SYSTEM DOES NOT CHECK FOR LEGALITY OF TRCK/SECT IN CALL.
	-3	"ANY AREA" ON <u>CURRENT JOB FILE</u> (JFILE) DISC. SYSTEM DOES NOT CHECK FOR LEGALITY OF TRCK/SECT IN CALL.

NOTE:

SYSTEM WILL HALT (WITH T-REG. = 102031 OCTAL)  
IF DISC PROTECT OVERRIDE SWITCH IS "OFF" (DOWN)  
AND REQUEST MADE TO WRITE ON A SECTOR THAN IS  
FLAGGED PROTECTED (PCI=1).

Map on NEG. REQUEST codes [Relative to disc]



R CODE = (+1, +2) [USER]

positive

when  $L_U = 2$  (Disc) or CNTCW

user may write or read WORK AREA on System Disc.

R CODE (-1, -2) [SYSTEM]

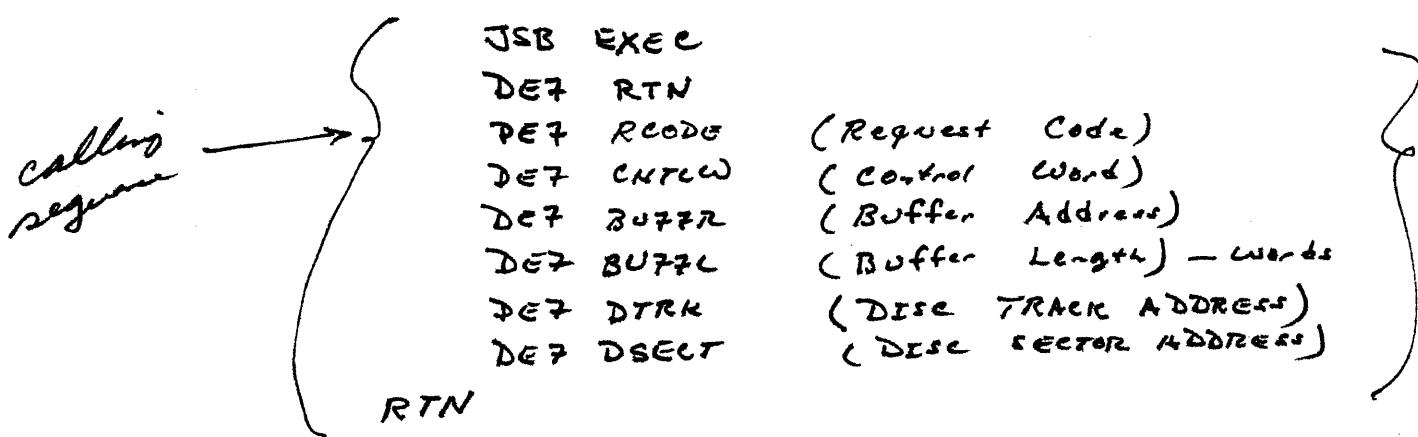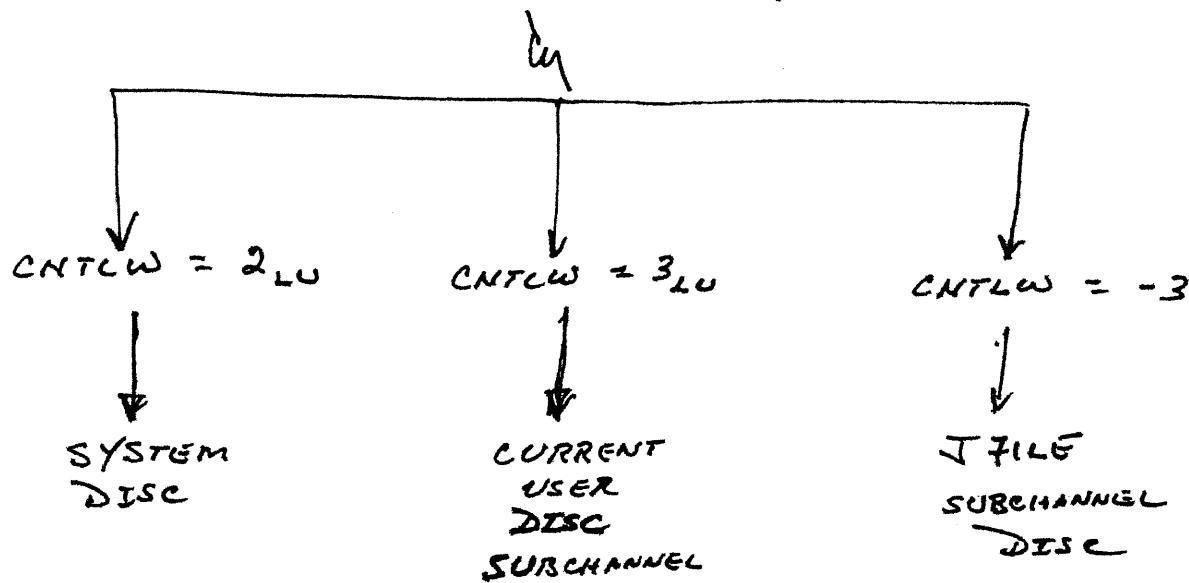

{ SLIDE 23B }

LARGE  
TYPE

## DOSM DISC I/O WITH EXEC CALLS

(ABSOLUTE DISC ADDRESSING)

### GENERAL CALLING SEQUENCE:

CENTER

JSB EXEC	(Transfer to EXEC)
DEF RTN	(Define Return Address)
DEF RCODE	(See Below)
DEF CNTLW	(See Below)
DEF BUFLR	(Define Buffer Address)
DEF BUFLL	(Define Buffer Length)
DEF TRCK	(Define Track #)
DEF SECT	(Define Sector #)
RTN (Return Point)	

RCODE	CNTLW	DISC AND AREA ADDRESSED
+1 (READ) +2 (WRITE)	2	"WORK AREA" ON <u>SYSTEM DISC ONLY</u> . SYSTEM CHECKS FOR LEGALITY OF TRCK/SECT IN CALL.
<del>-1 (READ)</del> <del>-2 (WRITE)</del>	2	"ANY AREA" ON <u>SYSTEM DISC</u> . SYSTEM DOES NOT CHECK FOR LEGALITY OF TRCK/SECT IN CALL.
-1 (READ) -2 (WRITE)	3	"ANY AREA" ON <u>CURRENT USER DISC</u> . SYSTEM DOES NOT CHECK FOR LEGALITY OF TRCK/SECT IN CALL.
	-3	"ANY AREA" ON <u>CURRENT JOB FILE</u> (JFILE) <u>DISC</u> . SYSTEM DOES NOT CHECK FOR LEGALITY OF TRCK/SECT IN CALL.

NOTE: SYSTEM WILL HALT (WITH T-REG. = 102031 octal)  
 IF DISC PROTECT OVERRIDE SWITCH IS "OFF" (DOWN)  
 AND REQUEST MADE TO WRITE ON A SECTOR THAT  
 IS FLAGGED PROTECTED (PCI = 1).

EXEC CALLS DIFFERENCE SUMMARY

EXEC CALL	DOS	DOSM
EXECUTION OF "JSB EXEC" INSTRUCTION	CAUSES MEMORY PROTECT VIOLATION INTERRUPT. LOCATION 5 EXECUTED WHICH IS JSB \$CIC. \$CIC THEN TRANSFERS CONTROL TO EXEC.	SAME AS DOS WHEN MEMORY PROTECT OPTION IS USED. IF NO MP OPTION, EXEC IS ENTERED DIRECTLY WHEN JSB EXEC IS EXECUTED.
FILE READ/WRITE	FILE IS REFERENCED WITH RESPECT TO ONLY ONE USER AREA ON DISC(S).	:SS CONDITION IS FOLLOWED IN SEARCHING FOR REFERENCED FILE. IF UNSURE AS TO PRESENCE OF CORRECT USER DISC, SHOULD FIRST USE CHANGE USER DISC EXEC CALL WITH ONLY LABEL SPECIFIED.
WORK AREA LIMITS	WORK AREA ALWAYS ON SAME DISC.	WORK AREA IS ON SYSTEM DISC THAT IS ACTIVE (I.E., BOOTSTRAPPED IN)
	PROGRAM MUST FIRST CALL WORK AREA STATUS EXEC CALL IF CONSECUTIVE TRACKS ARE REQUIRED BECAUSE SOME TRACKS WITHIN WORK AREA MAY BE FAULTY.	PROGRAM DOES NOT HAVE TO WORRY ABOUT FAULTY TRACKS IN THE WORK AREA; SYSTEM HANDLES AUTOMATICALLY. NEED ONLY USE WORK AREA STATUS CALL TO CHECK IF ENOUGH ARE AVAILABLE
PROGRAM SEGMENT LOAD	USER AND SYSTEM DIRECTORY ONE AREA OF DISC(S).	CURRENT USER DISC AND SYSTEM DIRECTORIES SEARCHED FOR REFERENCED SEGMENT.
SEARCH FILE NAMES	ONE USER AND SYSTEM DIRECTORY TO SEARCH.	:SS CONDITION FOLLOWED WHEN USER DIRECTORIES ARE SEARCHED
TIME REQUEST	TIME SET IN TIME ARRAY IS ALWAYS AVAILABLE.	IF TIME BASE GENERATOR NOT IN SYSTEM, ALL VALUES IN TIME ARRAY ARE SET TO 0.

## IV. INSTALLATION

### A. Introduction to System Generation.

1. Binary tapes needed [SLIDES 30A, 30B].
2. Preliminary Considerations
  - a. Medium of Input
    - (1) Paper tape.
    - (2) Magnetic tape (restrictions with FORTRAN IV in 8K).
    - (3) Combination
  - b. Core size [SLIDE 31] -- GENERAL (Projecture #1)
    - (1) Speed of System Operation needed.
    - (2) Core Resident versus Disc Resident EXEC Modules and I/O Drivers.
    - (3) System Modules size breakdown [SLIDE 32] (Projecture #2).
      - a. Minimum System Analysis using slides 31 and 32.
      - c. Particular needs for given application.
  - d. System and User Disc subchannel declaration.
    - (1) More efficient (time wise) if System and User Discs are on different drives, depending on what System is doing.
  - e. Other System Discs considerations.
    - (1) If both generated so that linkage and DISCM are in same place, then user main programs LOADED on one system would "RUN" and be compatable with the other. Location of EXEC entry in DISCM must be same; # links must be enough; Etc...

- f. Hardware required for Generation.
3. Starting System Generator
    - a. S10 Configuration - loading Generator.
    - b. All equipment to be used "ON".
    - c. Disc Drive for Generated system "READY".
    - d. Disc Protect Override Switch "ON".
    - e. Starting Generator (S.A. = 100 octal).
      - (1) Switch 15 DOWN for Straight Generation.
      - (2) Switch 15 UP only for User Disc Formatting.
  4. Brief description of the four PHASES and ability to restart at any one at 100 octal.

## B. System Generation Procedure and Example

- I. Initialization Phase [SLIDE 40A].
  - a. Responses to questions about the System (in general) to be generated.
  - b. System Generation Code - maximum 4 decimal positive digits. Written in Label Sector of System Disc.
  - c. # Sectors/Track - Actually # Sectors/Physical track which is 12 for low density disc.
  - d. System Disc Size - actually # cylinders.
  - e. First System Sector - System uses first 3 sectors on track Ø of System Disc.
  - f. 2114 question - only for DMA considerations (only one DMA Channel available on 2114B).
  - g. Program Input, Library Input questions - Unimportant whether PT or MT entered here
    - (1) MT may not be used for FORTRAN IV in 8K.
    - (2) DF also valid entry for disc file input. (S10 driver for IOMEC available later).

h. Parameter Input question - only applies to  
PARAMETER INPUT PHASE.

3. Program Input and Parameter Input Phases  
[SLIDE 40B].

a. Input device selected via S.R. switches Ø-1.

Ø<sub>2</sub> - PROGRAM INPUT

1Ø<sub>2</sub> - LIBRARY INPUT

Ø1<sub>2</sub> - TERMINATE LOADING

b. Restrictions

(1) DISCM should be loaded first for  
intersystem compatibility.

(2) Main Programs (like FTN) must be loaded  
prior to segments (like FTNØ1,  
FTNØ2, ... etc.)

(3) If generating 8K system with FORTRAN IV  
no Compilers, or Assembler may be loaded  
at this time. (Must be loaded using  
LOADR during System operation).

c. If undefined externals exist (message printed),  
may load module forgot by setting S.R.  
accordingly as in a. above and pressing  
"RUN".

d. During PARAMETER INPUT PHASE, be sure to  
declare other routines (\$SRCH, \$LBL, etc...)  
core resident too if certain EXEC modules  
are declared core resident. Generator will  
not flag if omitted.

e. LINKAGE QUESTIONS

(1) #SYSTEM LINKS - only used by Core Resident  
System.

(2) #USER LINKS - only used by User Programs

(3) To make DISCM start at 2ØØØ octal  
(page boundary) respond with 177 and  
5ØØ respectively.

f. Switch 15 must be up for Subroutines  
(indented two spaces) and entry points  
(preceded by "\*") to be printed in memory  
allocation listing.

3. Disc Loading Phase (class follows Xerox of Generation).

TOPIC	[SLIDE]	[SLIDE]
	MAIN PROJECTOR	AUXILIARY PROJECTOR
a. Links -----	AP-1-----	
b. Loc. 4-Start of Links	AP-1-----	AP-6
c. Core Res Prog & Links	AP-1-----	AP6-13
d. Equip. Table-----	AP-1, AP-2-----	AP-14
e. DRT + Int. Tables-----	AP-1, AP-3-----	AP-14
f. Disc Res. Exec Mod.---	AP-1, AP-4-----	AP-14
TABLE		
g. Disc Res Exec. Mod.---	AP-1-----	AP-5
h. Disc Res. I/O Drivers	AP-1-----	AP-5
i. Disc Res User Prog.---	AP-1-----	AP-5
j. Value of A-Reg. at end (do on slide 40J)		
k. Listing of :EQ & :LU	[SLIDE AP-5]	
C. Formatting User Discs or Cartridges	[SLIDE 41].	
I. Example printout	[SLIDE 42].	


BINARY TAPES NEEDED FOR SYSTEM GENERATION (PART 1)

PROGRAM(S)	# TAPES	COMMENTS
SYSTEM GENERATOR	1	OPERATES IN SIO ENVIRONMENT, THEREFORE THE FOLLOWING SIO DRIVERS MAY BE NEEDED: TELETYPE, PHOTOREADER, PUNCH (IF SIO DUMP TO BE USED), AND MAGNETIC TAPE. GENERATOR CONTAINS DISC I/O DRIVER INTERNAL TO ITSELF, THEREFORE, NO SIO DISC DRIVER NEEDED.
DISC MONITOR (CORE RESIDENT SYSTEM)	1	ALWAYS MADE CORE RESIDENT BY GENERATOR. GOOD PRACTICE TO LOAD AS FIRST PROGRAM FOR SYSTEM COMPATABILITY BETWEEN PROGRAMS LOADED ON OTHER SYSTEMS.
EXECUTIVE MODULES AND SUBROUTINES	1	MUST BE INCLUDED IN SYSTEM GENERATION. CONTAINS \$EX01 - \$EX20 EXEC MODULES AND SUBROUTINES \$LBL, \$SRCH, \$ADDR, ASCII, DUMRX. ALL EXEC MODULES ARE PROGRAM TYPE 1 (SYSTEM DISC RESIDENT), BUT MAY BE MADE SYSTEM CORE RESIDENT DURING GENERATION (PROGRAM TYPE 0).  CAUTION: IF CERTAIN EXEC MODULES ARE MADE SYSTEM CORE RESIDENT, THEIR ASSOCIATED SUBROUTINES MUST ALSO BE DECLARED CORE RESIDENT.
I/O DRIVERS	1 PER DRIVER	DVR31 (IOMECH DISC DRIVER) MUST ALWAYS BE INCLUDED. IT IS DECLARED PROGRAM TYPE 1 (SYSTEM CORE RESIDENT) AND MUST NOT BE REDECLARED.  DVR05 DVR00 ONE OF THESE DRIVERS MUST BE INCLUDED. BOTH ARE DECLARED PROGRAM TYPE 0 (SYSTEM CORE RESIDENT). THE ONE TO BE USED AS SYSTEM TELETYPE MUST NOT BE REDECLARED AS DISC RESIDENT. DVR05 IS SHORTER IN CORE REQUIREMENTS.  ALL OTHER DRIVERS ARE DECLARED PROGRAM TYPE 4 (DISC RESIDENT I/O DRIVER) AND MAY BE REDECLARED PROGRAM TYPE 0 IF DESIRED.
JOB PROCESSOR	1	MUST ALWAYS BE INCLUDED IN GENERATION. MUST ALWAYS BE DISC RESIDENT.
RELOCATING LOADER	1	DOES NOT HAVE TO BE INCLUDED IN SYSTEM GENERATION, BUT IF NOT INCLUDED NO PROGRAMS COULD BE RELOCATED INTO CORE IMAGE ABSOLUTE FORM BY THE SYSTEM THAT IS GENERATED. DECLARED PROGRAM TYPE 3 (USER MAIN) AND MAY NOT BE MADE CORE RESIDENT. MUST ALWAYS BE DISC RESIDENT.

BINARY TAPES NEEDED FOR SYSTEM GENERATION (PART 2)

PROGRAM(S)	# TAPES	COMMENTS
EXTENDED ASSEMBLER	7	DOES NOT HAVE TO BE INCLUDED IN SYSTEM GENERATION. ONE TAPE IS THE MAIN PROGRAM (TYPE 3) AND SIX TAPES ARE SEGMENTS (PROGRAM TYPE 5). THE MAIN PROGRAM (ASMB) MUST BE LOADED PRIOR TO ITS SEGMENTS. MUST ALWAYS BE DISC RESIDENT.
HP BASIC FORTRAN COMPILER	5	DOES NOT HAVE TO BE INCLUDED IN SYSTEM GENERATION. ONE TAPE IS THE MAIN PROGRAM (TYPE 3) AND FOUR TAPES ARE SEGMENTS (PROGRAM TYPE 5). THE MAIN PROGRAM (FTN) MUST BE LOADED PRIOR TO ITS SEGMENTS. MUST ALWAYS BE DISC RESIDENT.
HP ALGOL COMPILER	2	DOES NOT HAVE TO BE INCLUDED IN SYSTEM GENERATION. ONE TAPE IS THE MAIN PROGRAM (TYPE 3) AND ONE SMALL TAPE IS THE ONLY SEGMENT (PROGRAM TYPE 5). THE MAIN PROGRAM (ALGOL) MUST BE LOADED PRIOR TO THE SEGMENT. MUST ALWAYS BE DISC RESIDENT. REQUIRES 16K MINIMUM CORE.
HP FORTRAN IV COMPILER	19	DOES NOT HAVE TO BE INCLUDED IN SYSTEM GENERATION. ONE TAPE IS THE MAIN PROGRAM (TYPE 3) AND 18 OTHER TAPES ARE ITS SEGMENTS (PROGRAM TYPE 5). THE MAIN PROGRAM (FTN4) MUST BE LOADED PRIOR TO THE 18 SEGMENTS. MUST ALWAYS BE DISC RESIDENT.
CROSS REFERENCE TABLE GENERATOR	1	DOES NOT HAVE TO BE INCLUDED IN SYSTEM GENERATION. DECLARED PROGRAM TYPE 3 (USER DISC RESIDENT MAIN). MUST BE DISC RESIDENT.
LIBRARIES	5	THE LIBRARIES INCLUDED DURING SYSTEM GENERATION WILL DEPEND ON THE PARTICULAR SYSTEM THAT IS BEING GENERATED AND WILL VARY ACCORDINGLY. FACTORS THAT WILL HELP DETERMINE ARE: 1. Is EAU TO BE USED, 2. Is FORTRAN IV COMPILER TO BE INCORPORATED INTO SYSTEM, 3. Is PLOTTING EQUIPMENT TO BE USED.
ANY USER PROGRAMS TO BE MADE A PERMANENT PART OF SYSTEM	?	SAME CONVENTIONS MUST BE FOLLOWED IN SEGMENTATION. USER MAIN MUST BE LOADED PRIOR TO SEGMENTS ETC. LIBRARY PROGRAMS MUST BE DECLARED TYPE 6 OR 7.
<p>NOTE: IF THE FORTRAN IV LIBRARY IS TO BE INCLUDED IN AN 8K SYSTEM, CERTAIN RULES MUST BE FOLLOWED:</p> <ol style="list-style-type: none"> <li>1. THE SYSTEM MUST BE GENERATED WITHOUT ANY COMPILERS OR AN ASSEMBLER.</li> <li>2. A MAGNETIC TAPE S10 DRIVER CANNOT BE USED WITH DSGEN.</li> <li>3. THE COMPILERS AND ASSEMBLER MUST BE LOADED INTO THE SYSTEM DURING OPERATION (USING THE LOADER).</li> </ol>		

# DOSM GENERAL CORE LAYOUT

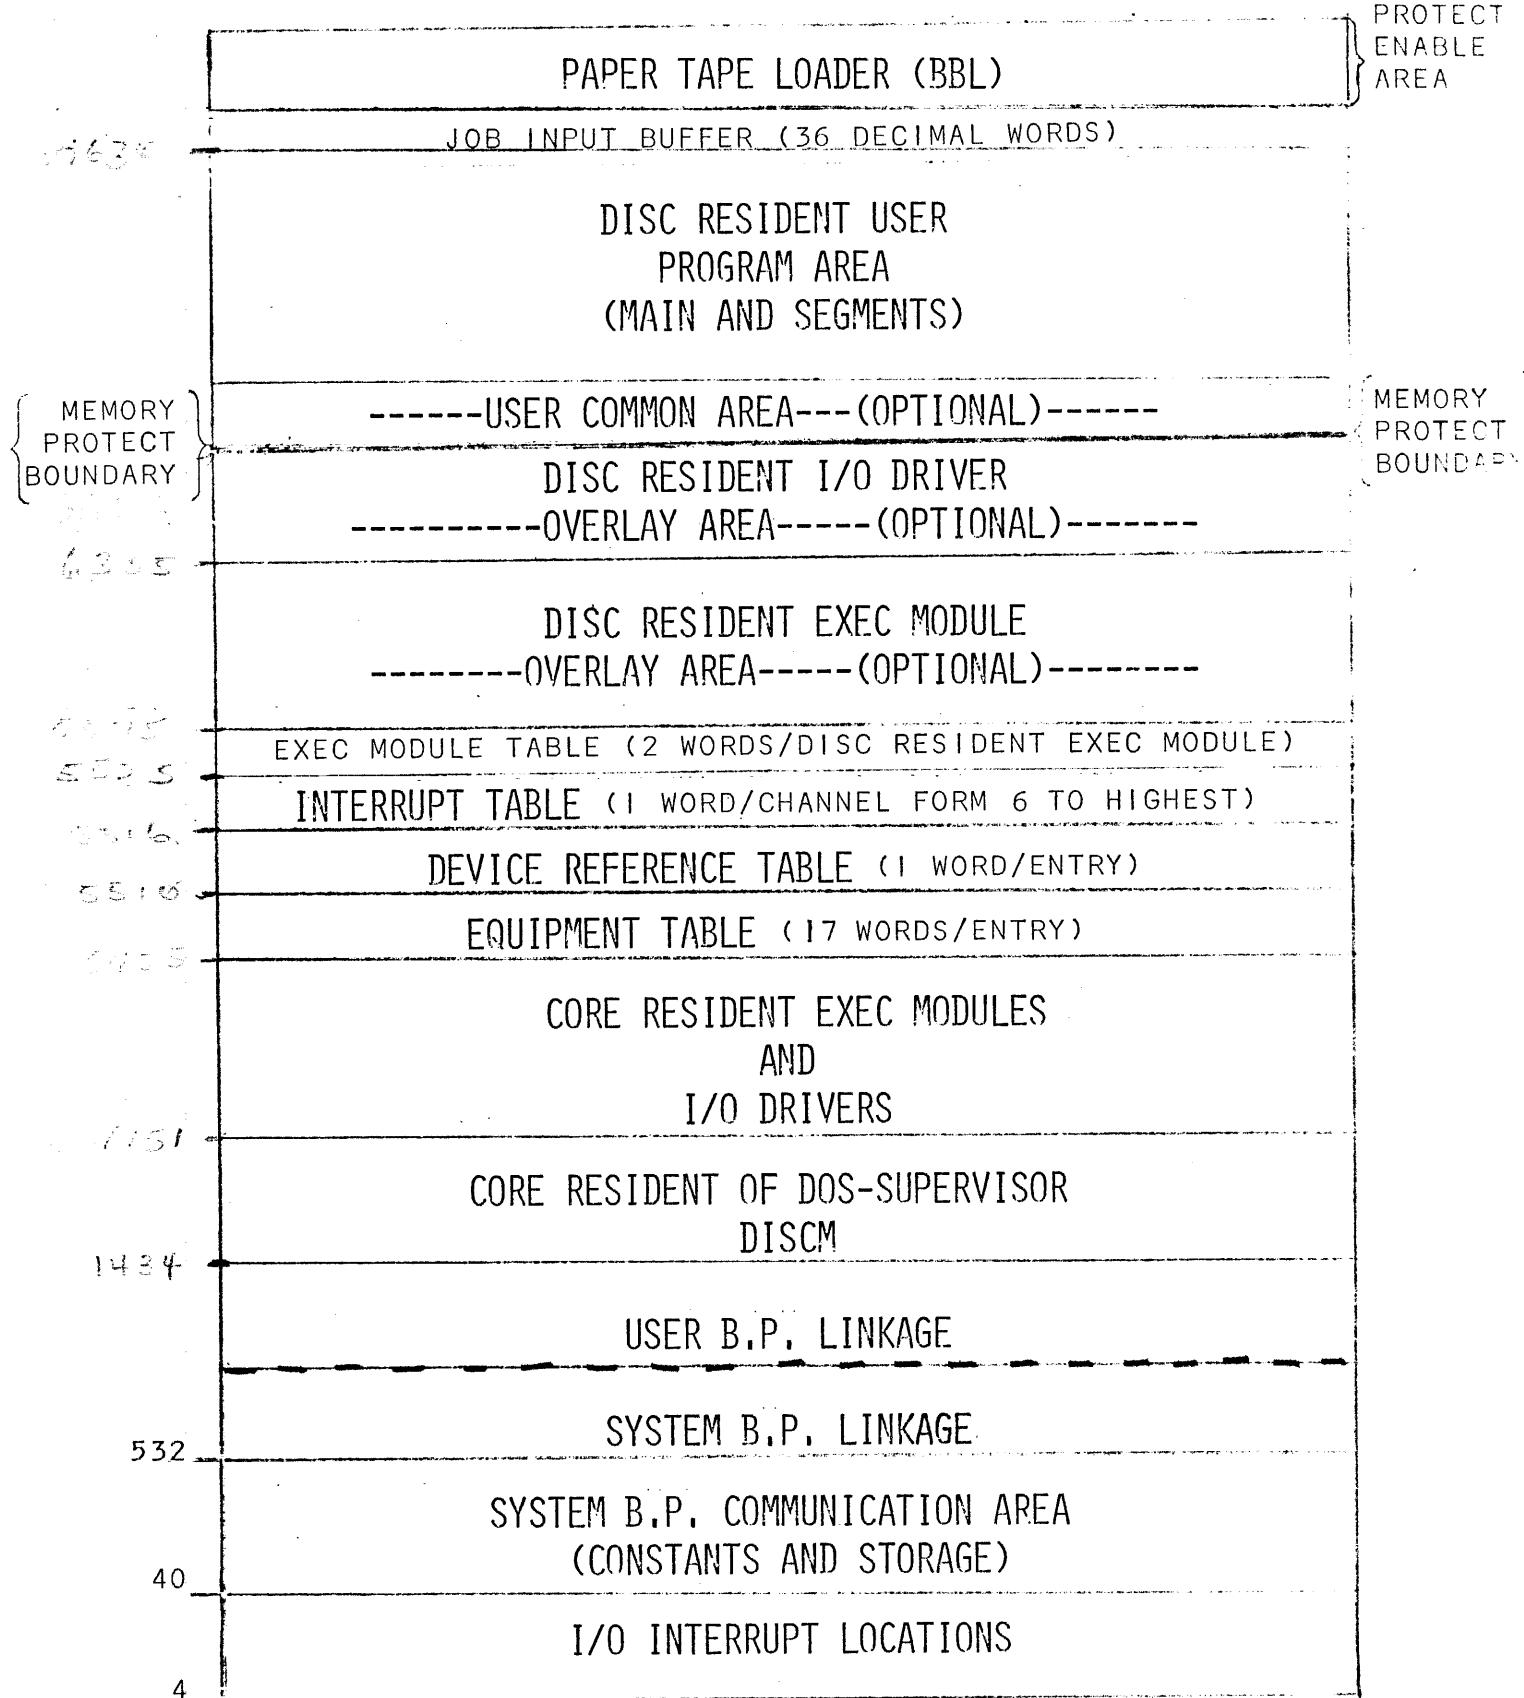

## SYSTEM SOFTWARE SIZE BREAKDOWN ("A" VERSIONS)

PROGRAM NAME	LENGTH (OCTAL)	LENGTH (DECIMAL)	EXTERNAL ROUTINES
DISCM	2515	1357	-----
\$EX01	62	50	\$ADDR
\$EX02	50	40	\$ADDR
\$EX03	35	29	-----
\$EX04	315	205	ASCII
\$EX05	156	110	\$SRCH
\$EX06	37	31	\$ADDR, \$SRCH
\$EX07	157	111	\$ADDR
\$EX08	143	99	\$ADDR
\$EX09	261	177	ASCII
\$EX10	156	110	-----
\$EX11	164	116	\$SRCH
\$EX12	172	122	-----
\$EX13	342	226	ASCII
\$EX14	360	240	ASCII
\$EX15	272	186	ASCII
\$EX16	133	91	-----
\$EX17	373	251	\$LBL
\$EX18	510	328	-----
\$EX19	320	208	\$LBL
\$EX20	306	198	ASCII
\$LBL	73	59	
\$SRCH	304	196	
\$ADDR	15	13	
ASCII	72	58	
DUMRX	64	52	
DVR00	553	363	
DVR01	314	204	
DVR02	202	130	
DVR05	250	168	
DVR10	135	93	
DVR12	527	343	
DVR15	325	213	
DVR22	634	412	
DVR23	566	374	
DVR30	252	170	
DVR31	501	321	
JOBPR	10463	4403	
LOADR	7032	3610	

DOSM SYSTEM GENERATION EXAMPLE  
("A" VERISION TAPES USED)

SYS GEN CODE?  
→ 9000

SYS DISC CHNL?  
→ 14

# SECTORS/TRACK?  
→ 12

SYS DISC SIZE?  
→ 200

# DRIVES?  
→ 1

FIRST SYSTEM TRACK?  
→ 0

FIRST SYSTEM SECTOR?  
→ 3

SYS DISC SUBCHNL?  
→ 1

USER DISC SUBCHNL?  
→ 1

TIME BASE GEN CHNL?  
→ 12

IS 2114?  
→ NO

LWA MEM?  
→ 37677

ALLOW :SS?  
→ YES

PRGM INPT?  
→ PT

LIBR INPT?  
→ PT

PRAM INPT?  
→ TY


INITIALIZATION PHASE



## SYSTEM

DISCM	01634
*\$CIC	01634
*\$STRT	04160
*\$LDEX	04154
*EXEC	02214
*\$DISC	03400
*\$IDL1	03511
*\$MDLD	03020
*\$RQER	02635
*\$JLOD	03744
*\$MOVE	03361
*\$TYPE	03426
*\$SYIO	04165
*\$BFND	04267
*\$EFAD	02507
*\$ABRT	04010
*\$WAIT	03244
*SETEQ	03345
*\$BLOP	03177
*\$CIC3	01714
*SAVES	03563
*\$CLER	04044
*\$OPER	02212
*ERR01	02653
*ERR03	02657
*ERR04	02661
*ERR05	02663
*ERR06	02665
*LUCHK	02553
*\$DMA	03214
*\$MBSY	03207
*\$LDVR	03143
*\$RQEQT	02576
*\$DRIVR	02700
*\$ERRTN	02631
*\$IO•40	02521
*\$GDTK	03130
*\$DISCX	03117
*\$RRL	04243
*\$DEF04	02445
*\$DEF19	04302
*\$DEF20	04303
\$EX01	04314
*\$EX01	04314
\$EX02	04376
*\$EX02	04376
\$EX06	04446
*\$EX06	04446
\$EX11	04505
*\$EX11	04505
\$EX17	04671

## DISC LOADING PHASE

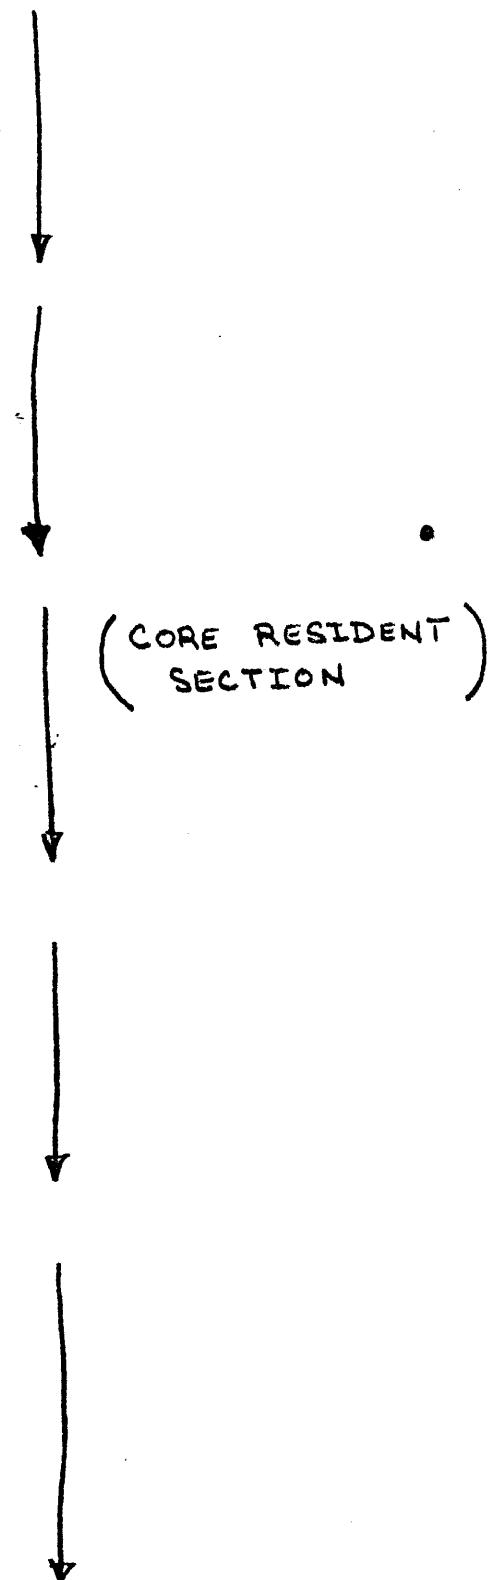

*\$EX17	04671
\$EX18	05264
*\$EX18	05264
\$ADDR	05774
*\$ADDR	05774
\$SRCH	06011
*\$SRCH	06011
*\$CMPR	06266
\$LBL	06315
*LBLIO	06354
*ISLBL	06336
*LBLMV	06330
*CHSUM	06315
*MESSG	06372
DVR05	06410
*I.05	06410
*C.05	06464
DVR31	06660
*I.31	06660
*C.31	06743

## DISC LOADING PHASE (CON'T)

(CORE RESIDENT  
SECTION)

### \* EQUIPMENT TABLE ENTRY

- 11,DVR05,R
- 13,DVR01
- 14,DVR31,R,D
- 16,DVR02
- 22,DVR22,D
- /E

BUILD EQT TABLE

### \* DEVICE REFERENCE TABLE

- 1 = EQT #?
- 1
- 2 = EQT #?
- 3
- 3 = EQT #?
- 3
- 4 = EQT #?
- 4
- 5 = EQT #?
- 2
- 6 = EQT #?
- 1
- 7 = EQT #?
- 5
- 8 = EQT #?
- /E

BUILD DRT TABLE

\* INTERRUPT TABLE

→ 11,1  
 → 13,2  
 → 15,3  
 → 16,4  
 → 23,5  
 → /E

BUILD INTERRUPT TABLE

EXEC SUPERVISOR MODULES

\$EX03 07567  
 \*\$EX03 07567

\$EX04 07567  
 \*\$EX04 07567  
 ASCII 10104  
 \*CNDEC 10104  
 \*CNOCT 10110

\$EX05 07567  
 \*\$EX05 07567

\$EX07 07567  
 \*\$EX07 07567

\$EX08 07567  
 \*\$EX08 07567

\$EX09 07567  
 \*\$EX09 07567  
 ASCII 10050  
 \*CNDEC 10050  
 \*CNOCT 10054

\$EX10 07567  
 \*\$EX10 07567


\$EX12 07567  
 \*\$EX12 07567

\$EX13 07567  
 \*\$EX13 07567  
 ASCII 10131  
 \*CNDEC 10131  
 \*CNOCT 10135

\$EX14 07567  
 \*\$EX14 07567  
 ASCII 10147  
 \*CNDEC 10147  
 \*CNOCT 10153

\$EX15 07567  
 \*\$EX15 07567  
 ASCII 10061  
 \*CNDEC 10061  
 \*CNOCT 10065

DISC LOADING PHASE (CON'T)

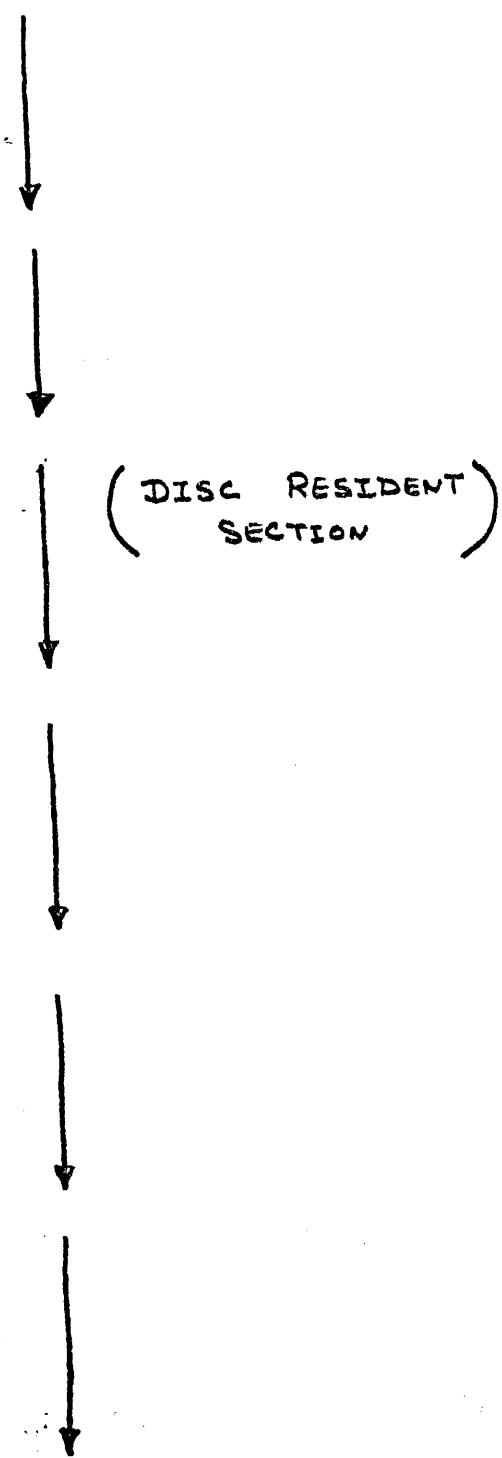

\$EX16 07567  
\*\$EX16 07567

## DISC LOADING PHASE (CON'T)

\$EX19 07567  
\*\$EX19 07567

\$EX20 07567  
\*\$EX20 07567

ASCII 10075  
\*CNDEC 10075  
\*CNOCT 10101

### I/O DRIVER MODULES

DVR01 10241  
\*I•01 10241  
\*C•01 10313

DVR02 10241  
\*I•02 10241  
\*C•02 10320

DVR22 10241  
\*I•22 10241  
\*C•22 11001

LWA SYS 11075

FWA USER?

→ 12000

### USER SYSTEM PROGRAMS

LOADR 12000  
\*LOADR 12000

JOBPR 12000  
\*JOBPR 12000

ASMB 12000  
\*ASMB 16522  
\*?ASCN 13700  
\*?ASMB 12554  
\*?BNCN 14510  
\*?BPKU 15326  
\*?CHOP 12646  
\*?CHPI 15610  
\*?DCOD 15616  
\*?ENDS 15230  
\*?ERPR 15150

(DISC RESIDENT SECTION)

## DISC LOADING PHASE (CONT)

\*?MSYS 15667  
\*?GETC 15654  
\*?MOVE 13437  
\*?MSYM 14775  
\*?RLUN 16375  
\*?AFLG 16430  
\*?LSTL 14717  
\*?LUNI 16436  
\*?RFLG 16425  
\*?Z 16446  
\*?ASM1 13371  
\*?LAME 13407  
\*?OKOL 15397  
\*?ORRP 14603  
\*?PNLE 16443  
\*?SETM 15674  
\*?SUP 15303  
\*?LPER 15306  
\*?PERL 15271  
\*?LOUT 15336  
\*?LTFL 15275  
\*?DRFL 16433  
\*?LTSA 15560  
\*?LTSB 15561  
\*?ORGs 15301  
\*?CNTR 15370  
\*?TSTR 16434  
\*?ASII 16452  
\*?ICSA 15146  
\*?FLGS 16422  
\*?BFLG 16423  
\*?LFLG 16424  
\*?TFLG 16426  
\*?X 16445  
\*?MESX 12505  
\*?ASCI 16451  
\*?LINC 15110  
\*?LINS 14765  
\*?LIST 14653  
\*?LUNP 16440

(DISC RESIDENT SECTION)

\*?OPLK 12600  
\*?OPER 15640  
\*?PKUP 15321  
\*?PLIT 15406  
\*?PNCH 13632  
\*?PRNT 15033  
\*?RSTA 13105  
\*?LWA 16444  
\*?RDSC 16401  
\*?WEOF 16021  
\*?WRIF 16102  
\*?LGFL 16432  
\*?SEGM 12541  
\*?SYMK 13506  
\*?V 15633

\*?ARTL 15472  
\*?LST 15274  
\*?PLIN 16435  
\*?PCOM 15112  
\*?SECT 16420  
\*?NEAU 12443  
\*?HA38 15347  
\*?XRFI 12540

DISC LOADING PHASE (CON'T)

ASMBD 17120  
\*ASMBD 17442

ASMB1 17120  
\*ASMB1 17366  
\*?LITI 20030  
\*?CMQ 17560  
\*?INSR 17726  
\*?HA3Z 17527  
\*?ENP 17662  
\*?EXP 17645

ASMB2 17120  
\*ASMB2 17351  
\*?ART 20021  
\*?BREC 17475  
\*?LKLI 20535  
\*?SKPR 17441  
\*?SPCR 17444

ASMB3 17120  
\*ASMB3 17630

ASMB4 17120  
\*ASMB4 17366  
\*?INS? 17541

ASMB5 17120  
\*ASMB5 17351

FTN 12000  
\*%WLIC 13042  
\*%FTN0 12000  
\*%WPRN 12735  
\*%ERRR 12701  
\*%RDIS 12557

\*%WDIS 12244  
\*%SEGN 12224  
\*%WTRA 12236  
\*%WSEC 12237  
\*%RTRA 12347  
\*%RSEC 12350  
\*%RBFA 12352  
\*%LUNO 12203  
\*%LUNI 12204

( DISC RESIDENT SECTION )

# DISC LOADING PHASE (CON'T)

\*%LUNP 12205  
\*ZNAMA 12226  
\*ZRTYP 12227  
\*ZWLIN 13017  
\*ZWPAG 13043  
\*ZTILT 13074  
\*ZRDSI 13044  
\*ZWDSI 13056  
\*ZWOUT 12334  
\*RBFW 12623  
\*LABEL 12733  
\*CONA 12734  
\*ENDP 13105  
\*WDLU 12241  
\*RDLU 12346  
\*RFLG 12554  
\*WBFW 12341  
\*WBFA 12232  
\*HEDN 13010  
\*DUP8 12373  
\*NXDV 12402  
\*NELM 12352  
\*STYP 12433  
\*LG0 12202

FTN01 13127  
\*%FTN1 16550  
SREAD 21241  
\*%READ 21241  
\*%JFIL 21707  
\*%RDSC 21663  
.OPSY 21774  
\*.OPSY 21774  
DUMRX 22034  
\*\$LIBR 22034  
\*\$LIBX 22062

FTN02 13127  
\*%FTN2 13741


FTN03 13127  
\*%FTN3 15117

FTN04 13127  
\*%FTN4 13702  
%WRIT 17515  
\*%WRIT 17700  
\*%WRIF 17577  
\*%WBUF 17777  
FADSB 20213  
\*.FAD 20213

(DISC RESIDENT SECTION)

*.FSB	20222
.OPSY	20363
*.OPSY	20363
.FLUN	20423
*.FLUN	20423
.PACK	20444
*.PACK	20444
DUMRX	20560
*\$LIBR	20560
*\$LIBX	20606
.ZRLB	20644
*.ZRLB	20644
DLDST	20705
*.DLD	20705
*.DST	20715

\*SYSTEM STORED ON DISC

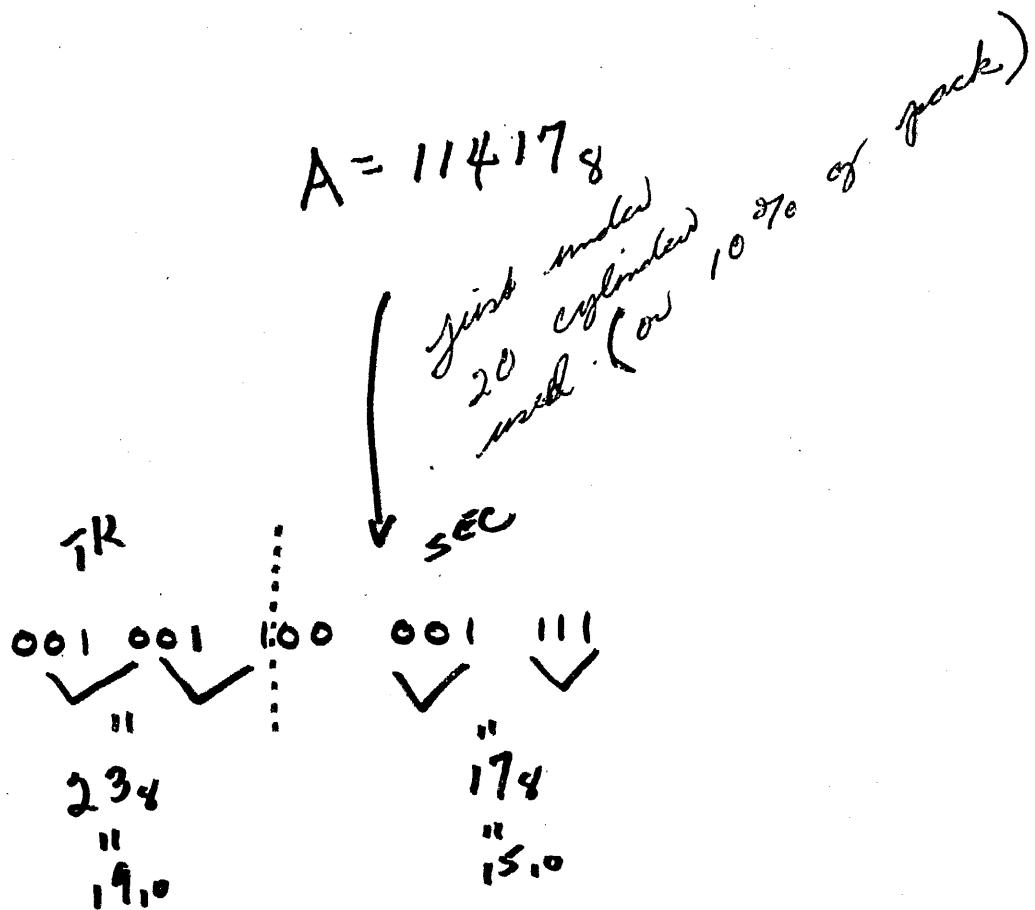

[SLIDE 40J]

## FORMATTING USER DISCS OR CARTRIDGES

PURPOSE: To FORMAT A USER DISC OR CARTRIDGE ANYTIME A NEW DISC IS ADDED OR AN OLD SYSTEM DISC IS TO BE REUSED AS A USER DISC.

WHAT SYSTEM DOES: CREATES AN UNLABELED DISC READY FOR USE IN DOSM SYSTEM BY

1. WRITING NEW LABEL SECTOR ON SECTOR 0 WITH
  - A. FIRST TWO WORDS AS 0,DO
  - B. GENERATION CODE # ENTERED BY OPERATOR
  - C. THREE LABEL WORDS AS \*Y,ST,EM
  - D. # BAD TRACKS AS 0
2. WRITING NEW BOOTSTRAP ON SECTORS 1 AND 2
3. CLEARING ALL PCI AND DCI ON ALL SECTORS

### OPERATION PROCEDURE:

1. ALL EQUIPMENT ON. "READY" DRIVE.
2. DISC PROTECT OVERRIDE SWITCH "ON".
3. LOAD CONFIGURED SYSTEM GENERATOR (DSGEN) INTO MEMORY USING BBL.
4. LOAD ADDRESS 100 OCTAL.
5. SWITCH 15 "UP".
6. PRESET AND RUN.
7. ANSWER REQUESTS PRINTED ON TTY.
8. SYSTEM GENERATOR HALTS WITH T=102007 AT END.  
PRESS "RUN" TO DO ANOTHER DISC (WITH SWITCH 15 STILL "UP") OR PUT SWITCH 15 DOWN AND PRESS "RUN" TO BEGIN SYSTEM GENERATION PROPER.

## FORMATTING USER DISCS EXAMPLE

SYS GEN CODE?

→ 9000

SYS DISC CHNL?

→ 14

# SECTORS/TRACK?

→ 12

USER DISC SUBCHNL?

→ 0

TURN ON DISC PROTECT OVERRIDE - PRESS RUN

USER DISC SUBCHNL?

→ 1

FORMATTED FIXED  
DISC

SYS GEN CODE?

→ 9000

SYS DISC CHNL?

→ 14

# SECTORS/TRACK?

→ 12

SYS DISC SIZE?

→ 200

# DRIVES?

→ 1

FIRST SYSTEM TRACK?

→ 0

FIRST SYSTEM SECTOR?

→ 3

SYS DISC SUBCHNL?

→ 1

USER DISC SUBCHNL?

→ 1

TIME BASE GEN CHNL?

→ 12

IS 2114?

→ NO

LWA MEM?

→ 37677

ALLOW :SS?

→ YES

PRGM INPT?

→ PT


LIBR INPT?

→ PT

FORMATTED  
CARTRIDGE

WENT DIRECTLY INTO  
STANDARD SYSTEM GENERATION  
BY PUTTING SWITCH 15 DOWN  
AND PRESSING "RUN"

# CORE MAP FOR DOSM SYSTEM GENERATION EXAMPLE (16K)

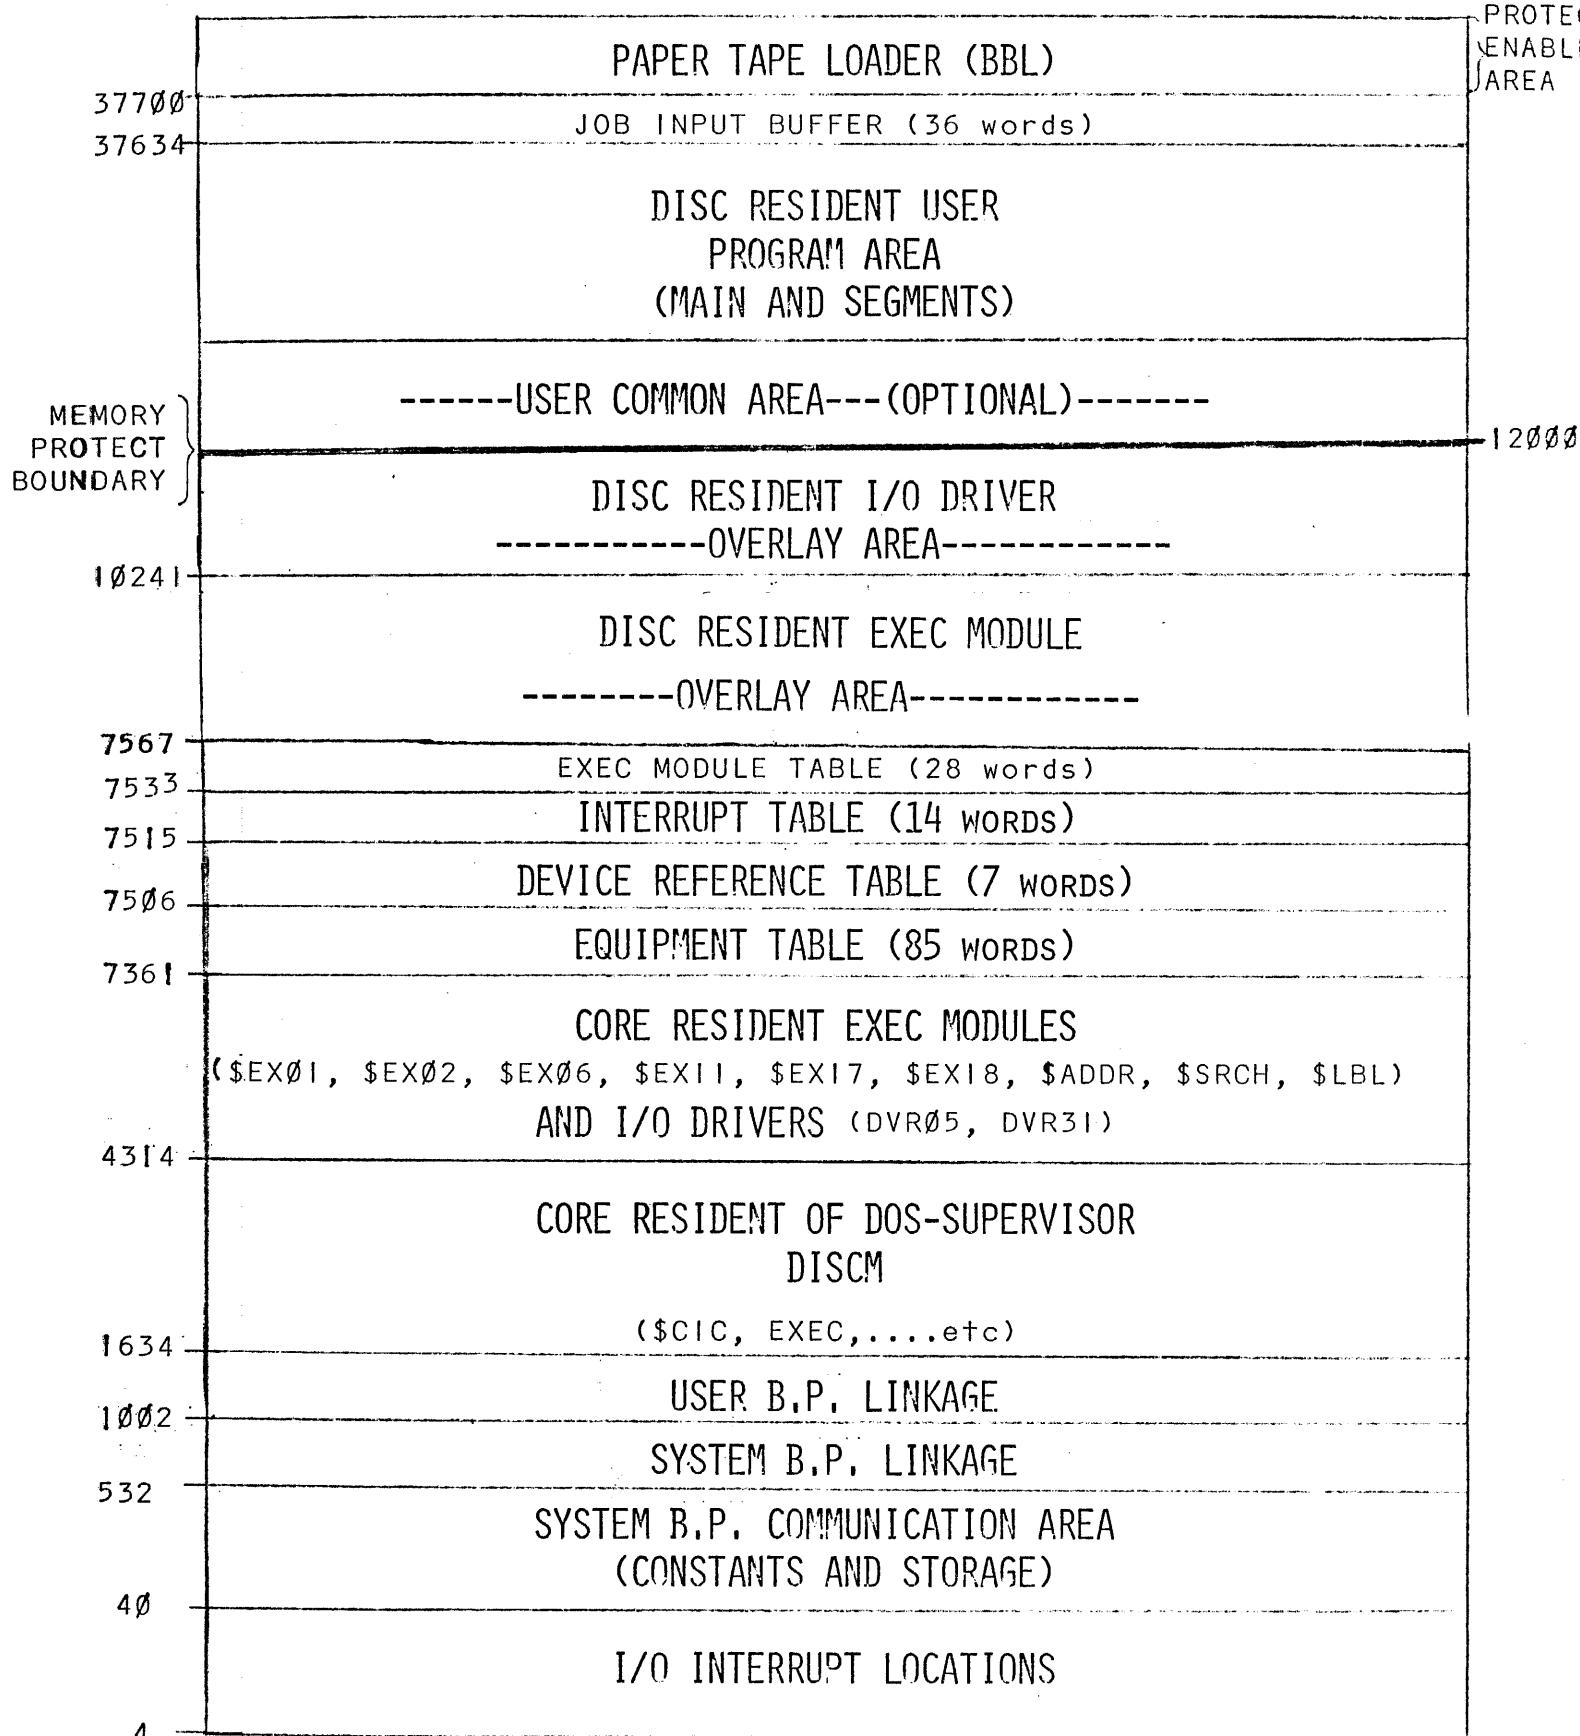

### EQUIPMENT TABLE ENTRY FORMAT

WORD

#### CONTENTS

1	DRIVER "INITIATION" SECTION ADDRESS															
2	DRIVER "CONTINUATION" SECTION ADDRESS															
3	D	R	UNIT #													
4	Av	EQUIPMENT TYPE CODE	CHANNEL #													
5	(SAVED FOR DRIVER USE)															
6	(SAVED FOR DRIVER USE)															
7	REQUEST RETURN ADDRESS															
8	REQUEST CODE															
9	CURRENT I/O REQUEST CONTROL WORD															
10	REQUEST BUFFER ADDRESS															
11	REQUEST BUFFER LENGTH															
12	TEMPORARY OR DISC TRACK #															
13	TEMPORARY OR STARTING SECTOR #															
14	TEMPORARY STORAGE FOR DRIVER															
15	UPPER MEMORY ADDRESS OF MAIN DRIVER AREA															
16	UPPER MEMORY ADDRESS OF DRIVER LINKAGE AREA															
17	STARTING TRACK #	STARTING SECTOR #														
BITS	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

0's IF  
CORE-  
RESIDENT

D = 1 IF DMA CHANNEL REQUIRED.  
 R = 1 IF DRIVER TYPE IS CORE-RESIDENT.  
 UNIT # MAY BE USED FOR SUB-CHANNEL ADDRESSING.  
 CHANNEL # I/O SELECT CODE FOR DEVICE (LOWER NUMBER IF MULTIBOARD INTERFACE.)

Av = 0 - UNIT NOT BUSY AND AVAILABLE  
 = 1 - UNIT DISABLED (DOWN)  
 = 2 - UNIT BUSY  
 = 3 - UNIT WAITING FOR AN AVAILABLE DMA CHANNEL

STATUS - ACTUAL OR SIMULATED UNIT STATUS AT END OF OPERATION.  
(DRIVER MUST SET THIS FIELD)

EQUIPMENT TYPE CODE - IDENTIFIES TYPE OF DEVICE AND ASSOCIATED SOFTWARE DRIVER. ASSIGNED EQUIPMENT TYPE CODES IN OCTAL ARE:

00-07	PAPER TYPE DEVICES
00	TELEPRINTER
01	PUNCHED TAPE READER
02	HIGH SPEED PUNCH
05	TELETYPE (SYSTEM)
10-17	UNIT RECORD DEVICES
10	RESERVED FOR PLOTTER
12	LINE PRINTER
15	MARK SENSE CARD READER
20-37	MAGNETIC TAPE/MASS STORAGE AND OTHER DEVICES CAPABLE OF BOTH INPUT AND OUTPUT.
22	3030 MAGNETIC TAPE
31	MOVING-HEAD DISC

FOR EQUIPMENT TYPE CODES 1 THROUGH 17, ODD NUMBER INDICATE INPUT DEVICES AND EVEN NUMBER INDICATE OUTPUT DEVICES (EXCEPT 05, WHICH IS BOTH INPUT AND OUTPUT).

AVAILABLE  
FOR  
DRIVER  
TEMPORARY

## DEVICE REFERENCE TABLE FORMAT

EACH ENTRY IN THIS TABLE REQUIRES ONLY ONE WORD IN MEMORY. THE VALUE OF EACH ENTRY (DECIMAL NUMBER, 1-63) ASSOCIATES A LOGICAL UNIT NUMBER WITH AN EQUIPMENT TABLE ENTRY FOR THE SYSTEM IN THE FOLLOWING MANNER:

SEQUENCE IN MEMORY TABLE	LOGICAL UNIT #	FUNCTION
1	1	SYSTEM TELEPRINTER
2	2	USER MASS STORAGE
3	3	SYSTEM MASS STORAGE
4	4	STANDARD PUNCH DEVICE
5	5	STANDARD INPUT DEVICE
6	6	STANDARD LIST DEVICE
7-63	7-63	ANY DEVICE

## INTERRUPT TABLE FORMAT

EACH ENTRY IN THIS TABLE REQUIRES ONLY ONE WORD IN MEMORY AND IS ASSOCIATED WITH EACH I/O CHANNEL IN THE COMPUTER (STARTING WITH LOCATION 6) WHICH CAN CAUSE AN INTERRUPT. EACH LOCATION IN THIS TABLE HAS AN ENTRY VALUE. MEMORY LOCATIONS ARE ASSOCIATED IN CONSECUTIVE INCREASING ORDER WITH AN I/O CHANNEL. TABLE VALUES ARE ZERO FOR AN I/O CHANNEL NOT REQUIRING INTERRUPT. I/O CHANNELS REQUIRING INTERRUPT CONTAIN THE START ADDRESS OF THE EQUIPMENT TABLE ENTRY OF THE ASSOCIATED DEVICE.

## EXEC MODULE DOUBLET TABLE FORMAT

(TWO WORDS PER DISC RESIDENT EXEC MODULE)

WORD #1	# SECTORS <i>IN THE FIRST SECTOR</i>	EXEC MODULE ID #
	15-11	10-0

WORD #2	START TRACK #	START SECTOR #
	15-8	7-0

# SYSTEM DIRECTORY LISTING FOR DOSM GENERATION EXAMPLE

NAME	TYPE	SCTRS	DISC	ORG	PROG	LIMITS	B.P.	LIMITS	ENTRY	LIBR.	P-BIT
SUBCHAN=1											
\$EX03	XS	0002	T001	011	07567	07624	00732	00733	07567	07624	
\$EX04	XS	0004	T001	013	07567	10176	00732	00741	07567	10176	
\$EX05	XS	0002	T001	017	07567	07745	00732	00733	07567	07745	
\$EX07	XS	0002	T001	019	07567	07746	00732	00733	07567	07746	
\$EX08	XS	0002	T001	021	07567	07732	00732	00733	07567	07732	
\$EX09	XS	0003	T001	023	07567	10142	00732	00763	07567	10142	
\$EX10	XS	0002	T002	002	07567	07745	00732	00733	07567	07745	
\$EX12	XS	0002	T002	004	07567	07761	00732	00733	07567	07761	
\$EX13	XS	0004	T002	006	07567	10223	00732	00754	07567	10223	
\$EX14	XS	0004	T002	010	07567	10241	00732	00751	07567	10241	
\$EX15	XS	0003	T002	014	07567	10153	00732	00763	07567	10153	
\$EX16	XS	0002	T002	017	07567	07722	00732	00733	07567	07722	
\$EX19	XS	0003	T002	019	07567	10107	00732	01000	07567	10107	
\$EX20	XS	0003	T002	022	07567	10167	00732	00761	07567	10167	
DVR01	DR	0003	T003	001	10241	10555	01000	01002	10241	10555	
DVR02	DR	0003	T003	004	10241	10443	01000	01002	10241	10443	
DVR22	DR	0005	T003	007	10241	11075	01000	01002	10241	11075	
LOADR	UM	0032	T003	012	12000	21032	01002	01425	12000	21032	
JOBPR	UM	0038	T004	020	12000	22463	01002	01414	12000	22463	
ASMB	UM	0023	T006	010	12000	17120	01002	01362	16522	17120	
ASMBD	US	0004	T007	009	17127	17647	01362	01363	17442	17647	
ASMB1	US	0006	T007	013	17366	20542	01362	01424	17366	20542	
ASMB2	US	0007	T007	019	17345	20550	01362	01410	17351	20550	
ASMB3	US	0003	T008	002	17473	17771	01362	01363	17630	17771	
ASMB4	US	0004	T008	005	17366	20027	01362	01371	17366	20027	
ASMB5	US	0006	T008	009	17345	20425	01362	01404	17351	20425	
FTN	UM	0006	T008	015	12000	13127	01002	01047	12000	13127	
FTN01	US	0031	T008	021	13254	22120	01047	01502	16550	22120	
FTN02	US	0025	T010	004	13254	21027	01047	01356	13741	21027	
FTN03	US	0024	T011	005	13254	20600	01047	01277	15117	20600	
FTN04	US	0025	T012	005	13254	20750	01047	01360	13702	20750	
LIBRY	LB	0147	T013	007							

## EQUIPMENT TABLE LISTING

```
:EQ
EQT 01 CH 11 DVR05 0 R U0 S0
EQT 02 CH 13 DVR01 0 0 U0 S0
EQT 03 CH 14 DVR31 D R U0 S0
EQT 04 CH 16 DVR02 0 0 U0 S0
EQT 05 CH 22 DVR22 D 0 U0 S0
@
```

## LOGICAL UNIT TABLE LISTING

```
:LU
LU01 EQT01
LU02 EQT03
LU03 EQT03
LU04 EQT04
LU05 EQT02
LU06 EQT01
LU07 EQT05
@
```

## MEMORY DUMP FOR DOSM SYSTEM GENERATION EXAMPLE

CORE DUMP: 000004-007566

000000:	114532	114532	114532	114532	114532	114532	114532	114532	114532
000010:	114532	114532	114532	114532	114532	114532	114532	114532	114532
000020:	114532	114532	114532	114532	114532	114532	114532	114532	114532
000030:	114532	114532	114532	114532	114532	114532	114532	114532	114532
000040:	177700	177766	177757	177770	177771	177772	177773	177774	177774
000050:	177775	177776	177777	000000	000001	000002	000003	000004	000004
000060:	0000005	0000006	0000007	0000010	0000011	0000012	0000021	000100	
000070:	0000017	0000037	0000077	000177	000377	177400	003777	177700	
000100:	037633	000000	000000	000012	000000	000000	000000	000000	000000
000110:	0000000	000001	000001	000000	000003	013000	000030	000361	
000120:	0000005	007506	000007	037634	000000	000000	000000	000000	000000
000130:	0000000	000000	000000	000000	000000	000000	000000	000000	000000
000140:	0000000	0000000	0000000	0000000	0000000	0000000	0000000	0000000	0000000
000150:	0000000	0000000	0000000	0000000	060307	0000001	0000001	033403	
000160:	033403	000001	000000	000377	000026	000000	001005	000000	
000170:	0000046	000000	000000	000000	013001	000001	321450	000000	
000200:	013000	007515	000016	007361	007362	007363	007364	007365	
000210:	007366	007367	007370	007371	007372	007373	007374	007375	
000220:	007376	007377	007400	007401	000000	000000	000000	000000	
000230:	0000000	0000000	0000000	0000000	000000	000000	000000	177777	
000240:	177777	077777	003327	007533	000016	000000	007567	010241	
000250:	000732	001000	010241	001000	012000	001002	001633	000000	
000260:	0000000	0000001	0000000	002024	010463	000412	000000	000000	
000270:	046102	042117	021450	050521	050521	053421	044456	031461	
000300:	0200000	036173	000723	041456	031461	020000	036173	000724	
000310:	044456	031062	020000	036164	000000	041456	031062	020000	
000320:	035164	000000	046117	040504	051000	036155	000000	163252	
000330:	041120	051000	036146	000000	040523	046502	020000	036137	
000340:	0000000	037501	051503	047000	036137	000000	037501	051515	
000350:	041000	036137	000000	037502	047103	047000	036137	000000	
000360:	037502	050113	052400	036137	000000	037503	044117	050000	
000370:	033403	000000	000312	001534	177610	020040	020040	020040	
000400:	030471	027117	041524	027067	030040	000000	000000	000000	
000410:	0000000	0000000	0000000	0000000	000400	000000	000001	000003	
000420:	0000003	0000004	0000002	0000001	000005	000000	000000	050521	
000430:	050521	050421	044456	031461	020000	037515	051531	046400	
000440:	036137	000000	037522	046125	047000	036137	000000	037501	
000450:	043114	043400	036137	000000	037514	051524	046000	036137	
000460:	0000000	037514	052516	044400	036137	000000	037522	051502	
000470:	0000000	042101	000000	000000	000000	000000	000000	007552	
000500:	177771	000000	000000	000000	000000	003463	039000	000000	
000510:	0000000	177750	000000	000000	000000	177777	177777	077777	
000520:	003327	000000	006407	000120	000001	000000	000000	000000	
000530:	114532	000000	001634	004160	004154	002214	003400	003511	
000540:	003020	002635	003744	003361	003426	004165	004267	002507	
000550:	004010	003244	003345	003177	001714	003563	004044	002212	
000560:	002653	002657	002661	002663	002665	002553	003214	003207	
000570:	003143	002576	002700	002631	002521	003130	003117	004243	
000600:	002445	004302	004303	004314	004376	000000	000000	000000	
000610:	004446	000000	000000	000000	000000	004505	000000	000000	
000620:	0000000	0000000	000000	004671	005264	000000	000000	002322	
000630:	002222	002637	004262	004151	001746	004034	004125	004304	
000640:	004305	001736	001726	001723	004300	004301	004307	004272	
000650:	004312	004313	004310	004311	004274	004150	004126	004127	
000660:	0044135	004124	004005	004024	004136	004035	004137	004277	
000670:	004131	004132	004133	004134	004270	004275	004130	004145	
000700:	004146	004147	003607	002213	003743	103575	003325	002463	
000710:	003204	003213	003220	003236	003003	005774	006011	006206	

## DISC RESIDENT I/O DRIVER B.P. LINKAGE

 XEC  
 SUBROUTINES  
 L2LINKS

 EXCL MOD  
 DISC RES  
 LINKAGE

 USER  
 BASE  
 PAGE  
 LINKAGE

DISCM

000720:	006354	006336	006372	105774	006330	006315	006410	006464
000730:	006660	006743	007567	0000000	0000000	0000000	0000000	0000000
000740:	0000000	0000000	0000000	0000000	0000000	0000000	0000000	0000000
000750:	0000000	0000000	0000000	0000000	0000000	0000000	0000000	0000000
001000:	0000000	0000000	0000000	0000000	0000000	0000000	0000000	0000000
000770:	0000000	0000000	0000000	0000000	0000000	0000000	0000000	0000000
001000:	010241	011001	012000	017624	020315	022175	022242	015126
001010:	021023	015342	015465	014302	014733	022213	115037	014623
001020:	015442	015754	020307	015124	015216	015221	014035	014711
001030:	020431	020432	014364	020433	020434	020435	015101	015557
001040:	021237	015623	014027	021051	022017	020443	020444	020445
001050:	020446	020447	020450	020451	020452	021015	014124	115101
001060:	014645	020453	015217	015256	017674	017377	017621	017601
001070:	022263	015753	021173	017625	020427	014435	014370	014353
001100:	015041	014636	014463	017314	015337	015513	014145	014044
001110:	014054	014055	014056	014052	014050	014022	014051	014057
001120:	014060	014061	015040	014045	012262	020524	013761	012725
001130:	013157	012063	012636	013152	016551	013435	013626	013147
001140:	013627	013140	013166	016242	013142	013433	013434	013170
001150:	020426	013161	021647	020757	021016	017427	021001	013126
001160:	020624	017412	016276	016414	016267	016561	016026	016273
001170:	013141	016010	013163	015427	012645	015214	020330	020327
001200:	015755	020326	115427	015341	015317	012103	015466	015445
001210:	015570	022214	022052	015266	015443	015675	015430	015462
001220:	015432	015433	015434	021026	015227	015431	021042	013164
001230:	015756	015343	022326	015624	020323	020324	020325	022264
001240:	022265	022266	022325	022274	022273	022276	022275	022270
001250:	022271	022267	022272	022305	022314	022320	022323	022324
001260:	014432	115442	014434	015131	020274	020015	022176	016415
001300:	017622	016416	015127	016376	016763	016720	017026	017023
001310:	015104	016422	017606	022463	022464	016411	016414	017600
001320:	017157	017156	022203	015444	022205	016417	016420	017632
001330:	016426	015722	013151	013133	016424	015037	015102	115102
001340:	016372	013174	016423	015720	022201	022204	022174	022036
001350:	022177	022207	022062	012722	022212	022210	022206	022211
001360:	022200	022215	022001	022003	021767	016241	021651	021064
001370:	021541	021540	021461	021474	016721	116721	013154	020527
001400:	013155	020465	012473	020436	120436	012723	020437	020440
001410:	020441	020442	014351	020314	012214	012215	012216	021000
001420:	020777	020653	020757	012213	021023	020043	020057	020206
001430:	020353	113273	020007	017433	117751	017774	017100	017150
001440:	017661	017542	017624	113276	017421	017111	017112	017571
001450:	017077	117112	017423	017107	017424	017422	017110	017106
001460:	017103	017113	117110	017306	117107	017102	017114	013271
001470:	013267	017101	013275	017305	117436	021707	021663	021774
001500:	022034	022062	147722	146701	152240	143317	151240	120302
001510:	144716	140722	154640	125215	105252	120311	147327	152724
001520:	120315	140731	120301	146323	147640	141305	120323	142714
001530:	142703	152305	142240	143317	151240	140640	151711	147307
001540:	146305	120322	142701	142240	120240	120240	120252	106612
001550:	125240	147720	142722	140724	144717	147256	120240	120240
001560:	120240	120240	120240	120240	120240	120240	120240	120240
001570:	120240	120240	120240	120240	120240	120240	120240	120240
001580:	120240	120240	125215	105252	120240	120240	120240	120240
001590:	120240	120240	120240	120240	120240	120240	120240	120240
001600:	120240	120240	120240	120240	120240	120240	120240	120240
001610:	120240	120240	120240	120240	120240	120240	120240	120240
001620:	120240	120240	120240	120240	120240	120240	120240	120240
001630:	120240	120240	120240	120240	003327	103100	017730	003034
001640:	070242	163634	170627	102504	033635	073646	103111	106504
001650:	054057	102004	054060	124630	054103	027754	044045	074000

DISCM

001660:	002020	027714	003000	040202	002020	027714	044201	160001
001670:	002003	027714	114552	102504	164204	114001	027776	060200
001700:	002003	027714	060261	002002	027714	160557	164201	006003
001710:	002002	027714	074260	124544	063634	017746	002001	027722
001720:	017726	127634	017726	102100	102705	127634	001721	060241
001730:	103101	000036	102101	060237	064240	127726	001637	070237
001740:	074240	001520	102201	002004	070241	127736	002106	003000
001750:	040254	002020	037746	127746	034105	027761	063775	070105
001760:	034104	060106	002020	027714	034107	027714	063775	070107
001770:	034106	060106	050110	124631	027714	176650	170217	070531
002000:	174220	017331	060513	003004	050203	070513	060262	000010
002010:	026070	060141	002003	026070	160212	002020	003004	050054
002020:	002001	026070	007400	044111	044121	003400	140001	114632
002030:	040117	050203	002001	026070	160214	160000	010075	150633
002040:	002001	026070	160211	114634	026070	060123	072052	160214
002050:	066207	017361	002052	160220	164215	006021	026061	002004
002060:	001100	070530	160206	012211	170206	160211	070242	026651
002070:	160217	002002	026152	160206	012211	170206	160213	012210
002100:	002002	026163	160211	070505	164220	114634	026150	164635
002110:	154636	026204	060260	002003	026143	003400	140121	114632
002120:	040117	040056	160000	002020	026143	062212	002002	026141
002130:	160206	070237	164220	074240	160211	070242	006400	074260
002140:	027426	006400	074260	164220	160206	102100	102705	124505
002150:	160206	124505	050056	002301	026641	160206	110637	150040
002160:	026644	060056	026641	063213	002003	026171	060513	002021
002170:	027256	160205	010072	053204	027244	063220	002003	124554
002200:	017003	027271	124554	027271	060203	072213	027244	177734
002210:	020000	037777	000000	000000	000000	103100	114641	062214
002220:	040052	002001	102505	070512	070242	072424	036424	160000
002230:	012473	052475	002001	026633	160512	012474	160000	052476
002240:	002001	026315	066424	160001	114634	026635	160001	070225
002250:	007004	040001	002003	026635	040052	070224	002020	026635
002260:	040042	002021	026635	064043	002400	017361	000226	064224
002270:	007004	036424	062266	070505	162424	016507	170505	034505
002300:	036424	006006	026274	160226	052500	002001	026325	114642
002310:	170001	006004	102100	102705	124225	052477	026320	026033
002320:	114642	114577	007400	134532	124643	002003	026635	052501
002330:	124534	052502	026346	052503	026340	052504	026425	026362
002340:	060237	072342	000000	026312	034105	026312	060103	002003
002350:	026344	032505	072357	060103	032506	072360	060056	000000
002360:	000000	026312	002021	003004	042461	002020	026635	160226
002370:	002020	003004	070514	050064	026400	050065	002001	026402
002400:	060063	070514	050060	026312	042436	160000	050052	026635
002410:	052437	026431	070474	062462	070475	002404	064514	154475
002420:	027020	002004	034475	026417	000000	160644	070474	060066
002430:	027020	006400	160645	070474	062470	027020	002436	002431
002440:	002431	002431	100612	177777	100605	100606	100607	100607
002450:	100607	100611	177777	002431	002431	002431	100603	100604
002460:	100612	000022	002463	000020	000021	000006	000001	000010
002470:	000022	000013	000004	176000	001777	114000	002214	004243
002500:	177755	177754	177753	177752	000027	102600	103700	000000
002510:	002003	026635	050054	026635	001275	002001	126507	160000
002520:	026514	140646	070514	060232	070472	066552	074473	160647
002530:	070474	062471	027020	006003	026665	060514	050055	002001
002540:	026432	060001	040055	160000	010071	050065	026432	052471
002550:	026432	026631	002533	004172	010072	002003	026653	007400
002560:	044000	003004	040122	002020	026653	044121	160001	002003
002570:	026655	040052	114632	040117	017345	126553	000000	164226
002600:	174212	006020	007004	060225	170211	160227	050050	003004
002610:	170213	060230	054056	160230	170214	160231	1/0215	060232

002620:	154654	026625	154651	026625	160232	170216	160233	170217
002630:	126576	006400	026670	064054	026670	064055	026670	064056
002640:	026670	064057	070473	026670	007400	170206	016775	164652
002650:	026670	164653	026670	064060	026670	064061	026670	064062
002660:	026670	064063	026670	064064	026670	064065	060512	002801
002670:	060242	070472	002400	070245	160654	070474	160653	027420
002700:	004241	160205	002021	026723	060061	070257	017003	026721
002710:	026717	160206	110637	150640	026717	034257	026721	060660
002720:	026774	060203	170001	160213	010277	070001	160212	002021
002730:	003004	150650	026740	150651	026742	030001	170213	026744
002740:	002404	026735	060055	026735	160205	010072	164203	114001
002750:	070518	002102	026766	160205	001222	000010	026762	060513
002760:	003004	070513	160206	130655	170206	126700	050056	002304
002770:	017331	006440	016776	060510	036700	126700	000000	060526
003000:	002003	126776	124000	002707	064201	002400	150001	027417
003010:	060165	002002	027016	006004	150001	037003	037003	127003
003020:	073116	077115	060243	070477	060244	002003	124474	003004
003030:	070500	060245	002020	027222	053116	027110	160477	010074
003040:	053116	027047	034477	034477	034500	027036	124474	003004
003050:	070245	064246	074157	007004	044247	074170	160477	001722
003060:	010071	034477	164477	074166	036212	002003	027106	001722
003070:	001222	070001	003004	040170	002021	074170	017117	060174
003100:	070166	064250	074157	007004	044251	074170	017117	072212
003110:	067115	063116	003004	070245	124246	000001	000014	003107
003120:	060165	017130	063127	006404	017400	002400	127117	000166
003130:	003122	006400	114577	177770	060154	010074	003004	044000
003140:	006021	026663	127130	000000	070513	054252	074157	007004
003150:	140650	144000	074170	040055	160000	070166	017117	060174
003160:	070166	064253	007004	060513	140651	144000	006003	127143
003170:	060253	070167	036212	074170	017117	072212	127143	073204
003200:	077205	060206	073205	027244	000000	000000	000000	000000
003210:	060203	073213	027244	000000	073221	060203	073221	027244
003220:	0000000	0000000	037236	063115	073240	063116	073237	062414
003230:	073241	060472	073242	060473	073243	027244	000000	000000
003240:	0000000	0000000	000000	000000	063204	002003	027256	163205
003250:	001222	010056	002002	027256	073204	127206	063213	002003
003260:	027271	060513	002020	027271	063213	017345	002400	073213
003270:	127207	063220	002003	027304	017003	027277	027304	063220
003300:	017345	002400	073220	127221	063236	002003	027325	060245
003310:	002020	027325	002400	073236	063242	070472	063243	070473
003320:	063241	070474	063237	067240	027020	102100	003400	007400
003330:	027325	002002	064201	060203	150001	027342	000004	150001
003340:	002001	127331	002400	170001	127331	002575	007350	074474
003350:	067357	170001	002004	006004	034474	027351	127345	000203
003360:	177757	000000	070503	074505	167361	074504	037361	006400
003370:	002002	164503	174504	034503	034504	034505	027367	127361
003400:	007675	077412	064203	077423	073424	060055	073413	063424
003410:	073414	114545	000001	000002	007726	000000	003420	027244
003420:	063423	017345	127400	000000	007726	000000	077561	017563
003430:	034261	067561	063556	006002	063553	073441	114545	000002
003440:	0000001	003554	000002	003463	063561	002002	027244	060520
003450:	114634	027244	060517	103101	000036	102101	000515	064516
003460:	102100	102705	124520	017563	060123	073471	114545	000001
003470:	000401	037634	000044	003475	027444	077562	017563	002400
003500:	070261	067562	017575	060471	150656	027430	150657	027430
003510:	027444	060111	050054	027544	073532	064123	077533	016553
003520:	160205	001222	000010	027530	060203	050513	002001	017143
003530:	114545	000001	003532	003533	000044	003537	027244	160123
003540:	010075	150633	017575	027511	060261	002003	027551	034260
003550:	027244	007400	027426	003554	006412	040137	003557	006412

DISCM

003560:	025137	177777	0000000	003464	060237	070515	060240	070516
003570:	060241	070517	060242	070520	127563	0000000	074530	074472
003580:	067575	074473	064123	160001	010075	150633	027631	034201
003590:	114545	0000002	0000001	004140	177770	003625	064471	154656
003600:	027244	060520	114634	124554	027452	002400	070261	017563
003610:	127575	160001	006004	164001	114577	177770	170635	064471
003620:	154660	027677	150661	124662	150636	124663	150664	124665
003630:	150666	124662	154656	002001	027702	150656	006401	027714
003640:	074471	062213	002002	027670	160667	070474	062463	027020
003650:	076213	150656	027447	017345	160211	070505	026141	150664
003660:	027743	027607	154657	027736	006002	027607	064262	004010
003670:	027714	064141	006003	027743	150670	027731	150671	027725
003680:	150672	027731	150673	027731	027607	160674	070474	150664
003690:	027020	160675	070474	160650	064530	027820	150657	027743
003700:	150676	027743	027607	002400	114556	002404	070262	160677
003710:	070141	160700	070142	160701	070143	060263	070166	060254
003720:	070167	060264	070170	017117	060174	070166	060255	070167
003730:	050265	070170	002400	070471	017117	002400	070261	070260
004000:	064530	070530	102100	102705	124254	060112	070111	006400
004010:	074475	060106	032150	070106	016044	070262	070245	062276
004020:	070474	064475	062313	124540	064242	074470	062126	050471
004030:	124702	070471	170703	124544	0000000	060141	002003	124704
004040:	060262	032150	070262	124705	0000000	060120	003004	070474
004050:	074475	064117	044055	160001	010072	032144	072075	006204
004060:	160001	001265	012304	052305	002041	026073	062072	044056
004070:	170001	124706	004045	052153	032152	170001	107700	144707
004100:	034474	026053	102106	107706	102107	107707	064201	002400
004110:	170001	070513	170710	170711	170712	170713	070261	070260
004120:	170703	006004	170001	126044	040502	050101	043517	045117
004130:	042512	046125	042521	052520	042116	042101	052131	047506
004140:	044587	047117	051105	042940	107700	045117	041120	051140
004150:	1900000	035000	0000040	000400	062271	070474	060065	124540
004160:	100700	062273	070474	062310	124540	003474	062165	002004
004170:	1600000	114565	160206	001222	010056	002003	026204	007400
004200:	046165	150205	010072	124553	160206	012304	052385	002001
004210:	026217	114714	026217	003401	003400	042165	124566	162165
004220:	002021	003004	170212	036165	162165	170213	036165	162165
004230:	170214	036165	162165	170215	036165	162165	170211	036165
004240:	114572	126165	026240	003134	072260	152243	072261	062260
004250:	036243	0000066	005600	002040	002004	036261	026251	126243
004260:	001005	0000000	002573	070001	001700	040001	126262	000470
004270:	100613	100614	100615	100616	100617	100620	100621	100622
004300:	100623	100624	100625	100626	037400	014400	177764	177763
004310:	0000014	0000015	0000016	0000017	060224	040047	002002	026373
004320:	060231	114715	160226	002020	026353	060160	006400	114577
004330:	177770	002002	006004	007004	144230	006021	026341	006400
004340:	026365	006400	060154	010074	003000	140227	140230	002003
004350:	026353	002021	026365	164230	144227	007004	060154	010074
004360:	002004	040001	002020	026337	164230	174231	002400	070245
004370:	192100	102705	124225	002400	070245	124541	060224	040047
004400:	002002	026443	060227	114715	060230	114715	060231	114715
004410:	060160	006400	114577	177770	002002	006004	174227	060102
004420:	002003	026431	006400	114577	177770	002002	044052	074000
004430:	026433	060154	010074	170230	060116	170231	002400	070245
004440:	192100	102705	124225	002400	070245	124541	060050	040024
004450:	002002	026502	060230	114715	064227	034162	060200	002004
004460:	114716	026477	064227	060114	114716	026477	002400	170230
004470:	002400	070245	044052	160001	102100	102705	124225	044057
004500:	160001	026467	002400	070245	124541	060472	072004	060473
004510:	072665	060245	052666	026537	060262	002002	026601	060525

\$EXΦ1

\$EXΦ2

\$EXΦ6

\$EXII

\$EX11

004520:	166663	056670	002003	026601	066647	076641	062664	114717
004530:	026614	066641	044063	076641	056663	026605	026526	062664
004540:	066577	114717	026556	062664	066573	114717	026562	034162
004550:	060200	002004	066664	114716	026567	006401	066577	002400
004560:	070245	126665	062573	064046	114543	000270	066647	076664
004570:	062577	064046	114543	000133	062664	064046	114543	000126
004600:	026556	002400	066667	114543	000270	034162	060200	002004
004610:	066664	114716	026630	026555	066641	044060	160001	070161
004620:	006004	160001	070157	006004	160001	070200	066641	026567
004630:	076664	062663	040043	052647	026644	072641	040043	064043
004640:	114543	000000	062641	026632	062664	064046	114543	000270
004650:	060161	070275	060157	070276	060200	070277	062679	172663
004660:	034525	066647	026567	000046	000000	000000	177755	177607
004670:	022124	026707	062771	002020	026772	062704	060102	062705

004700:	070473	017250	064057	027051	047122	050105	004672	060161
004710:	073261	060200	073262	064224	044047	006024	026724	160231
004720:	050054	027074	002024	027120	062706	070526	060156	003000
004730:	006021	160230	072771	002020	027013	070161	017215	017126
004740:	063030	114721	026747	064227	017200	027025	027101	160227
004750:	002003	027043	010075	053000	027101	027043	062771	003000
004760:	070161	017215	063030	114721	027001	064227	017200	026772
004770:	027006	000000	036771	026756	063162	066777	027045	177756

005000:	025000	160227	010075	053000	027006	026772	060262	002002
005010:	017230	017126	027101	160227	002002	026756	072771	017230
005020:	017215	017126	063030	114721	027043	063031	064041	027045
005030:	005034	005032	046102	046075	000000	000000	000000	005040

005040:	052516	046102	046040	063037	064046	114722	017250	064055
005050:	047154	002400	073154	070526	070245	160600	070474	060057
005060:	124540	006400	074245	074526	063154	002002	027050	063263

00510:	102100	102705	124225	005046	160230	070161	063073	070526
005100:	017215	006400	077253	074126	074133	067177	017200	027115
005110:	006404	060370	070200	063227	114720	064370	074157	027061
005120:	070245	160601	070474	063125	124540	000023	000000	060176
005130:	050272	027136	070472	060272	070473	037154	000271	053155
005140:	127126	067161	053156	067157	057161	063160	073164	077165
005150:	063163	064043	114722	127126	000000	042117	052123	041040
005160:	037477	037440	005166	005164	000000	000000	042111	051043
005170:	020116	047524	020117	047040	051531	051524	042515	005174

005200:	000000	160001	050273	0060005	127200	160001	050274	0060005
005210:	127200	160001	050275	037200	127200	000000	006400	060161
005220:	050155	064115	074200	063227	006404	114720	127215	000200

005230:	000000	060161	033241	001727	073247	063242	064042	114722
005240:	127230	000060	005243	051525	041103	044101	047075	000000
005250:	000000	063261	070161	063262	070200	060074	070163	073263

005260:	127250	000000	000000	000000	006302	027700	160227	064161
005270:	077314	050050	003004	114565	060514	053313	002001	027335
005300:	017766	160206	170230	064224	054056	027310	164220	174231

005310:	102100	102705	124225	000015	000000	000000	040201	040045
005320:	073766	164000	006003	027331	044055	160001	010072	053334
005330:	002001	037315	060203	127315	000000	160205	010072	073334

005340:	017315	027356	063334	002004	017315	027356	060061	017315
005350:	027356	060062	017315	027356	102000	027354	006004	160001
005360:	064514	054056	027411	001222	010056	002003	027411	050054

005370:	027402	050055	027376	063375	124566	005266	017766	063334
005400:	064512	124553	060512	070470	063410	070471	017766	124544
005410:	043517	063334	017315	173766	063334	002004	017315	173766

005420:	160205	001222	000010	027427	064513	006020	114567	060514
005430:	050054	027435	050055	027435	027443	160227	050050	003004
005440:	010072	050056	034162	114571	160226	002021	027462	160206

005450:	013456	053457	027565	027667	017766	124574	037400	014400
---------	--------	--------	--------	--------	--------	--------	--------	--------

\$EX17

\$EX18

\$ EX18

005460: 0000016 0000017 060514 050056 027667 064230 007000 044254  
005470: 006021 124561 017756 044230 002040 124562 007004 044160  
005480: 006020 124562 160206 013456 053457 002001 027667 060514  
005510: 053460 027454 053461 027454 060102 002003 027523 001727  
005520: 010074 040052 027525 060154 010076 070505 060160 006400  
005530: 114577 177770 002002 006004 160232 010074 177767 002042  
005540: 040001 002021 124563 063755 006400 114577 177767 002042  
005550: 006004 144233 002400 044511 006420 027560 002004 027553  
005560: 140232 003004 040505 002029 124563 160233 040511 002021  
005570: 124563 160232 001727 130233 070171 060230 070172 160231  
005600: 070173 060224 040045 002002 124560 060055 114565 114571  
005610: 064177 160227 050050 074161 063753 170214 114572 027654  
005620: 067314 074161 050060 027642 050055 027650 050056 002001  
005630: 027645 060203 070472 160600 070474 017766 067641 060057  
005640: 124540 0000022 063644 124566 005616 050057 002001 124573  
005650: 017766 160206 006400 027310 017766 063314 070161 160227  
005660: 050050 003004 013666 002003 124551 027310 020000 160245  
005670: 001222 0000010 027616 060203 050513 027616 114570 027616  
005700: 160233 003004 067754 074504 044057 140001 070505 017756  
005710: 060161 073314 006400 063755 114577 177747 006002 002004  
005720: 003004 040505 002029 124564 064504 044056 160001 006400  
005730: 114577 177770 077756 001727 140233 070505 040511 002020  
005740: 027744 037756 070505 027736 067756 005727 060505 030001  
005750: 070171 034162 027575 000171 000126 000000 000000 164231  
005760: 006121 027764 005100 007004 077755 127756 000000 060245  
005770: 002020 003004 070245 127766 000000 003000 070001 040204  
005800: 002021 026006 044100 006020 026006 124723 002400 070245  
005810: 124541 000000 072125 076126 060161 072107 060152 072123  
00 20: 002400 070162 072130 060115 040075 064055 016252 016136  
006030: 062123 002003 026114 064527 056057 026111 006020 026060  
006040: 004065 006043 026111 076131 002041 026054 062130 052107  
006050: 026054 016202 026054 016136 036130 066131 026040 047117  
006060: 060156 003000 072130 062130 003000 052107 026072 016202  
006070: 026072 016136 036130 026063 026111 062124 066110 114543  
006100: 016123 060161 052107 026115 002400 070126 026115 000000  
006110: 177765 062107 016202 000000 036011 060115 040075 006004  
006120: 016252 066100 126011 000000 000000 000000 000000 062125  
006130: 000000 000000 000000 000000 000000 000000 000000 000000  
006140: 016244 062264 072124 062126 066124 016266 026075 066124  
006150: 044055 160001 010073 040045 002020 044061 044056 076124  
006160: 007000 144546 006020 026172 162124 002003 126136 050052  
006170: 002001 026143 035125 062125 010073 003004 040116 002002  
006200: 026137 126136 000000 070161 060074 070163 062237 070526  
006210: 002400 070200 016244 062241 050273 060274 052242 060275  
006220: 052243 002001 026226 060370 070200 016244 000370 070157  
006230: 060200 002004 072125 036202 002400 070526 126202 006240  
006240: 026234 051531 051524 042515 000000 066123 074162 006404  
006250: 016252 126244 000000 070166 062264 070167 002263 070170  
006260: 062265 114536 126252 000200 000270 000166 000000 072127  
006270: 160001 152127 002001 026313 006004 036127 160001 152127  
006300: 002001 026313 006004 036127 162127 010075 072127 160001  
006310: 010075 052127 002001 036266 126266 000000 002327 072334  
006320: 003400 066370 120001 006004 036334 026322 126315 177741  
00 330: 000000 076334 064050 114543 000000 126330 000000 064000  
006340: 062352 016330 060270 052353 002001 126336 016315 050327  
006350: 036336 126336 000273 046102 000000 070170 076334 064200  
006360: 074166 062370 070167 062371 066334 034162 114536 126354  
006370: 000270 000166 000000 072401 076402 034261 114545 000002  
006400: 000001 000000 000000 006405 124551 002400 070261 126372  
006410: 002750 160213 010056 050056 026431 032633 002311 001425

\$LBL

\$SRCH

\$ADDR

DVR05

006420:	102611	016446	000015	016464	102711	002400	170220	126410
006430:	006424	120213	052577	026436	060057	126410	164214	006021
006440:	007004	174217	005300	174214	060055	026415	006422	164214
006450:	005200	174216	164215	007324	005010	007004	001310	026462
006460:	006003	007400	174217	126446	001676	062464	062430	026476
006470:	160206	002720	026476	034260	036464	126464	164213	005332
006500:	026611	102511	010073	050073	026541	052422	026537	050065
006510:	026562	006020	026537	050054	026544	164216	004065	134216
006520:	002041	001727	072446	060074	002340	001727	110001	032446
006530:	170001	160213	001421	134217	000040	001425	170213	030464
006540:	026606	016446	160213	026535	016553	044052	174216	160217
006550:	040052	170217	026537	000000	160214	001000	150216	026537
006560:	164216	126553	005421	174213	016553	004065	160001	010075
006570:	032534	002040	170001	160217	164215	002004	006021	001100
006600:	006020	007300	044000	106711	001521	102611	103711	002400
006610:	126464	062464	052430	026621	102511	010074	050074	026621
006620:	070260	002400	150216	026574	150217	026645	160216	134216
006630:	009065	004010	062630	160000	006051	001727	010074	134217
006640:	026643	052657	026574	102611	026537	062422	150220	060065
006650:	170220	052422	026643	006400	174215	026643	004000	000137
006660:	002753	064162	060155	006002	060161	073360	000065	073347
006670:	002441	063344	073352	060164	006002	060163	073353	063347
006700:	017211	000400	010067	002102	026737	160213	010056	001510
006710:	026714	067145	063336	026727	063337	002341	026726	160213
006720:	010077	001225	053340	026726	060057	126660	067332	077062
006730:	073346	060041	170220	062736	072743-	026764	006737	060056
006740:	006400	074162	126660	001676	063347	106515	006003	026755
006750:	002400	004033	026755	002004	026751	017211	027115	067333
006760:	106606	164217	124001	006764	164214	006804	160001	002003
006770:	027071	073354	006004	160001	002021	003005	001100	002003
006780:	003400	073355	044051	160001	010075	073350	120001	073351
006790:	003004	040016	001727	001300	043355	002020	027034	001727
0067020:	001200	010074	003004	040016	050116	062701	043350	070174
0067030:	002400	006004	170001	027051	044055	003004	170001	043355
0067040:	073355	044052	003004	043354	170001	044052	063350	042701
0067050:	170001	017126	017241	067354	063346	053336	047343	106702
0067060:	106602	067355	103714	017162	017241	063346	053337	017172
0067070:	026764	060200	002302	000040	060162	067353	002041	002003
0067100:	074164	002041	002002	074163	002400	070162	164215	006020
0067110:	007004	126743	007171	063112	170217	002400	036743	126743
0067120:	007167	033347	106715	102615	103715	127120	007052	063351
0067130:	043335	002021	032701	002020	043334	033352	070001	063350
0067140:	001767	017143	127126	007142	102614	103714	063353	002300
0067150:	073353	063341	001225	017120	102314	027154	106614	103714
0067160:	017112	127143	007064	102792	106502	103706	017120	106706
0067170:	017112	127162	000000	017126	063355	003004	040073	001727
0067200:	001200	010071	102614	103714	063342	017120	017112	017241
0067210:	127172	006757	102106	103714	106715	102615	103715	102314
0067220:	027217	102514	073357	010074	073356	063357	001226	002440
0067230:	027237	160206	010075	033356	170206	037211	127211	070525
0067240:	127211	007065	063357	002111	127241	001422	001727	000010
0067250:	027262	001723	000312	027305	057340	127241	134220	027276
0067260:	001200	002021	002405	060056	006400	074162	067360	074126
0067270:	067351	074139	067350	074127	005727	126743	063252	006500
0067300:	017143	002400	006500	017143	027051	001332	027315	067346
0067310:	057336	027254	027313	102031	027104	017126	067345	106702
0067320:	106602	063336	007400	103714	017162	063350	010075	073350
0067330:	034525	027051	102114	120014	000014	177764	020000	010000
0067340:	110400	030000	060000	100000	001000	107350	020000	000000
0067350:	013000	000000	000000	000000	000270	177600	000000	100000

DVR31

007360:	002001	006410	006464	040011	102400	000000	000000	000000	003415	DVR05
007370:	177777	000401	037634	0000044	077470	177670	000000	000000	000000	EQ
007400:	002000	000000	010241	010313	000013	000440	000000	000000	000000	DVR01
007410:	000000	000000	000000	000000	000000	000000	000000	000000	000000	TABLE
007420:	010555	001002	001101	006660	006743	140014	014430	000000	000000	DVR31
007430:	000000	003420	177777	001001	007726	000000	000000	000000	000000	DVR02
007440:	000000	000000	000000	000000	010241	010320	000016	001000	001000	DVR02
007450:	000000	000000	000000	000000	000000	000000	000000	000000	000000	DVR22
007460:	000000	000000	010443	001002	001404	010241	011001	100022	000000	DRT →
007470:	011000	000000	000000	000000	000000	000000	000000	000000	000000	INT. TABLE
007500:	000000	000000	000000	011075	001302	001407	000001	000000	000000	EXEC MOD.
007510:	000003	000004	000002	000001	000005	000000	000000	000000	000000	DOUBLET
007520:	007361	000000	007492	000000	007423	007444	000000	000000	000000	TABLE
007530:	000000	000000	007465	000003	000013	000004	000005	000000	000000	
007540:	000421	000007	000023	000010	000025	010011	000027	000000	000000	
007550:	001002	004014	001004	014015	001006	014016	001012	001012	001012	
007560:	001016	004020	001021	010023	001023	010024	001026	001026	001026	

DRT

CONTINUED

\$EX16 Entry

\$EX19 Entry

\$EX20 Entry

\$EX04  
Entry

\$EX03 Entry

## V. INTERNAL SYSTEM ORGANIZATION

### A. Format for Disc Files

- (1) Absolute (Core Image) [SLIDE 43].
- (2) Relocatable [SLIDE 44].
- (3) ASCII Source Statements [SLIDES 45A, 45B].
- (4) ASCII or Binary Data.
  - a. System simply reserves space - does not set initial file contents to any value(s).

### B. Disc Layout for Generation Example

<u>TOPIC</u>	<u>MAIN PROJECTURE</u>	<u>AUX. PROJECTURE</u>
Overall Disc Layout	50	-----
System Label Sector	51	AD-1
Disc Resident Bootstrap	50	AD-1
System Directory	50,52	AD-1 → AD-3
Core Res. Sys. (#2)	50,53	AD-3 → AD-10
Core Res. Sys. (#3)	50,54,55	AD-10
Disc Res. Programs	50,56	AD-10 → AD-24
Core Res. Sys. (#4)	50,57,58	AD-25
Core Res. Sys. (#1)	50,58	AD-26 → AD-27
User Label Sector	50,59	AD-28
User Directory	50,60,61	AD-28 → AD-29

### C. Detailed Description of System Base Page Communication Area. (Found in Appendix A of Operators' Manual).

Description starts on next page. (Slides AP-1)  
(General Core Layout) and (AP-6) (Low Core of Memory Dump) will be used to relate values where possible.

DOS-M BASE PAGE LOCATIONS

<u>LOCATION (S)</u>	<u>TYPE</u>	<u>CONTENTS</u>	
3	--	Start address for System Start-up (branched to indirect by Disc Resident Bootstrap following loading of Core Resident System).	
4-37	--	JSB N,I where N is a Base Page Location containing the Central Interrupt Controller (\$CIC) address.	
40	DEC	-64	(177700)
41	DEC	-10	(177766)
42	DEC	-9	(177767)
43	DEC	-8	(177770)
44	DEC	-7	(177771)
45	DEC	-6	(177772)
46	DEC	-5	(177773)
47	DEC	-4	(177774)
50	DEC	-3	(177775)
51	DEC	-2	(177776)
52	DEC	-1	(177777)
53	DEC	0	(0)
54	DEC	1	(1)
55	DEC	2	(2)
56	DEC	3	(3)
57	DEC	4	(4)
60	DEC	5	(5)
61	DEC	6	(6)
62	DEC	7	(7)
63	DEC	8	(10)

<u>LOCATION</u>	<u>TYPE</u>	<u>CONTENTS</u>	
64	DEC	9	(11)
65	DEC	10	(12)
66	DEC	17	(21)
67	DEC	64	(100)
70	OCT	17	(17)
71	OCT	37	(37)
72	OCT	77	(77)
73	OCT	177	(177)
74	OCT	377	(377)
75	OCT	177400	(177400)
76	OCT	3777	(3777)
77	OCT	177700	(177700)

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
100	UMLWA	Last word address of user available memory. Will always be one less than contents of location 123.
101	JBINS	Start TRACK/SECTOR of job binary area. =Ø if job binary area not assigned. =-1 if this area overflows during compilation or assembly. = TRACK/SECTOR at end-of-disc for area assigned.
102	JBINC	Current TRACK/SECTOR of job binary area. Only set by compilers or assembler using this area.
103	TBG	Time Base Generator I/O Channel address. Will be Ø if TBG not on system.
104	CLOCK	Minutes part of System Time Clock.
105	CLOCK+1	Tenths of seconds part of System Time Clock.
106	CLEX	Minutes part of execution Time Clock. Bit 15 is set "ON" to turn this clock off.
107	CLEX+1	Tenths of seconds part of Execution Time Clock.
110	CXMX	Maximum allowable execution time. Set by :RUN Directive time parameter or to 5 if not given.

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
111	BATCH	Logical Unit # of Batch Input Device. Set by :BATCH Directive.
112	SYSTY	Logical Unit # of System Teletype.
113	DUMPS	Abort/Post Mortem dump flags. Bit 15 --- Abort dump flag. Bit Ø --- Post mortem dump flag. Bit will be on if condition set. These bits will be set by :ADUMP and :PDUMP Directives and cleared by either their execution, :OFF Directive, or new :JOB Directive.
114	SYSDR	System Directory start TRACK/SECTOR. Set to where system is declared as starting during generation.
115	SYSBF	System Buffer TRACK/SECTOR. Since always on track boundary, sector part will always be Ø.
116	SECTR	Number of <u>logical</u> sectors per disc track.
117	EQTAB EQT#	Start Address of Equipment Table.
120	LUTAB LUT#	Number of entries in entire Equipment Table. Each entry is 17 words.
121	JBUF	Start address of Logical Unit Table.
122	JFILS	Number of entries in Logical Unit Table.
123		Start address of Job Input Buffer.
124		Start TRACK/SECTOR address of source file. Set by execution of :JFILE Directive.

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
125	JFILC	Current TRACK/SECTOR address of source file. Updated as Compiler or Assembler accesses the source file.
126-140	RONBF RONBF+1 : RONBF+10	<p>Multi-purpose 11 word buffer used by system when user program is executing. Some uses are:</p> <ul style="list-style-type: none"> <li>(1) Saving of two 5 word user File directory entries to increase system efficiency when user program is running on only one subchannel. System looks here first for Directory entry before searching Disc Directory.</li> <li>(2) Contains actual parameter valves (P1,P2,...) following :PROG, and :GO directives.</li> <li>(3) Information is passed to \$EX20 (Parity Error Processor) by these locations.</li> </ul>
141-153	EXPG : EXPG+10	Directory Entry for currently executing USER program. For MAIN programs having segments: The first 2 1/2 words will always be those of the MAIN program's Directory entry (File Name in ASCII) with the remaining 8 1/2 words equal to the segment currently executing Directory entry information.
154	DISCO	<p>Bits 11-15 (Disc Data Channel select code).</p> <p>Bits 0-10 (Last Track on System). <i>just below 15+ SPRIM</i></p>
155	SYSSC	System Disc Subchannel number. Will always be equal to S.C. bootstrapped down from.

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
* 156	SCCNT	Number of Subchannels on System -1.
157	UDNTS	Next TRACK/SECTOR address on Current User Disc,
160	SYNTS	Next TRACK/SECTOR address on System Disc. Will always equal the start of Work Area.
* 161	CUDSC	Current User Disc subchannel number.
162	CRFLG	Current Disc request flag. ( $\emptyset$ for System Disc; $\neq \emptyset$ for Current User Disc). DVR3I always clears on completion of Disc request and examines on entry to see what disc to access.
163	CUDLA	Current User Disc TRACK/SECTOR address last accessed. Only used by DVR3I.
164	SDLA	System Disc TRACK/SECTOR address last accessed. Only used by DVR3I.
165	CUMID	Computer identification code.. ( $\neq \emptyset$ if computer is 2114B thus only having one DMA channel).
166-170	DBUFR	System Disc Request Parameter Buffer. DBUFR = TRACK/SECTOR DBUFR+1 = BUFFER ADDRESS DBUFR+2 = NUMBER OF WORDS (Set by System prior to Disc I/O for DVR3I to use).

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
171-173	UBUFR	Current User Disc Request Parameter Buffer. UBUFR = TRACK/SECTOR UBUFR+1 = BUFFER ADDRESS UBUFR+2 = NUMBER OF WORDS (set by System prior to Disc I/O for DVR31 to use).
174	TSONE	Last referenced TRACK/SECTOR address +1. Set by DVR31. Could be used by User program accessing the WORK AREA to see what next available TRACK/SECTOR address is.
175	GUDSC	Default User Disc Subchannel number. Always follows System Disc Subchannel number when Default User Disc is on same subchannel as System. (like when :DD executed), otherwise it stays where started W.R.T. Bootstrapped System.
176	SYSCD	System Generation Code.
177	JFLSC	Current Source File Subchannel number. Set by :FILE Directive.
200	DISCL	User label TRACK/SECTOR address. =Ø if Current User Disc is not on System Disc. If Current User Disc is on System Disc this Disc address = System Buffer Sector address. Incrementing this Disc address by one sector always gives the start of the User Directory TRACK/SECTOR address on the Current User Disc.

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
201	INTAB	Start address of Interrupt Table.
202	INT#	Number of Interrupt Table entries.
203-223	EQT1 EQT2 ⋮ EQT17	Addresses of Current Equipment Table Entry
224	RQCNT	Number of request parameters in current EXEC call. JSB EXEC and DEF RTN are not counted.
225	RQRTN	Request return address in current EXEC call.
226-235	RQP1 RQP2 ⋮ RQP8	Addresses of current request parameters. RQP1 is for the request code address etc.
236	NABRT	Illegal request code abort/no abort option parameter. #0 if set. Set by N parameter in :RUN Directive. <i>Stays in effect in current job.</i>
237	XA	A Register contents at time of interrupt.
240	XB	B Register contents at time of interrupt.
241	XEO	E (Bit 15) and ♂ (Bit 0) Register contents at time of interrupt.
242	XSUSP	Address at time of interrupt (P-Register)
243	EXLOC	Start address of EXEC MODULE DOUBLET TABLE

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
244	EX#	Number of entries in EXEC MODULE DOUBLET TABLE.
* 245	EXMOD	EXEC MODULE currently in EXEC MODULE overlay area. = Ø if none resident. = +N if module #N resident and available. = -N if module #N resident and BUSY.
246	EXMAN	EXEC MODULE overlay area <u>low</u> Main Core Address.
247	EXMAN+1	EXEC MODULE overlay area <u>high</u> Main Core Address.
250	EXBAS	EXEC MODULE Base Page linkage <u>low</u> address.
251	EXBAS+1	EXEC MODULE Base Page linkage <u>high</u> address.
252	IODMN	START ADDRESS OF I/O Driver Main overlay area.
253	IODBS	Start address of I/O Driver Base Page overlay area.
254	UMFWA	Start address of User Main Area.
255	UBFWA	Start address of User Base Page Linkage Area.
256	UBLWA	Last word address of User Base Page Linkage Area.
257	CHAN	Current DMA channel number assigned. = Ø if no DMA in use (not really true; last value remains)

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
260	OPATN	Operator attention flag. = Ø for not set. ≠ Ø if desired. Set by System TTY Driver.
261	OPFLG	System TTY busy flag. = Ø if not busy. ≠ Ø if busy. <i>only set in monitor when called</i>
262	SWAP	Job Processor resident flag. BIT 15 = 1 if System TTY is Batch Device. BIT Ø = 1 if Job Processor is in core.
263	JOBPM	Job Processor start TRACK/SECTOR address.
264	JOBPM+1	# of words in MAIN section of Job Processor.
265	JOBPB	# of words in Base Page Linkage for Job Processor.
266	EJOBF	End-of-Job flag used only by Job Processor. = "blanks" if re-entry of :DATE allowed = Ø if in a job. = 1 if between jobs. = -1 if end-of-job.
267	RTRK	Real Time simulation track #.
270-467	\$BUF	128 Word System I/O Buffer. Used only by Monitor and EXEC modules.
	\$BUF+1	
	⋮	
	⋮	
	⋮	
	\$BUF+127	
470	\$GOPT	Point of suspension return address. Contains return address when \$IDCD (location 471 below) = GO.

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
471	\$IDCD	Input request code check characters. = Ø for no special restrictions. ≠ Ø for special restrictions placed on what can be entered via system TTY keyboard (like DA, GO, etc...).
472-473	\$MDBF	2 Word EXEC Module Data Buffer.
474-5Ø2	TEMP	System Temporary.
	TEMP+1	
	⋮	
	TEMP+6	
5Ø3	TEMPØ	System Temporary.
5Ø4	TEMP1	System Temporary.
5Ø5	TEMP2	System Temporary.
5Ø6	TEMP3	System Temporary.
5Ø7	TEMP4	System Temporary.
51Ø	TEMP5	System Temporary.
511	MSECT	Negative # of logical SECTORS per TRACK.
512	VADR	Address of last instruction that caused a memory protect violation.
513	IODMD	I/O Driver Overlay Area resident flag. = Ø if no I/O Driver in this area. ≠ Ø if an I/O Driver is in this area. The value (if not Ø) will be: + (Address of resident Driver's first EQT entry) if area is available OR - (Address of resident Driver's first EQT entry) if this area is not available

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
514	RCODE	Current request code value. Will always be positive.
515	SXA	Operator attention A Register save.
516	SXB	Operator attention B Register save.
517	SXE0	Operator attention E (Bit 15) and 0 (Bit Ø) Register save.
52Ø	SXSUS	Operator attention return address save (P-Register).
521	SEQTI	Operator attention EQT Table address save.
522	DSCLB	Disc TRACK/SECTOR Address of Disc Resident Relocatable Library. Used by Relocating Loader.
523	DSCL#	Number of sectors in Disc Resident Relocatable Library.
524	LSTCH	Last Disc referenced flag. = Ø if current user program (to be executed by :PROG or :RUN) is on System Disc. ≠ Ø if current user program (to be executed by :PROG or :RUN) is on Current User Disc.
	<u>NOTE:</u>	\$EX10 (Program Load) uses to see how to set CRFLG flag (location 162).
525	FLFLG	User file table validity flag. (= Ø if invalid; ≠ Ø if valid). \$EX11 uses to see if OK to use \$BUF area for user file directory entry storage.

<u>LOCATION</u>	<u>LABEL</u>	<u>CONTENTS</u>
526	XFLG	<p>Transfer Address for Disc Not Ready condition.</p> <p>= Ø to process Not Ready condition normally.</p> <p>≠ Ø to transfer to this address if Not Ready condition present.</p> <p>A good use is to ignore "NOT READY" Drives when doing multiple Drive System Searches.</p>
527	SSFLG	<p>System Search Flag</p> <p>Values it can have are:</p> <ul style="list-style-type: none"> <li>a. ASCII "NO" if :SS Directive not allowed.</li> <li>b. Ø for only current user Disc (:SS,99 condition).</li> <li>c. -X for full System Search (:SS) where X= # subchannels on system -1.</li> <li>d. +X for Selected System Search Bits Ø-7 are used to represent Subchannels Ø-7 respectively. Bit ON=OK, Bit OFF=not OK.</li> </ul>
53Ø-531	CHARC	System Temporary.

DOSM ABSOLUTE DISC FILE FORMAT  
(ENTRY TYPES 1, 2, 3, 4, AND 5)

11 WORD DIRECTORY ENTRY

WORD 4 GIVES TRACK/SECTOR  
ORIGIN

FIRST SECTOR OF FILE

MAIN SECTION (ABSOLUTE BINARY)

SECOND SECTOR OF FILE

MAIN SECTION (ABSOLUTE BINARY)

THIRD SECTOR OF FILE

MAIN SECTION (ABSOLUTE BINARY)

FOURTH SECTOR OF FILE

MAIN SECTION (ABSOLUTE BINARY)

⋮

ALWAYS  
SECTOR  
BOUNDARY

LAST SECTOR OF FILE

MAIN SECTION (ABSOLUTE BINARY)

FIRST SECTOR OF BASE PAGE LINKAGE

BASE PAGE SECTION (ABSOLUTE BINARY)

SECOND SECTOR OF BASE PAGE LINKAGE


BASE PAGE SECTION (ABSOLUTE BINARY)

⋮

LAST SECTOR OF BASE PAGE LINKAGE

BASE PAGE SECTION (ABSOLUTE BINARY)

DOSM RELOCATABLE DISC FILE FORMAT  
(ENTRY TYPES 6, 7 AND 8)

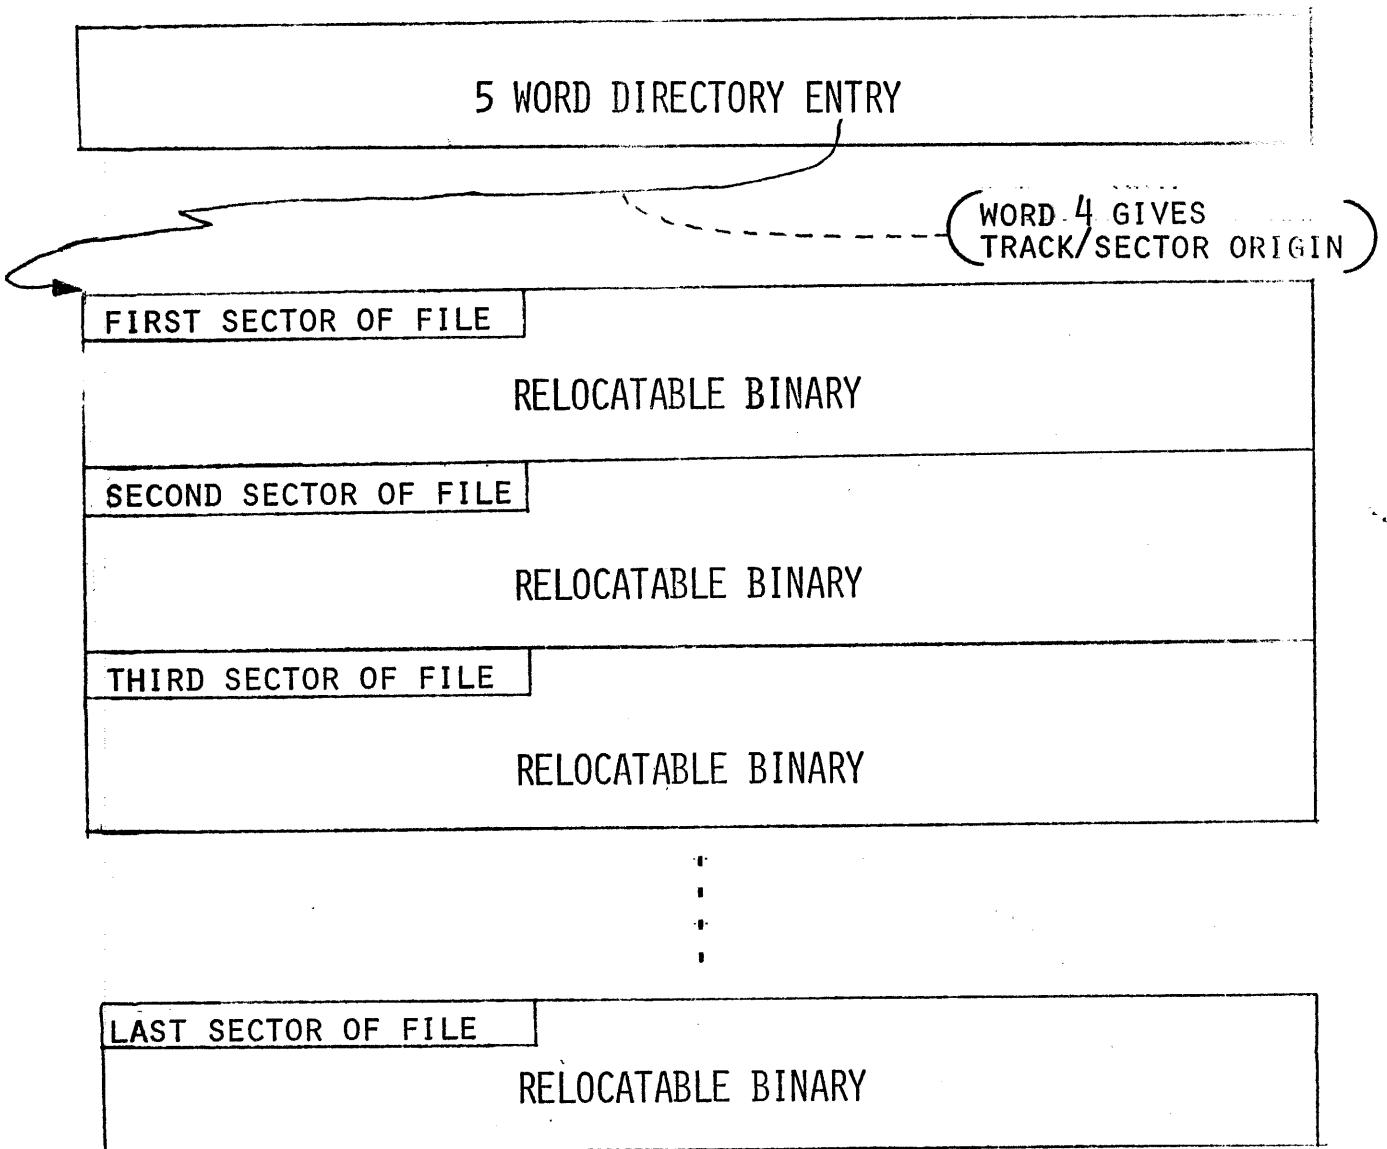

NOTE: "NAM" RECORD LENGTH FOR RTE/DOS/DOSM SYSTEMS IS 17 WORDS  
IN LENGTH WHICH IS INCOMPATABLE TO "NAM" RECORD LENGTH  
OF 9 WORDS OF BCS SYSTEMS.

DOSM ASCII SOURCE STATEMENT DISC FILE FORMAT  
(ENTRY TYPE 9)

5 WORD DIRECTORY ENTRY

(WORD 4 GIVES TRACK/SECTOR ORIGIN)

FIRST SECTOR OF FILE

ASCII SOURCE STATEMENTS

SECOND SECTOR OF FILE

ASCII SOURCE STATEMENTS

THIRD SECTOR OF FILE

ASCII SOURCE STATEMENTS

LAST SECTOR OF FILE

ASCII SOURCE STATEMENTS

FORMAT FOR EACH SOURCE STATEMENT

STATEMENT LENGTH  
IN WORDS  
(BITS 8-15)

WORD 1

SOURCE STATEMENT  
2 CHARACTERS PER WORD

WORDS 2-N

## ASCII SOURCE FILE FORMAT EXAMPLE

INPUT :DATE,XXXXXXXXX,H,M

```
@:DA,27.OCT.70,9,15
SUBCHAN=1
LBL=QQQQQ
@
:JOB,ASCII
JOB ASCII 27.OCT.70 TIME=0555 MIN. 16.0 SECS.
@
:ST,S,SORSE,1
```

AAAA  
BBBBB  
CCCCCC  
DDDDDDD  
:::  
0004 LINES

SOURCE FILE CREATED

```
@
:LIST,U,1,SORSE
NAME TYPE SCTRS DISC ORG PROG LIMITS B.P. LIMITS ENTRY LIBR. P-BIT
SUBCHAN=1
SORSE SS 0001 T055 003
```

	AA	AA	BB	BB	B5	
001	001000	040501	040501	001400	041102	041102
	041503	041503	041503	002000	042104	042104
	000000	177777	020000	036164	000000	041456
	036164	000000	046117	040504	051000	036155
	041120	051000	036146	000000	040523	046502
	000000	037501	051503	047000	036137	000000
	041000	036137	000000	037502	047103	047000
	037502	050113	052400	036137	000000	037503
	033403	000000	000312	000024	177767	040523
	031067	027117	041524	027067	030040	041511
	000000	000000	000000	000000	000000	044440
	000003	000004	000002	000001	000005	000000
	050521	050421	044456	031461	020000	037515
	036137	000000	037522	046125	047000	051531
	043114	043400	036137	000000	037514	046000
	000000	037514	052516	044400	036137	000000
						037522
						051502

@

DISC  
ADDRESS  
(TK/SEC)


DOSM "SYSTEM" DISC LAYOUT FOR GENERATION EXAMPLE

SYSTEM LABEL/USER BUFFER SECTOR		0,0
DISC RESIDENT BOOTSTRAP (2 Sectors)		0,1
SYSTEM DIRECTORY		0,3
DISC MONITOR EXEC MODULES AND SUBROUTINES I/O DRIVERS	CORE RESIDENT SYSTEM PART 2	0,10
EQUIPMENT TABLE DEVICE REFERENCE TABLE INTERRUPT TABLE	CORE RESIDENT SYSTEM PART 3	1,9
DISC RESIDENT EXEC MODULES AND SUBROUTINES		1,11
DISC RESIDENT I/O DRIVERS		3,1
DISC RESIDENT SYSTEM MAIN PROGRAMS AND THEIR SEGMENTS (JOBPR, LOADR, ASMB, FTN, ALGOL, .... ETC.)		3,12
EXEC MODULE DOUBLET TABLE	CORE RES. \$YS.PART4	13,6
DISC RESIDENT RELOCATABLE LIBRARY		13,7
BASE PAGE SECTION OF CORE RESIDENT SYSTEM (TRAP CELLS, CONSTANTS, COMMUNICATION, LINKAGE)	CORE RESIDENT SYSTEM PART 1	19,11
SPECIAL SYSTEM TRACK		21,0
USER LABEL/SYSTEM BUFFER SECTOR		22,0
USER DIRECTORY		22,1
USER FILES AND PROGRAMS		23,0
-----		55,3
WORK AREA		
JOB BINARY AREA		
3 SPARE TRACKS (END OF DISC)		200,0

(HARDWARE PROTECTED)

(SOFTWARE PROTECTED)

"SYSTEM" DISC (LABEL SECTORS DESCRIPTION)

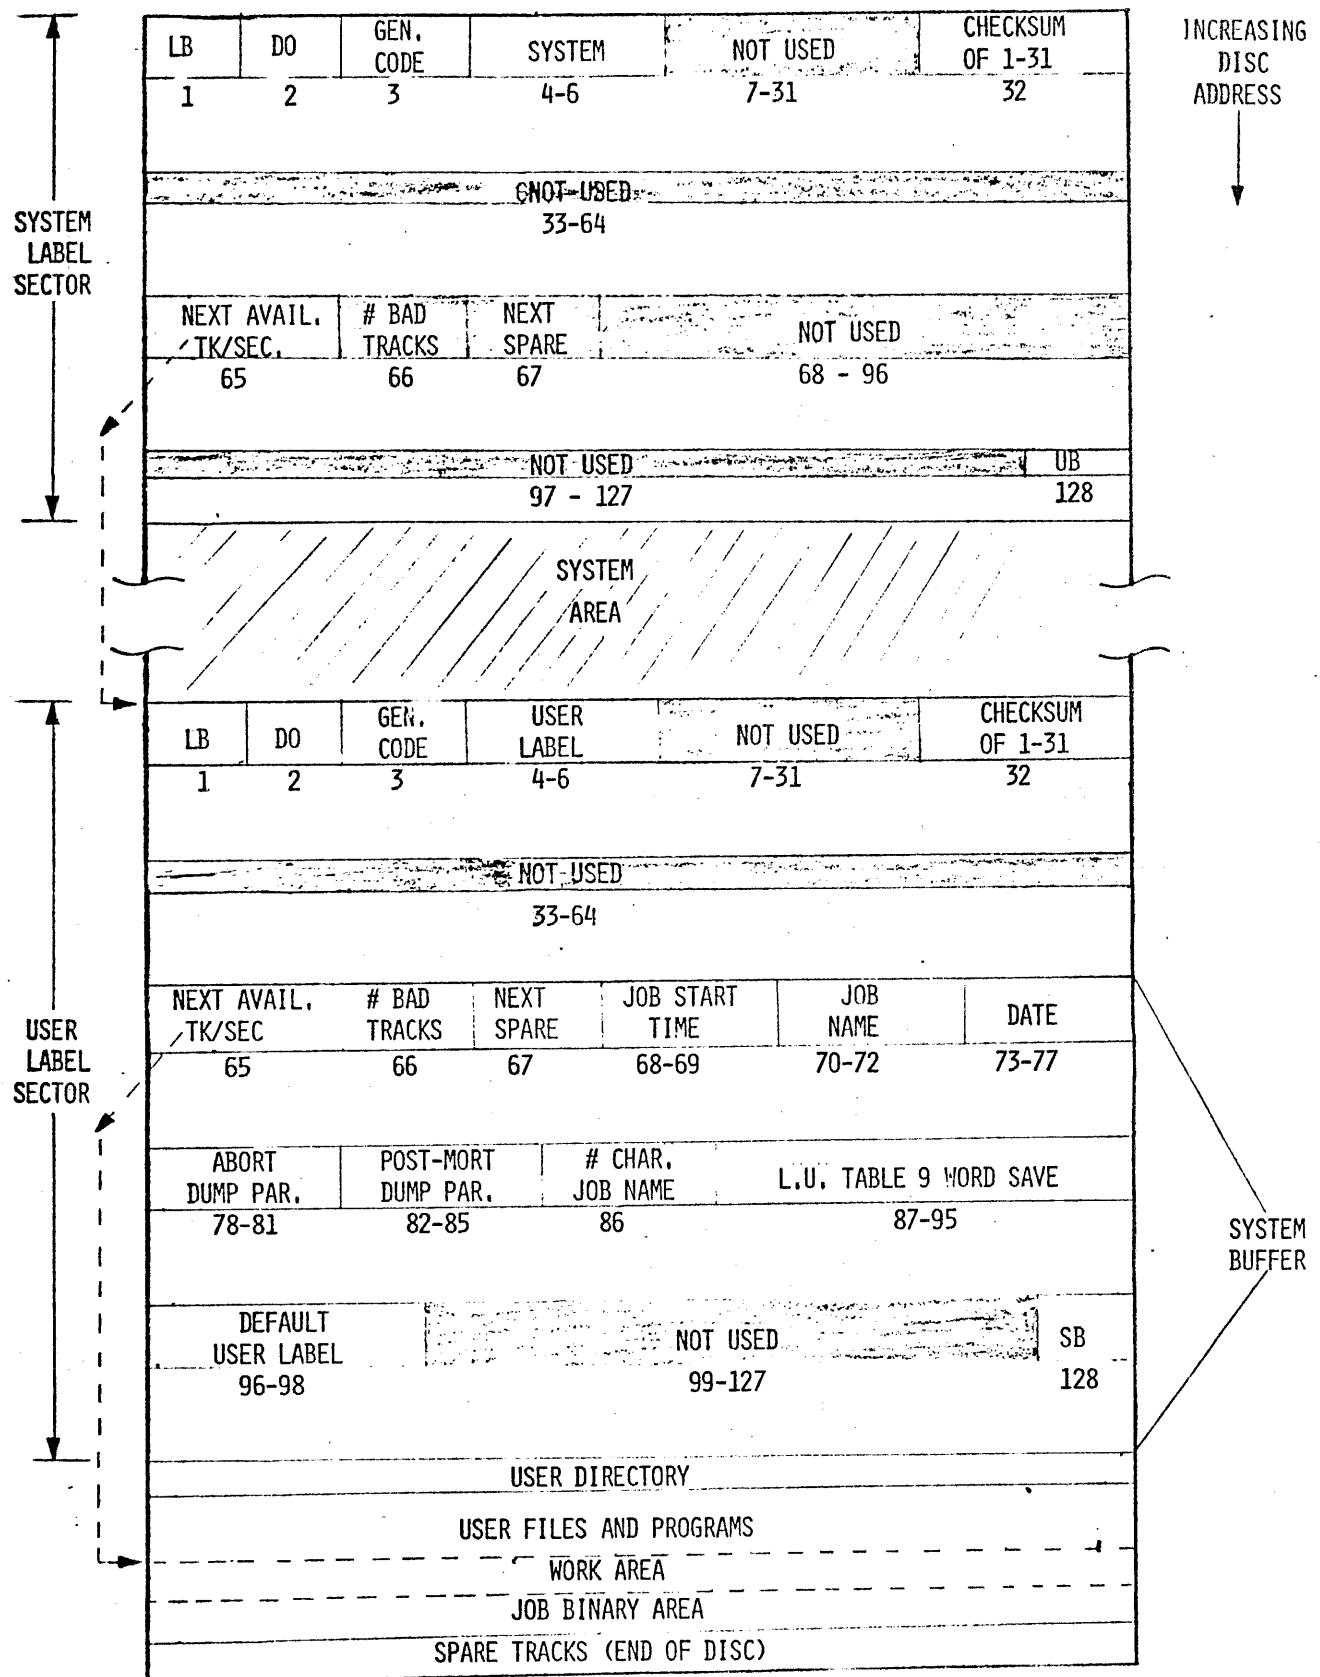

## DIRECTORY ENTRY FORMAT

WORD 1	F	N
WORD 2	A	M
WORD 3	E	P   ENTRY TYPE
WORD 4	TRACK	SECTOR
WORD 5	FILE LENGTH (IN SECTORS)	
WORD 6	FWA PROGRAM	
WORD 7	LWA PROGRAM	
WORD 8	FWA BASE PAGE LINKAGE AREA	
WORD 9	LWA BASE PAGE LINKAGE AREA	
WORD 10	PROGRAM ENTRY POINTT	
WORD 11	FWA OF LIB ROUTINE SECTION	

FOR SYSTEM GENERATED  
BINARY PROGRAMS ONLY

### ENTRY TYPE                          FILE

0	SYSTEM RESIDENT
1	DISC RESIDENT EXECUTIVE SUPERVISOR MODULE
2	CURRENTLY UNUSED
3	USER PROGRAM, MAIN
4	DISC RESIDENT DEVICE DRIVER
5	USER PROGRAM, SEGMENT
6,7	LIBRARY
10,8	RELOCATABLE BINARY
11,8	ASCII SOURCE STATEMENTS
12,8	BINARY DATA
13,8	ASCII DATA

### 'P' BIT


0 = No Action

1 = PURGE THIS ENTRY AT THE END OF THE JOB OR FOLLOWING ANY EXECUTION OF :PU DIRECTIVE. THIS BIT IS SET BY THE LOADER AND CLEARED BY A :STORE,P,[file-name] REQUEST.

THE LAST DIRECTORY ENTRY IN EACH SECTOR IS FOLLOWED BY A WORD CONTAINING '-1' UNLESS THE GIVEN SECTOR IS EXACTLY FILLED WITH ENTRIES.

THE LAST ENTRY IN THE DIRECTORY IS FOLLOWED BY A WORD CONTAINING ZERO.

# CORE MAP FOR DOSM SYSTEM GENERATION EXAMPLE (16K)

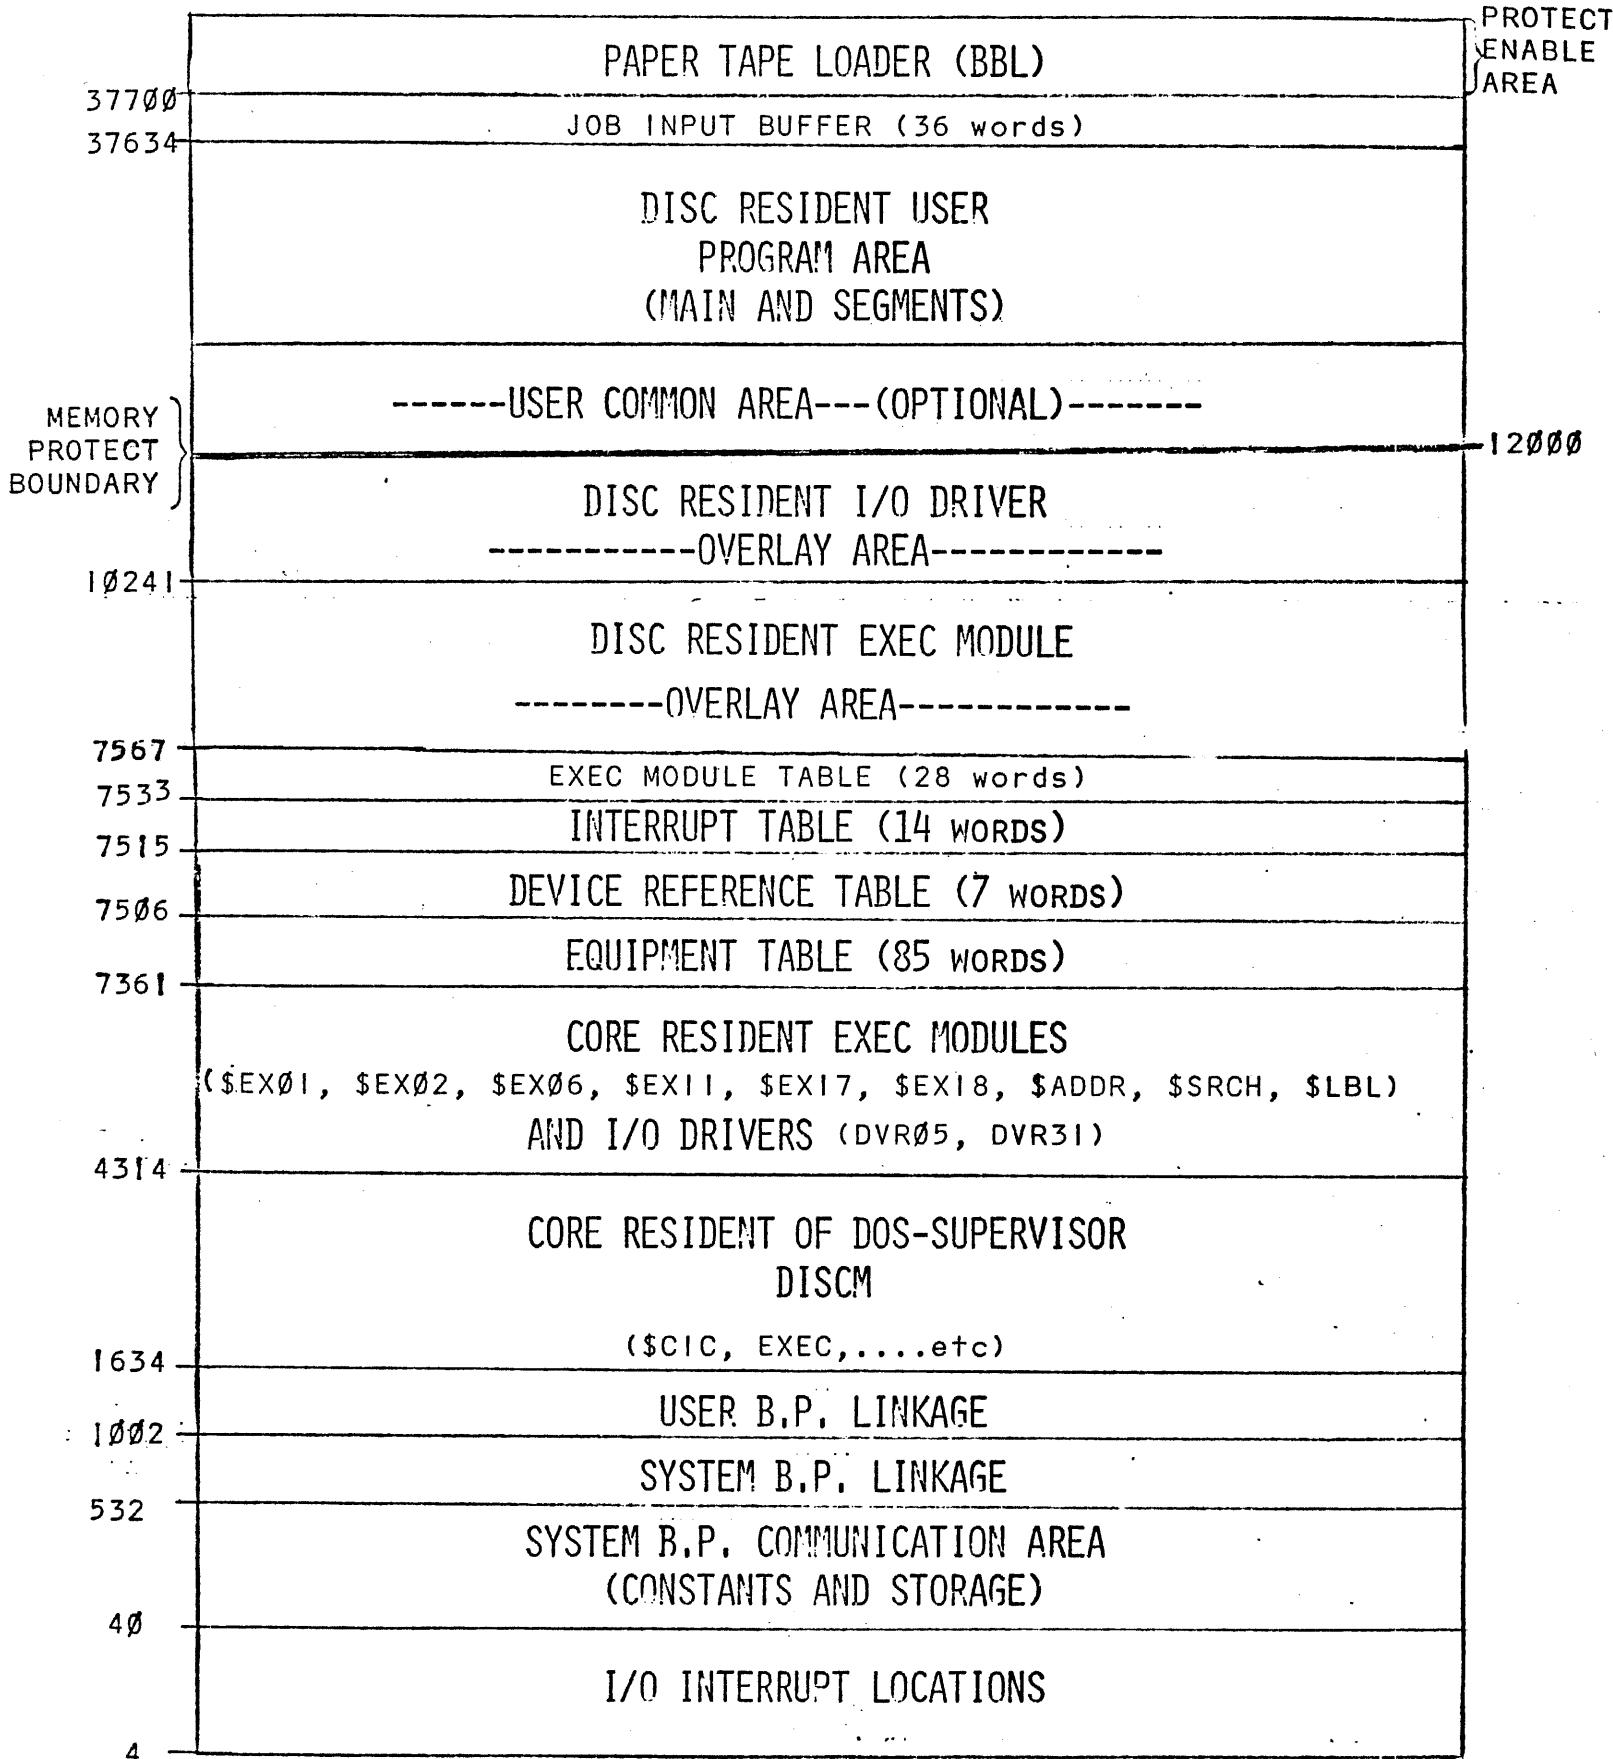

### EQUIPMENT TABLE ENTRY FORMAT

WORD

CONTENTS																
1 DRIVER "INITIATION" SECTION ADDRESS																
2 DRIVER "CONTINUATION" SECTION ADDRESS																
3	D	R			UNIT #		CHANNEL #									
4	AV			EQUIPMENT TYPE CODE		STATUS										
5				(SAVED FOR DRIVER USE)												
6				(SAVED FOR DRIVER USE)												
7				REQUEST RETURN ADDRESS												
8				REQUEST CODE												
9				CURRENT I/O REQUEST CONTROL WORD												
10				REQUEST BUFFER ADDRESS												
11				REQUEST BUFFER LENGTH												
12				TEMPORARY OR DISC TRACK #												
13				TEMPORARY OR STARTING SECTOR #												
14				TEMPORARY STORAGE FOR DRIVER												
15				UPPER MEMORY ADDRESS OF MAIN DRIVER AREA												
16				UPPER MEMORY ADDRESS OF DRIVER LINKAGE AREA												
17				STARTING TRACK #		STARTING SECTOR #										
BITS	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

AVAILABLE  
FOR  
DRIVER  
TEMPORARY

D = 1 IF DMA CHANNEL REQUIRED.  
 R = 1 IF DRIVER TYPE IS CORE-RESIDENT.  
 UNIT # MAY BE USED FOR SUB-CHANNEL ADDRESSING.  
 CHANNEL # I/O SELECT CODE FOR DEVICE (LOWER NUMBER IF MULTIBOARD INTERFACE.)

AV = 0 - UNIT NOT BUSY AND AVAILABLE  
 = 1 - UNIT DISABLED (DOWN)  
 = 2 - UNIT BUSY  
 = 3 - UNIT WAITING FOR AN AVAILABLE DMA CHANNEL

STATUS - ACTUAL OR SIMULATED UNIT STATUS AT END OF OPERATION.  
 (DRIVER MUST SET THIS FIELD)

EQUIPMENT TYPE CODE - IDENTIFIES TYPE OF DEVICE AND ASSOCIATED SOFTWARE DRIVER. ASSIGNED EQUIPMENT TYPE CODES IN OCTAL AR-

**00-07 PAPER TYPE DEVICES**

- 00 TELEPRINTER
- 01 PUNCHED TAPE READER
- 02 HIGH SPEED PUNCH
- 05 TELETYPE (SYSTEM)

**10-17 UNIT RECORD DEVICES**

- 10 RESERVED FOR PLOTTER
- 12 LINE PRINTER
- 15 MARK SENSE CARD READER

**20-37 MAGNETIC TAPE/MASS STORAGE AND OTHER DEVICES CAPABLE OF BOTH INPUT AND OUTPUT**

- 22 3030 MAGNETIC TAPE
- 31 MOVING-HEAD DISC

FOR EQUIPMENT TYPE CODES 1 THROUGH 17, ODD NUMBER INDICATE INPUT DEVICE AND EVEN NUMBER INDICATE OUTPUT DEVICES (EXCEPT 05, WHICH IS BOTH INPUT AND OUTPUT).

(THIS FIELD  
SET BY  
SYSTEM)

## DEVICE REFERENCE TABLE FORMAT

EACH ENTRY IN THIS TABLE REQUIRES ONLY ONE WORD IN MEMORY.  
THE VALUE OF EACH ENTRY (DECIMAL NUMBER, 1-63) ASSOCIATES  
A LOGICAL UNIT NUMBER WITH AN EQUIPMENT TABLE ENTRY FOR  
THE SYSTEM IN THE FOLLOWING MANNER:

SEQUENCE IN MEMORY TABLE	LOGICAL UNIT #	FUNCTION
1	1	SYSTEM TELEPRINTER
2	2	USER MASS STORAGE
3	3	SYSTEM MASS STORAGE
4	4	STANDARD PUNCH DEVICE
5	5	STANDARD INPUT DEVICE
6	6	STANDARD LIST DEVICE
7-63	7-63	ANY DEVICE

## INTERRUPT TABLE FORMAT

EACH ENTRY IN THIS TABLE REQUIRES ONLY ONE WORD IN MEMORY  
AND IS ASSOCIATED WITH EACH I/O CHANNEL IN THE COMPUTER  
(STARTING WITH LOCATION 6) WHICH CAN CAUSE AN INTERRUPT.  
EACH LOCATION IN THIS TABLE HAS AN ENTRY VALUE. MEMORY  
LOCATIONS ARE ASSOCIATED IN CONSECUTIVE INCREASING ORDER  
WITH AN I/O CHANNEL. TABLE VALUES ARE ZERO FOR AN I/O  
CHANNEL NOT REQUIRING INTERRUPT. I/O CHANNELS REQUIRING  
INTERRUPT CONTAIN THE START ADDRESS OF THE EQUIPMENT TABLE  
ENTRY OF THE ASSOCIATED DEVICE.

## SYSTEM DIRECTORY LISTING FOR GENERATION EXAMPLE

NAME	TYPE	SCTBS	DISC	ORG	PROG	LIMITS	B.P.	LIMITS	ENTRY	LIBR.	P-BIT
<u>SUBCHAN=1</u>											
SEX03 XS	0002	T001	011	07567	07624	00732	00733	07567	07624		
SEX04 XS	0004	T001	013	07567	10176	00732	00741	07567	10176		
SEX05 XS	0002	T001	017	07567	07745	00732	00733	07567	07745		
SEX07 XS	0002	T001	019	07567	07746	00732	00733	07567	07746		
SEX08 XS	0002	T001	021	07567	07732	00732	00733	07567	07732		
SEX09 XS	0003	T001	023	07567	10142	00732	00763	07567	10142		
SEX10 XS	0002	T002	002	07567	07745	00732	00733	07567	07745		
SEX12 XS	0002	T002	004	07567	07761	00732	00733	07567	07761		
SEX13 XS	0004	T002	006	07567	10223	00732	00754	07567	10223		
SEX14 XS	0004	T002	010	07567	10241	00732	00751	07567	10241		
SEX15 XS	0003	T002	014	07567	10153	00732	00763	07567	10153		
SEX16 XS	0002	T002	017	07567	07722	00732	00733	07567	07722		
SEX19 XS	0003	T002	019	07567	10107	00732	01000	07567	10107		
<u>SEX20 XS</u>	<u>0003</u>	<u>T002</u>	<u>022</u>	<u>07567</u>	<u>10167</u>	<u>00732</u>	<u>00761</u>	<u>07567</u>	<u>10167</u>		
DVR01 DR	0003	T003	001	10241	10555	01000	01002	10241	10555		
DVR02 DR	0003	T003	004	10241	10443	01000	01002	10241	10443		
<u>DVR02 DR</u>	<u>0005</u>	<u>T003</u>	<u>007</u>	<u>10241</u>	<u>11075</u>	<u>01000</u>	<u>01002</u>	<u>10241</u>	<u>11075</u>		
LOADR UM	0032	T003	012	12000	21032	01002	01495	12000	21032		
JOBPR UM	0038	T004	020	12000	22463	01002	01414	12000	22463		
ASMB UM	0023	T006	010	12000	17120	01002	01362	16522	17120		
ASMBD US	0004	T007	009	17127	17647	01362	01363	17442	17647		
ASMB1 US	0006	T007	013	17366	20542	01362	01424	17366	20542		
ASMB2 US	0007	T007	019	17345	20550	01362	01410	17351	20550		
ASMB3 US	0003	T008	002	17473	17771	01362	01363	17630	17771		
ASMB4 US	0004	T008	005	17366	20027	01362	01371	17366	20027		
ASMB5 US	0006	T008	009	17345	20425	01362	01404	17351	20425		
FTN UM	0006	T008	015	12000	13127	01002	01047	12000	13127		
FTN01 US	0031	T008	021	13254	22120	01047	01502	16550	22120		
FTN02 US	0025	T010	004	13254	21027	01047	01356	13741	21027		
FTN03 US	0024	T011	005	13254	20600	01047	01277	15117	20600		
FTN04 US	0025	T012	005	13254	20750	01047	01360	13702	20750		
LIBRY LP	0147	T013	007								

## EXEC MODULE DOUBLET TABLE FORMAT

(TWO WORDS PER DISC RESIDENT EXEC MODULE)


WORD #1	# SECTORS - 1	EXEC MODULE ID #
	15-11	10-0

WORD #2	START TRACK #	START SECTOR #
	15-8	7-0

# CORE MAP FOR DOSM SYSTEM GENERATION EXAMPLE (16K)

		PROTEC ENABLE AREA
37700	PAPER TAPE LOADER (BBL)	
37634	JOB INPUT BUFFER (36 words)	
	DISC RESIDENT USER PROGRAM AREA (MAIN AND SEGMENTS)	
MEMORY PROTECT BOUNDARY	-----USER COMMON AREA---(OPTIONAL)-----	12000
10241	DISC RESIDENT I/O DRIVER -----OVERLAY AREA-----	
	DISC RESIDENT EXEC MODULE -----OVERLAY AREA-----	
7567	EXEC MODULE TABLE (28 words)	
7533	INTERRUPT TABLE (14 WORDS)	
7515	DEVICE REFERENCE TABLE (7 WORDS)	
7506	EQUIPMENT TABLE (85 WORDS)	
7361	CORE RESIDENT EXEC MODULES (\$EX01, \$EX02, \$EX06, \$EX11, \$EX17, \$EX18, \$ADDR, \$SRCH, \$LBL) AND I/O DRIVERS (DVR05, DVR31)	
4314	CORE RESIDENT OF DOS-SUPERVISOR DISCM (\$CIC, EXEC, ....etc)	
1634	USER B.P. LINKAGE	
1002	SYSTEM B.P. LINKAGE	
532	SYSTEM B.P. COMMUNICATION AREA (CONSTANTS AND STORAGE)	
40	I/O INTERRUPT LOCATIONS	
4		

"SYSTEM" DISC (LABEL SECTORS DESCRIPTION)

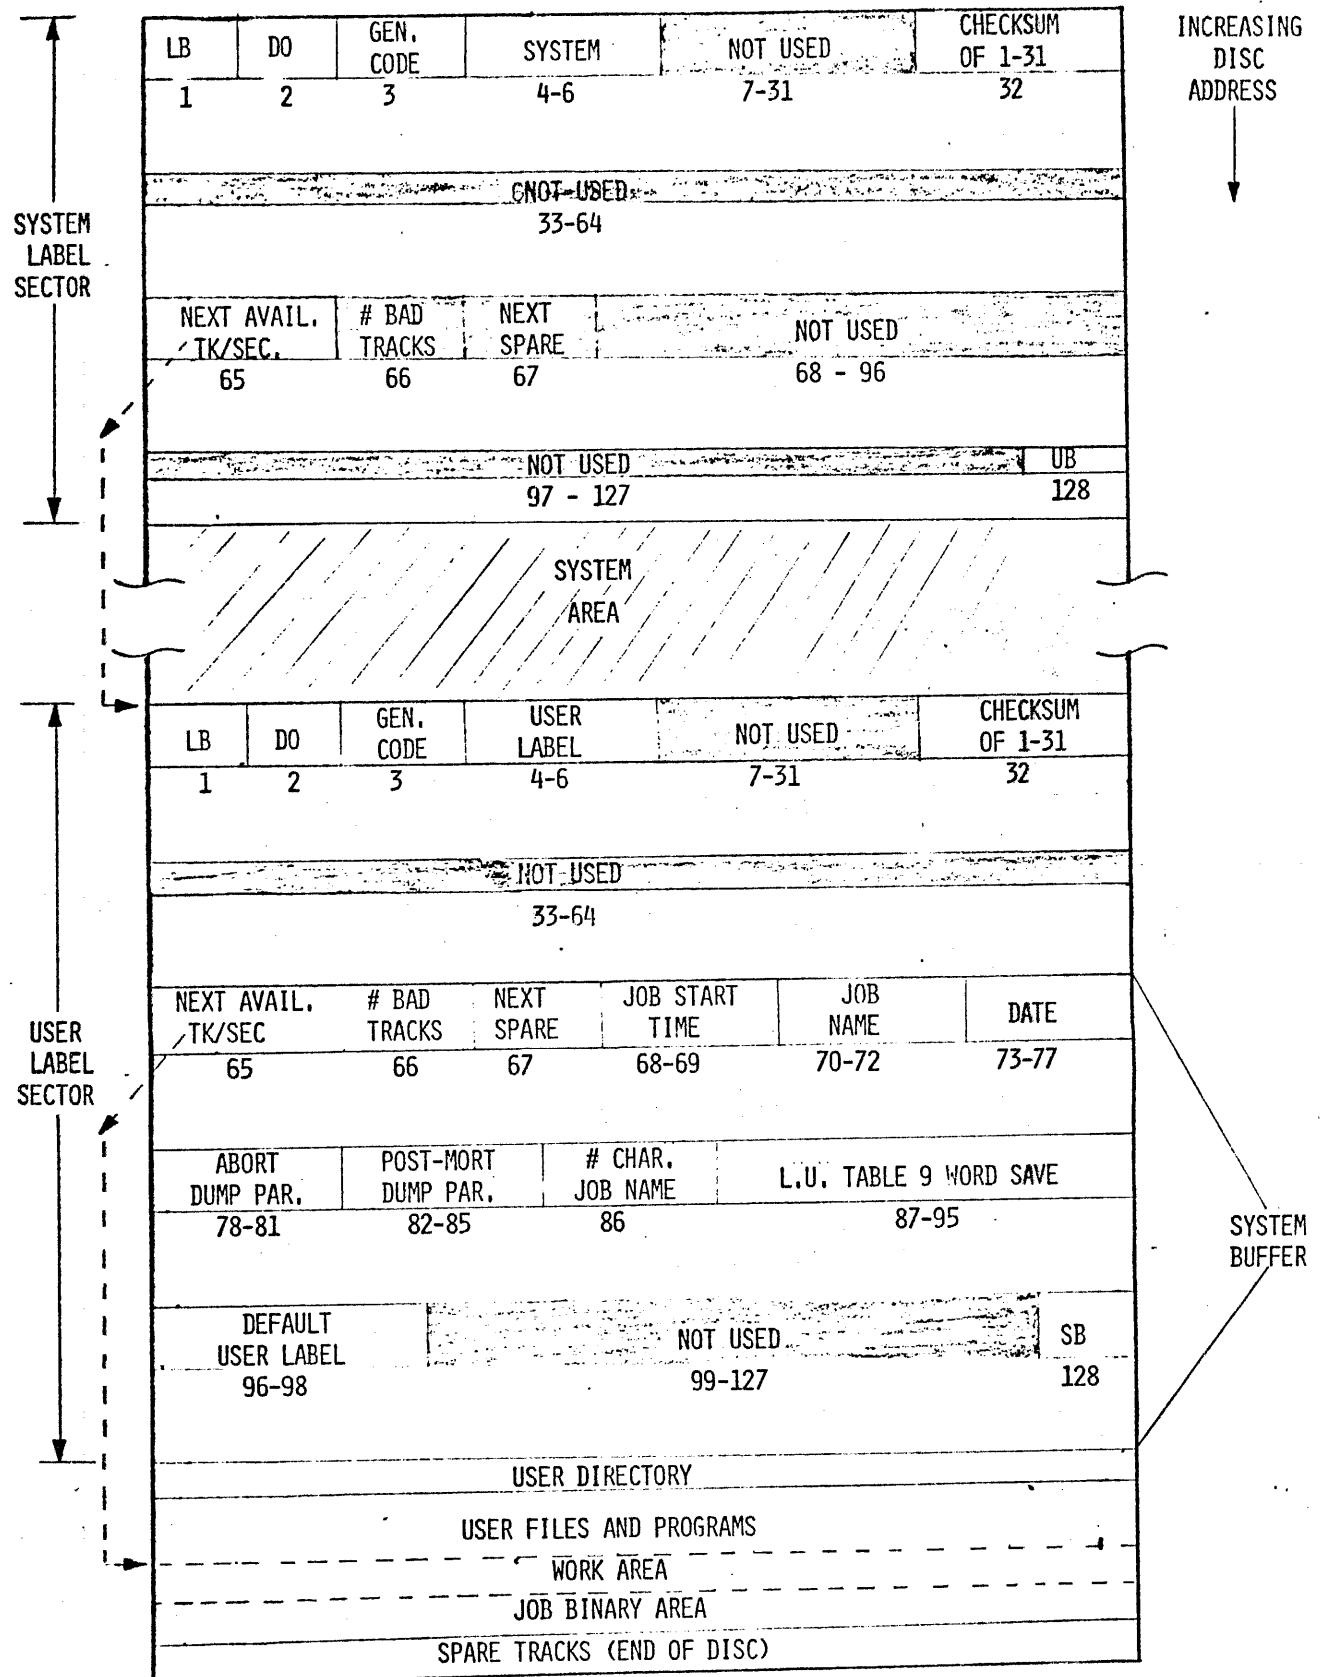

## DIRECTORY ENTRY FORMAT

WORD 1	→	F	N	
WORD 2	→	A	M	
WORD 3	→	E	P    ENTRY TYPE	
WORD 4	→	TRACK	SECTOR	
WORD 5	→	FILE LENGTH (IN SECTORS)		
WORD 6	→	FWA PROGRAM		
WORD 7	→	LWA PROGRAM		
WORD 8	→	FWA BASE PAGE LINKAGE AREA		
WORD 9	→	LWA BASE PAGE LINKAGE AREA		
WORD 10	→	PROGRAM ENTRY POINT		
WORD 11	→	FWA OF LIB ROUTINE SECTION		

FOR SYSTEM GENERATED  
BINARY PROGRAMS ONLY

### ENTRY TYPE                          FILE

0	—	SYSTEM RESIDENT
1	—	DISC RESIDENT EXECUTIVE SUPERVISOR MODULE
2	—	CURRENTLY UNUSED
3	—	USER PROGRAM, MAIN
4	—	DISC RESIDENT DEVICE DRIVER
5	—	USER PROGRAM, SEGMENT
6,7	—	LIBRARY
108	—	RELOCATABLE BINARY
118	—	ASCII SOURCE STATEMENTS
128	—	BINARY DATA
138	—	ASCII DATA

### 'P' BIT

0 = No Action

1 = PURGE THIS ENTRY AT THE END OF THE JOB OR FOLLOWING ANY EXECUTION OF :PU DIRECTIVE. THIS BIT IS SET BY THE LOADER AND CLEARED BY A :STORE,P,[file-name] REQUEST.

THE LAST DIRECTORY ENTRY IN EACH SECTOR IS FOLLOWED BY A WORD CONTAINING '-1' UNLESS THE GIVEN SECTOR IS EXACTLY FILLED WITH ENTRIES.

THE LAST ENTRY IN THE DIRECTORY IS FOLLOWED BY A WORD CONTAINING ZERO.

## USER DIRECTORY LISTING IN GENERATION EXAMPLE SYSTEM

NAME	TYPE	SCTRS	DISC	ORG	PROG	LIMITS	B.P. LIMITS	ENTRY	LIBR.	P-BIT
SUBCHAN=1										
XREF	UM	0013	T023	000	12000	14750	01002	01036	12000	14071
EOT1	SS	0001	T023	013						
WEOT	UM	0002	T023	014	12000	12013	01002	01003	12000	12013
XREFR	RB	0016	T023	016						
DISCM	RB	0020	T024	008						
EXECS	RB	0063	T025	004						
DVR05	RB	0003	T027	019						
DVR31	RB	0005	T027	022						
LIBRY	RB	0143	T028	003						
DVR02	RB	0002	T034	002						
DVR01	RB	0003	T034	004						
DVR22	RB	0007	T034	007						
LODR	RB	0049	T034	014						
JOBP	RB	0065	T036	015						
ASMBL	RB	0040	T039	008						
ASMD	RB	0004	T041	000						
ASM3	RB	0004	T041	004						
ASM4	RB	0006	T041	008						
ASMS	RB	0010	T041	014						
FRTN	RB	0008	T042	000						
FTN1	RB	0048	T042	008						
FTN2	RB	0045	T044	008						
FTN3	RB	0042	T046	005						
FTN4	RB	0031	T047	023						
ASM1	RB	0012	T049	006						
ASM2	RB	0011	T049	018						
SI01	SS	0005	T050	005						
BASC1	SS	0009	T050	010						
BOOT	SS	0021	T050	019						
FTNH	SS	0001	T051	016						
EOF	UM	0001	T051	017	12000	12013	01002	01002	12000	12013
FSPCE	UM	0001	T051	018	12000	12013	01002	01002	12000	12013
RWIND	UM	0001	T051	019	12000	12013	01002	01002	12000	12013
D.00S	SS	0067	T051	020						
TSRTS	SS	0006	T054	015						
TSRTR	RB	0005	T054	021						
CLEAR	BD	<u>0001</u>	T055	002						

# DISC DUMP FOR DOSM GENERATION EXAMPLE

<i>φφ</i>	<i>LB</i>	<i>DO</i>	<i>9006</i>	<i>SY</i>	<i>ST</i>	<i>EM</i>			
001	046162	042117	021450	051531	051524	042515	044456	031461	
	020001	036173	040723	041456	031461	020001	036173	000724	
	044456	031062	020000	036164	000000	041455	031062	020000	
	036164	000000	046117	040504	051800	036155	000000	1713/3	C.S.
	041124	051000	036146	000000	040523	046502	020000	03c137	
	000000	037501	051503	047000	036137	000000	037501	051515	
	041104	036137	000000	037502	047103	047000	036137	000000	
	037502	050113	052404	036137	000000	037503	044117	050300	
	013000	000000	000000	044120	044400	036137	000000	037504	
	041517	042000	036137	000000	037505	047104	051400	036137	
	000000	037505	051120	051000	036137	000000	037515	051531	
	051400	036137	000000	037507	042524	041400	036137	000000	
	037515	047526	042404	036137	000000	037515	051531	046400	
	036137	000000	037522	046125	047100	036137	000000	037501	
	043114	043400	036137	000000	037514	051524	046000	036137	UB
	000000	037514	052516	044400	036137	000000	037522	052502	
<i>φ1</i>									
0002	000000	067731	017570	067732	077762	017613	017613	017613	
	017613	064120	007004	077310	064117	044055	160001	044051	
	010072	073773	053774	077763	053775	077764	077304	044056	
	160001	001727	013752	073305	050060	027460	053765	027445	
	067394	044066	037310	027415	027505	044052	160001	023773	
	033774	170001	063773	073302	000000	073303	063774	073773	
	067304	160001	073730	164000	017570	063305	050060	027440	
	006004	160001	033773	170001	000000	063747	170001	000000	
	003004	170001	067304	077311	027440	060154	001722	013707	
	033774	001727	001723	070154	063763	067302	017606	063764	
	067303	017605	002400	057774	017606	063311	067775	017606	
	067763	006003	027540	044055	160001	023774	033302	170001	
	067764	005003	027546	023775	033303	170001	063776	001200	
	067772	006003	002004	064155	070155	054175	070175	006400	
	050175	064115	074200	047757	074157	064175	074161	124003	
	000000	052730	127570	037730	163730	002021	027571	013706	
<i>φ2</i>									
003	002002	027571	163730	043773	173730	027571	000000	044045	
	044201	170001	127606	000000	157762	037762	163762	037762	
	003304	040001	005225	106702	106600	167762	037762	002021	
	127613	043754	373761	002029	002400	043753	102702	102602	
	060001	001767	013752	102600	103700	063755	033776	106701	
	102601	103701	102300	027652	060001	013752	043751	002021	
	033757	002029	043747	033772	102600	103700	102301	027666	
	017714	063756	033776	102601	103700	106701	103706	103701	
	102301	027700	017714	060001	013752	053750	002001	002405	
	063760	044003	063761	027627	000000	103700	063776	106701	
	102601	103701	102300	027722	102500	000010	102031	127714	
	015642	015724	037733	000002	020732	011413	001634	007361	
	000012	002361	001567	000011	007533	007567	006406	000000	
	000027	177761	0000377	177600	000000	030001	020001	000400	
	0000351	000003	000000	000000	000000	000031	070036	177740	
	015721	045511	000000	0000015	0000015	000016	000000	177733	
<i>φ3</i>									
004	022105	054060	031461	0000413	0000002	007567	007624	0000732	\$EX#3
	000733	007567	001624	022105	052406	032001	0000415	0000004	\$EX#4
	007567	013176	001432	000000	007567	010176	022105	054060	\$EX#5
	032401	000021	000002	007567	000000	000733	0007567	000000	
	007745	022105	000000	000000	000000	000000	007567	007746	\$EX#4
	000732	001733	007567	000000	000000	0007567	000000	000000	
	000002	007567	000000	000000	000000	000000	000000	000000	
	000000	034401	000000	000000	000000	010142	0000732	0000763	\$EX#9

SYSTEM  
LABEL/  
USER  
BUFFER  
SECTOR

DISC  
RESIDENT  
BOOTSTRAP

MEMORY  
BOUNDS  
&  
DISC  
ADDRESSES  
FOR C.R.  
SYSTEM

~~DISCOURAGE ENTRY THIS SECTOR~~

LAST DIRECTORY ENTRY THIS SET									
Ф4 005	022105	054061	033001	001021	000002	047567	007722	000732	SEX16
	030733	007567	007722	022105	054061	034401	001023	000005	SEX19
	007467	31-107	010732	001069	007567	016107	022105	000402	
	030001	011026	004003	007567	010167	010732	000761	007507	SEX20
	010167	042126	051063	030404	001401	010003	010241	010057	DVR01
	001000	001022	010221	010555	042126	051063	031004	001404	DVR02
	000003	011021	010443	001001	001002	010241	010443	042126	DVR22
	051062	031004	001407	000006	012241	011075	001000	001002	LOADR
	010241	011025	045117	040504	051003	001414	000041	012000	
	021003	001002	001425	012001	001032	045117	041120	000003	JOBPR
	002024	000006	012001	0022403	001002	001414	012000	022463	
	040523	045502	020003	003012	000007	012001	011021	000002	ASMB
	001302	010522	017120	040523	046502	042005	003411	000004	ASMBD
	012127	017547	001352	001353	017442	017647	040523	046502	
	030005	013015	010006	017356	020542	011362	001424	017356	ASM81
	020542	177777	000009	000009	000000	000000	000000	000000	

φ.7

Ф.И.О.	Номер	Имя	Фамилия	Отчество	Номер	Имя	Фамилия	Отчество
011 0000000	103100	017735	063634	074242	163634	170627	102504	
933635	073546	0900000	126504	054057	102004	054064	124634	
954103	027754	044045	074003	002021	027714	003001	040202	
002024	027714	044201	160901	002003	027714	114552	102504	
164204	114001	027776	060203	002003	027714	060261	002002	
027714	160557	164201	006003	002002	027714	074260	124544	
063634	017746	002001	127722	017726	127634	017726	102102	
102705	127634	0000000	060211	103101	000036	102101	060237	
064242	127726	0000000	070237	074249	001520	102201	002004	

**NOT USE  
"B" VERSION  
GENERATOR  
WILL NOT  
WASTE**

DISCM

CRS

CRS<sub>2</sub>

DISCM

070241	127736	00000000	0030000	040254	002020	037746	127746
034105	227751	063775	070105	034104	060106	002020	027714
034107	027714	063775	070107	034106	060106	050119	124631
027714	176650	170217	070531	174224	017331	060513	003004
050203	070513	060262	0900019	026070	060141	002003	026070
160212	002020	003004	050354	002001	026070	007400	044111
041121	003400	140001	114632	040117	050203	002001	026070

Φ<sub>11</sub>

012	160214	160000	310075	150633	002001	026070	160211	114534
	026070	060123	0702052	160214	066207	017361	002052	160220
	164215	006021	026061	002004	001109	070530	160206	012211
	170206	160211	370242	026651	160217	002002	026152	160206
	012211	170236	160213	012219	002002	026163	160211	070505
	164224	114634	026150	154635	154636	026204	060260	002003
	026143	003400	140121	114632	040117	040056	160000	002020
	026143	052212	002002	026141	160206	070237	164220	074240
	160211	070242	006400	070250	027426	006400	074260	164220
	160206	102100	102705	124515	160206	124515	050056	002301
	026641	160206	110637	150640	026644	060056	026641	063213
	002003	026171	060513	002021	027256	160205	010072	053204
	027244	063223	002003	124554	017003	027271	124554	027271
	060203	072213	027244	177734	020000	037777	000000	000000
	000000	103100	114641	062214	040052	002001	102505	070512
	070242	072424	036424	160000	012473	052475	002001	026633

Φ<sub>12</sub>

013	160512	012474	160000	052476	002001	026315	066424	160001
	114634	026633	160001	070225	007004	040001	002003	026635
	040052	070224	002020	026635	040042	002021	026635	064143
	002402	017361	000225	061284	007004	036424	062266	077505
	162424	016507	170505	034515	036424	006006	026274	160226
	052500	002001	026325	114642	170001	006004	102100	102705
	124225	052477	026320	026633	114642	114577	000000	134532
	124643	002003	026635	052591	124534	052502	026346	052503
	026349	052594	026425	026362	060237	072342	000000	026312
	034105	026312	060193	002023	026344	032505	072357	060103
	032506	072350	060056	000000	000000	026312	002021	003004
	042461	002020	026635	160226	002020	003004	070514	050064
	026400	050065	002001	026402	060063	070511	050060	026312
	042435	160000	050052	026635	052437	026431	070474	062462
	070475	002104	064514	154475	027020	002004	034475	026417
	000000	160644	070474	060066	027020	006400	160645	070474

Φ<sub>13</sub>

014	062470	027020	002436	002431	002431	002431	100612	177777
	100605	100596	100507	100607	100607	100611	177777	002431
	002431	002431	100603	100604	100610	000022	002463	000020
	000021	000006	100607	000010	000022	000013	000000	176000
	001777	114009	032214	004243	177755	177754	177753	177752
	000027	102500	103700	000000	002003	026635	050054	026635
	001275	002001	126507	160000	025510	140646	070514	060232
	070472	066552	074473	160647	070474	062471	027020	006003
	026665	060514	050055	002001	026432	060001	040055	160000
	010071	050065	026432	052471	026432	026631	002533	000000
	010072	002003	026653	037400	044000	013004	040122	002020
	026653	044121	160001	000003	026654	040052	114632	040117
	017345	126553	000000	164226	174212	006020	007004	060225
	170211	160227	050050	003004	174213	060230	054056	160230
	170214	160231	170215	060232	154650	026625	154651	026625
	160232	170216	160233	170217	126576	006400	026670	064054

Φ<sub>14</sub>

015	026670	054055	026670	064056	026670	064057	071473	026570
-----	--------	--------	--------	--------	--------	--------	--------	--------

007400	170205	016776	164652	026670	164653	026670	164650
026670	064061	026670	064062	026670	064063	026670	064064
026670	064065	060512	092001	060242	070472	002400	170245
160654	070474	160653	027020	000000	160205	002021	126723
060061	070207	017003	026721	026717	160206	110637	150649
026717	034257	026721	060060	026774	060203	170001	160213
010077	070001	160212	002020	003004	150650	026740	150651
026742	030001	170213	026744	002404	026735	060055	026735
160205	010072	164203	114001	070510	002102	026766	160205
001222	000010	026762	060513	003004	070513	160206	130655
170206	125703	050056	0002300	017331	006440	016776	060510
036700	126701	000000	060526	002003	126776	124000	000000
064201	002400	150001	027017	060165	002002	027016	006004
150001	037003	037003	127003	073116	077115	360243	070477
060244	002003	124474	003004	070500	060245	002020	027222

**Φ.15**

016	053116	027110	160477	010074	053116	027047	034477	034477
034500	027036	124474	003004	070245	064246	074167	007004	
044247	074170	150477	001722	010071	034477	164477	074166	
036212	002003	027106	001722	001222	070001	003004	0400170	
002021	074170	017117	060174	070166	064250	074167	007004	
044251	074170	017117	072212	067115	063116	003004	070245	
124246	000000	000000	000000	060166	017130	063127	006404	
017400	002400	127117	000166	000000	006400	114577	177770	
060154	010074	003004	040000	006021	026663	127130	000000	
070513	064252	074167	007004	140650	144000	074170	040055	
160000	070156	017117	060174	070166	064253	007004	060513	
140651	144000	006003	127143	060253	070167	036212	074170	
017117	072212	127143	073204	077206	060206	073205	027244	
000000	000000	000000	000000	060203	073213	027244	000000	
073221	060203	073221	027244	000000	000000	037236	063115	
073220	053116	073237	060474	073241	060472	073242	060473	

**Φ.16**

017	073243	027244	000000	000000	000000	000000	000000	000000
063204	002003	027256	163205	001222	010056	002002	027256	
073204	127206	053213	002003	027271	060513	002020	027271	
063213	017315	002400	073213	127207	063220	002003	027304	
017003	027277	027304	063220	017345	002400	073220	127221	
063236	002003	027325	060245	002020	027325	002400	073236	
063242	070472	063243	070473	063241	070474	063237	067240	
027020	102100	003400	007400	027325	000000	064201	060203	
150001	027342	006004	150001	002001	127331	002400	170001	
127331	000000	067360	071474	067357	170001	002004	006004	
034474	027351	127345	000003	177757	000000	070503	074505	
167361	074504	037361	006400	002002	164503	174504	034503	
034504	034505	027367	127361	000000	077412	064203	077423	
073424	060055	073413	063424	073414	114545	000000	000000	
003414	000000	003420	027244	063423	017345	127400	000000	
000000	000000	077561	017563	034261	067561	063556	006002	

**Φ.17**

018	063553	073441	114545	000002	000001	003441	000002	003463
063501	002002	027244	060520	114634	027244	060517	103101	
0000036	102101	063515	064516	102100	102705	124520	017563	
060123	073471	114545	000001	000001	003471	000004	003475	
027441	077562	017563	002400	070261	067562	017575	060471	
150056	027430	150657	027430	027444	060111	050054	027544	
073532	054123	077533	016553	160205	001222	000010	027530	
060203	052513	002001	017143	114545	000001	003532	003533	
0000044	003537	027244	160123	010075	150633	017575	027511	
060261	002003	027551	034260	027244	007400	027426	003554	

DISCM

006412	040137	023557	006412	025137	0000000	0000000	0000000
060237	070515	060240	070516	060241	070517	060242	070520
127563	0000000	121530	074472	067515	074473	064123	160001
010075	150633	027631	034261	114545	0000002	0000001	004140
177770	003625	064471	154656	027244	060520	114634	124554
027452	0602430	070261	017563	127575	1600001	0060004	1640001

Φ.20

114577	177770	170635	064471	154660	027677	150661	124662
150636	124663	150664	124665	150666	124662	154656	002001
027702	150665	025401	027714	074471	062213	002002	027670
160667	070471	062463	027720	076213	150656	027447	017345
160211	070535	026141	150660	027743	027607	154557	027736
006002	027607	064262	004012	027714	064141	006003	027743
150670	027731	150671	027725	150672	027731	150673	027731
027607	160674	070474	060064	027720	160675	070474	160650
064530	027020	150657	027743	150676	027743	027607	002400
114556	002424	070262	160677	070141	160700	070142	160701
070143	060263	070166	060254	070167	060264	070170	017117
060174	070156	060255	070167	060265	070170	002400	070471
017117	0602430	070261	070260	064530	070530	102100	102705
124254	060112	070111	006400	074475	060106	032150	070106
016044	070262	070245	062276	070474	054475	062313	124540
064242	070470	062126	050471	124702	070471	170703	124544

Φ.19

020	0000000	060141	002003	124704	062262	032150	070262	124705
	0000000	060120	003004	070474	074475	064117	044055	160001
	010072	032141	072075	006004	160701	001265	012304	052305
	002041	025073	062072	044056	170001	124706	004045	052153
	032152	170001	107700	144707	034474	026053	102106	107706
	102107	107707	061201	002403	170001	070513	170710	170711
	170712	170713	070261	070260	170703	006004	170001	126044
	040502	050101	043517	045117	042512	046125	042521	052520
	042116	042101	052131	047506	044507	047117	051105	042040
	107700	045117	041120	051140	100000	035000	000040	000400
	062271	070474	060065	124500	105700	062273	070474	062310
	124540	0000030	052165	002004	160000	114565	160206	001222
	010056	002003	025004	007400	046165	160205	010072	124553
	160206	012304	052305	002001	026217	114714	026217	003401
	003400	042145	124566	162165	002021	003004	170212	036165
	162165	170213	036165	162165	170214	036165	162165	170215

Φ.20

021	036165	162165	170211	036165	114572	126165	026240	000000
	072260	162243	072261	062260	036243	000066	005600	002040
	002004	035261	025251	126243	006000	000000	000000	070001
	001700	040001	126262	000470	100613	100614	100615	100616
	100617	100620	100621	100622	100623	100624	100625	100626
	037400	014400	177764	177763	000010	000015	000016	000017
	060224	040007	002002	026373	060231	114715	160220	002020
	026353	060160	026400	114577	177770	002002	006004	007004
	144230	005021	026341	006400	026365	006400	060154	010074
	003000	140227	140230	002003	026353	002021	026365	164230
	144227	007004	060154	010074	000104	040001	002020	026337
	164230	170231	002000	072245	100100	102705	124225	002400
	070245	124541	160224	000047	002002	026443	060227	114715
	060230	114715	060231	114715	061160	006400	114577	177770
	002002	005004	174227	060102	002003	026431	006400	114577
	177770	002002	044052	074000	026433	060154	010074	170230

\$EXΦ1

Φ.21

022	060116	170231	002000	070245	100100	102705	124225	002400
	070245	124541	061050	040224	002002	026502	060230	114715

\$EXΦ2

\$EXΦ6

## CRS 2

064227	034162	059200	002004	114716	026477	064227	060114	\$EX11
114716	026477	002100	170230	002400	070245	044052	160001	
102100	102705	124225	044057	160001	026467	002400	070245	
124541	050472	372664	060473	0/2665	060245	052666	026531	
060262	002002	426501	060525	166663	056670	002003	026601	
066647	076641	162654	114717	026614	066641	044063	076641	
056663	025605	126526	062664	065577	114717	026556	062604	
066573	114717	326562	034162	053200	002004	066664	114716	
026567	005401	066577	002400	070245	126665	052573	060046	
114543	000270	066647	076664	062577	064046	114543	000133	\$EX11
062664	064016	114543	000126	025556	002400	066667	114543	
000270	034162	360200	000101	006004	114716	026630	026555	
066641	044060	160001	070151	006004	160001	070157	006004	
160001	079230	066641	026567	076664	062663	040043	052647	

P,22

023	026644	072641	040043	064043	114543	000000	062641	026632
	062664	064046	114543	000270	060151	070275	060157	070276
	060200	070277	062670	172663	034525	066647	026567	000100
	000000	000000	177755	177607	022124	026707	062771	002020
	026772	062704	006002	162705	070473	017250	064057	027151
	047122	050105	004672	160151	073261	060200	073262	064224
	044047	006024	026724	160231	050054	027074	002024	027120
	062706	070526	060156	003000	006021	160230	072771	002020
	027013	070161	017215	017126	053030	114721	026747	064227
	017200	027025	027101	160227	002003	027043	010075	053000
	027101	027043	062771	003000	071161	017215	063030	114721
	027001	064227	017200	026772	027006	000000	036771	026756
	063152	055777	027045	177755	025000	160227	010075	053000
	027006	026772	060262	002002	017230	017126	027101	160227
	002002	026756	072771	017230	017215	017126	063030	114721
	027043	053031	064041	027045	005034	005032	046102	046075

P,23

024	030000	003000	000000	005040	052516	046102	046040	063037
	064043	114722	017250	064055	047154	002400	073154	070526
	070245	160600	070474	060057	124540	006400	074245	074526
	063154	002002	027050	063263	102100	102705	124225	005046
	160230	070161	063073	070526	017215	006400	077263	074126
	074133	067177	017200	027115	005400	060370	070200	063227
	114720	064373	074157	027061	070245	160601	070474	063125
	124540	000023	000000	060176	050272	027136	070472	060272
	070473	037154	060271	053155	127126	067161	053156	067157
	057161	063160	073164	077165	063163	064043	114722	127126
	000000	042117	052123	041040	037477	037440	005166	005164
	000000	000000	042111	051503	020116	047524	020117	047040
	051531	051521	042515	005174	000000	160001	050273	006305
	127200	160001	050274	006005	127200	160001	050275	037200
	127200	030000	006400	060061	050155	064115	071200	063227
	006404	114720	127215	000000	000000	060161	033241	001727

I,10

025	073247	063242	054042	114722	127230	000060	005243	051525
	041103	044101	047075	000000	000000	063261	070161	063262
	070245	060074	070163	073263	127250	000000	000000	000000
	006002	027700	150227	061161	077314	000050	003004	114565
	060514	053313	002001	027335	017766	160206	170230	064224
	054056	027310	164220	174231	100100	102705	124225	000015
	000000	000000	040201	040045	073756	164000	006003	027331
	044055	160001	010072	053334	002001	037315	060203	127315
	000000	160205	010072	073334	017315	027356	003334	002004
	017315	027356	060061	017315	022356	060062	017315	027356
	102000	027354	030004	160001	061514	054056	027411	001222

010056	0092093	027411	054454	027402	050055	027376	063375
124566	005266	017766	063334	064512	124553	060512	070410
063410	074471	017766	124544	043517	063334	017315	173766
063334	002804	017315	173766	160205	001222	000010	027427
064513	006620	114567	060514	050054	027435	050055	027435

1,1

027443	160227	050056	003004	010072	050056	034162	114571
160225	002021	027462	150206	013456	053457	027565	027667
017766	124574	037400	014400	000016	000017	060514	050056
027567	064230	037000	044254	006021	124561	017756	044230
002040	124562	007004	044100	006020	124562	160296	013456
053457	002001	027667	060514	053460	027454	053461	027454
060102	002003	027523	001727	010074	040052	027525	060154
010076	070515	060160	006410	114577	177770	002002	006004
160232	010074	170232	003000	040001	002021	124563	063765
006400	114577	177767	002002	006004	144233	002400	044511
006020	027567	002004	027553	140232	003004	040505	002020
124563	160233	040511	002021	124563	160232	001727	130233
070171	060230	070172	160231	070173	060224	040045	002902
124560	050055	114565	114571	064177	160227	050050	074161
063753	170214	114572	027654	067314	074161	050060	027642
050055	027658	050056	002021	027645	060203	070472	160600

1,2

027	070474	017765	067641	060057	124540	0000122	063644	124566
005616	050057	002001	124573	017766	160206	006400	027310	
017766	063314	070161	160227	050050	003004	013666	002003	
124551	027310	020000	160205	001222	000010	027616	066203	
050513	027616	114570	027615	160233	003004	067754	074504	
044057	140001	070505	017756	060161	073314	006400	063755	
114577	177717	006002	002004	003004	040055	002020	124564	
064504	044056	160001	006400	114577	177770	077756	001727	
140233	070505	040511	002020	027744	037756	070505	027736	
067756	005727	060505	030001	070171	034162	027575	000171	
000126	020000	000000	164231	006121	027754	006100	007004	
077755	127755	000000	060245	002020	003004	070245	127766	
000000	003000	070001	010251	002021	026006	044100	000020	
026006	124723	002400	070215	124541	000000	072125	075126	
060161	072107	060162	072123	002400	070162	072130	060115	
040075	064055	016252	016136	062123	002003	026114	064527	

1,3

028	056057	026111	006020	026060	004065	006043	026111	076131
002041	026054	052130	052107	026054	016202	026054	016136	
036130	065131	026040	047117	060156	003000	072130	062130	
003000	052107	026072	016202	026072	016136	036130	026063	
026111	062124	066110	114543	006123	060161	052107	026115	
002400	070126	026115	000000	177765	062107	016202	000000	
036011	052115	040075	006400	015252	056100	126011	000000	
000000	000000	000000	000000	000000	000000	000000	000000	
000000	000000	000000	062125	016244	062264	072124	062126	
066124	015265	026075	066124	044055	160001	010073	040045	
002020	044051	044056	076124	007000	144546	006020	026172	
162124	002003	126136	050052	002101	026143	036125	062125	
010073	003024	040116	002302	026137	126136	000000	070161	
060074	070163	062237	070526	002400	070200	016244	062241	
050273	060274	052242	060275	052243	002001	026226	060370	
070200	015214	060370	070157	060200	002004	072125	036202	

1,4

029	002400	070526	126292	006210	026234	051531	051524	042515
000000	066123	074162	006404	016252	126244	000000	070166	
062264	070167	062263	070170	062265	114536	126252	000200	

000270	000166	000000	072127	160001	152127	002001	026313
006004	036127	160001	152127	002001	026313	006004	036127
162127	010975	172127	160001	012075	052127	002001	036266
126265	000000	062327	072334	003400	066370	120001	005004
036331	026322	126315	177741	000000	076334	064050	114543
000000	126330	000000	054000	002352	016330	000279	052353
002001	126336	216315	050327	036336	126336	000273	046102
000000	070170	076334	064200	074166	062370	070167	062371
066331	034162	114536	126354	000070	000166	000000	072401
075402	034261	114545	000002	000001	000000	000000	006405
124551	000000	073261	126372	000043	100213	010016	000100
026451	032633	002311	001425	102600	016446	000015	016464
102700	000000	170220	126419	006424	120213	052577	026436

1,5

030	060057	126419	164214	006021	007004	174217	005300	174214
060055	026415	000000	164214	005200	174216	164215	007324	
000010	007004	001310	026462	006003	007400	174217	126446	
000000	062454	052031	026476	163246	002020	026476	034260	
036464	126464	164213	005332	026611	142500	010073	050073	
026541	052422	026537	050005	026562	000000	026537	050054	
026541	164216	004065	134216	002041	001727	072446	060074	
002346	001727	110001	032446	170001	160213	001421	134217	
000040	001425	170213	036464	026606	016446	160213	026535	
016553	044052	174216	160217	040052	170217	026537	000000	
160214	001000	150216	026537	164216	126553	005421	174213	
016553	000000	160001	010075	032534	002040	170001	160217	
164215	002004	000001	001100	006020	000000	044000	106700	
001521	162600	103700	002400	126464	062464	052430	026621	
102500	010074	000004	026621	070250	002400	150216	026574	
150217	026645	160216	134216	000065	004010	062630	160000	

1,6

031	006051	001727	011074	134217	026643	052657	026574	102600
026637	062422	150220	006065	170220	0052422	026643	006400	
174216	026643	000000	000000	007332	064162	060155	006402	
050161	073360	000065	073347	002441	063344	073352	060164	
000002	050163	073353	063347	017211	000000	010067	002102	
026737	160213	010056	001510	025714	067145	063336	026727	
063337	002341	026726	160213	010077	001225	053340	026726	
060057	126660	007332	077062	073346	060041	170220	062736	
072743	026764	006737	060056	006400	074162	126650	000000	
063347	106501	006003	026755	002400	004033	026755	002304	
026751	017211	027115	007333	105606	164217	124001	006764	
164214	006004	160001	002003	027071	073354	006004	160001	
000021	003005	001100	002003	003400	073355	044051	160001	
010075	073350	120001	073351	003004	040116	001727	001300	
043355	002000	027034	001727	001200	010074	003004	040116	
050116	062701	043350	070174	000000	006004	170001	027051	

1,7

032	044055	003004	170001	043355	073355	044052	003004	043354
170001	044052	063352	042701	170001	017126	017241	067354	
063346	053336	047343	106702	106602	067355	000000	017162	
017241	063346	053337	017172	026764	060200	002302	000040	
060162	067353	002041	002003	074164	002001	002002	074163	
002400	070162	164215	006020	007004	126743	000000	063112	
170217	002400	035743	126743	000000	033347	106701	102601	
103701	127120	000000	063351	043335	002021	032701	002020	
043334	033352	073001	063350	101767	017143	127126	000000	
102600	103700	053353	002300	073353	063341	001225	017120	
102300	027154	106600	103700	017112	127143	000000	102702	
106602	103706	017120	106706	017112	127162	000000	017126	

$CRS_1$  &  $CRS_3$

DVAK 31

063355	003094	048073	001727	001200	010071	102600	103700
063342	017129	017112	017241	127172	0000000	102106	103700
106701	102691	103701	102304	027217	1025000	073357	010074
073356	063367	001226	002440	027237	160216	010075	033356

ДИДИИИ	0633357	702111
ДИ1723	000312	И273и5
ДИ2021	ИИ2405	ЯБИИ56
И74139	067350	И74127
ДИ24ИИ	006500	017143
ДИ27254	027313	102031
И63336	007400	1037ИИ
ДИ27051	1И2100	12ИИИ0
ДИИИИ	ИБИИИ	10ИИИИ
ДИДИИД	ДИИИИ	ИДИИИ
ДИИИИ	ДИИИИ	ДИИИИ
ДИИИИ	ДИИИИ	ДИИИИ
ДИИИИ	ДИИИИ	ДИИИИ
ДИДИИ	ДИИИИ	ДИИИИ
ДИДИИ	ДИИИИ	ДИИИИ

EQUIPMENT  
TABLE  
CRS<sub>3</sub>

DEVICE RET.  
§  
INT. TABLES  
CRS<sub>3</sub>

~~NOT  
USED~~

NOT  
USED

036 068105 042024 02/694 033692 079196 060113 012011 027604  
002400 079245 079530 006404 124559 067623 002400 074245  
079471 114543 000141 114556 006400 060262 071262 002321  
10-6-12 087410 124544 100002 127365 006200 000000 000000

~~\$EX03~~

START  
DRS

112

## B.P. LINKAGE FOR \$EX@3

1-38	054062	027575	057574	027633	027711	050022	060225	070470
	060141	073626	050142	073627	050143	010075	033620	073630
	053625	061011	114735	063624	070471	092408	070245	007408
	124544	000200	040000	037777	000031	043517	007026	020040
	020040	020021	051525	051520	060472	114552	160206	001727
	010073	053623	027704	160206	013622	033621	170206	060012
	070470	002414	064117	054203	027657	002004	044066	027552
	114733	073702	063671	067746	114735	060472	114552	027612
	000012	030050	007672	044457	047440	042522	051040	047122
	020105	050024	021440	020040	020040	063676	073773	063706
	027662	000000	054057	027755	077710	004010	114736	063710
	001110	027726	000400	074245	102100	102705	124225	060262
	002002	027721	114737	160740	114734	073754	160001	073752
	006004	160001	073753	063747	064041	114735	027575	177754
	007750	052504	020040	020040	020040	020040	060473	073773
	063766	067715	114735	060262	002002	027721	027726	007767

14	039	044457	047448	042522	051049	021010	021125	051505	051043
	042111	051503	000000	060472	114733	072047	006004	160001	
	072046	060173	114733	072034	006004	160001	072033	062023	
	066022	016066	126001	177716	016024	042111	051503	020107	
	042516	020103	047504	042449	000000	000000	020116	047524	
	020123	051523	020107	042516	021103	047504	042440	000000	
	000000	020105	051122	020120	047523	051440	000000	160224	
	002004	003000	040225	070225	072065	126055	000000	000000	
	072075	076075	034261	114545	000002	000001	000000	000000	
	010101	124551	002400	070261	125056	000000	064041	016114	
	126104	000000	064043	016114	125110	000000	076175	066153	
	076147	076150	076151	066146	076152	016154	146152	176152	
	002003	026139	016154	005727	146152	176152	036152	002002	

~~\$EXP04~~

ASCII

~~BASE PAGE  
LINKS FOR  
\$EX04~~

16

117

942	060051	046224	002020	027725	013004	073741	064227	034102
060200	002004	114716	027656	064227	050114	114716	027654	
064227	160001	073730	006004	160001	073731	016004	160001	

010075	073732	034261	114545	000002	000001	007730	177762
002631	124551	002400	070261	070245	060106	002020	027546

И33737	070116	И60113	092421	027646	И06409	124550	063740
061111	054954	И02400	И70471	124537	И02400	127657	003400

И70521 160226 050063 027670 06101 067744 114543 000141  
027675 044055 060021 061043 114543 040144 002400 070126

070127 070130 070131 070132 063741 002003 027720 067742  
063243 023230 160001 160009 123730 037730 006004 037741

027711 060245 002020 003044 07V245 124534 002400 079245  
124541 000241 000000 000000 045511 051523 044516 043440

~~—BP LINES FOR \$EXOS~~

...4 997567 БИОЛОГИЧЕСКАЯ ОБРАЗОВАНИЯ ПРИРОДЫ И ЧЕЛЮСТИКИ

B.P. LINK FOR \$EXPS

NOTE: \$EXPS  
uses \$SER  
but not nee  
ed here  
because  
CORE RES.

TEX67

NOTE: \$EX\$7  
USCS \$ADDR  
but since  
\$ADDR is  
Core Reside  
not needed  
here

\$EX@8

Однако в то же время, несмотря на то что в Европе и Америке в последние годы ведется активная политика по уничтожению ядерного оружия, в мире существует опасность ядерной войны.

BASE PAGE LINK FOR \$EXP8

120

1,23

048	064123	0000006	174735	060473	170736	002400	170737	114740
	114740	114740	114740	150741	0000001	027627	114740	010070
	170737	114740	150742	027625	150741	027757	010070	170743
	160737	001723	140737	140737	140743	170737	007400	027633
	002404	170737	064120	0007004	174744	160737	0030004	040120
	002020	027757	160737	114733	073775	160737	0400052	070101
	001720	0400021	0400117	0400055	170745	1600000	010072	114734
	170746	160747	001727	001222	010062	114733	010074	130750
	001727	170751	164752	160747	002020	164753	174754	164752
	150747	001222	0000010	164755	174756	134745	160747	001222
	010056	114734	0100074	130757	170760	160747	001727	010074
	114734	170751	034251	114545	0000002	0000001	007773	177744
	002746	060529	003000	040254	002021	124554	060517	103101
	0000036	102101	060515	064516	102100	102705	124529	002400
	070261	114555	134737	134744	027634	002400	070245	124762
	034261	114545	0000002	0000001	010011	177764	007767	027750

\$EX@9

28

ASCTI

卷之三

## BASIC PAGE LINEAGES

卷之三

~~SECRET~~

Иванов	Петров	Сидоров	Михайлов	Андреев	Константинов	Васильев	Олегов
Петров	Сидоров	Михайлов	Андреев	Константинов	Васильев	Олегов	Ильин
Сидоров	Михайлов	Андреев	Константинов	Васильев	Олегов	Ильин	Дмитриев
Михайлов	Андреев	Константинов	Васильев	Олегов	Ильин	Дмитриев	Юрьев
Андреев	Константинов	Васильев	Олегов	Ильин	Дмитриев	Юрьев	Павлов
Константинов	Васильев	Олегов	Ильин	Дмитриев	Юрьев	Павлов	Андреев
Васильев	Олегов	Ильин	Дмитриев	Юрьев	Павлов	Андреев	Константинов
Олегов	Ильин	Дмитриев	Юрьев	Павлов	Андреев	Константинов	Васильев
Ильин	Дмитриев	Юрьев	Павлов	Андреев	Константинов	Васильев	Олегов
Дмитриев	Юрьев	Павлов	Андреев	Константинов	Васильев	Олегов	Ильин
Юрьев	Павлов	Андреев	Константинов	Васильев	Олегов	Ильин	Дмитриев
Павлов	Андреев	Константинов	Васильев	Олегов	Ильин	Дмитриев	Юрьев

~~\$EX10~~

24										\$EX12
053	134557	060116	003004	070511	060254	102605	060115	073725		
	063751	073727	063754	073733	017671	060467	053747	027634		
	002400	067757	114543	000270	060160	070371	060115	017676		
	070371	074372	063747	070467	060115	073726	063751	073727		
	063755	073730	063731	0601051	114536	060200	002002	027641		
	060371	027643	060370	070157	070160	067756	060103	002003		
	077655	034261	114545	000002	000001	007732	177746	007660		
	124551	0002400	070245	170557	070260	070261	063750	070471		
	097100	124544	000000	063731	000004	114536	127671	000000		
	073726	0001727	043753	073725	063726	043752	073726	063751		
	073727	0601052	073730	017671	037725	027703	002400	070270		
	067760	060525	003004	000000	060525	127676	000000	000000		
	0000000	0000000	007726	0044516	050125	052040	035104	040524		
	042454	054130	054130	054130	054130	054130	026110	026115		
	051502	002191	0000270	0000000	177711	0000200	0000201	177752		

\$\pi x\_2

2,5

177577 010313 999999 000000 000000 000000 000000 000000

2,6

055	650472	170735	060473	073723	060203	073722	074270	057732
027626	002400	070126	054257	027736	114556	064270	047700	
160001	067717	114736	064270	054055	002001	027634	060236	
002003	027634	002400	070245	102100	102705	121225	160602	
070474	003733	006400	074245	124541	006400	060106	042020	
027645	033721	070126	060113	002020	124737	002400	067734	
114543	000141	063721	070471	002400	070245	064270	057731	
002001	027663	004538	124542	006400	060262	074262	092021	
027671	0002400	070471	007400	124544	060112	050111	027670	
124537	007721	047522	046521	051121	052115	000000	046125	
046116	044502	041527	044524	043111	042104	000000	044505	
0200040	045117	1000000	0000000	0000000	0000000	0000000	037777	
0400000	0000031	0000015	0000014	0000024	177765	177757	063723	
140748	150000	170741	160206	001727	010072	154742	053730	
027771	160206	013726	033727	170206	064117	007004	044203	
002404	006303	027765	002004	047735	027760	114733	170743	

\$EX/3

37

056	164744	0600016	073724	160745	073725	160001	173725	086004
	037725	134746	124747	160750	050055	002001	026011	060202
	040010	026022	114545	000002	000001	010027	177756	010020
	124551	160751	114552	002400	070245	160206	164220	124752
	044457	047448	042522	051040	000000	020040	020040	020040
	020040	020040	020040	020040	010034	010045	020105	050524
	021440	000000	020040	010053	020125	051505	051040	042111
	051503	010063	047122	042524	050105	062076	066077	015100
	006400	074245	060270	150753	002001	074530	124550	040502
	051121	040000	072034	076035	062130	114734	072041	160001
	072037	006004	160021	072040	034261	114545	020002	000001
	0100034	177762	010123	124551	002400	070261	130751	114552
	126100	000000	000000	064001	015141	126131	000000	000000
	016141	126135	000000	076222	066200	076174	076175	076176
	066173	076177	016201	146177	176177	002003	026165	016201
	005727	146177	176177	036177	002002	026151	066176	002174

ASCII

28

DRS

Имя	Фамилия	Пол	Возраст	Место	Сроки	Способ	Состав	Сроки
Иван	Петров	Мужчина	25 лет	Санкт-Петербург	15.05.2023	Судебный	Лекарства	15.05.2023
Анна	Смирнова	Женщина	30 лет	Москва	15.05.2023	Судебный	Лекарства	15.05.2023
Петр	Кузнецов	Мужчина	40 лет	Санкт-Петербург	15.05.2023	Судебный	Лекарства	15.05.2023
Екатерина	Петрова	Женщина	28 лет	Москва	15.05.2023	Судебный	Лекарства	15.05.2023
Дмитрий	Соколов	Мужчина	32 лет	Санкт-Петербург	15.05.2023	Судебный	Лекарства	15.05.2023
Ольга	Петрова	Женщина	26 лет	Москва	15.05.2023	Судебный	Лекарства	15.05.2023
Ирина	Смирнова	Женщина	35 лет	Санкт-Петербург	15.05.2023	Судебный	Лекарства	15.05.2023
Александр	Петров	Мужчина	38 лет	Москва	15.05.2023	Судебный	Лекарства	15.05.2023
Мария	Соколова	Женщина	29 лет	Санкт-Петербург	15.05.2023	Судебный	Лекарства	15.05.2023
Андрей	Петров	Мужчина	33 лет	Москва	15.05.2023	Судебный	Лекарства	15.05.2023
Софья	Смирнова	Женщина	27 лет	Санкт-Петербург	15.05.2023	Судебный	Лекарства	15.05.2023

## BASE PAGE LINKAGES FOR \$EX13

29

055	064123	004066	077715	060473	073751	002400	073753	073754
017725	017725	001722	073752	017725	033752	073752	017725	
053756	002001	027632	017725	011070	073753	017725	053755	
027632	053756	124734	010070	073754	063753	001723	043753	
043753	043754	073753	063752	053757	027766	053760	124735	
063753	002002	027650	002001	073747	064122	007004	077750	
027653	073747	003100	073750	063747	003004	040122	002420	
124734	063747	114733	073762	063747	040052	040121	160000	
114733	073765	034261	114545	000002	000001	007761	177766	
007716	060520	003000	040254	002021	124554	060517	103101	
000036	102101	060515	064516	102100	102705	124520	002400	
070261	114555	037747	037750	027653	124736	000000	067745	
0004065	160021	002041	001727	011074	005609	006004	077745	
127725	000000	073751	001700	040001	127740	000000	000000	
0000000	000000	0000000	0000000	0000000	0000000	0000040	0000054	
052529	042116	046125	0000000	029115	050524	0000000	063753	

SEX 14

2.11	060	114737	040056	017740	040117	040056	073746	160000	001222
	010056	050054	020001	026007	160740	012104	170740	026136	
	060120	003004	170741	002404	170742	064117	063001	044066	
	174743	040056	160000	001222	010056	150054	026033	160743	
	134742	134741	026015	026136	160742	114733	072056	034261	
	114545	000002	000001	010052	177761	010046	124744	002400	
	070261	114555	025026	042105	053111	041505	020043	054130	
	020104	047527	047040	160745	016110	150121	026123	040052	
	114746	040117	040056	170743	160000	012106	052107	026123	
	160744	012104	032105	170740	026136	037777	040000	037400	
	014404	000000	002003	026123	002020	026123	064120	007000	
	144745	006021	026123	126110	034261	114545	000002	000001	
	010141	177765	010133	124744	002400	070261	114555	002400	
	070245	124747	044516	050125	050000	042522	051117	051040	
	000000	064041	016157	126147	000000	064043	016157	126153	
	000000	076240	066216	076212	076213	076214	065211	076215	

## ASCII

ASCI

212

# BASE PAGE LINKAGES FOR \$EX14

3,13

2,149

063	174734	И60115	170735	160735	170737	160740	170741	160735
	114575	160742	006404	114536	160734	002020	ИИ2400	164743
	002002	164744	174745	006004	160746	002002	И27622	164001
	006003	027644	127624	050952	027620	040254	027627	060254
	110747	170750	134745	160746	050052	027637	040254	027640
	060153	170751	114752	017744	002001	134745	134745	160746
	002021	027719	060255	110747	170750	И60151	170751	114752
	060047	170753	063776	170754	160750	114733	160001	010074
	130755	170901	114756	160757	114733	114756	160757	001265
	160000	114733	114756	134750	134753	027672	017772	002021
	027657	134745	160745	032021	027723	060153	110747	170750
	060147	170751	114752	017744	002000	070245	070113	070471
	164760	114543	000141	002400	064534	006002	124542	060262
	074262	002021	124537	007400	124544	000000	060043	170753
	063776	170754	160750	114733	160001	010074	130755	170001
	114756	160757	114733	114756	134750	134753	027760	017772

TEX15

四

064	022021	027745	127744	0000000	114545	0000002	0000006	000333
177674	010002	124551	062047	003004	042052	124761	000000	000000
062037	172051	136051	160001	172051	036051	000004	160001	000000
172051	036051	000004	160001	172051	036051	126006	000000	000000
114545	000003	001106	177777	000000	010036	124551	126026	000000
020049	020029	000000	000000	000000	000000	010042	000000	000000
000000	000000	000000	000000	177765	000000	0000270	000005	000000
000000	177770	000000	000000	010071	126061	000000	000000	000000

ASCII

JDRS

ASCII

016071	126065	011111	076152	966130	76124	076125	076126
066123	076127	010131	146127	176127	012003	026115	016131
005727	145127	176127	036127	002002	026101	066126	062124
172126	076124	066123	126071	010124	000000	000000	000000
000000	030069	011111	006100	076151	070001	042152	036151
02021	026134	010120	026135	066152	017004	044000	062151
040052	126131	011111	011111	011111	030000	000000	000000
011111	010003	011111	011111	011111	010000	010000	010000

## BASE PAGE LINKAGES FOR \$EX15

216

010045	010056	010057	010045	010055	010043	010054	010044
010026	010056	010051	010044	010046	010047	010047	010052
010061	010059	010059	010049	010059	010049	010059	010059
010057	010050	010050	010048	010050	010048	010050	010050
010059	010050	010051	010049	010051	010049	010051	010051
010058	010051	010051	010048	010051	010048	010051	010051
010056	010052	010052	010047	010052	010047	010052	010052
010055	010053	010053	010046	010053	010047	010053	010052
010054	010054	010054	010045	010054	010046	010054	010053
010053	010055	010055	010044	010055	010045	010055	010054
010052	010056	010056	010043	010056	010044	010056	010055
010051	010057	010057	010042	010057	010043	010057	010056
010050	010058	010058	010041	010058	010042	010058	010057
010049	010059	010059	010040	010059	010041	010059	010058
010048	010060	010060	010039	010060	010040	010060	010059
010047	010061	010061	010038	010061	010041	010061	010059
010046	010062	010062	010037	010062	010042	010062	010059
010045	010063	010063	010036	010063	010043	010063	010059
010044	010064	010064	010035	010064	010044	010064	010059
010043	010065	010065	010034	010065	010045	010065	010059
010042	010066	010066	010033	010066	010046	010066	010059
010041	010067	010067	010032	010067	010047	010067	010059
010040	010068	010068	010031	010068	010048	010068	010059
010039	010069	010069	010030	010069	010049	010069	010059
010038	010070	010070	010029	010070	010050	010070	010059
010037	010071	010071	010028	010071	010051	010071	010059
010036	010072	010072	010027	010072	010052	010072	010059
010035	010073	010073	010026	010073	010053	010073	010059
010034	010074	010074	010025	010074	010054	010074	010059
010033	010075	010075	010024	010075	010055	010075	010059
010032	010076	010076	010023	010076	010056	010076	010059
010031	010077	010077	010022	010077	010057	010077	010059
010030	010078	010078	010021	010078	010058	010078	010059
010029	010079	010079	010020	010079	010059	010079	010059
010028	010080	010080	010019	010080	010060	010080	010059
010027	010081	010081	010018	010081	010061	010081	010059
010026	010082	010082	010017	010082	010062	010082	010059
010025	010083	010083	010016	010083	010063	010083	010059
010024	010084	010084	010015	010084	010064	010084	010059
010023	010085	010085	010014	010085	010065	010085	010059
010022	010086	010086	010013	010086	010066	010086	010059
010021	010087	010087	010012	010087	010067	010087	010059
010020	010088	010088	010011	010088	010068	010088	010059
010019	010089	010089	010010	010089	010069	010089	010059
010018	010090	010090	010009	010090	010070	010090	010059
010017	010091	010091	010008	010091	010071	010091	010059
010016	010092	010092	010007	010092	010072	010092	010059
010015	010093	010093	010006	010093	010073	010093	010059
010014	010094	010094	010005	010094	010074	010094	010059
010013	010095	010095	010004	010095	010075	010095	010059
010012	010096	010096	010003	010096	010076	010096	010059
010011	010097	010097	010002	010097	010077	010097	010059
010010	010098	010098	010001	010098	010078	010098	010059
010009	010099	010099	010000	010099	010079	010099	010059

211

\$EX16

218

BASE PAGE LINK FOR \$EX16

۲۸۴

2, 19

068	060209	170733	164161	002480	170734	170735	054155	160733
070209	170736	060114	114729	160737	114721	002001	027745	
164740	160227	010075	150741	006480	074270	160742	050273	
060274	150743	060275	150744	027742	160745	070271	060176	
070272	060227	164746	114724	060470	170747	114725	070327	
060209	140750	064270	006002	060320	070370	070157	064161	
54155	070160	160736	064270	006003	160751	074470	054055	
114720	060161	050175	006405	120752	060155	070161	060115	
070200	160736	114720	050227	160753	114724	160736	064055	
114720	060175	070161	160733	070210	124752	060271	170754	
164755	150745	164756	150757	164760	154755	160761	174762	
160763	164764	114722	160765	164766	114722	114545	000001	
000401	010196	177776	007734	124551	160767	150770	027607	
150771	124752	027722	006003	027624	160733	170772	070200	
001727	170773	170735	160736	006484	114720	060370	170774	
060511	002004	170725	134722	134734	160772	070200	160736	

\$EX 19

2,298

BASE PAGE  
LINKAGES  
FOR \$EX19

2,21

\$EX29

223

271	069127	073775	091727	114733	174734	096004	160001	010074
	130735	170736	060126	070161	114733	130735	170737	060130
	114733	173740	160741	164742	017737	160743	164744	017737
	160745	170746	160747	067777	017737	112011	092401	070209
	096004	017755	161759	050273	060274	150751	060275	150752
	010074	027545	060378	070200	096004	017755	064161	060370
	070157	054155	070150	060154	010074	064372	054000	027733
	095727	077774	044075	074372	034371	064056	017755	064511
	077776	067767	070526	063775	006404	017755	063774	064055

\$EX2φ

017755	063775	070166	063773	070167	002404	070170	067770
074526	063772	164753	034162	114536	037774	037775	037776
022678	160754	170716	160747	067777	017737	102077	006400
074245	074526	074525	124550	160755	164756	017737	027726
00000001	073746	077747	034261	114545	000002	000001	000000
00000002	017752	124551	002402	070261	127737	000000	070166
063771	070167	150757	070170	063772	034162	114536	127755

۲۰

072	007766	007714	000270	000166	007774	000000	000000	000000
	177732	177759	177756	177764	000200	010403	036400	047440
	043106	051531	051524	042515	010014	050101	051111	052131
	020105	051122	047522	010023	051543	020040	026043	020124
	051113	020040	020040	026040	020123	041524	051075	000400
	010040	052125	051115	020117	020040	020104	044523	041440
	050122	047524	042503	052040	047526	042522	051111	042105
	020123	053511	052103	044040	010064	051520	040522	042440
	052122	045149	047526	042522	043114	047527	000000	064441
	016105	126075	000000	064043	016105	126101	000000	076166
	066144	076149	076141	076142	065137	076143	016145	146143
	176143	002003	026131	016145	005727	146143	176143	036143
	002002	026115	066142	062140	072142	076140	066137	126105
	010149	000000	000000	000000	000000	030060	000000	006440
	076165	070001	042166	036165	002021	026150	006020	026151
	056166	007004	044000	062155	040052	126145	000000	000000

## ASCII

BASE PAGE  
LINKAGES  
FOR \$EX20

300

DVRØI

974	10000006	016530	160213	910056	0500954	026267	006404	050455
926265	160213	001727	901222	010074	050062	002001	026264	
160216	032542	170206	006004	0600001	126241	160214	001200	
170216	160215	002020	026277	001000	003004	002003	003400	
170217	062547	170220	160213	012541	032545	170213	102700	
002400	126241	001000	016530	160213	001200	072550	001727	
072551	000266	066550	102500	004010	002002	026340	134220	
026425	160206	012542	002002	026425	006404	026516	002040	
026355	010073	050073	026430	052553	026425	050065	026464	
006020	026425	050054	026451	026376	006011	026376	066551	
006011	026376	070001	001000	140217	002021	026375	060001	
170215	001000	003004	170217	060001	164216	004065	134216	
002041	001727	072552	060074	002040	001727	110001	032552	
170001	160213	012541	170213	134217	026425	062551	002020	
026503	160213	032546	170213	102700	036313	126313	160214	
001200	170215	160215	002020	026440	001000	003004	002003	

32

875 003400 170217 062547 170220 160213 032546 170213 026425

DRS

DVR81

33

## BASE PAGE LINKS FOR DVRCB1

34

077	0000000	8164208	160213	0110056	050054	126241	050055	0263000
	160213	001727	001222	0100073	050063	026263	050064	026267
	0600055	1262411	062442	170216	0024000	026276	160214	002021
	003001	002003	003400	170216	060065	170217	026313	160214
	0012000	170216	160215	002000	026310	001000	003004	170217
	0024000	170220	062441	072320	026322	002400	126241	000000
	016420	160213	070001	001727	001200	072440	002400	150216
	026402	004010	026360	150217	026364	164216	134216	004065
	160001	002041	001727	010074	060440	134217	026354	006020
	026354	052436	026402	102600	102700	036320	126320	160217
	134215	000000	026354	062440	002020	026402	164220	062435
	056435	060065	170220	056435	026377	026354	006400	174216
	026354	102500	070001	160206	010075	030001	170205	002400
	006002	060055	164215	006020	007004	106700	126320	000000
	032437	072402	040067	072354	042433	072355	032434	072416
	126420	000000	001100	004000	0000015	000137	102500	000000

DVRØ2

3.5

DRS

37	ФИО	Коды	ФИО	Коды	ФИО	Коды	ФИО	Коды
ПВИ КИРИЛЛ	164237	005600	И64257	005623	174207	и16700	073001	DVR22
ПИ20001	015536	160213	Р10056	050056	026401	004033	026252	
ПИ2031	026346	004310	026546	015524	016550	076550	087007	
026376	084045	160214	006121	026330	072536	060045	072524	
072612	060257	067037	050062	067046	076521	160213	081727	
001226	002541	063055	170001	006004	036612	и26314	066521	
162536	170001	036536	006004	036550	026321	и62521	016633	
066261	063030	015657	010266	016557	067056	062345	016657	
010336	061064	063034	016657	014342	150215	и26372	016612	
067050	170217	016550	160214	016633	067057	и63035	016657	
010353	015557	134217	002001	026567	067056	и62361	016657	
010366	160213	010067	002002	026440	и60057	126241	016536	
160213	013050	053061	026376	004033	026400	и53062	026422	
053063	026440	053054	026445	053065	026452	и50067	026476	
026531	016625	067056	063031	016657	010423	002400	170207	
006401	006124	063001	002020	026376	002400	127001	016524	

38	081	064056	063036	016657	010441	016625	067066	063031	016657
	010446	016521	010067	002003	026462	064056	062475	016657	
	010456	057067	107627	016521	001323	001310	026472	102727	
	026427	067063	062475	016657	010462	005310	026546	016612	
	064061	062510	016657	010501	067070	063033	016657	010515	
	016521	013071	002003	026432	067056	063032	016657	010515	
	000000	102527	126521	000000	016521	013072	002193	126524	
	067001	060055	006021	127001	126241	000000	005727	006020	
	026546	067063	062536	016657	110536	060056	126241	000000	
	164215	006321	007005	005100	076524	126550	003000	016521	
	013071	002002	126557	160213	002011	026573	016521	001727	
	002020	026606	102502	002002	033373	003004	016550	044000	
	007004	160215	002020	005000	026436	164215	006020	007004	
	026136	0000000	016521	013072	002303	126612	160207	001623	
	170207	002340	026531	126612	000000	016521	000067	002000	
	026427	126625	0000000	036635	177777	106702	001225	102502	

**3,9** 082 062557 033074 102606 102702 062524 102602 126633 003400  
072635 162657 001275 1600000 067463 002001 000000 170216

DRS

DVR22

197627	*16521	001323	001310	026650	002400	052635	103726
192727	036635	193796	063001	002007	126241	124000	0000000
072557	064000	062706	016775	072706	106726	002004	072711
196727	062670	016775	072670	006004	062463	016775	072463
072661	062470	016775	072470	072671	062522	016775	072522
064257	062643	016775	072643	073013	040047	072640	072646
62673	015775	072673	062747	016775	072747	106706	040047
044047	072636	062573	016775	072573	062644	016775	072644
016521	010874	070001	160216	010075	030001	170206	016521
070001	003400	072635	126700	000000	010077	030001	126775
000000	164207	005265	006002	050001	027022	074257	040052
016744	002400	102606	160216	001050	002405	124000	0006400
127001	070001	063026	016775	073026	106700	026674	010335
010427	010500	010511	010265	010362	010431	011040	020040

318

311

## BASE PAGE LINKS FOR DVR22

3,12

085	160001	002002	131003	171004	006004	160011	002003	026012
131005	171006	006004	160001	171007	006004	160001	171010	
006004	160001	171011	002409	171012	171013	171014	060527	
151015	026036	171016	002409	165017	115020	060255	171021	
171022	003004	171023	040256	171024	141025	171026	002004	
171027	171030	161025	003004	040255	171031	060045	040100	
171032	171033	161024	003004	171034	165025	002409	170001	
006004	135034	026067	114535	012101	000066	020677	015171	
020771	161035	003004	141036	070001	0400051	002020	027307	
161036	002004	001727	073037	161035	003004	141036	001100	
141035	001727	171037	001727	064155	054161	026132	060154	

LOAD R

FOR 32  
SECTORS

13,6

ПД1	ПД1ДИЗ	ПД0413	ПД4994	ПД99415	ПД44095	ПД9421	ПД44007	ПД4423	ПД4424
ПД4010	ПД0425	ПД30111	ПД99427	ПД44012	ПД1002	ПД4014	ПД1004	ПД4427	ПД4427
ПД4015	ПД1006	ПД14016	ПД10112	ПД10017	ПД1016	ПД4020	ПД1021	ПД4428	ПД4428
ПД1023	ПД31023	ПД10024	ПД10026	ПД04041	ПД44041	ПД44046	ПД44046	ПД4429	ПД4429
ПД10011	ПД04040	ПД10011	ПД10011	ПД44040	ПД44040	ПД44040	ПД44040	ПД4429	ПД4429
ПД10011	ПД04040	ПД10010	ПД10010	ПД44040	ПД44040	ПД44040	ПД44040	ПД4429	ПД4429
ПД10009	ПД04040	ПД10010	ПД10010	ПД44040	ПД44040	ПД44040	ПД44040	ПД4429	ПД4429
ПД00009	ПД04040	ПД10009	ПД10009	ПД44040	ПД44040	ПД44040	ПД44040	ПД4429	ПД4429
ПД37567	ПД37135	ПД37405	ПД16000	ПД36514	ПД36515	ПД1633	ПД7777	ПД4430	ПД4430
ПД60009	ПД22266	ПД4134	ПД44000	ПД4150	ПД5010	ПД5035	ПД5874	ПД4431	ПД4431
ПД5152	ПД3123	ПД3151	ПД2135	ПД60000	ПД0471	ПД0513	ПД0534	ПД4432	ПД4432
ПД10132	ПД10144	ПД10072	ПД10030	ПД10000	ПД11135	ПД11210	ПД0765	ПД4433	ПД4433
ПД11005	ПД11114	ПД1461	ПД10021	ПД05177	ПД3136	ПД7660	ПД10755	ПД4434	ПД4434
ПД54000	ПД15690	ПД15732	ПД60004	ПД5161	ПД5324	ПД3525	ПД5334	ПД4435	ПД4435
ПД1160	ПД11163	ПД1177	ПД1211	ПД1223	ПД2246	ПД2151	ПД0522	ПД4436	ПД4436
ПД30523	ПД00673	ПД7726	ПД12000	ПД0207	ПД1350	ПД5747	ПД15750	ПД4437	ПД4437

**EXEC MODULE  
DOCUMENT  
TABLE  
CRS 4**

CRS-4

13,7

002	0104000	0200000	162137	040523	041511	044440	000072	000000	RELOCATABLE LIBRARY
0000000	0000000	0000000	000143	000000	000000	000000	000000	000000	
0000000	0000000	0000000	040002	170452	041516	042105	041400	000000	
041516	047503	0520000	000004	0360000	060135	140462	000000		
001320	0000000	0000000	064041	0160000	000010	1260000	000000	000000	
013212	064043	0160000	000010	1260000	000004	000000	076000	076000	
000071	133332	0650000	000017	0760000	000043	076000	000044		
0760000	0000045	0650000	000012	133320	0760000	000046	016000		
0000050	1460000	000046	1760000	000046	002003	132132	026000		
0000034	0160000	000050	005727	1460000	000046	1760000	000046		
121320	0360000	000046	002042	0260000	000020	0660000	000045		
0104000	060106	121765	000035	133332	002000	000043	072000		
0000045	0760000	000043	0660000	000042	1260000	000010	020000		
0000043	0210000	060122	052445	000046	000012	000000	030000		
0000029	0064000	0760000	000070	013210	070001	042000	000071		
0360000	0000070	002021	0260000	000053	013200	006020	0260000		

# RELOCATABLE LIBRARY

138

FOR  
TOTAL  
OF  
147

139

004	И11489	020000	005144	042125	046522	054040	ИИИИ64	ИИИИИ
000000	000006	001143	ИИИИИ	ИИИИИ	ИИИИИ	ИИИИИ	ИИИИИ	ИИИИИ
ИИИИИ	905100	040002	142164	022114	044502	051000	ИИИИИ	ИИИИИ
И22111	041502	054000	0000126	035400	050136	033267	ИИИИИ	ИИИИИ
И13320	000000	072000	0000056	162000	000000	036000	ИИИИИ	ИИИИИ
И02002	133200	026000	000010	036000	000061	026000	000024	ИИИИИ
И02004	002004	121332	076000	000057	005500	076000	000061	ИИИИИ
И66000	000000	046000	ИИИИ62	001212	164000	174000	ИБ6000	ИБ6000



003607	002213	003743	103575	003325	002463	003204	003213	LINKS
003229	003236	003003	005774	006111	006266	006354	006366	EXEC MODULE
006372	005771	006331	006315	006413	006464	006669	006743	LINKS
000001	000002	000003	000006	000007	000008	000009	000009	
000000	000000	000000	000000	000000	000000	000000	000000	
000000	000000	000000	000000	000000	000000	000000	000000	

19,15

005	023776	154025	117770	061413	118154	041036	102074	012676
025574	053370	126760	064446	151114	130736	070402	161004	
150516	127742	066412	155024	149556	110042	026612	055424	
133059	074626	000162	000344	002710	001620	003440	007100	
016200	031400	071000	162000	152506	133722	076352	003432	
007064	015150	034320	070640	161500	151706	132322	073352	
166724	164356	157742	145612	122132	052772	125764	062456	
145134	128775	050502	121204	051116	122234	053176	126374	
063476	147174	125076	060702	141604	112116	032742	065704	
153610	136126	102762	014452	031124	062250	144520	117746	
046422	115044	040616	101434	011576	023374	046770	115760	
042446	105114	020736	041674	103570	016066	034154	070330	
160660	150246	127222	065152	152324	133356	075442	001612	
003424	007050	016120	034240	070500	161200	151106	130722	
070352	160724	150356	127442	065612	153424	135556	102042	
012612	025424	053050	126120	062746	145714	122336	103216	

19,16

002502	175321	012410	165774	052040	124109	056706	135614	
102136	013002	026004	054010	130020	066546	155314	141336	
111402	031512	053224	146450	123526	056162	134344	077416	
000542	013304	026610	055420	133040	074606	000122	000244	
000510	001220	002440	005100	012200	024400	051000	122000	
052506	125214	061136	142274	113276	035302	072604	165410	
161526	151752	132452	073632	167464	165556	162242	153212	
135132	100772	010472	021164	042350	104720	020346	040714	
101630	012156	024354	050730	121660	052246	124514	057736	
137674	106276	023302	046604	115410	041526	103254	015236	
032474	065170	152360	133446	075622	002152	004324	010650	
021520	043240	106500	023706	047614	117430	045566	113354	
035435	073074	156170	163066	154662	140252	107232	025172	
052364	124750	060426	141054	110635	030202	060404	141010	
110525	027752	057744	137710	106326	023362	046744	115710	
042326	104654	020236	040474	101170	011066	022154	170601	

19,17

007	110660	067143	060514	117671	111166	031062	062144	144310
117326	045362	112744	034416	071034	162070	152666	134262	
077252	005232	012464	025150	052320	124640	060206	140414	
107536	026002	054004	130010	066526	155254	141236	111202	
031112	062224	144450	117626	046162	114344	037416	077034	
004576	011374	022770	045760	113740	036406	075014	000536	
001274	002570	005360	012740	025700	053600	127400	065506	
153214	135136	101002	010512	021224	042450	105120	020746	
041714	103630	015166	034354	071030	161660	152246	133222	
075152	001032	002064	004150	010320	020640	041500	103200	
015106	032214	064430	151060	134516	070222	160444	147616	
126142	063012	146024	122556	054042	130104	066716	155634	
142176	113102	034712	071624	163450	155626	142162	113052	
034632	071464	153150	155026	140562	110052	026632	055464	
133150	075026	000562	001344	002710	005620	013440	027100	
056200	134400	077506	005722	013644	027510	057220	127110	

REMAINDER  
OF  
TRACK  
19  
NOT  
USED

21, 23

061	0260110	000273	162009	000114	040102	026000	000161	026004
120132	072009	000160	063122	000104	076000	000161	026004	
000064	121320	072009	000160	003409	072000	000161	002000	
000160	003094	281320	000102	002020	026000	000334	002000	
000161	035421	000147	112405	000172	113209	016004	072000	
000173	062009	000160	040052	000121	011211	160000	016004	
072000	000176	034261	016001	000202	000002	000001	000112	
177766	000127	000010	000052	000000	040254	002021	026002	
000001	060017	103191	000036	102101	060515	000000	064516	
102100	102745	124520	000243	011332	070261	016003	036000	
000161	036001	000161	000004	000004	121200	026000	000341	
000001	066000	000156	000005	012001	060123	011144	000141	
000001	160001	002041	001727	010001	005600	013201	006004	
076001	000156	126000	000136	000001	070001	001200	001700	
040001	126000	000151	000000	000000	000000	000000	000000	
000001	000000	035000	000143	112100	000166	000000	000000	

22.Ф	LB	DO	90000	QQ	QQ	QQ	QQ	144456	831461
062	045117	042117	021451	0594521	0594521	0594521	0594521	044456	831461
0200000	035173	000723	001456	031461	0200000	036173	000724		
044456	031062	020000	036161	0594521	041456	031062	020000		
035164	0000000	046117	049500	051456	036155	0594521	036137	163252	C.S.
041129	051030	036145	049500	049523	046502	020000	036137		
0000001	037501	051503	047000	036157	0594521	037501	051515		
041089	036137	0594521	037502	047103	047000	036137	0594521		
037502	050113	052400	036137	047000	037503	041117	0594521		
0334003	0000000	0000000	0000000	177200	046040	020040	020040		
0420001	0200000	0200000	0200000	0200000	0000000	0000000	0000000		
0000000	0000000	0000000	0000000	0000000	0000000	0000000	0000000		
0400003	0400004	0400002	0400001	0400000	0400000	0400000	0400000	0594521	
0594521	0594521	044456	031461	0200000	037515	051531	046400		
036137	0594521	037502	046125	047000	036137	0594521	037502		
043114	043410	036137	049500	037514	051524	046000	036137		
0400001	037514	052516	044132	036137	0594521	037522	051502		

USER  
LABEL/  
SYSTEM  
BUFFER  
SECTOR

## USER DIRECTOR

LAST DIRECTORY ENTRY THIS SECTOR							
DATA	043124	047064	024010	027427	000037	040523	046461
030405	000014	040523	046462	024010	030422	000013	051511
047161	029011	031035	046464	041111	051503	030411	031012
000011	041117	047524	020011	031023	040025	043124	047110
020011	031420	000001	042517	043040	020003	031421	040001
012063	012013	001002	001002	012000	012013	043123	050103
042403	031422	000001	012000	012013	001002	001002	012000
012013	051127	044516	042003	031423	000001	012000	012013

END OF DIRECTORY  
USER

## User DIRECTORY

DATA	DATA	DATA	DATA	DATA	DATA	DATA	DATA
001002	012000	012013	042056	050060	051411	031424	
001003	052123	051124	0511411	053117	051106	052123	051124
051010	033025	040095	041514	042511	051012	033402	040001
040010	020018	024400	030004	040523	046463	020010	024404
040014	040523	046464	020016	024418	040523	046465	
020014	024415	000012	043122	052116	020012	025001	030014
043124	047061	020010	025010	050060	043124	047062	020014
026014	050055	043124	047063	020010	027005	050052	17717
<b>22,3</b>		<b>NOT LAST</b>	<b>DIRECTORY ENTRY</b>		<b>THIS SECTOR</b>		
065 000257	162000	000257	012124	0501452	026000	000050	040254
026000	000051	060153	133212	022000	000263	016000	040237
016000	000155	040001	036003	011207	132120	036000	040207
162000	000257	040021	026003	000121	060255	132132	012100
0000271	0720000	000260	060151	012001	000263	016000	000237
013320	060047	0720000	000261	062000	000217	072000	000262
035000	0601136	017074	000074	130012	062000	000260	016012
1600001	0110074	0320000	000251	013312	170001	016000	000217
1620000	000263	016012	016000	000217	120112	152000	030200
001265	1600000	016012	016000	000217	133320	036000	000260
0360000	000261	026000	000103	016000	000203	00021	133212
0260000	0002170	0360000	000267	162000	000257	002021	026400
000134	013212	060153	012000	000271	072000	000260	060147
0720000	000263	0350000	000143	044350	000132	132000	016000
000237	016000	000155	000200	070246	070113	013000	070111
066000	000264	016007	000141	002400	001000	004530	006002

22, 4

И66	026009	062282	974262	014196	062291	026004	007400	026019
И66009	013332	062243	972243	014261	062000	008207	022000	022000
000262	062020	060256	100123	016412	160001	013074	032044	032044
000251	170001	133132	016034	011217	162000	008260	016012	016012
016000	011217	036000	000263	035400	060148	044452	009175	009175
133212	036070	000261	026024	000171	016099	011203	011211	011211
026004	000156	121006	126003	011155	000000	016012	000200	000200
000006	000312	000333	177679	011215	026011	162000	000266	000266
013212	003004	042000	000253	126400	011203	011169	012000	012000
000250	130132	172000	000262	035400	000262	150011	172100	172100
000262	036000	000262	011322	016004	160001	172000	0011202	0011202
036007	000262	000014	012000	160031	172000	011262	014300	014300
060116	153075	000235	132104	036000	000262	126000	000217	000217
000000	0160002	000603	000032	001106	177777	000000	000247	000247
026011	120000	126006	000237	021040	020000	011169	011400	011400
026111	170272	000256	020000	001423	011169	000000	000100	000100

REST  
OF  
TRACK

22  
ES

~~RESERVED  
FOR USER  
DIRECTORY  
ENTRIES~~

22,5

## VI. INTERNAL SYSTEM OPERATION

### A. IOMECH Command Sequences

1. Seek Record [SLIDE 69A]
2. Read Data [SLIDE 69B]
3. Write Data [SLIDE 69C]
4. Check Data [SLIDE 69D]
5. Status Check [SLIDE 69E]
6. Constants and Storage [SLIDE 69F]

Second Projector

### B. Supplied DOS-M Bootstrap Listing Study ("A" Version)

1. Configuration Section (Start Address = 2) [SLIDES 70D - 70F]
  - a. Data Channel in Switches 0-5
  - b. Configure DMA Control Word
  - c. Loop to Configure all D.C. and C.C. Instructions
  - d. Switch 15 Down -- HALT  
Switch 15 UP -- Punch Configured Bootstrap in absolute tape format.
2. Execution Section (Start Address = 100B or 5) [SLIDES 70A-70C]
  - a. Loads Disc Resident Bootstrap from Track 0 Sectors 1 & 2 on Subchannel specified to memory locations 15400 - 15777 octal.
  - b. Sets locations in DRB as follows:

15771	←	Ø.
15772	←	Head # (Bits 8-9).
15776	←	System Disc Drive #.
15773	←	Data Channel I/O select code for
15774	←	Run Time Disc.
15775	←	Command Channel I/O select code for Run Time Disc.

- c. Uses address in ASPBF of DRB (which was set earlier during generation) to see what page LWAM declared in adjusts for one page lower for relocation of Disc Resident Bootstrap.
- d. Adjusts DEF's in DRB for correct page (ASPBF, DEFDY, and DVADR).
- e. Relocates entire DRB to new page -- only does page relative move.

- f. Transfers control to relocated DRB to have it bring in Core Resident DOS-M System from Disc.
- C. Disc Resident Bootstrap (DRB) Listing Study [SLIDES 71A - 71F]
1. Configures all Disc I/O instructions (within locations 15643-15724 octal) according to Data Channel already setup in location 15773 by supplied bootstrap.
  2. Calls PLOAD routine four times to load in the four sections of Core Resident System defined in ASPBF through ASPBF+II (3 words per load). SLOAD reads a sector at a time. Note how DMA Control Word does not have to be output again here because it was already outputted by Supplied Bootstrap in loading DRB.
  3. Examine Equipment Table of CRS just loaded to accomplish the following:
    - a. For DVR05 - configure all I/O instructions in this System TTY driver.
    - b. For DVR31 - modify its EQT entry for "RUN TIME DISC" channels. Configure all I/O instructions in this driver. Configure DMA control word in this driver. Set + and - # sectors per track locations in this driver.
  4. Set RUN TIME DISC channel in DISCO (base page location 154B; bits 15-11).
  5. Set RUN TIME DISC Interrupt Table entries in correct interrupt table entry and also put correct entry in interrupt table where Generator Disc Chahnel entries were.
  6. Set new I/O channels in Equipment Table for devices swapped with RUN TIME DISC.
  7. Set RUN TIME SYSTEM Subchannel in Base Page location 155 octal from information passed by Supplied Bootstrap.
  8. Set User Label TRACK/SECTOR Disc Address (Base Page location 200 octal) according to Base Page locations 155 and 175 octal.
  9. Set Next TRACK/SECTOR Address on Current User Disc (Base Page Location 157 octal).
  10. Set Current User Disc Subchannel # (location 161) equal to Default User Disc Subchannel # (location 175).
  11. Branch to location 3 indirect to start DOS-M System.

D. DOS-M System Halts [SLIDE 72]

These Halts are only during System Operation following successful bootstrap.

E. DOS-M I/O Request Processing Example

1. Materials used

- a. Tape Recording of step by step execution
- b. Large chart of DOS-M I/O Request Processing
- c. Foldout flowcharts on DOS-M (next section)
- d. Slides
  - (1) Equipment Table Format; # I0B
  - (2) Device Reference Table Format; # I0C
  - (3) Interrupt Table Format; # I0D

2. Procedure

- a. Using the above tape recording and materials, trace an example I/O Request Operation (b below) through all major steps that occur from the initial EXEC call until the I/O operation is complete.
- b. The example I/O operation will be:

JSB EXEC	(Call to Executive Supervisor)
DEF RTN	(Define Return Address)
DEF RCODE	(Define Request Code Address)
DEF CONWD	(Define Control Word Address)
DEF BUFA	(Define Buffer Start Address)
DEF BUFL	(Define Buffer Length Address)
RTN (Return Point)	
⋮	
⋮	
RCODE DEC 1	(Read Operation R.C.)
CONWD OCT 5	(Logical Unit 5)
BUFA BSS 36	(36 word or 72 char. Buffer)
BUFL DEC -72	(72 character length)

0004\*  
 0005\*\*\*\*\* SEEK RECORD \*\*\*\*\*  
 0006\*  
 0007 00002 000000 SEEK NOP  
 0008 00003 054155 LDB CYL CYLINDER (TRACK) NUMBER  
 0009 00004 100510 OTB DC OUTPUT CYL# TO DATA CHNL NOTE 1  
 0010 00005 103710 STC DC,C  
 0011 00006 060136 LDA SKCMD LOAD SEEK COMMAND  
 0012 00007 054154 CPB LSTSK \* IF CYL# = LAST CYL# ACCESSED,  
 0013 00010 030151 IOR MSIGN \* CHANGE CMND TO ADDRS RECORD  
 0014 00011 074154 STB LSTSK \* UPDATE LAST SEEK INDICATOR  
 0015 00012 030157 IOR DRV INCLUDE DRIVE#  
 0016 00013 100711 CLC CC  
 0017 00014 102611 OTA CC OUTPUT SEEK/ADDRESS COMMAND  
 0018 00015 103711 STC CC,C TO CMND CHNL  
 0019 00016 102310 SFS DC  
 0020 00017 024016 JMP #-1 <---- WAIT FOR CYL# ACCEPTANCE  
 0021 00020 060156 LDA HDSCT HEAD:BITS 15-6; SECTOR:BITS 7-0  
 0022 00021 102610 OTA DC OUTPUT HEAD/SECTOR TO DATA CHNL  
 0023 00022 100710 STC DC,C NOTE 3  
 0024 00023 102311 SFS CC \* IN INTERRUPT MODE, EXIT HERE  
 0025 00024 024023 JMP #-1 \* AND RETURN ON INTERRUPT  
 0026 00025 014121 JSB STAT <----(CHECK STATUS)  
 0027 00026 124002 JMP SEEK,I  
 0028\*  
 0029\* NOTE: EITHER A SEEK (03H008) OR AN ADDRESS RECORD (130008)  
 0030\* COMMAND MUST BE ISSUED PRIOR TO ANY OTHER DISC COMMAND  
 0031\* EXCEPT STATUS CHECK. ADDRESS RECORD MAY BE ISSUED ONLY  
 0032\* IF THE HEAD (ON THE SELECTED DRIVE) IS ALREADY IN POSITION  
 0033\* FOR THE CURRENT ACCESS; IT WILL EXECUTE FASTER THAN A  
 0034\* SEEK UNDER THESE CONDITIONS. THE CODING IN THE EXAMPLE  
 0035\* FOR CHECKIN THIS CONDITION IS APPLICABLE ONLY TO A SINGLE  
 0036\* DRIVE SYSTEM. IN A MULTI-DRIVE ENVIRONMENT, PROVISION  
 0037\* MUST BE MADE TO MAINTAIN AND CHECK THE HEAD POSITION  
 0038\* INDICATOR FOR EACH DRIVE.  
 0039\*

NOTE 1 : BITS 0-7 = CYLINDER # ; BITS 8-15 = 0

NOTE 2 : BITS 12-15 = COMMAND CODE ; Bits 0-1 = DRIVE #

NOTE 3 : Bits 8-9 = HEAD # ; Bits 0-3 = SECTOR #

PAGE 0004 #01 \*\*\*\*\* IUMEC DISC COMMAND SEQUENCES

0041*	READ DATA *****		
0042	***** READ DATA *****		
0043*			
0044	00027	000060	READ NOP
0045	00030	060152	LDA DMACW LOAD DMA CONTROL WORD,
0046	00031	030153	IOR DCHNL INCLUDE DATA CHNL#,
0047	00032	102606	OTA 6 AND OUTPUT TO DMA CHNL
0048	00033	100702	CLC 2
0049	00034	060100	LDA CORAD LOAD CORE BUFFER ADDRESS,
0050	00035	030151	IOR MSIGN INCLUDE DIRECTION BIT,
0051	00036	102602	OTA 2 AND SET IN MEMORY ADDRESS REG
0052	00037	102702	STC 2
0053	00040	060161	LDA WDCNT LOAD NEG # OF WORDS
0054	00041	102502	OTA 2 AND SET IN WORD COUNT REG
0055	00042	103710	STC DC,C SET DATA CHNL FOR INPUT <b>NOTE 1</b>
0056	00043	060140	LDA RDCMD LOAD READ COMMAND
0057	00044	030157	IOR DRV INCLUDE DRIVE#
0058	00045	100711	CLC CC
0059	00046	102611	OTA CC
0060	00047	103706	STC 6,C OUTPUT READ COMMAND TO CMND CHNL <b>NOTE 2</b>
0061	00050	103711	STC CC,C START DMA
0062	00051	100706	CLC 6 INHIBIT DMA INTERRUPT
0063	00052	102311	SFS CC * IN INTERRUPT MODE, EXIT HERE
0064	00053	024052	JMP *-1 * AND RETURN ON INTERRUPT
0065	00054	014121	JSB STAT ← (CHECK STATUS )
0066	00055	124027	JMP READ,I

**NOTE 1 :** PREPARES DATA CHANNEL TO RECEIVE DATA  
FROM CONTROLLER

**NOTE 2 :** BITS 12-15 = READ COMMAND ; BITS 8-1 =  
DRIVE #

PAGE 0005 #01 \*\*\*\*\* IUMEC DISC COMMAND SEQUENCES

0068*	***** WRITE *****			
0069				
0070*				
0071	00056	0000000	WRITE NOP	
0072	00057	060152	LDA DMACW	LOAD DMA CONTROL WORD,
0073	00060	030153	IOR DCHNL	INCLUDE DATA CHNL#,
0074	00061	102606	OTA 6	AND OUTPUT TO DMA CHNL
0075	00062	100702	CLC 2	
0076	00063	060160	LDA CORAD	LOAD CORE BUFFER ADDRESS
0077	00064	102602	OTA 2	AND SET IN MEMORY ADDRESS REG
0078	00065	102702	STC 2	
0079	00066	060161	LDA WDCNT	LOAD NEG # OF WORDS
0080	00067	102602	OTA 2	AND SET IN WORD COUNT REG
0081	00070	102110	STF DC	SET DATA CHANNEL FOR OUTPUT
0082	00071	060144	LDA WRCMD	LOAD WRITE COMMAND
0083	00072	030157	IOR DRV	INCLUDE DRIVE#
0084	00073	100711	CLC CC	
0085	00074	102611	OTA CC	OUTPUT WRITE CMND TO CMND CHNL
0086	00075	103706	STC 6,C	START PMA
0087	00076	100711	STC CC,C	START DATA TRANSFER
0088	00077	100706	CLC 6	INHIBIT DMA INTERRUPT
0089	00100	102311	SFS CC	* IN INTERRUPT MODE, EXIT HERE
0090	00101	024100	JMP #-I	* AND WAIT FOR INTERRUPT
0091	00102	014121	JSB STAT ← (CHECK STATUS)	
0092	00103	124056	JMP WRITE,I	
0093*	NOTE: THE *WRITE* SEQUENCE ABOVE MAY BE USED, WITH THE APPROPRIATE COMMAND, AS FOLLOWS:			

	COMMAND (OCTAL)	FUNCTION
0097*		
0098*	110000	WRITE DATA
0099*	111000	INITIALIZE DATA (USED TO INITIALIZE ADDRESS FIELDS OF A NEW DISC)
0100*	111000	FLAG DEFECTIVE CYLINDER
0101*	111000	FLAG PROTECTED CYLINDER
0102*		
0103*	110400	
0104*	111000	
0105*	111000	
0106*	ALL EXCEPT WRITE DATA REQUIRE THAT THE DISC PROTECT OVERRIDE SWITCH BE TURNED ON	
0107*		
0108*		
0109*	ALL OF THESE COMMANDS ACTUALLY WRITE DATA IN THE SECTOR(S) BEING PROCESSED. IF THE WCR GOES TO ZERO BEFORE THE END OF THE SECTOR IS REACHED, THE REMAINDER OF THE SECTOR WILL BE FILLED WITH ZEROS; <u>THUS IF ZERO</u> <u>WORDS ARE SPECIFIED, THE ENTIRE SECTOR IS</u> <u>WRITTEN WITH ZEROS.</u>	
0110*		
0111*		
0112*		
0113*		
0114*		
0115*		
0116*		
0117*	FLAG CYLINDER PROTECTED OR DEFECTIVE ARE SUBSETS OF THE INITIALIZE DATA COMMAND, AND WRITE THE ADDRESS FIELD(S) OF THE SECTOR(S) BEING PROCESSED.	
0118*		
0119*		
0120*		

0122 *			
0123 **** CHECK DATA ****			
0124 *			
0125 00104 00000000	CHECK NOP		
0126 00105 000162	LDA SCTRS	LOAD SECTOR COUNT TO BE CHECKED	
0127 00106 102010	OTA DC	AND OUTPUT TO DATA CHANNEL	
0128 00107 103710	STC DC,C		NOTE 1
0129 00110 060141	LDA CHCMD	LOAD CHECK DATA COMMAND	
0130 00111 030157	IOR DRV	INCLUDE DRIVE#	
0131 00112 100711	CLC CC		
0132 00113 103611	OTA CC,C	OUTPUT CHECK COMMAND	NOTE 2
0133 00114 103711	STC CC,C	TO CMND CHNL	
0134 00115 102311	SFS CC	* IN INTERRUPT MODE, EXIT HERE	
0135 00116 024115	JMP *-1	* AND RETURN ON INTERRUPT	
0136 00117 014121	JSB STAT ← (CHECK STATUS)		
0137 00120 124104	JMP CHECK,I		

NOTE 1 : A = + (# SECTORS TO BE CHECKED) BITS 0-4

NOTE 2 : BITS 12-15 = CHECK DATA COMMAND

BITS 0-1 = DRIVE #

THE CONTROLLER EXECUTES THIS COMMAND MUCH AS IT  
 DOES READ DATA; HOWEVER, NO TRANSFER OF DATA  
 OCCURS. RESULTS OF CHECK MAY BE OBTAINED WITH  
 STATUS COMMAND CALL.

0139\*

0140\*\*\*\*\* STATUS CHECK \*\*\*\*\*

0141\*

0142 00121 0000000 STAT NOP

0143 00122 103100 CLF Ø (TURN OFF INTERR SYS IF IT'S ON)

0144 00123 103710 STC DC,C SET DATA CHANNEL FOR INPUT

0145 00124 000157 LDA DRY LOAD DRIVE#

0146 00125 100711 CLC CC

0147 00126 102611 OTA CC OUTPUT STATUS COMMAND

0148 00127 100711 STC CC,C TO CMND CHANNEL

0149 00130 102310 SFS DC

0150 00131 024130 JMP \*-1

0151 00132 100711 CLC CC

0152 00133 102510 LIA DC GET STATUS FROM DATA CHNL

0153 00134 102100 STF Ø (RESET INTERR SYS IF IT WAS ON)

0154 00135 124121 JMP STAT,I

0155\*

0156\* NOTE: IUMEC STATUS BITS

0157\*

0158\* 15 - ATTENTION - OPERATION COMPLETED

0159\* 14 - FIRST SEEK - DRIVE HAS GONE FROM NOT READY TO READY

0160\* 13 - OVERRUN - LATE DATA TRANSFER - HARDWARE FAILURE

0161\* 12 - READ/WRITE UNSAFE - HARDWARE FAILURE

0162\* 11 - ACCESS UNSAFE - HARDWARE FAILURE

0163\* 10 - ACCESS HUNTING - HARDWARE FAILURE

0164\* 9 - SEEK INCOMPLETE - HARDWARE FAILURE

0165\* 8 - SEEK CHECK - SOFTWARE ERROR (E.G., CYL# > 202)

0166\* 7 - (ACT USED)

0167\* 6 - NOT READY (ALSO SET WHEN BITS 11 AND/OR 12 SET)

0168\* 5 - END OF CYLINDER - SOFTWARE ERROR - ATTEMPTED TO

0169\* WRITE PAST THE END OF A CYLINDER

0170\* 4 - ADDRESS ERROR - ADDRESS ISSUED DOES NOT AGREE WITH

0171\* DISC ADDRESS - HARDWARE FAILURE OR DISC NOT

0172\* INITIALIZED - OR - IF BIT 3 IS ALSO ON, THEN

0173\* THE CYLINDER BEING PROCESSED HAS BEEN FLAGGED

0174\* DEFECTIVE.

0175\* 3 - FLAGGED CYLINDER - SET IF CYLINDER BEING PROCESSED

0176\* HAS BEEN FLAGGED PROTECTED OR (IF BIT 4 IS ALSO SET )

0177\* DEFECTIVE - OR - INITIALIZE DATA COMMAND HAS BEEN

0178\* ISSUED WITH DISC PROTECT OVERRIDE SWITCH OFF

0179\* 2 - DRIVE BUSY - SEEK IN PROCESS

0180\* 1 - DATA ERROR - CYCLIC CHECK INCORRECT

0181\* 0 - ANY ERROR - TURNED ON WHEN ANY OF THE ABOVE EXCEPT

0182\* BIT 15 OR, ON A READ OR CHECK DATA, BIT 3, IS SET.

0183\*

0184\* NOTE: ANY HARDWARE FAILURE WHICH DOES NOT SET BIT 6 MAY BE

0185\* RECOVERABLE ON RETRY.

0186\*

STF 6

0188\*

## 0189\*\*\*\*\* DATA CONSTANT AND STORAGE AREA \*\*\*\*\*

0190\*

0191 00010  
0192 00011DC EQU 10B  
CC EQU 11BDATA CHANNEL (HIGH PRIORITY)  
COMMAND CHANNEL (LOW PRIORITY)

0193\*

0194 00136 030000

SKCMD OCT 030000

SEEK RECORD COMMAND

0195 00137 130000

ADCMD OCT 130000

ADDRESS RECORD COMMAND

0196 00140 020000

RDCMD OCT 020000

READ DATA COMMAND

0197 00141 060000

CHCMD OCT 060000

CHECK DATA COMMAND

0198 00142 030000

STCMD OCT 030000

STATUS CHECK COMMAND

0199 00143 050000

RFCMD OCT 050000

REFINE SECTOR COMMAND

0200\*

0201 00144 000000 KRCMD NOP

STORAGE FOR CURRENT WRITE CMND

0202\*

0203 00145 010000

WDCMD OCT 010000

WRITE DATA COMMAND

0204 00146 110000

INCMD OCT 110000

INITIALIZE DATA COMMAND

0205 00147 111000

PCCMD OCT 111000

FLAG PROTECTED CYLINDER CMND

0206 00150 110400

DCCMD OCT 110400

FLAG DEFECTIVE CYLINDER CMND

0207\*

0208 00151 100000

MSIGN OCT 100000

BIT 15

0209 00152 120000

LMACW OCT 120000

DMA CONTROL WORD

0210\*

0211 00153 000010

LCNL OCT 10

DISC DATA CHNL# (HP)

0212 00154 000313

LSTSK DEC 203

LAST SEEK IND. (INIT. &gt; 202)

0213\*

0214 00155 000000

LYL NOP

CYLINDER#

0215 00156 000000

HLSLT NOP

HEAD#(15-8), SCTR#(7-0)

0216 00157 000000

DRV NOP

DRIVE#

0217 00160 000000

LCRAD NOP

CORE BUFFER ADDRESS

0218 00161 000000

WLCNT NOP

NEG #WORDS TO BE TRANSFERRED

0219 00162 000000

SCTRS NOP

POS #SCTRS TO BE CHECKED

0220\*

0221

END

\*\* NO ERRORS\*\*

PROG  
BOOTSTRAP

0001	ASMB,L,A		
0002*			
0003 00002	ORG 2B		
0004 00002 024223	JMP CONFIG → GO CONFIGURE BOOTSTRAP		
0005*			
0006 00005	ORG 5B		
0007 00005 102501	BOOT	LIA 1	GET SYSTEM SUBCHNL
0008 00006 010200	AND M7		
0009 00007 000065	CLE,ERA		
0010 00010 070166	STA DRV# SET DRIVE#		
0011 00011 006400	CLB		
0012 00012 106600	OTB DC	OUTPUT TRK#	
0013 00013 103700	STC DC,C	FOR SEEK	
0014 00014 030204	IOR SEEK		
0015 00015 102601	OTA CC	OUTPUT SEEK CMND	
0016 00016 103701	STC CC,C	TO COMMAND CHNL	
0017 00017 102300	SFS DC	WAIT FOR TRACK # RECEIVED	
0018 00020 024017	JMP *-1		
0019 00021 060206	LDA HDSCT		
0020 00022 002040	SEZ	SUBCHNL ON REMOVABLE PACK?	
0021 00023 010200	AND M7	-YES, SET HEAD# = 0	
0022 00024 102600	OTA DC	OUTPUT HEAD/SCTR	
0023 00025 103700.	STC DC,C	TO DATA CHNL	
0024 00026 010203	AND M1774		
0025 00027 070170	STA HDMSK		
0026 00030 060207	LDA DMACW		
0027 00031 102606	OTA 6	OUTPUT DMA CNTRL WORD	
0028 00032 106702	CLC 2		
0029 00033 060210	LDA MEMAD		
0030 00034 102602	OTA 2	OUTPUT BFR ADDRS	
0031 00035 102702	STC 2		
0032 00036 060173	LDA N256		
0033 00037 102602	OTA 2	OUTPUT WORD COUNT	
0034 00040 102301	SFS CC	WAIT FOR SEEK	
0035 00041 024040	JMP *-1	TO COMPLETE	
0036 00042 014056	JSB STAT	CHECK STATUS	
0037 00043 060205	LDA READ		
0038 00044 030166	IOR DRV#		
0039 00045 106701	CLC CC		
0040 00046 102601	OTA CC	OUTPUT READ COMMAND	
0041 00047 103700	STC DC,C	SET DATA CHNL FOR READ	
0042 00050 103706	STC 6,C	START DMA	
0043 00051 103701	STC CC,C	START READ OPERATION	
0044 00052 102301	SFS CC	WAIT FOR READ	
0045 00053 024052	JMP *-1	TO COMPLETE	
0046 00054 014056	JSB STAT	CHECK STATUS	
0047*			
0048 00055 024110	JMP RELOC	GO RELOCATE BOOTSTRAP	
0049*			
0050 00056 000000	STAT	NOP	
0051 00057 103700	STC DC,C		
0052 00060 060166	LDA DRV#		
0053 00061 106701	CLC CC		
0054 00062 102601	OTA CC	OUTPUT STATUS CMND	
0055 00063 103701	STC CC,C	TO COMMAND CHNL	
0056 00064 102300	SFS DC		

SET-UP  
DMA

Boostrap PAPER

0057	00065	024064	JMP *-1
0058	00066	102500	LIA DC ← GET STATUS
0059	00067	000010	SLA ANY ERROR?
0060	00070	102011	HLT 11B -YES
0061	00071	124056	JMP STAT,I
0062*			
0063	00100		ORG 100B      BOOTSTRAP START ADDRESS
0064	00100	024005	JMP BOOT
0065	00105		ORG 105B
0066	00105	000222	DFEND DEF CHSUM
0067*			
0068	00110		ORG 110B
0069*			
0070	00110	002400	RELOC CLA
0071	00111	170212	STA CLER1,I
0072	00112	170213	STA CLER2,I
0073	00113	060170	LDA HDMSK
0074	00114	170214	STA ABHDM,I      SAVE HEAD# FOR DISC-RES. BOOT
0075	00115	060166	LDA DRV#
0076	00116	170220	STA ABDRV,I
0077	00117	060165	LDA CHAN
0078	00120	170215	STA ACHNL,I      SAVE DISC I/O CHNLS
0079	00121	170216	STA ADCHN,I
0080	00122	002004	INA      FOR DISC-RESIDENT
0081	00123	170217	STA ACCHN,I      BOOTSTRAP
0082*			
0083	00124	064221	LDB SPPNT
0084	00125	144221	ADB SPPNT,I
0085	00126	160001	LDA B,I      ASPBF
0086	00127	010202	AND M76K      GET ADDRESS OF █
0087	00130	040176	ADA N2KB      ISOLATE PAGE BITS
0088	00131	070171	STA PGMSK      SUBTRACT 1 PAGE
0089	00132	160001	LDA B,I
0090	00133	010201	AND M1777
0091	00134	030171	IOR PGMSK
0092	00135	170001	STA B,I      ASPBF      ADJUST █ ADDRESS
0093	00136	044175	ADB N1
0094	00137	160001	LDA B,I
0095	00140	010201	AND M1777
0096	00141	030171	IOR PGMSK
0097	00142	170001	STA B,I      ADJUST DEFDY
0098	00143	044175	ADB N1
0099	00144	160001	LDA B,I
0100	00145	010201	AND M1777
0101	00146	030171	IOR PGMSK
0102	00147	170001	STA B,I      ADJUST DVADR
0103	00150	060211	LDA DBOOT
0104	00151	010201	AND M1777
0105	00152	030171	IOR PGMSK
0106	00153	070172	STA RELBT
0107	00154	064173	LDB N256
0108	00155	074167	STB WDCNT
0109	00156	164211	MVMOR LDB DBOOT,I      *
0110	00157	174000	STB A,I      *
0111	00160	002004	INA      * RELOCATE
0112	00161	034211	ISZ DBOOT      * BOOTSTRAP

PROPER  
BOOTSTRAP

0113	00162	034167	ISZ	WDCNT	*
0114	00163	024156	JMP	MVMOR	*
0115*					
0116	00164	124172	JMP RELBT, I → TRANSFER TO DISC-RES. BOOTSTRAP		
0117*					
0118	00000		DC	EQU 0	DISC DATA CHANNEL
0119	00001		CC	EQU 1	DISC CMND CHANNEL
0120	00165	0000000	CHAN	NOP	
0121	00166	0000000	DRV#	NOP	
0122	00167	0000000	WDCNT	NOP	
0123	00170	0000000	HDMSK	NOP	
0124	00171	0000000	PGMSK	NOP	
0125	00172	0000000	RELBT	NOP	
0126	00173	177400	N256	DEC -256	
0127	00174	177405	N251	DEC -251	
0128	00175	177777	N1	DEC -1	
0129	00176	176000	N2KB	OCT -2000	
0130	00177	177700	N100	OCT -100	
0131	00200	000007	M7	OCT 7	
0132	00201	001777	M1777	OCT 1777	
0133	00202	076000	M76K	OCT 76000	
0134	00203	177400	M1774	OCT 177400	
0135	00204	030000	SEEK	OCT 030000	
0136	00205	020000	READ	OCT 020000	
0137	00206	001001	HDSCT	OCT 001001	
0138	00207	120000	DMACW	OCT 120000	
0139	00210	115400	MEMAD	OCT 115400	
0140	00211	015400	DBOOT	OCT 15400	
0141	00212	015771	CLER1	OCT 15771	
0142	00213	015772	CLER2	OCT 15772	
0143	00214	015772	ABHDM	OCT 15772	
0144	00215	015773	ACHNL	OCT 15773	
0145	00216	015774	ADCHN	OCT 15774	
0146	00217	015775	ACCHN	OCT 15775	
0147	00220	015776	ABDRV	OCT 15776	
0148	00221	015777	SPPNT	OCT 15777	
0149*					

BOOTSTRAP CONFIGURATOR

0151*			
0152	00222	000000	CHSUM NOP
0153*			
0154	00223	102501	CONFIG LIA I                    GET DISC DATA CHANNEL
0155	00224	010337	AND B77
0156	00225	070165	STA CHAN
0157	00226	030207	IOR DMACW
0158	00227	070207	STA DMACW                    CONFIGURE DMA CNTRL WORD
0159	00230	060337	LDA B77
0160	00231	003000	CMA
0161	00232	040327	ADA DEFBT
0162	00233	070330	STA CNTR
0163	00234	064327	LDB DEFBT
0164	00235	006004	CLOOP INB                    *
0165	00236	160001	LDA B,I                    *
0166	00237	002021	SSA,RSS                    * CONFIGURE ALL
0167	00240	024247	JMP CNEXT                    *
0168	00241	010340	AND MASK                    * DISC I/O
0169	00242	002002	SZA                            *
0170	00243	024247	JMP CNEXT                    * INSTRUCTIONS
0171	00244	160001	LDA B,I                    *
0172	00245	040165	ADA CHAN                    * IN BOOTSTRAP
0173	00246	170001	STA B,I                    *
0174	00247	034330	CNEXT ISZ CNTR
0175	00250	024235	JMP CLOOP
0176*			
0177	00251	102501	LIA I
0178	00252	002020	SSA
0179	00253	024256	JMP *+3                    PUNCH CONFIGURED BOOTSTRAP? -YES
0180*			
0181	00254	102077	HLT 77B                    -NO (HALT IRREGULAR)
0182	00255	024254	JMP *-1
0183*			

PUNCH CONFIGURATED BOOTSTRAP

0185	00256	060334	LDA .2	
0186	00257	070326	STA ABSAD	SET BOOTSTRAP START ADDRESS
0187	00260	003004	CMA,INA	
0188	00261	040105	ADA DFEND	
0189	00262	070331	STA TEMP	SAVE BOOTSTRAP END ADDRESS
0190	00263	001727	ALF,ALF	
0191	00264	010203	AND M1774	
0192	00265	070325	STA RCLNG	SET PUNCH RECORD LENGTH
0193*				
0194	00266	002400	CLA	
0195	00267	070002	STA 2B	
0196	00270	070003	STA 3B	
0197	00271	070004	STA 4B	
0198	00272	060331	LDA TEMP	
0199	00273	003004	CMA,INA	
0200	00274	070330	STA CNTR	SET COUNTER FOR CHECKSUM
0201	00275	060326	LDA ABSAD	
0202	00276	064334	LDB .2	
0203	00277	140001	KLOOP ADA B,I	*
0204	00300	006004	INB	* GENERATE
0205	00301	034330	ISZ CNTR	* CHECKSUM
0206	00302	024277	JMP KLOOP	* FOR BBL
0207	00303	070222	STA CHSUM	*
0208*				
0209	00304	060332	PMORE LDA N50	
0210	00305	064341	LDB AFDFR	
0211	00306	114103	JSB HSPDR,I	PUNCH LEADER
0212*				
0213	00307	060333	LDA N2	
0214	00310	064324	LDB SHREC	
0215	00311	114103	JSB HSPDR,I	PUNCH RECORD LENGTH, ABS ADDRS
0216*				
0217	00312	060331	LDA TEMP	
0218	00313	003004	CMA,INA	
0219	00314	002004	INA	
0220	00315	064336	LDB .4	
0221	00316	114103	JSB HSPDR,I	PUNCH BOOTSTRAP
0222*				
0223	00317	060332	LDA N50	
0224	00320	064341	LDB AFDFR	
0225	00321	114103	JSB HSPDR,I	PUNCH TRAILER
0226*				
0227	00322	102077	HLT 77B	
0228	00323	024304	JMP PMORE	
0229*				
0230	00324	000325	SHREC DEF *+1	
0231	00325	000000	RCLNG NOP	
0232	00326	000000	ABSAD NOP	
0233	00000	A	EQU 0B	
0234	00001	B	EQU 1B	
0235	00103	HSPDR	EQU 103B	
0236	00327	000005	DEFBT DEF BOOT	
0237	00330	000000	CNTR NOP	
0238	00331	000000	TEMP NOP	
0239	00332	177716	N50 DEC -50	
0240	00333	177776	N2 DEC -2	

0241 00334 000002 .2 OCT 2  
0242 00335 000003 .3 OCT 3  
0243 00336 000004 .4 OCT 4  
0244 00337 000077 B77 OCT 77  
0245 00340 070036 MASK OCT 070036  
0246\*  
0247 00341 000342 AFDFR DEF \*+1  
0251 LST  
0252\*  
0253 END  
\*\* NO ERRORS\*

[SLIDE 70F]

# DOS-M DISC RESIDENT BOOTSTRAP

PAGE 0127 #10

```

1      0350 15400          ORG 15400B
2      0351*
3      0352* THE FOLLOWING LOADER PERMITS LOADING OF THE RESIDENT PORTIONS
4      0353* OF THE DISC MONITOR SYSTEM. THE LOADER IS LOCATED ON SECTORS 51 & 2
5      0354* TRACK 0 OF THE SYSTEM DISC. IT IS GENERATED BY THE SYSTEM
6      0355* GENERATOR AND CONSISTS OF:
7      0356*
8      0357* (1) THE INSTRUCTIONS REQUIRED FOR LOADING THE SYSTEM
9      0358* (2) THE DISK AND CORE ADDRESSES SPECIFYING LOADING
10     0359*
11     0360*
12     0361* THE ADDRESSES REQUIRED FOR LOADING ARE THE FOLLOWING:
13     0362*
14     0363* (A) BASE PAGE LINKAGES
15     0364* (1) LOW CORE ADDRESS
16     0365* (2) HIGH CORE ADDRESS
17     0366* (3) DISK ADDRESS OF ABSOLUTE CODE
18     0367*
19     0368* (B) SYSTEM, RT RESIDENT MAIN
20     0369* (1) LOW CORE ADDRESS
21     0370* (2) HIGH CORE ADDRESS
22     0371* (3) DISK ADDRESS OF ABSOLUTE CODE
23     0372*
24     0373*
25     0374*
26     0375*
27     0376*
28     0377 15400 000000, START NOP
29     0378 15401 067731      LDB DEFDY
30     0379 15402 017570      JSB CNFGR   CONFIG. BOOTSTRAP I/O INSTR.
31     0380 15403 067732      LDB ASPBF   GET APPRS OF DISC SPEC. BFR
32     0381 15404 077762      STB SPCAD   SET CURRENT SPBUF ADDRESS
33     0382 15405 017613      JSB PLOAD   LOAD BP LINKAGES
34     0383 15406 017613      JSB PLOAD   LOAD MAIN SYSTEM
35     0384 15407 017613      JSB PLOAD   LOAD I/O TABLES
36     0385 15410 017613      JSB PLOAD   LOAD EXEC DOUBLETS
37     0386*
38     0387 15411 064120      LDB BEQT#   GET # OF EQUIPMENT
39     0388 15412 007004      CMB,INB    TABLE ENTRIES AND
40     0389 15413 077310      STB CNTR    STORE NEGATIVE
41     0390 15414 064117      LDB BEQT#   GET FWA OF EQUIPMENT TABLE
42     0391 15415 044055      CNFG1 ADB .2
43     0392 15416 160001      LDA B,I    A = 3RD WORD OF EQT entry
44     0393 15417 044051      ADB .2N
45     0394 15420 010072      AND M.77
46     0395 15421 073773      STA CHANL  SAVE I/O CHANNEL#
47     0396 15422 053774      CPA RUND1 =RUN TIME DISC DATA CHNL?
48     0397 15423 077763      STB SWP1  =YES, SAVE
49     0398 15424 053775      CPA RUND2 =RUN TIME DISC CMND CHNL?
50     0399 15425 077764      STB SWP2  =YES, SAVE
51     0400 15426 077304      STB EQCUR  SAVE CURRENT EQPT TABLE ADDRESS
52     0401 15427 044056      ADB .3
53     0402 15430 160001      LDA B,I    A = 4TH WORD OF EQT Entry
54     0403 15431 001727      ALF,ALF
55     0404 15432 013752      AND M.377
56     0405 15433 073305      STA EQPCD  SAVE EQPT TYPE CODE

```

**RELEASED "A" VERSION 10-70**

# DOS-M DISC RESIDENT BOOTSTRAP

PAGE 0128 #10

0406	15434	050060	CPA .5	=SYSTEM TELETYPE?
0407	15435	027460	JMP CNFG4	-YES
0408	15436	053765	CPA DISK	=DISC ?
0409	15437	027445	JMP CNFG3	-YES
0410	15440	06/304	CNFG2 LDB EQCUR	
0411	15441	024066	ADB .17D	INCR TO NEXT EQPMT TABLE ENTRY
0412	15442	03/310	ISZ CNTR	CHECKED ALL ENTRIES?
0413	15443	027415	JMP CNFG1	-NO
0414	15444	027505	JMP CNFG7	-YES
0415	15445	044052	CNFG3 ADB .1N	
0416	15446	160001	LDA B,I	
0417	15447	023773	XOR CHANL	
0418	15448	033774	IOR RUND1	
0419	15449	170001	STA B,I	SET DISC EQPT TABLE AT RUN TIME
0420	15450	063773	LDA CHANL	
0421	15451	073302	STA GEND1	SAVE DISC I/O CHN2 AT GEN. TIME
0422	15452	002004	INA	
0423	15453	073303	STA GEND2	SAVE GEN. DISC CMND CHNL
0424	15454	063774	LDA RUND1	
0425	15455	073773	STA CHANL	SET CHAN= RUN TIME DISC CHNL
0426	15456	06/304	CNFG4 LDB EQCUR	
0427	15457	160001	LDA B,I	
0428	15458	073730	STA DVADR	SAVE DRIVER ENTRY POINT
0429	15459	164000	LDB A,I	GET CONFIGURATION STOP POINT
0430	15460	017570	JSB CNFGR ← COM7. ALL I/O INST. IN DRIVER	
0431*	15461	160001	LDA B,I	
0432	15462	073730	STA DVADR	SAVE DRIVER ENTRY POINT
0433	15463	164000	LDB A,I	GET CONFIGURATION STOP POINT
0434	15464	017570	JSB CNFGR ← COM7. ALL I/O INST. IN DRIVER	
0435	15465	063305	LDA EQPCD	GET EQPMT TYPE CODE
0436	15466	050060	CPA .5	=SYSTEM TELETYPE?
0437	15467	027440	JMP CNFG2	-YES
0438	15468	006004	INB	-NO, MUST BE DISC
0439	15469	160001	LDA B,I	
0440	15470	033773	IOR CHANL	CONFIGURE DMA CNTRL WORD
0441	15471	170001	STA B,I	AND STORE
0442	15472	006004	INB	* SET + AND -
0443	15473	003004	CMA,INA	* SECTORS/TRACK
0444	15474	170001	STA B,I	* IN
0445	15475	063747	LDA #SPTK	* DISC DRIVER
0446	15476	170001	STA B,I	*
0447	15477	006004	LDB EQCUR	SAVE ADDRESS OF
0448*	15478	077311	STB EQDSK	DISC EQPMT TABLE
0449	15479	027440	JMP CNFG2	
0450*	15480	060154	CNFG7 LDA BUSCO	CONTINUE
0451	15481	001722	ALF,RAL	*
0452	15482	013767	AND M.740	* SET RUN TIME
0453	15483	033774	IOR RUND1	* DISC CHANNEL
0454	15484	001727	ALF,ALF	* IN *DISCU*
0455	15485	001723	ALF,RAR	*
0456	15486	070154	STA BDSCO	*
0457*	15487	063763	LDA SWP1	*
0458	15488	063763	LDB GEND1	* SET NEW ENTRIES
0459	15489	067302	JSB INSWP	* IN SYS GEN. TIME
0460	15490	017606	LDA SWP2	* DISC CHANNEL

# DOS-M DISC RESIDENT BOOTSTRAP

PAGE 0129 #10

0462	15520	06/303	LDB GEND2	* INTERRUPT TABLE LOCATIONS
0463	15521	017606	JSB INSWP	*
0464*				
0465	15522	002400	CLA	*
0466	15523	067774	LDB RUND1	* SET RUN TIME
0467	15524	017606	JSB INSWP	* DISC CHANNELS
0468	15525	063311	LDA EQDSK	* IN
0469	15526	067775	LDB RUND2	* INTERRUPT TABLE
0470	15527	017606	JSB INSWP	*
0471*				
0472	15530	067763	LDB SWP1	*
0473	15531	006003	SZB,RSS	*
0474	15532	027540	JMP SWAP2	* SET NEW I/O CHANNELS
0475	15533	044055	ADB .2	*
0476	15534	160001	LDA B,I	* IN EQUIPMENT TABLE ENTRIES
0477	15535	023774	XOR RUND1	*
0478	15536	033302	IOR GEND1	* OF DEVICES
0479	15537	170001	STA B,I	*
0480	15540	06764	SWAP2 LDB SWP2	* SWAPPED
0481	15541	006003	SZB,RSS	*
0482	15542	027546	JMP SWPSC	* WITH RUN TIME DISC
0483	15543	023775	XOR RUND2	*
0484	15544	033303	IOR GEND2	*
0485	15545	170001	STA B,I	*
0486*				
0487	15546	063776	SWPSC LDA BDVR#	
0488	15547	001200	RAL	
0489	15550	067772	LDB BHMSK	
0490	15551	006003	SZB,RSS ← PACK BOOTSTRAPPED UP ?	
0491	15552	002004	INA ← YES! SET S.C. odd...	
0492	15553	064155	LDB BSYSC	
0493	15554	070155	STA BSYSC	SET RUN TIME SYS SUBCHNL
0494	15555	054175	CPB BUDSC	
0495	15556	070175	STA BUDSC	
0496	15557	000400	CLB	
0497	15560	050175	CPA BUDSC	SYS SC = USER SC?
0498	15561	064115	LDB BSYBF	-YES,
0499	15562	074200	STB BDSC	SET DISCL
0500	15563	04757	ADB .400	
0501	15564	074157	STB BUNTS	= SYSTEM NEXT TRK/SCTR
0502	15565	064175	LDB BUDSC	
0503	15566	074161	STB BCDSC	
0504*				
0505	15567	124003	JMP 3B,I	GO START DISC
0506*				
0507	15570	000000	LNFGR NOP	
0508	15571	05730	CPB DVADR	DONE CONFIGURING THIS DRIVER?
0509	15572	127570	JMP CNFGR,I	-YES
0510	15573	03730	ISZ DVADR	-NO, INCR TO NEXT INSTRUCTION
0511	15574	163730	LDA DVADR,I	LOAD INSTRUCTION
0512	15575	002021	SSA,RSS	*
0513	15576	027571	JMP CNFGR+1	* CHECK IF INSTRUCTION
0514	15577	013766	AND MASK	* IS I/O
0515	15600	002002	SZA	* FOR DEVICE (EXCLUDING DMA)
0516	15601	027571	JMP CNFGR+1	*
0517	15602	163730	LDA DVADR,I	-YES,

GO START  
SYSTEM

# DOS-M DISC RESIDENT BOOTSTRAP

PAGE 0130 #10

0518	15603	043773	ADA CHANL	CONFIGURE INSTRUCTION
0519	15604	173730	STA DVADR,I	AND STORE
0520	15605	02/571	JMP CNFGR+1	
0521*				
0522	15606	0000000	INSWP NOP	*
0523	15607	044045	ADB .6N	* THIS SUBROUTINE
0524	15610	044201	ADB BINTB	* IS USED TO SWAP
0525	15611	170001	STA B,I	* INTERRUPT TABLE ENTRIES
0526	15612	127606	JMP INSWP,I	*
0527*				
0528	15613	0000000	PLOAD NOP	<b>DISC READ ROUTINE</b>
0529	15614	167762	LDB SPCAD,I	GET LOW CORE ADDRESS
0530	15615	03/762	ISZ SPCAD	INCR CURRENT SPBUF ADDRESS
0531	15616	163762	LDA SPCAD,I	GET HIGH CORE ADDRESS
0532	15617	03/762	ISZ SPCAD	INCR CURRENT SPBUF ADDRESS
0533	15620	003304	CMA,CCE,INA	COMPLEMENT, SET DIRECTION BIT
0534	15621	040001	ADA B	SET A = TOTAL WORD COUNT
0535	15622	005225	RBL,ERB	SET DIRECTION BIT IN CORE ADDR
0536	15623	106702	CLC 2	
0537	15624	106602	DTB 2	SET MEMORY ADDRESS REGISTER
0538	15625	16/762	LDB SPCAD,I	GET DISK ADDRESS OF ABSOLUTE CUD
0539	15626	03/7762	ISZ SPCAD	INCR CURRENT SPBUF ADDRESS
0540*				
0541	15627	002021	SLOAD SSA,RSS	SKIP - MORE SECTORS TO LOAD
0542	15630	12/613	JMP PLOAD,I	RETURN - THIS SECTION LOADED
0543	15631	043754	ADA P,128	ADJUST FOR NEXT COUNT
0544	15632	073761	STA RECNT	SET REMAINING COUNT
0545	15633	002020	SSA	SKIP - LESS THAN 128 WORDS
0546	15634	002400	CLA	
0547	15635	043753	ADA N,128	SET A = CURRENT SECTOR COUNT
0548	15636	102702	STC 2	
0549	15637	102602	OTA 2	SET WORD COUNT REGISTER
0550	15640	060001	LDA B	LOAD CURRENT DISK ADRS INTO A,
0551	15641	001767	ALF,CLE,ALF	ROTATE TO LO BITS,
0552	15642	013752	AND M,377	AND ISOLATE TRK#
0553	15643	102600	LSKA OTA 0	OUTPUT TRK#
0554	15644	103700	STC 0,C	TO DATA CHANNEL
0555	15645	063755	LDA SKCMD	LOAD SEEK COMMAND
0556	15646	033776	IOR BDRV#	INCLUDE DRIVE #
0557	15647	106701	CLC 1	
0558	15650	102601	OTA 1	OUTPUT SEEK/ADDRESS CMND
0559	15651	103701	STC 1,C	TO COMMAND CHANNEL
0560	15652	102300	SFS 0	CHECK DATA CHNL FLAG,
0561	15653	027652	JMP *-1	LOOP UNTIL SET
0562	15654	060001	LDA B	LOAD CURRENT DISK ADDRESS INTO A
0563	15655	013752	AND M,377	ISOLATE SECTOR#
0564	15656	043751	ADA #SPTN	ADD NEG #SCTRS/TRK
0565	15657	002021	SSA,RSS	CHECK IF SCTR# > #SCTRS/TRK
0566	15660	033757	IOR ,400	-YES, SET LOWER HEAD#
0567	15661	002020	SSA	
0568	15662	043747	ADA #SPTK	-NO, ADD #SCTRS/TRK BACK IN
0569	15663	033772	IOR BHMSK	INCLUDE SYS HEAD# MASK
0570	15664	102600	OTA 0	OUTPUT HEAD/SECTOR
0571	15665	103700	STC 0,C	TO DATA CHANNEL
0572	15666	102301	SFS 1	CHECK CMND CHNL FLAG,
0573	15667	02/666	JMP *-1	WAIT UNTIL SET > WAIT FOR SEEK

# DOS-M DISC RESIDENT BOOTSTRAP

PAGE 0131 #10

0574	15670	017714	JSB BSTAT	
0575	15671	063756	LDA RDCMD	LOAD READ COMMAND
0576	15672	033776	IOR BDRV#	INCLUDE DRIVE#
0577	15673	102601	OTA 1	OUTPUT COMMAND FOR READ
0578	15674	103700	STC 0,C	
0579	15675	106701	CLC 1	
0580	15676	103706	STC 6,C	INITIATE DMA
0581	15677	103701	STC 1,C	INITIATE DATA TRANSFER
0582	15700	102301	SFS 1	CHECK CMND CHNL FLAG,
0583	15701	027700	JMP *-1	WAIT UNTIL SET
0584	15702	017714	JSB BSTAT	
0585	15703	060001	LDA B	LOAD CURRENT DISC ADDRESS INTO A
0586	15704	013752	AND M.377	AND ISOLATE
0587	15705	053750	CPA #SPCY	CHECK IF LAST SECTOR ON CYL
0588	15706	002001	RSS	-YES
0589	15707	002405	CLA,INA,RSS	-NO
0590	15710	063760	LDA #MASK	
0591	15711	044000	ADB A	INCR TO NEXT DISC ADDRESS (TRACK)
0592	15712	063761	LDA RECNT	GET REMAINING COUNT
0593	15713	027627	JMP SLOAD	LOAD NEXT SECTOR
0594*				
0595	15714	000000	BSTAT NOP	
0596	15715	103700	STC 0,C	
0597	15716	063776	LDA BDRV#	
0598	15717	106701	CLC 1	OUTPUT
0599	15720	102601	OTA 1	STATUS
0600	15721	103701	STC 1,C	COMMAND
0601	15722	102300	SFS 0	
0602	15723	027722	JMP *-1	
0603*	15724	102500	DSKY LIA 0	GET STATUS
0604	15725	000010	SLA	
0605	15726	102031	HLT 31B	
0606	15727	127714	JMP BSTAT,1	
0607*				DATA AREA
0608*				
0609	15730	015642	DVADR DEF DSKA-1	
0610	15731	015724	DEFDY DEF DSKY	
0611*				
0612	15732	015733	ASPBTF DEF *+1	
0613	15733	000000	BSS 12	
0614*				
0615	15747	0000000	#SPTK NOP	#SCTR/TRK (physcial)
0616	15750	0000000	#SPCY NOP	#SCTR/CYL - 1
0617	15751	0000000	#SPTN NOP	NEG # SCTRS/TRK (phys.cal)
0618	15752	000377	M.377 OCT 377	
0619	15753	177600	N.128 DEC -128	
0620	15754	000200	P.128 DEC 128	
0621	15755	0300000	SKCMD OCT 030000	SEEK COMMAND
0622	15756	0200000	RCCMD OCT 020000	READ COMMAND
0623	15757	0004000	.400 OCT 400	LOWER HEAD# BIT
0624	15760	000351	#MASK OCT 351	INCR. TRK# MASK
0625	15761	0000000	RECN1 OCT 0	CURRENT REMAINING COUNT
0626	15762	0000000	SPCAD OCT 0	CURRENT DISK SPEC. BUFFER ADDR
0627*				
0628	15300		SPBF EQU 153008	
0629	15302		GEND1 EQU SPBF+2	
0630				

STATUS  
SUBRTN.

CONTAINS 4 Entries  
(3 words each) for  
loading CRS.

# DOS-M DISC RESIDENT BOOTSTRAP

PAGE 0132 #10

0630	15303	GEND2 EQU SPBF+3
0631	15304	EGCUR EQU SPBF+4
0632	15305	EGPCU EQU SPBF+5
0633	15310	CNTR EQU SPBF+8
0634	15311	EGDSK EQU SPBF+9
0635*		
0636	00053	# EQU 538
0637	00045	.6N EQU #-6
0638	00051	.2N EQU #-2
0639	00052	.1N EQU #-1
0640	00055	.2 EQU #+2
0641	00056	.3 EQU #+3
0642	00058	.5 EQU #+5
0643	00066	.17D EQU #+11
0644	00071	M.37 EQU #+14
0645	00072	M.77 EQU #+15
0646*		
0647	00102	* EQU 100B
0648	00115	BSYBF EQU *+13
0649	00117	BEGTB EQU *+15
0650	00122	BEGT# EQU *+16
0651	00154	BDSCU EQU *+44
0652	00155	BSYSC EQU *+45
0653	00157	BUNTS EQU *+47
0654	00160	BSNTS EQU *+48
0655	00161	BCDSC EQU *+49
0656	00175	BUDSC EQU *+61
0657	00200	BDSCL EQU *+64
0658	00201	BINTB EQU *+65
0659*		
0660	15763 000000	SWP1 NOP
0661	15764 000000	SWP2 NOP
0662	15765 000031	DISK OCT 31
0663	15766 070036	MASK OCT 070036
0664	15767 17740	M.740 OCT 177740
0665*		
0666	15777	END EQU 157778
0667	15772	BHMSK EQU END-5
0668	15773	CFANL EQU END-4
0669	15774	RUND1 EQU END-3
0670	15775	RUND2 EQU END-2
0671	15776	BDRV# EQU END-1
0672*		
0673	15777	ORG 15777B
0674	15777 177733	ABS ASPBF--*
0675*		
0676		END DSGEN

BASE PAGE  
COMMUNICATION  
AREA LOCATIONS

HALTS IN DOS-M DURING SYSTEM OPERATION

T-REGISTER CONTENTS	PROGRAM LOCATION	CAUSE OF HALT	RECOVERY ACTION
102000	\$EX18	SYSTEM WAS UNABLE TO USE INTERRUPT TABLE TO MATCH CHANNEL # IN EQUIPMENT TABLE FOR GIVEN I/O REQUEST.	CHECK INTERRUPT TABLE ENTRIES AND PATCH IF POSSIBLE. REGENERATE CORRECT SYSTEM. IRRECOVERABLE HALT.
102004	DISCM	POWER UP OR DOWN WITH DOS-M SYSTEM IN CORE WITH P.F. OPTION PRESENT	BOOTSTRAP SYSTEM BACK UP FROM DISC AND RESTART.
102011	\$EX20	DISC PARITY ERROR. HALT OCCURS AFTER PRINTING MESSAGES ON SYSTEM TTY TO INFORM OPERATOR WHERE ERROR OCCURRED. (TRACK #, SECTOR #, AND SUB-CHANNEL #).	TURN ON "DISC PROTECT OVERRIDE SWITCH" AND PRESS "RUN" FOR SYSTEM TO ASSIGN NEXT SPARE TRACK.
102077	\$EX20	FOLLOWS MESSAGE TELLING OPERATOR TO TURN OFF "DISC PROTECT OVERRIDE SWITCH" AFTER SPARE TRACK ASSIGNMENT.	TURN OFF "DISC PROTECT OVERRIDE SWITCH" AND PRESS "RUN". SYSTEM ABORTS JOB THAT WAS RUNNING.
102031	DVR31	TRYING TO WRITE ON CYLINDER THAT HAS BEEN FLAGGED PROTECTED WITH "DISC PROTECT OVERRIDE SWITCH" OFF.	PRESS "RUN" TO EXIT DRIVER WITH NO ACTION TAKEN ON DISC.

## DOS-M FLOWCHARTS TABLE OF CONTENTS

### DISC MONITOR

<u>Name/Entry Label(s)</u>	<u>Page(s)</u>
\$CIC	1
\$IOCM,\$IORQ	2
EXEC	3
\$WAIT,\$BLOP,\$MBSY,\$DMA,\$EBSY	4
\$TYPE	5
\$SYIO,DRIVR,NRPAR	6
\$TEST	7
\$JLOD,\$MDLD,10.4Ø	8
\$LDVR,DISCX,\$GDTK,\$DISC,\$LDEX,\$STRT	9
\$IDLI,\$CLER	1Ø
ADCHK,LUCHK,\$EFAD,RQEQT,SETEQ	11
\$DMAX,RCHAN,\$MOVE	12
ERRTN MPERR,RQERR,CLERR,IERR	13
DERR,ILINP,ERRØ1,ERRØ2,ERRØ3	13
ERRØ4,ERRØ5,ERRØ6	13

### EXECUTIVE MODULES

\$EXØ1	14
\$EXØ2	15
\$EXØ3,\$EXØ6	16
\$EXØ4	17
\$EXØ5	18
\$EXØ7,\$EXØ8	19
(Reserved for \$EXØ9)	2Ø
\$EXIØ	21
(Reserved for \$EXII)	22
\$EXI2	23
\$EXI3	24
\$EXI4	25
\$EXI5	26
\$EXI6	27

EXECUTIVE MODULES (continued)

<u>Name/Entry Label(s)</u>	<u>Page(s)</u>
(Reserved for \$EX17)	28
\$EX18	29A, 29B, 29C
\$EX19	30
(Reserved for \$EX20)	31

SYSTEM SUBROUTINES


ASCII	32
(Reserved for DUMRX)	33
(Reserved for \$LBL)	34
(Reserved for \$SRCH)	35
(Reserved for \$ADDR)	36

DRIVERS


DVRØI	37
-------	----


CENTRAL INTERRUPT CONTROL PROCESSOR (\$CIC)

PAGE 1

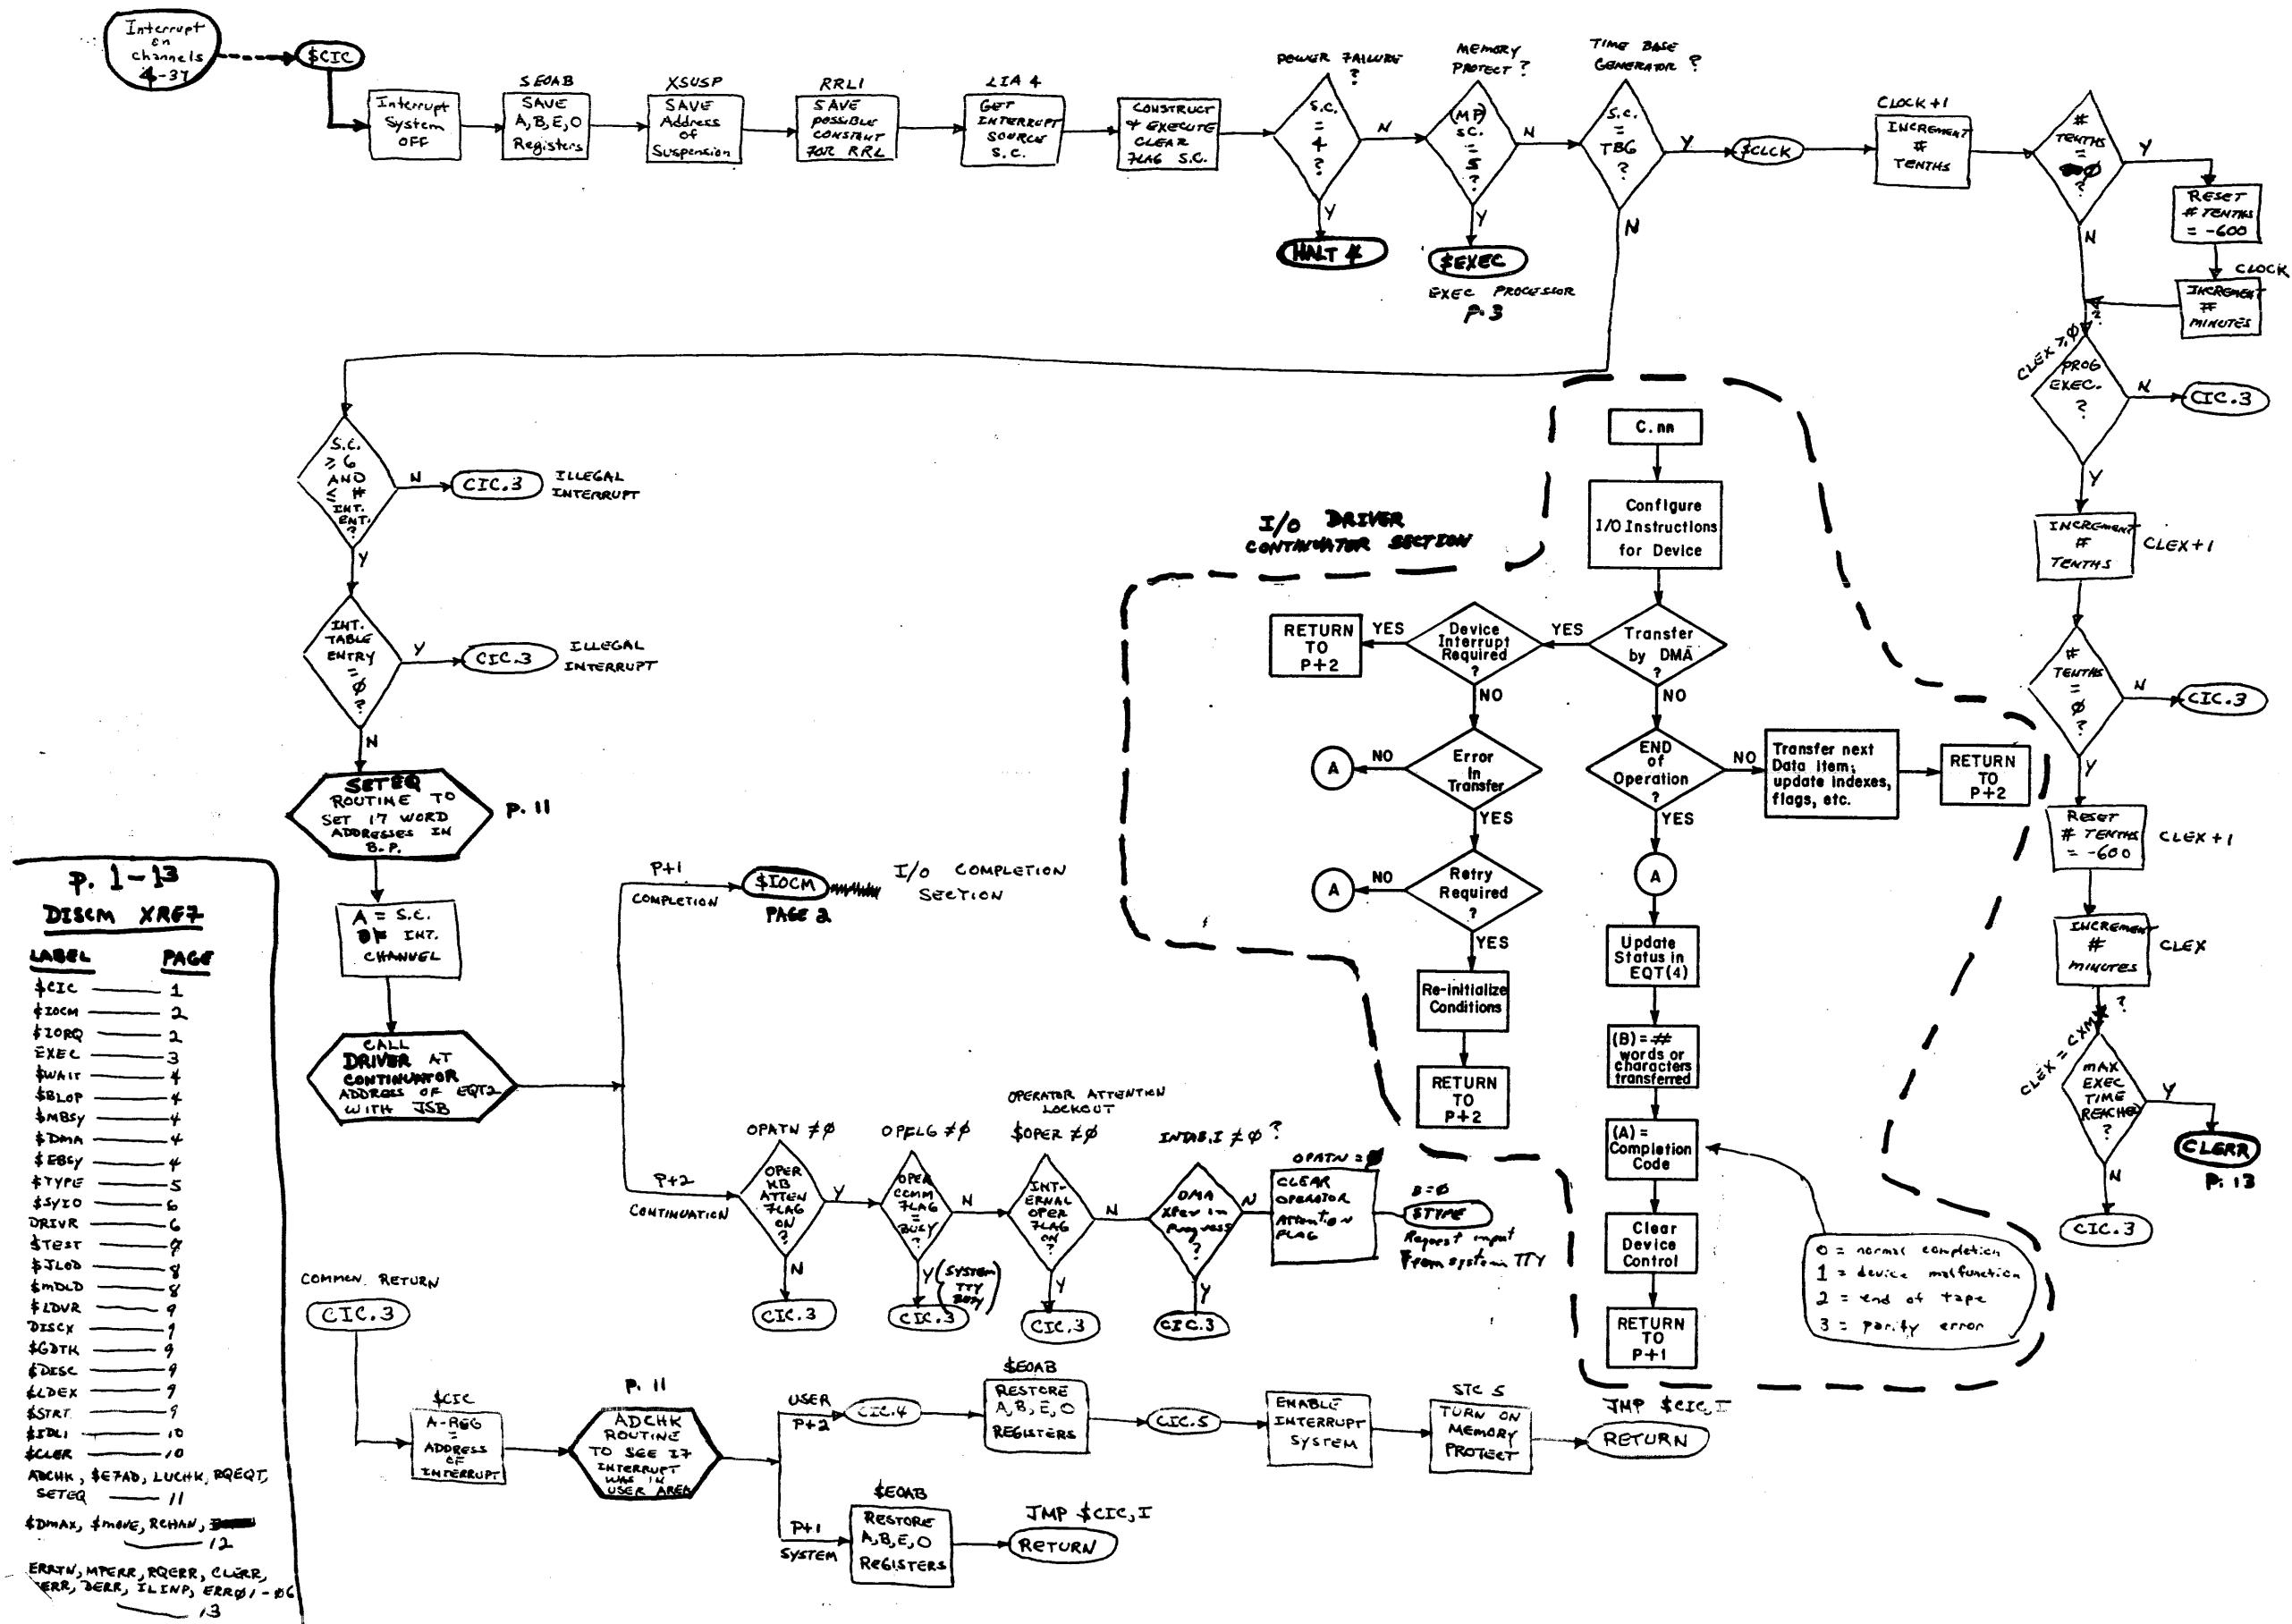



## INPUT/OUTPUT COMPLETION SECTION (\$IOPCM)

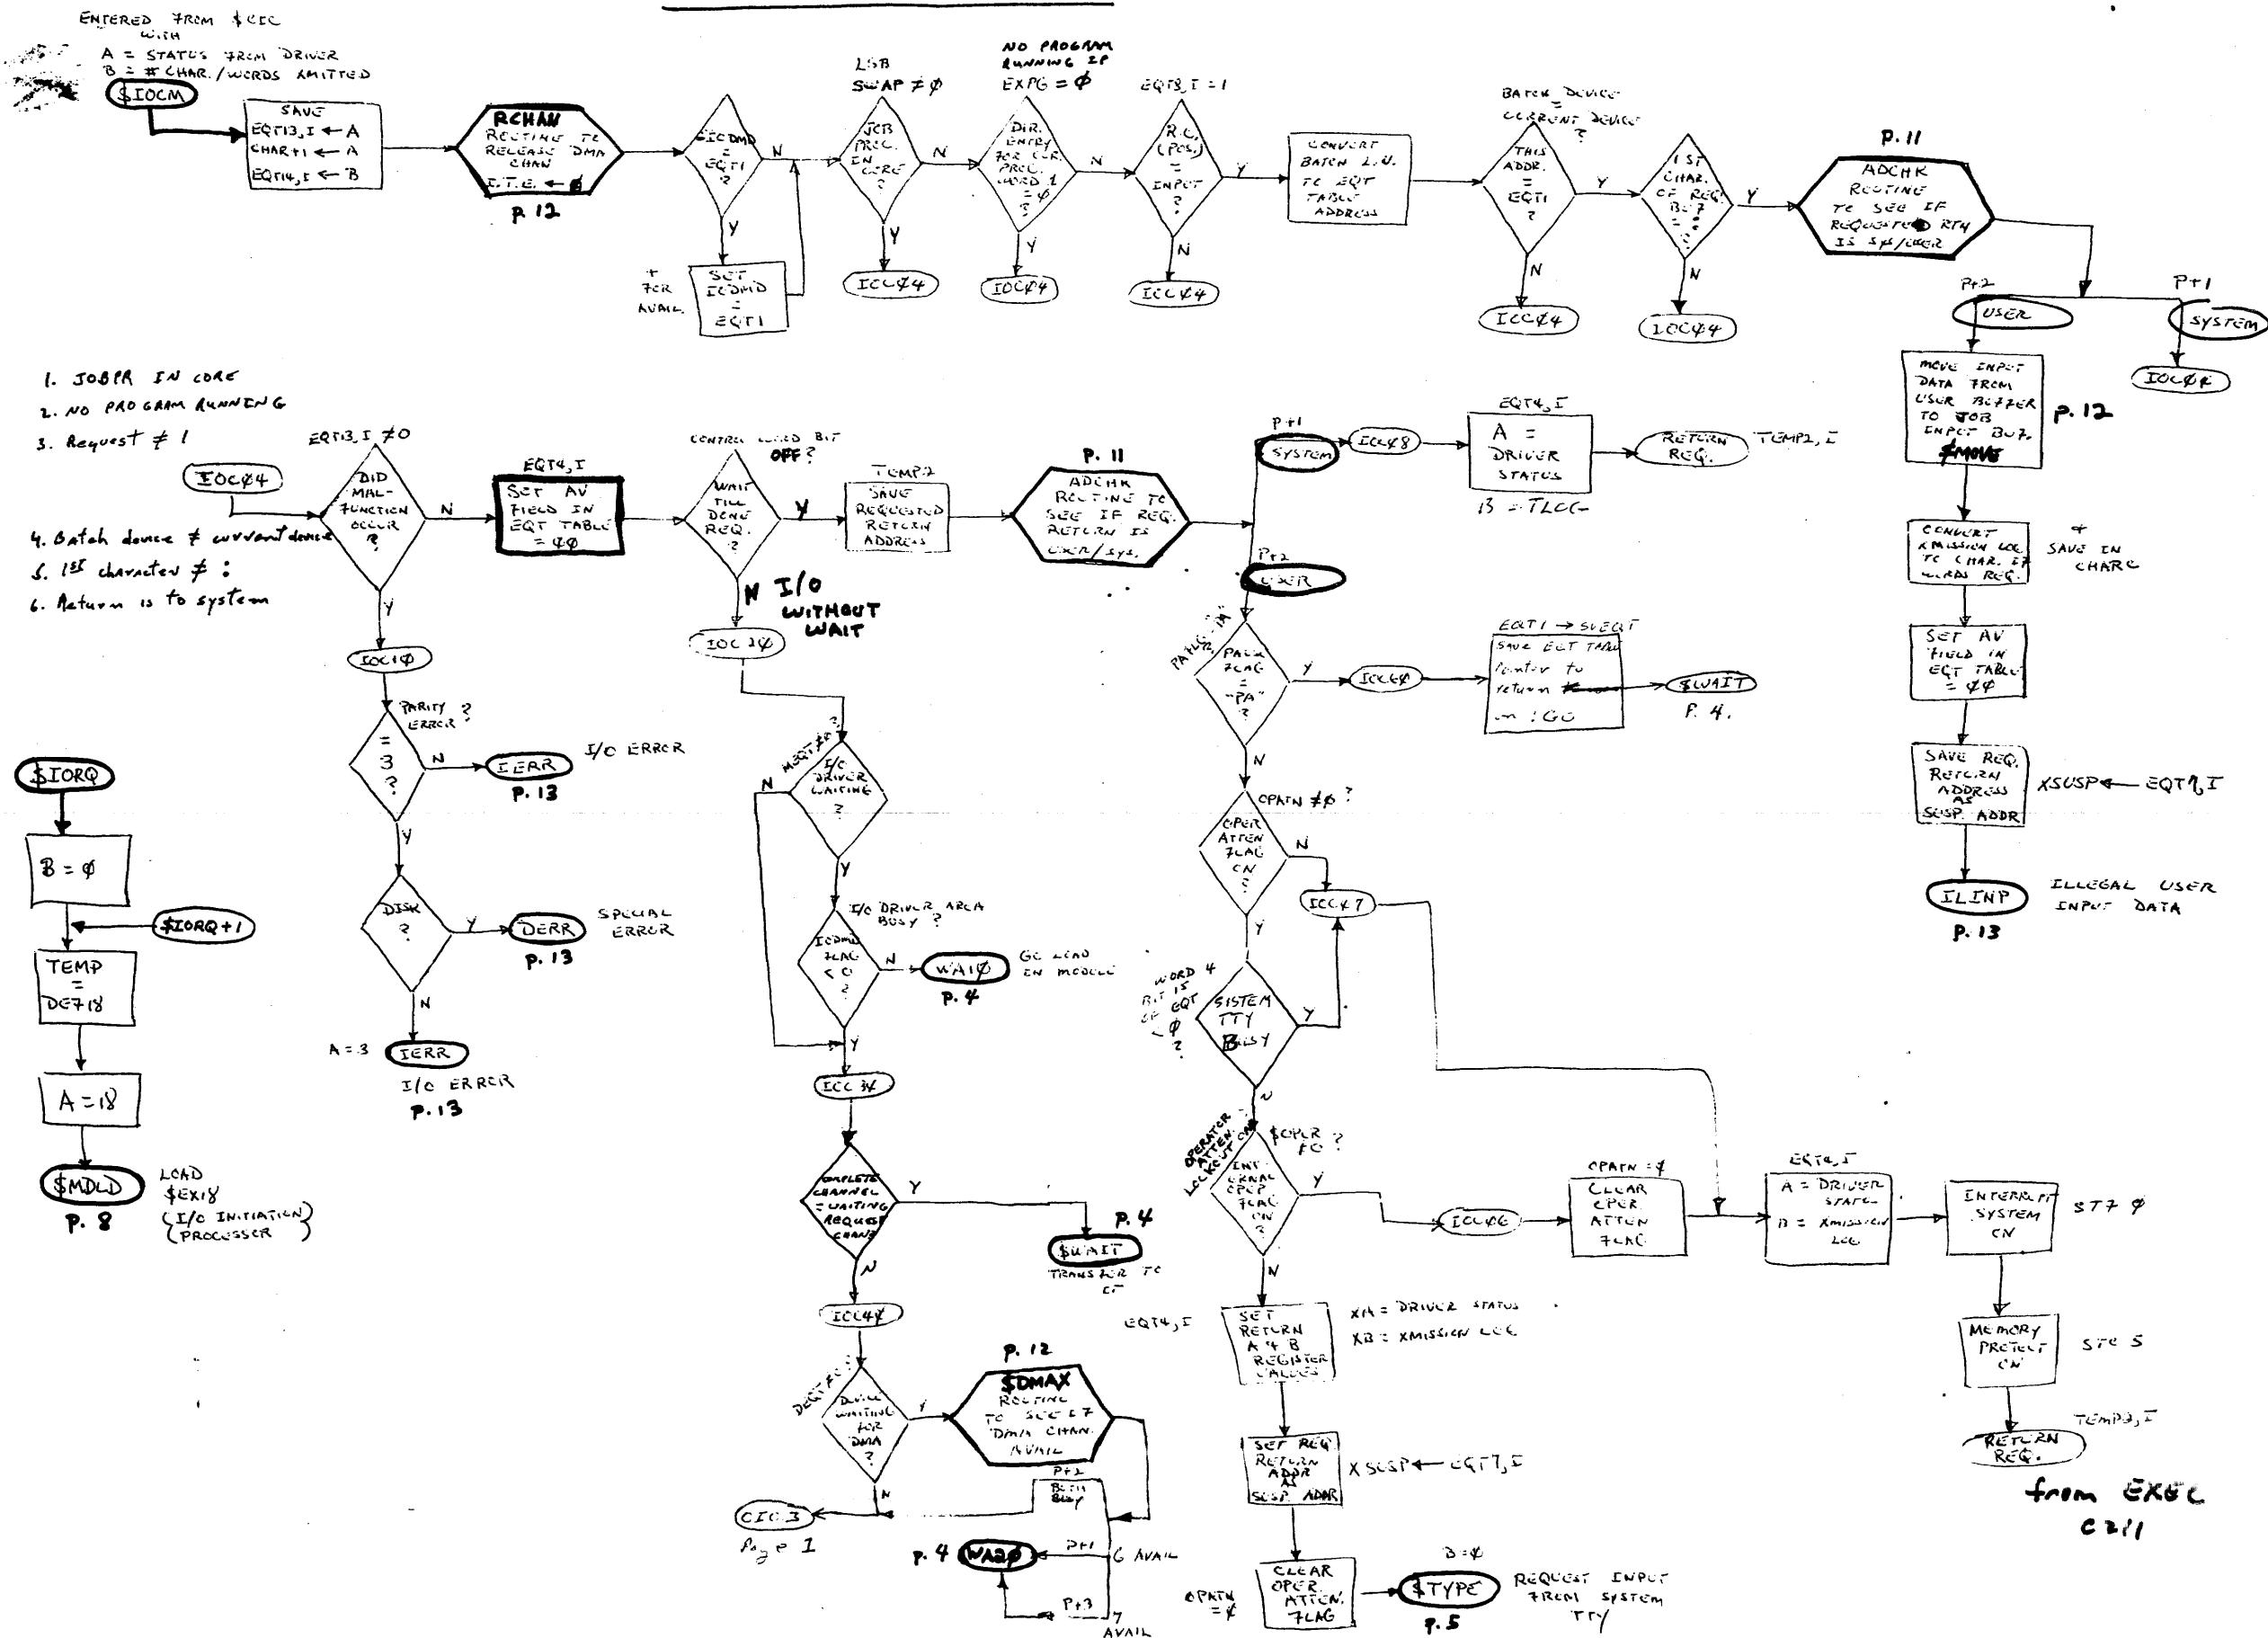


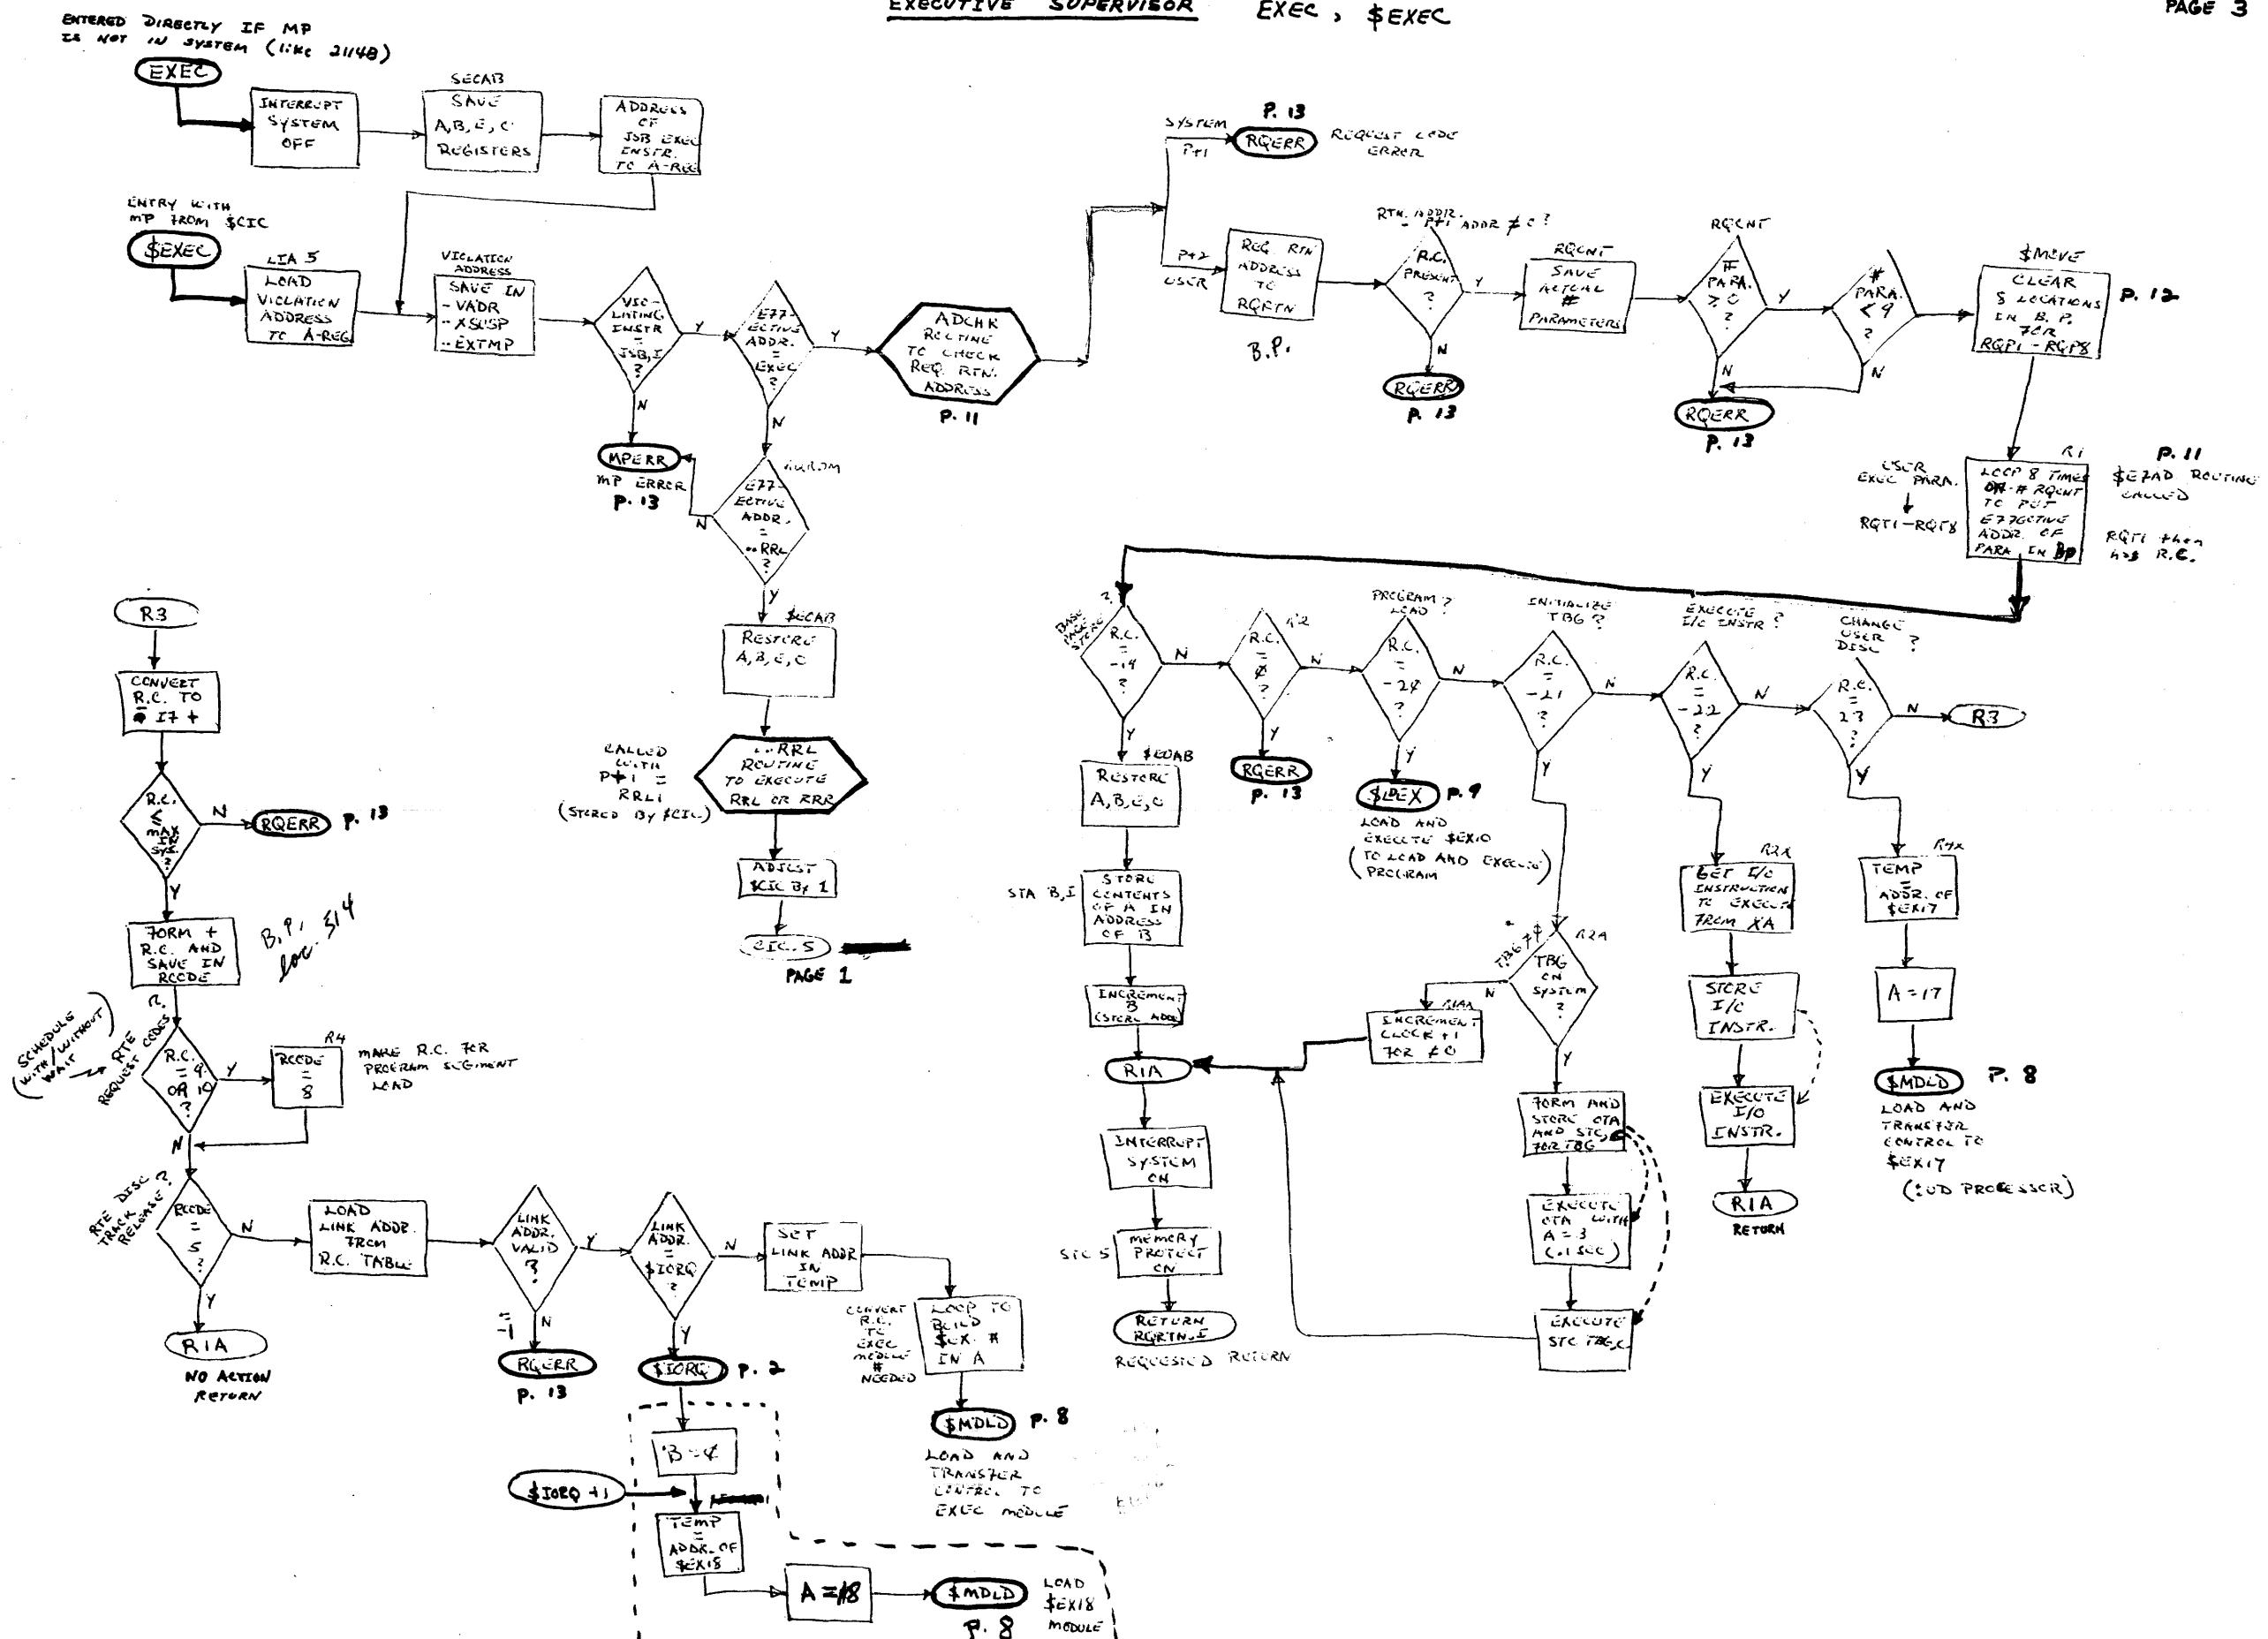


System Edling  
 - Busy I/O Chan  
 - I/O Device Module Busy  
 - DMA busy  
 - Exec Mod Area Busy  
 - Idle Loop

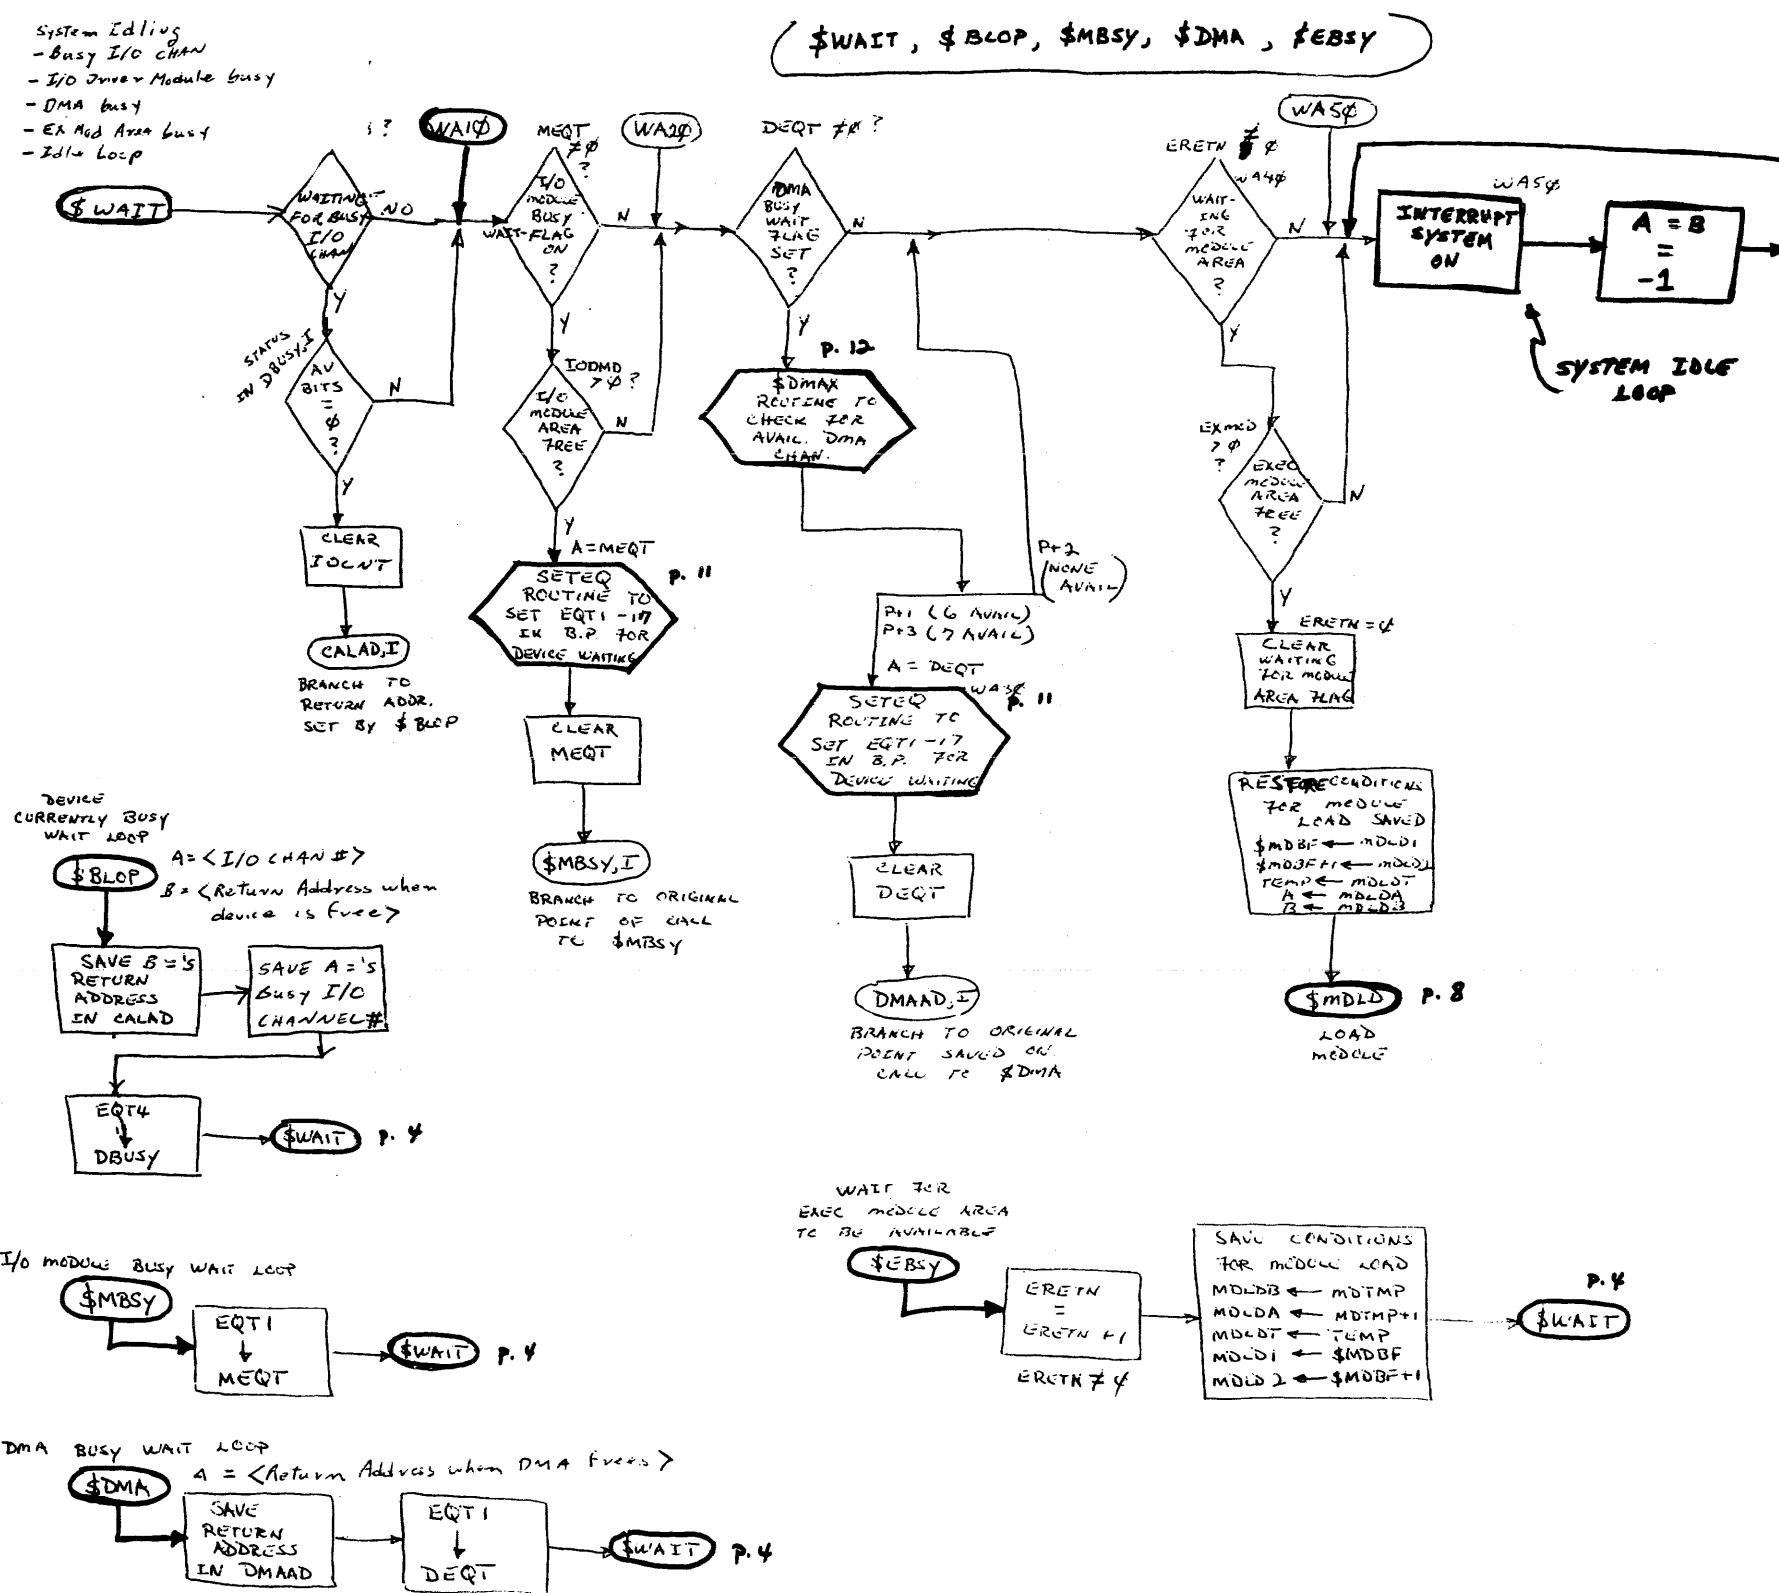


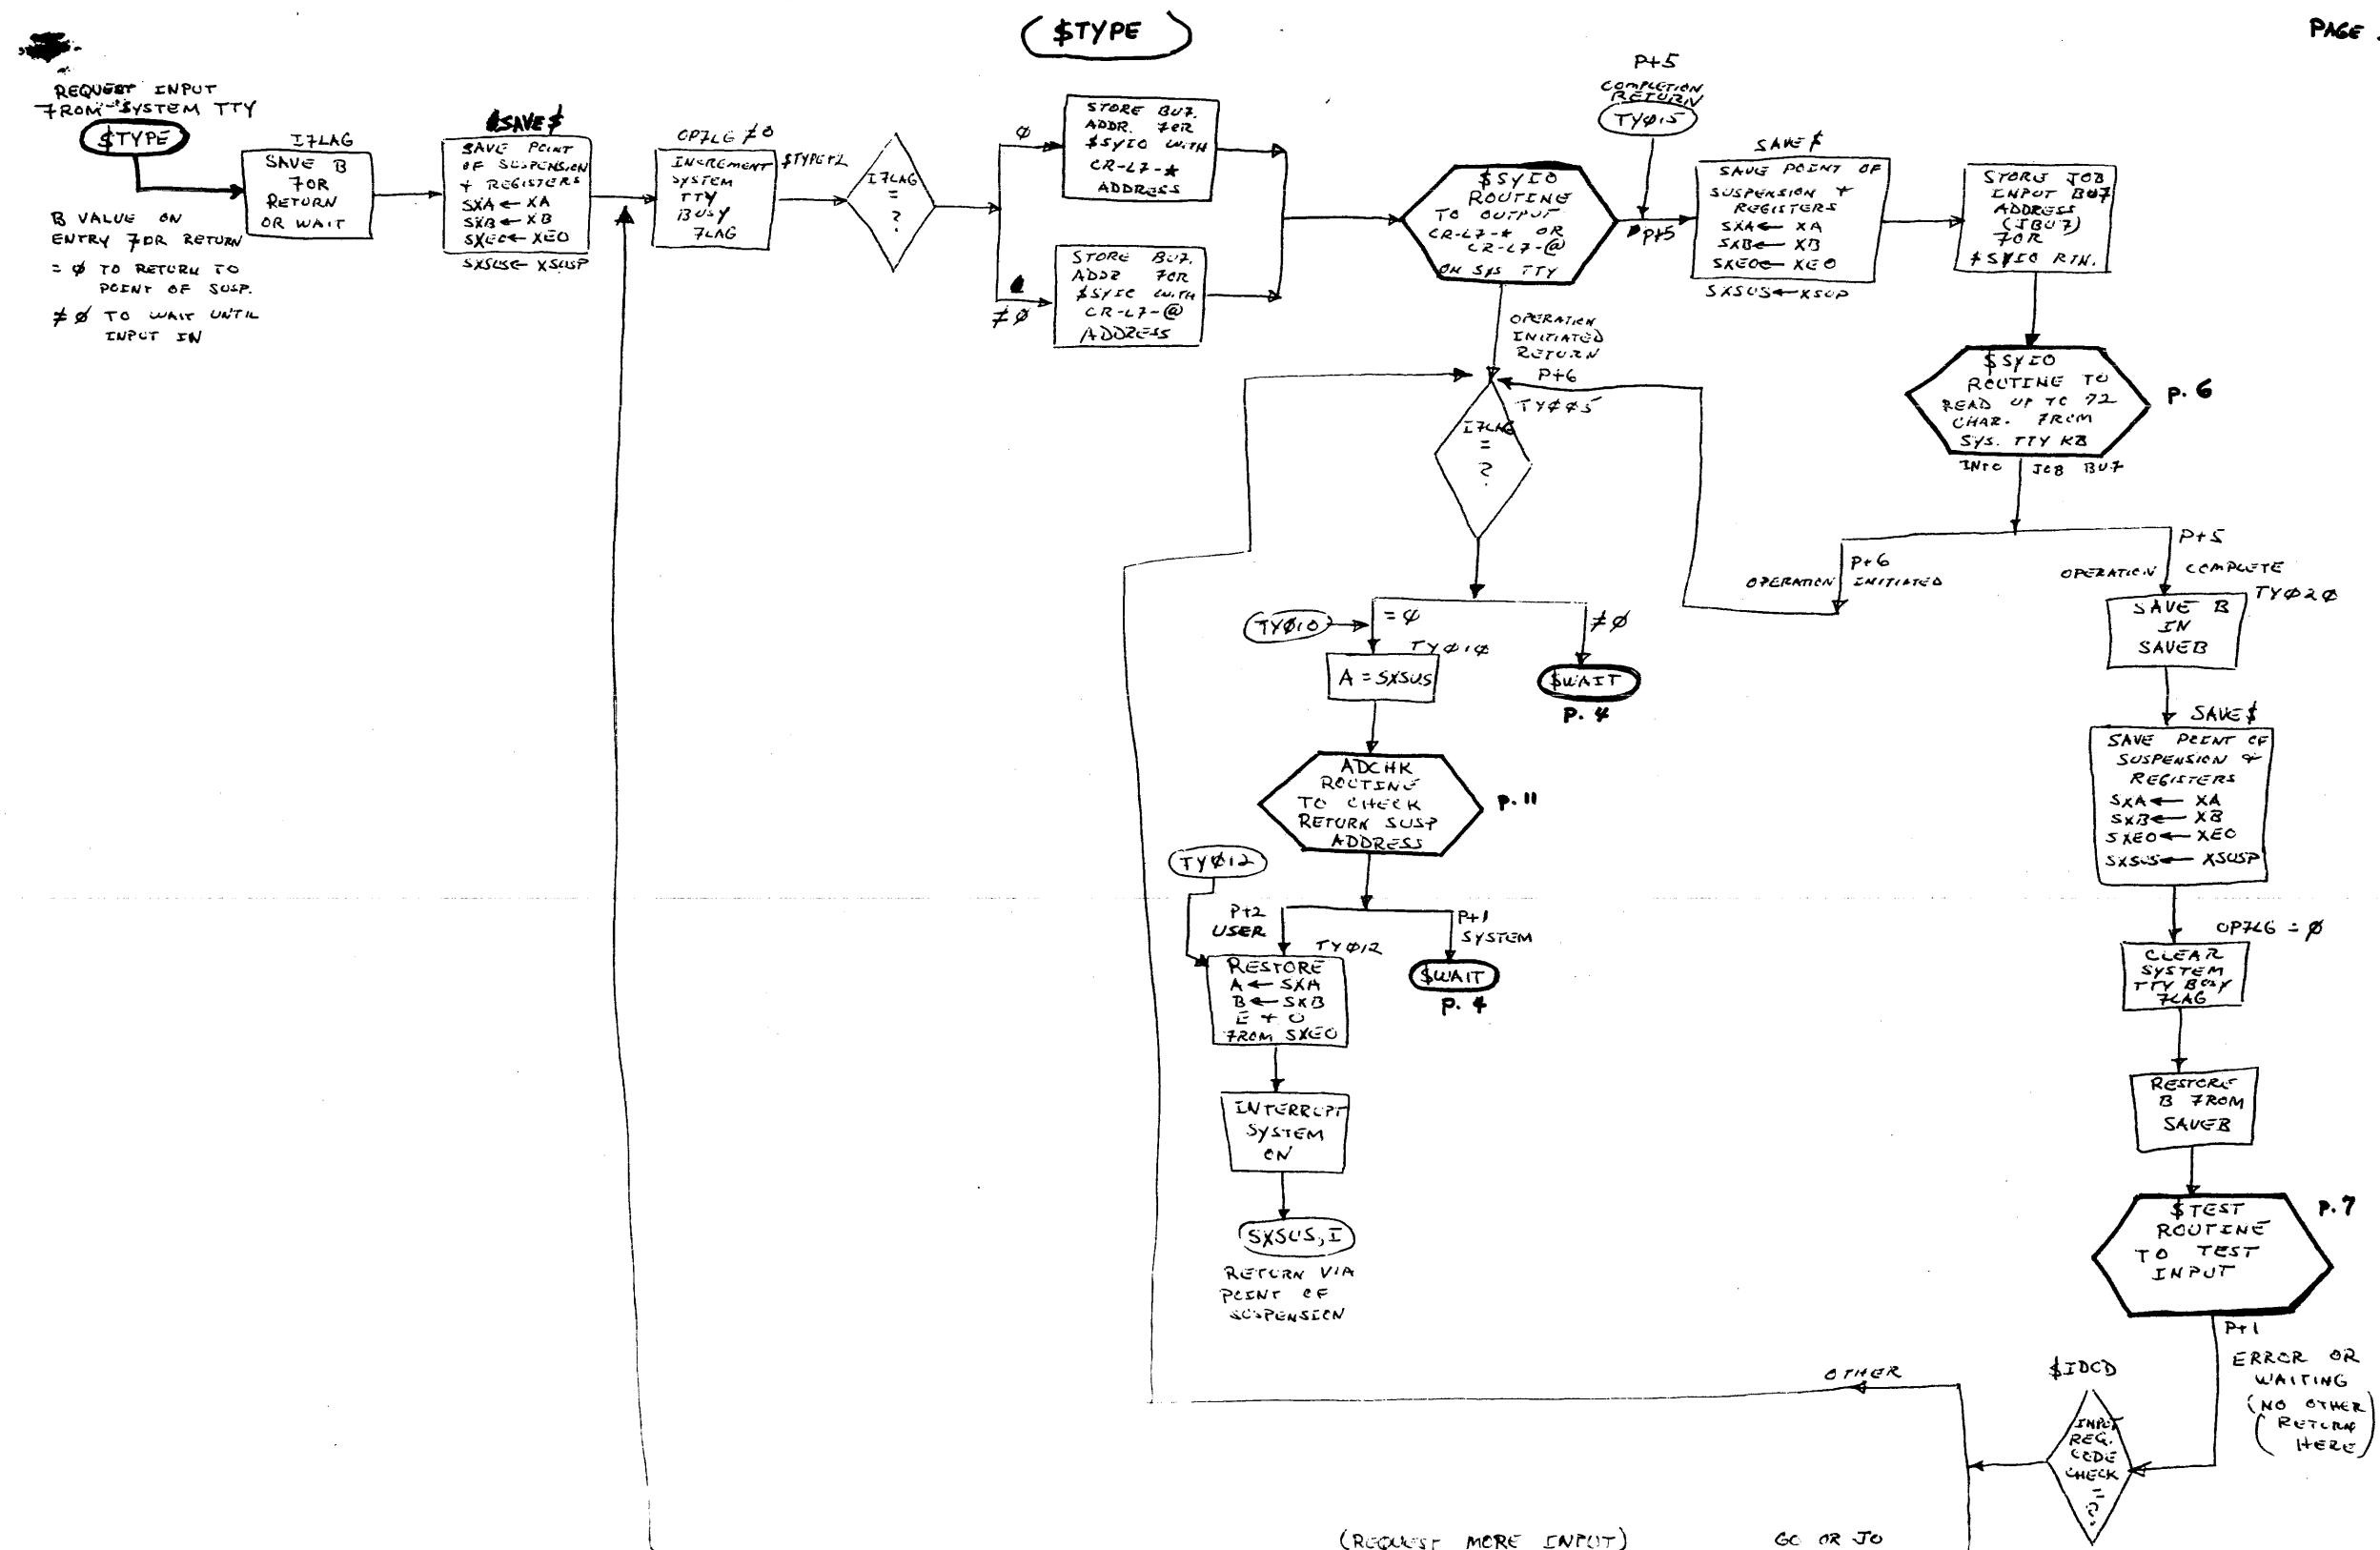



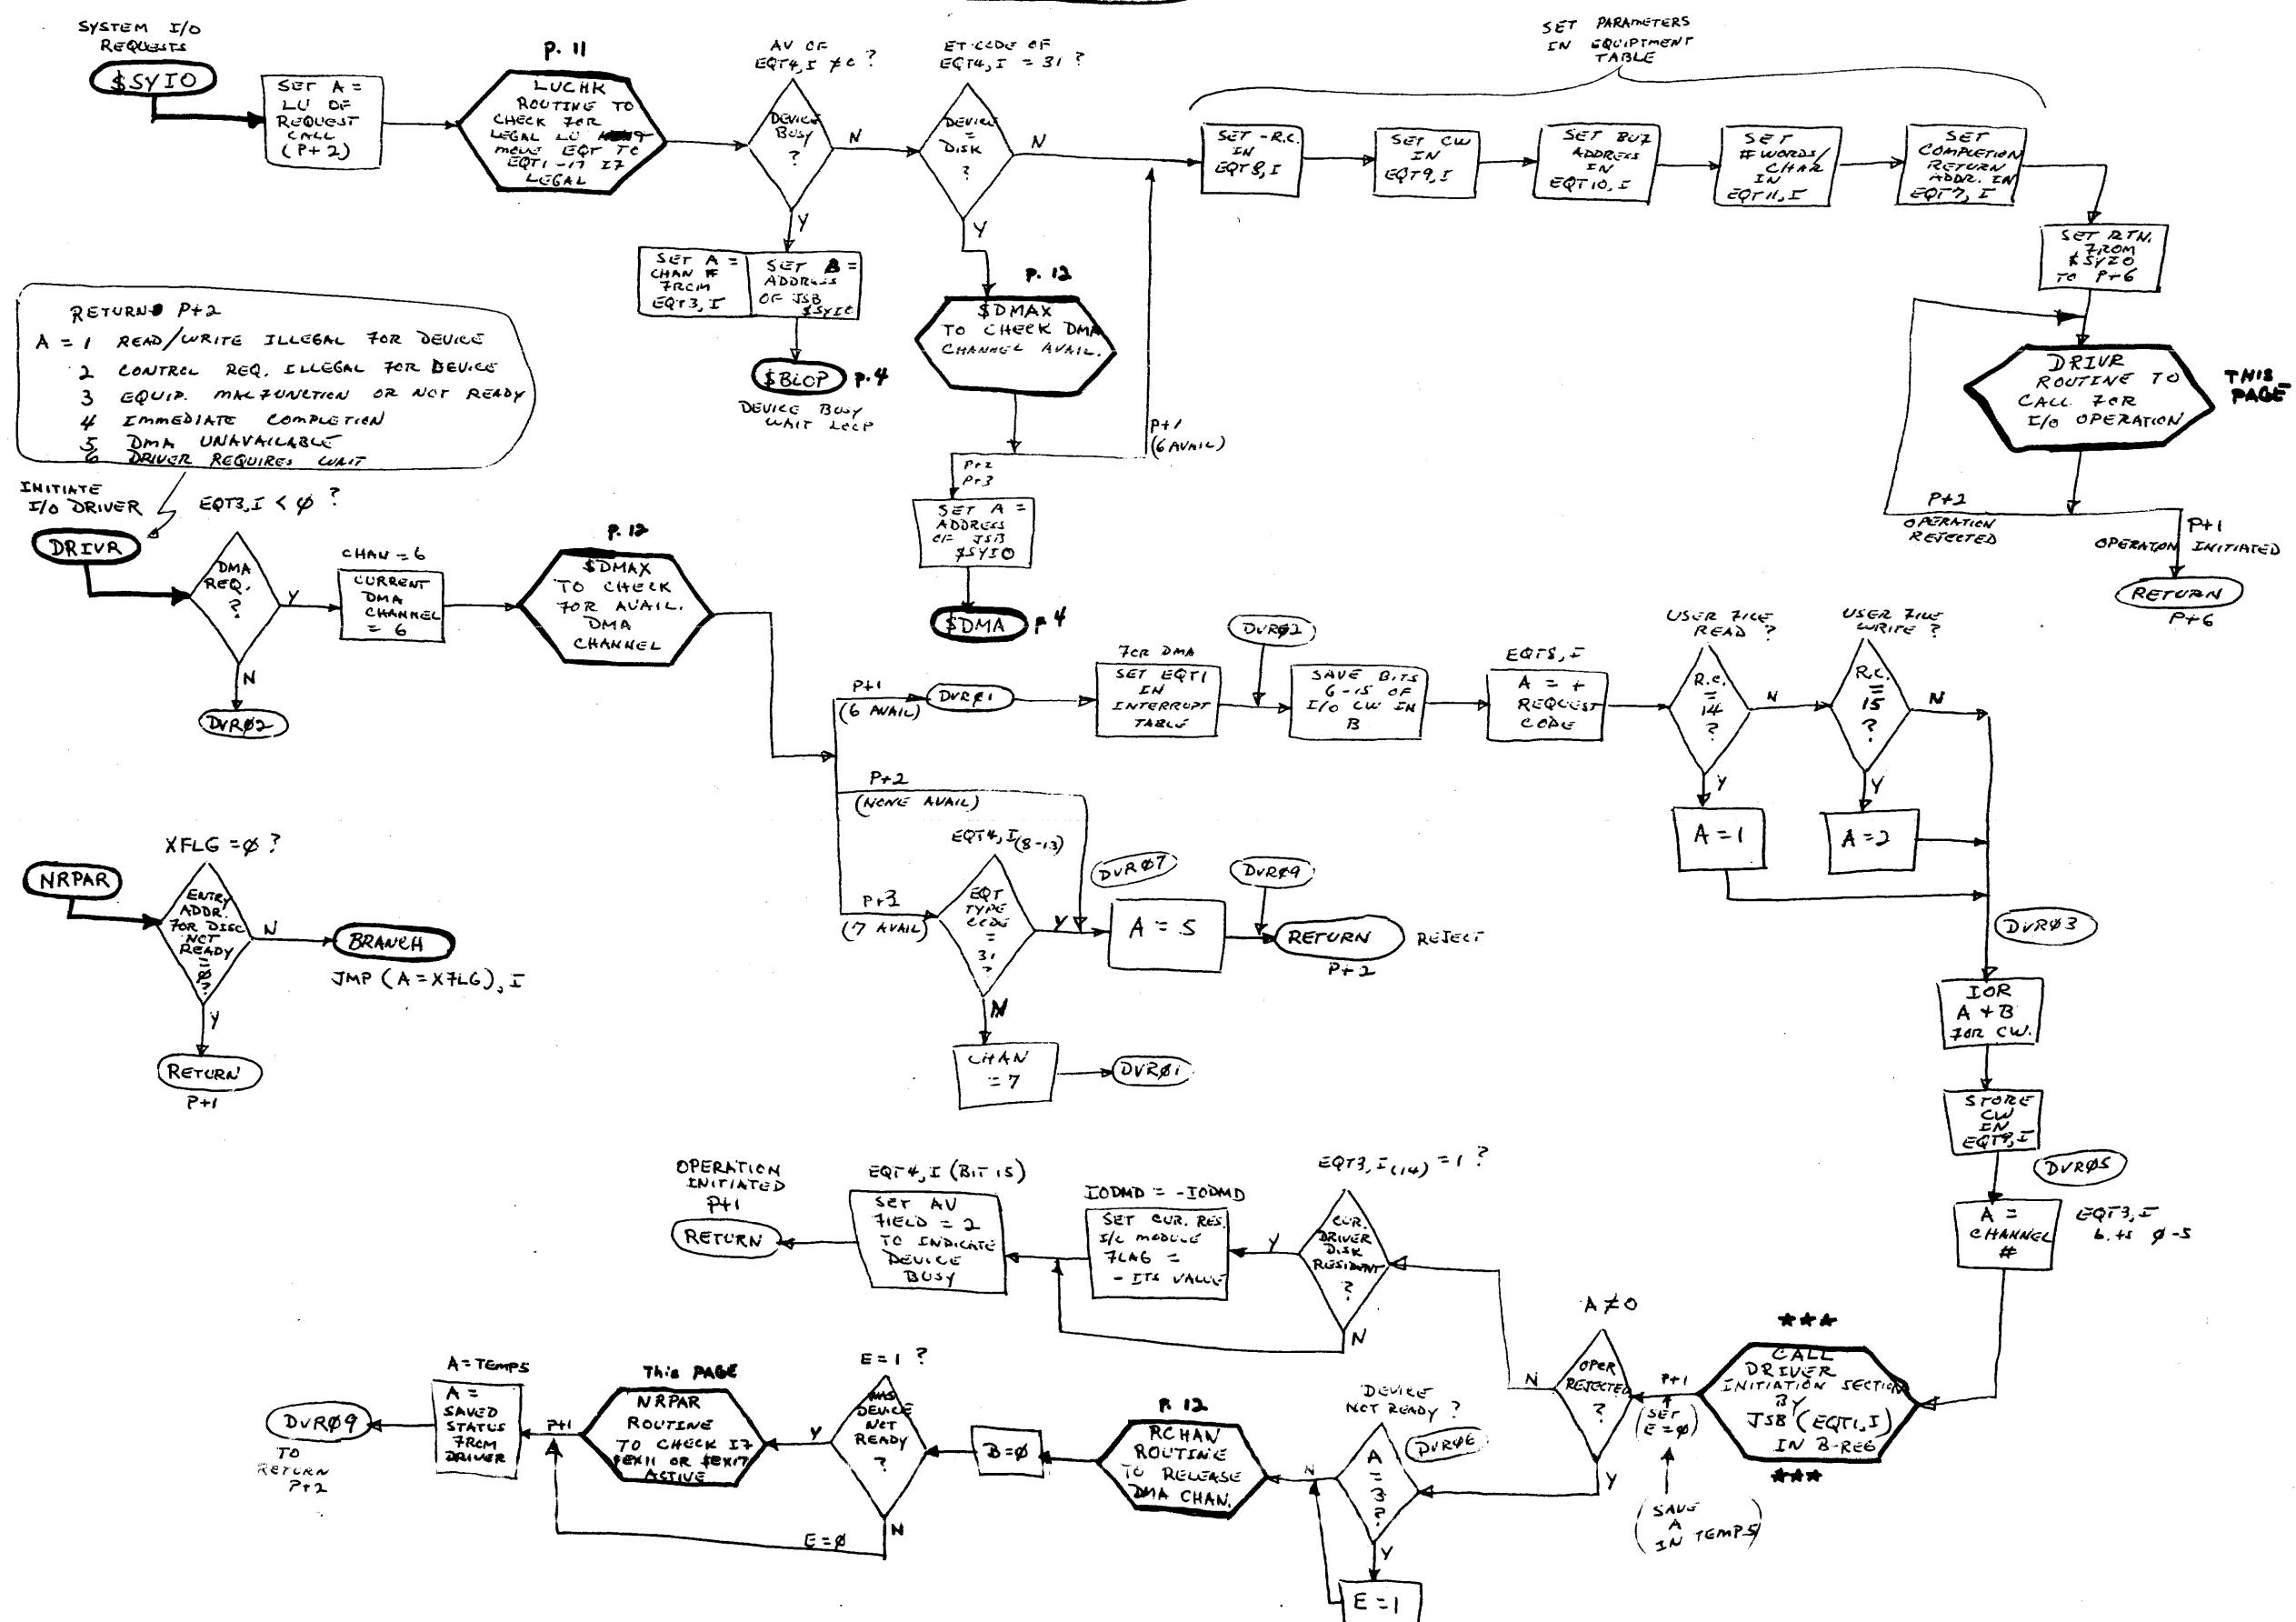


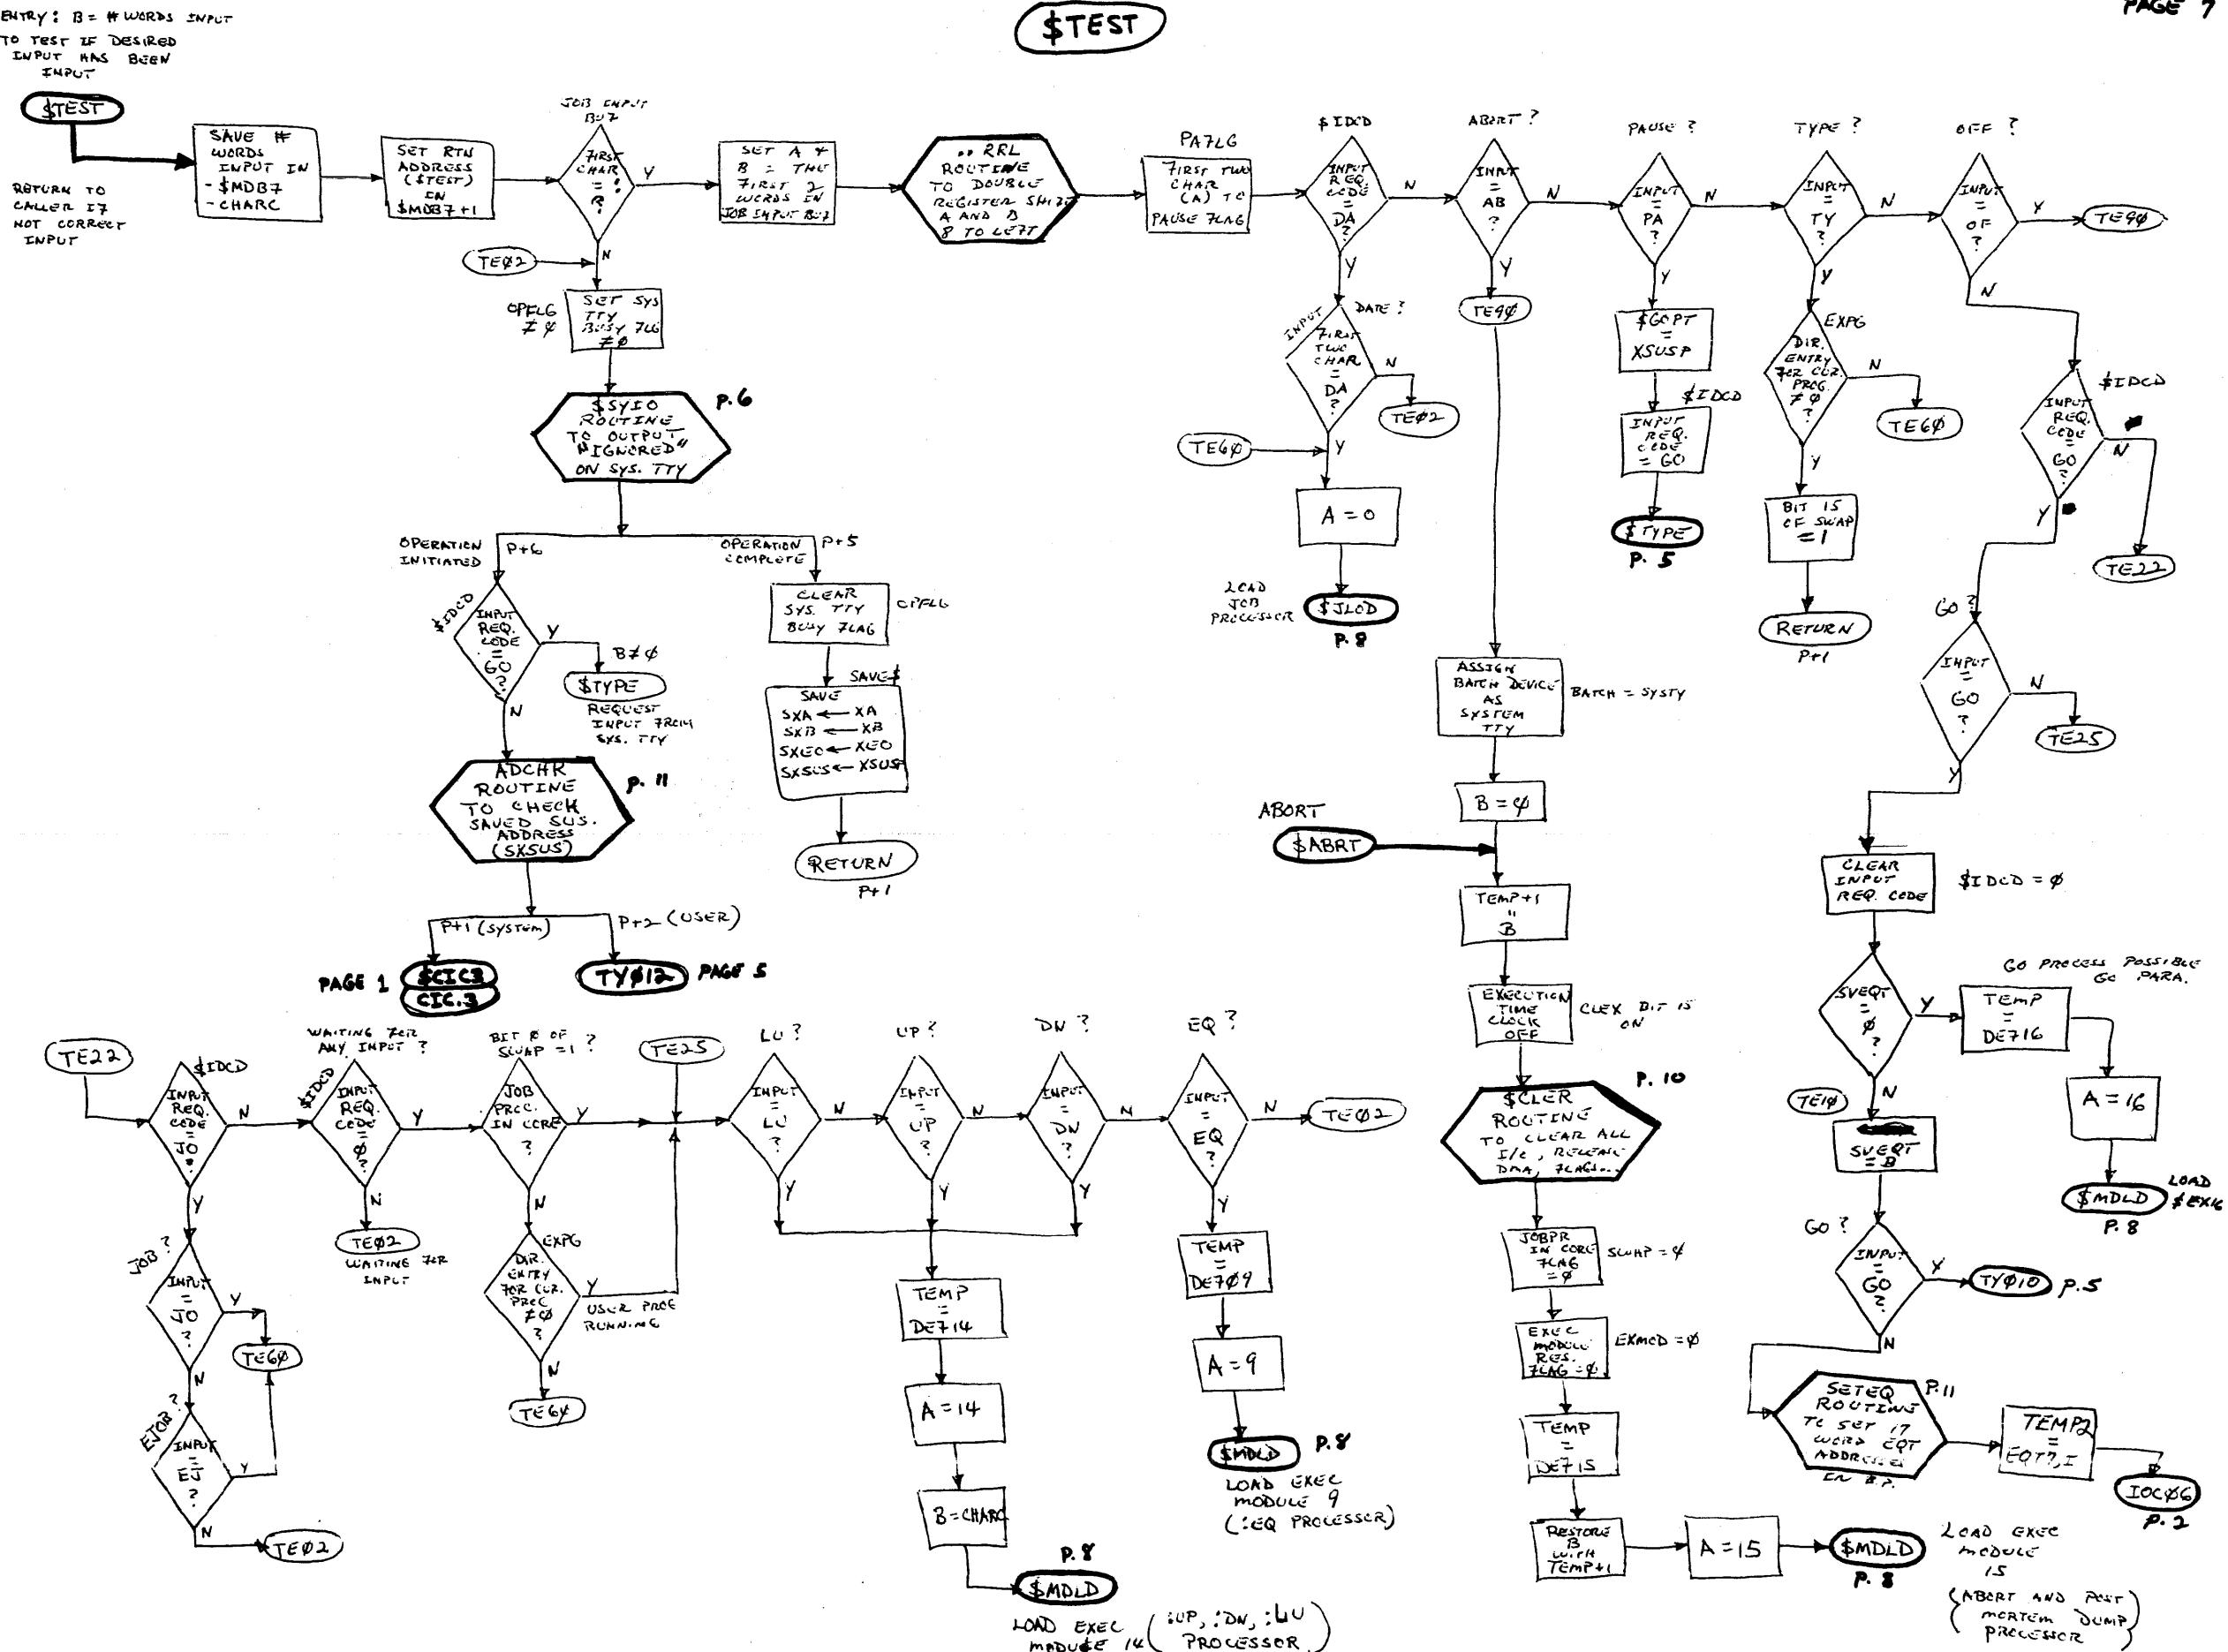


\$JLOD, \$MDLD I.O. 40

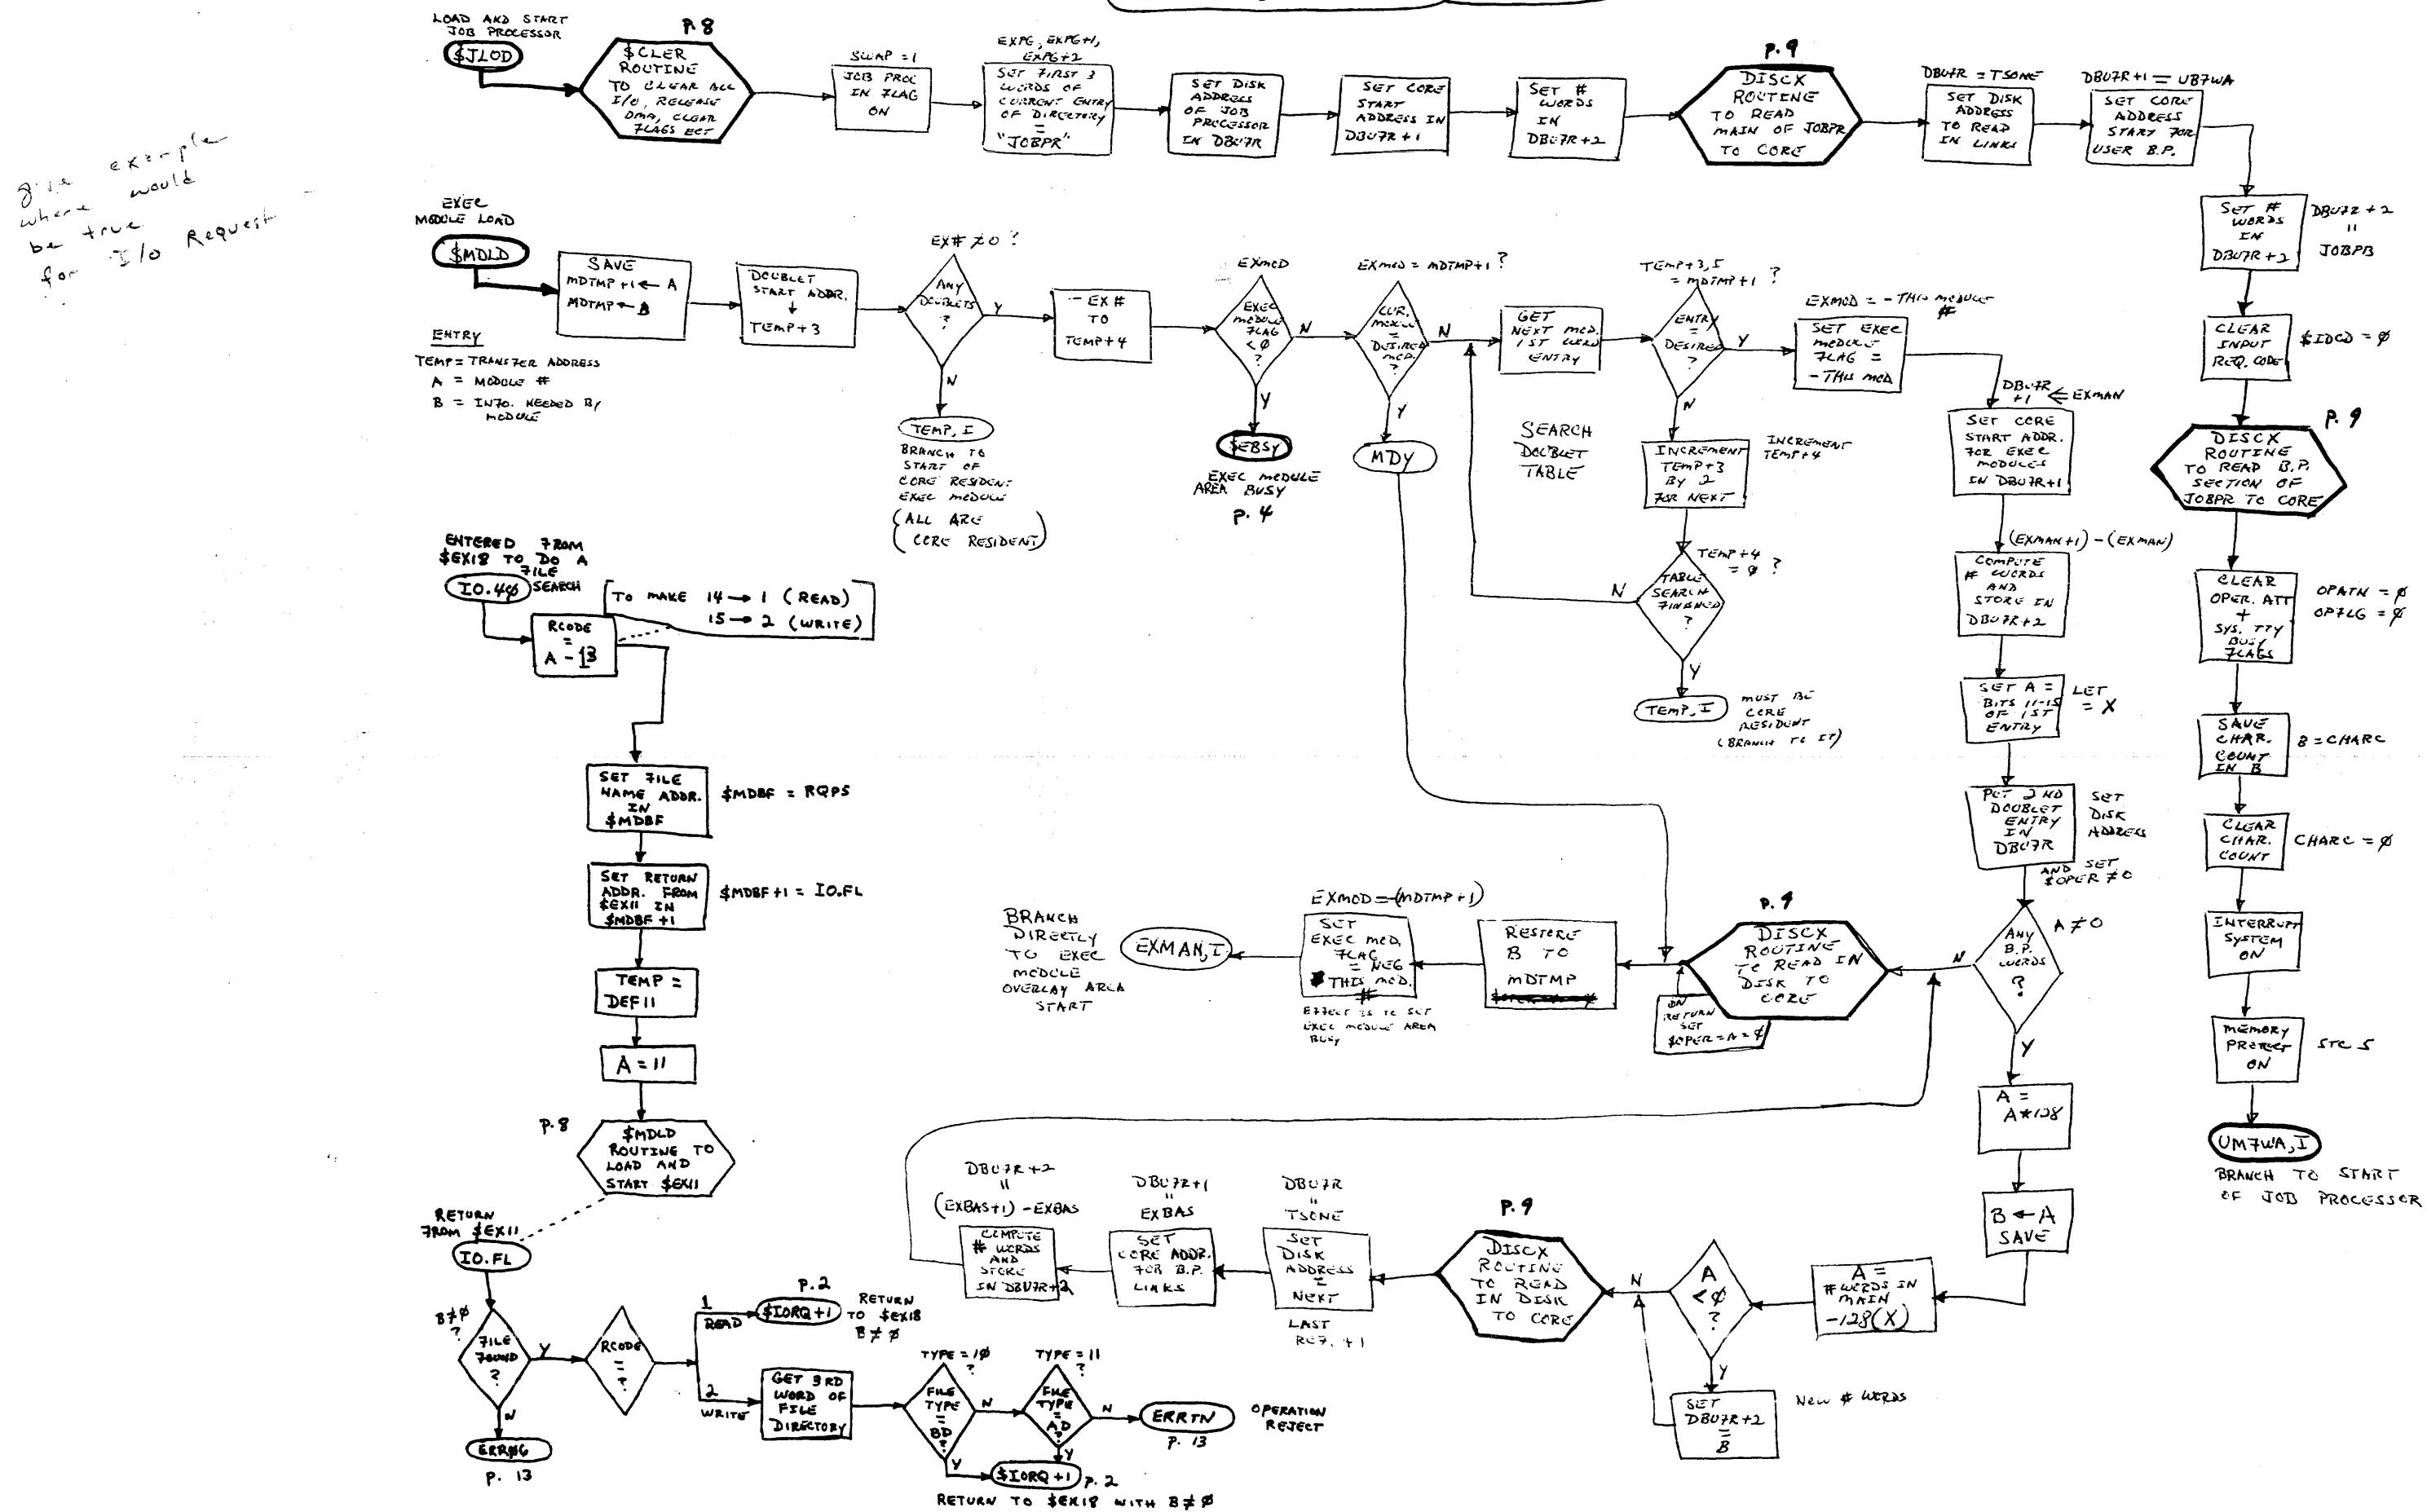

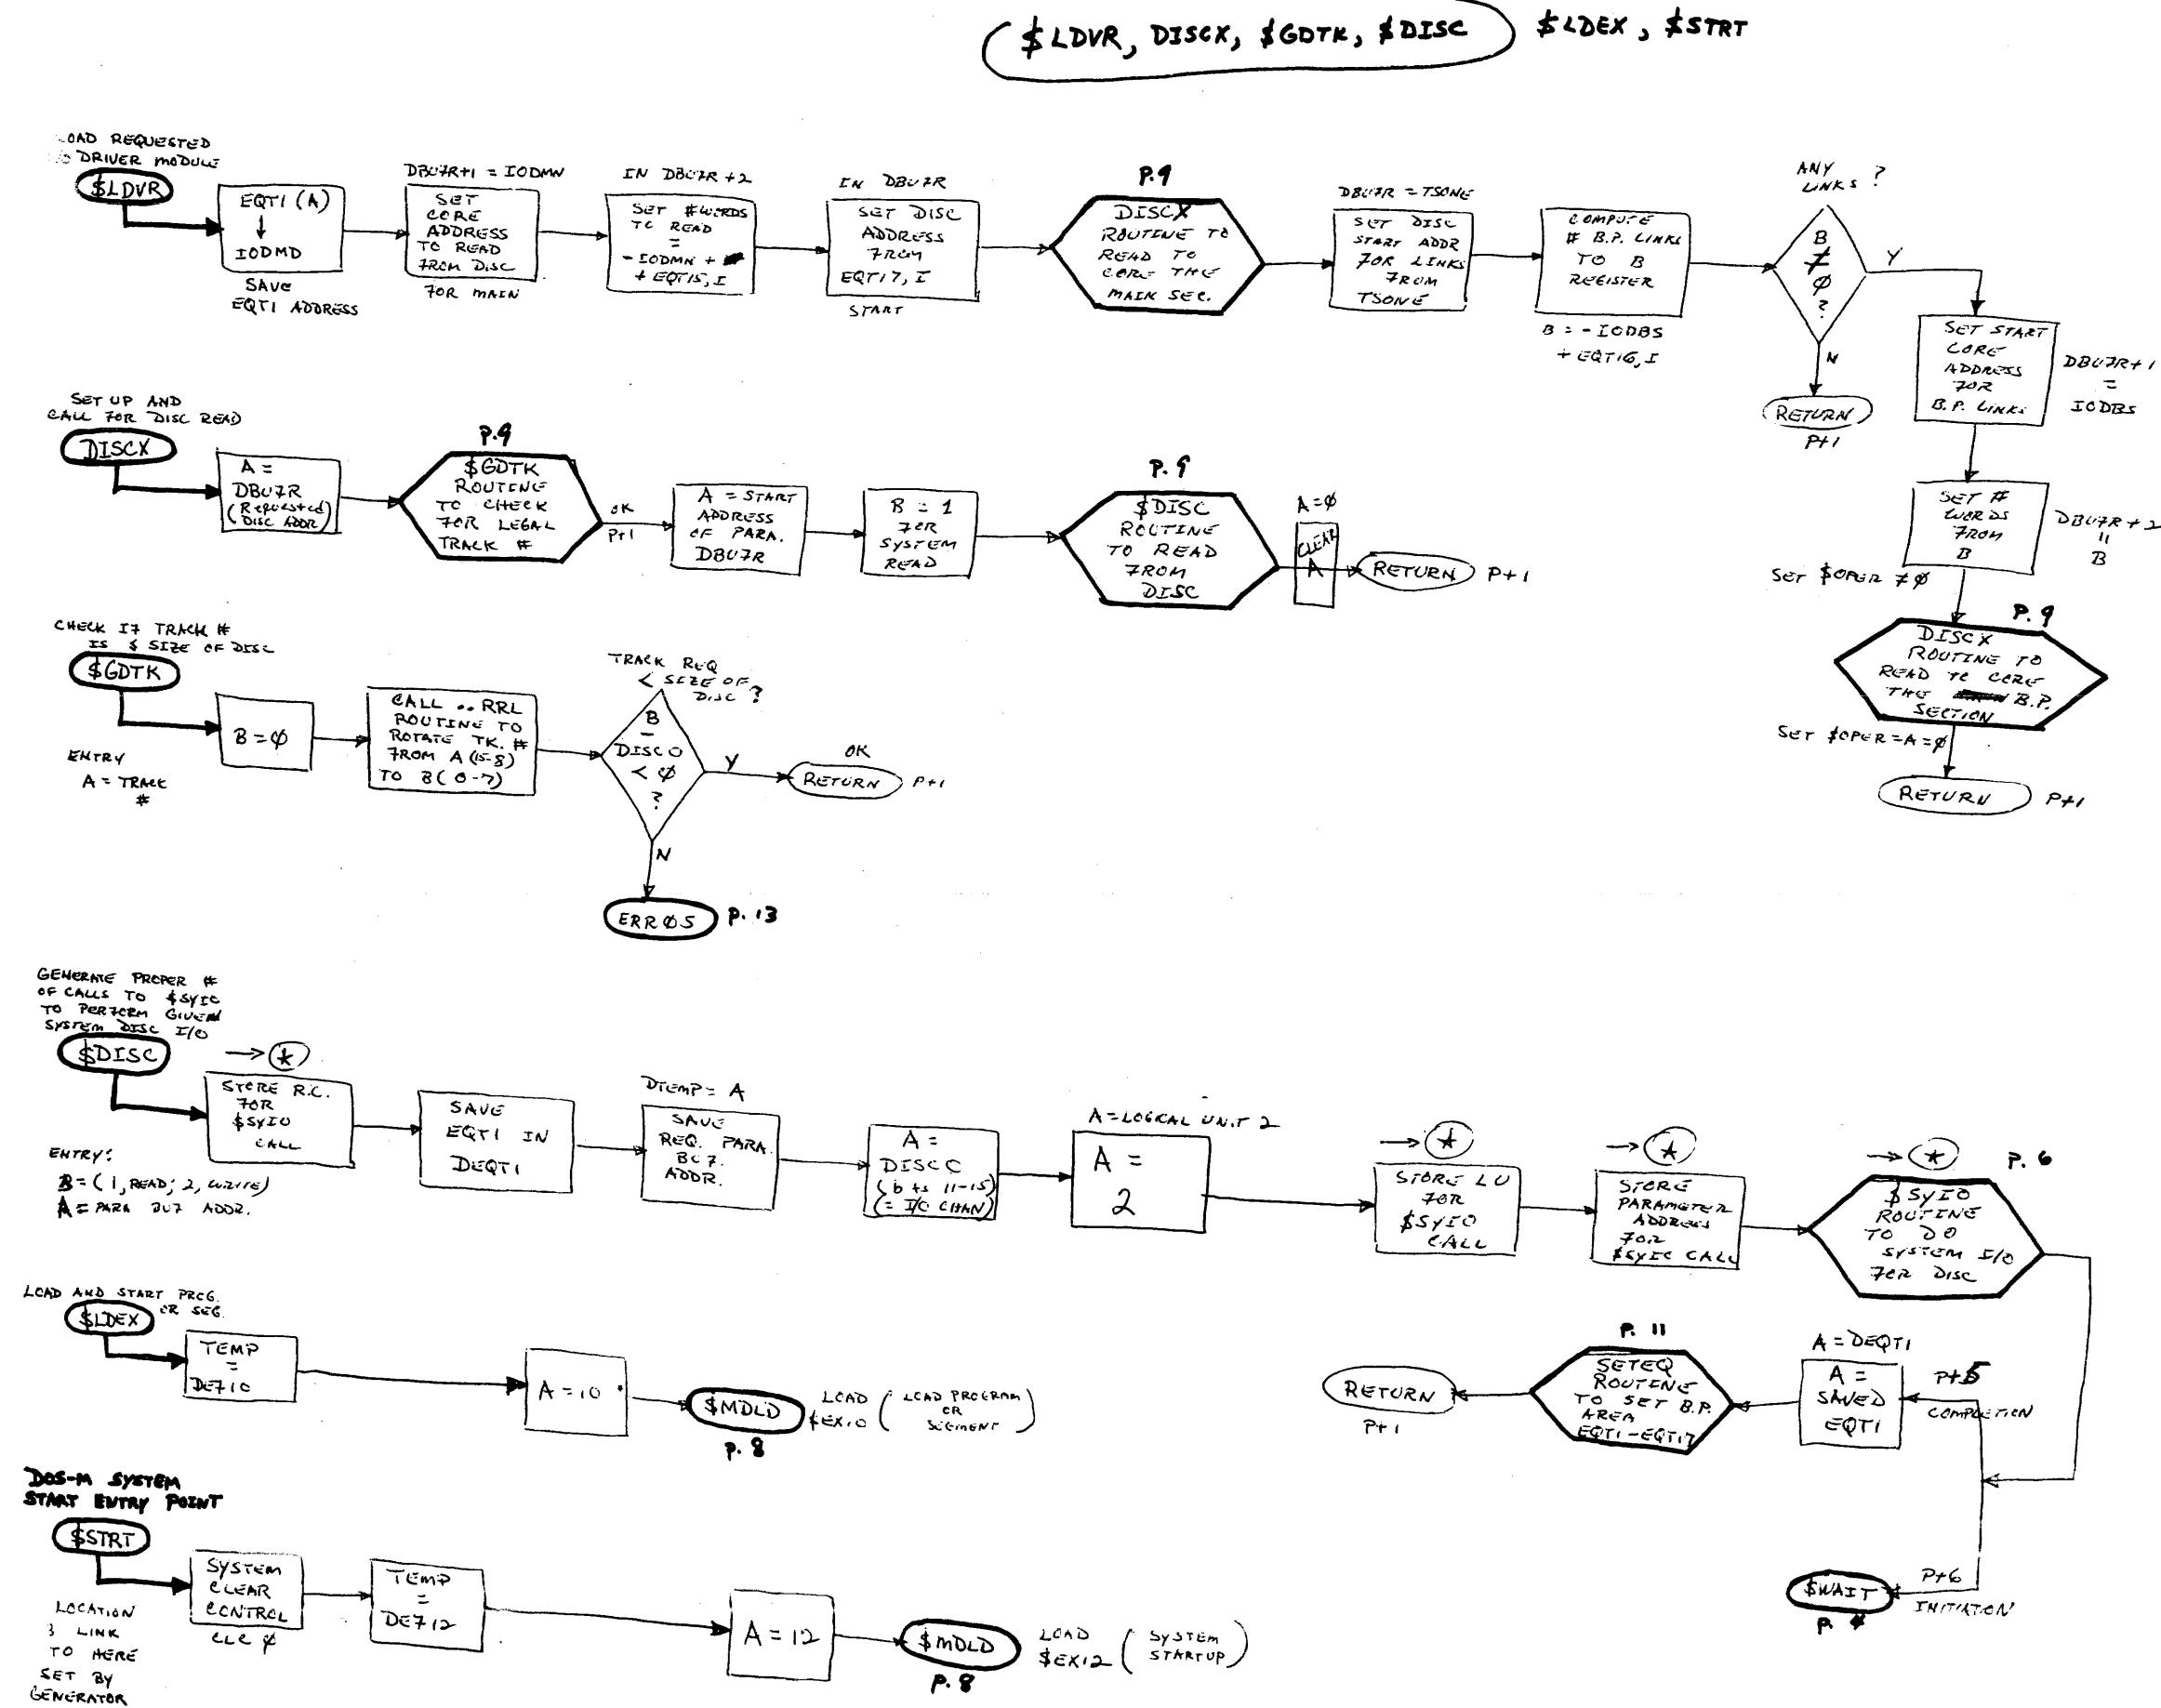


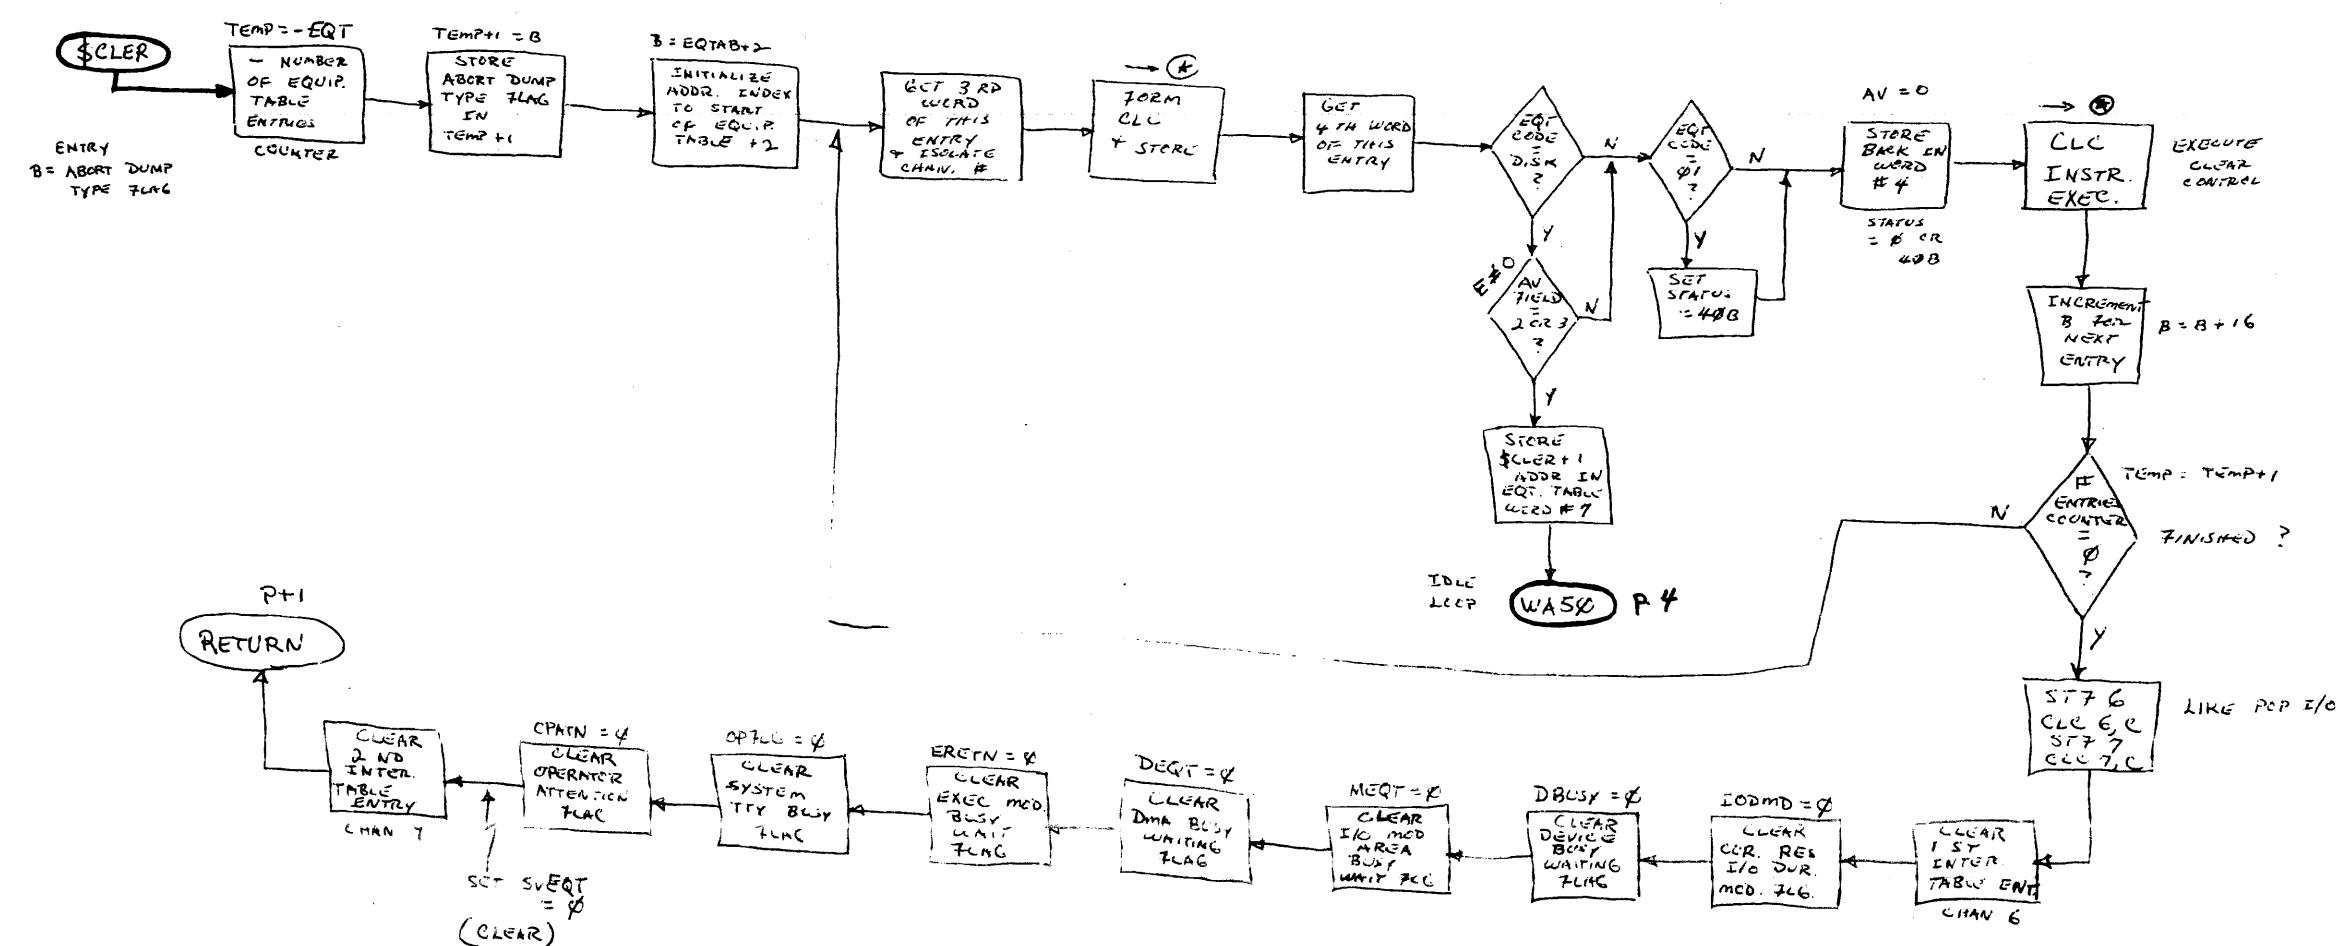
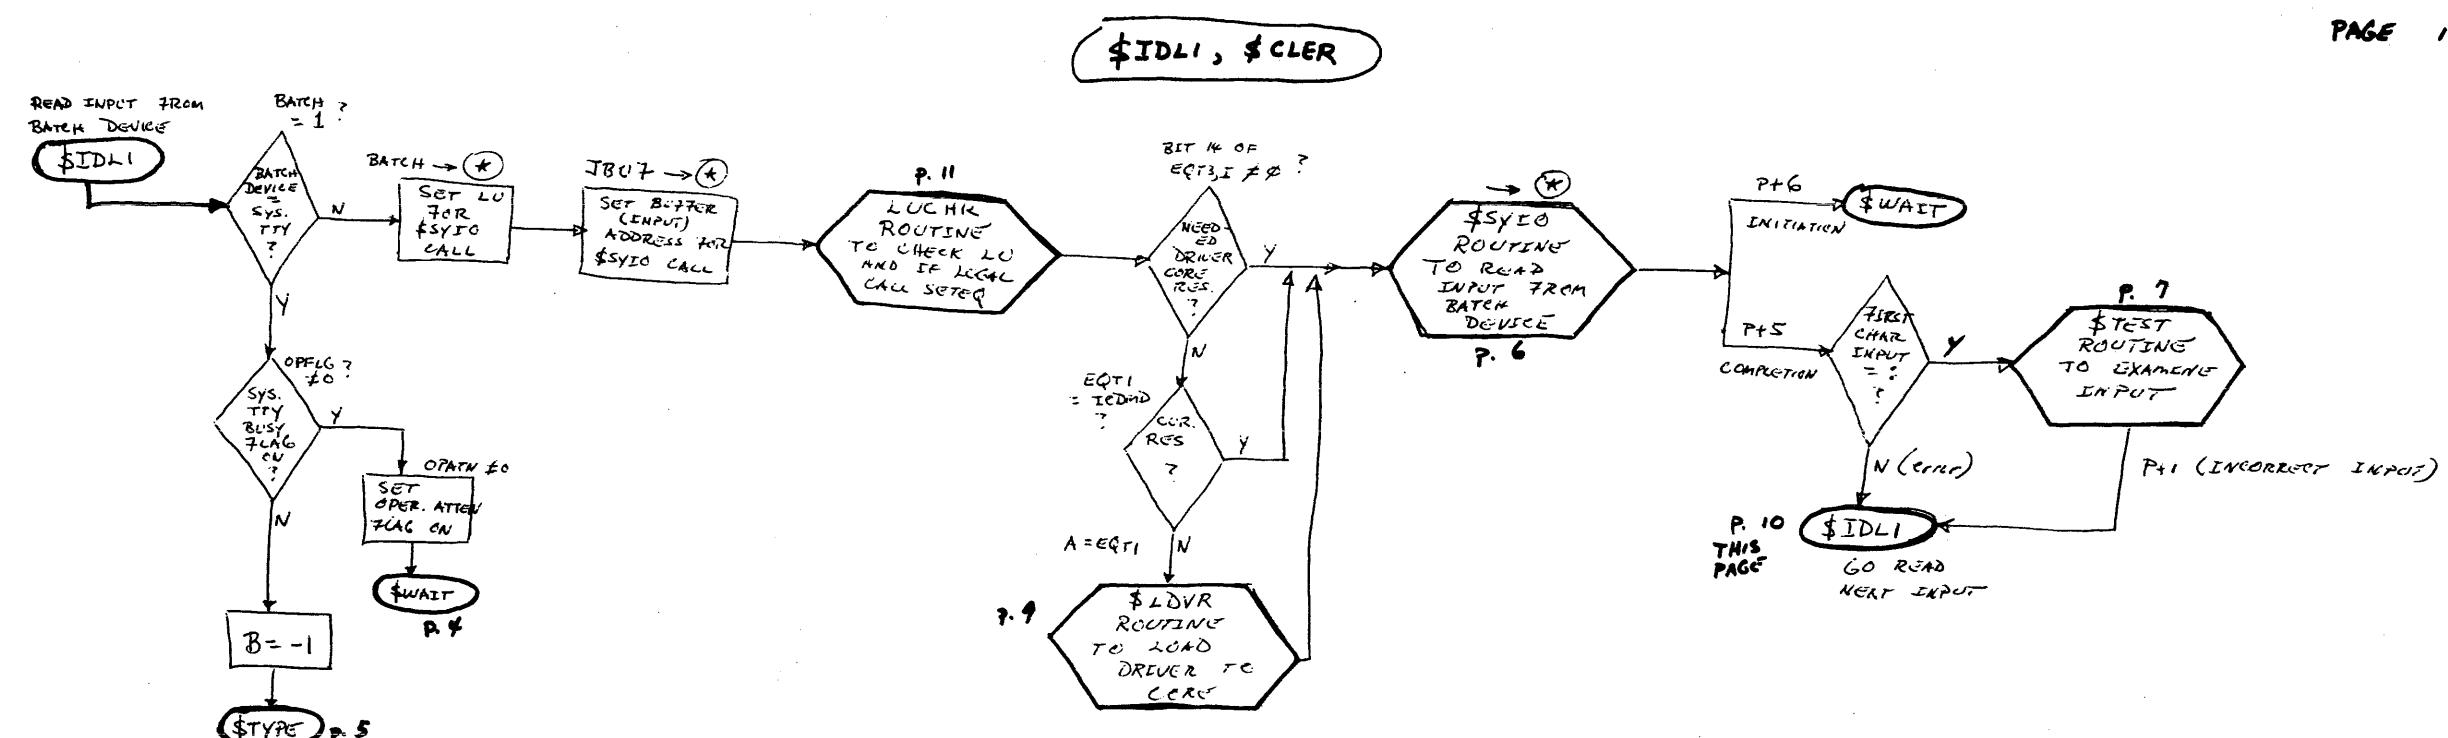


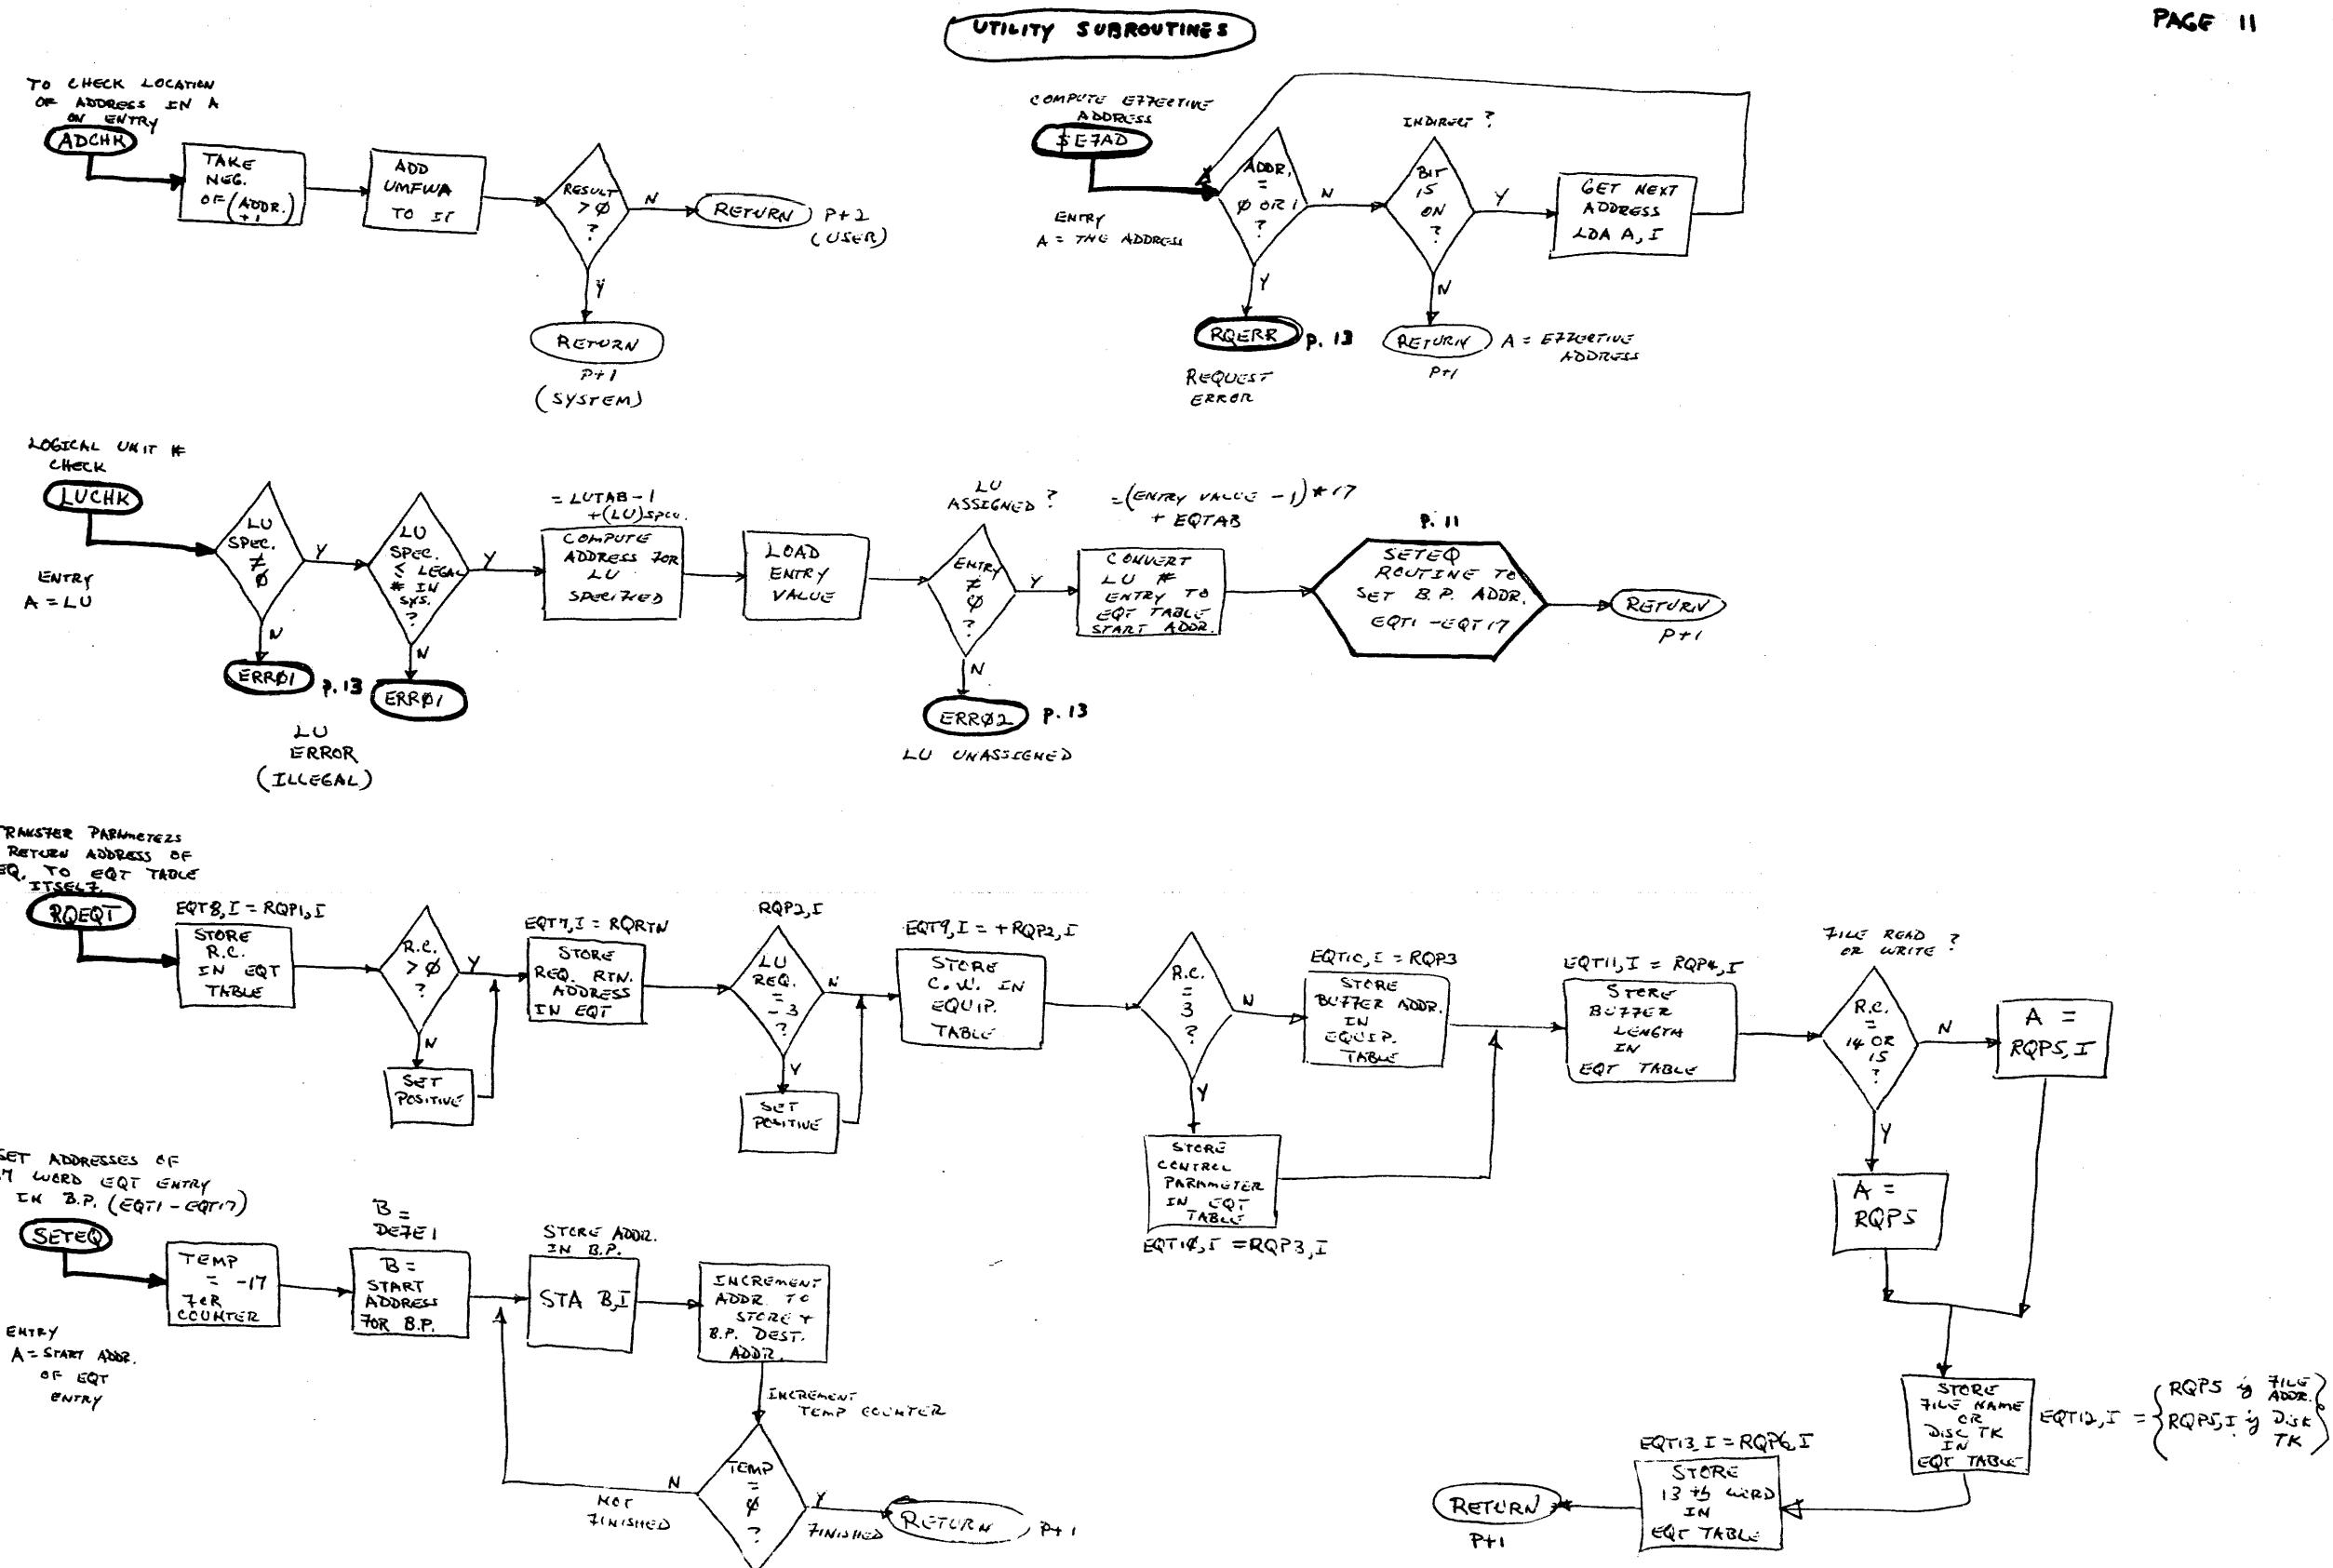


## UTILITY SUBROUTINES

PAGE


12

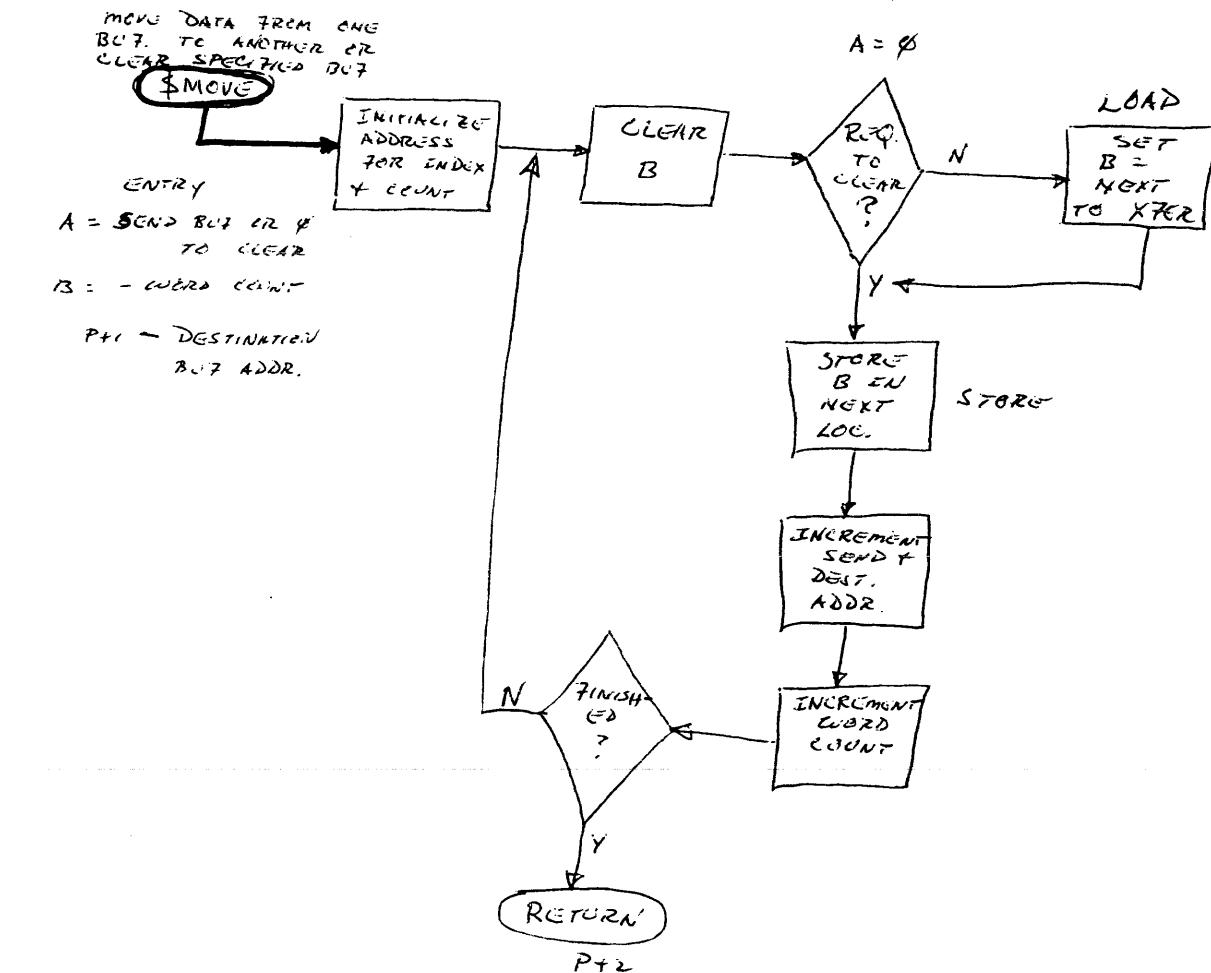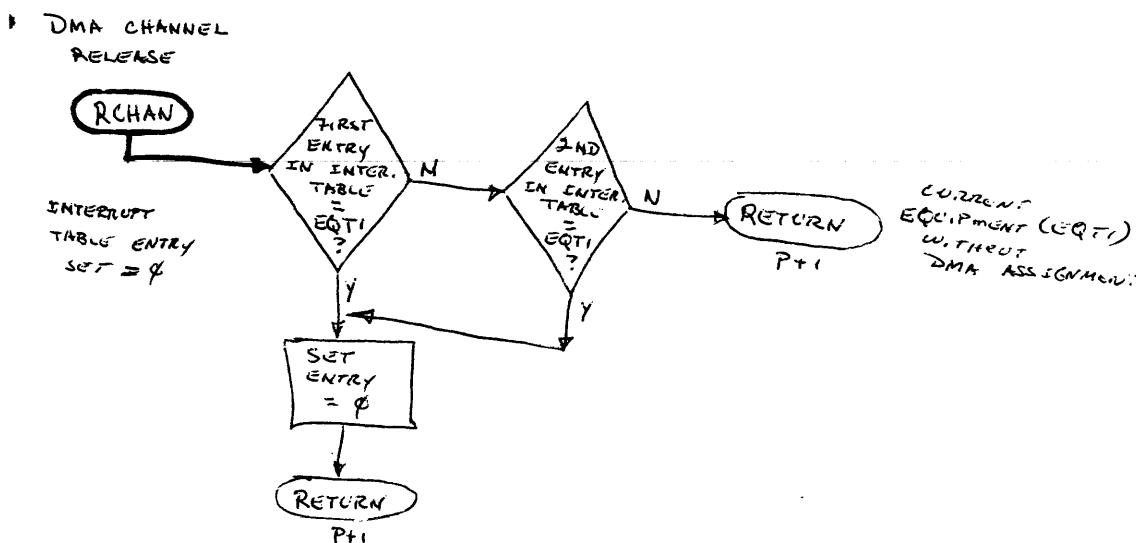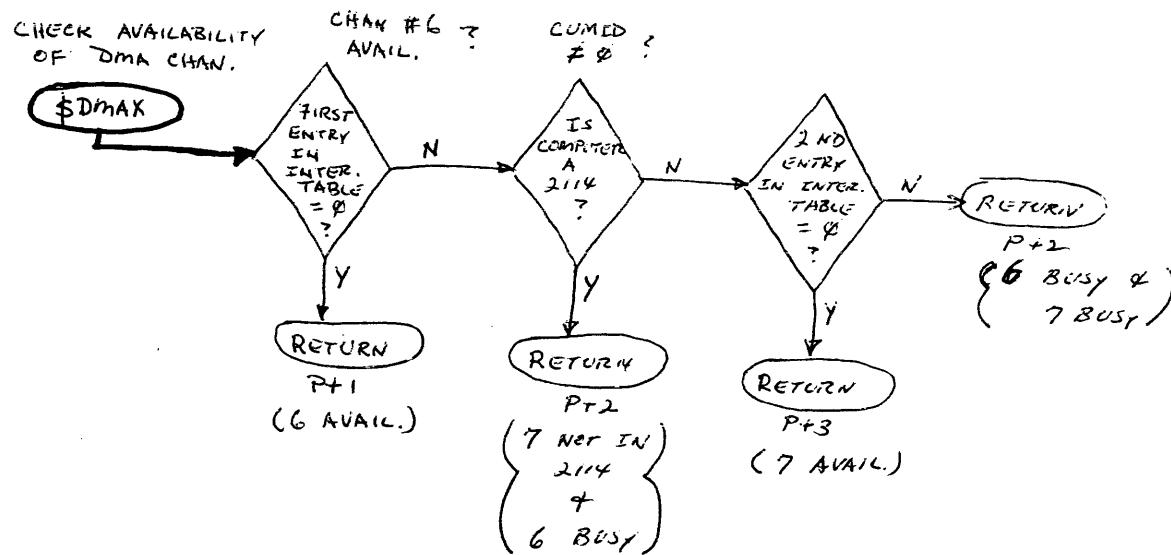



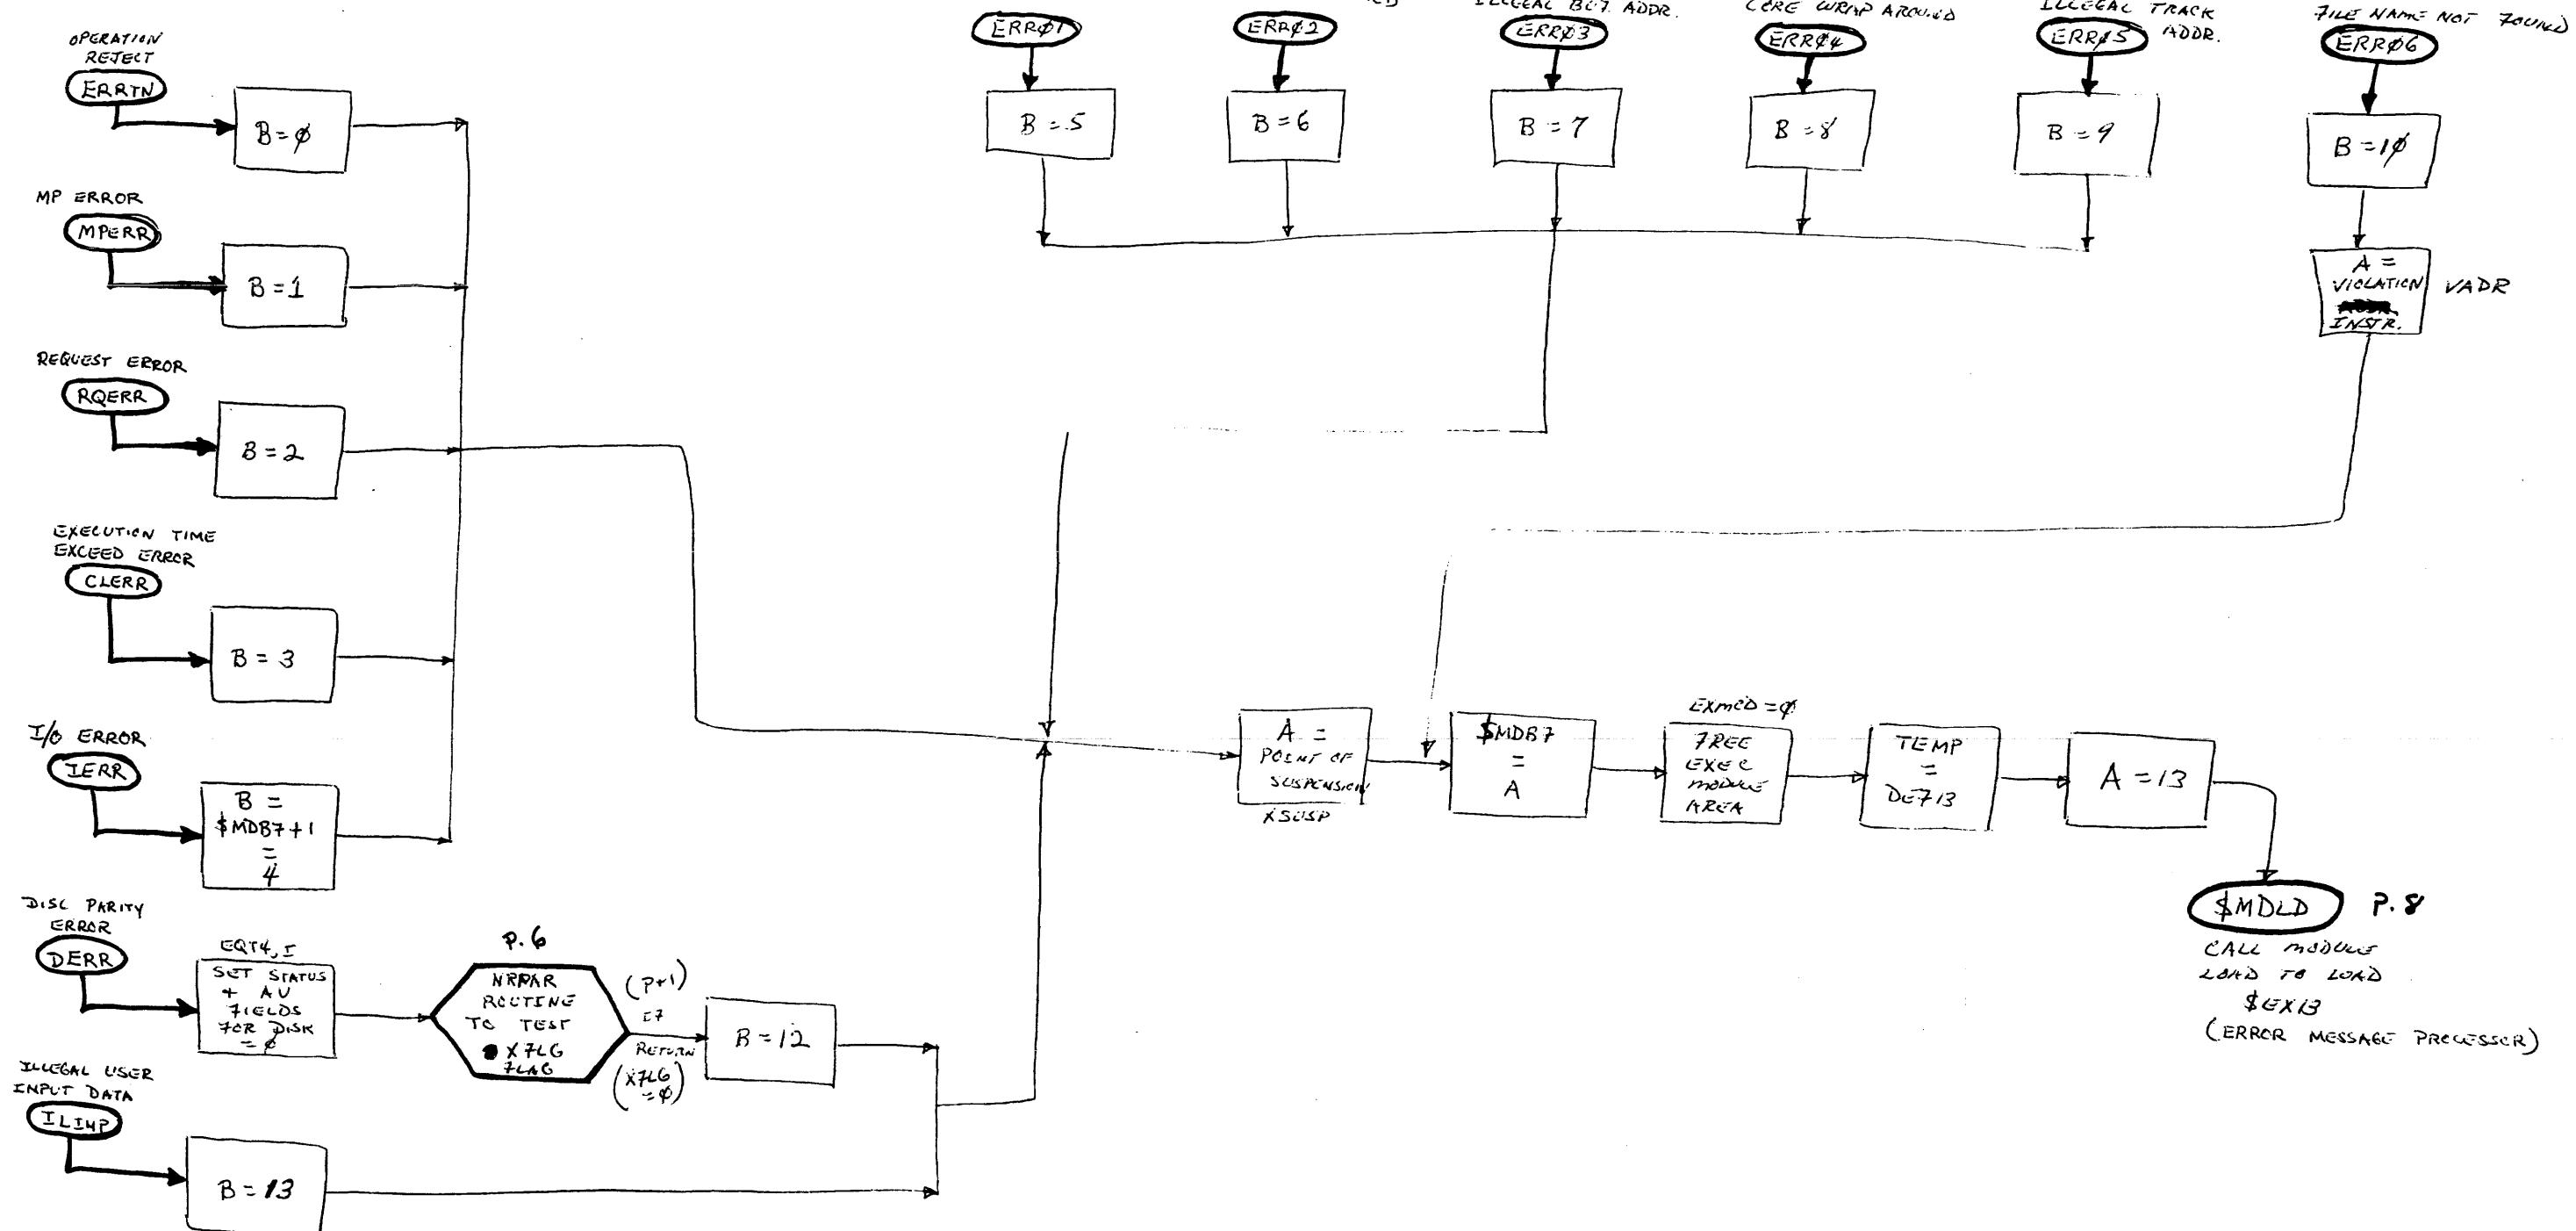



ERROR ENTRY POINTS


\$EX01 (DISC TRACK STATUS)

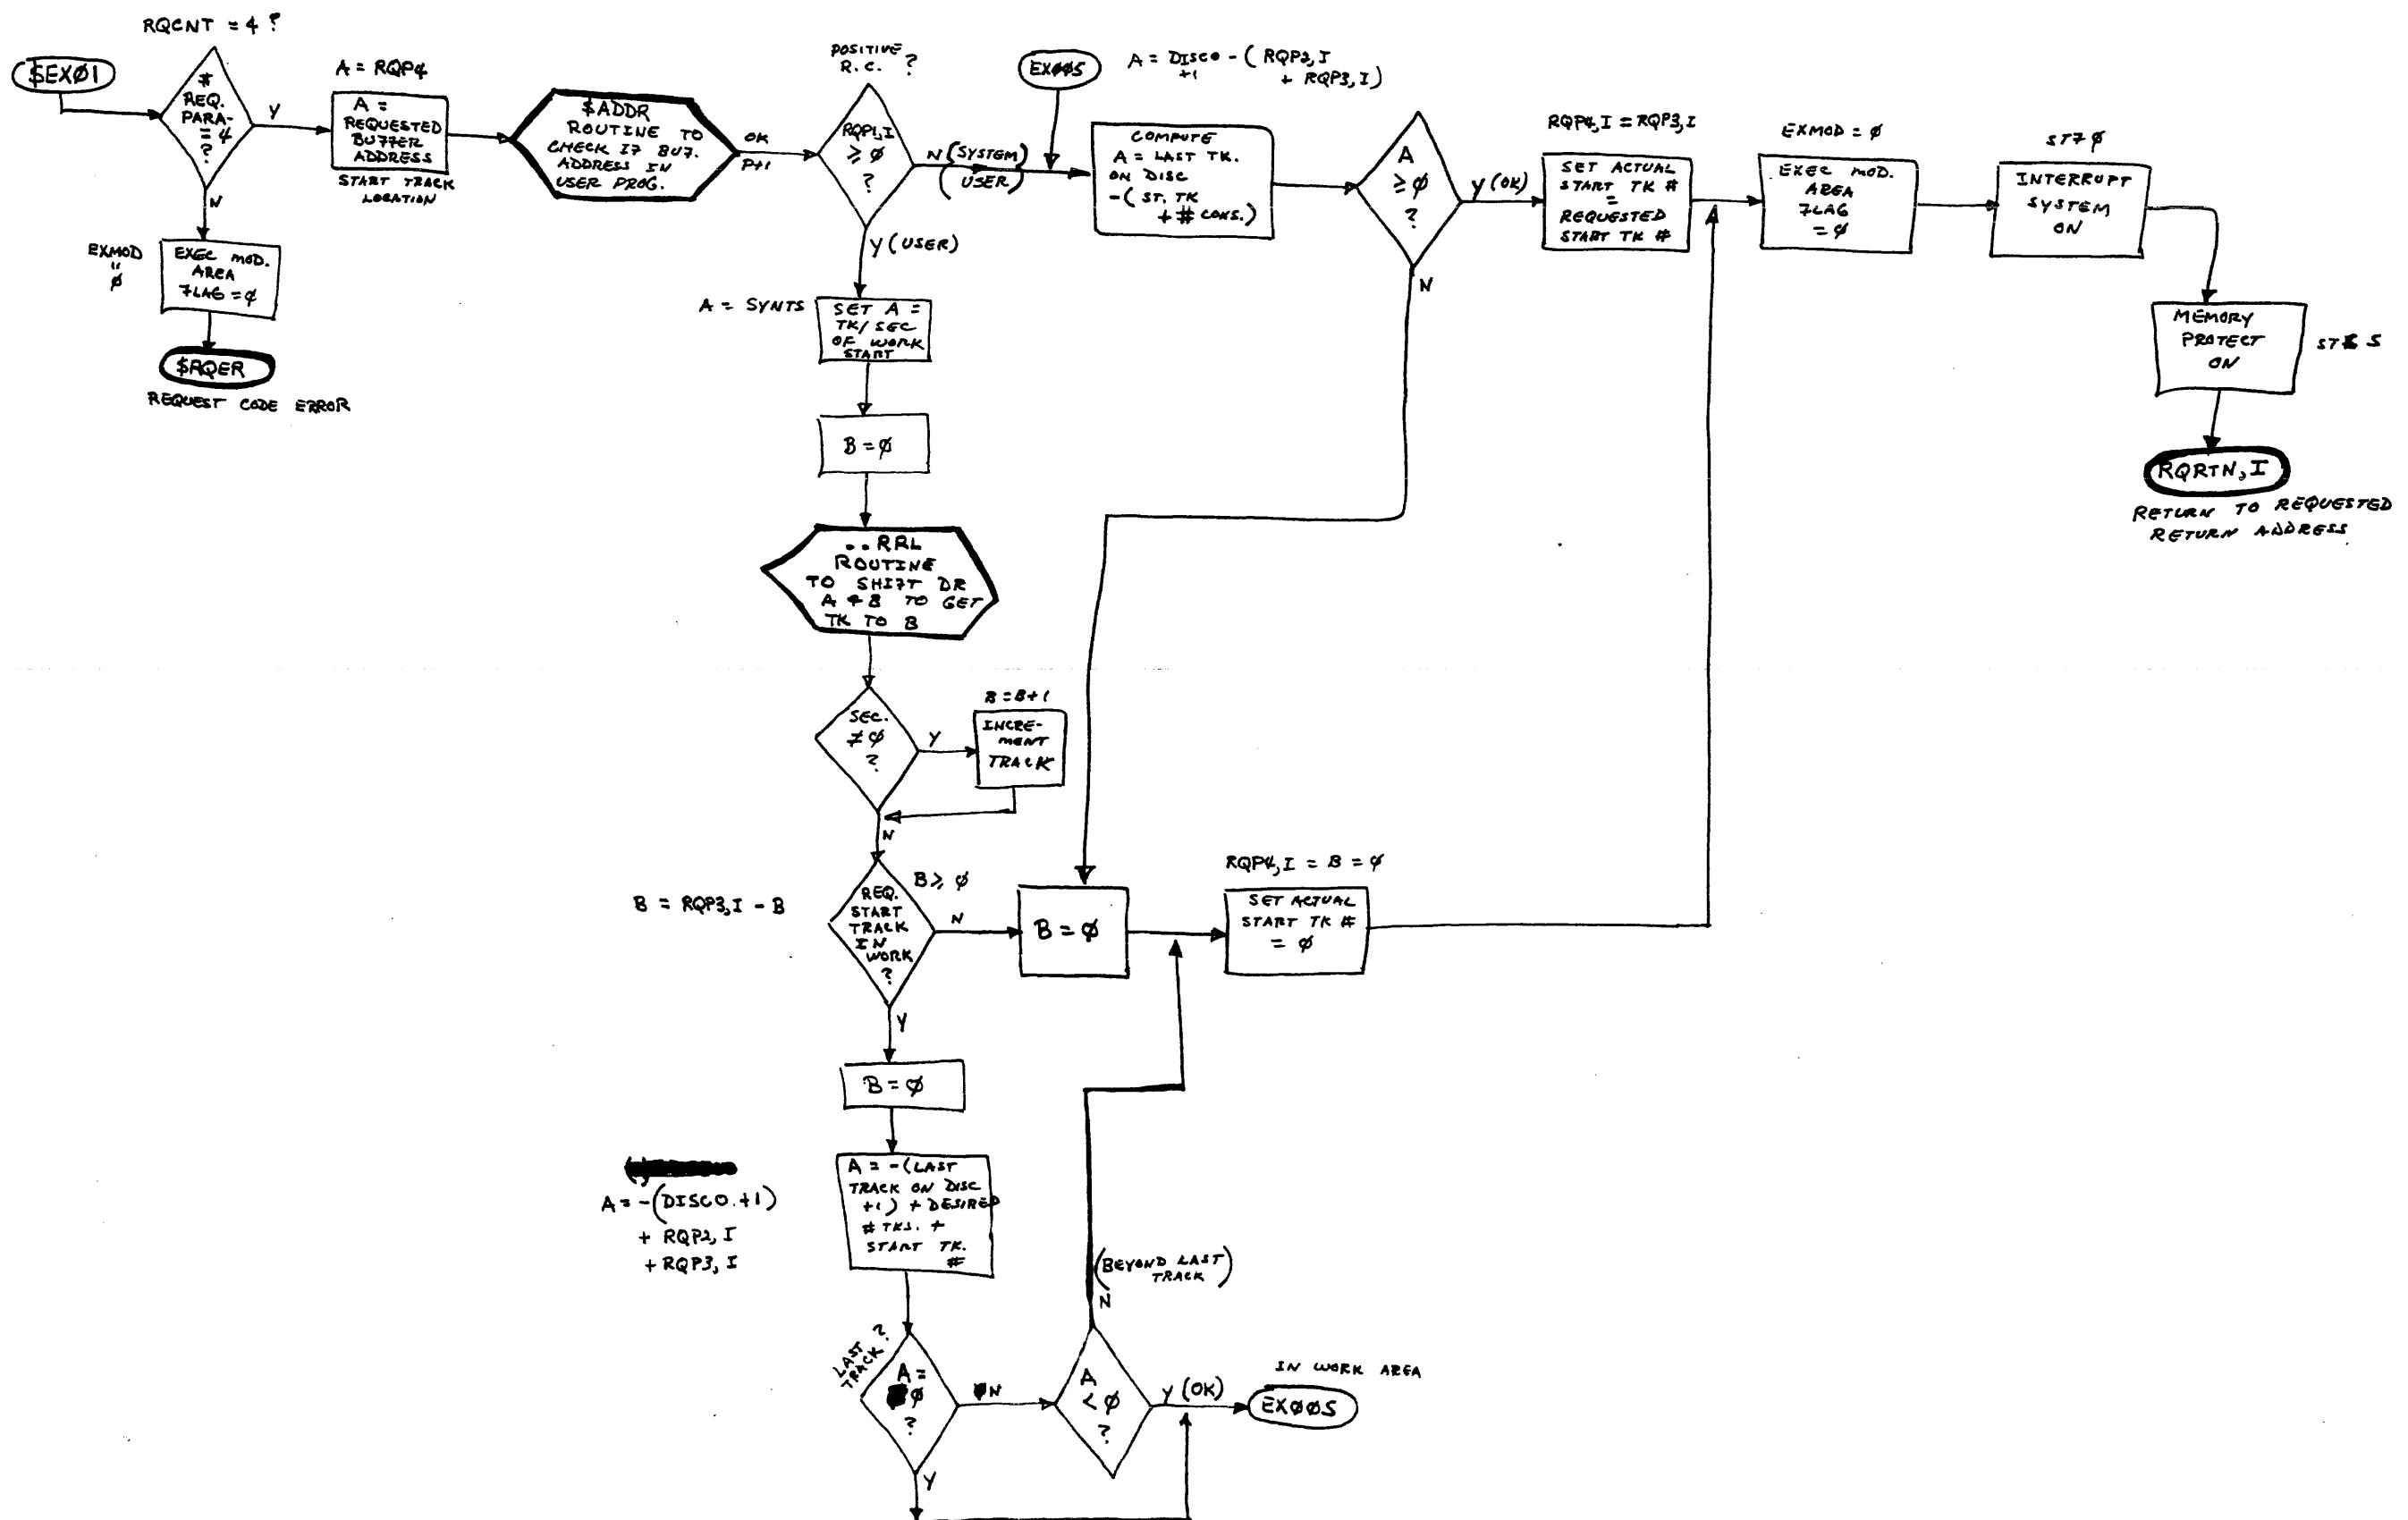


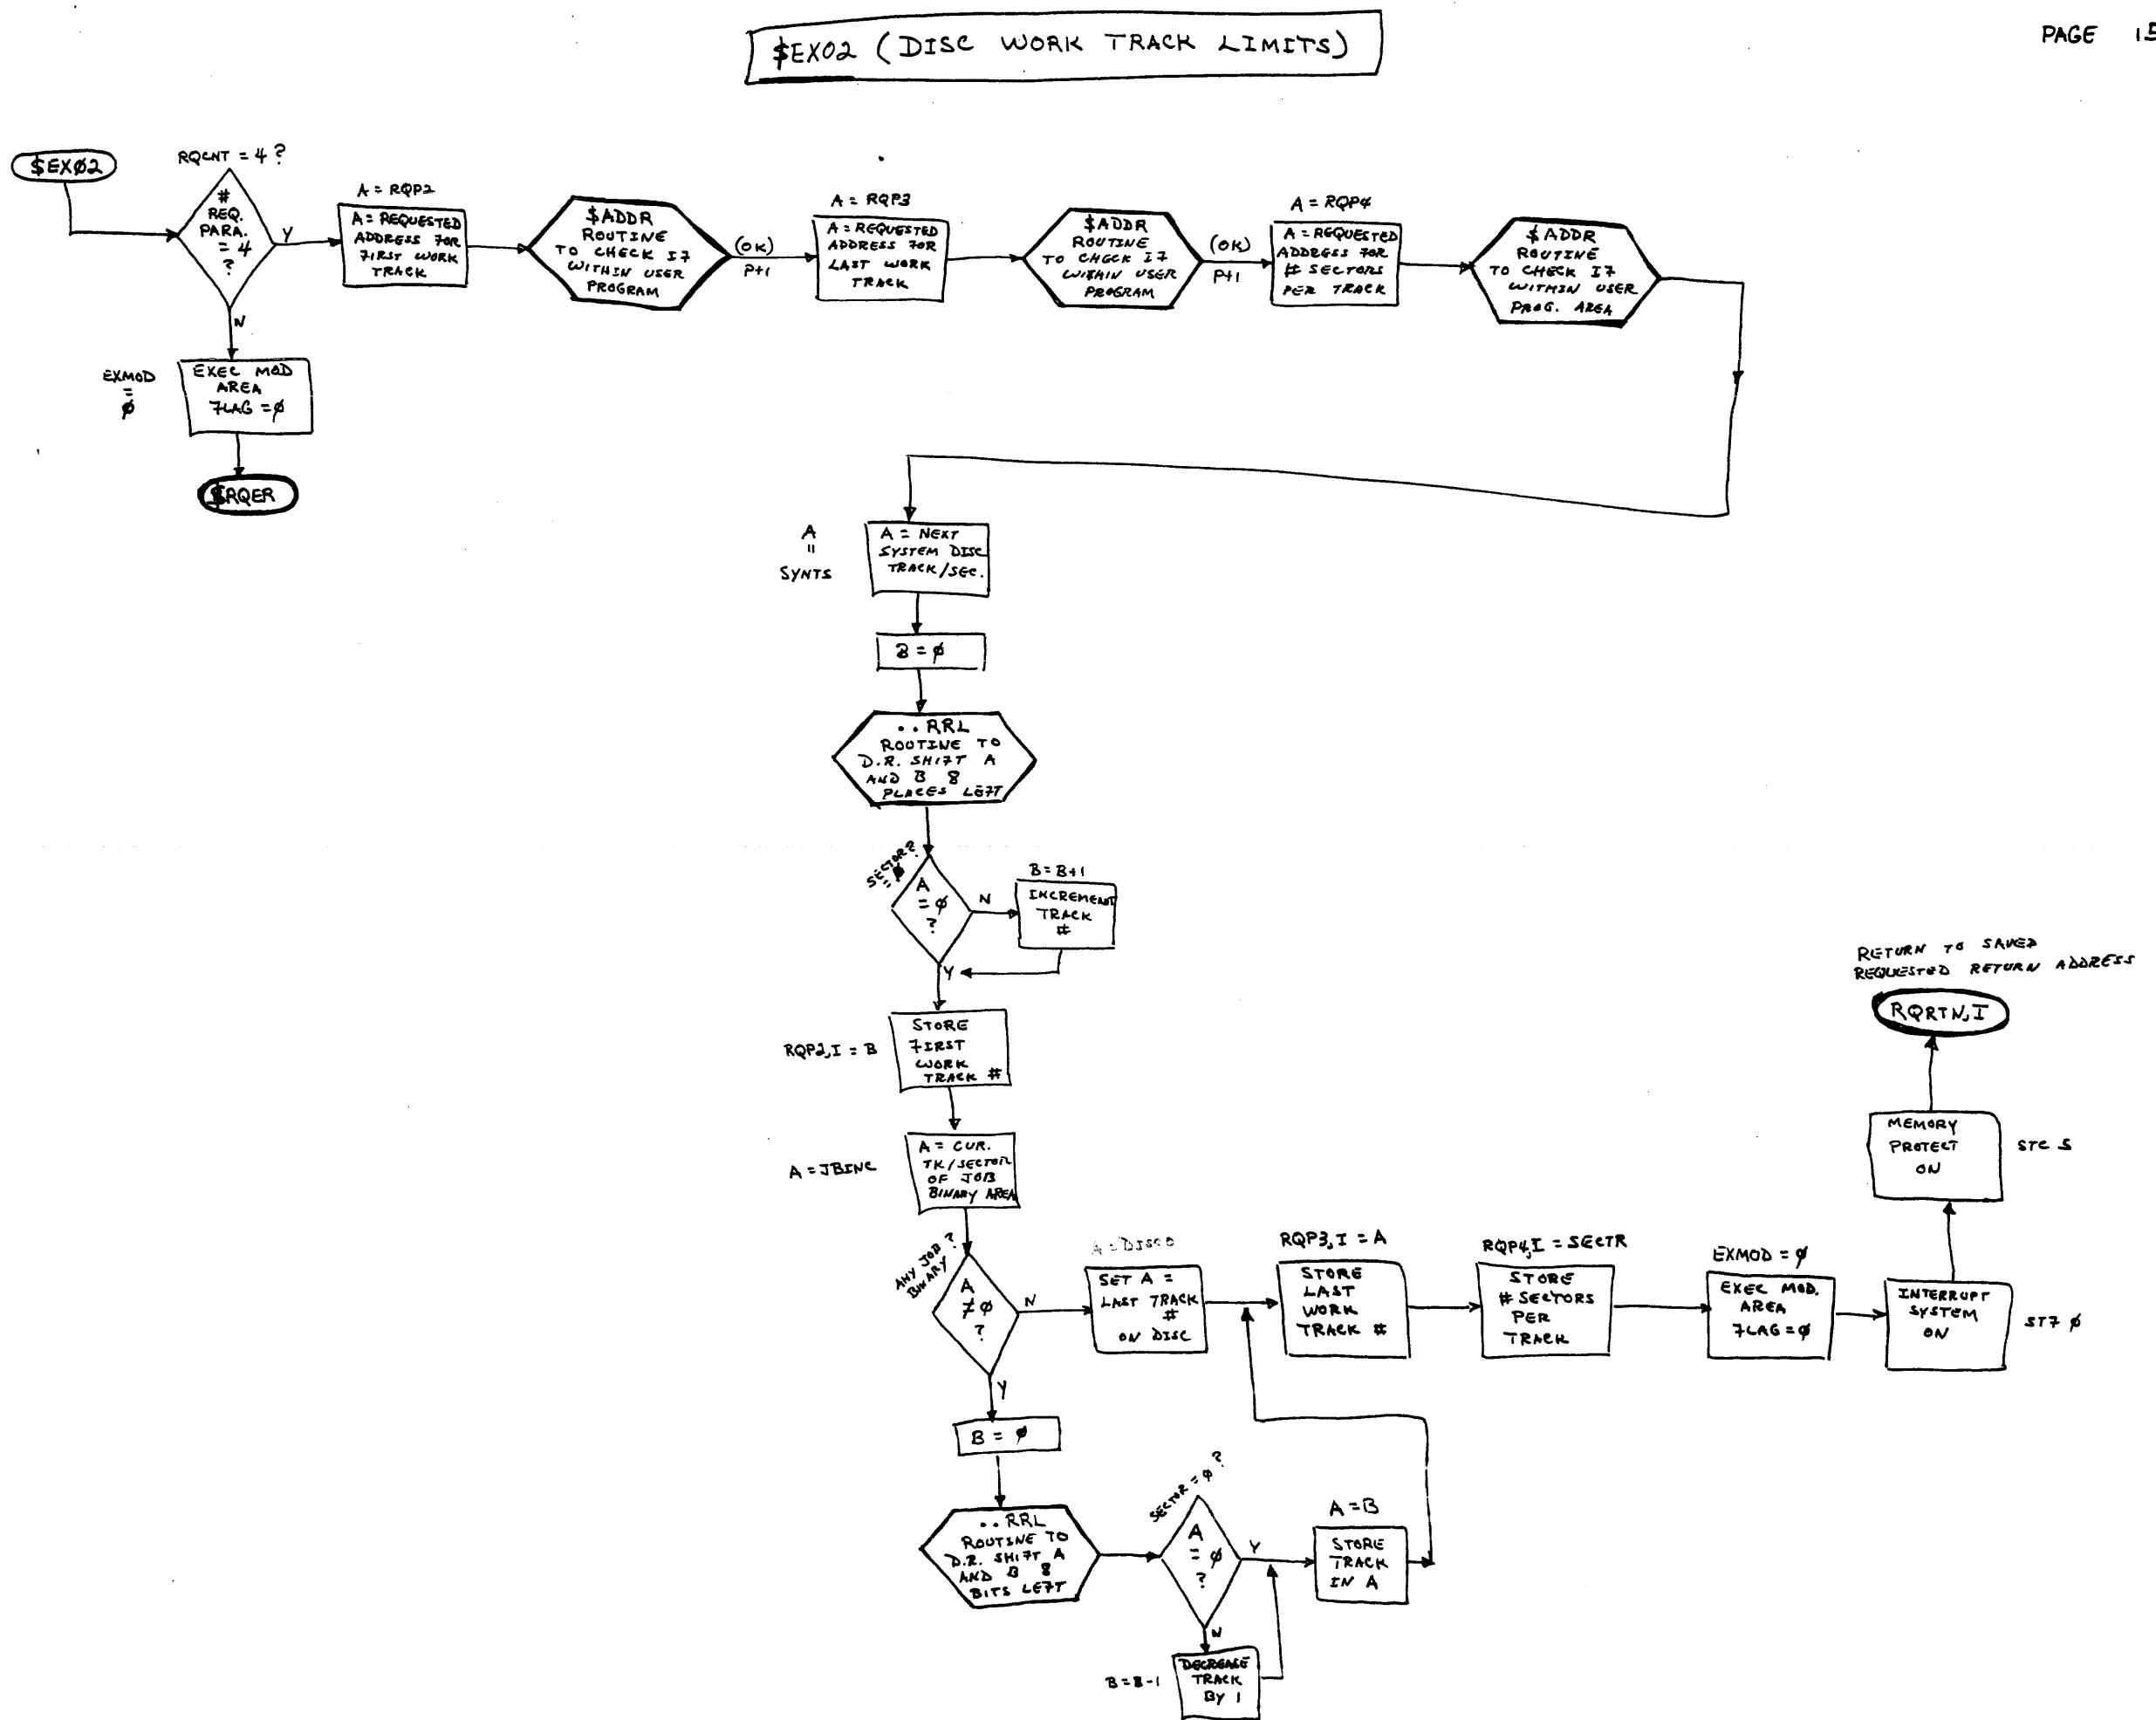


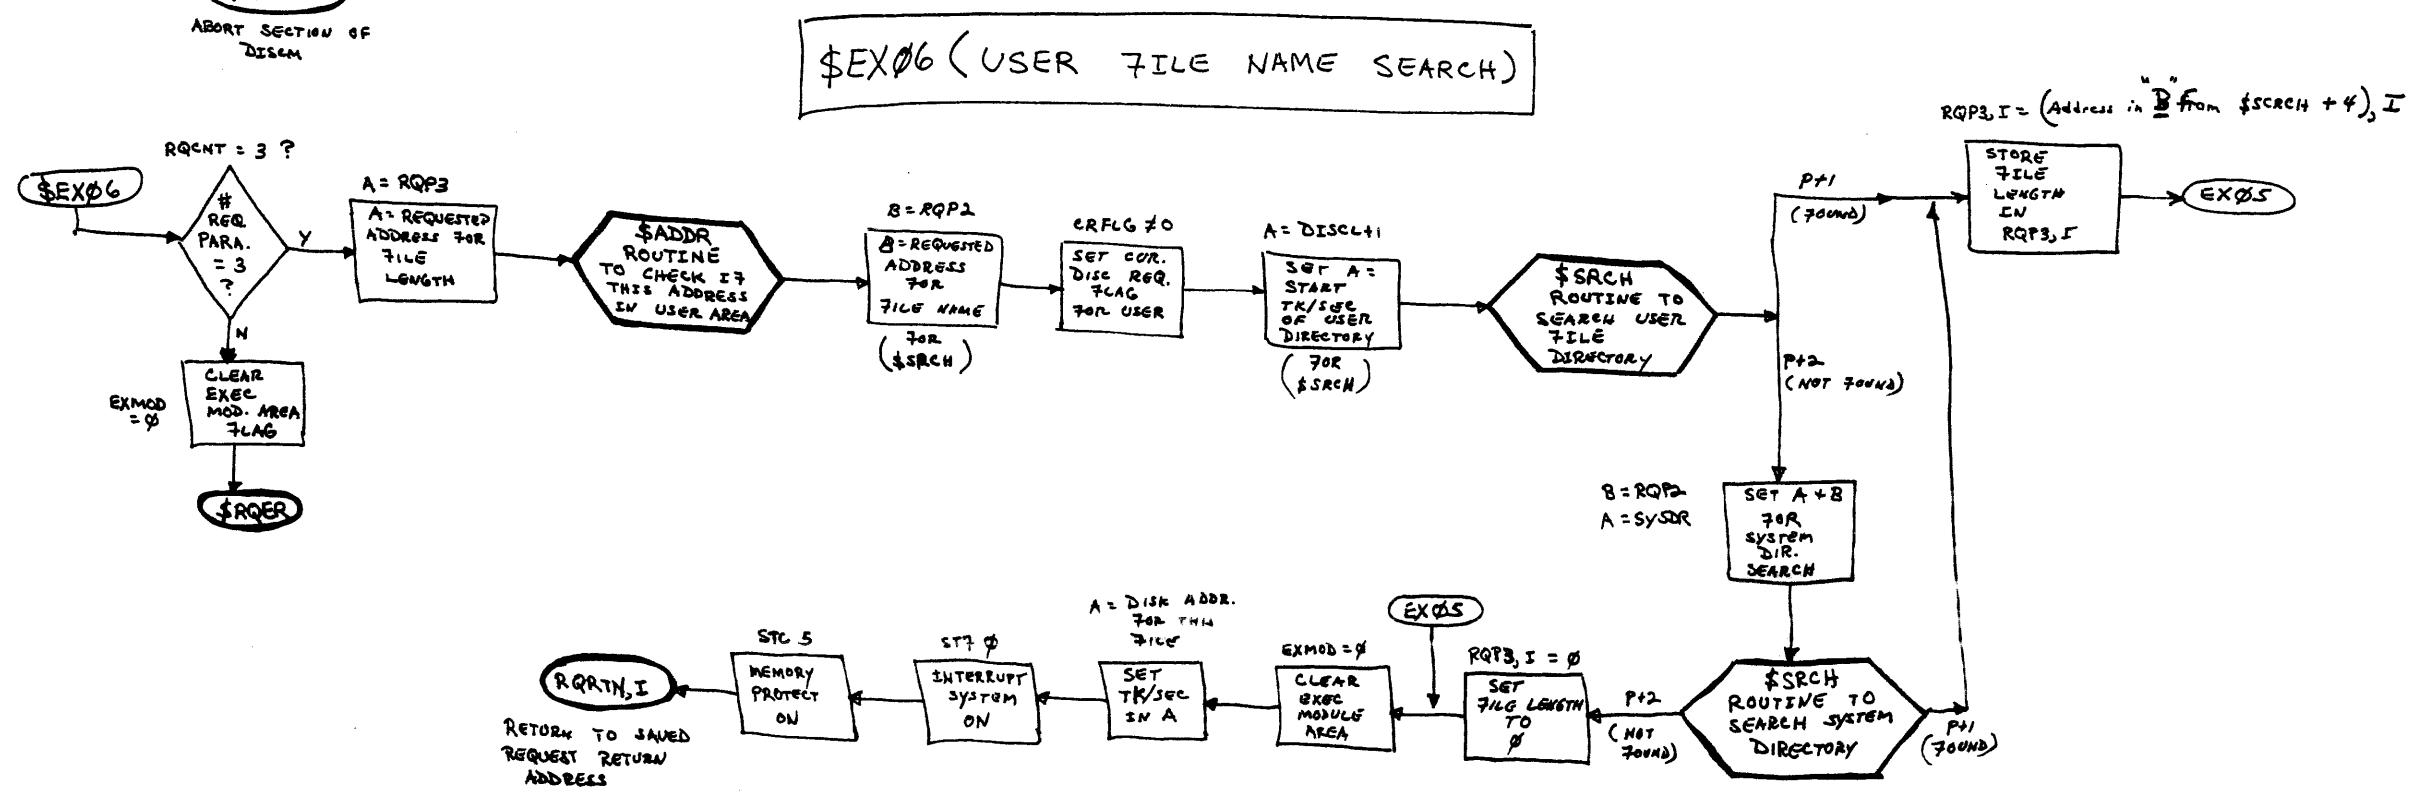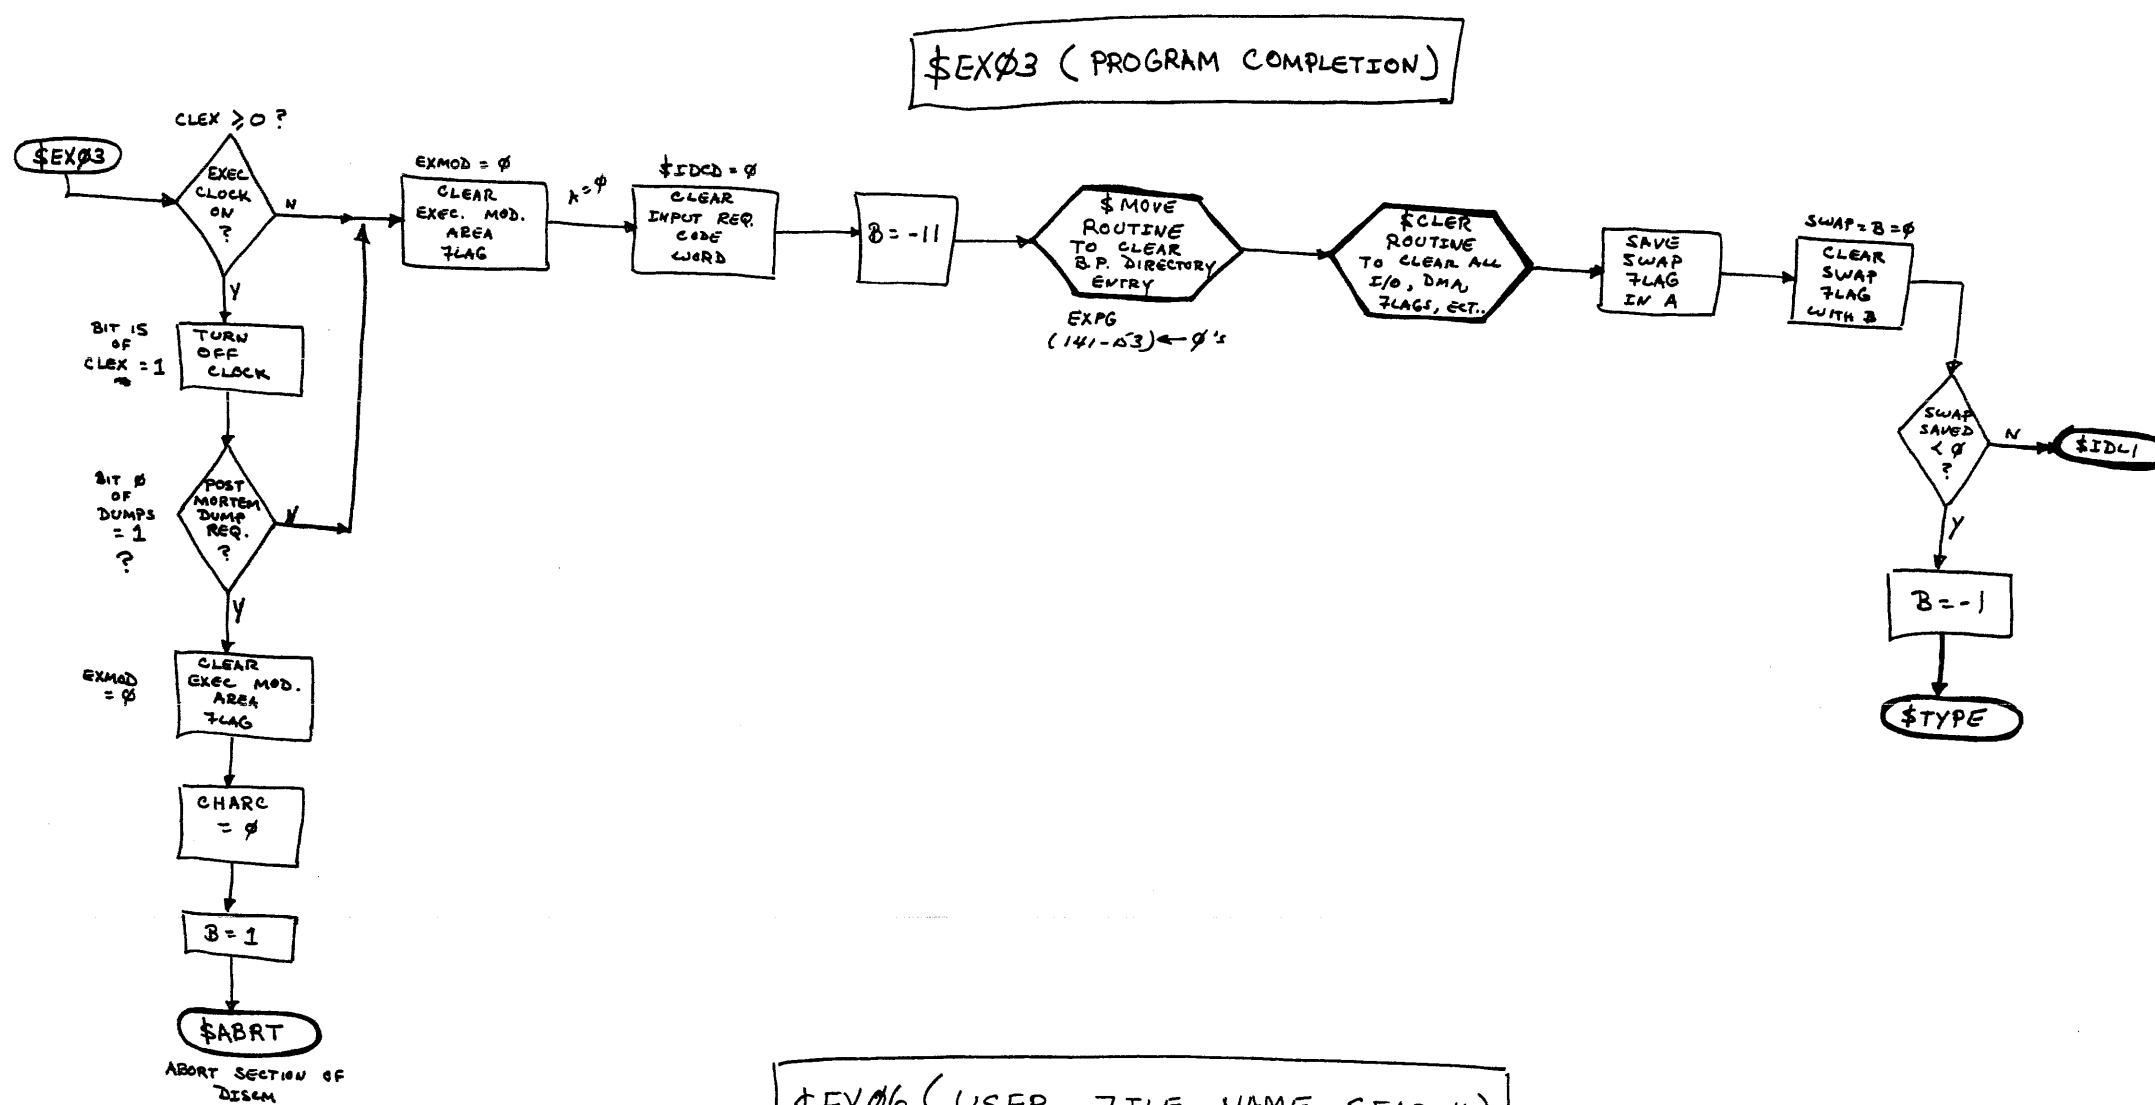


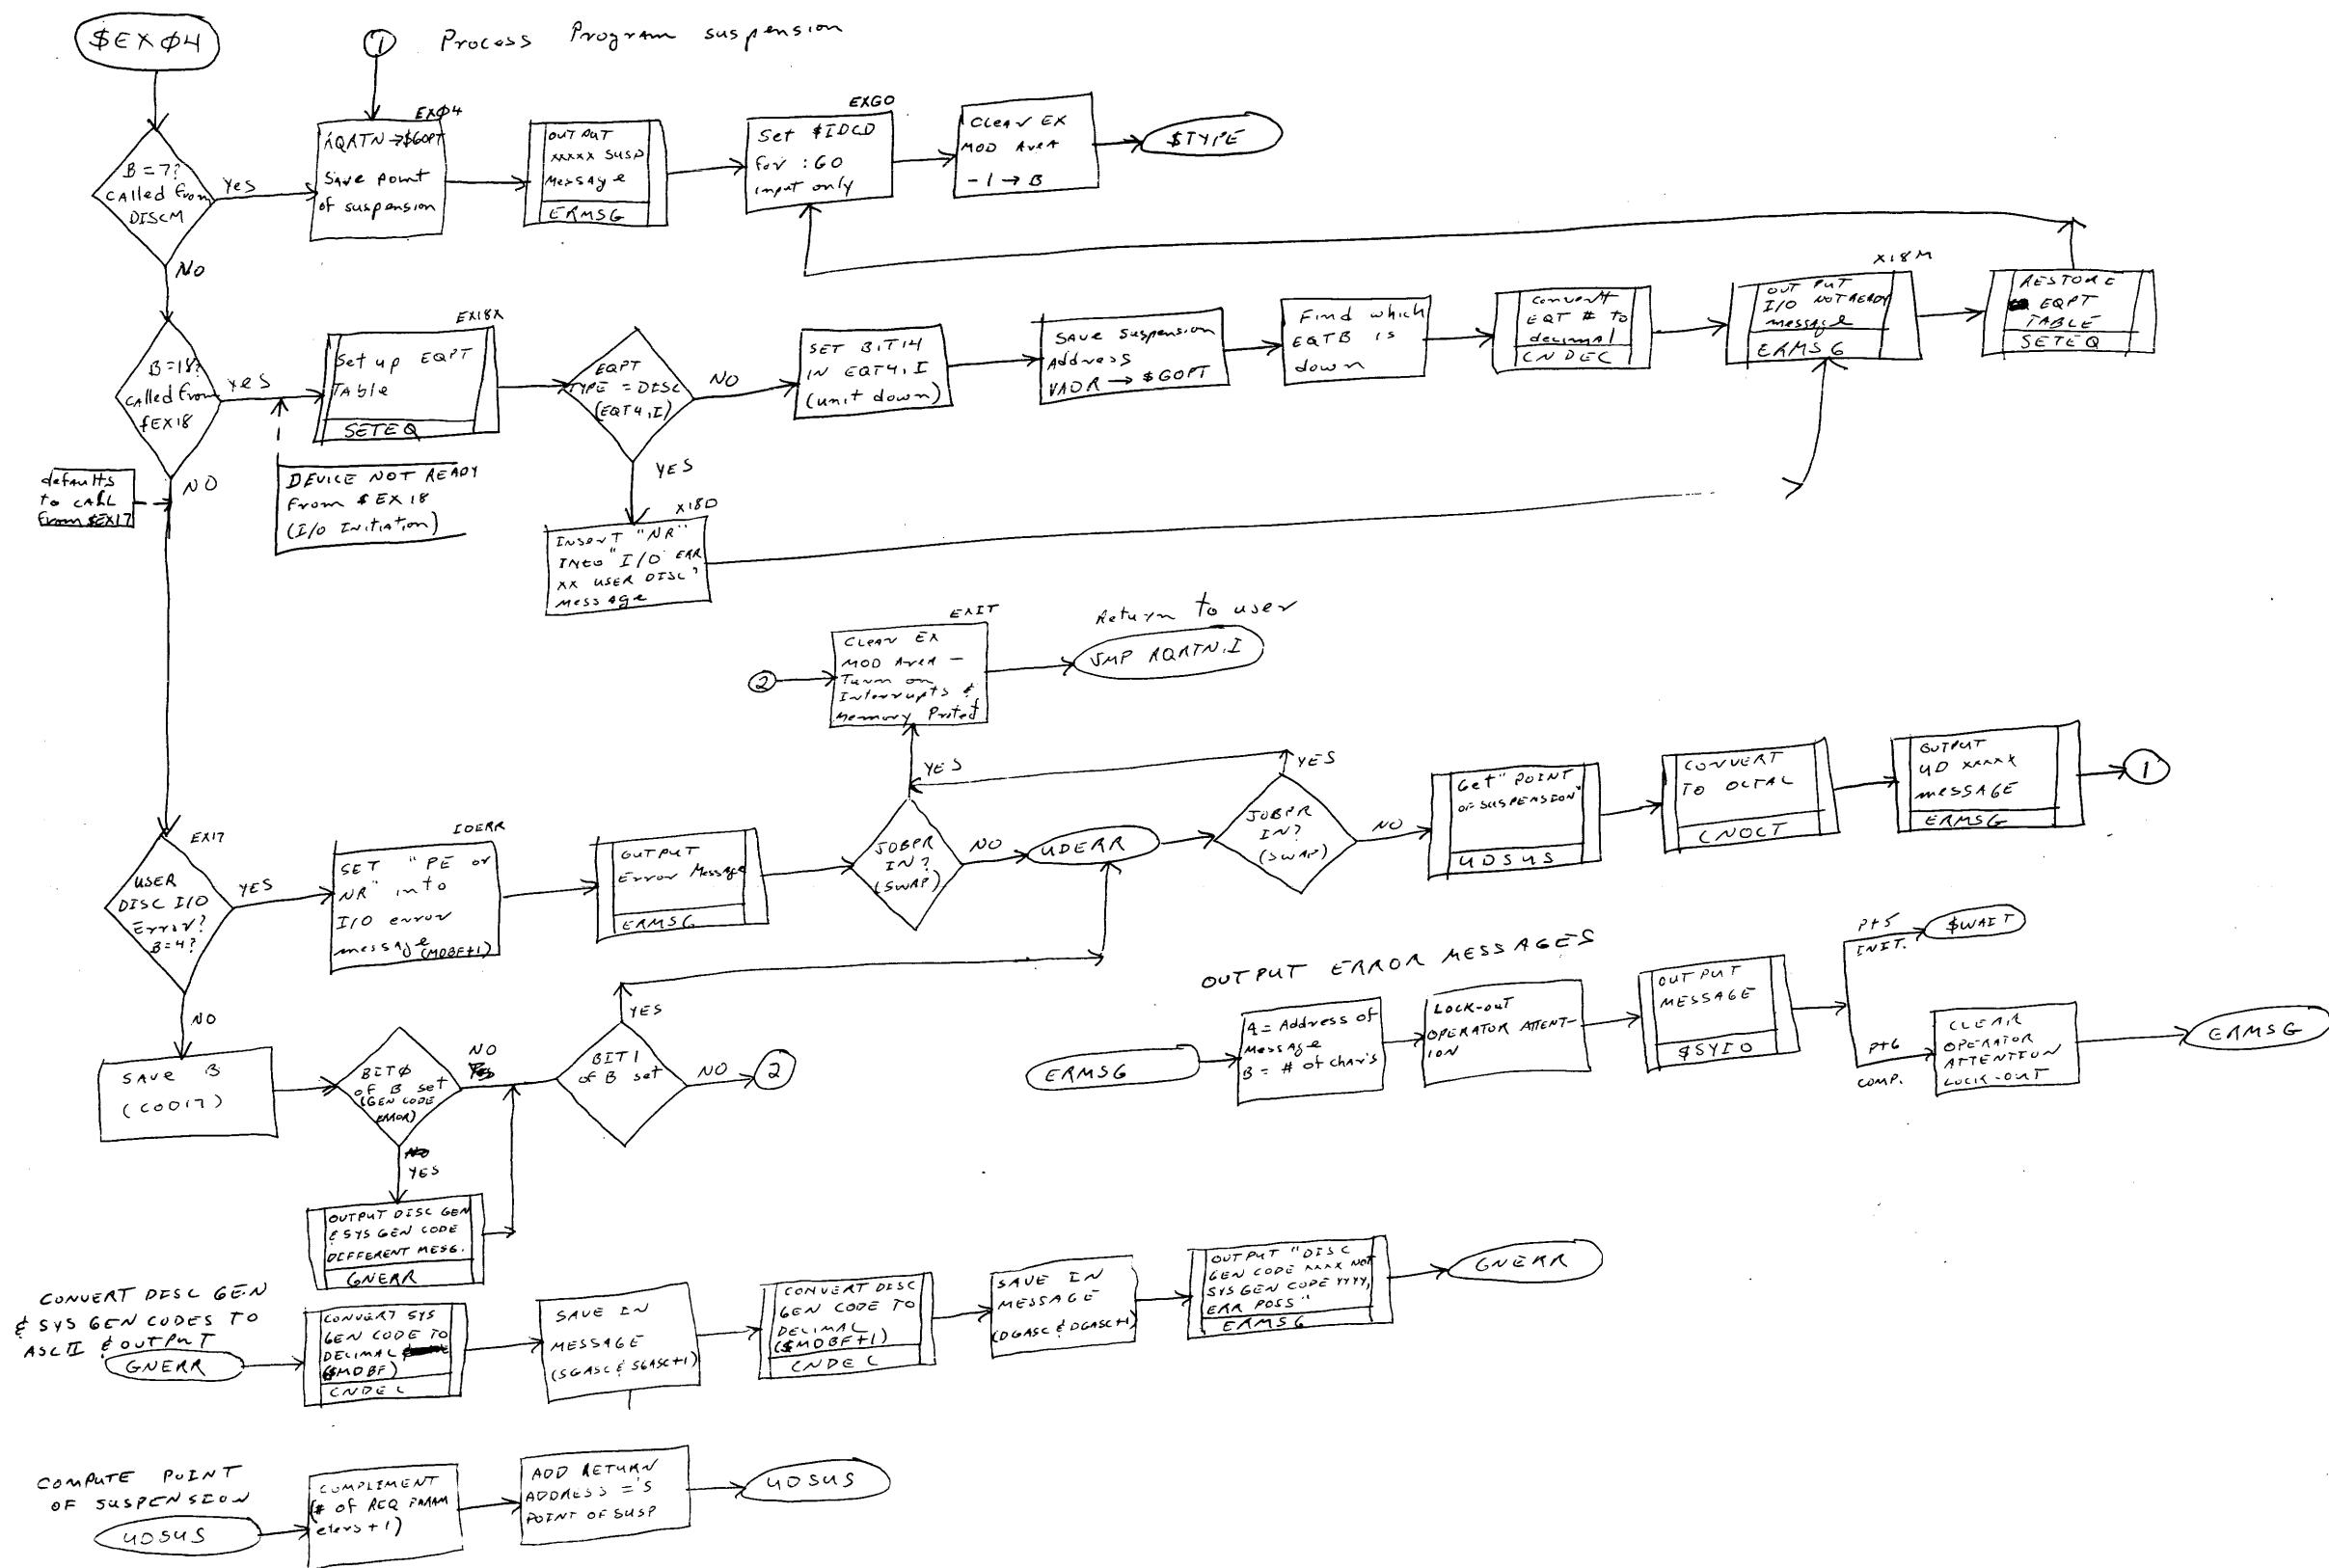


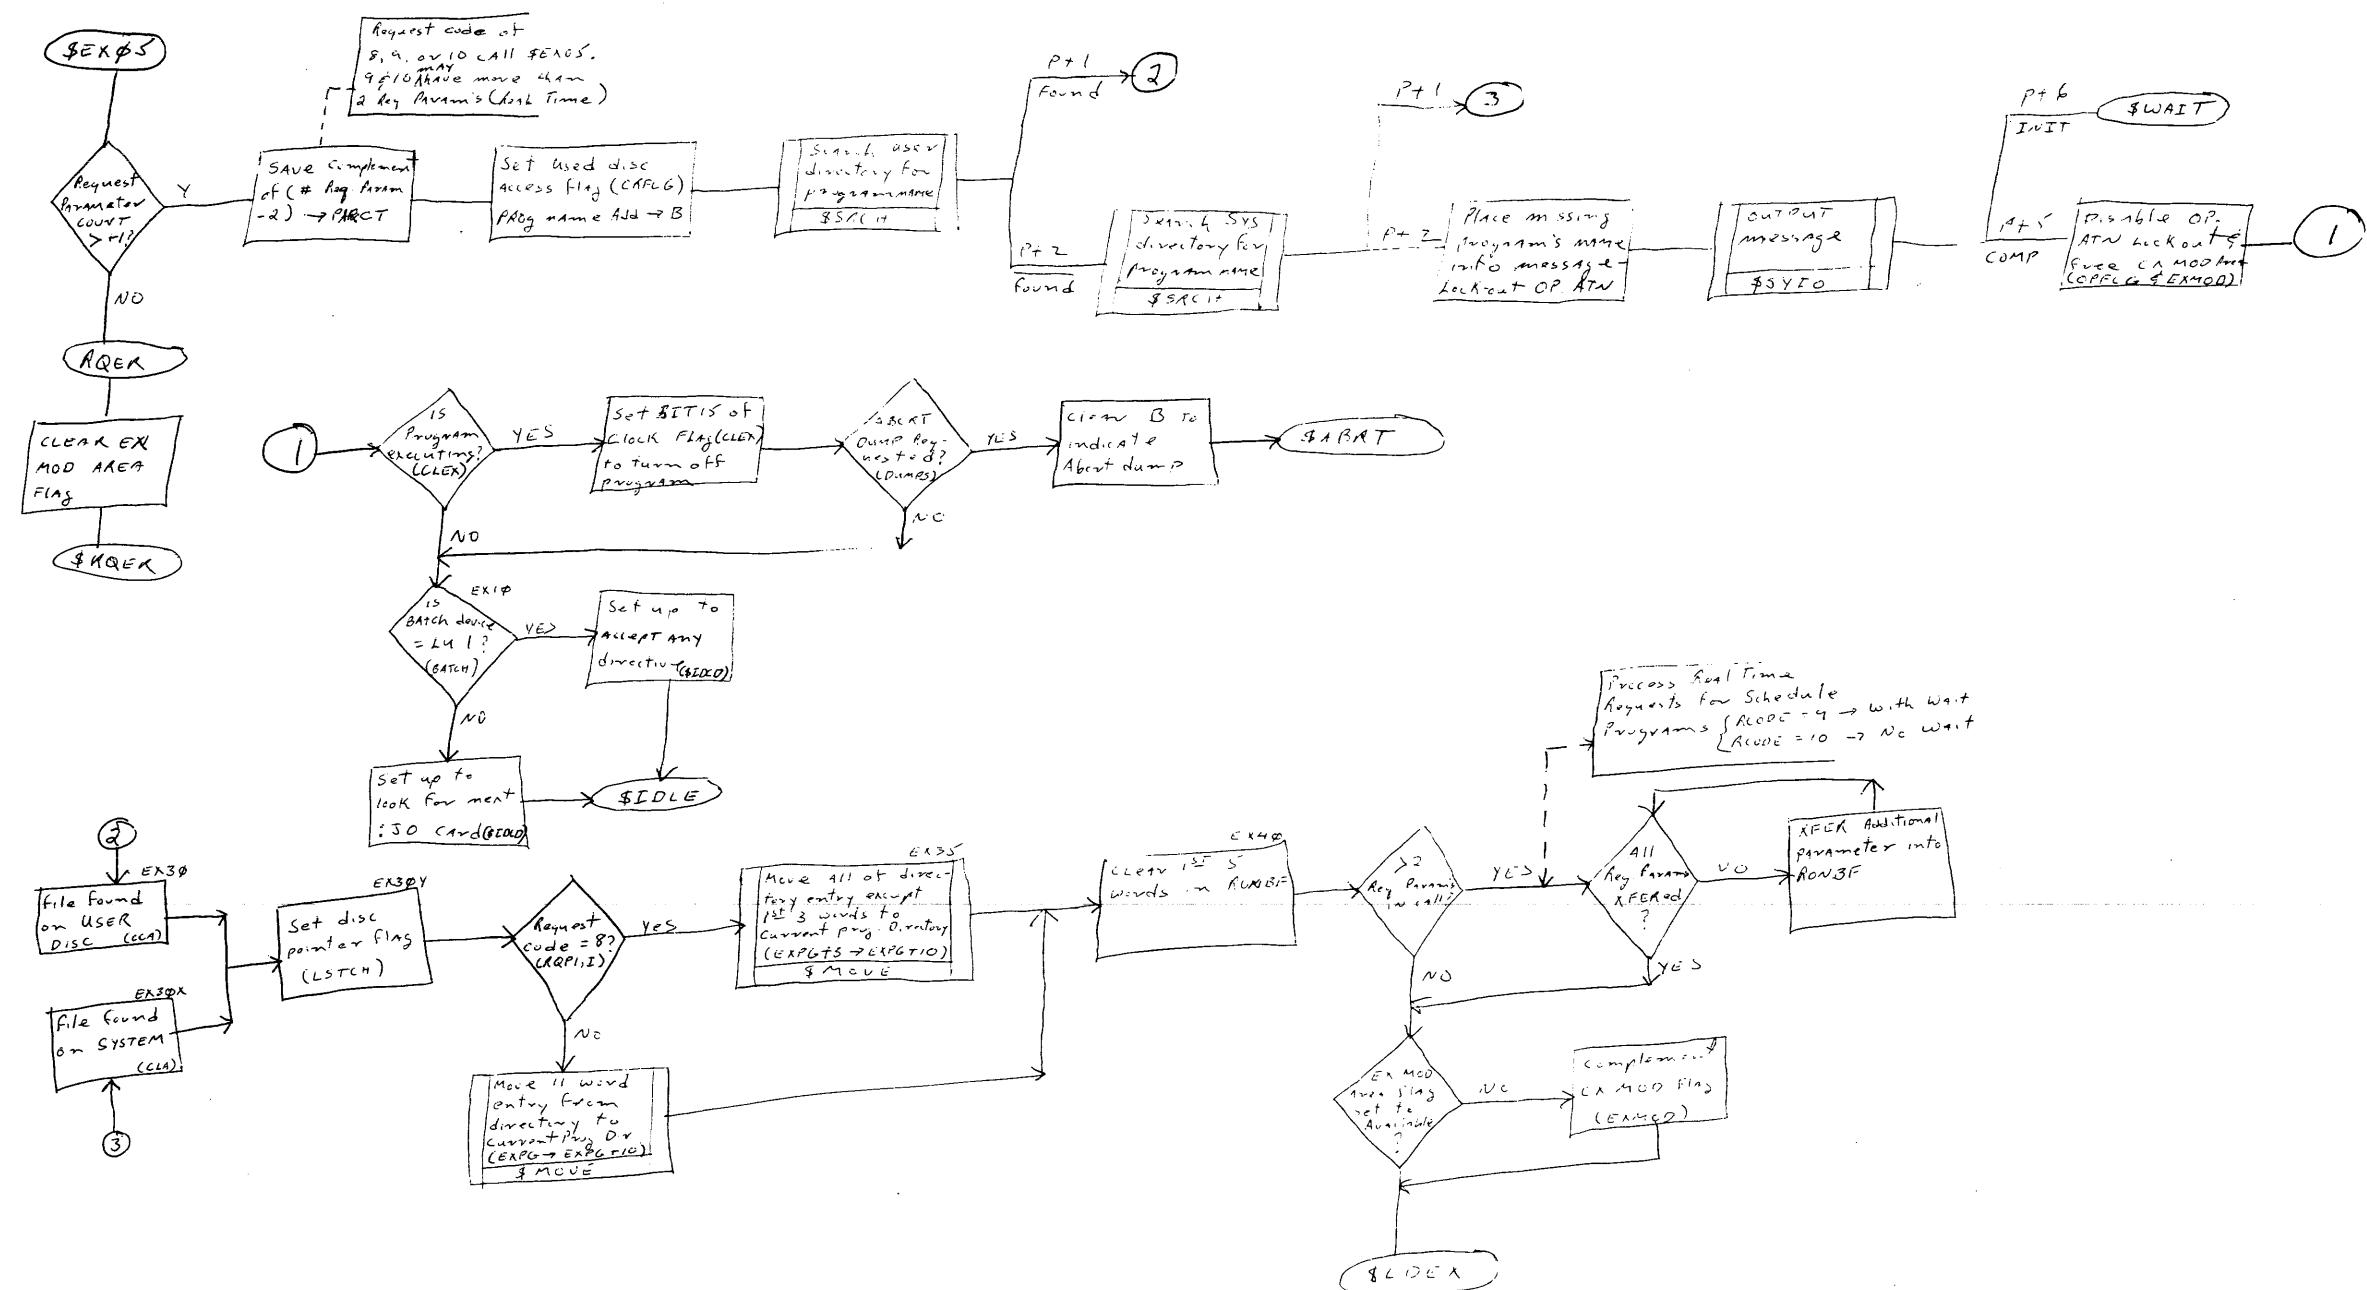


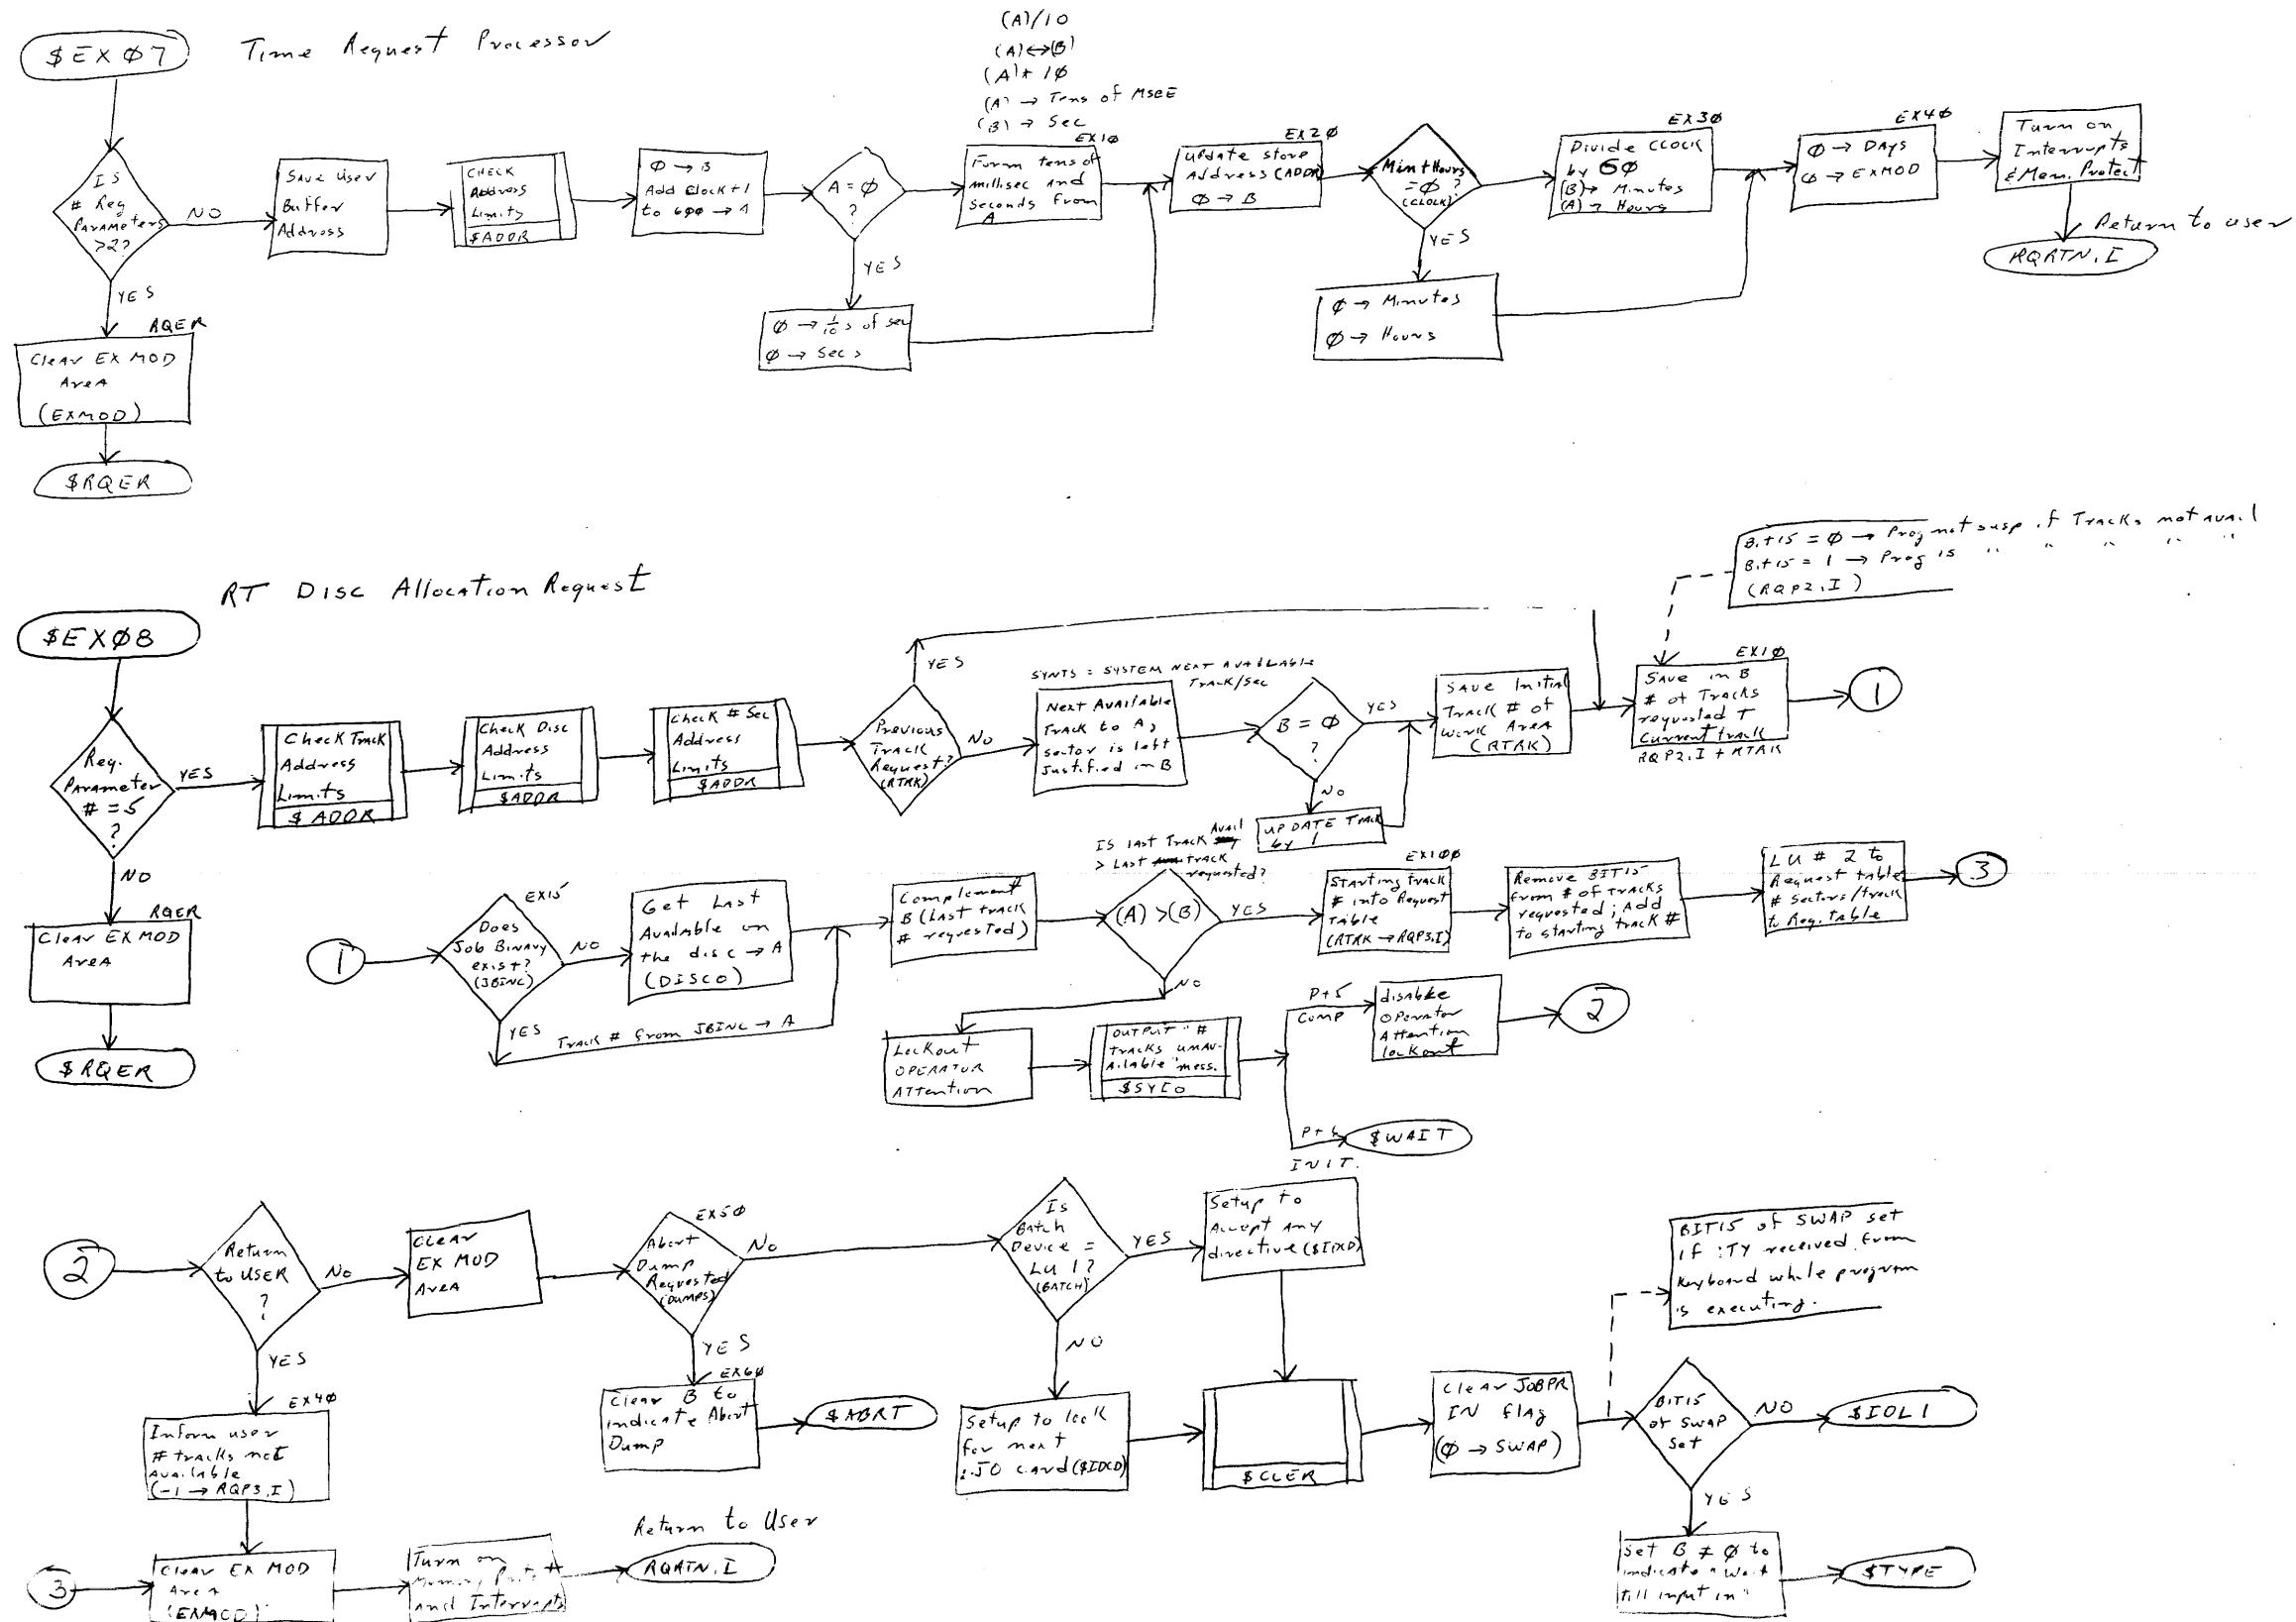


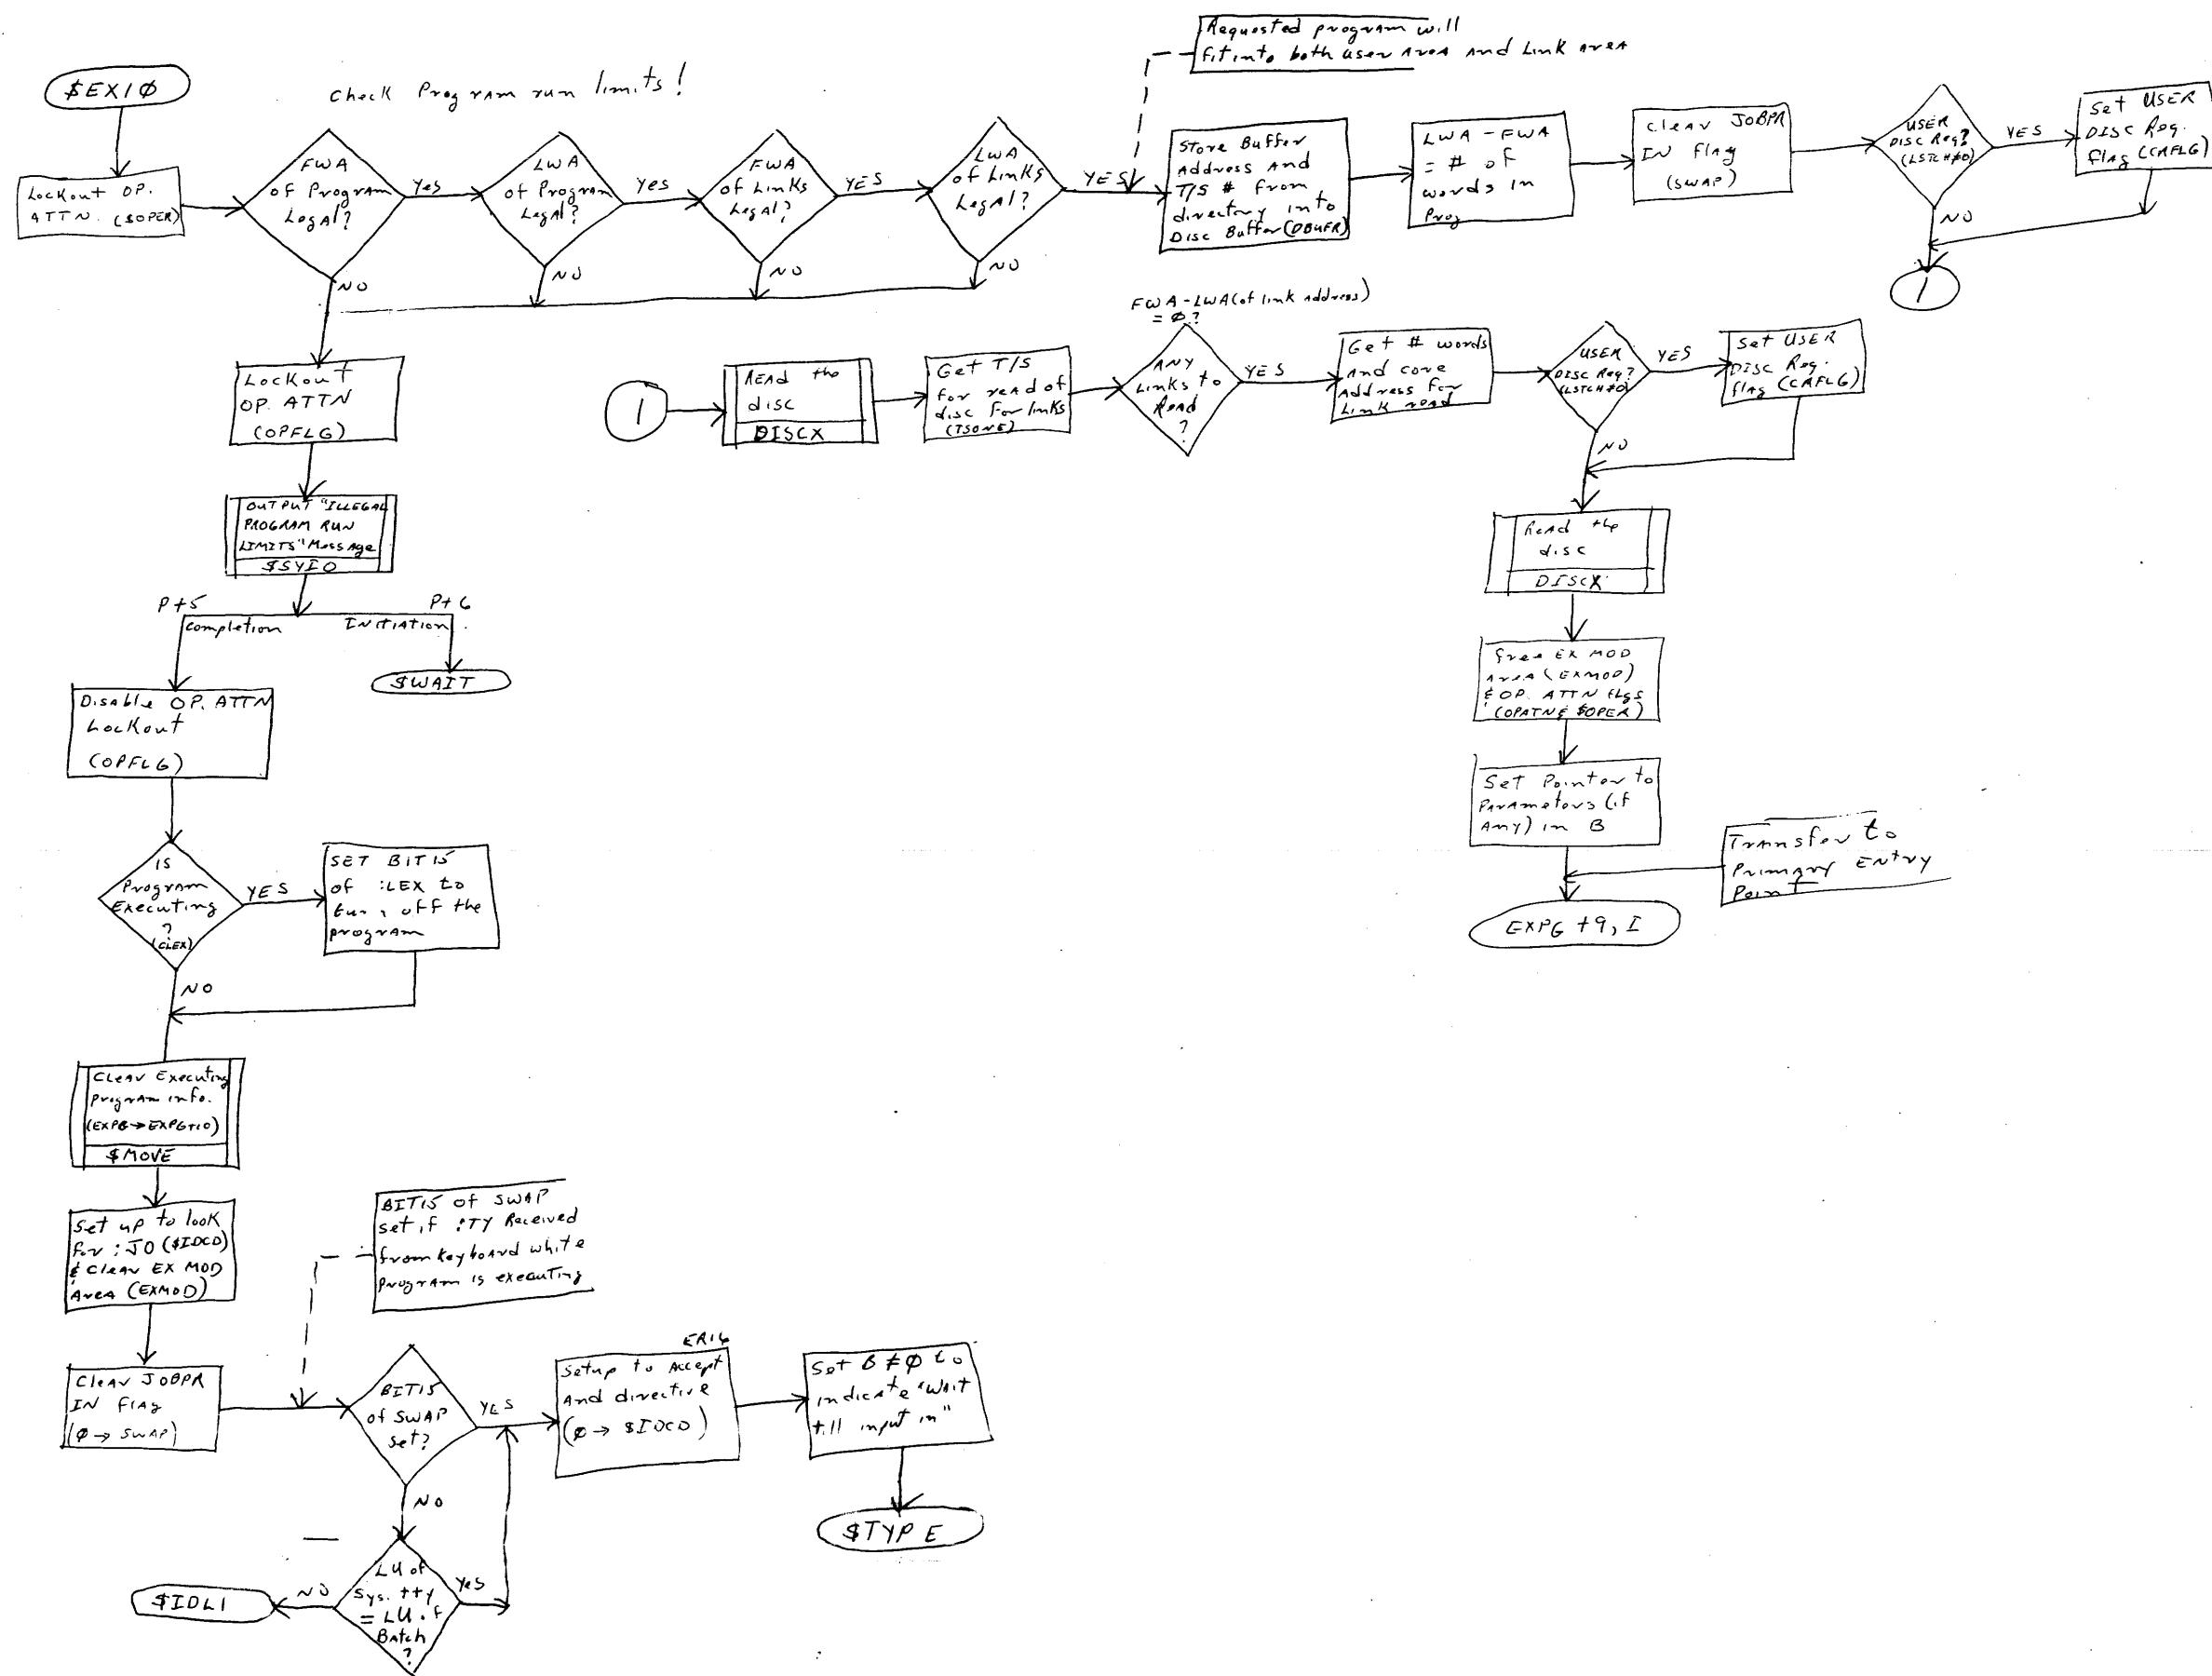


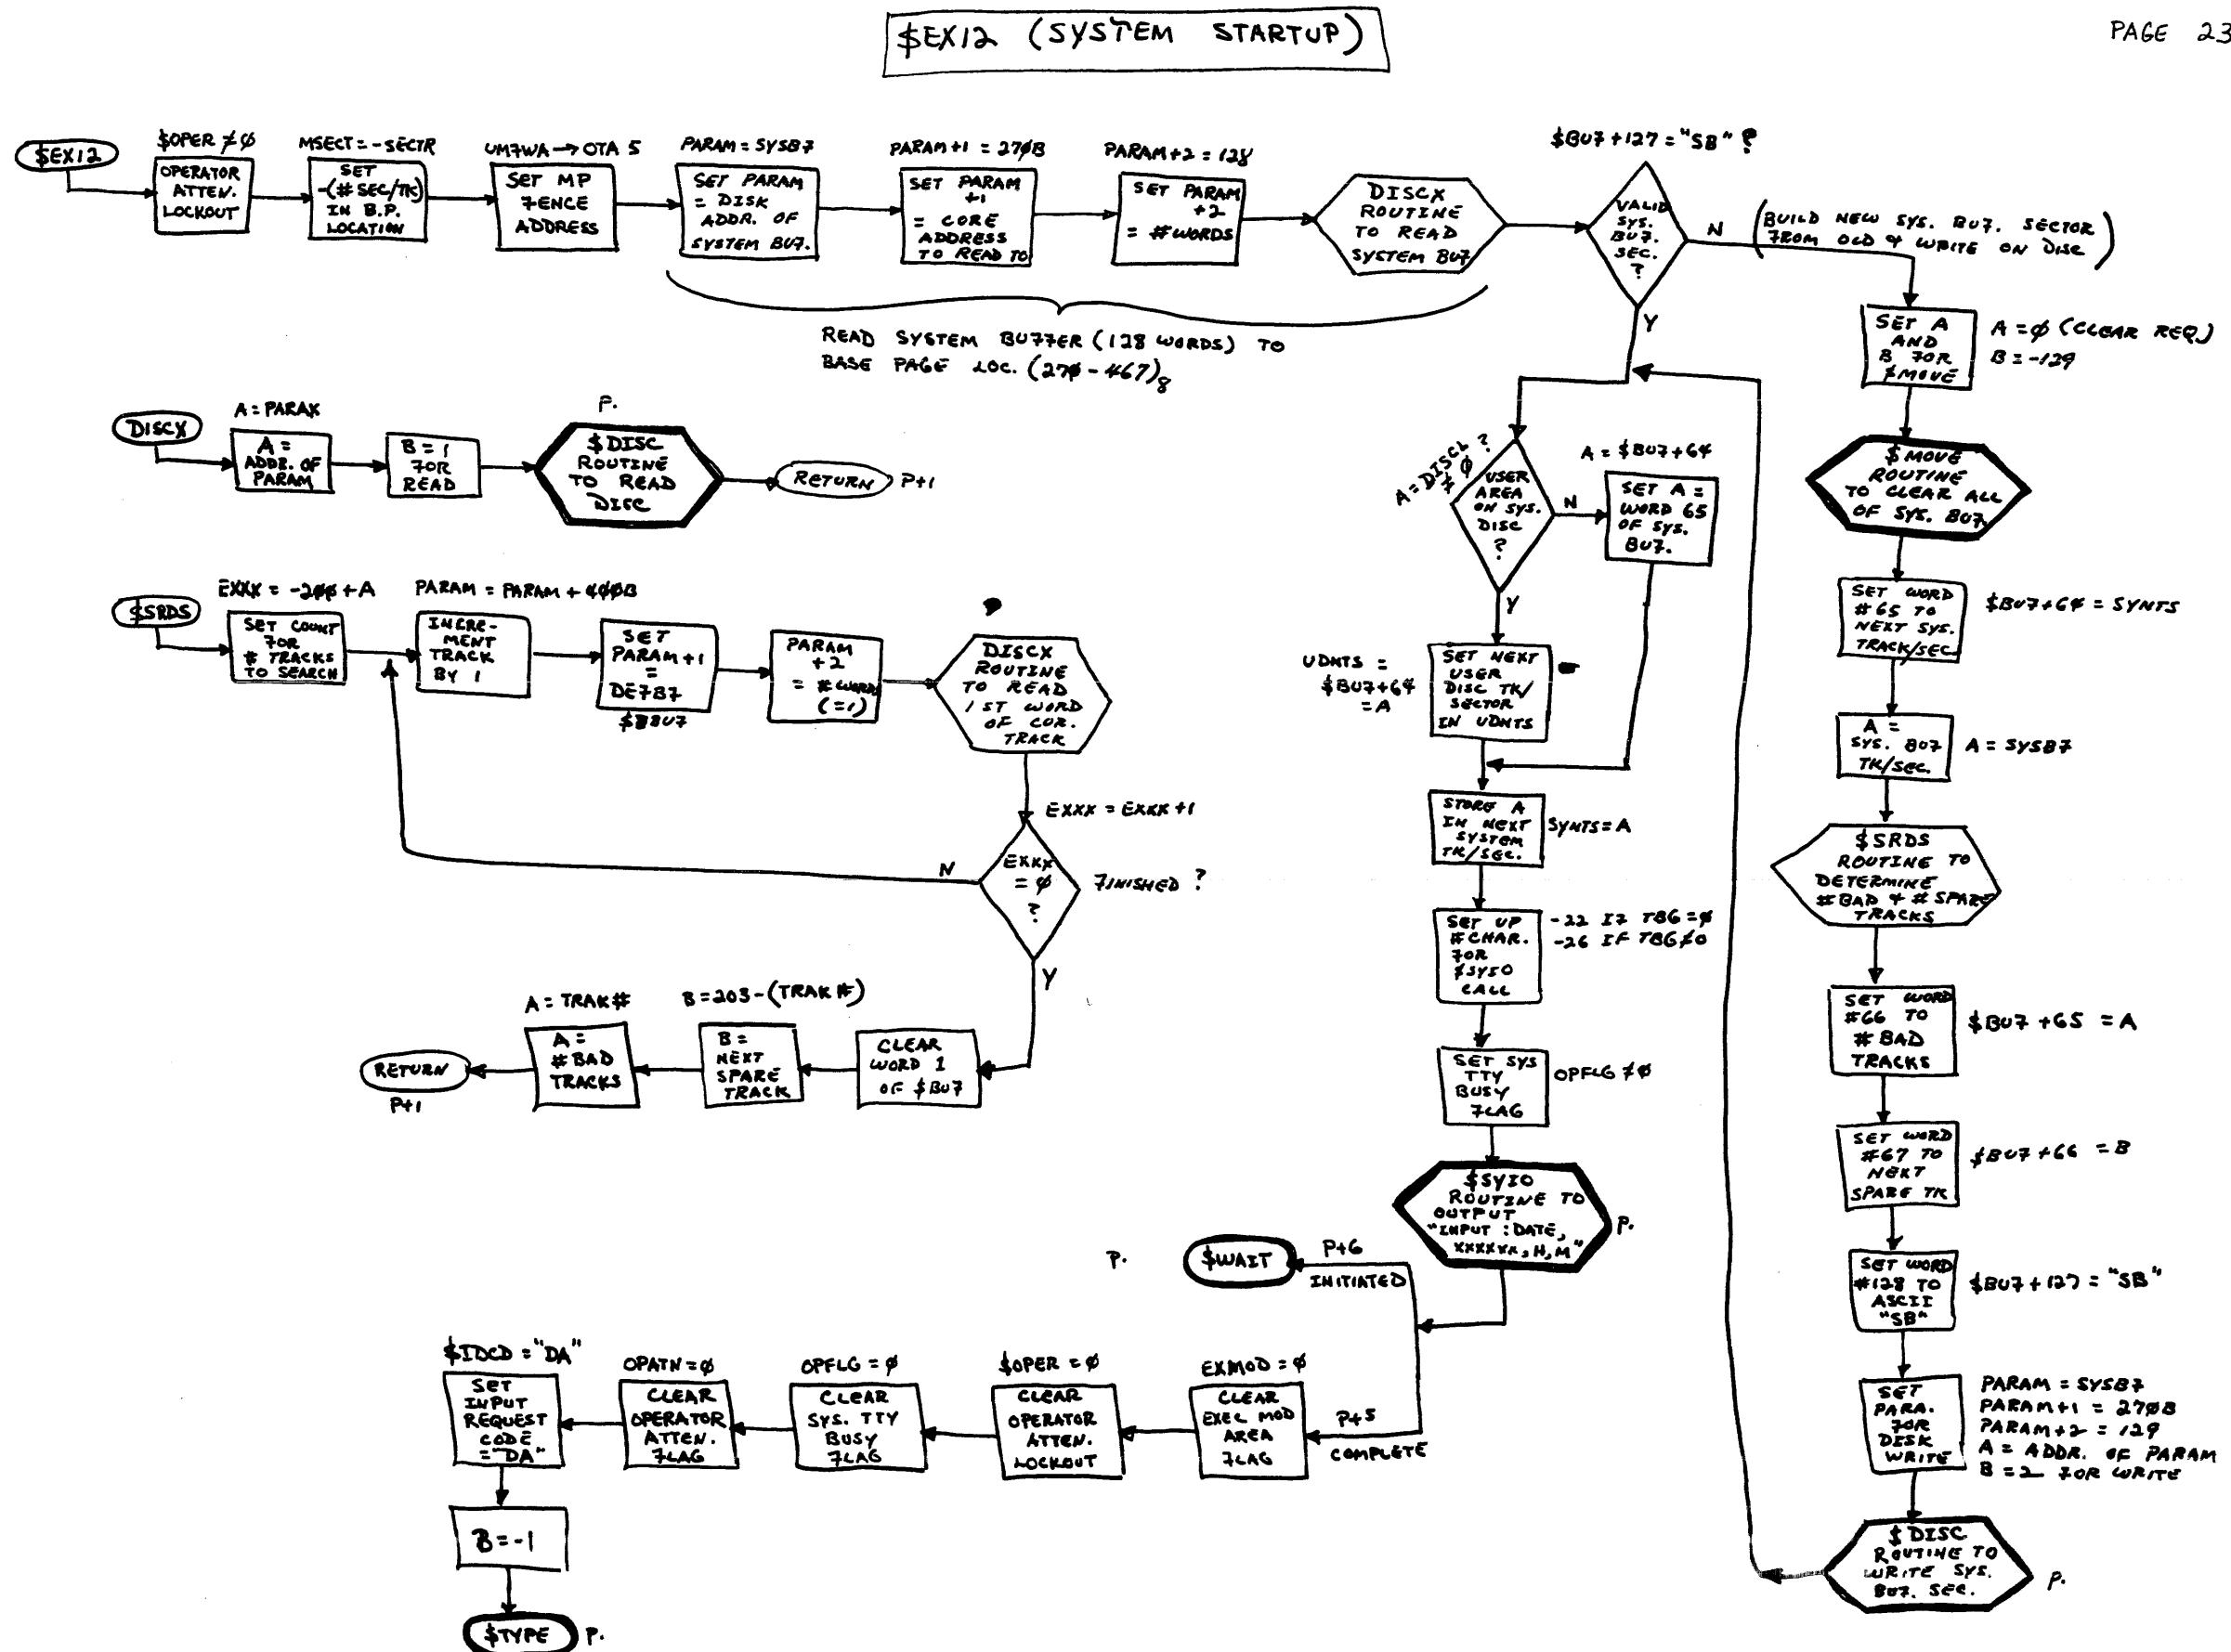

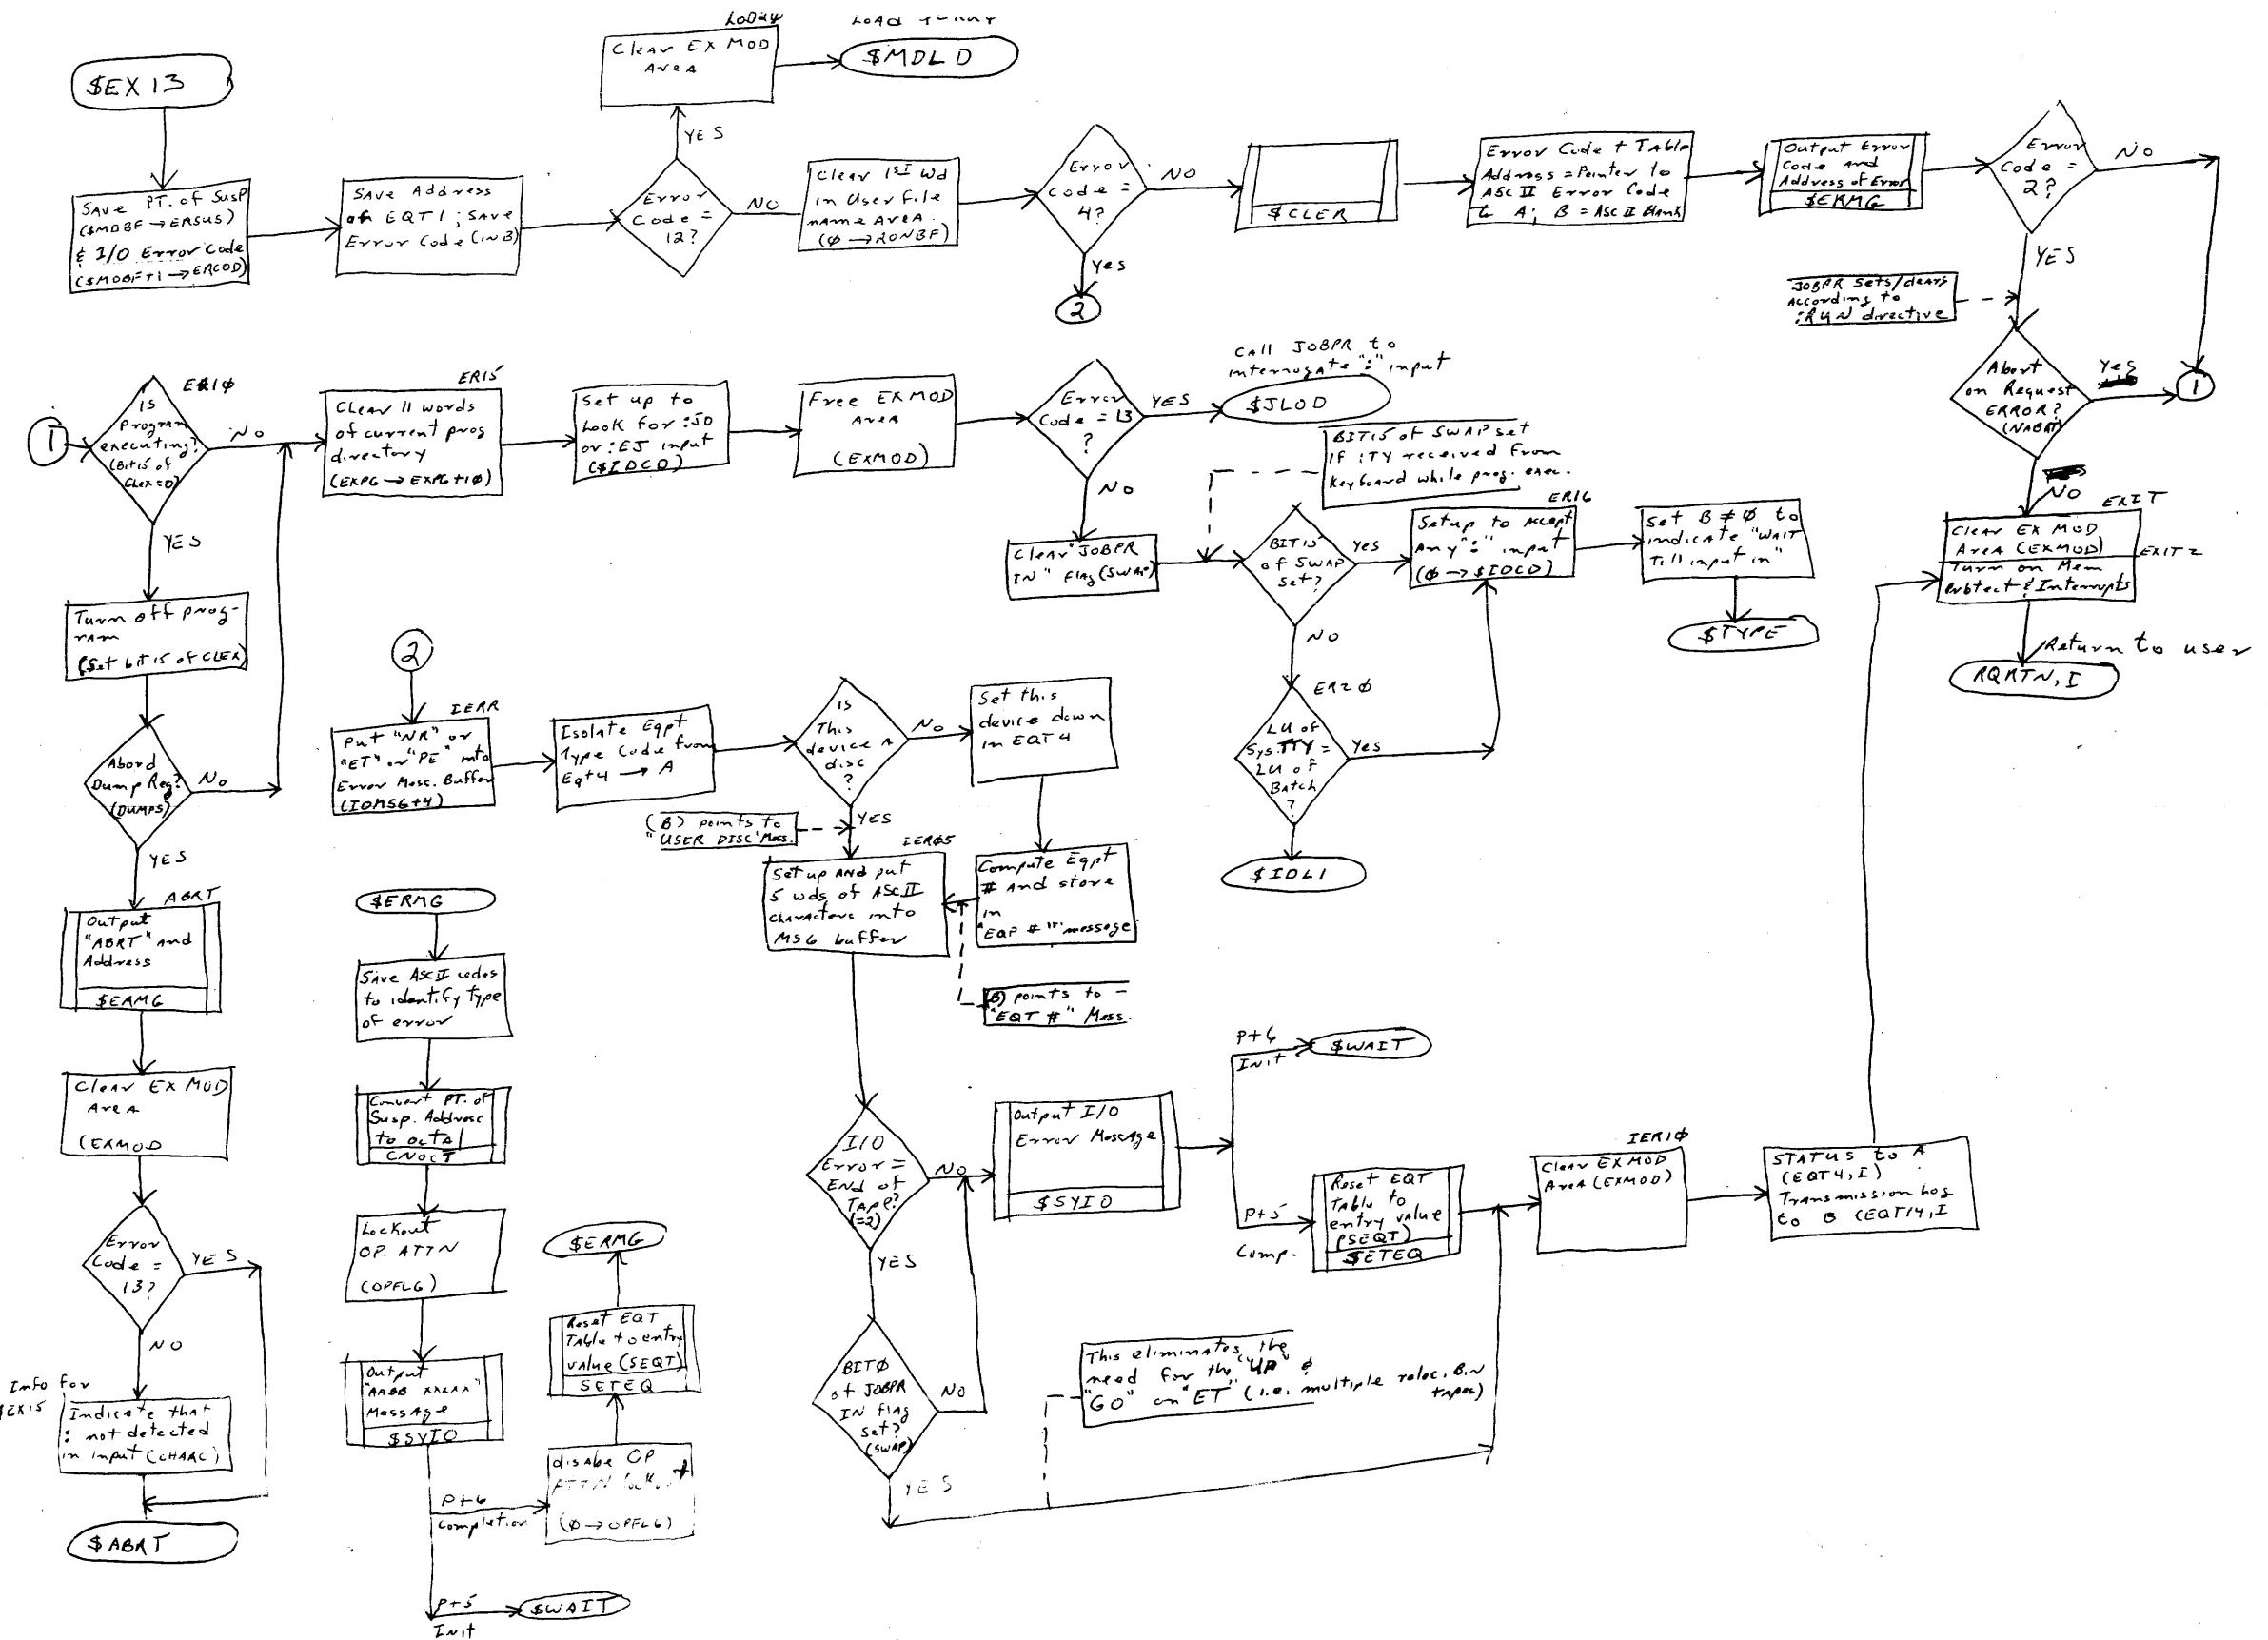

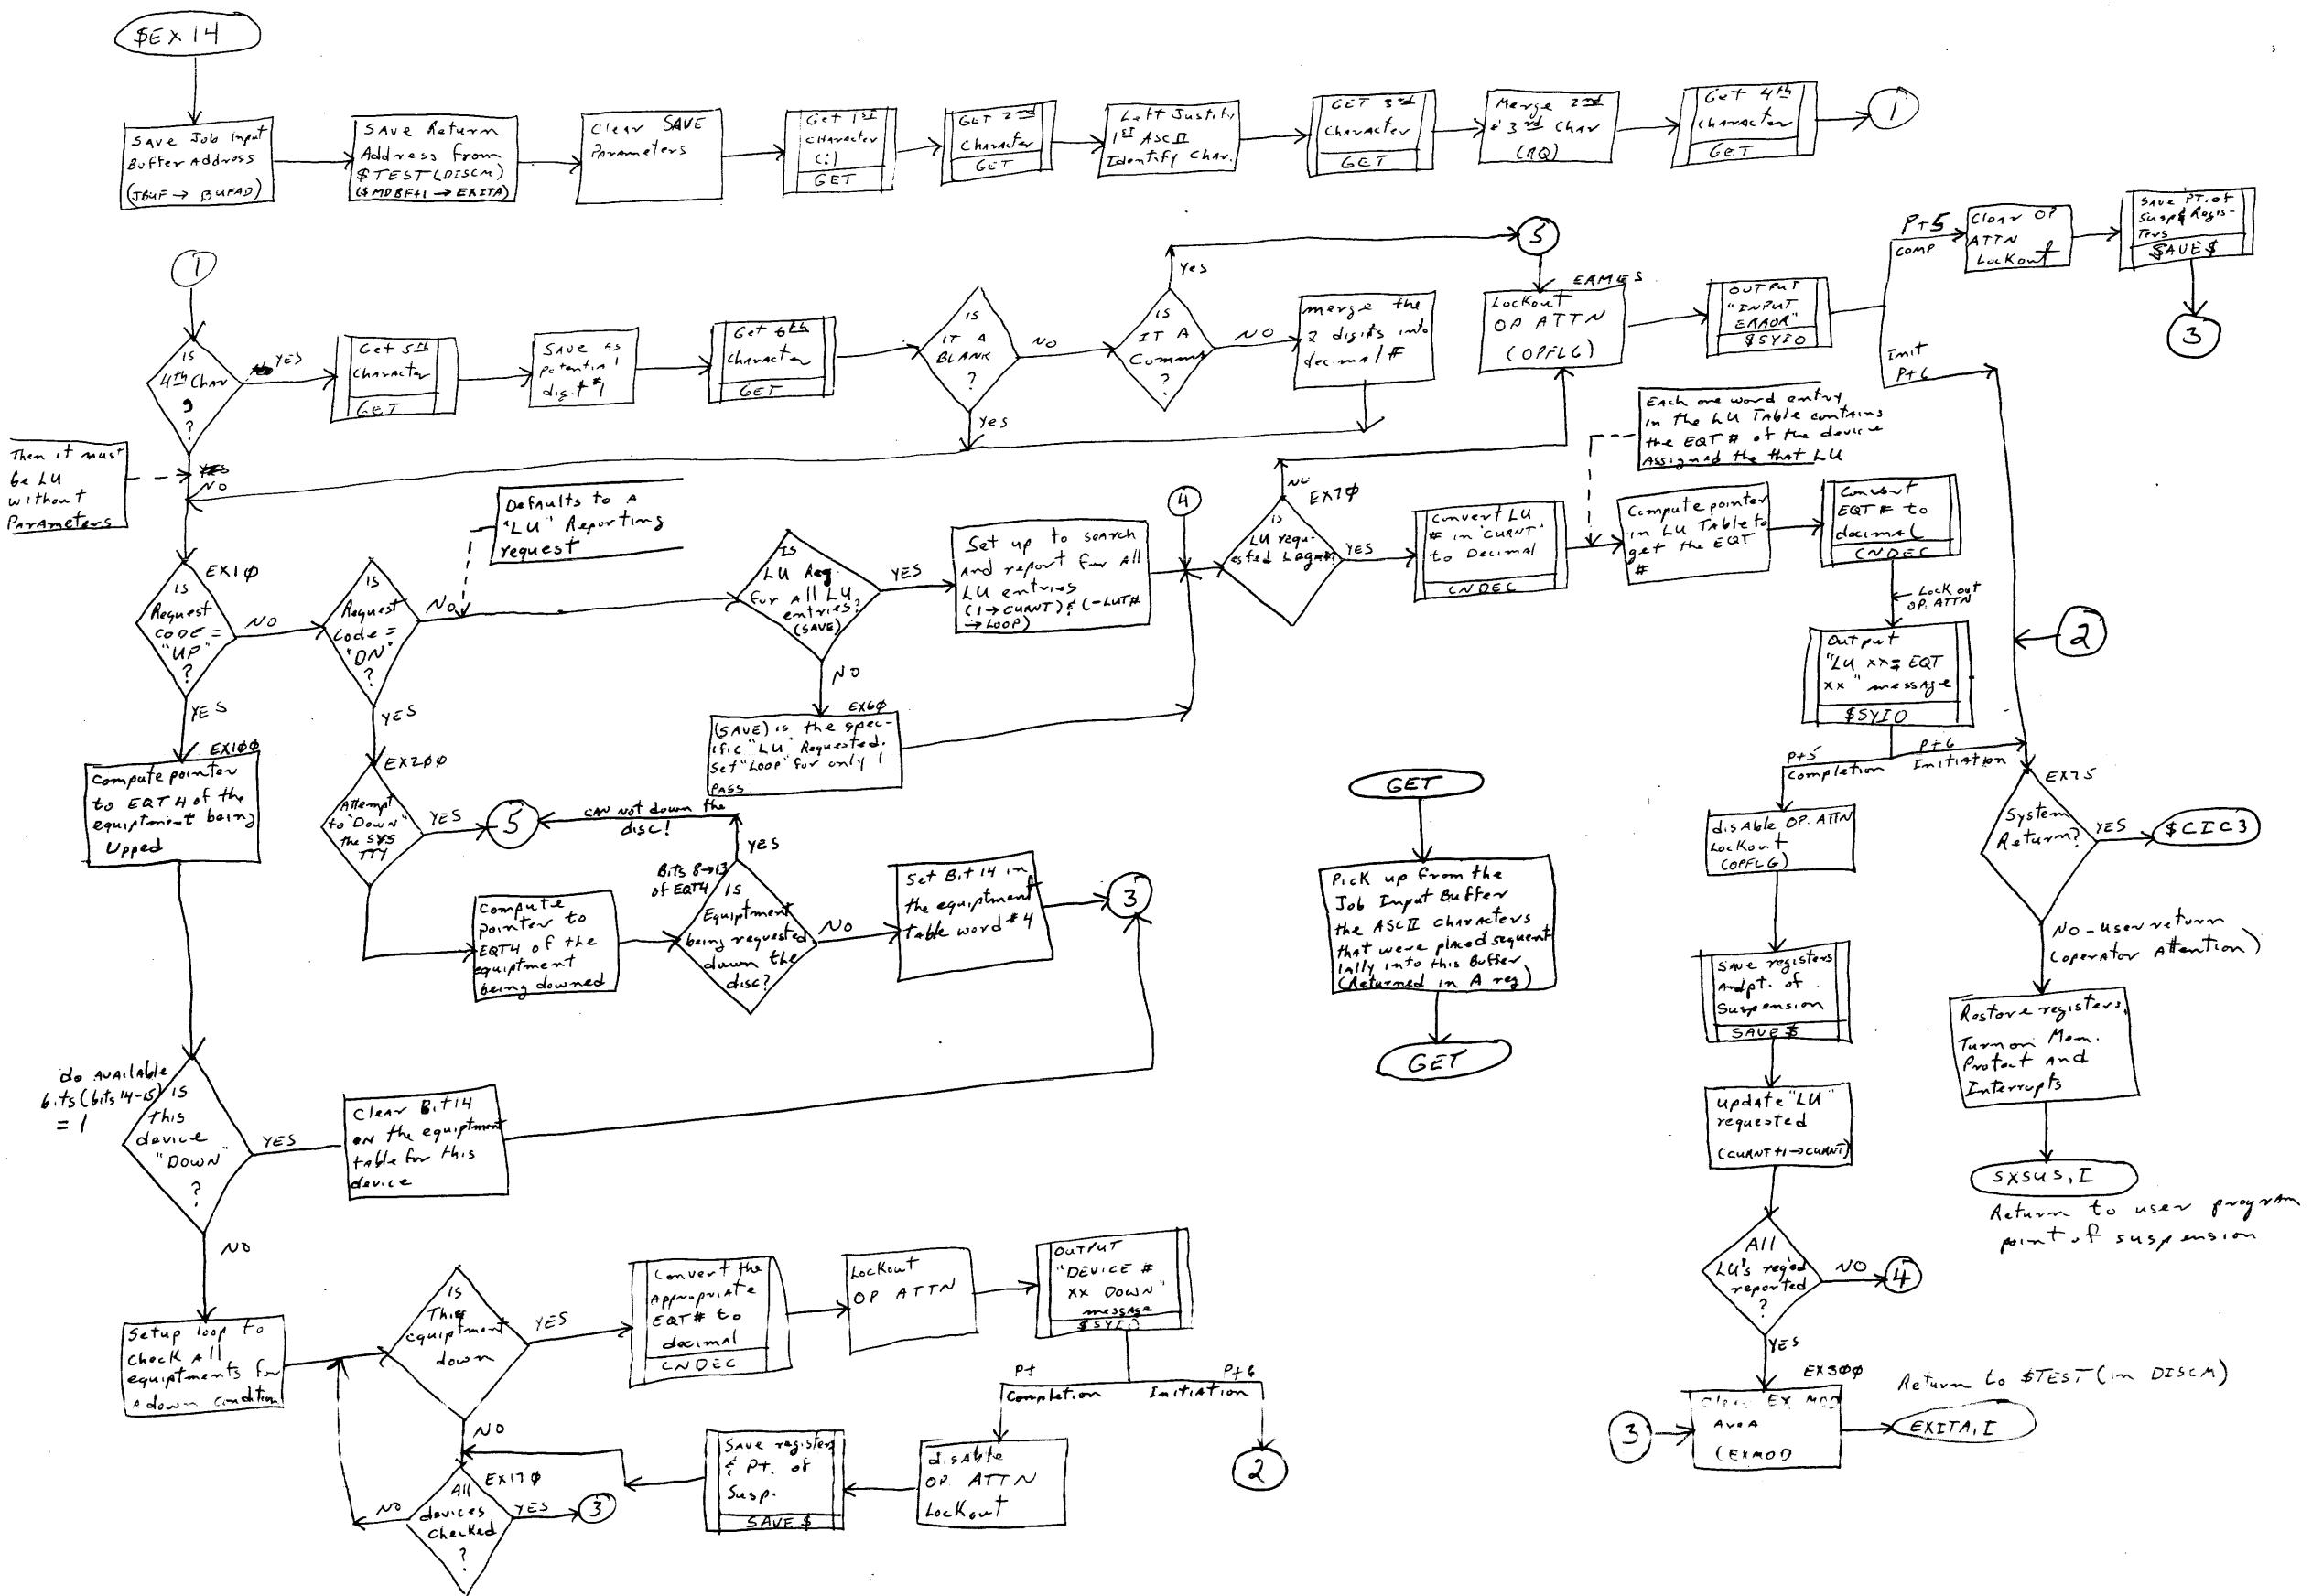


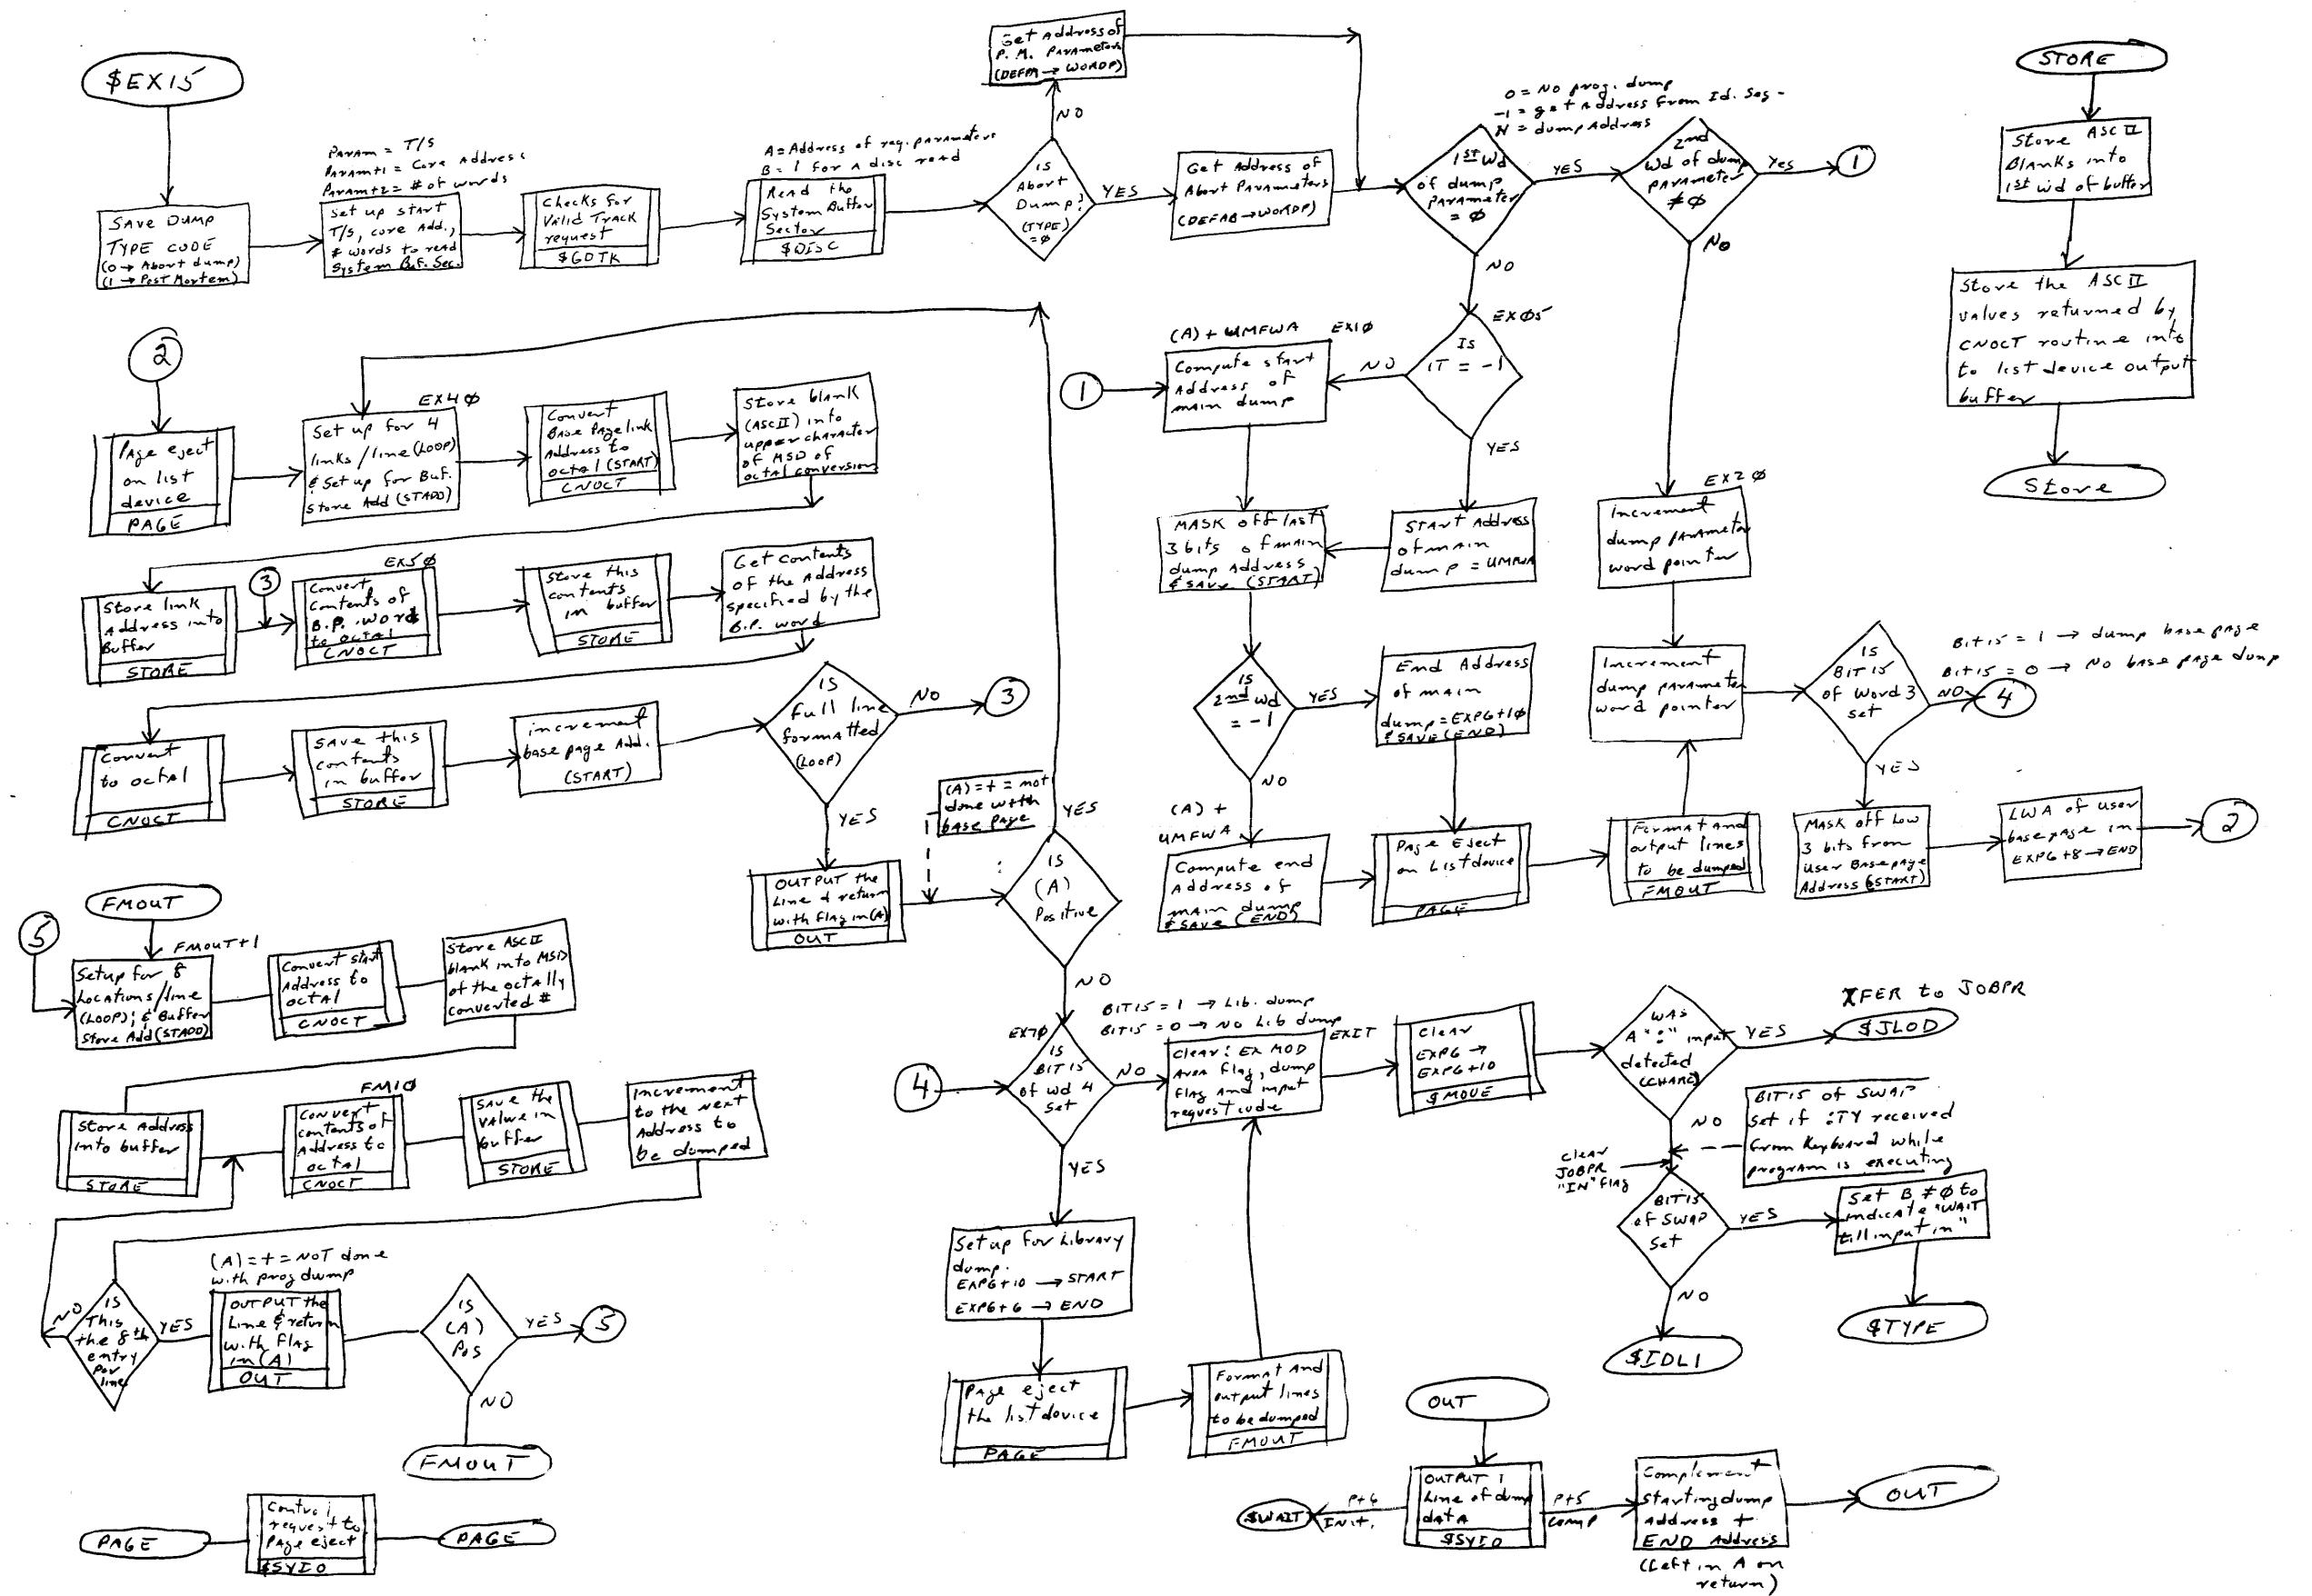


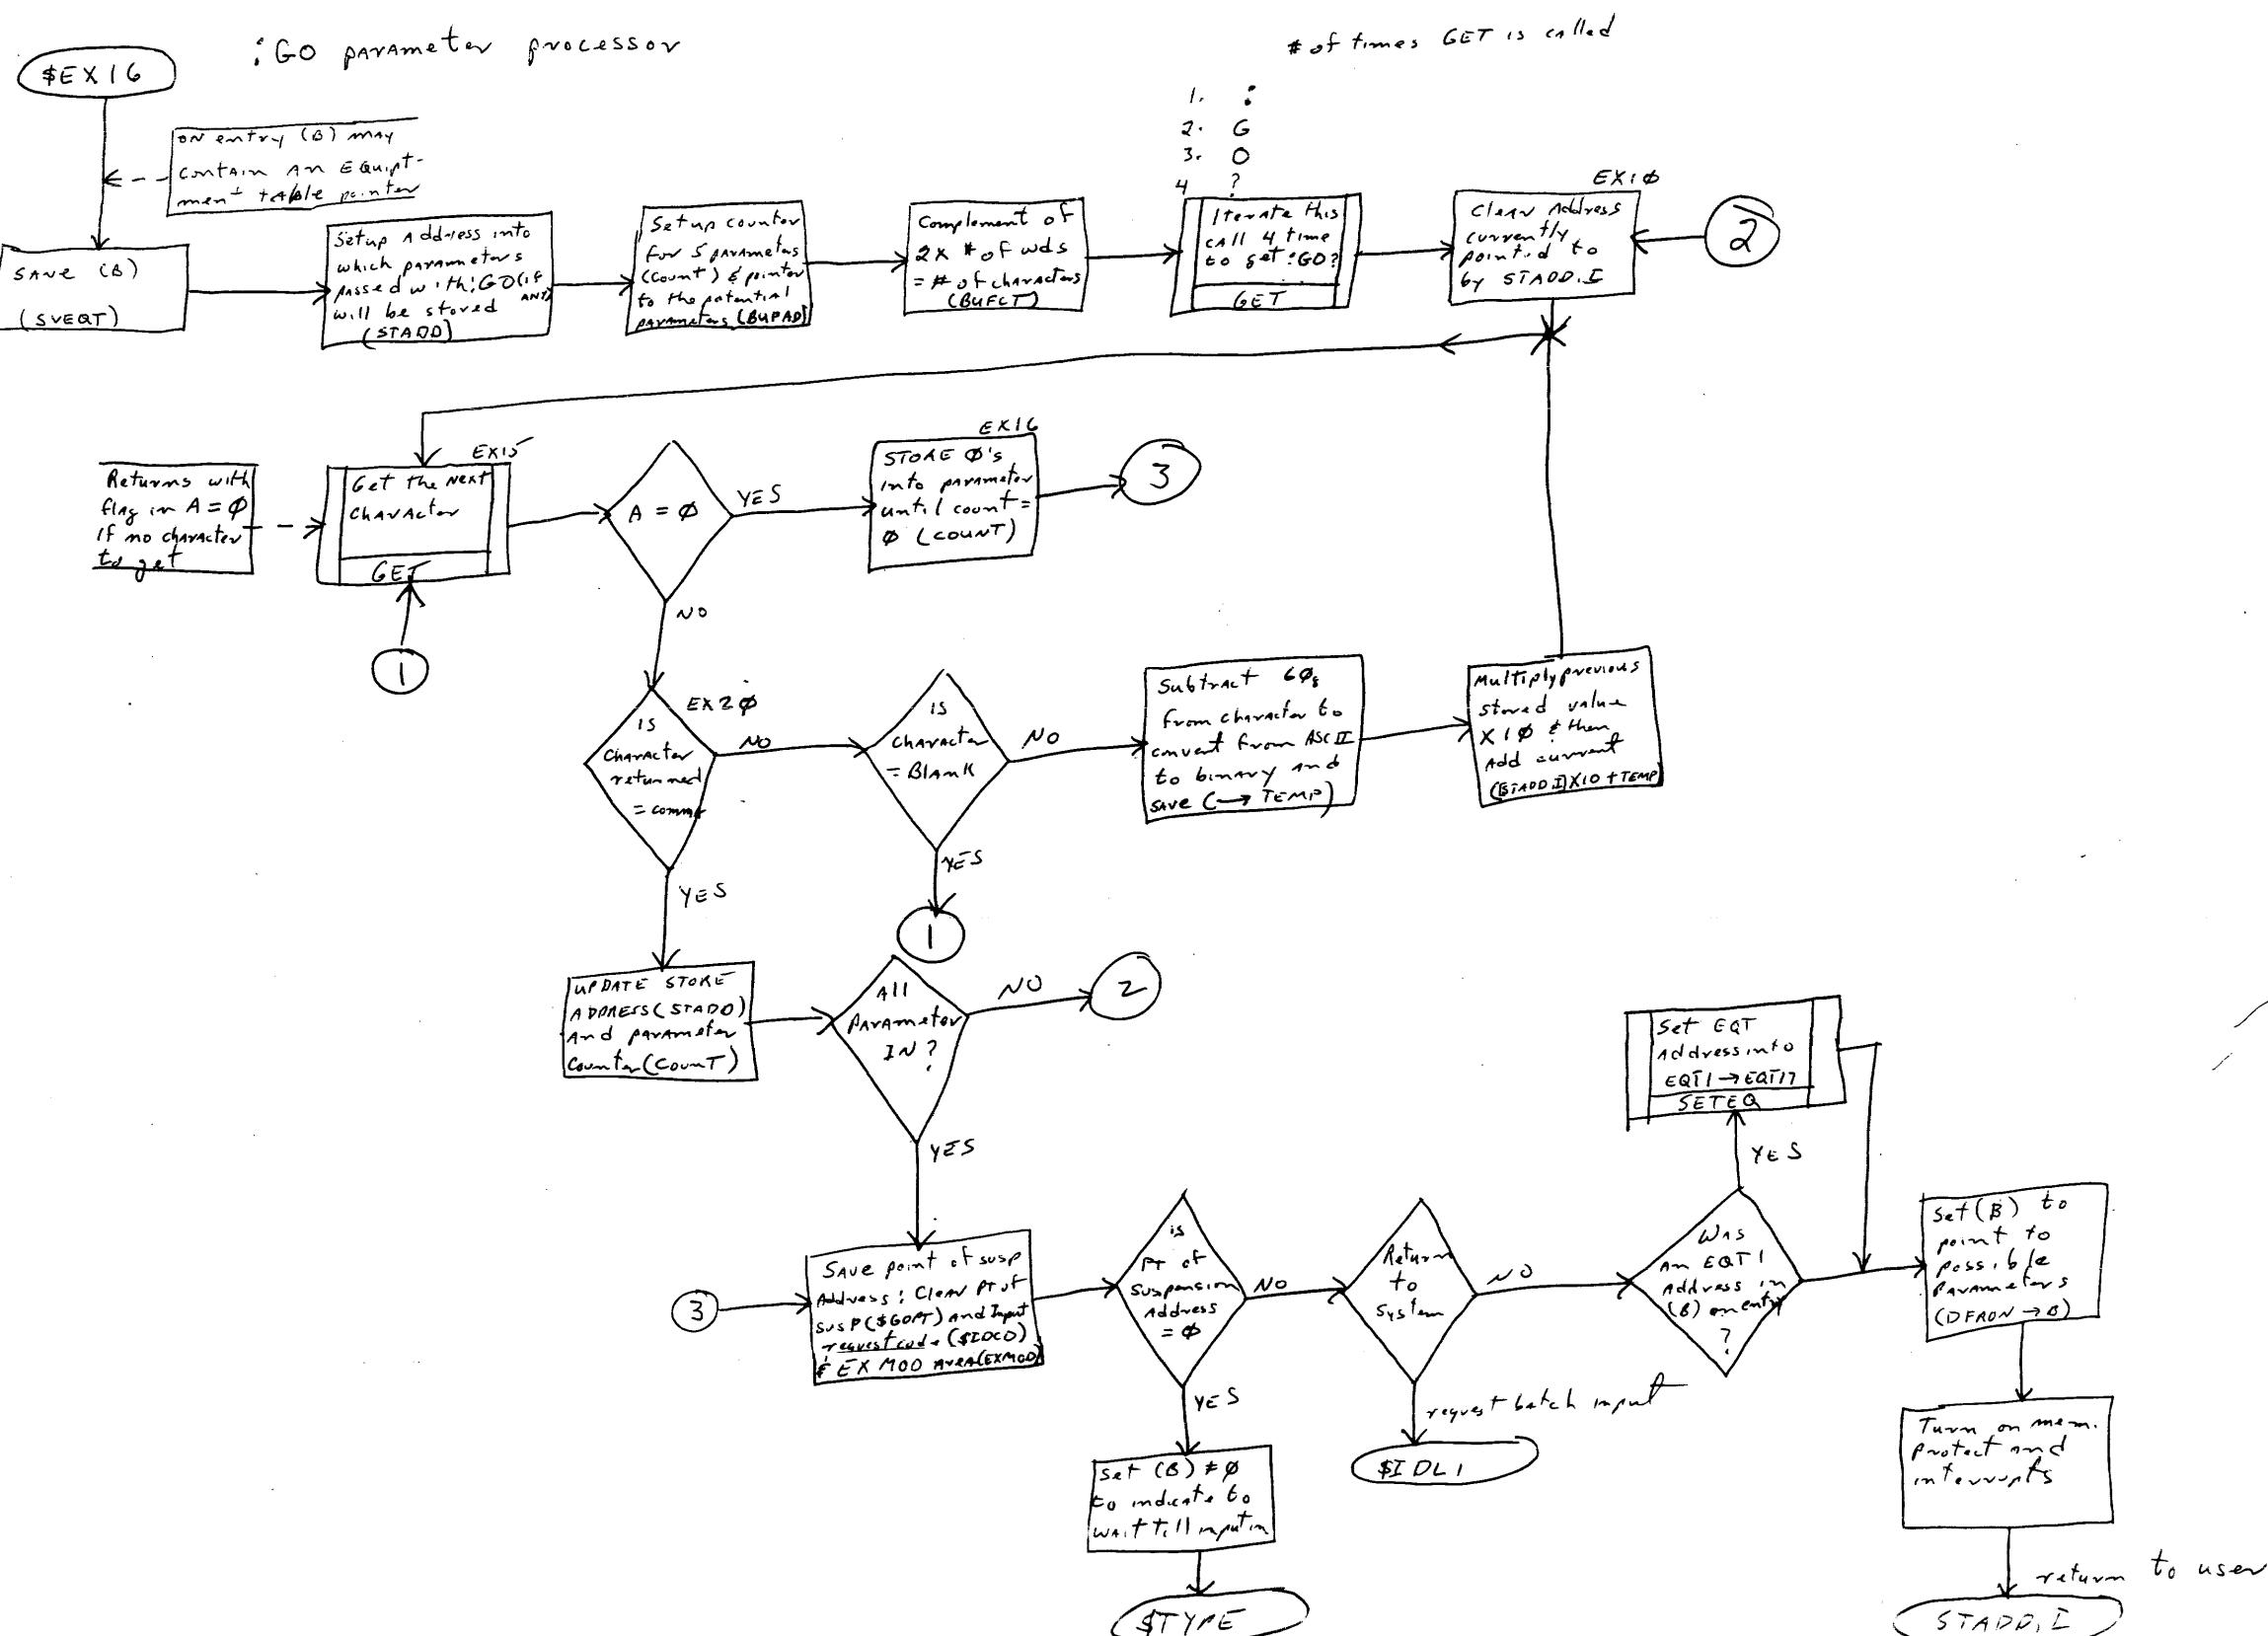



## \$EX18 (INPUT/OUTPUT CONTROL PROCESSOR) #1

PAGE 29A

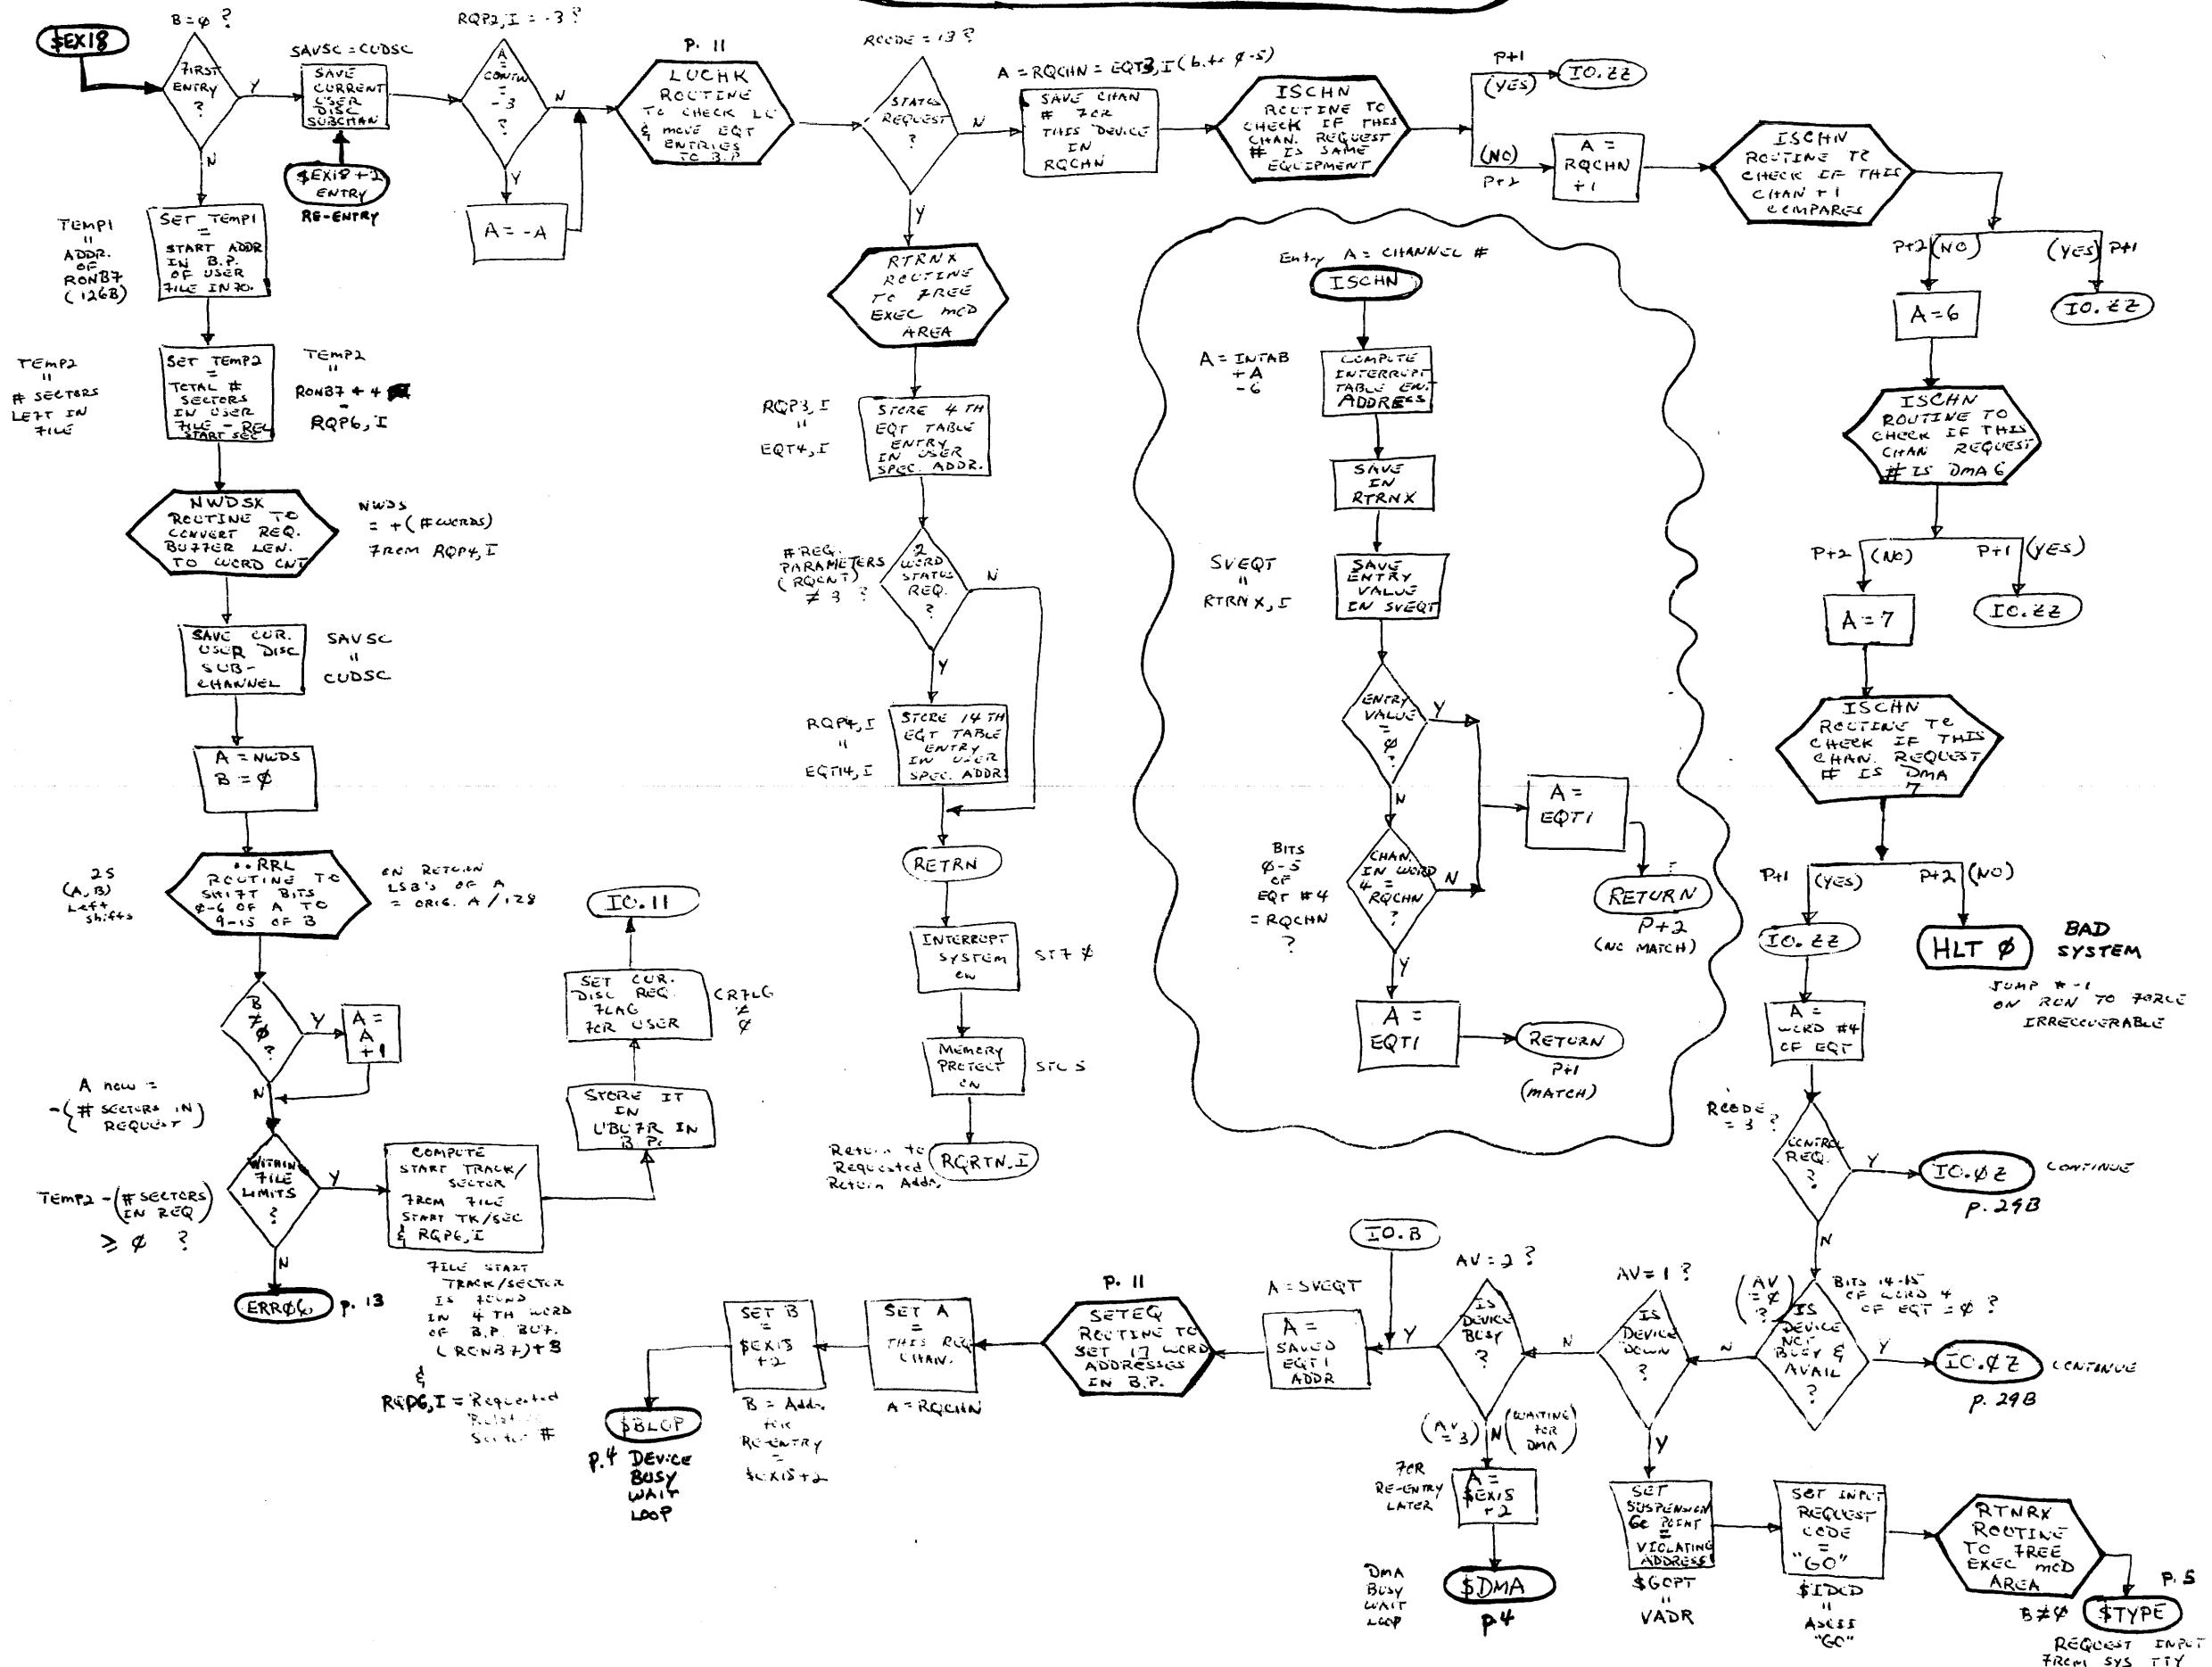

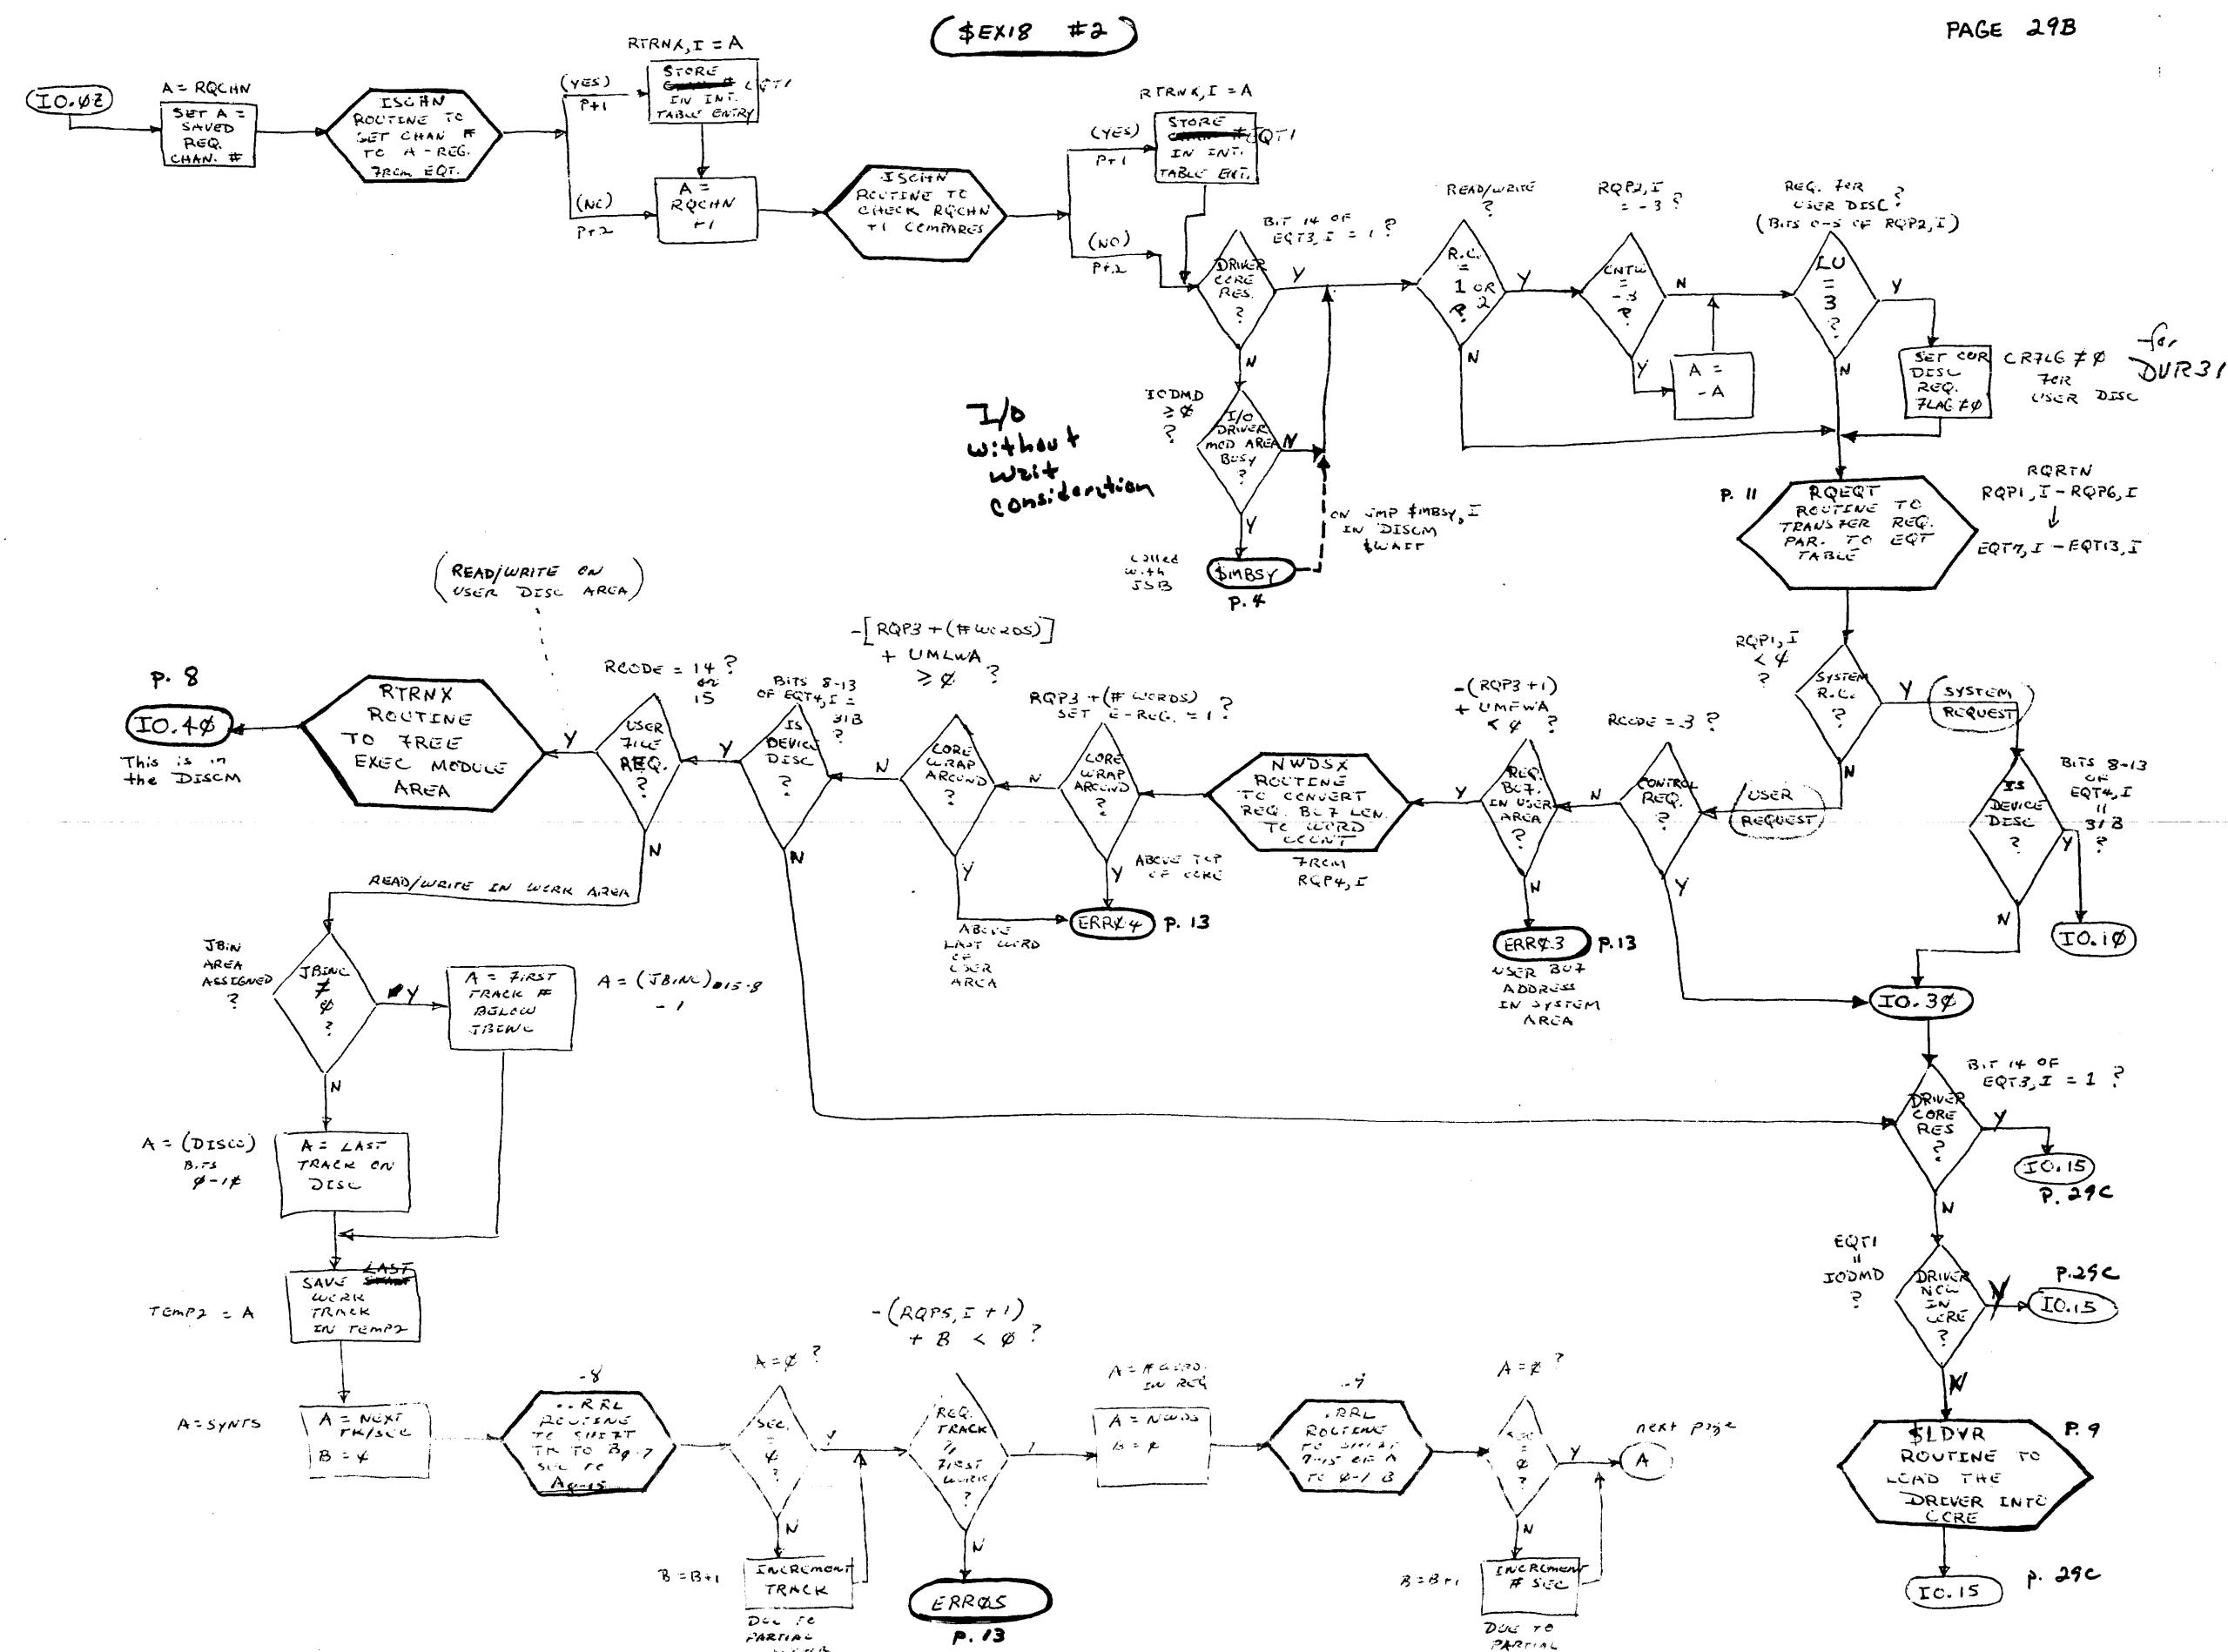

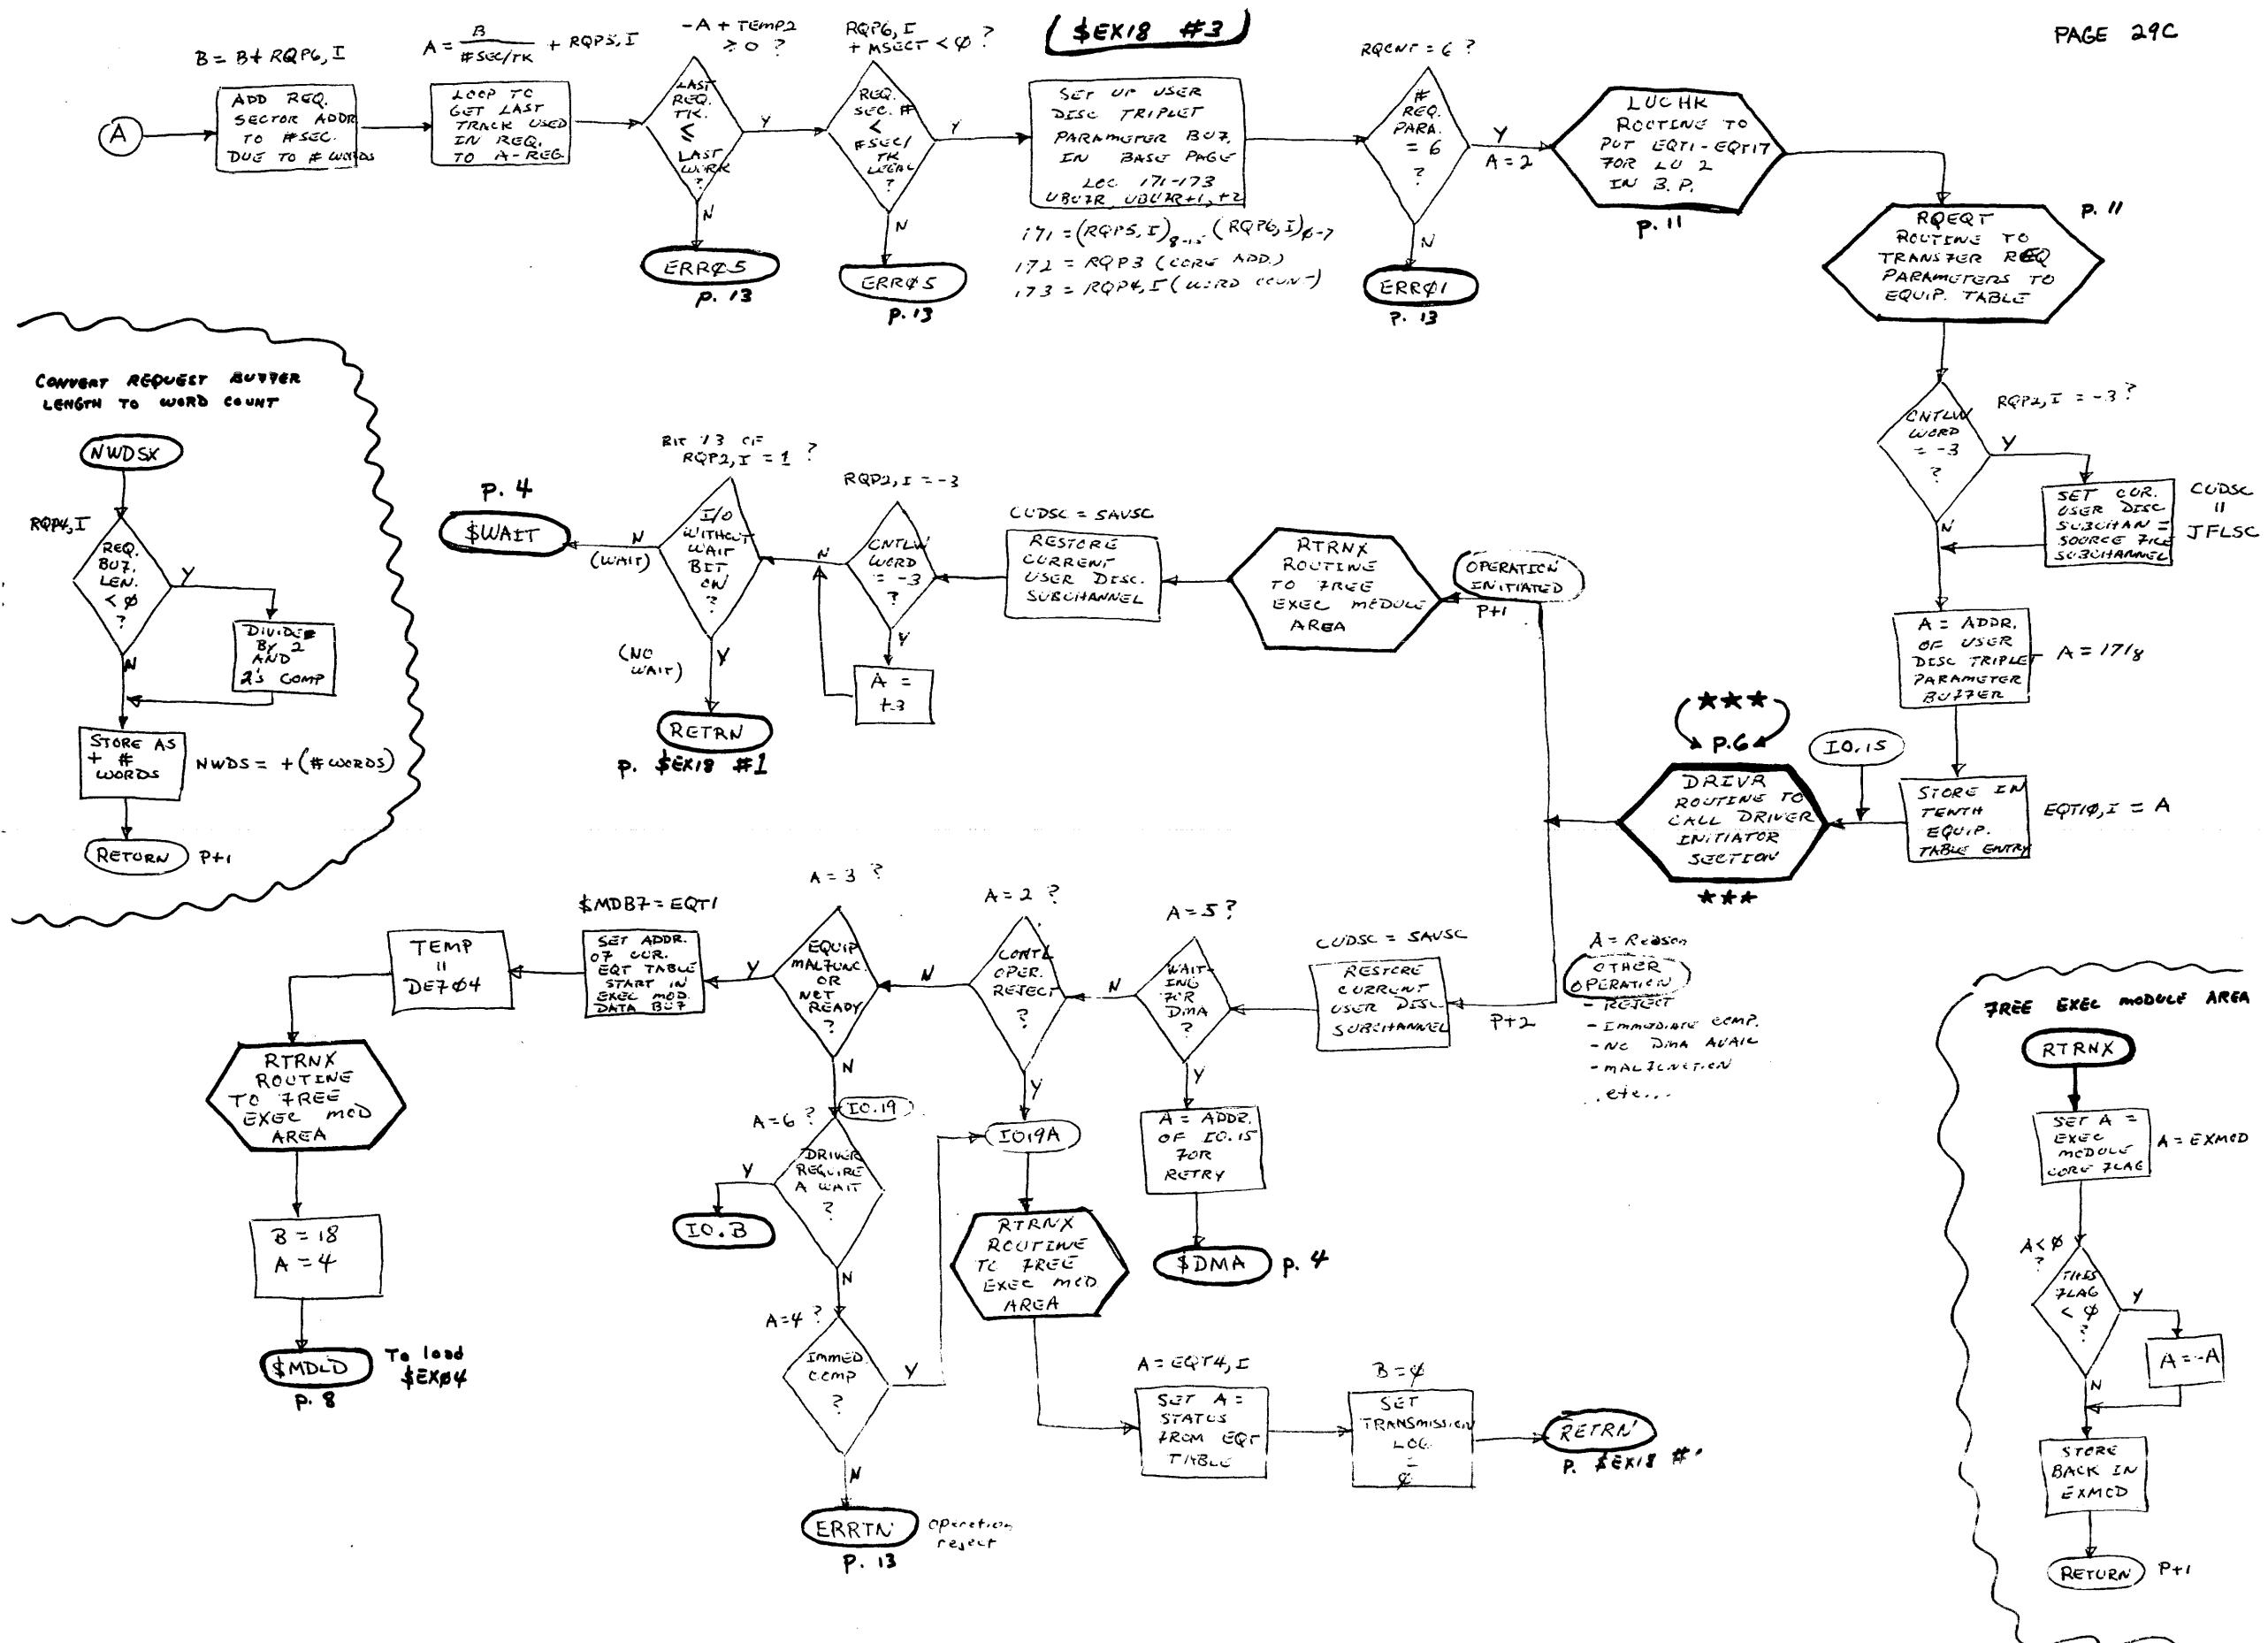


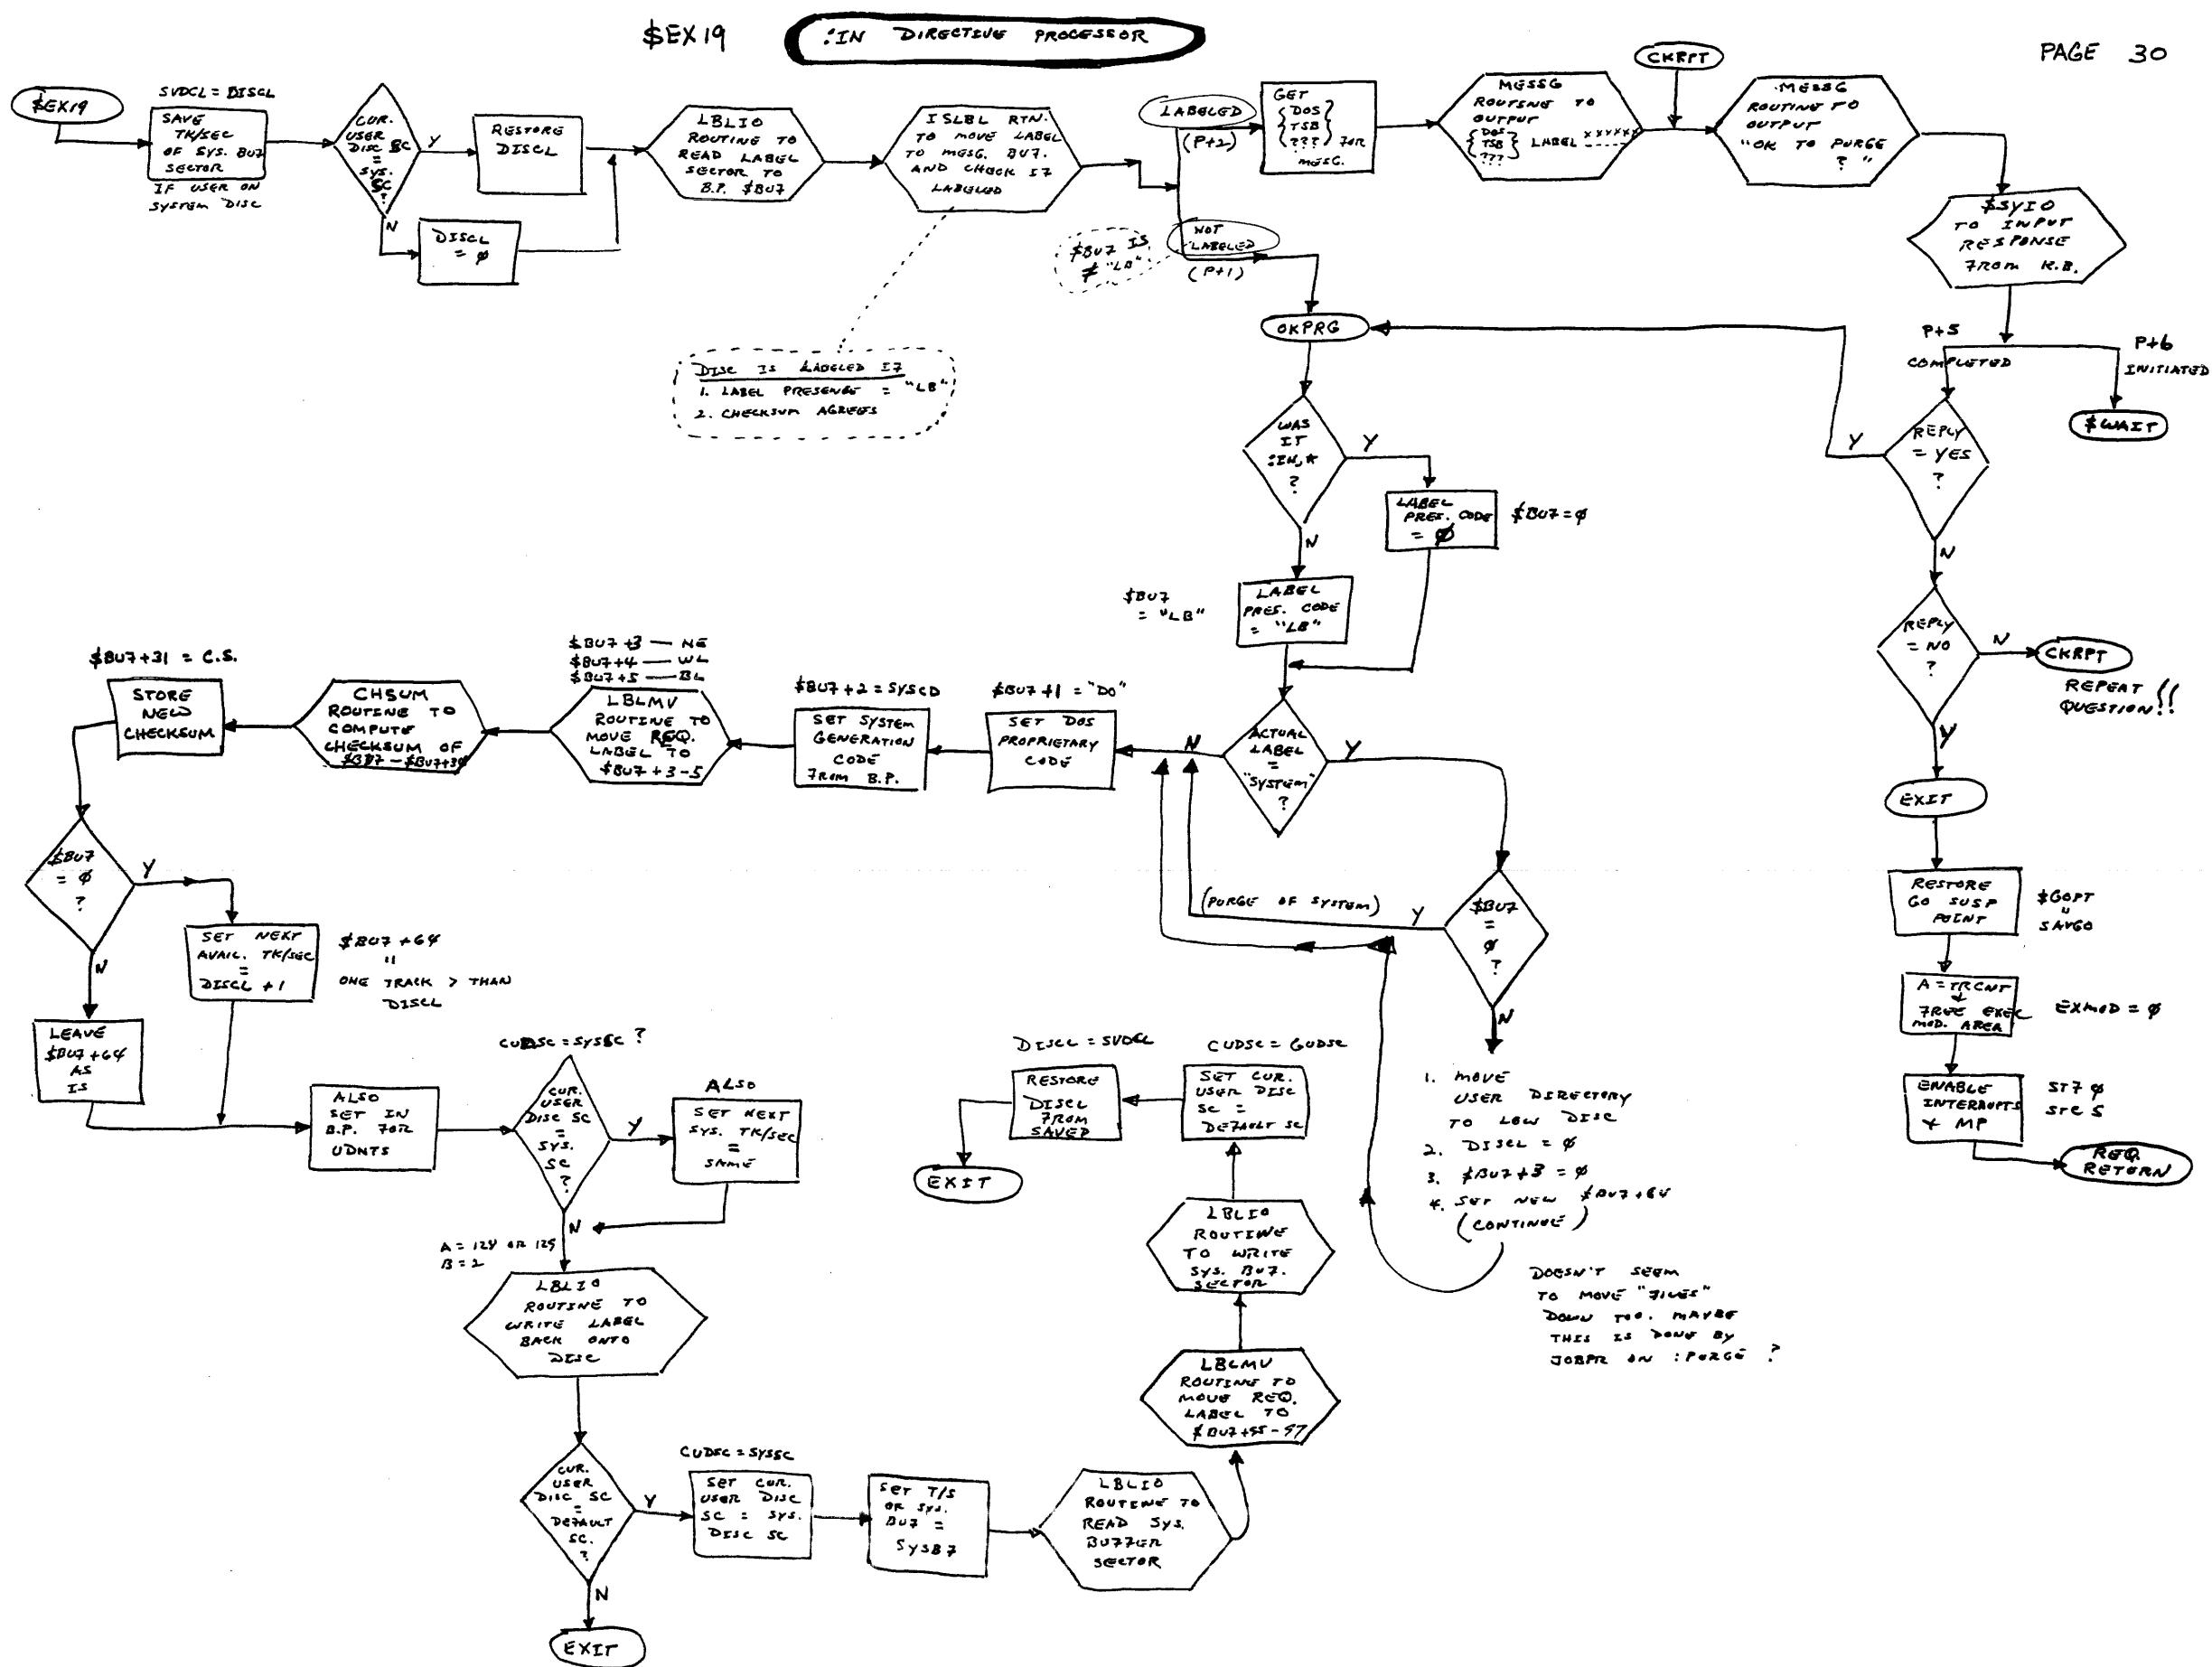


ASCII → Convert Binary to ASCII Octal or Decimal

Calling sequence: LDA <Value in binary>  
JSB CNDEC/CNOCT

Return: (A) Least significant 2 digits  
(B) Address of most significant digits

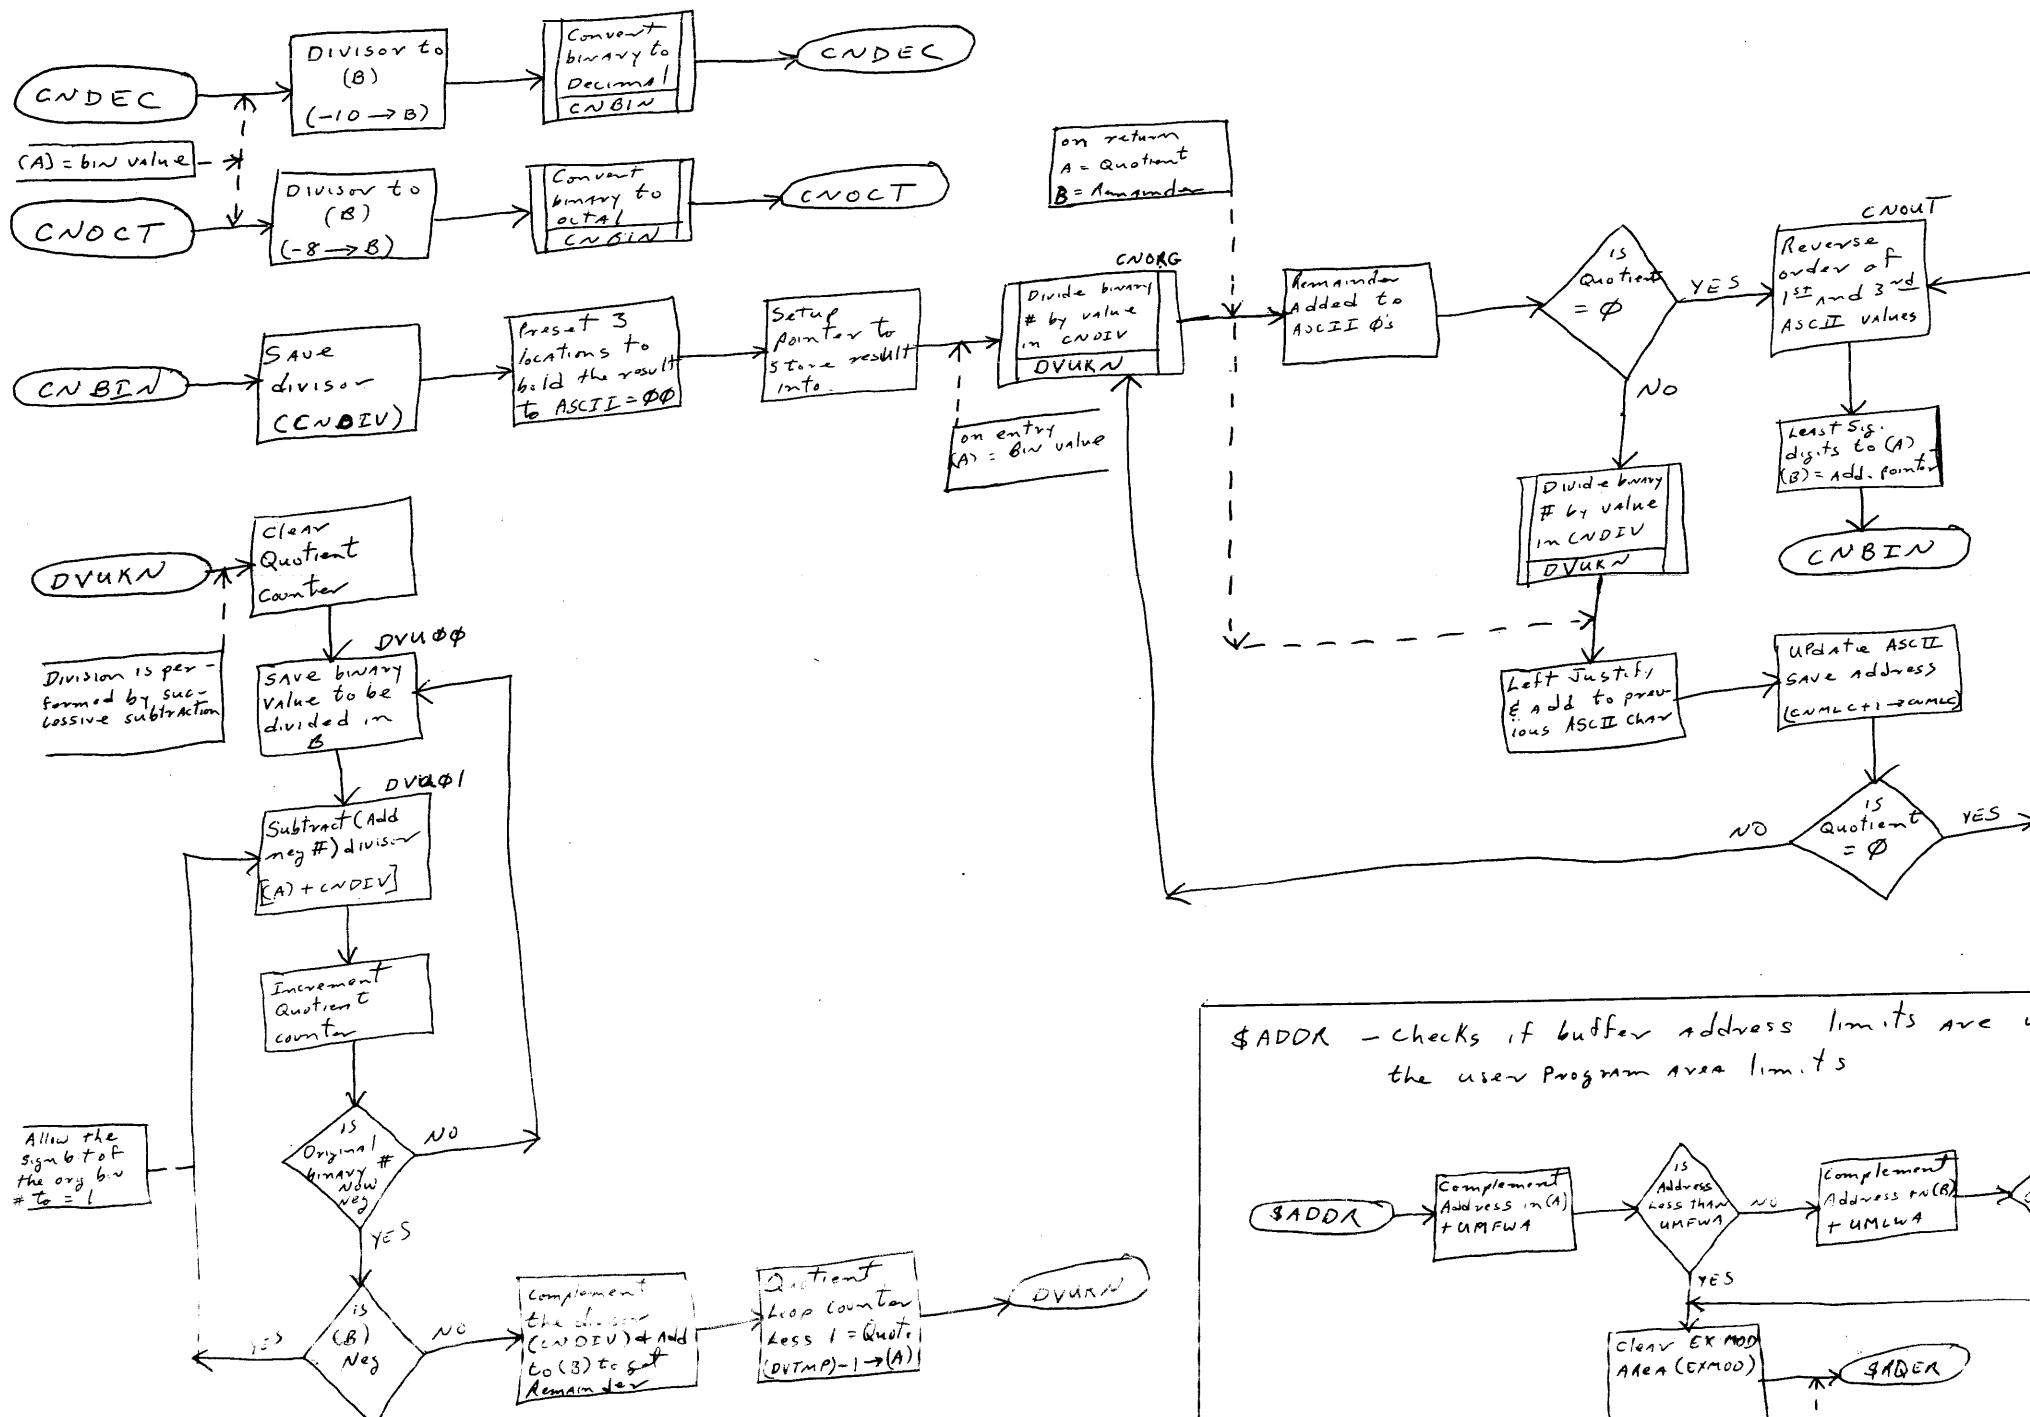



\$ADDR - Checks if buffer address limits are within the user program area limits

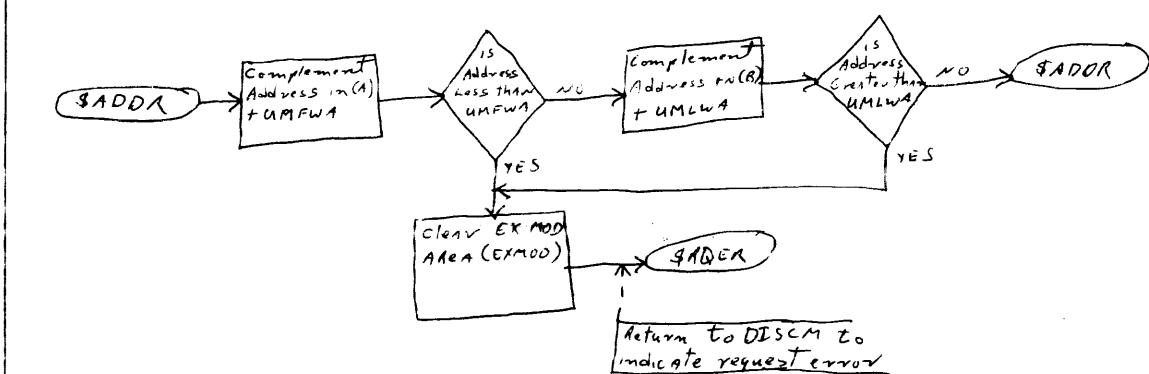



DOS/DOS-M READER DRIVER (DVRØ1) "A"-VERSION


PAGE 37

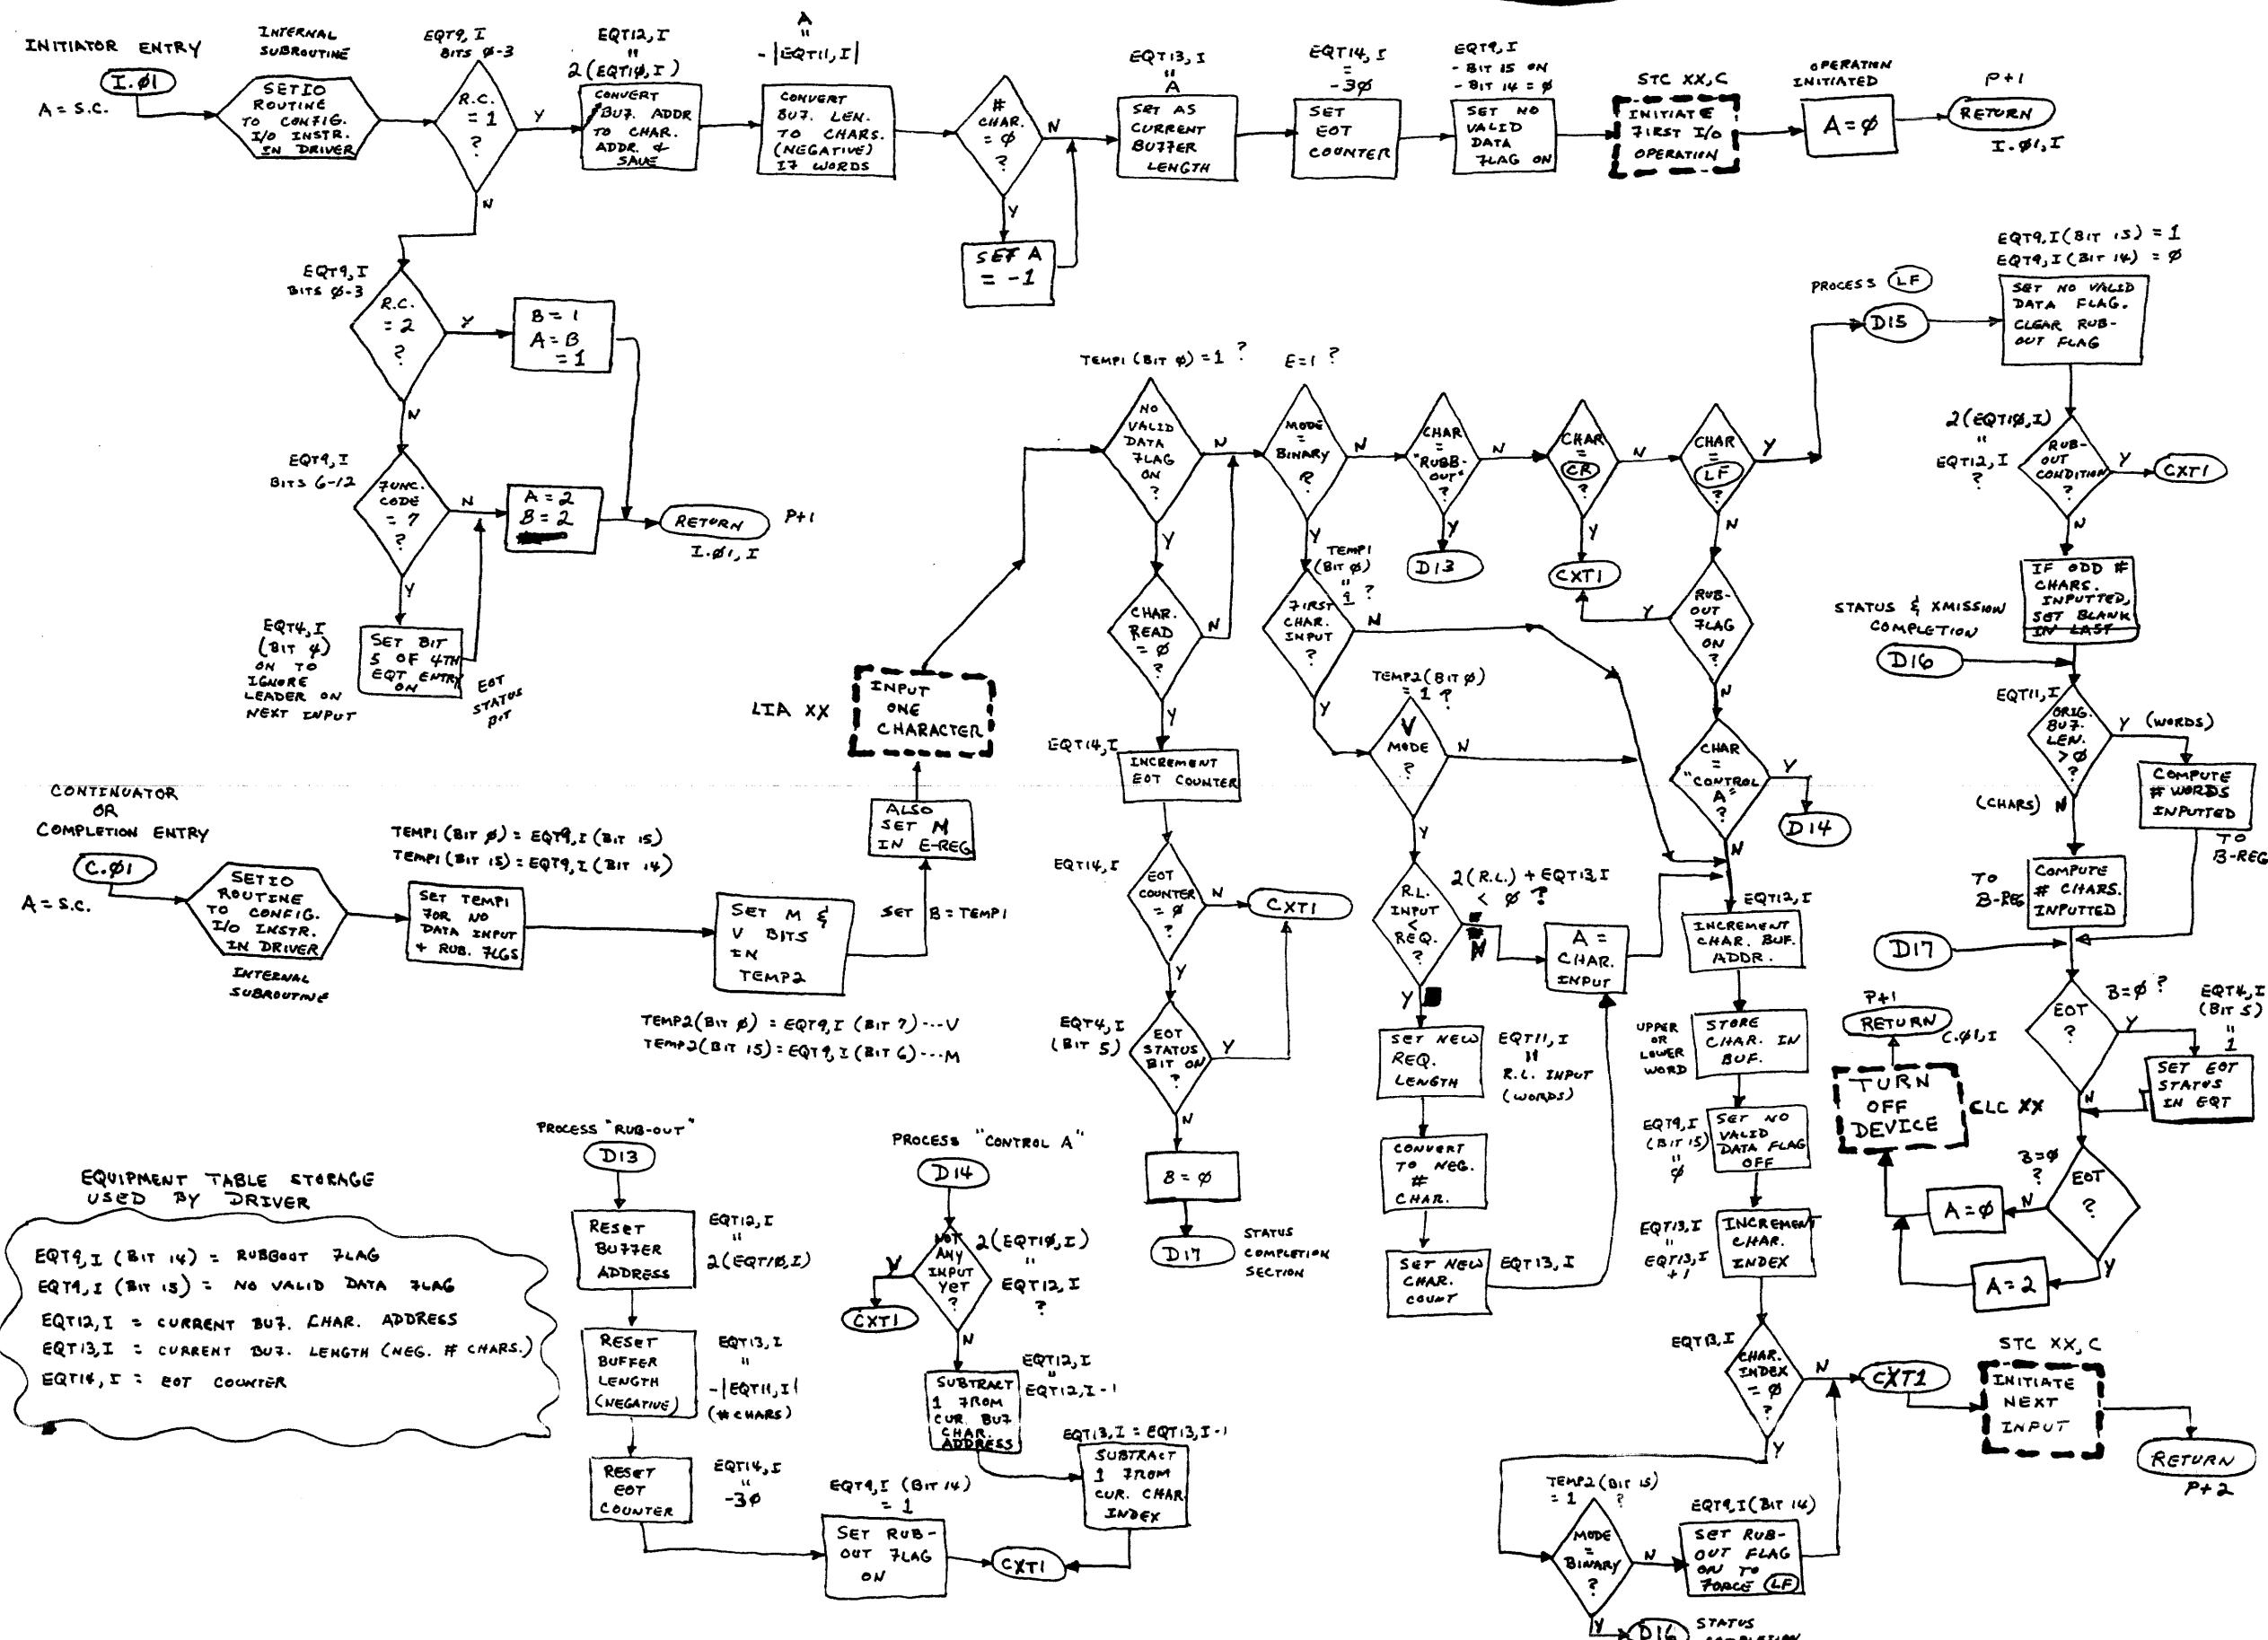


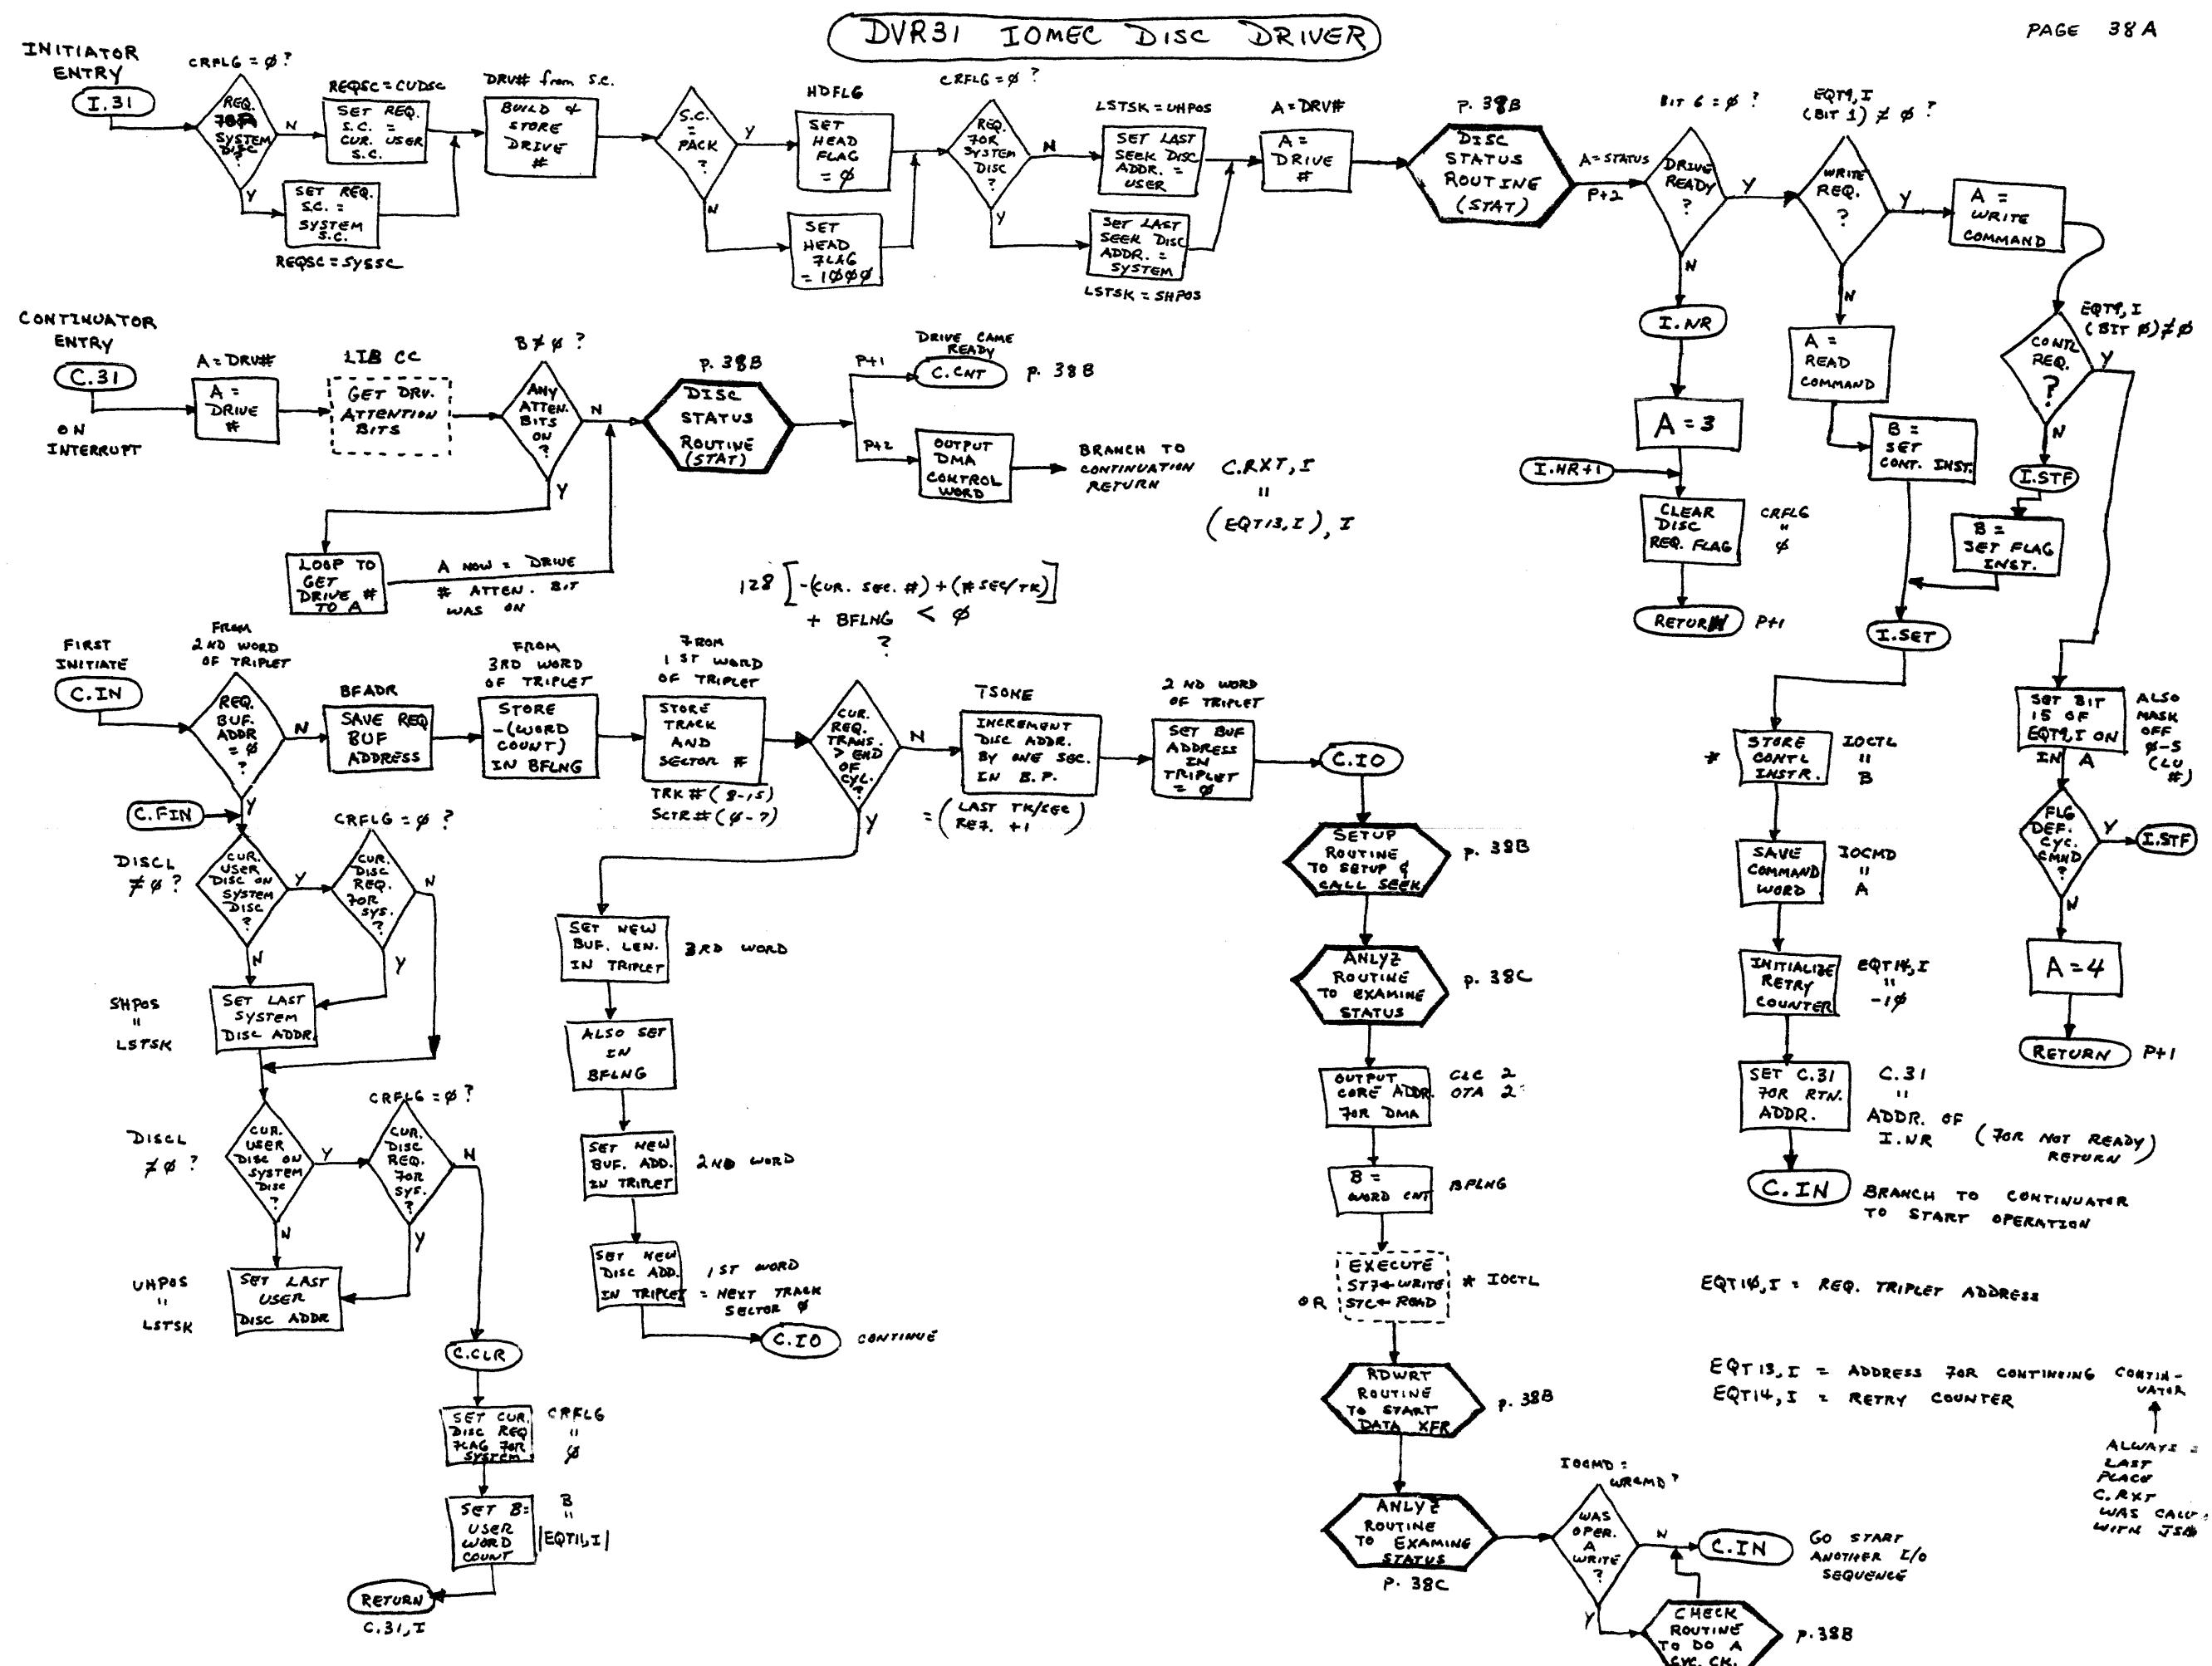

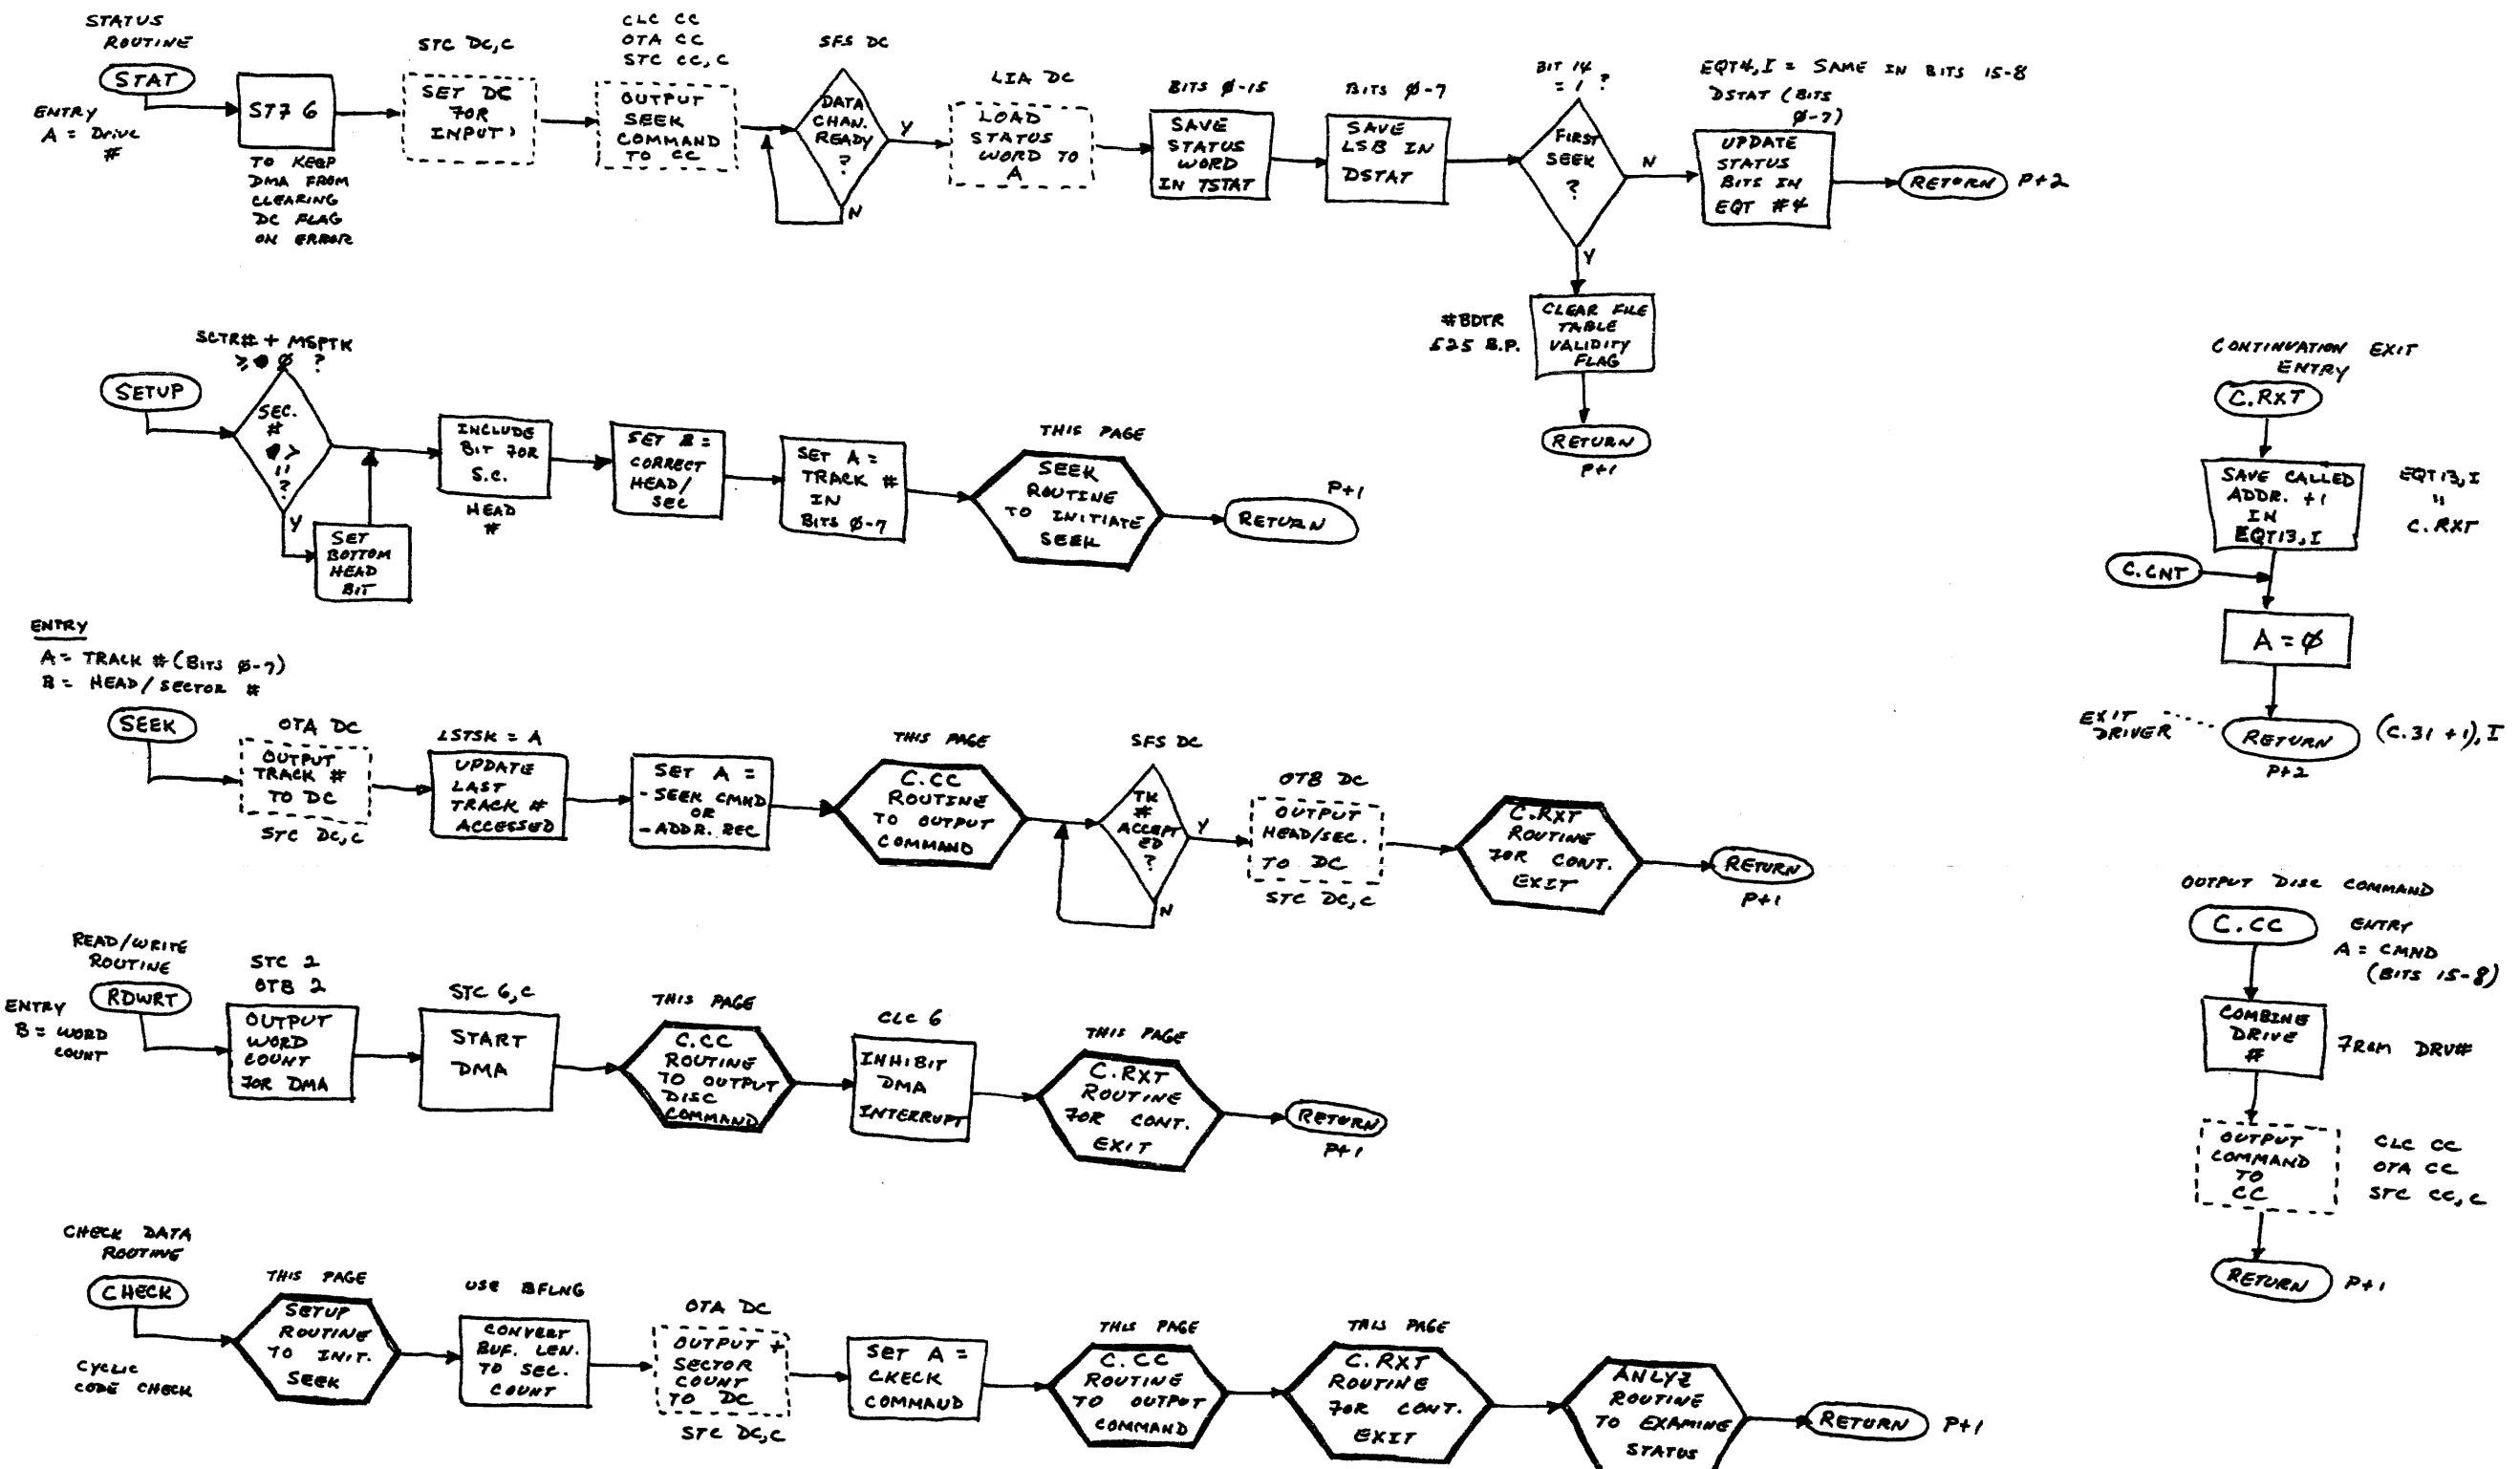

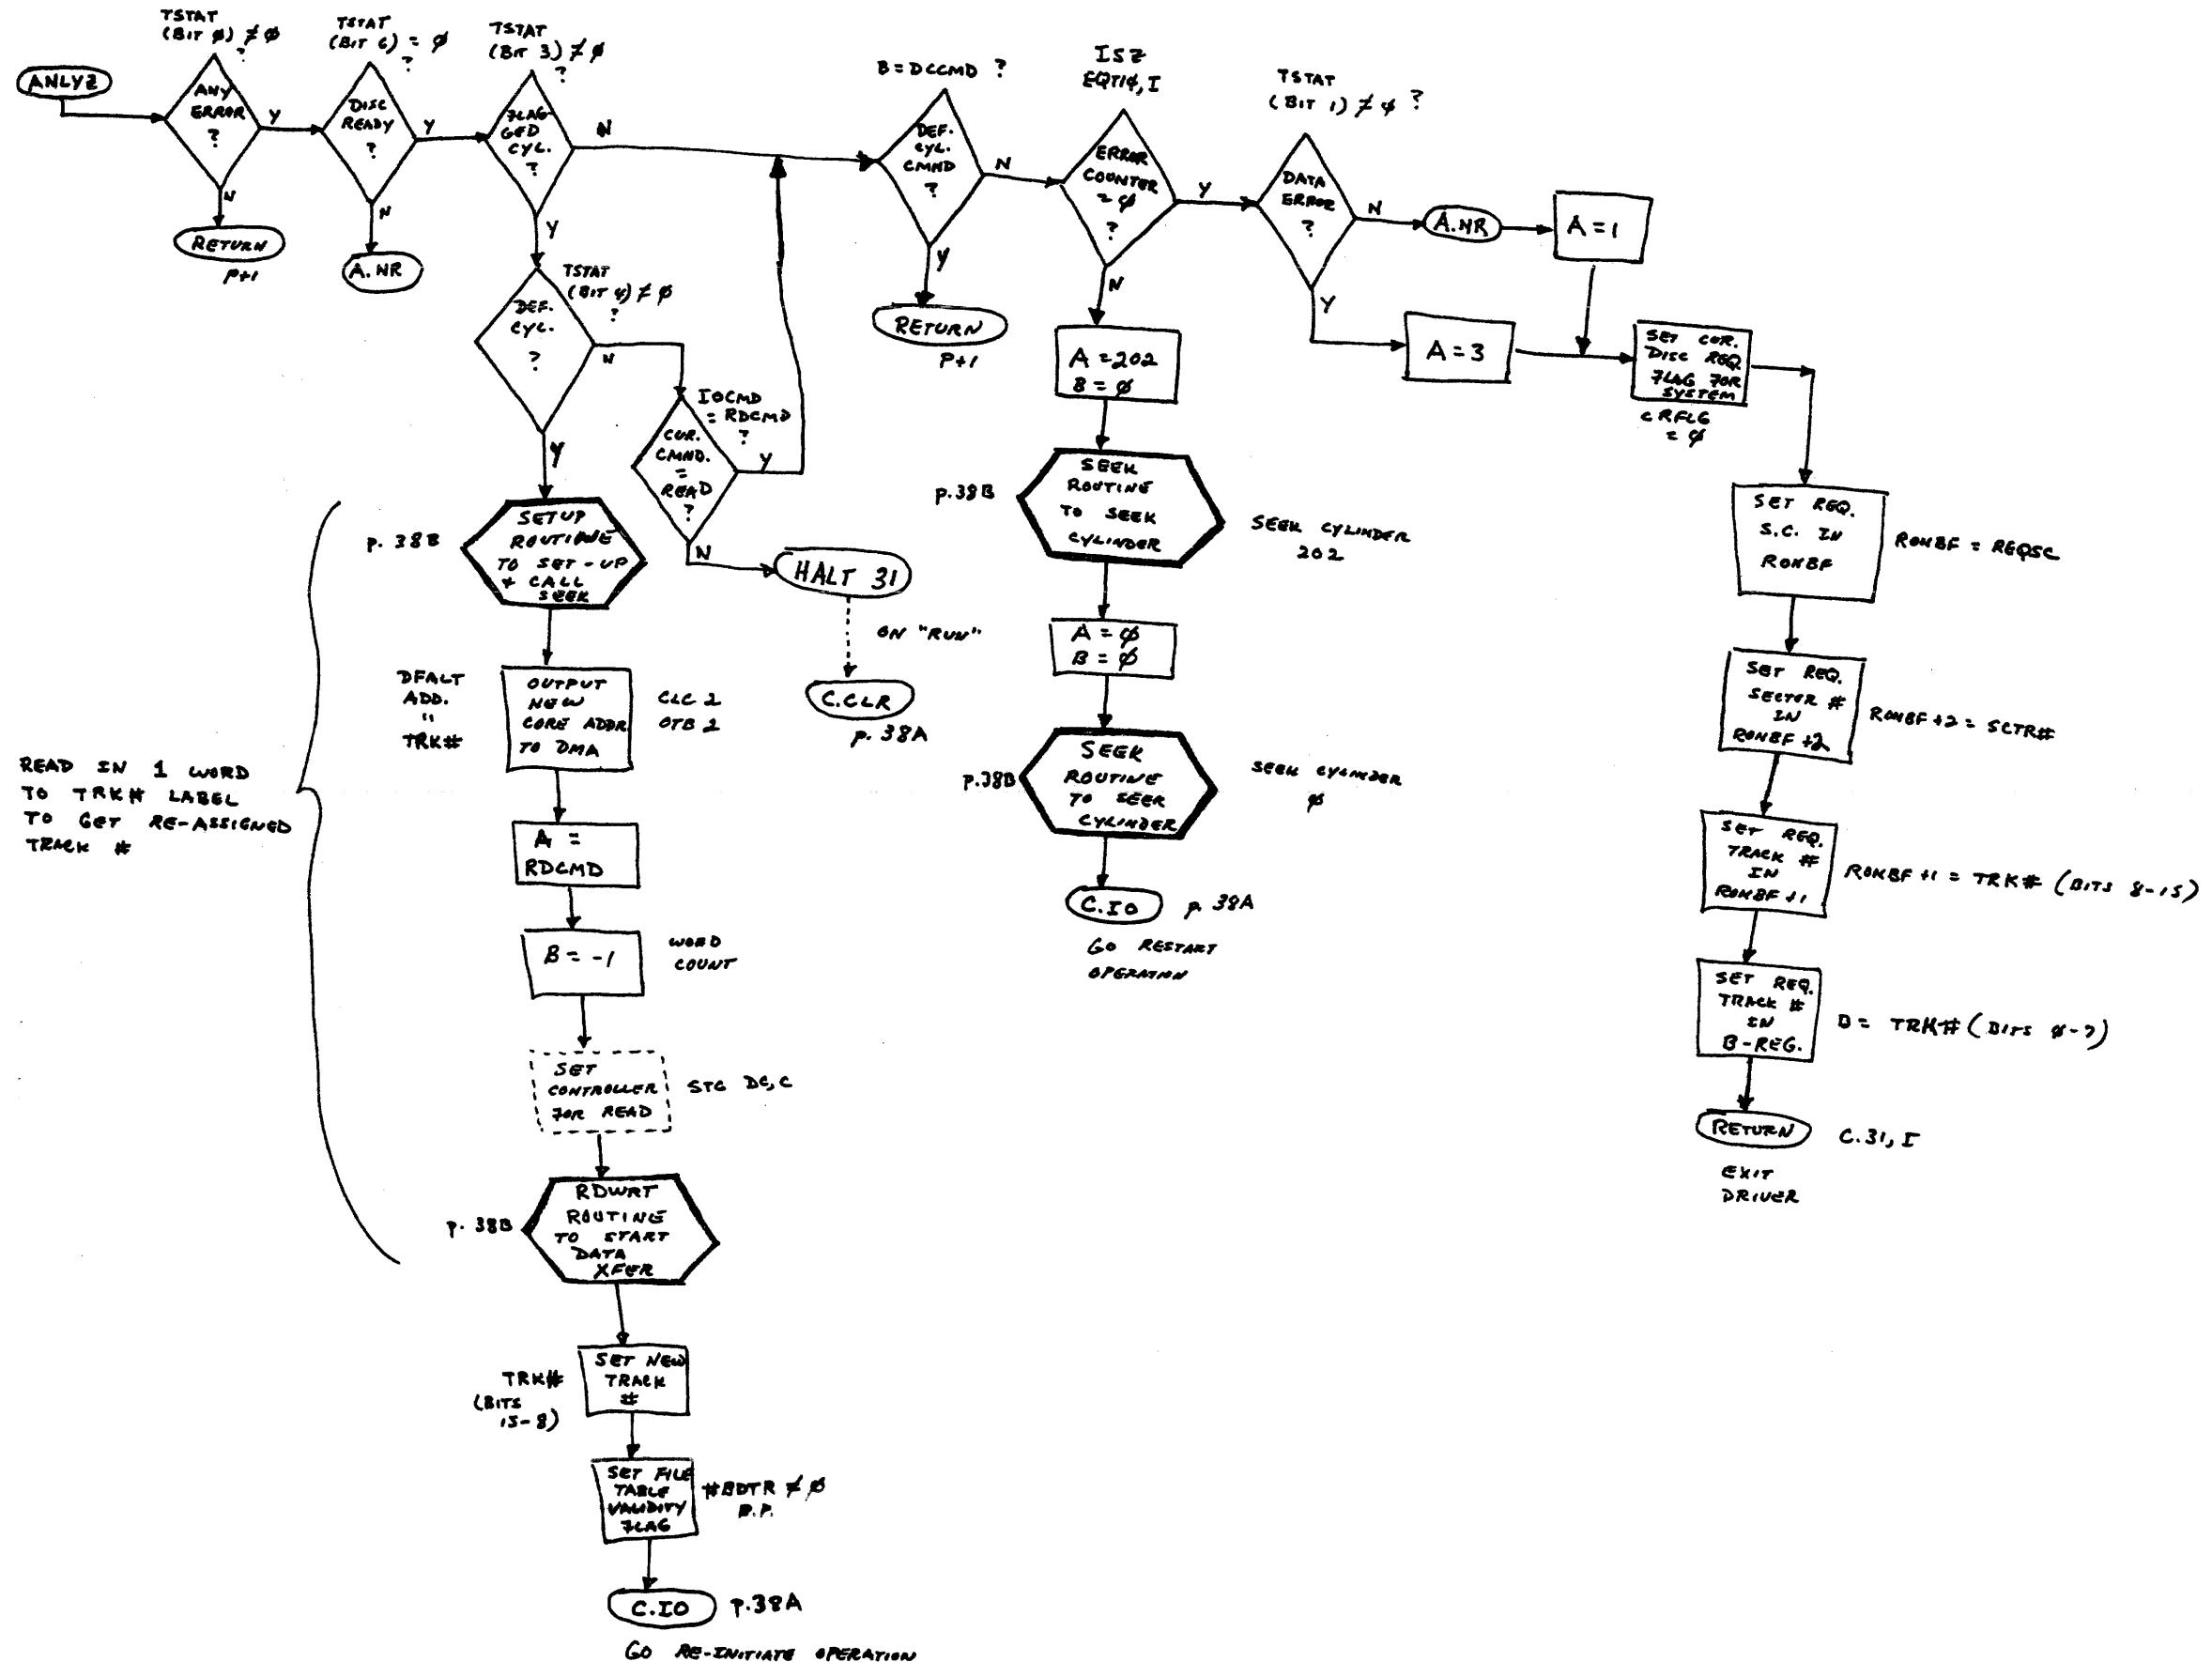


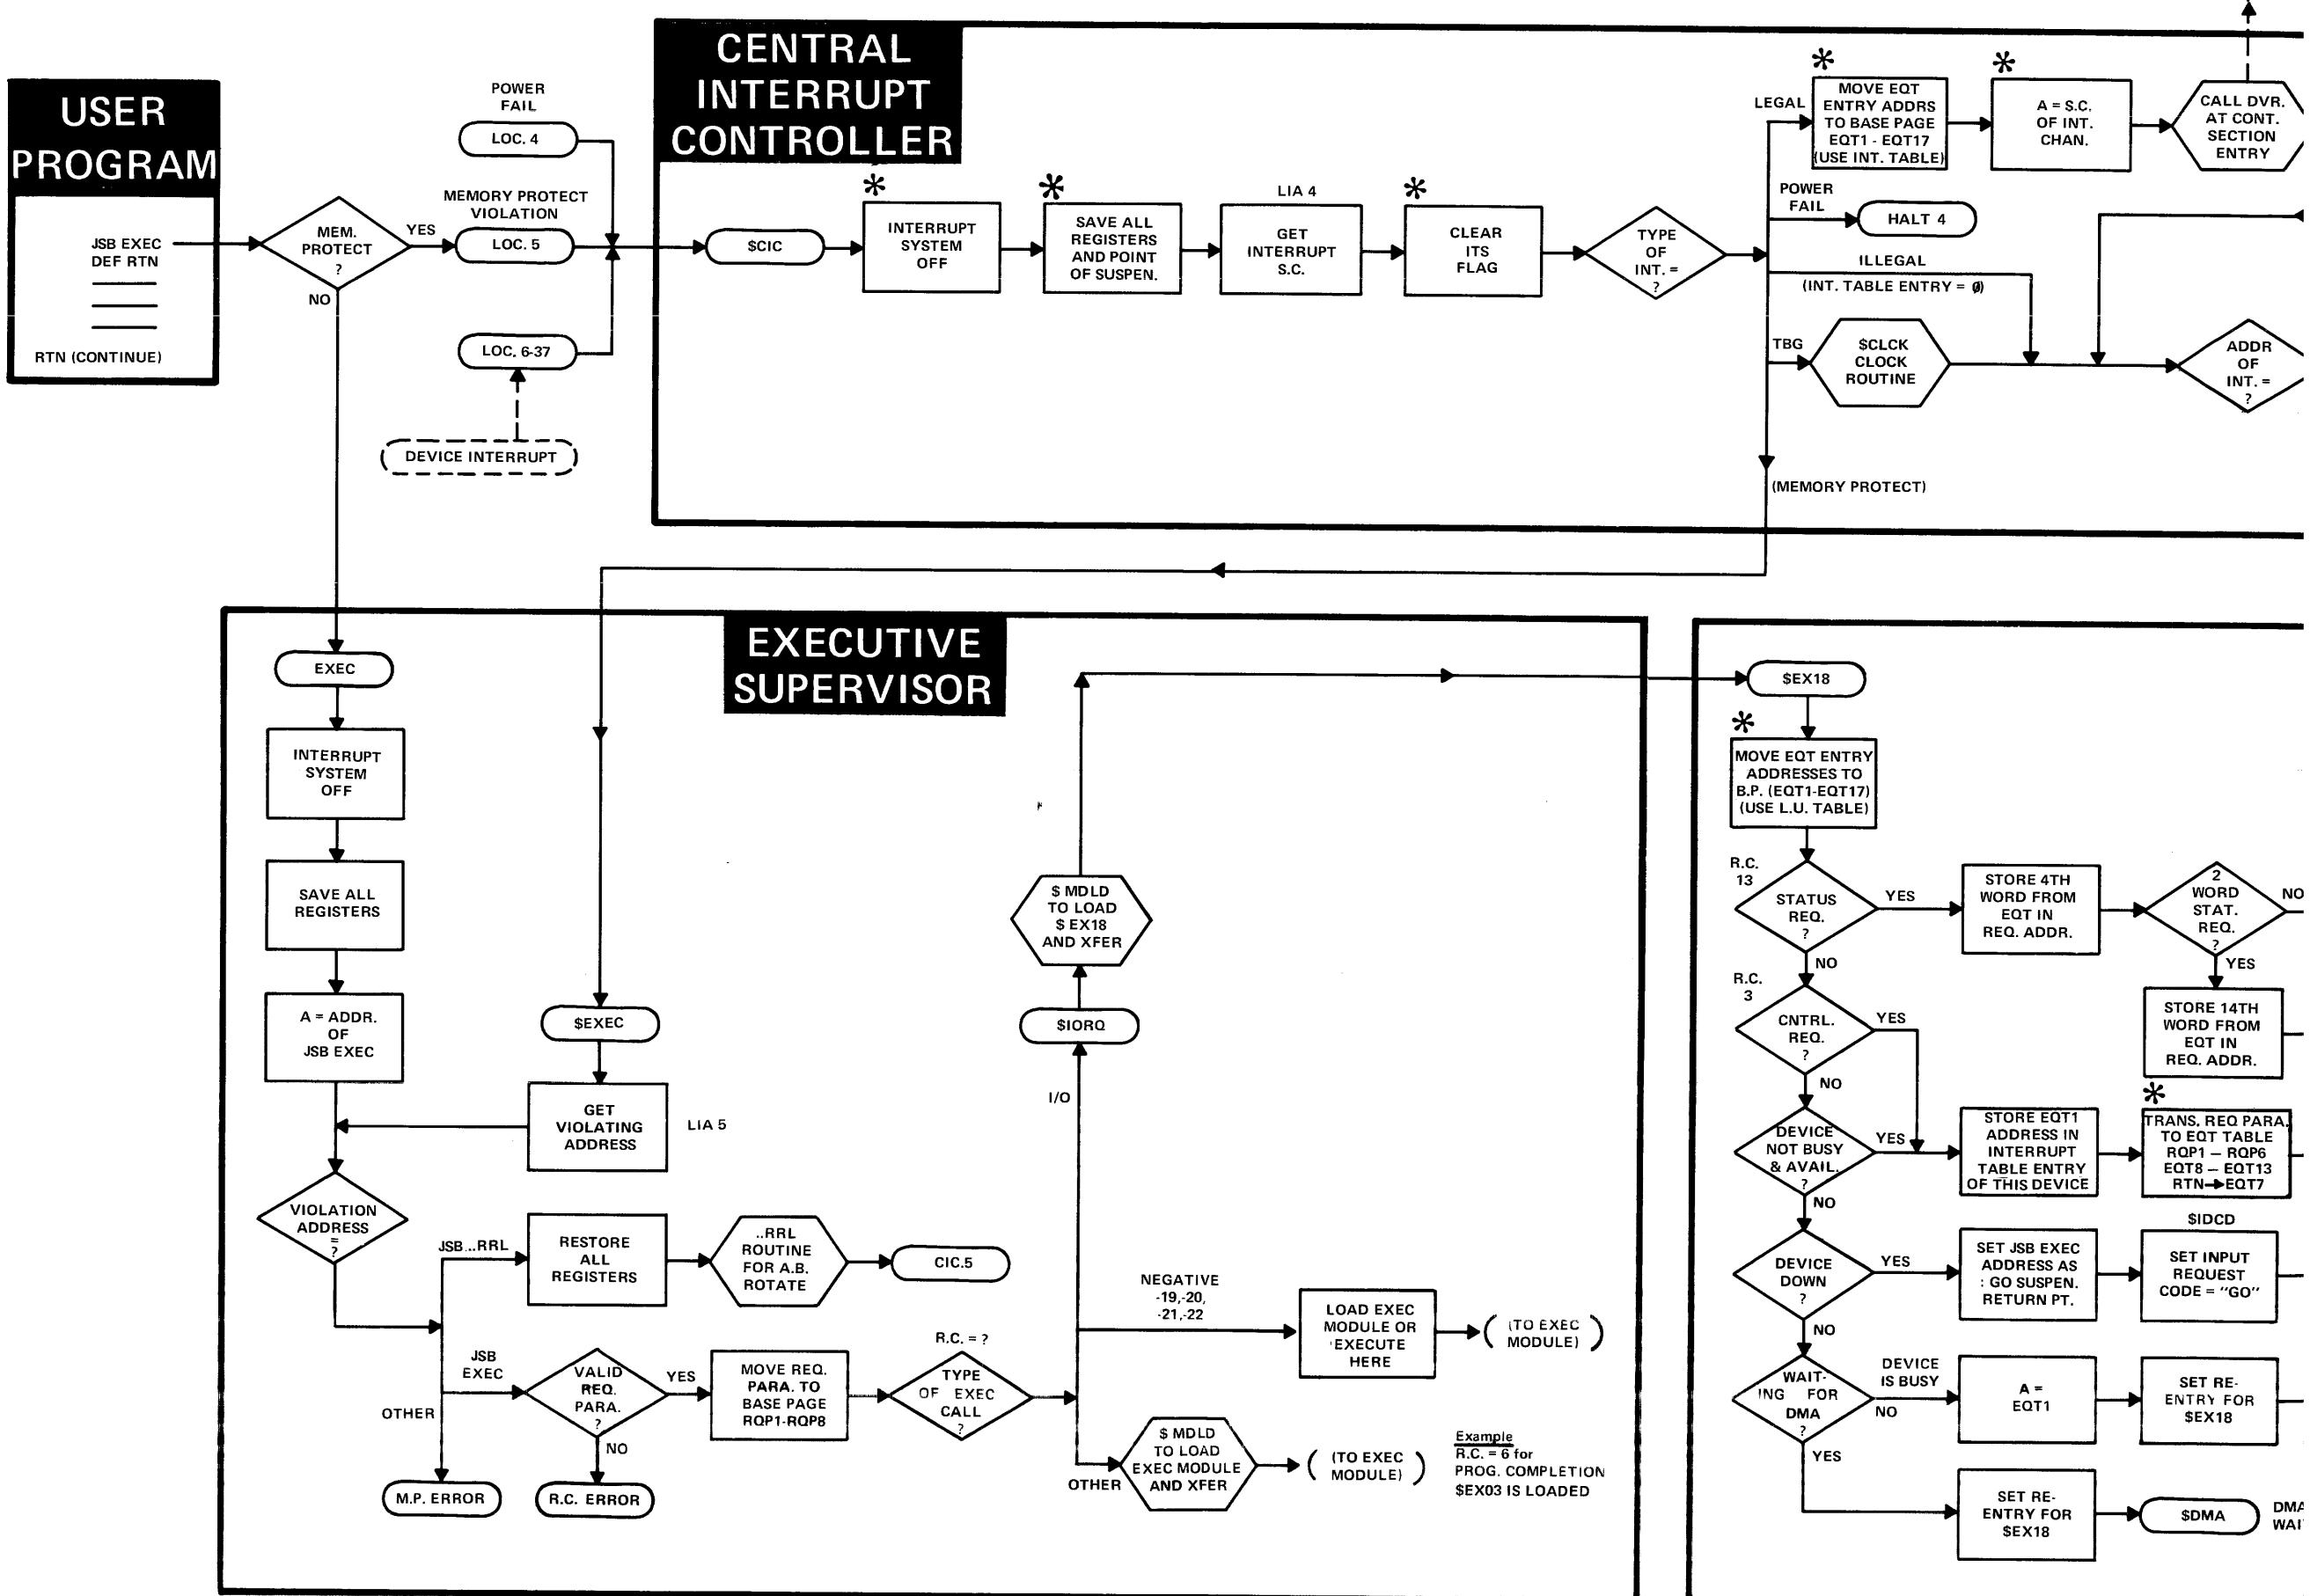

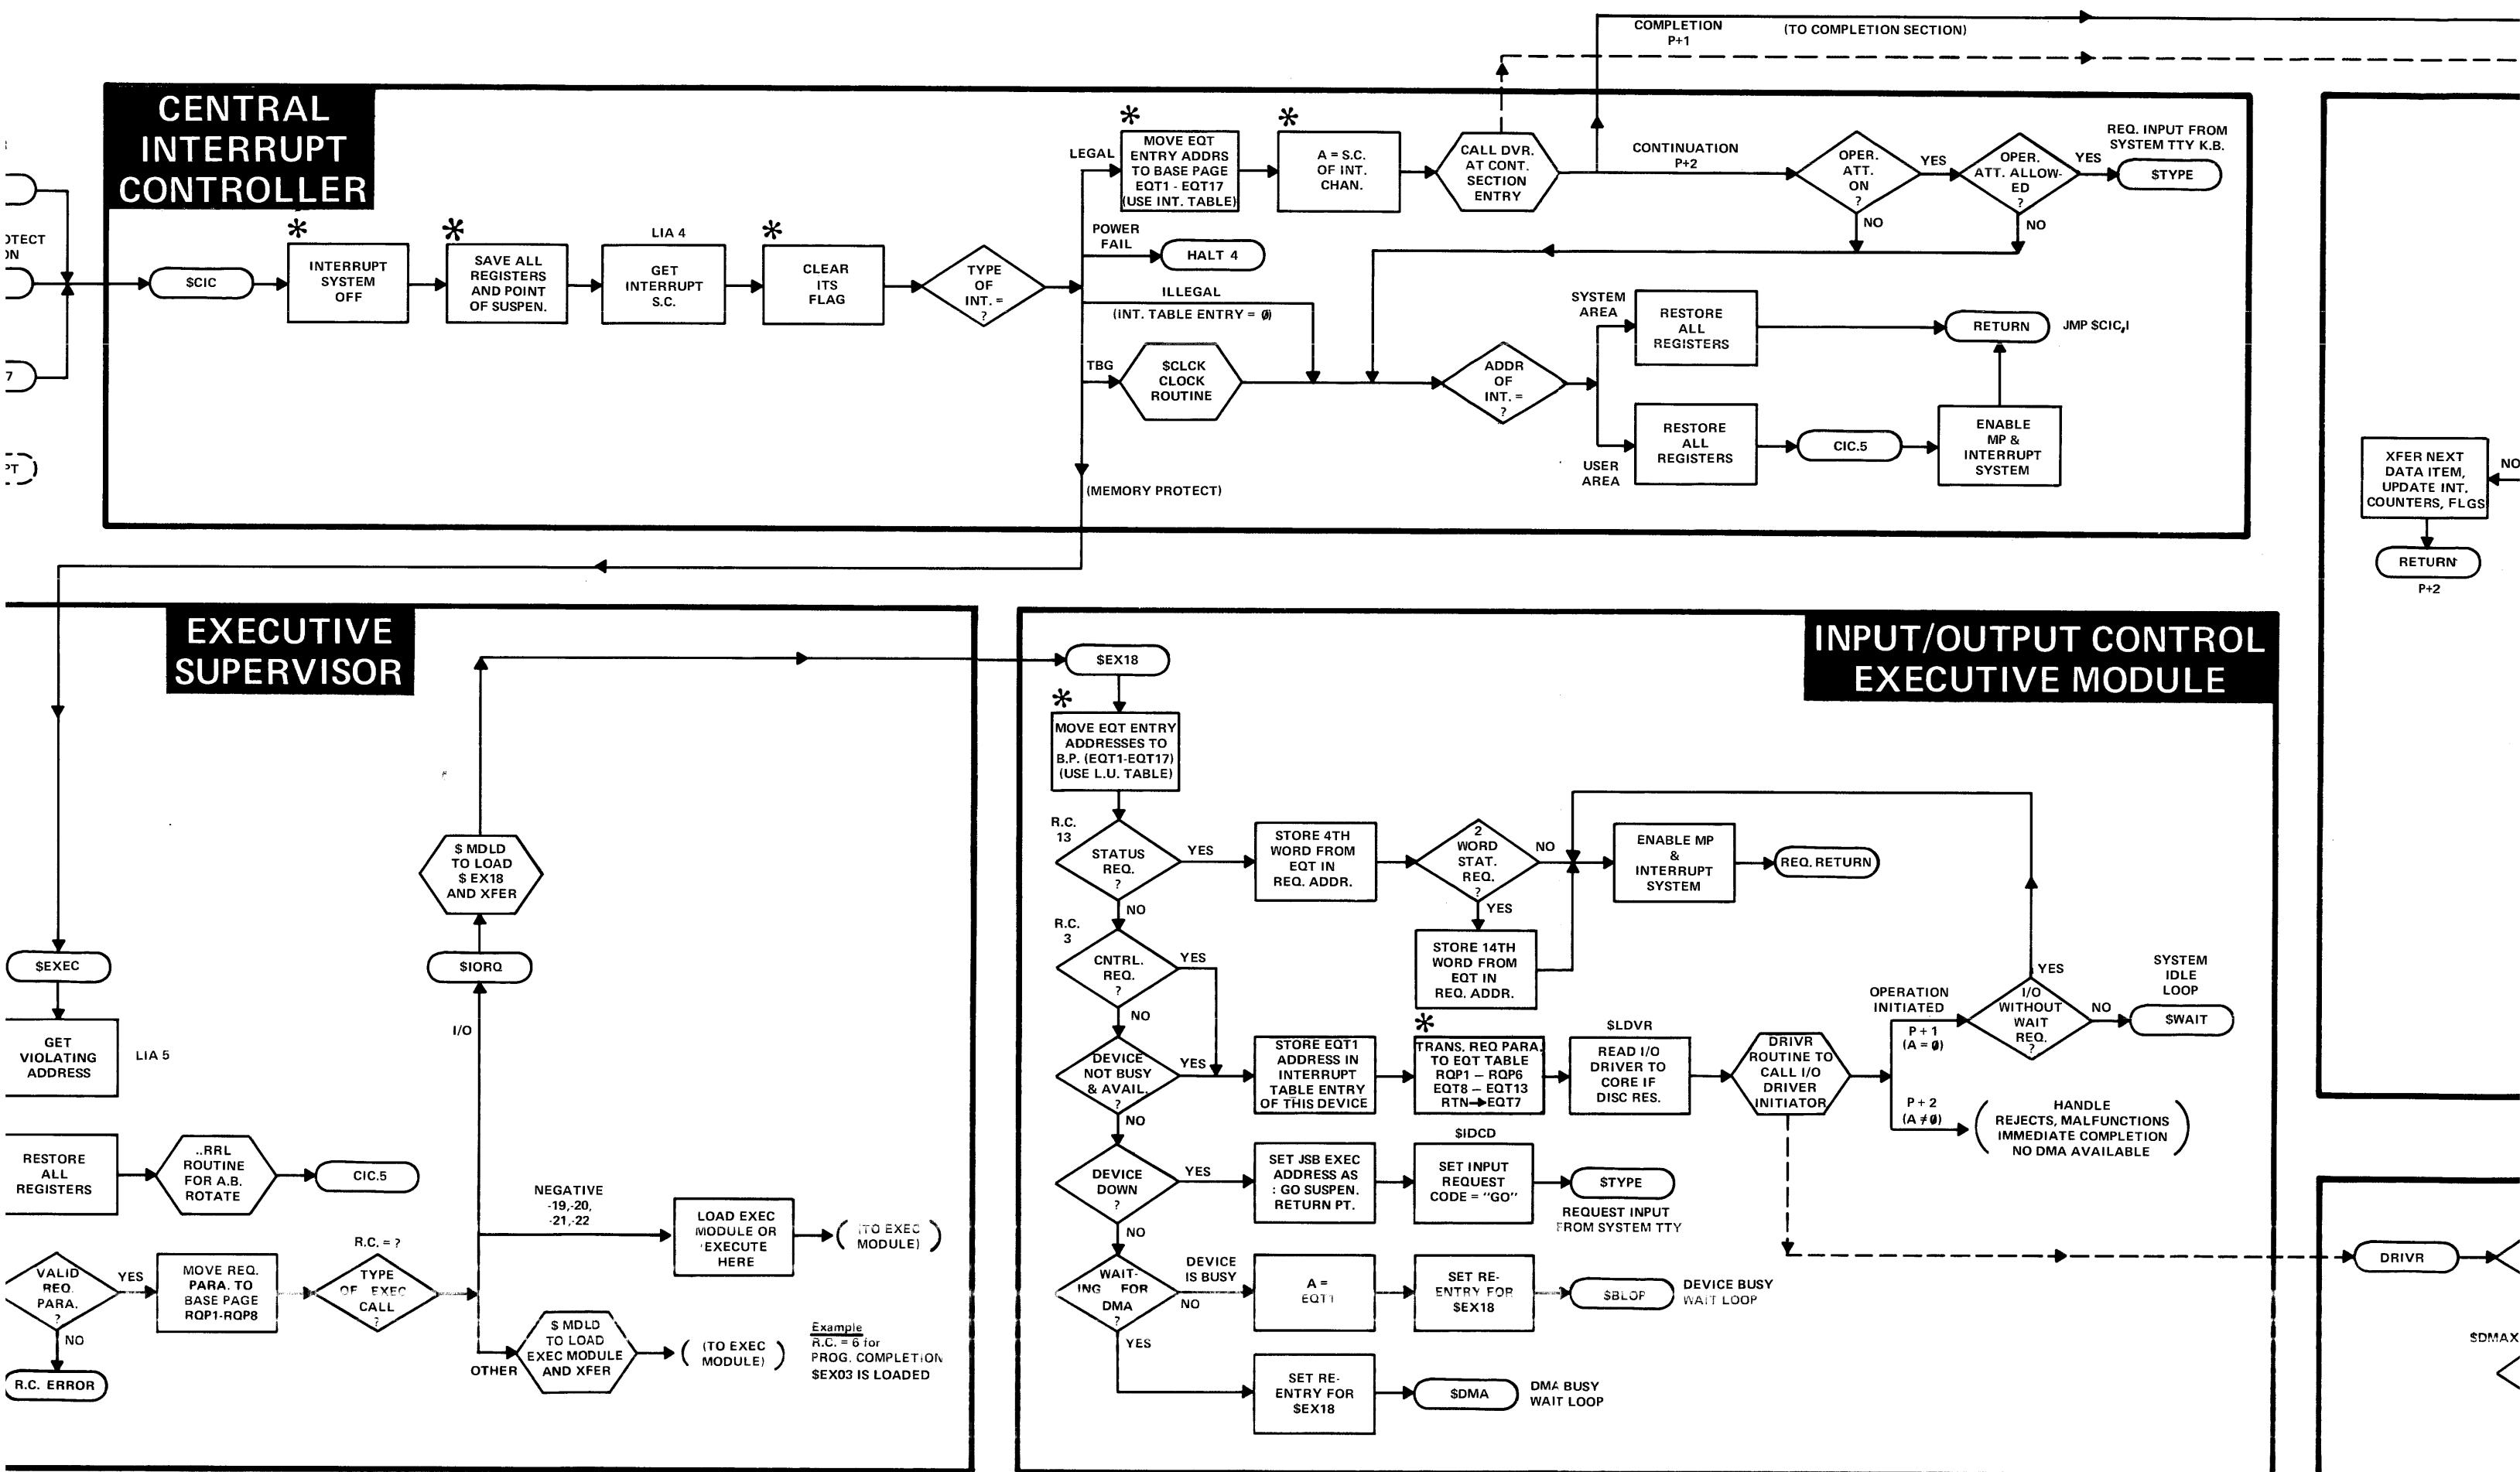

# DOS-M

## I/O REQUEST PROCESSING

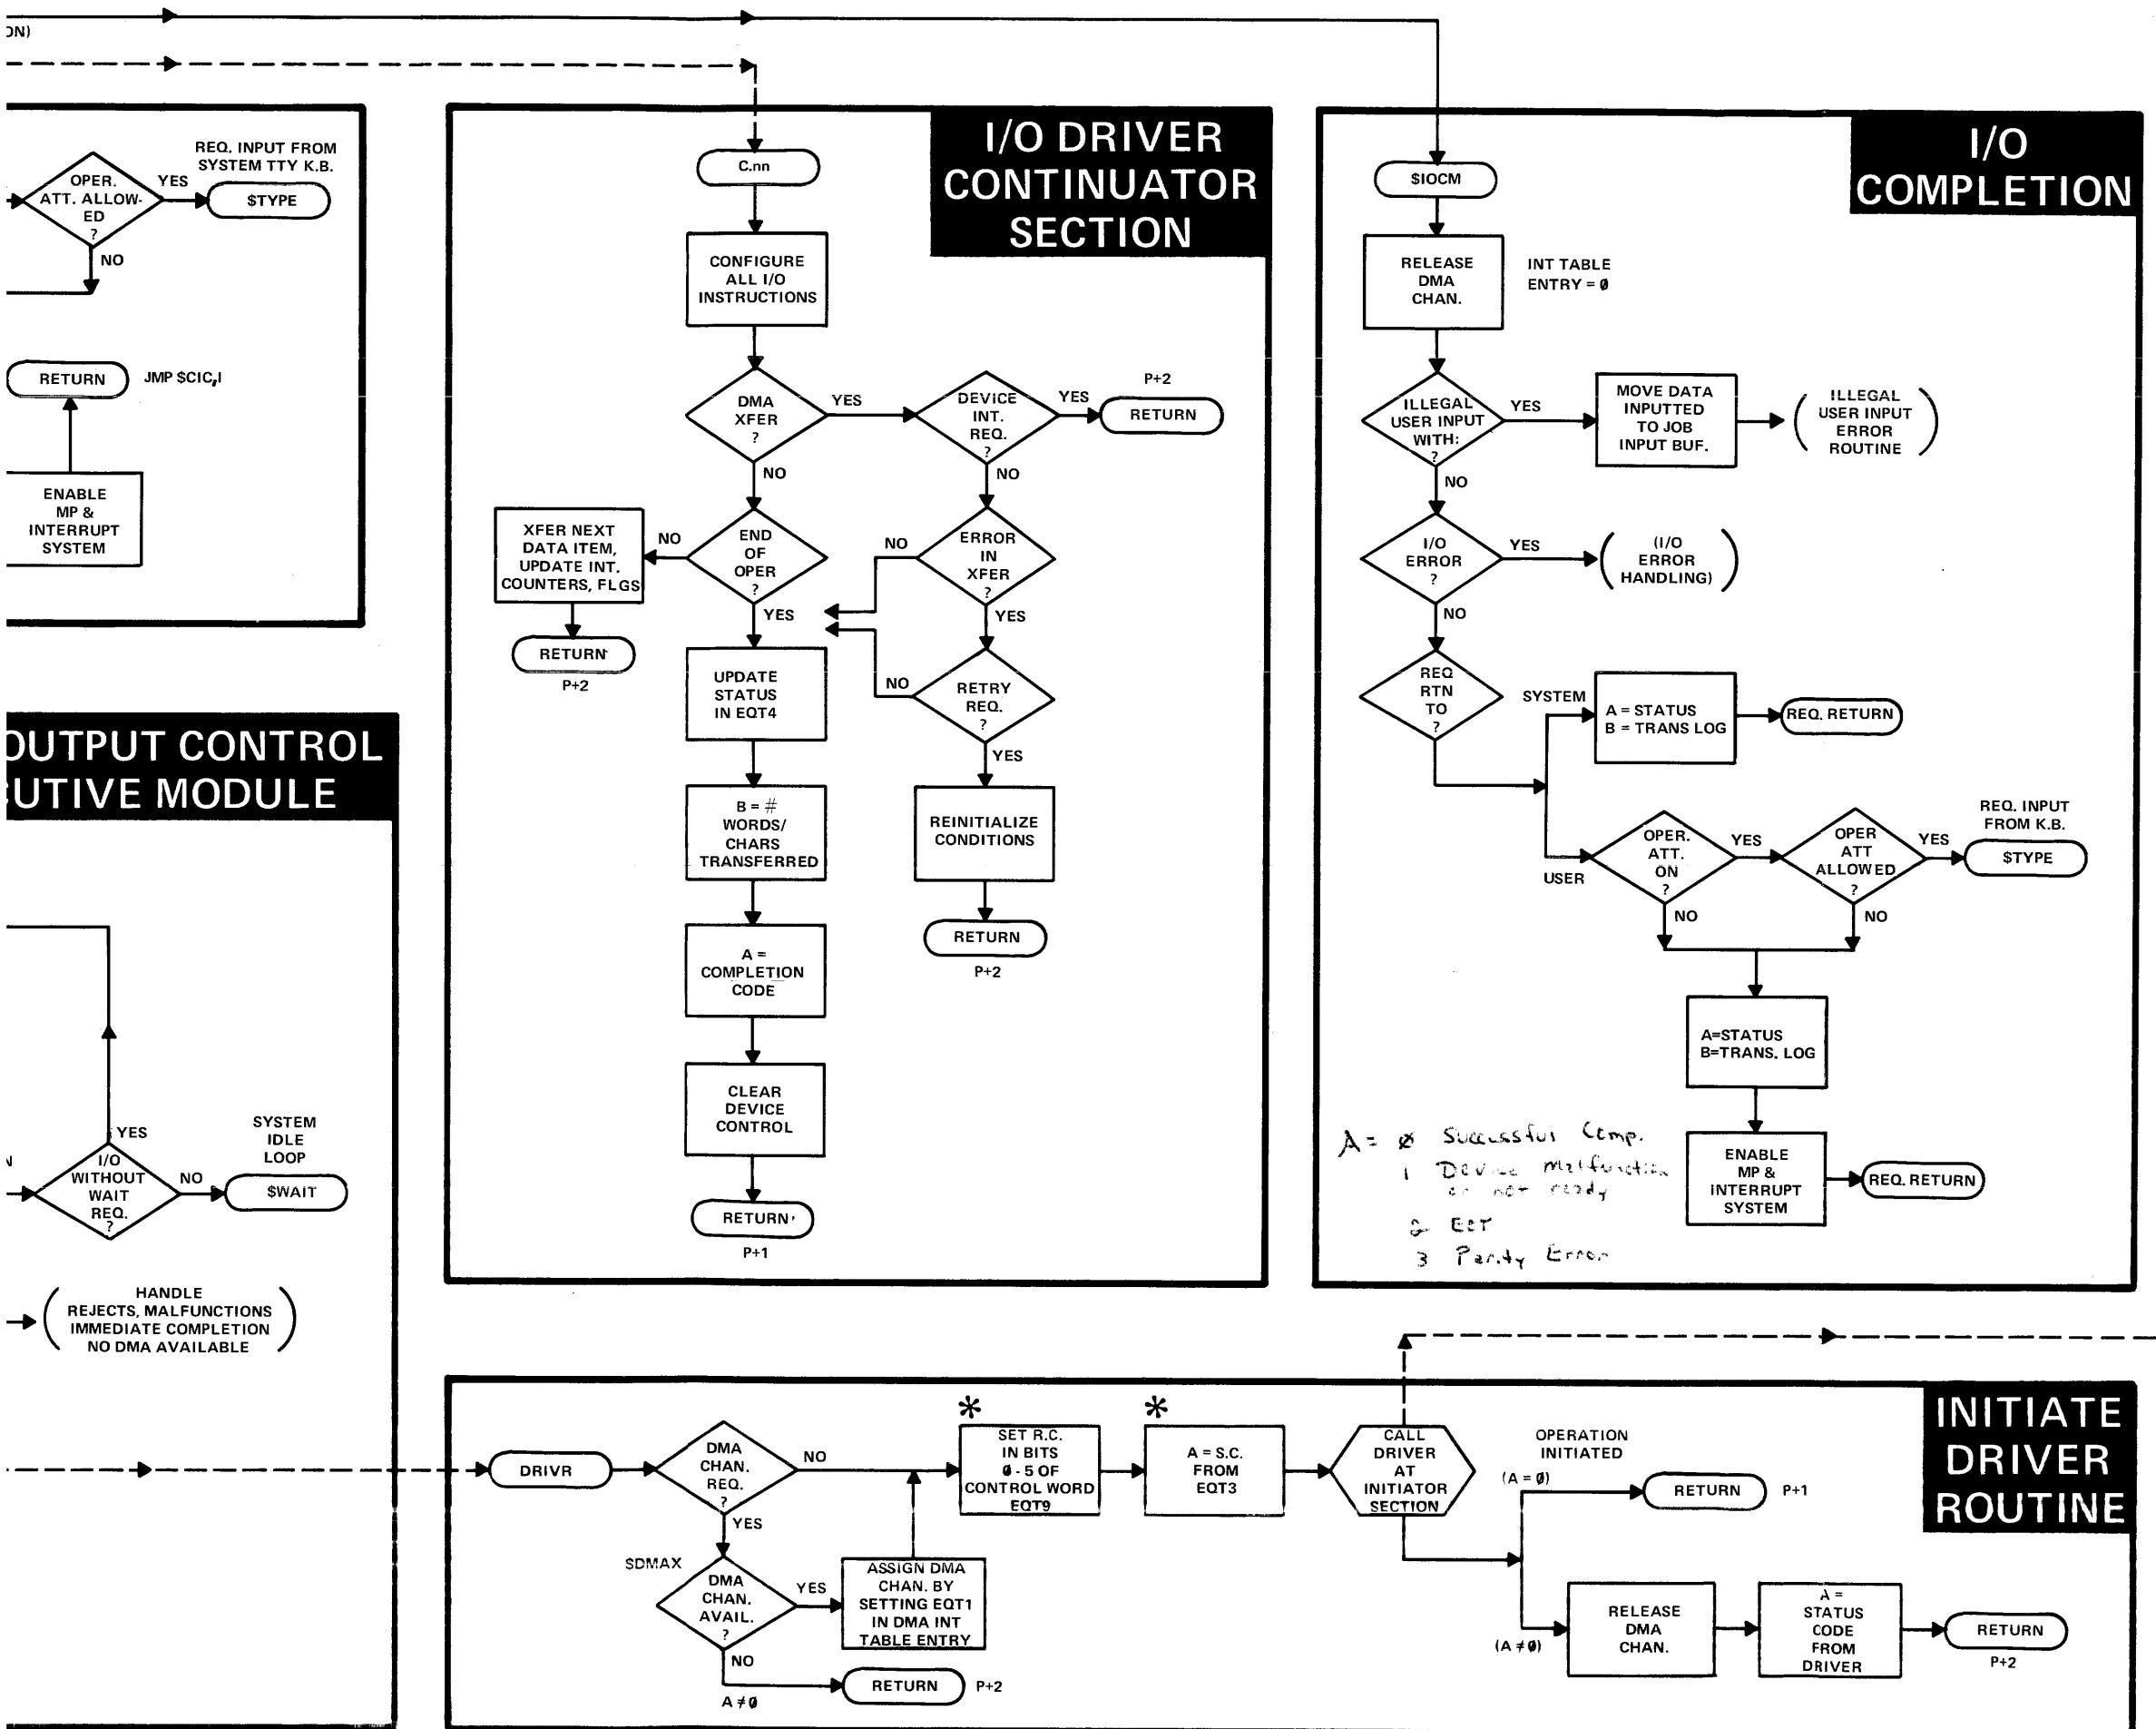

\* INDICATES FUNCTIONS SYSTEM DOES FOR DRIVER

2 = Ctrl Req.  
Illegal

3 = Eqn present  
malfunction  
or not ready

1 = READ/WRITE illegal for device

4 = Initiated

## DOS-M OPERATIONAL LAB PROBLEM

### PURPOSE:

To acquaint user that is already familiar with operation of Fixed-Head DOS System with operation of Moving-Head DOS-M System.

### TASKS TO PERFORM:

- I      Bootstrap system up by two different methods:
- A. Using supplied bootstrap without punching a configured bootstrap. This will be a two step operation on the DOS-M System Computer.
  - B. Using supplied bootstrap to punch a configured bootstrap tape on a computer system different than DOS-M System Computer. Then use this tape on DOS-M System to start system.

### QUESTIONS AND NOTES:

1. Review figures 14A and 14B before starting.
  2. Try specifying a subchannel number not on system or an invalid one on system drive.  
What happens and why?
  3. How could you modify the Core Resident System before it starts executing in memory once loaded from disc? Assume that it is not possible to alter the Core Resident System on the disc before bringing into core with bootstrap(s).
  4. Try bringing the system up with TTY turned "OFF" or the cable disconnected. What happens and why?
  5. Try bringing the system up with Disc DRIVE not ready (Power off or Cartridge UNLOCKED). What happens and why?
- II     Once the system is up and running, try to get around having to enter the DATE DIRECTIVE. Why will the system not let you do this?
- III    Use the system to do some of the operations you did with Fixed Head DOS (store source file, compile, list, edit, load, RUN, ... etc.). Use :OFF directive to bail out of some operations (like :LIST etc.).

### QUESTIONS AND NOTES:

1. Why does it take longer in long Edit or Purge operations than it does in Fixed Head DOS?
  2. You will be using the DEFAULT User Disc during these operations which is on the system disc.
  3. Try listing the User and System Directories.  
What differences are noted from Fixed-Head DOS?
- IV    Exercise the other New Directives (:UD, :SS, :DD, :IN) that do not exist in the Fixed-Head DOS. Here it is best to first use :UD and :IN directives to label the other disc on the system.

## IV Continued

- A. Try labeling the other disc with your name (6 characters maximum).
- B. Store various source files on both user discs using:
  - (1) :UD to assign which disc (current user disc)
  - (2) :ST to store source then-
- C. Exercise :SS directive in Listing (:LI), Editing (:ED) and Purging (:PU) these files. Note how it is possible to store DUPLICATE FILE NAMES on different discs!

### QUESTIONS AND NOTES:

1. Is it possible to purge (:PU) files that are on different User Discs with one command? If not, why?  
(Review :SS directive if confused)
2. Try using :DD,U directive to transfer some of your above files to the other User Disc, changing some of their names in the process. Verify results using :SS and :LI,U directives
3. If and when error messages occur with :UD and :IN directives, try to reason why according to lecture regarding labeling.
4. Try entering :PROG,JOBPR. What happens and why? How could you get out of this situation?

## DOS/DOS-M MEMORY DISPLAY - MODIFY LAB PROGRAM

PROBLEM: Write a user program (and needed subroutines) that will allow the operator to perform the following tasks once loaded and started by :PROG or :RUN directive:

1. Display (in the B-REGISTER) the contents of any memory location whose address is currently in the Switch Register. This section should loop to give the operator a REAL-TIME display in B-REGISTER until switch 15 of the Switch Register is set "ON" (UP). At such time, 2 below should be entered.
2. Allow the operator to modify any memory location contents simply by entering a VALUE & ADDRESS (both in octal) via the TTY keyboard in response to a question typed out by the program (like for example, VALUE/ADDR =?).

NOTE: Following execution of 2 above, the program should go back to Section I above to see if Switch Register has been changed (Bit 15).

### PRELIMINARY CONSIDERATIONS:

- A. Exec call with Request Code of -19 may be used in step 2 above.
- B. One possible method that may be used to read an octal number from the keyboard is by using K or @ format specification. Let the Fortran Formatter do the dirty work!
- C. Put in some feature to "bail out" of this program and return to DOS/DOS-M system control.

### TEST OUT:

- A. Obviously a program such as this has extensive power to WIPE OUT THE SYSTEM. It should be O.K. to modify locations 2,3, or a trap cell that is higher than any used in the particular system being used (like location 37B).
- B. Once you believe your program is faultless, use it to disable the functioning of the System Clock (Time Base Generator) feature. Also use it to display all the SYSTEM BASE PAGE constants and storage locations that we discussed in class.
- C. What good is a program like this?
- D. When would this program be useless?

## DOS-M OPERATIONAL LAB PROBLEM

### PURPOSE:

To acquaint user that is already familiar with operation of Fixed-Head DOS System with operation of Moving-Head DOS-M System.

### TASKS TO PERFORM:

- I      Bootstrap system up by two different methods:
  - A. Using supplied bootstrap without punching a configured bootstrap. This will be a two step operation on the DOS-M System Computer.
  - B. Using supplied bootstrap to punch a configured bootstrap tape on a computer system different than DOS-M System Computer. Then use this tape on DOS-M System to start system.

### QUESTIONS AND NOTES:

1. Review figures 14A and 14B before starting.
  2. Try specifying a subchannel number not on system or an invalid one on system drive.  
What happens and why?
  3. How could you modify the Core Resident System before it starts executing in memory once loaded from disc? Assume that it is not possible to alter the Core Resident System on the disc before bringing into core with bootstrap(s).
  4. Try bringing the system up with TTY turned "OFF" or the cable disconnected. What happens and why?
  5. Try bringing the system up with Disc DRIVE not ready (Power off or Cartridge UNLOCKED). What happens and why?
- II      Once the system is up and running, try to get around having to enter the DATE DIRECTIVE. Why will the system not let you do this?
- III     Use the system to do some of the operations you did with Fixed Head DOS (store source file, compile, list, edit, load, RUN, ... etc.). Use :OFF directive to bail out of some operations (like :LIST etc.).

### QUESTIONS AND NOTES:

1. Why does it take longer in long Edit or Purge operations than it does in Fixed Head DOS?
  2. You will be using the DEFAULT User Disc during these operations which is on the system disc.
  3. Try listing the User and System Directories.  
What differences are noted from Fixed-Head DOS?
- IV     Exercise the other New Directives (:UD, :SS, :DD, :IN) that do not exist in the Fixed-Head DOS. Here it is best to first use :UD and :IN directives to label the other disc on the system.

#### IV Continued

- A. Try labeling the other disc with your name (6 characters maximum).
- B. Store various source files on both user discs using:
  - (1) :UD to assign which disc (current user disc)
  - (2) :ST to store source then-
- C. Exercise :SS directive in Listing (:LI), Editing (:ED) and Purging (:PU) these files. Note how it is possible to store DUPPLICATE FILE NAMES on different discs!

#### QUESTIONS AND NOTES:

1. Is it possible to purge (:PU) files that are on different User Discs with one command? If not, why?  
(Review :SS directive if confused)
2. Try using :DD,U directive to transfer some of your above files to the other User Disc, changing some of their names in the process. Verify results using :SS and :LI,U directives
3. If and when error messages occur with :UD and :IN directives, try to reason why according to lecture regarding labeling.
4. Try entering :PROG,JOBPR. What happens and why?  
How could you get out of this situation?

## DOS/DOS-M MEMORY DISPLAY - MODIFY LAB PROGRAM

PROBLEM: Write a user program (and needed subroutines) that will allow the operator to perform the following tasks once loaded and started by :PROG or :RUN directive:

1. Display (in the B-REGISTER) the contents of any memory location whose address is currently in the Switch Register. This section should loop to give the operator a REAL-TIME display in B-REGISTER until switch 15 of the Switch Register is set "ON" (UP). At such time, 2 below should be entered.
2. Allow the operator to modify any memory location contents simply by entering a VALUE & ADDRESS (both in octal) via the TTY keyboard in response to a question typed out by the program (like for example, VALUE/ADDR =?).

NOTE: Following execution of 2 above, the program should go back to Section I above to see if Switch Register has been changed (Bit 15).

### PRELIMINARY CONSIDERATIONS:

- A. Exec call with Request Code of -19 may be used in step 2 above.
- B. One possible method that may be used to read an octal number from the keyboard is by using K or @ format specification. Let the Fortran Formatter do the dirty work!
- C. Put in some feature to "bail out" of this program and return to DOS/DOS-M system control.

### TEST OUT:

- A. Obviously a program such as this has extensive power to WIPE OUT THE SYSTEM. It should be O.K. to modify locations 2,3, or a trap cell that is higher than any used in the particular system being used (like location 37B).
- B. Once you believe your program is faultless, use it to disable the functioning of the System Clock (Time Base Generator) feature. Also use it to display all the SYSTEM BASE PAGE constants and storage locations that we discussed in class.
- C. What good is a program like this?
- D. When would this program be useless?

MODIFY / DISPLAY LAB PROBLEM

PAGE 0001

2116

```
FTN,L
      PROGRAM LAB7
100 CALL DSPLY(IDUM)
C
      WRITE(1,101)
101 FORMAT(1,"VAL/ADDR ?   ")
      READ(1,*) IV,IA
      IF(IA-0) 500,500,300
C
300 CALL MODFY(IV,IA)
      GO TO 100
C
500 CALL EXEC(6)
END
```

PAGE 0002 #01

```
0001          ASMB,L
0002  00000      NAM DSPLY,6
0003          ENT DSPLY
0004          EXT •ENTR
0005*
0006  00000 000000  IDUM  NOP
0007  00001 000000  DSPLY  NOP
0008  00002 016001X  JSB  •ENTR      LINK
0009  00003 000000R  DEF  IDUM      PARAMETERS
0010*
0011  00004 102501  LOOP  LIA 1
0012  00005 002020  SSA
0013  00006 126001R  JMP  DSPLY,I  .....EXIT SW 15 IS UP.....
0014  00007 164000  LDB  0,I
0015  00010 026004R  JMP  LOOP
0016*
0017          END
** NO ERRORS*
```

PAGE 0002 #01

```
0001          ASMB,L
0002  00000      NAM MODFY,6
0003          ENT MODFY
0004          EXT •ENTR,EXEC
0005*
0006  00000 000000  IV    NOP
0007  00001 000000  IA    NOP
0008  00002 000000  MODFY NOP
0009  00003 016001X  JSB  •ENTR
0010  00004 000000R  DEF  IV
0011*
0012  00005 162000R  LDA  IV,I
0013  00006 166001R  LDB  IA,I
0014*
0015  00007 016002X  JSB  EXEC
0016  00010 000012R  DEF  *+2
0017  00011 000013R  DEF  RCODE
0018  00012 126002R  JMP  MODFY,I
0019*
0020  00013 177755  RCODE DEC -19
0021          END
** NO ERRORS*
```

```
0001  FTN*1
0002      PROGRAM LAB7
0003      100 CALL DSPLY(TDUM,TTEST)
0004      TF (TTEST-1) 900,900,800
0005      C
0006      800 WRITE(1•801) TDUM
0007      801 FORMAT(K20)
0008      GO TO 100
0009      C
0010      900 WRITE(1•101)
0011      101 FORMAT(1,"VAL/ADDR ? <") -----
0012      READ(1,*) TV•IA
0013      TF (TA=0) 500,500,300
0014      C
0015      300 CALL MODFY(TV•IA)
0016      GO TO 100
0017      C
0018      500 CALL EXEC(6)
0019      END
0020      END$*
***** LTST END *****
```

DISPLAY / modify

FOR 2114

## IOMEC DISC MODIFY LAB PROBLEM

PROBLEM: Write a STANDALONE IOMEC Disc Modify program that will enable a competent user to observe and modify the contents of any sector within any track on any disc (fixed or removable) in a maximum of up to four drive disc system by following the instructions below.

### OPERATING INSTRUCTIONS FOR USING THIS PROGRAM

1. Load absolute tape using paper tape binary loader. Turn Disc Protect Override Switch "ON".

2. Initialize by performing the following:

A. LOAD ADDRESS 2.

B. Set Switch Register as follows:

<u>SWITCH #'s</u>	<u>ACTION OR CONTENT</u>
3-7	Select Code of Data Channel.
Ø-2	Subchannel number.

C. Press "PRESET" and "RUN". If 102077 Halt follows proceed to 3 below, else restart at B above.

3. Use Step 4 below to READ or WRITE one sector from or to the Disc selected in 2 above. The 128 word buffer (starting at location 100 octal in memory) may be examined, modified, and written back onto the disc as desired. To restart Step 4 following buffer display or modify, load address 300 octal. To reinitialize (i.e. change disc subchannel #, etc..) restart at step 2 above.

4. Disc Read/Write Step

A. Set Switch Register as follows:

<u>SWITCH #</u>	<u>ACTION OR CONTENT</u>
15	"UP" to write one sector on Disc "DOWN" to read one sector from Disc.
6-13	Track # (Ø-312 octal).
Ø-4	Sector # (Ø-27 octal).

#### 4. Disc Read/Write Step (continued)

B. Press "RUN" for Read/Write to occur. If 102077 HALT follows the operation was performed successfully. HALT 102011 means an error occurred (the DISC PROTECT OVERRIDE SWITCH being "OFF" can cause this). Press "RUN" for automatic retry of the same operation following 102011 HALT.

---

#### PRELIMINARY CONSIDERATIONS

1. Follow Disc Command sequences of slides 69A-69F.
  2. Write configuration section so that it may be used again without reloading the program.
  3. Declare Read/Write Buffer starting at 100 octal.
  4. Turn off interrupt system to avoid trap cell execution etc...
  5. Write Disc Read/Write section such that previous operation may be retried on "RUN" following 102011 error HALT.
- 

#### NOTES:

1. Applications for this program include:
    - A. Patching protected areas of System Disc to correct known bugs or incorrect System Generation.
    - B. Purging portions of Protected System Directory.
    - C. Modifying System Generated I/O Tables for a completely different environment.
    - D. Simple file modification without re-entering data or using Edit Directive etc...
  2. Try some of the above applications once you are positive your program is debugged.
  3. How many other useful applications can you think of?
-

## **Section II—Disk Cartridge Handling and Operation**

### **2.1 GENERAL**

Magnetic disk technology provides computer users the advantages of random recovery of data, and overall increases in speed and efficiency in information storage.

The disk is a precision instrument; thus, it requires more careful handling than other media such as tape. This is most clearly seen in its relationship with the Disk Cartridge Drive. The read/write heads on the Disk Drive float above the disk surfaces at 80 to 125 millionths of an inch. There is no actual physical contact between the heads and the disk. This means that any deviation from an ultra-flat, uniform disk (or any particle larger than about 100 millionths of an inch, which could be a cigarette ash or any other kind of contaminant) could cause head-to-disk interference and possible damage to the Disk Drive and disk.

Care must be exercised to avoid contaminants entering the disk cartridge and to prevent a bent disk due to mishandling. To achieve maximum usage of a magnetic disk, it is necessary to become familiar with the proper methods of handling and operation. The life of the cartridge and disk can be extended indefinitely by observing the following procedures:

- Replace cracked, chipped or defective cartridges.
- Clean the cartridge periodically to remove dust and lint from the exterior of the housing, using

a soft, lint-free cloth dampened with 91% isopropyl alcohol. CAUTION: Do not use medicinal isopropyl alcohols from a drug store. They often contain additives harmful to the disk cartridge and Disk Drive.

- A disk suspected of being damaged should be removed from operation until it can be inspected.
- Keep all foods, beverages and objects off the drive, and away from the disk cartridge. Any of these items can cause permanent damage to either the disk or the Disk Drive, or both.
- If a cartridge has been dropped or is visibly damaged, do not put it into operation.
- When a cartridge is not in use and the Drive is inoperable, remove the cartridge and close the head access door on the cartridge to ensure that dust and contaminants do not enter it.
- Store the cartridge in an environment of 60° to 90° F with a relative humidity of 10 to 80 per cent.
- Do not store disk cartridges close to intense magnetic fields.
- Use a storage cabinet made of fire-resistant material with a metal door. The cabinet should be kept clean and free of dirt and other contaminants.

CAUTION

Improper handling of the disk cartridge not only can cause disk damage but can cause extensive damage to the Disk Drive.

2.2 ACCLIMATIZATION

The disks are made of precisely machined aluminum with a magnetic oxide coating. They will expand and contract with significant changes in temperature. If the ambient temperature at the point-of-use is less than 60° or more than 90°, the disk must be conditioned to the point-of-use temperature for a minimum of two hours before mounting it on the Drive. This prevents loss of data due to a shift in track location.

CAUTION

Disk cartridges must be acclimatized to room temperature for a minimum of two hours before being placed on the Disk Drive to prevent drive damage.

2.3 DISK CARTRIDGE LOADING

The procedure for loading the disk cartridge is:

- a. Open the tinted cover of the Disk Cartridge Drive to obtain access to the cartridge receiver handle.

NOTE

The cartridge receiver handle will not be operable until 30 seconds after the Disk

OVERIDE SWITCH ON  
PROTECT BIT SET

	B I T 4	B I T 3	B I T Ø
Read	0	1	0
Write	0	1	0
Check Data	0	1	0
Initialize Data	0	0	0

DEFECTIVE BIT SET

Read	1	1	1
Write	1	1	1
Check Data	1	1	1
Initialize Data	0	0	0

OVERIDE SWITCH OFF  
PROTECT BIT SET

Read	0	1	0
Write	0	1	1
Check Data	0	1	0
Initialize Data	0	1	1

DEFECTIVE BIT SET

Read	1	1	1
Write	1	1	1
Check Data	1	1	1
Initialize Data	0	1	1

BIT 4 - ADDRESS ERROR

BIT 3 - PROTECT/DEFECTIVE

BIT Ø - ERROR

FIGURE 17.

Bill Williams

HEWLETT *hp* PACKARD

CUPERTINO DIVISION • 11000 Wolfe Road, Cupertino, California 95014, Telephone 408-257-7000.

Larry Walsh  
Distribution

January 5, 1971

Enclosed are notes and diagrams describing interesting facts about the HP 2870/1 Disc Controller and Drive (IOMEC). I hope they are useful to you.

Please notify me if you discover errors or if you are able to supply additional facts.

Regards,

*Larry Walsh*

## BASIC IOMECH DISC DESCRIPTION

The basic physical and operational specifications of the IOMECH disc are well known and not repeated here. A few items of interest are, however, discussed.

The advantage of using a system with one fixed and one removable disc is shown in Figure 1. The fixed disc is used for storage of "system" programs and of the non-changing data base. The removable disc is then used to provide an unlimited file and program capability. There are two alternatives to this configuration:

- A. Non-removable discs allow only limited storage capability - expansion of disc capacity can be accomplished only through purchase of more drives.
- B. Removable discs allow unlimited storage capacity, but require that every disc also contain the non-changing data base and "system" programs (see Figure 2).

Inspection of a disc pack shows a metal ring on the outside and at the bottom. The thin slots cut into this ring are physical indications of sector boundaries. All of the slots are equi-spaced from adjacent slots, except for two - these two are close together and designate the start-of-track boundary. The disc drive senses these slot markers and is thus able to physically determine which sector is currently passing beneath the heads.

A rectangular hole, covered by a spring loaded metal plate, can be seen on the bottom of a disc cartridge. When the cartridge is loaded, filtered air is forced into this opening, thus providing a positive pressure inside the cartridge. Thus, only filtered air is allowed into the cartridge and no dust particles can drift in through the opening for the heads.

Figure 3 shows an IOMECH disc cross-section. Since data is recorded at a constant bit rate, inside tracks will be recorded more densely. In order to provide constant levels of magnetization across all tracks, it is desirable to have a slightly thinner coating of magnetic material near the center of the disc. This explains the reason for the slight tapering of the magnetic coating.

The "attention" bits are used to signal command completion for all commands except the STATUS command, and appear in three situations:

- A. An "LIA COMMAND CHANNEL" inputs the attention bits for each of the drives (up to four). Bit N ( $N=0,1,2,3$ ) corresponds to drive unit N; bit N true means that the command last issued to drive N is complete. This bit will be reset by issuance of a new command. The only exception to this is in the SEEK command, and is explained later.

- B. The attention bit also appears as bit 15 of each drive unit's STATUS word. Bit 15 true signifies that the last previous command has been completed. Bit 15 may be reset by loading of the STATUS word into a computer register through the Data Channel and will not be set again until another command is issued to, and completed by, that drive unit.
- C. The attention bit also appears as the Command Channel Flag. The four drive units' attention bits are ORed together to set this flag. This flag may be reset and otherwise handled in the normal ways.

When commands are issued, and "STC" issued to the Command Channel, the interface card will respond only if the Control Flip-Flop was previously cleared - i.e., it responds only to the changing level. Therefore, "CLC" to the Command Channel is usually executed just prior to the "STC" Command.

The error correction technique used is illustrated in Figures 4 and 5. 16 bit words are transferred one at a time (bit parallel, word serial) to the disc controller. The controller converts these bits into a serial stream, passes the resultant bit stream through a cyclic code generator, and onto the disc. The cyclic code is recorded as the last word in the sector. During a read operation, the serial bit stream is picked up by the read heads, passed to the controller, sent through the cyclic code generator, formed into 16 bit words and passed word-by-word to the computer interface. The last word to be read in a sector is the recorded Cyclic Code and this is compared with the one generated during the read operation - if they are not equal, a Data Error Status condition will be generated. Note that data error detection concerns itself only with errors introduced between the controller and the disc surface - there is no "automatic" check on errors that might be introduced during the transfer between the computer and the controller. This subject will be covered further in the section on the CHECK DATA Command.

Two things happen to the magnetic disc surface during a data write operation (see Figure 6). First the data is written. The disc surface then passes beneath two tunnel erase heads which narrow the actual data track width, and help to magnetically isolate that track from adjacent tracks.

Data is recorded using a Manchester Code (see Figure 7). The advantage of this code is that the Read/Write heads of the disc need respond only to two frequencies - the clock frequency, and twice the clock frequency. Thus, the bandwidth requirements in the heads and associated circuitry are reduced, and more reliable data recovery is achieved.

Format of the disc is shown in Figures 7 and 8. Sector gaps, or unrecorded areas, exist between each sector to allow an area for "slop" during the recording process. The recorded area of a

sector is a continuous bit stream, all recorded contiguously, and beginning with a preamble of synchronization bits. This sync bit preamble is a series of zero bits, a one bit, and some more zero bits. This allows the reading clock to adjust to the exact frequency of the recording clock, and to identify the correct bit (of the two possible) in each bit cell as the clock bit. The preamble is followed by address information for sector N+1 - this consists of cylinder number, head number, sector number, and the protected or defective status of this cylinder. The address area is followed immediately by the data area for sector N, which consists of 128 words. The cyclic code is the 129th word, and ends the sector. The cyclic code is generated from the bit stream which is the concatenation of the address and data fields. The reasons for the one sector separation of data areas for each sector are explained in other sections of these notes.

#### SEEK RECORD

The SEEK RECORD Command initiates head positioning on a particular drive unit. One word of (cylinder) address information is set into the data channel, the Control FF is set, and the Flag FF is cleared. The command word is then set into the Command Channel Interface Card, the Control FF set, and the Flag FF cleared. The disc controller accepts the command and looks to the Data Channel Interface Card for the cylinder number. If the Data Channel Control FF is set, the controller reads the buffer. Note that if the cylinder number is not placed into the Data Channel Interface Card (IFC) prior to command issuance, the program must ensure that the Control FF in the Data Channel is initially cleared.

The controller accepts the cylinder number, and sets the Data Channel Flag FF. The program responds by placing the head/sector number into the Data Channel IFC, setting the Control FF, and clearing the Flag FF. The controller responds by accepting this final address information and setting the Data Channel Flag FF. Note that the program may wait for the Data Channel Flag before proceeding, but that this is not required (except for perhaps diagnostic purposes).

The controller now has all of the address information required, combines it into the Record Address Register (RAR), and the drive proceeds to "SEEK" to the track and sector of interest. The head-servo mechanism moves the head over the desired track. The drive then waits until the sector of interest approaches the heads. (This is determined by counting the physical sector slots). When the address information of the sector of interest is 3.3 msec away (or approximately one sector away) from the heads, a flag is set on the Command Channel IFC. Note that no data transfer can actually take place until 6.6 msec after that flag. Thus, in Figure 8, "A" designates the approximate point of flag setting for sector N+1. This 3.3 msec is provided as a known time interval to allow the program to set up the next operation (e.g., READ, WRITE, etc.). If the Flag were to be set without regard to sector position (i.e., as soon as the heads had settled over the track), then the period

between issuing a read or write command, and commencement of reading or writing could be a random variable as large as 43.3 msec -- the variability and the possibly long delays are often undesirable to a programmer interested in optimizing programming and data transfer speeds and interactions.

Each controller may handle up to four disc drives. Not more than one SEEK may be issued to a particular drive, but SEEK's to different drives may be overlapped. SEEK is the only command that may be executed in this overlapping mode. Completion of each of the SEEK's (up to four) will generate a flag on the Command Channel IFC. The program may then determine which drive generated the flag (and completed its SEEK) by an "LIA/B COMMAND CHANNEL" to obtain the "attention" bits. The low order four bits of the loaded word specify which drive unit has completed its SEEK. If bit N=1 (N=0,1,2,3) then drive number N is the one that set the Command Channel Flag. This attention bit will remain true for 2.6 msec, then go false; it will then become true again when the address information of the sector of interest is 3.3 msec away from the heads. The attention bits for a SEEK, loaded into a register through the Command Channel, are periodic with period 40 msec and duration 2.6 msec. The Flag on the Command Channel is set by the first of these attention bits--but if the flag is cleared, subsequent attention bits will not set the flag again. Similarly, the attention bit appears as bit 15 of each drive's status word, is reset by reading the status, and is not set again by the subsequent periodic attention bits resulting from a SEEK.

It is not necessary to wait for the SEEK completion flag on the Command Channel before issuing another command on that channel. The SEEK will be completed before the READ, WRITE, etc. operation commences and the only Command Channel Flag that appears will signal the completion of the entire operation. Similarly, if a SEEK is issued to one drive, READ, WRITE, etc., Commands may be issued to other drives without waiting for the SEEK completion.

If a second SEEK command is issued to a single drive before the first has been completed, head positioning does not occur, the Command Channel Flag is set, and the SEEK-CHECK error bit is set in the status word. The next SEEK command will clear the error condition and be executed properly.

If a cylinder number greater than 202 (decimal) is issued to a drive, no head movement occurs, the SEEK-CHECK bit is set and a Command Channel Flag is set.

Mechanical movement errors may be detected in the drive servo system. These will set the appropriate error bit, and set the Flag on the Command Channel.

When the Command Channel Flag is set by any kind of SEEK error condition, the attention bit for that drive is also set, but will not be periodic.

The IOMECH SEEK-time specifications are met on all units tested so far. Note that the sales sheet refers to access times - however, track to track movement does not include rotational delay time, and

so on. For example, a data transfer preceded by a SEEK command to an adjacent track would involve the following delays: 30 msec for track to track switching, 20 msec average rotational delay time, and 6.6 msec from the time the SEEK flag sets and actual data transfer begins -- thus, the average delay in these circumstances is 56.6 msec.

The SEEK command may precede READ, WRITE, CHECK, REFINE, AND INITIALIZE Commands. In certain circumstances, the ADDRESS RECORD command may be used alternatively.

#### ADDRESS RECORD

The ADDRESS RECORD Command is used to change the contents of the Record Address Register (RAR) for a particular drive unit. Issuance of the command proceeds like that of a SEEK command, with three exceptions:

- A. The command code is different.
- B. The command code does not require a drive unit designation. This is one of the two exceptions to the standard command word format.
- C. A Flag will be returned through the Command Channel as soon as the new RAR has been formed. There is no waiting for the addressed sector to be 3.3 msec away before setting that Flag.

This command may be useful in decreasing latency (rotational) delays, if the heads are already positioned above the desired cylinder. If the track number in the RAR is changed, no head positioning takes place, and any attempt at READING, etc., will fail. However, if only the head and/or sector number is changed, no head repositioning is required, and READING, WRITEING, etc may then proceed onto the addressed sector. Note that the SEEK command does not have to be issued.

If the SEEK command is used to change the RAR, an average rotational delay of 20 msec occurs before setting of the Command Channel Flag, and an additional 6.6 msec will pass before data transfer begins. However, if an ADDRESS RECORD Command is issued, followed immediately by a READ Command, an average of only 20 msec will pass before data transfer begins. If a WRITE Command follows the ADDRESS RECORD Command, an average delay of 23.3 msec would occur. The reasons for these delays will become clearer in the sections dealing with the READ and WRITE Commands.

The ADDRESS RECORD Command may be used in lieu of the SEEK Command in all cases, subject to the restrictions explained above.

If a multiple SEEK has been performed on several (up to four) drive units, it will be necessary to make the RAR conform to the address of the drive to be processed (e.g., READ) first (i.e., the drive which is first to complete its SEEK). The ADDRESS RECORD Command is the most efficient way to accomplish this.

## WRITE DATA

The WRITE DATA Command usually follows a SEEK or ADDRESS RECORD Command, but it may follow any other command as long as the RAR contains the correct address information, and the heads are positioned properly. Because of the timing considerations during data transfer DMA is always used.

Programming of the WRITE Command proceeds as shown in Figure 11. Note that the Data Channel Flag must be set prior to initiation of data transfer, to ensure that no spurious data is transferred. If this is not done, one bad word will be output, and the last word of the desired data will be missed.

Execution of the WRITE Command by the controller proceeds with the controller comparing the RAR with the sector position as established by the physical sector slots. When the address information pertaining to the sector to be written arrives beneath the head, it is read. If writing is to proceed, the following conditions must be satisfied:

- A. The address info read must compare with the RAR;
- B. The address plus data field is cyclic checked and must be okay;
- C. The defective cylinder bit must not be set; and
- D. The protected cylinder bit must not be set, unless the OVERRIDE SWITCH is ON.

If any of the above conditions are not met, writing will be inhibited, appropriate STATUS bits set, and the Command Channel Flag set.

If writing is to proceed, the sector address in the RAR is incremented by one. This address information, along with the protected bit status of the previous sector, will be written into the next sector address field. The data is appended and written immediately after the address information.

These are two reasons for writing the address information for a sector in an area disconnected from the data for that sector:

- A. The address information must be read and checked before writing is allowed to begin; and
- B. The data is contiguous to the address information, and thus, when the data is written the address information must be rewritten. If address and data were to be kept together, it would not be possible to read and check the address, and then rewrite it, unless there were two sets of heads - the alternative is to separate the address and data areas.

When the DMA word count has been satisfied, and the current sector has completely passed beneath the heads, the Flag will be set on the Command Channel. The controller senses the completion of DMA data transfer by a "time-out." If the next sequential data word is not transferred to the controller within a windowed limit (approximately 19 to 26 microseconds), the controller concludes that data transfer is complete, and writing will halt at the end of the present sector. If the DMA attempts to transfer another word, or if the Control FF is set on the Data Channel IFC, after the window has passed and before end-of-sector is encountered, then the Overrun Error status bit will be set, and the Command Channel Flag set at the end of the present sector.

If some error is detected in the generation of the cyclic code, the Data Error status bit is set, writing halts, and the Command Channel Flag is set.

If a DMA word count of zero is specified, one sector will be written with all zeros. If the word count is less than 128, the required number of words will be written into one sector, zeros used to fill the remaining spaces, and the cyclic code written at the end. If exactly 128 words are specified, one sector with cyclic code will be written. If more than 128 words are specified, writing will automatically proceed into sequential sectors.

Data transfer must be suspended as the address information is written into each new sector. Writing will continue until the word count is satisfied, or until the end of a disc-cylinder is encountered. The drive will automatically switch from the top disc-head to the bottom disc-head and continue writing, with no rotational delay. Switching will not, however, occur from the head of one disc to the head of another. Thus, a maximum of 24 sectors may be transferred in a continuous stream. If an end of disc-cylinder is encountered before the DMA word count has been satisfied, data transfer will halt, the End-of-Cylinder status error bit set, and the Command Channel Flag set.

#### READ DATA

As in the WRITE Command, the READ Command utilizes DMA and must be preceded by the proper addressing and positioning commands.

Programming of the READ Command proceeds as shown in Figure 12. Note that the Data Channel Control FF must be set, and the Flag FF cleared prior to starting the DMA. This ensures that only valid data is transferred into core. If these conditions do not exist when DMA is begun, one bad word will precede the disc data, and the last word of interest from the disc will be missed.

Execution of the READ Command begins with the RAR automatically incrementing its sector address by one. The drive then counts physical sector slots until the sector of interest is beneath the heads. The address and data information is then read - they are both read because there is no separation between their respective recorded bit streams, and thus, no time to check for address validity prior to accepting the data.

For a read operation to be considered successful, the following conditions must be satisfied:

- A. The address read must compare with the RAR;
- B. The defective cylinder bit must not be set; and
- C. The cyclic code written at the end of the address plus data field must compare with the one generated during the READ operation.

If any of the above conditions are not properly satisfied, reading continues to the end of the current sector and halts, the appropriate error bit is set, and the Command Channel Flag is set.

Data transfer completion and timing errors are handled by the controller as during the WRITE Command. If the word count is not a multiple of 128, data transfer ends at the satisfaction of the DMA word count, the rest of the sector passes beneath the heads and is cyclic checked by the controller, and the Command Channel Flag is set.

The RAR sector address is automatically incremented until the DMA word count has been satisfied, subject to the same restrictions described in the WRITE Command. If multiple sectors are being read, data transfer must, of course, be suspended while the address information in each sector is read.

#### CHECK DATA

The CHECK DATA Command checks the recoverability of data already written onto the disc. Only errors occurring in the transfer of data from the controller to the disc will be detected - no detection of errors occurring in the transfer of data from the computer to the controller will be found. The only method of detecting the latter type of error is to read the data of interest immediately after writing, and to compare them word-by-word - a core and time consuming procedure. The CHECK DATA Command, therefore, is a technique that checks against only some kinds of errors, but in an efficient manner.

Programming of the CHECK DATA Command proceeds as in Figure 13. Note that, in addition to cylinder/head/sector information, a sector count is also required - this is expressed as a positive number and is output through the Data Channel.

Execution of the CHECK DATA Command by the controller and drive proceeds exactly as the READ Command, except that no data is transferred over the Data Channel. Each sector is cyclic checked - this, along with the address checking, is the full extent of the check.

The Command Channel Flag will be set when the sector count

has been satisfied, or when errors are detected. No data transfer timing error can occur.

#### REFINE SECTOR

The REFINE SECTOR Command is an error recovery operation. However, it should be used only after other error recovery techniques have been attempted - e.g., re-read, move heads and re-read, etc.

Programming of the REFINE SECTOR Command is illustrated in Figure 14. Note that no provision is made for specifying a word count or a sector count. Only one sector may be "refined" per command, and that will be the sector specified in the RAR.

Refining a sector consists of a tunnel erase over the sector specified. This has the effect of (perhaps!) lessening "cross-talk" from adjacent tracks. Note that it may also have the effect of partially erasing adjacent tracks, and should be used cautiously and only as a last resort.

During a REFINE SECTOR, no transfers through the data channel occur. Because no address check is made, no address error can occur.

The Flag will be set on the Command Channel when the tunnel erase of the single sector is complete.

#### STATUS CHECK

The STATUS CHECK Command allows a 15-bit status word for one of the disc drive units to be loaded in through the Data Channel.

Programming of the command is illustrated in Figure 15. The Data Channel is prepared for acceptance of the status word by setting the Control FF. The Data Channel Flag is cleared in preparation for controller response. The STATUS CHECK Command is the only command that signals its completion by setting the Data Channel Flag. The Command Channel Flag will not be set. When the Data Flag is set, the status may be loaded into a computer register through the Data Channel.

The STATUS CHECK Command may be used at any time, and is often used following commands involving data transfer. Note that if an error is detected during data transfer, the Command Channel Flag will be set, and the DMA may be "hung-up" with an unsatisfied word count. Attempting to obtain the status through the Data Channel will result in the interception of the Device Response Flag by the DMA, resetting of the Control FF, and reclearing of the Flag FF. Thus, although the status will be properly loaded into the Data Channel Interface Register, no Flag will ever be seen as "set" by the checking program. To allow the Flag to come through and be seen in these circumstances, it may be necessary to clear the DMA (e.g., STF 6) before proceeding with the STATUS CHECK Command.

The step of ensuring that DMA is cleared is not shown in the STATUS Command programming example. However, any driver written for this disc must consider the DMA "hang-up" problem when checking status.

#### INITIALIZE DATA

The INITIALIZE DATA Command must be used before any other reading from or writing onto a particular disc cartridge may occur. It may also be used for subsequent protecting/unprotecting, or flagging as defective of particular disc cylinders.

Programming of this command proceeds much like the WRITE Command. Note, however, that this is one of two commands which vary in command word format. If bit 8 is set, the sectors to be initialized will be flagged as defective. If bit 9 is set, those sectors will be flagged as protected. If both bits 8 and 9 are set in the command word, only the defective bit will be written onto the disc. Entire cylinders must be flagged if any sector within that cylinder is to be flagged. Cylinder is defined here, as in the interface manual, as two tracks, both on the same disc; cylinder is not defined in the conventional manner as the 4 tracks on both discs.

Command execution is performed by the controller much as it executes the WRITE Command, but with one notable exception. Since the disc may be blank before the execution of this command, there is no written address information to check. Therefore, the RAR sector address is incremented by one, and writing of addresses, cylinder flags, and data proceeds.

The OVERRIDE SWITCH must be ON, or the command will not execute.



A good programming technique for defective cylinders is to rewrite those cylinders, using the INITIALIZE DATA Command, as those cylinders are discovered as defective. The defective bit must be set in each of the sector addresses in that cylinder, and the address of the alternate cylinder written as the first word of each sector. A program looking for data in a given cylinder will discover the defective bit set, but should be able to successfully read at least one of the sectors, thus obtaining the alternate cylinder address.

#### STATUS WORD BIT DEFINITIONS

These notes on Status word bit definitions mention only exceptions or clarifications of the Interface Manual descriptions.

BIT Ø	-	"any error" is somewhat of a misnomer.
ANY ERROR	-	This bit is set when any other bit in the Status word is set, with the exception of bits 2,7, and 15, and sometimes 3.

BIT 1	
DATA ERROR	- Can be set by cyclic code checks.
BIT 3	
FLAGGED	
CYLINDER	- Set if cylinder being processed is protected or defective; check bit 4 to determine which. See Figure 17 for clarification of whether bit Ø may be set or not set.
BIT 4	
ADDRESS ERROR	- See Figure 17.

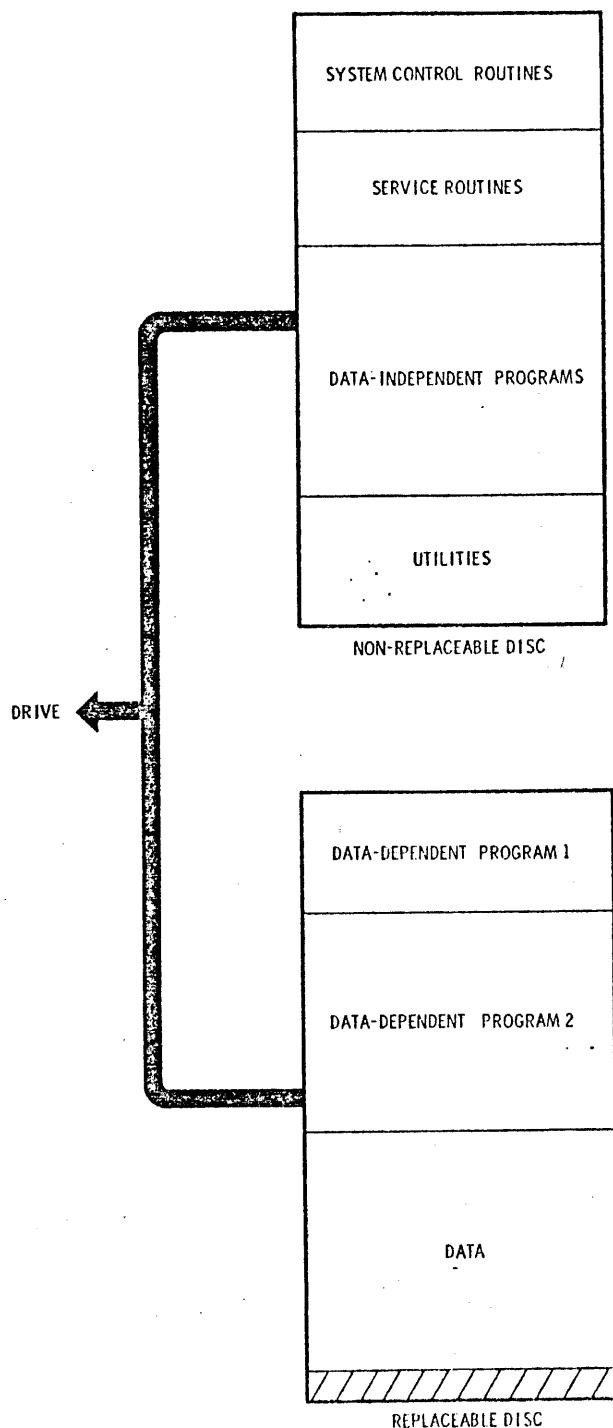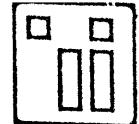

Typical Multiple Disc Capacity File Organization

FIGURE 1.



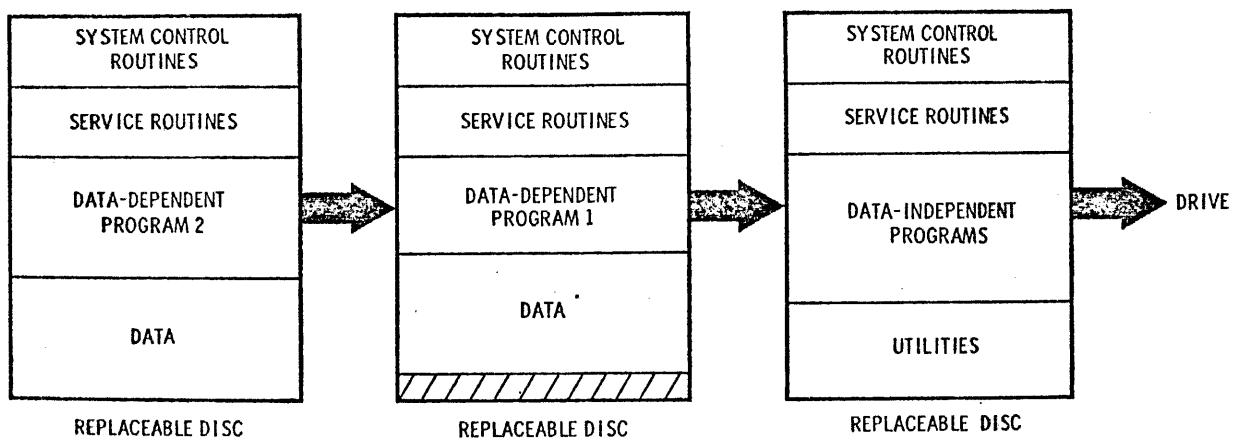


Figure 2. Typical Single Disc Capacity File Organization

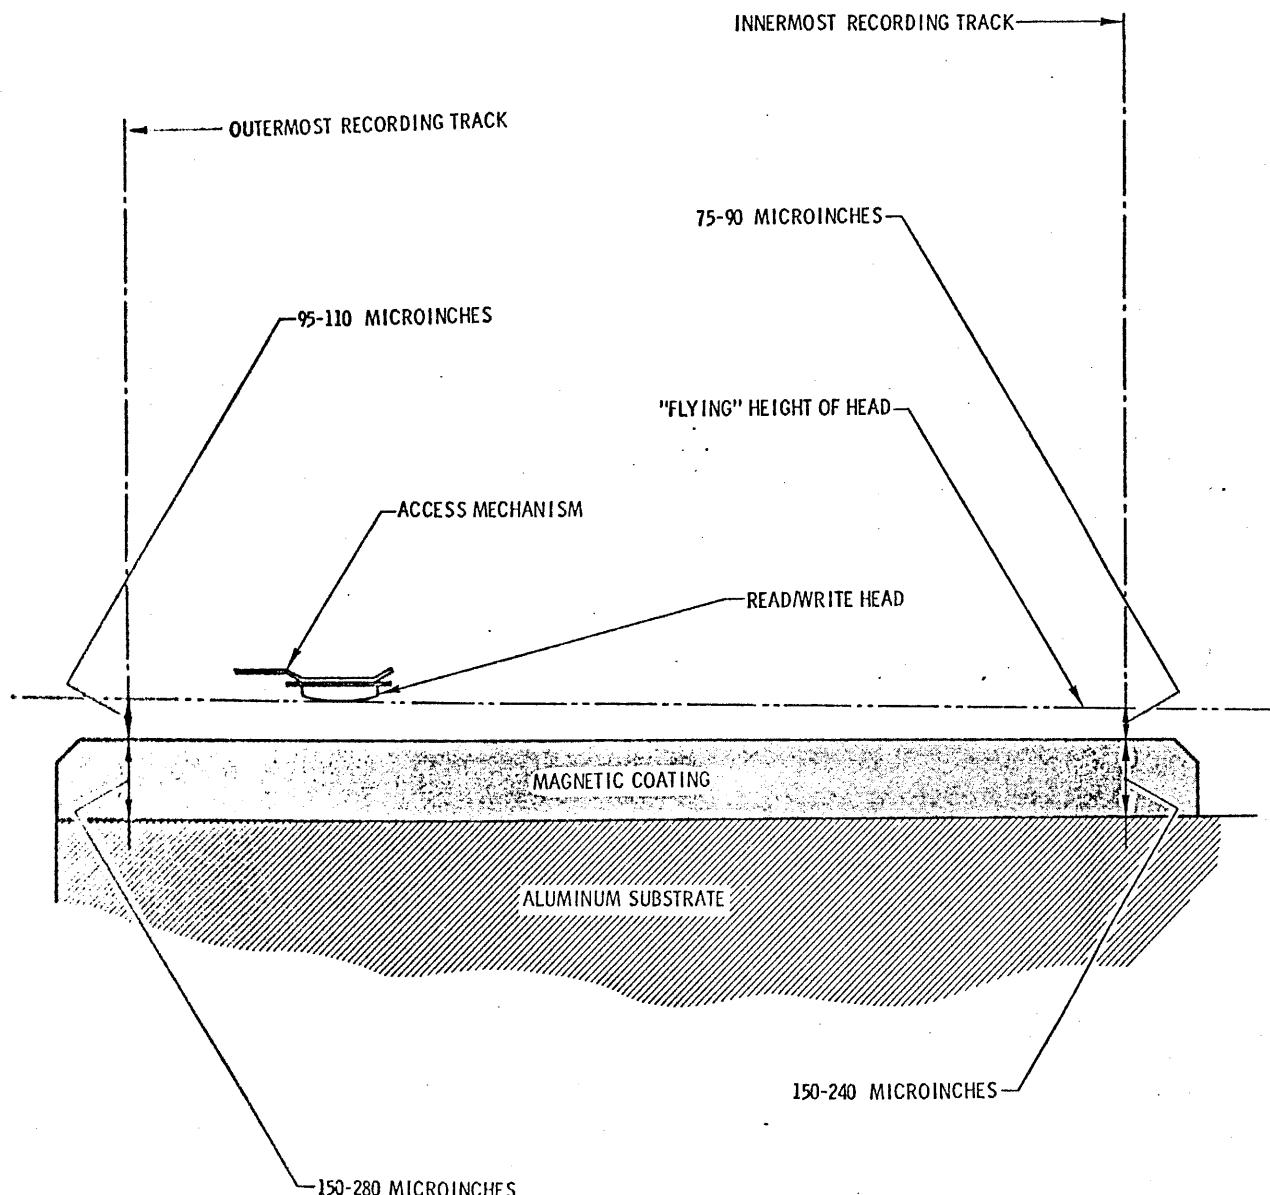

Disc Recording Surface Characteristics  
(2200 BPI Recording)

FIGURE 3.

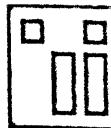

1050-B-1/13/70


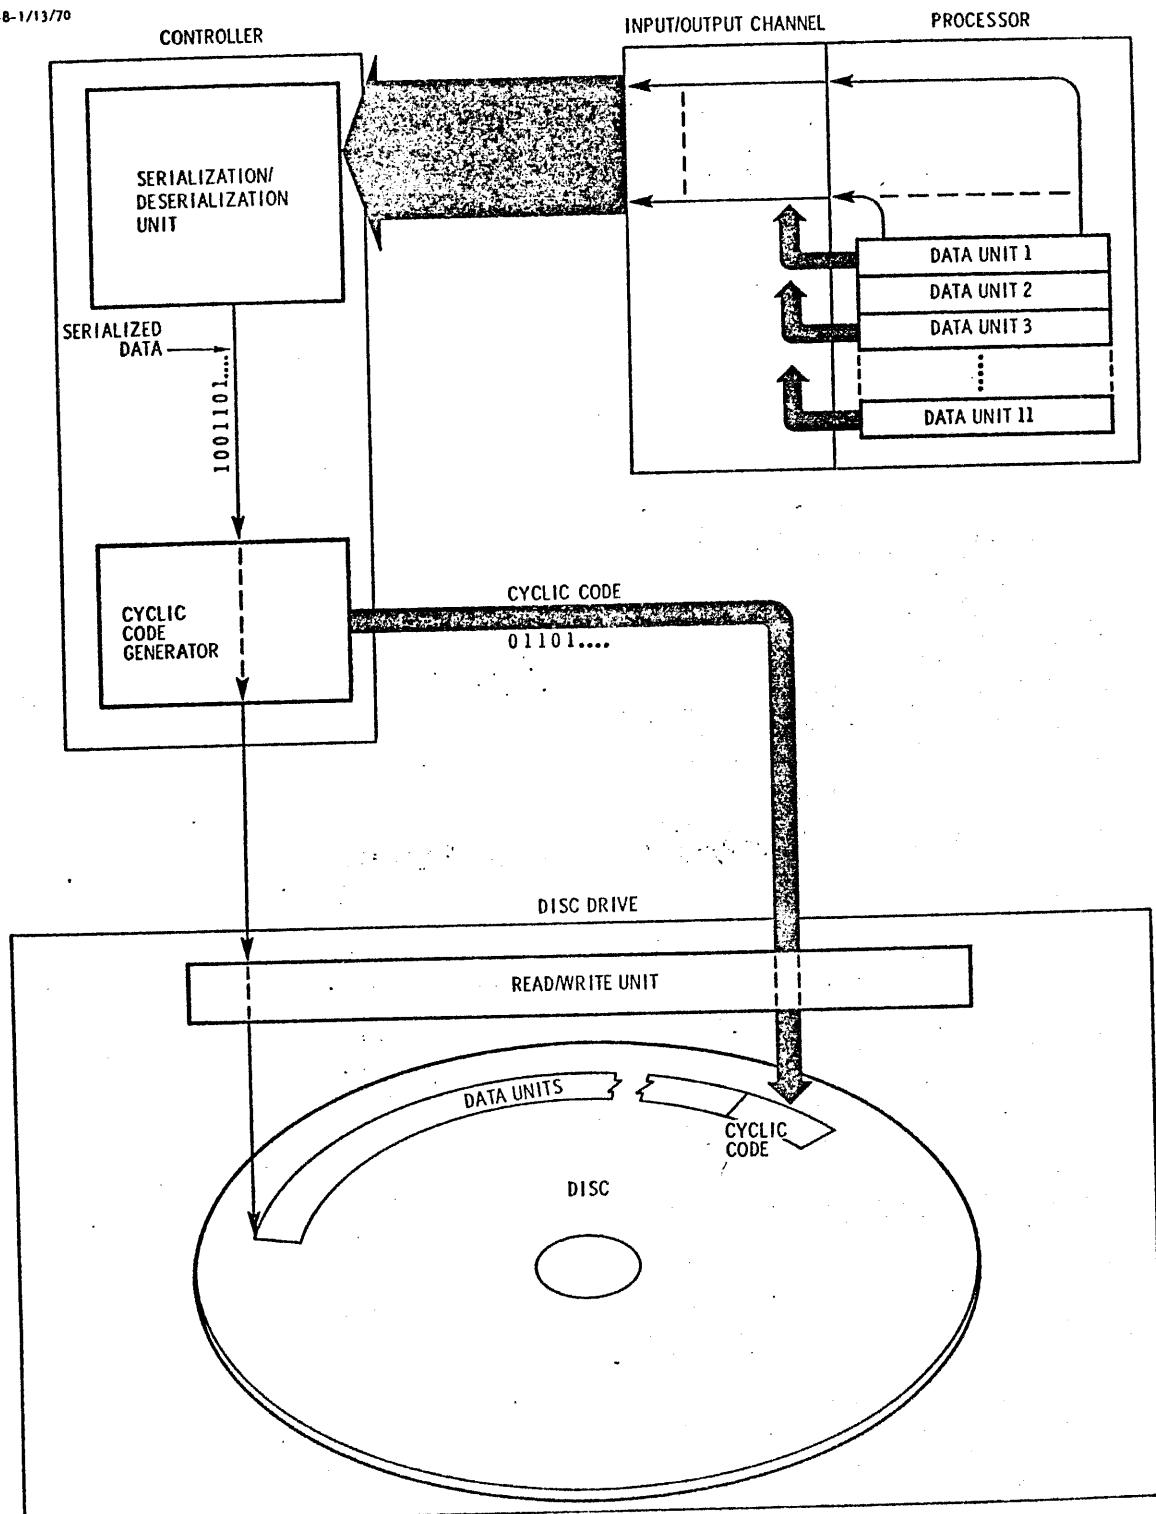


Figure 4. Generation of Cyclic Code (Write Operation)

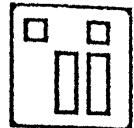

1050-9-1/13/70

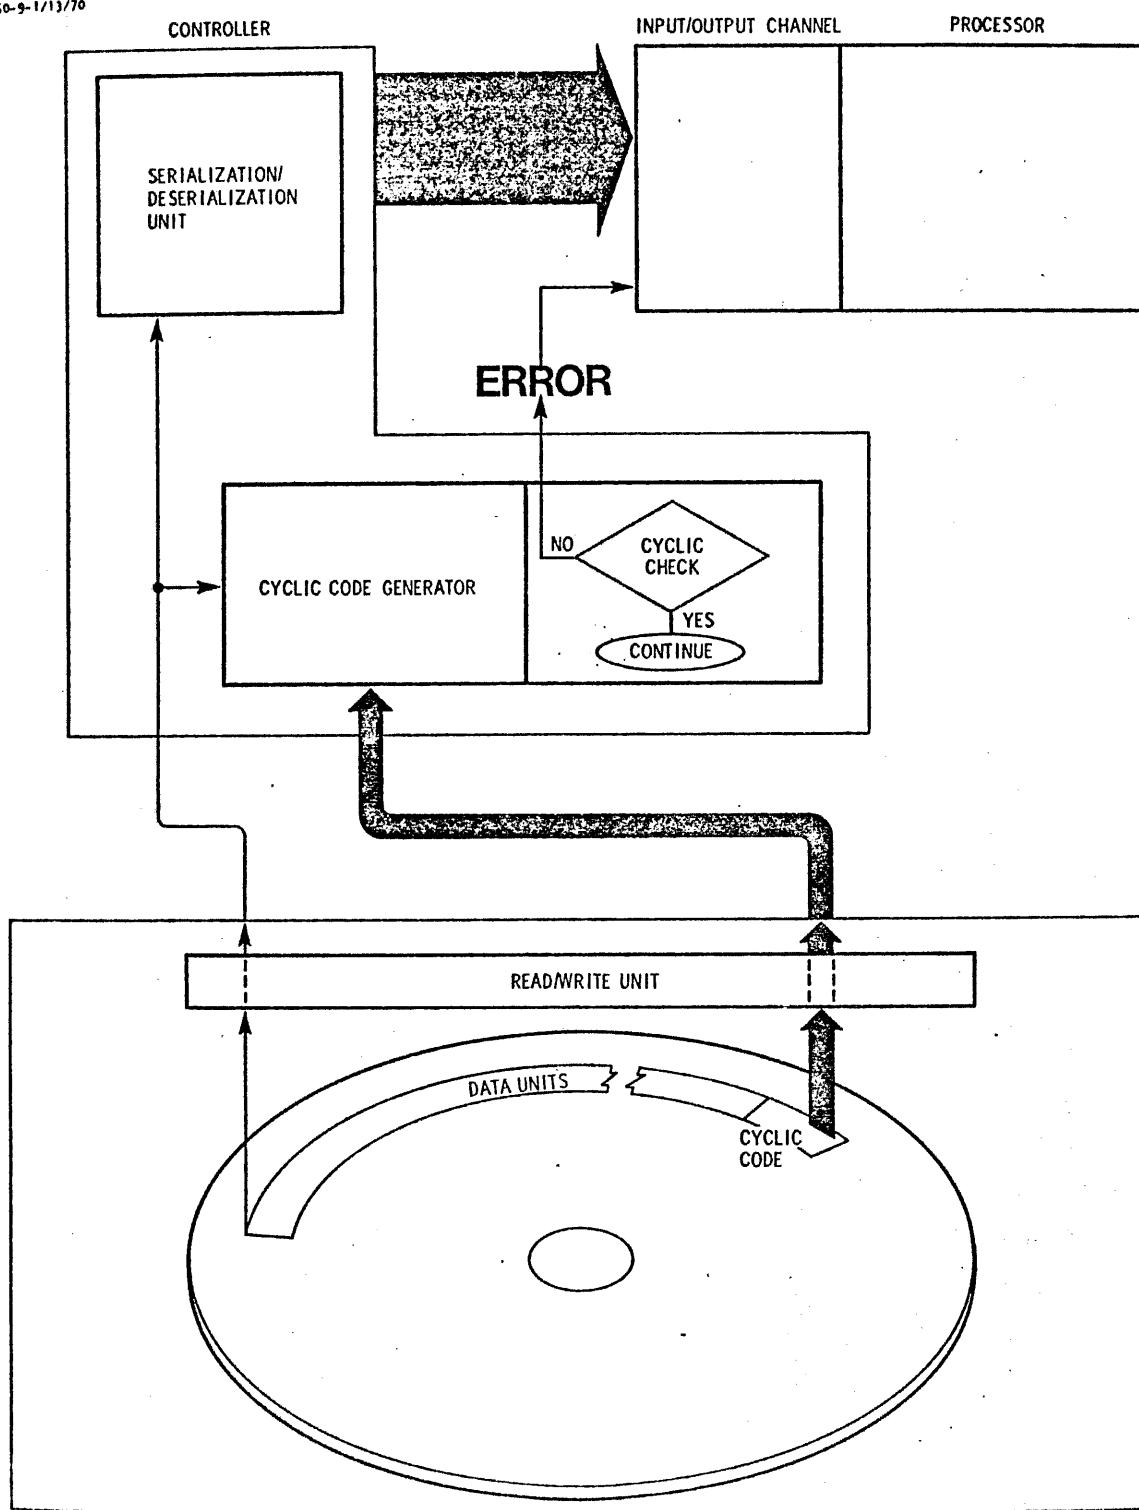


Figure 5. Cyclic Code Error Detection (Read Operation)

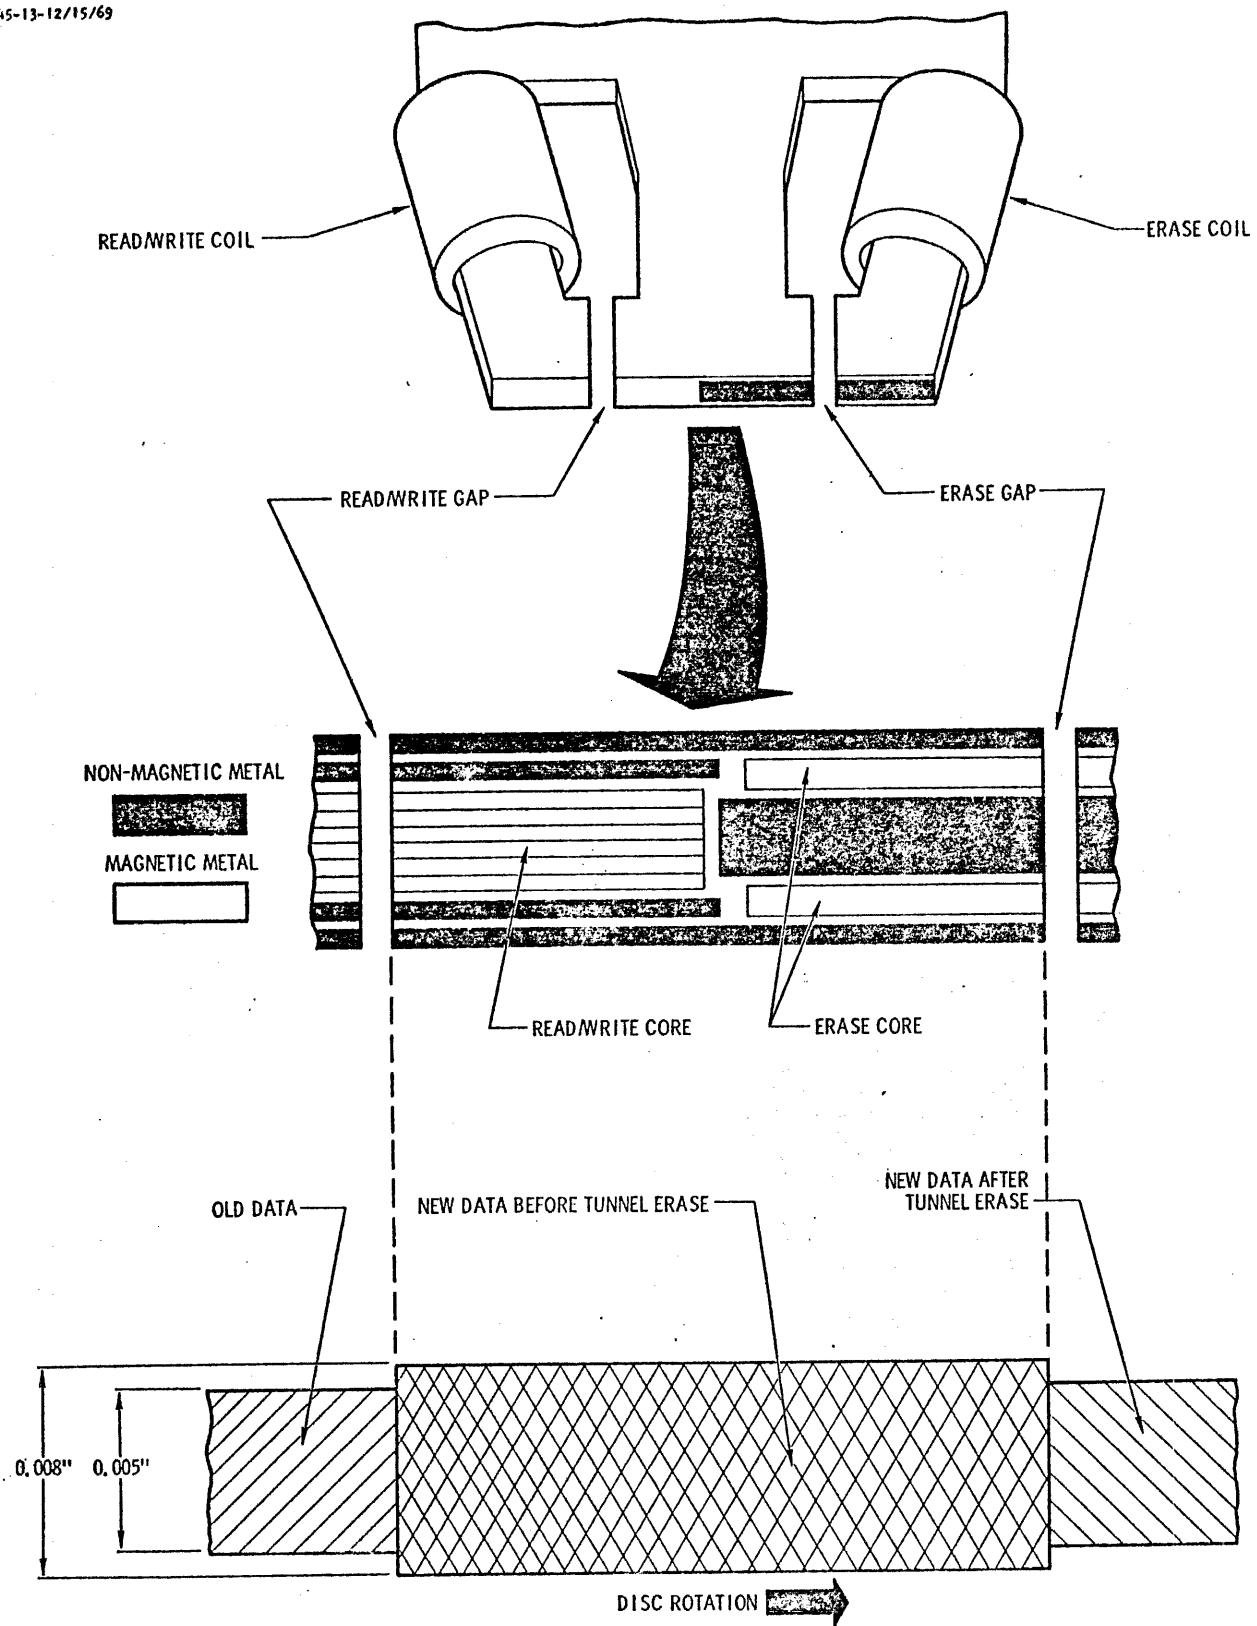


Figure 6. Read/Write-Erase Structure

1045-10-12/17/69

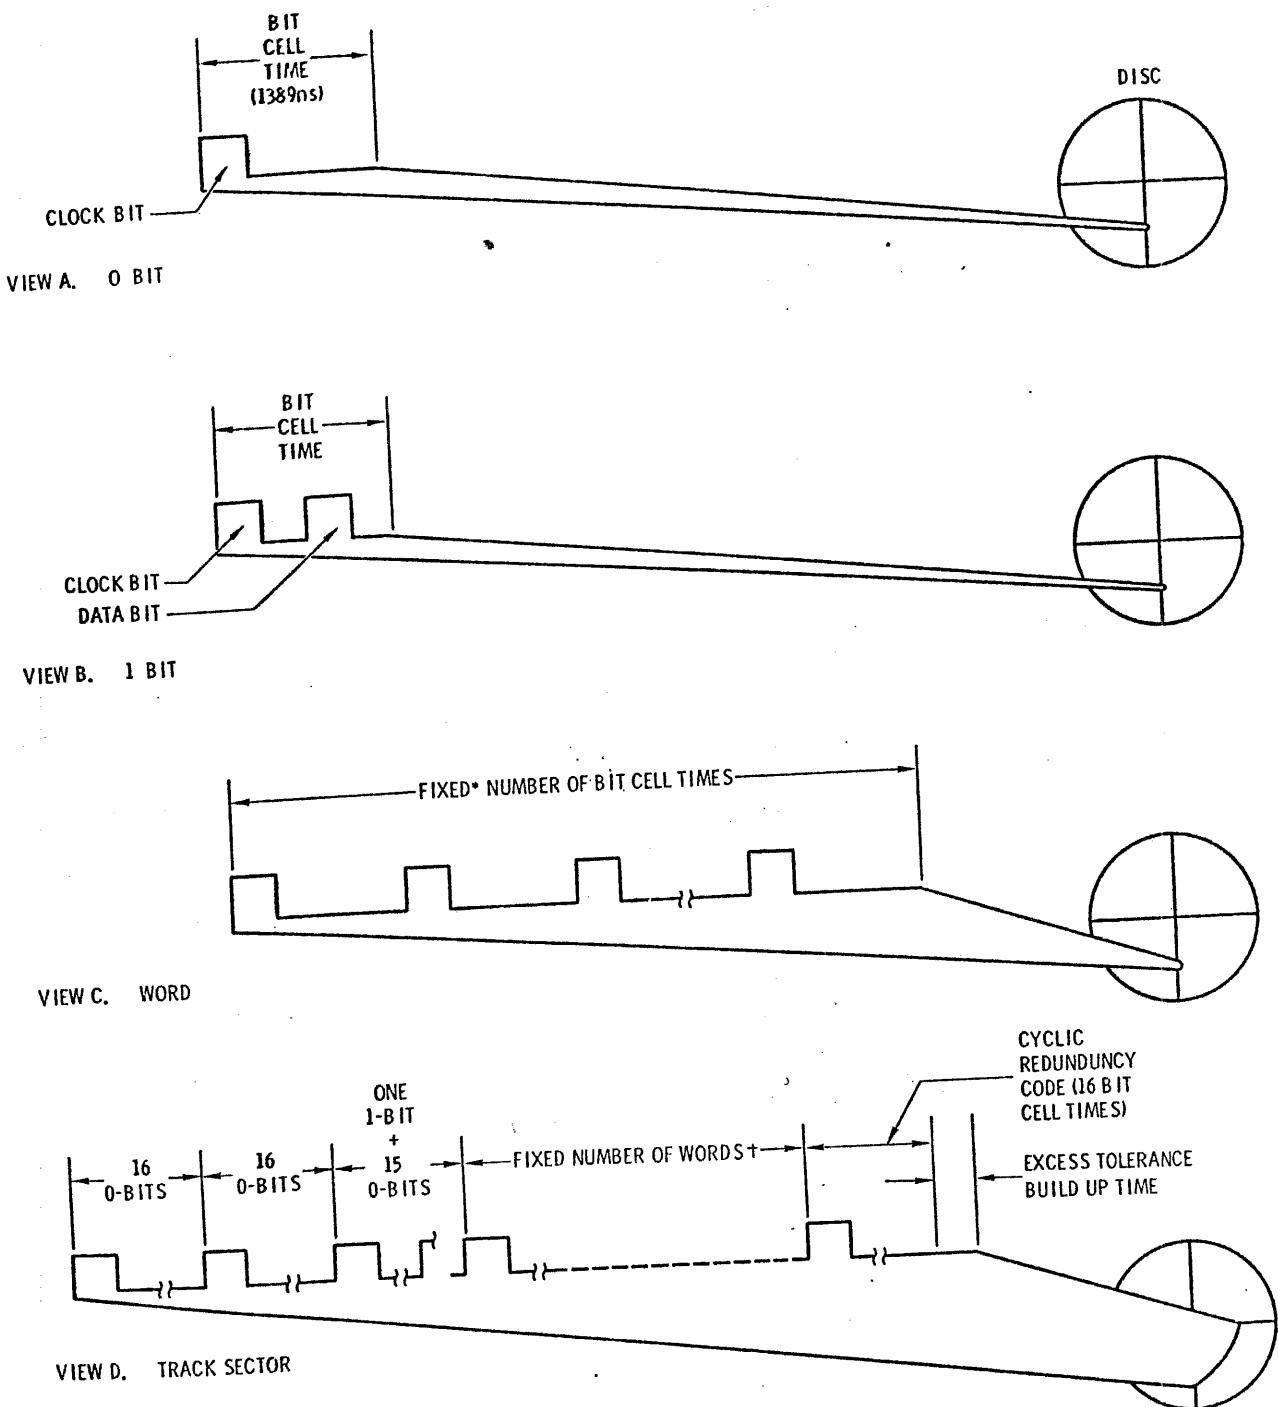
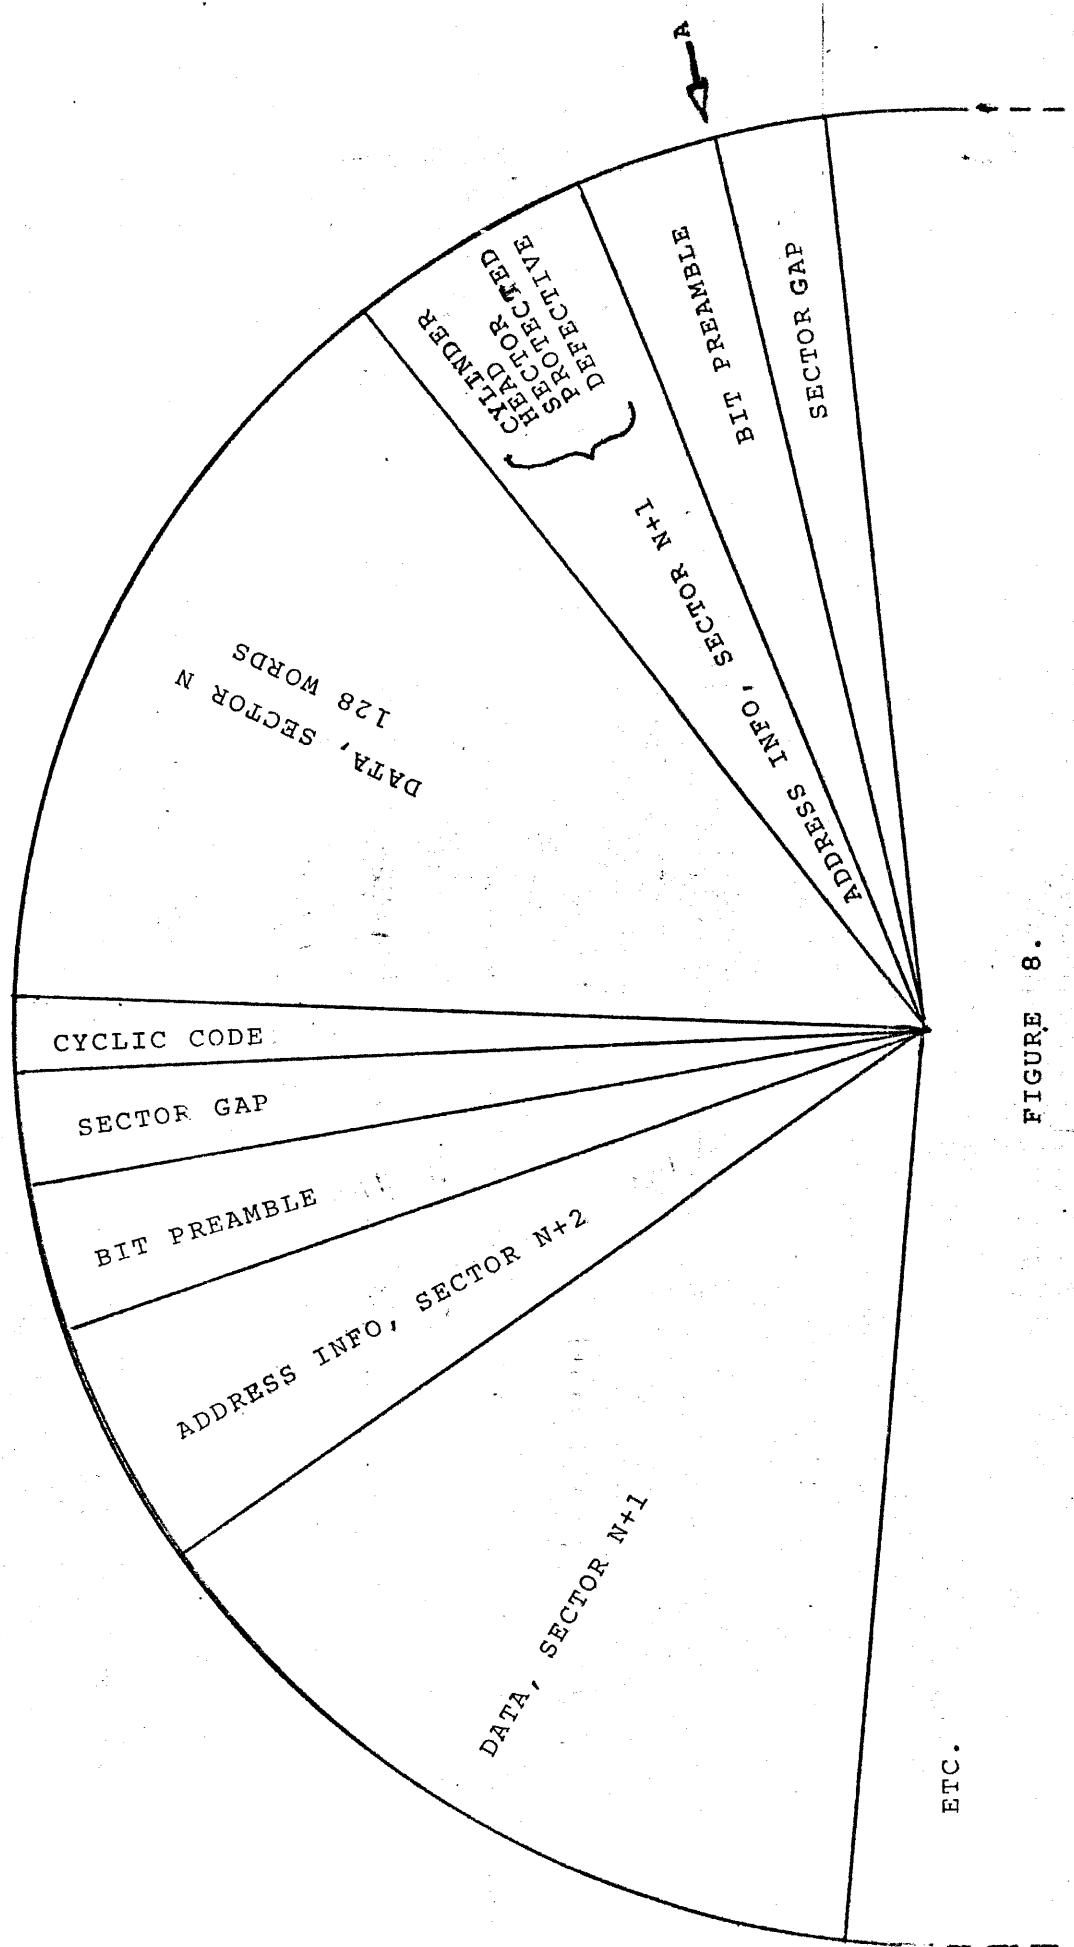


FIGURE 7. DATA TIMING

FIGURE 8.



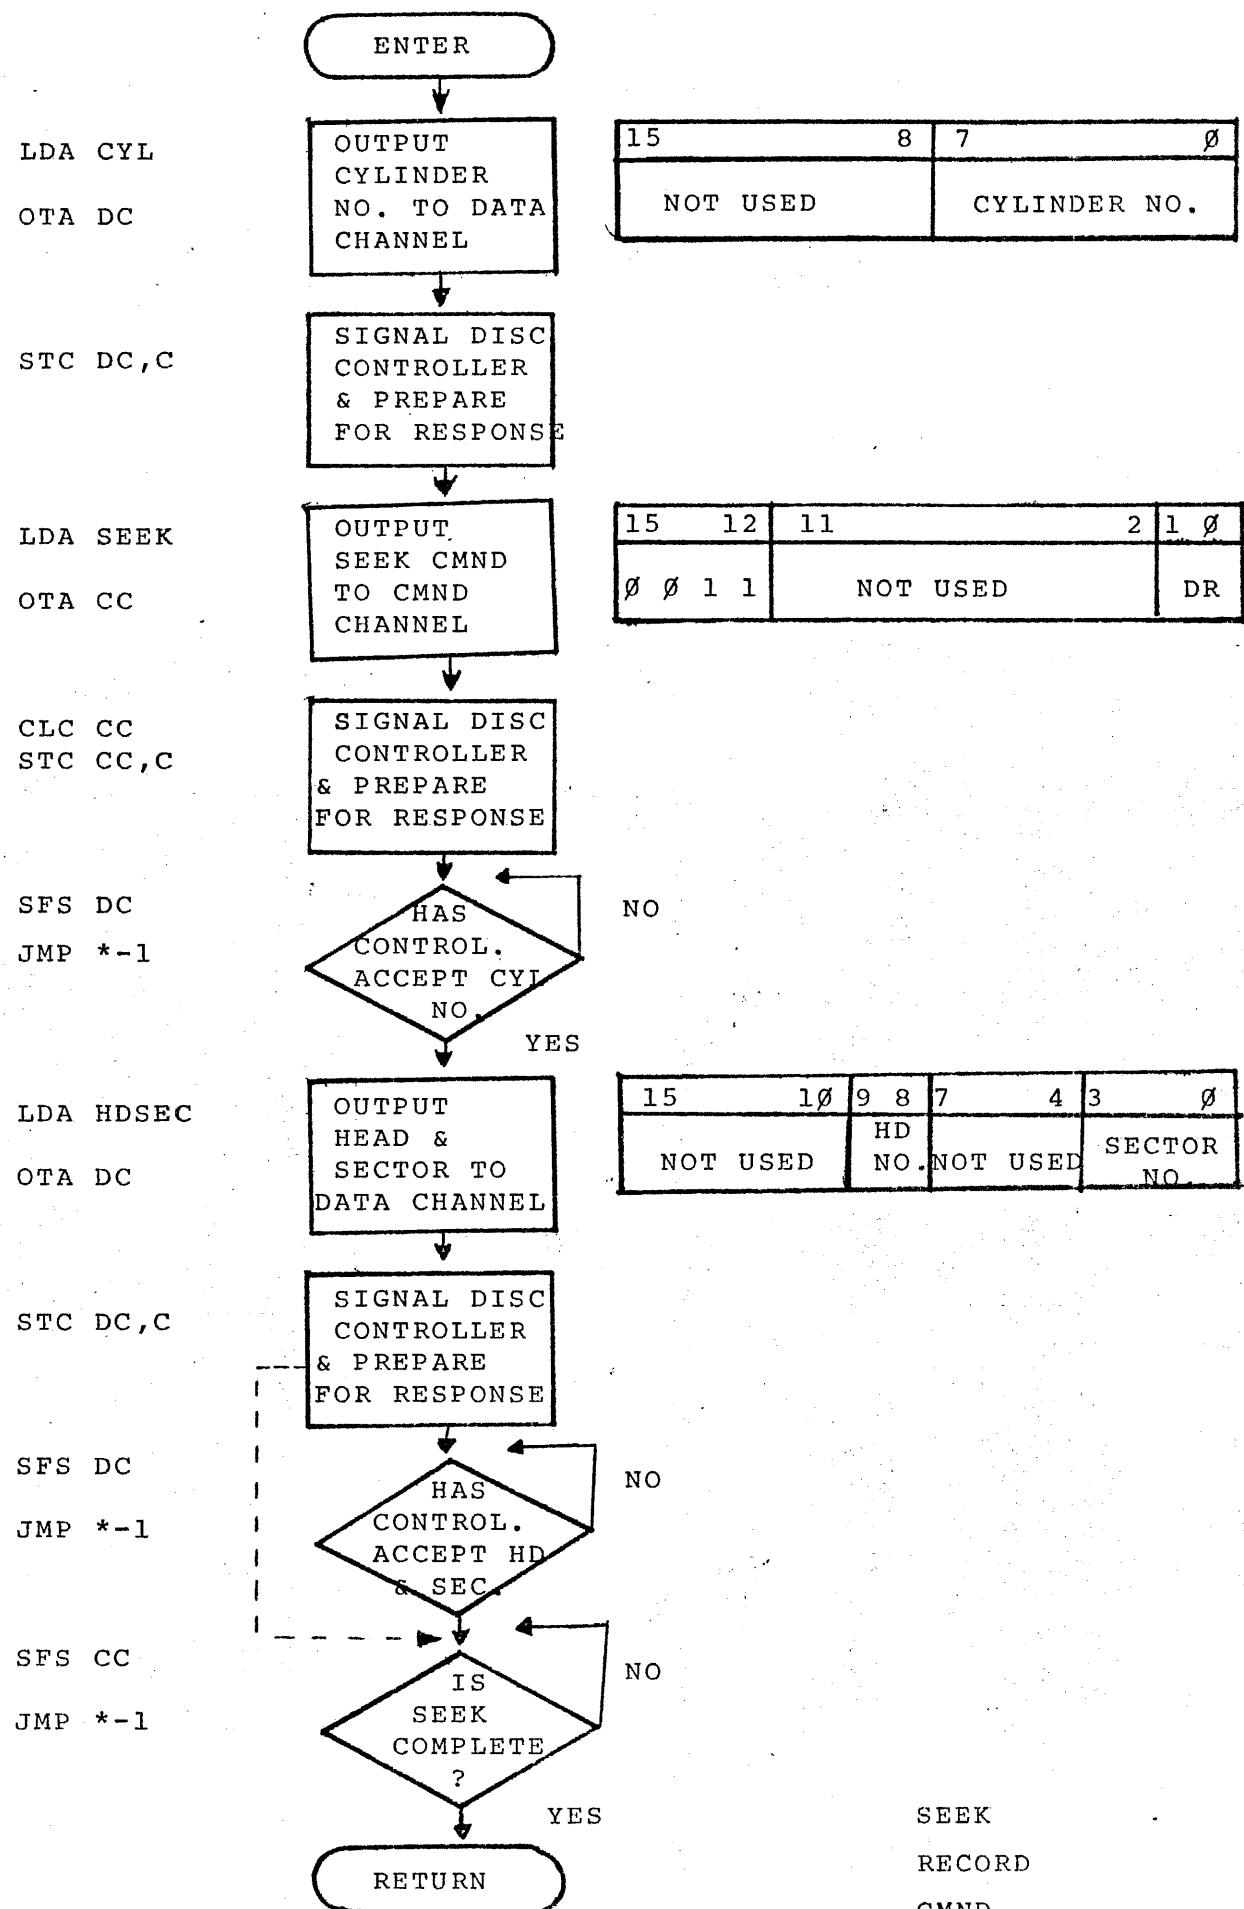


FIGURE 9.


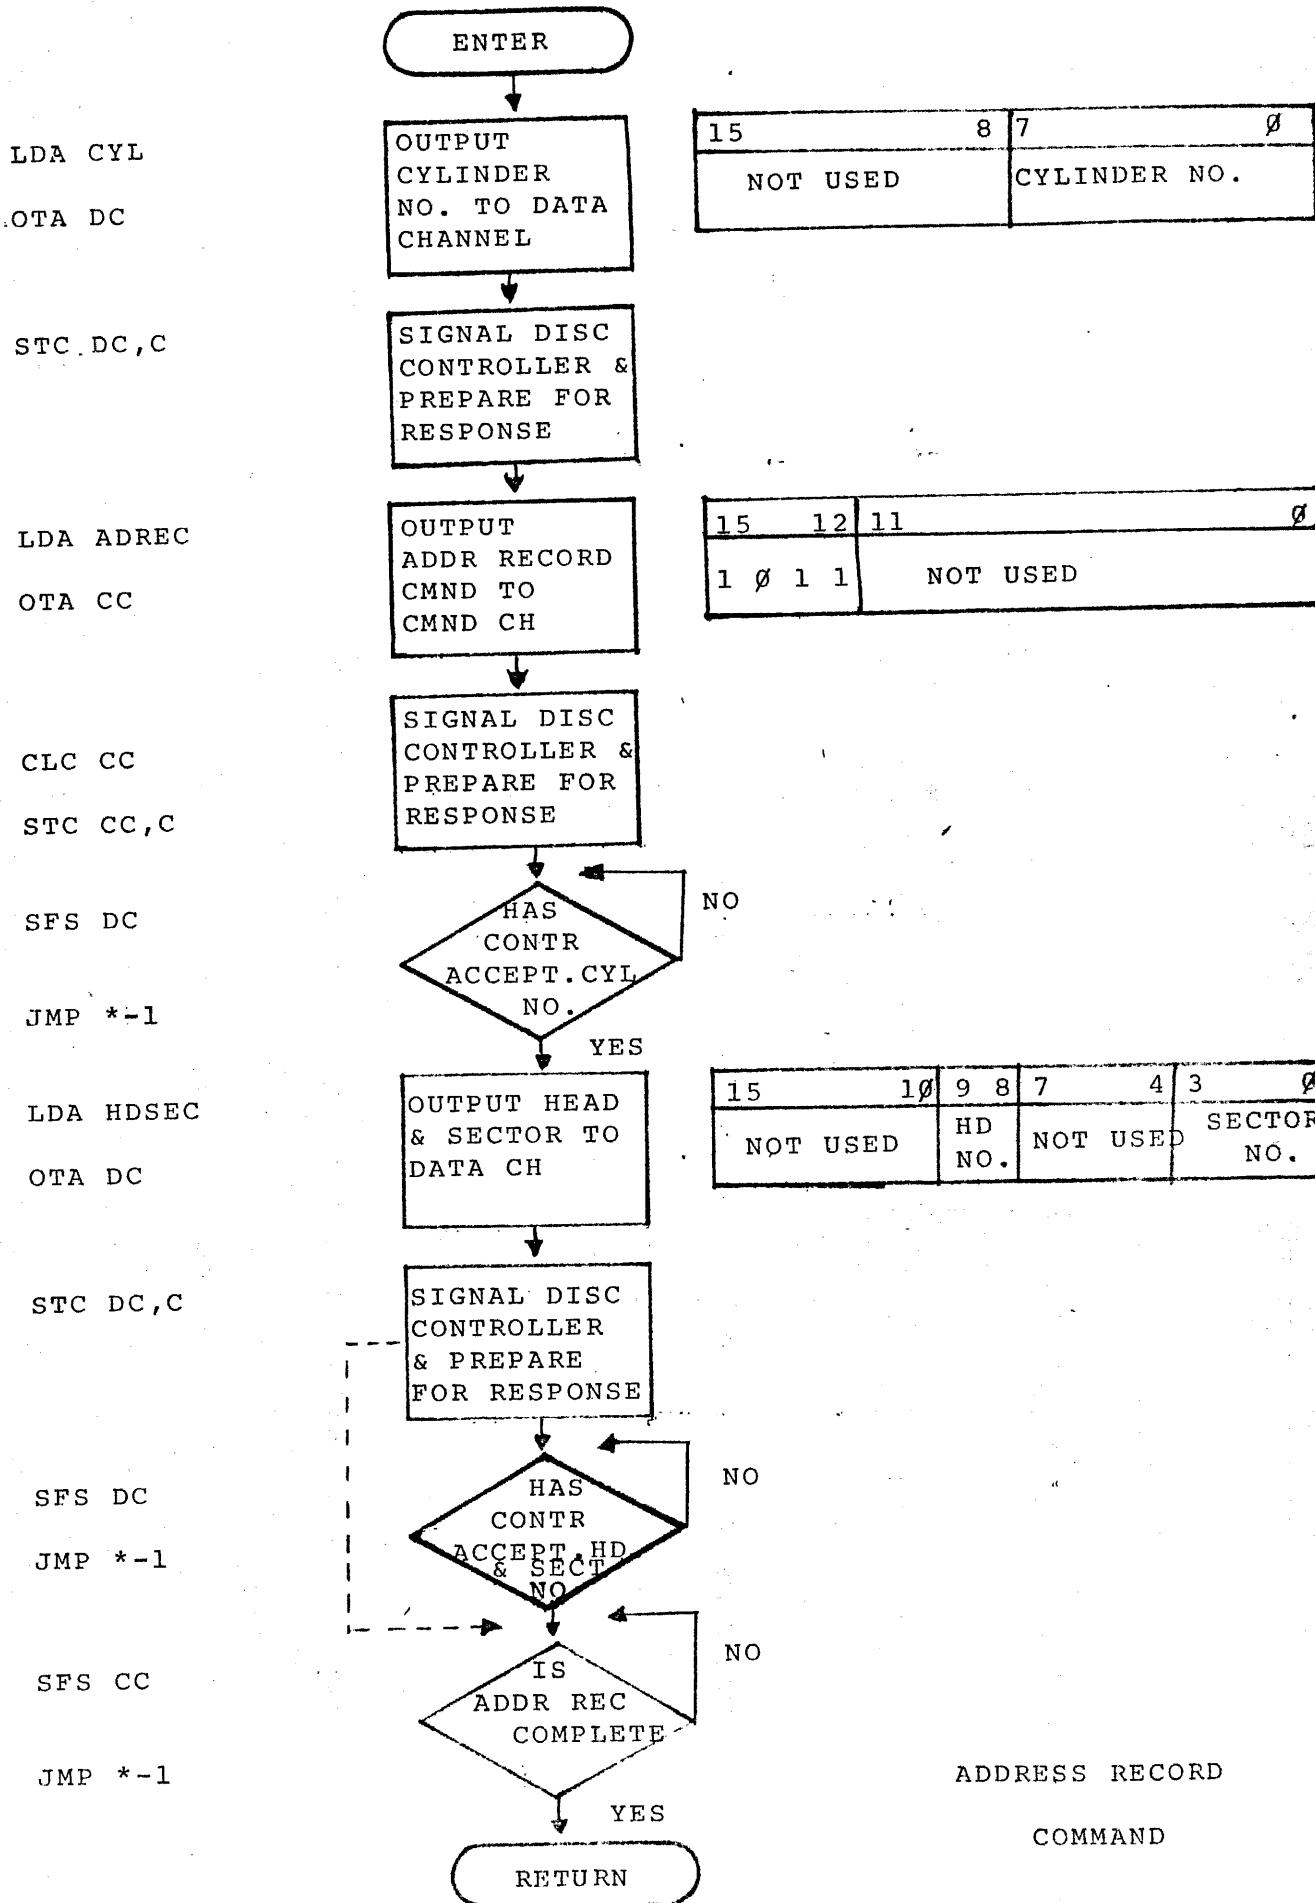


FIGURE 10.

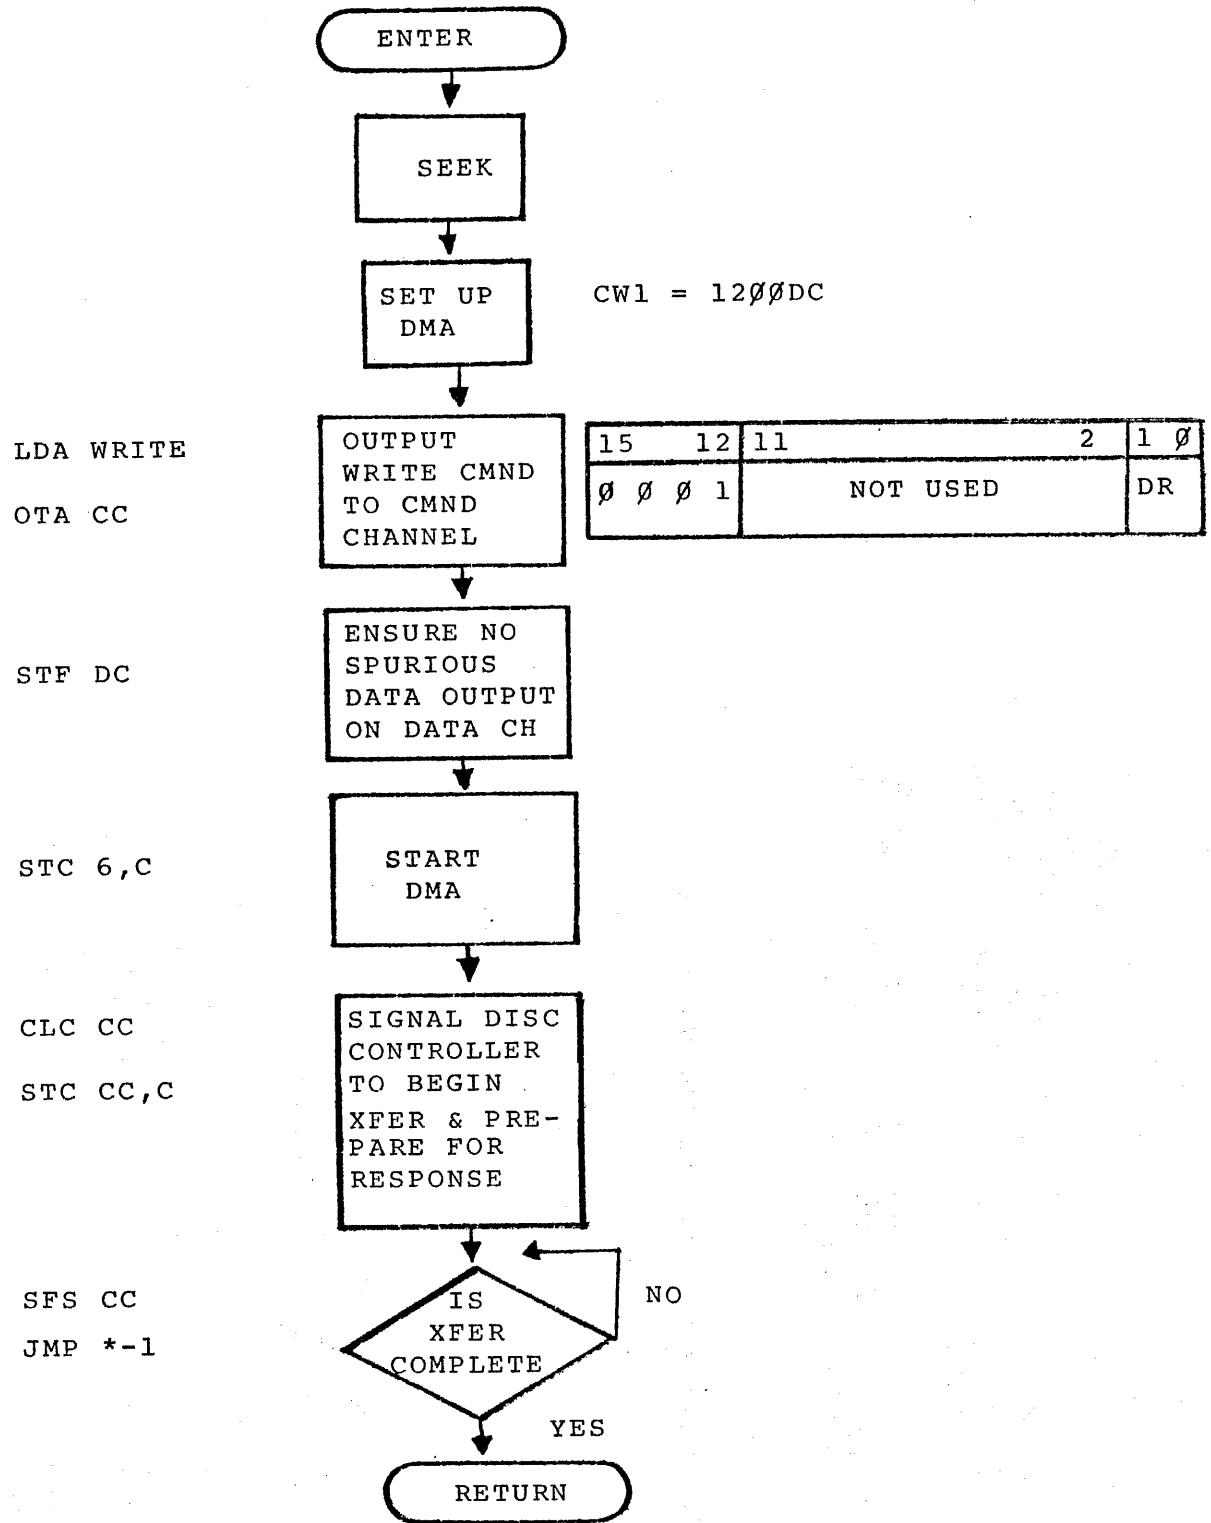

WRITE  
CMND

FIGURE 11.


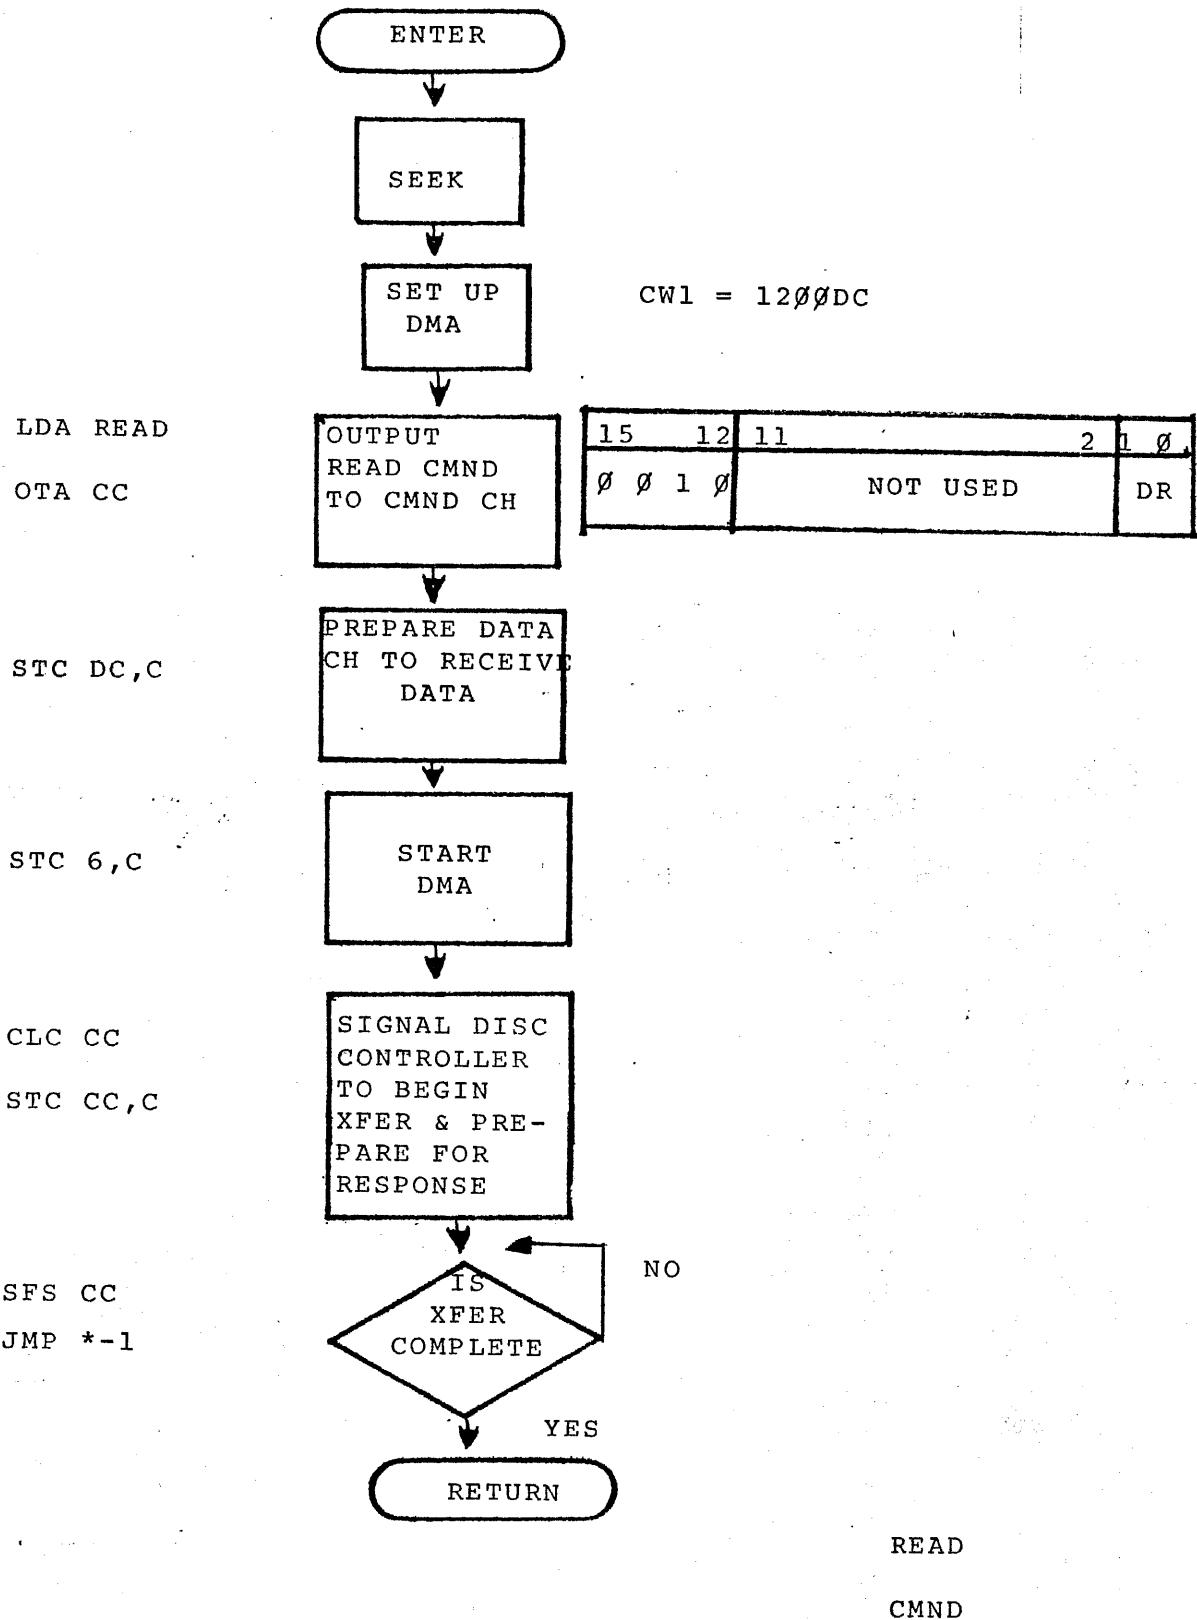


FIGURE 12.

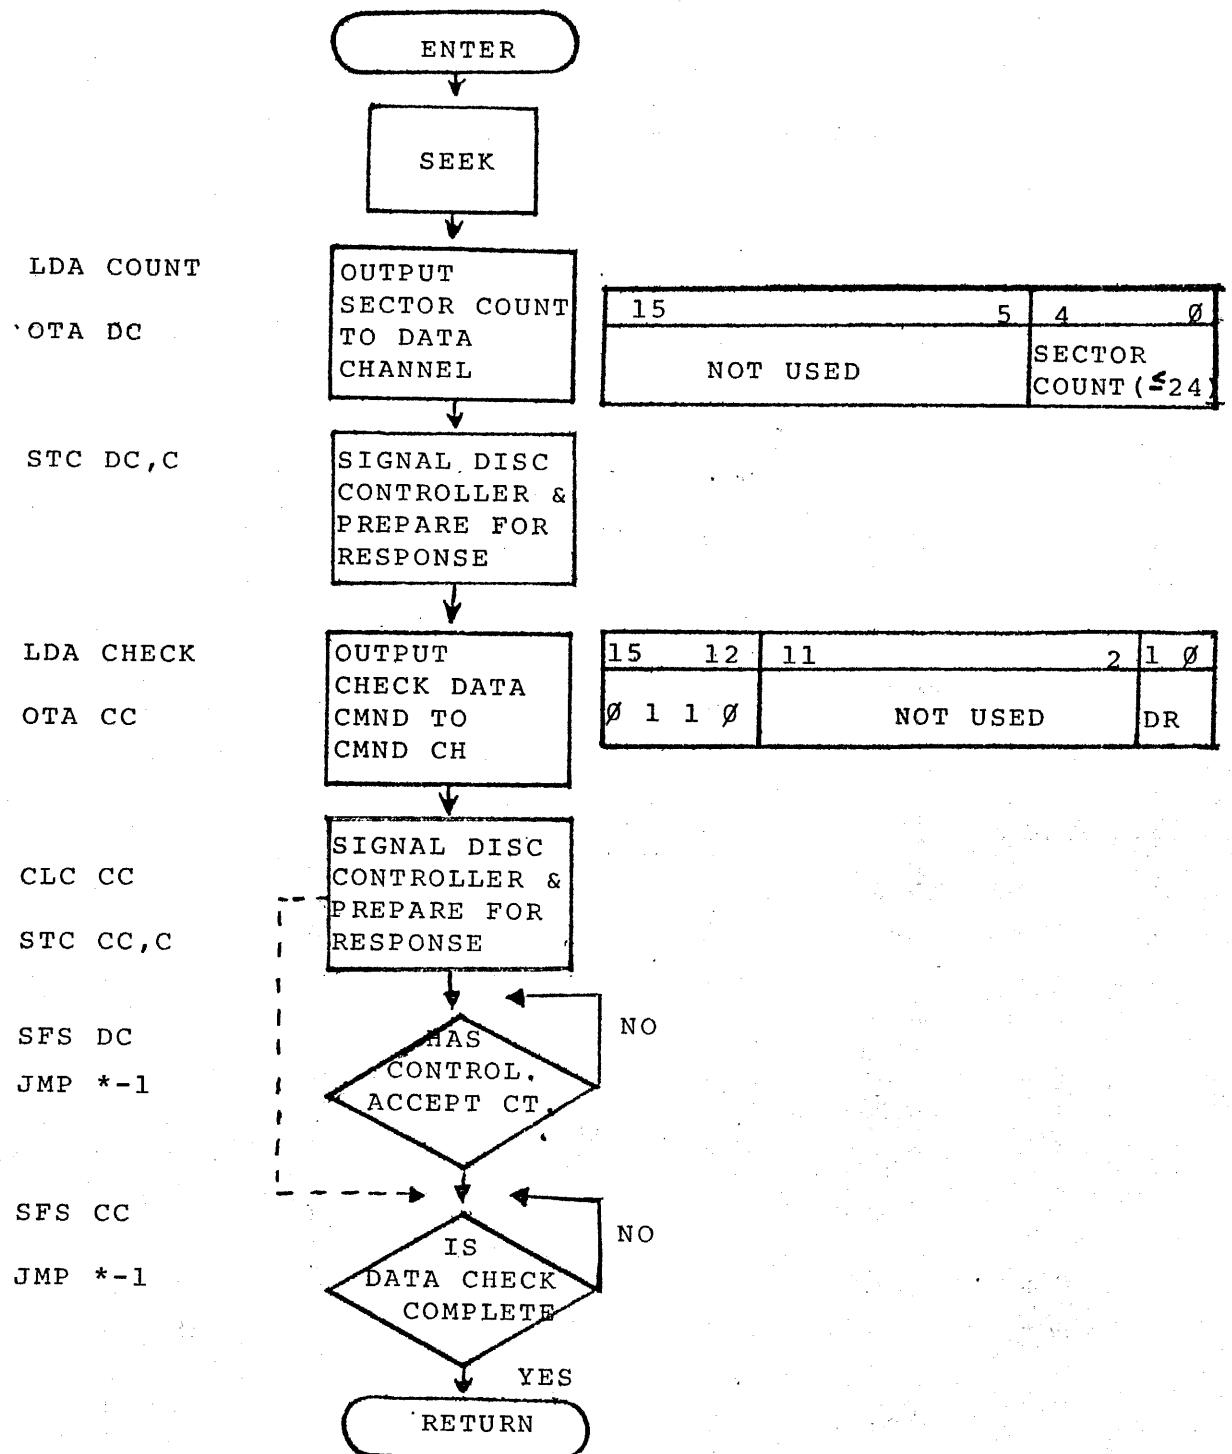

CHECK DATA

CMND

FIGURE 13.

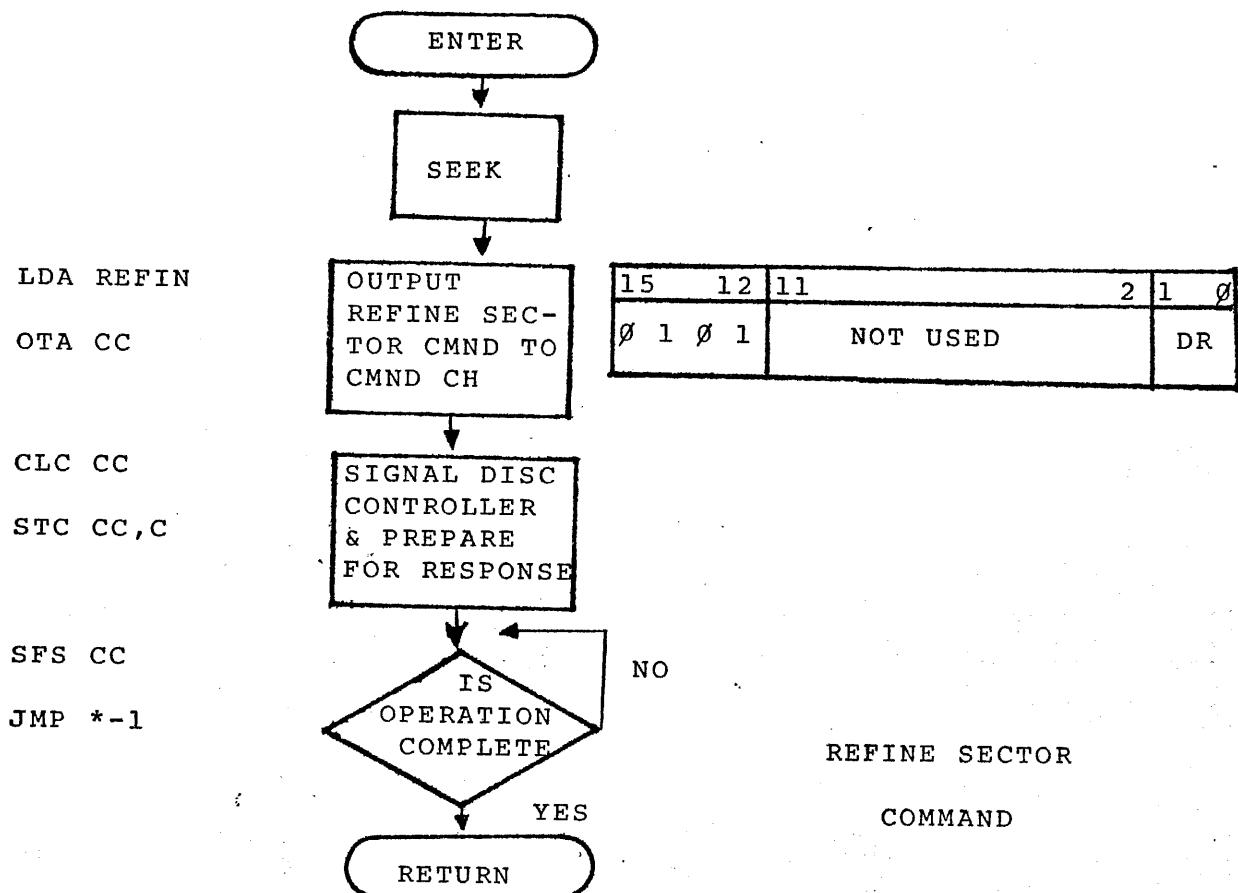


FIGURE 14.

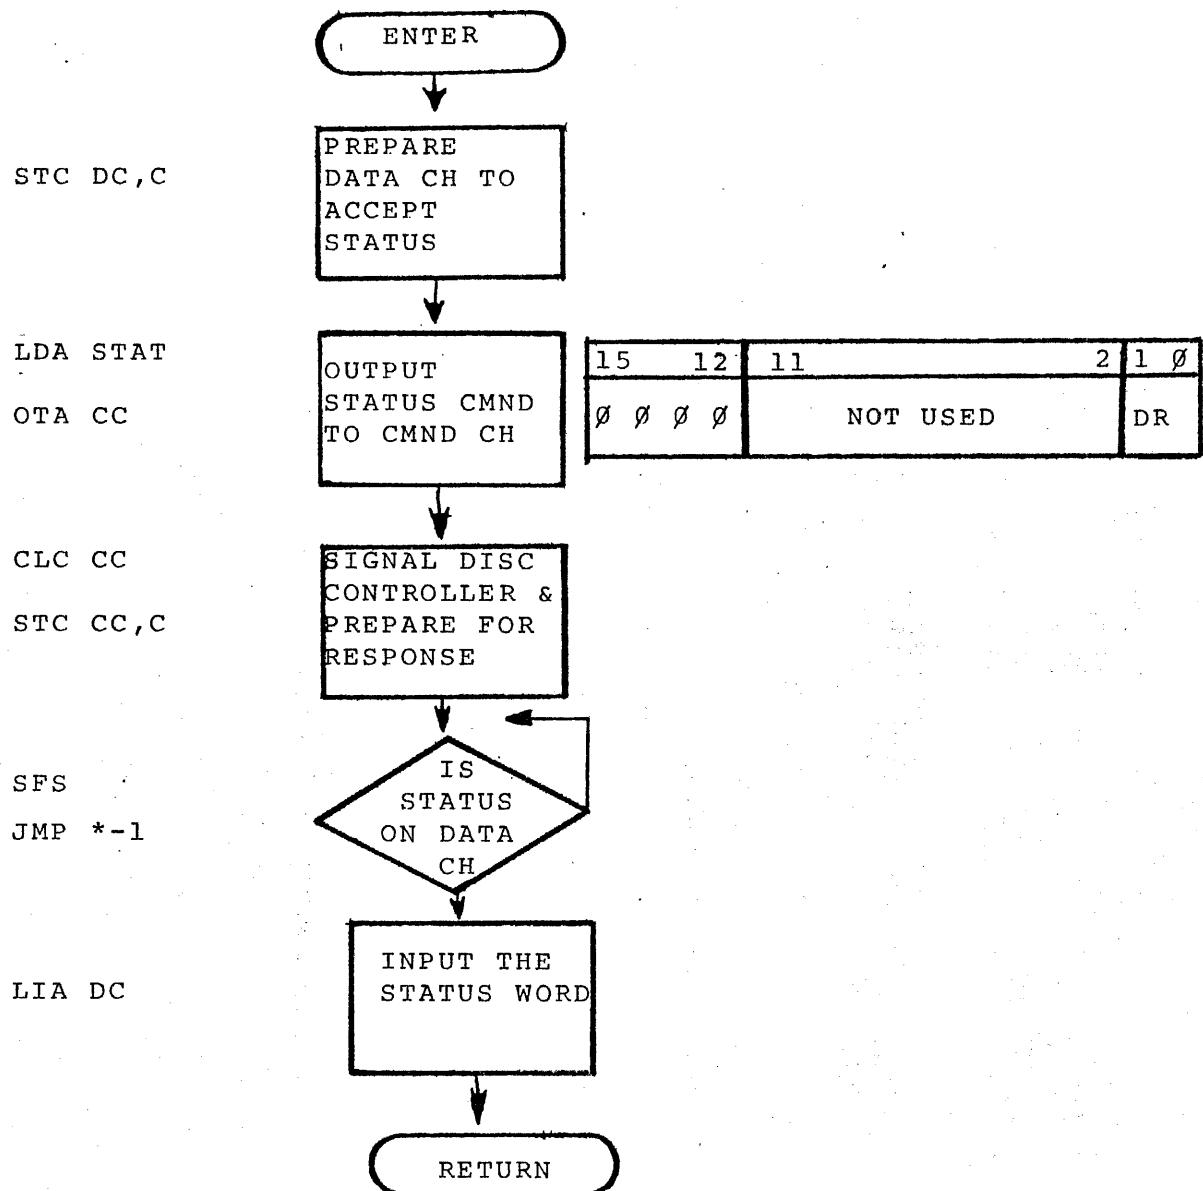


FIGURE 15.

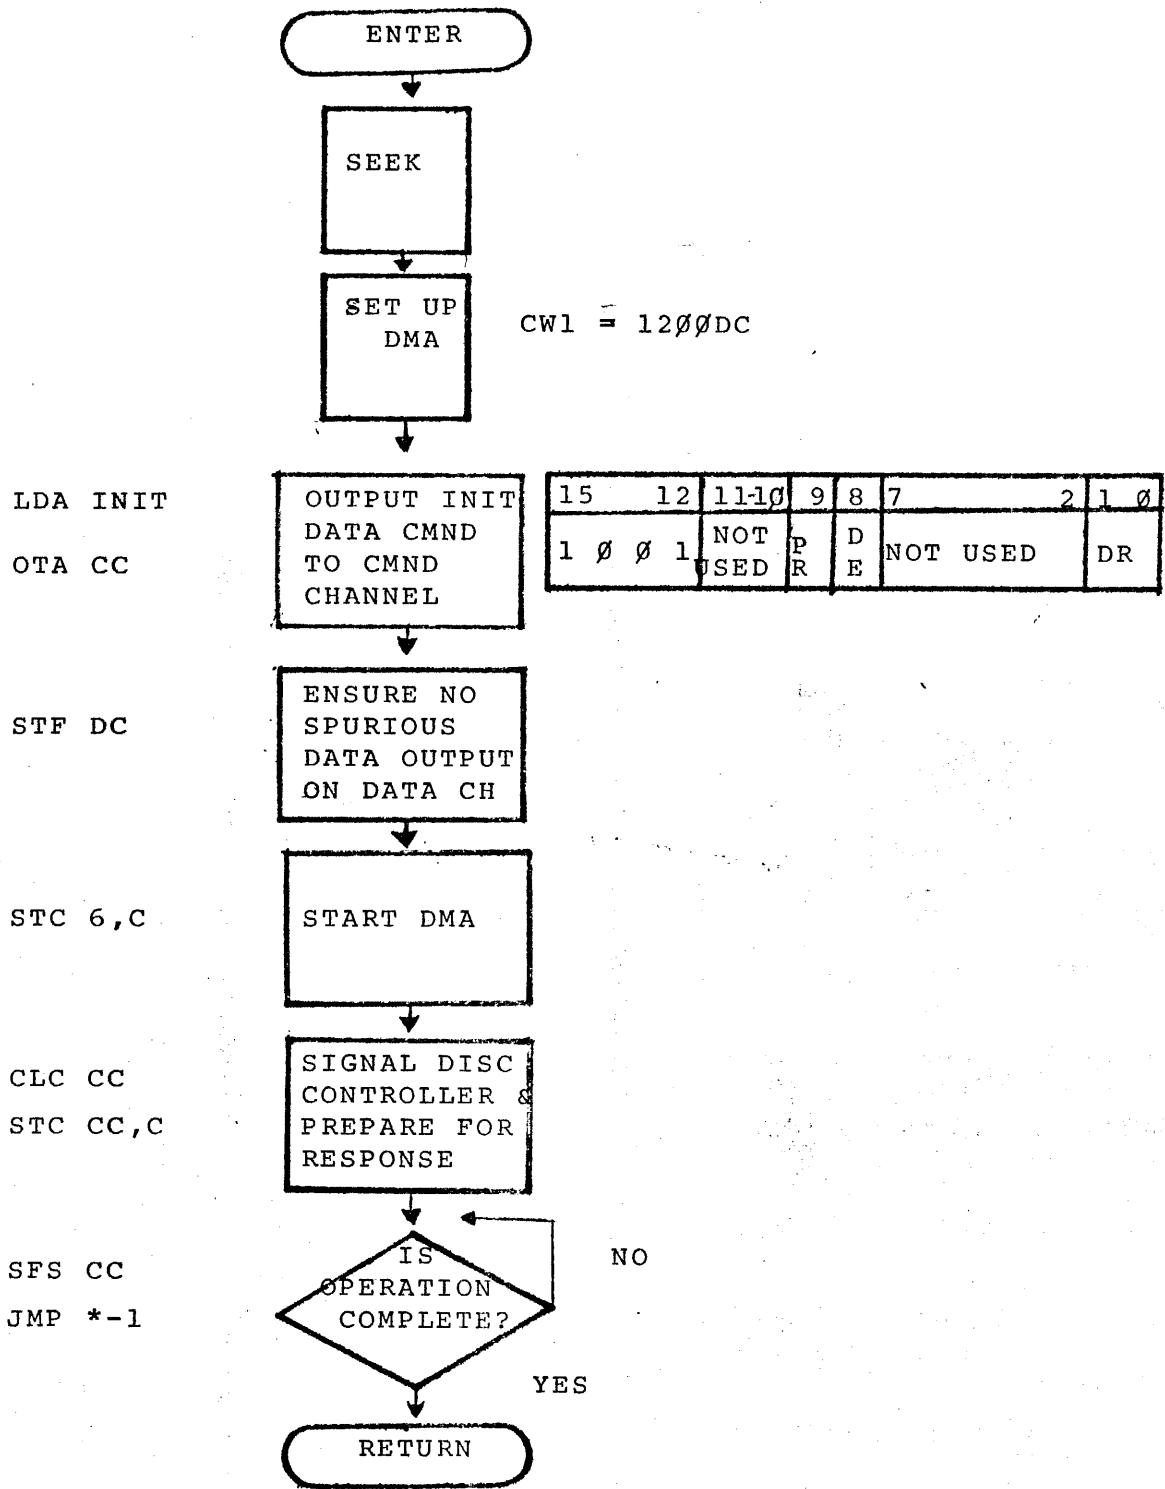


FIGURE 16.

### OVERRIDE PROTECT BIT SET

	BIT 0	BIT 1	BIT 2	BIT 3	BIT 4	BIT 5	BIT 6	BIT 7
READ	0	1	1	0	0	1	1	1
WRITE	0	1	0	1	0	1	1	1
CHECK DATA	0	1	0	1	0	1	1	1
INITIALIZE DATA	0	0	0	0	0	1	1	1

### DEFECTIVE BIT SET

	BIT 0	BIT 1	BIT 2	BIT 3	BIT 4	BIT 5	BIT 6	BIT 7
READ	1	1	1	1	1	1	1	1
WRITE	1	1	1	1	1	1	1	1
CHECK DATA	1	1	1	1	1	1	1	1
INITIALIZE DATA	0	0	0	0	0	1	1	1

### OVERRIDE SWITCH OFF PROTCTOR BIT SET

	BIT 0	BIT 1	BIT 2	BIT 3	BIT 4	BIT 5	BIT 6	BIT 7
READ	0	1	1	1	1	1	1	1
WRITE	0	1	1	1	1	1	1	1
CHECK DATA	0	1	1	1	1	1	1	1
INITIALIZE DATA	0	1	1	1	1	1	1	1

### DEFECTIVE BIT SET

	BIT 0	BIT 1	BIT 2	BIT 3	BIT 4	BIT 5	BIT 6	BIT 7
READ	1	1	1	1	1	1	1	1
WRITE	1	1	1	1	1	1	1	1
CHECK DATA	1	1	1	1	1	1	1	1
INITIALIZE DATA	0	1	1	1	1	1	1	1

BIT 4 - ADDRESS ERROR  
 BIT 3 - PROTECT/DEFECTIVE  
 BIT 0 - ERROR