

DR. E. MCGILVERA

CALIBRATION

FIXTURES

Wayne C. Coll



MANUFACTURERS OF CATHODE-RAY OSCILLOSCOPES

Geo. E. McGraw

CALIBRATION

FIXTURES

Wayne C. Coll

You'll find a complete list of the test equipment for calibrating your Tektronix instrument in the instruction manual received with that instrument. Some of the items listed are Calibration Fixtures—items which we have designed and made available for the sole purpose of assisting you to service your Tektronix instruments accurately and efficiently. Calibration fixtures are not described in your Tektronix catalog because they do not offer the wide range measurement capability of Tektronix instruments. This booklet describes calibration fixtures. Tektronix instrument manuals list those which we recommend for servicing each instrument. For prices or other information on the use of the fixtures, contact your Tektronix Field Office, Field Representative or Distributor.

August 1, 1967

Copyright © 1967 by Tektronix, Inc.,
Beaverton, Oregon. Printed in the United
States of America. All rights reserved.
Contents of this publication may not be
reproduced in any form without permission
of the copyright owner.

TEKTRONIX CALIBRATION FIXTURES

Part Number	Description	Useful WITH Or Cal Procedure Calls FOR	Part Number	Description	Useful WITH Or Cal Procedure Calls FOR
003-0007-00	Alignment Tool Kit	General	012-0067-00	Circuit Card Extender	For 6R1, 6R1A
* 003-0035-00	Dual Input Coupler	With CA (Use 067-0525-00) and BNC Adapters)	012-0068-00	Circuit Card Extender	For 6R1, 6R1A
* 003-0036-00	Dual Input Coupler	With G (Use 067-0525-00 and BNC Adapters)	012-0069-00	Circuit Card Extender	For 4S1, 4S2, 4S2A, 4S3
* 003-0037-00	Dual Input Coupler	With Z (Use 067-0525-00 and BNC Adapters)	012-0070-00	Coax Extender Cable	For 4S1, 4S2, 4S2A, 4S3
003-0500-00	Alignment Tool Kit	General	012-0077-00	Circuit Card Extender	For 3S3
* 011-0022-00	Input Normalizer	For CA, L, 516 (Use 067-0533-00)	012-0078-00	Circuit Card Extender	For 263, 3B5—With 262, 3A5
* 011-0029-00	Input Normalizer	For Z (Use 067-0534-00)	* 012-0079-00	Circuit Card Extender	With 1A1 (Use 012-0100-00)
* 011-0030-00	Input Normalizer	For A, B, D, G, H, M, O, 2A60, 2A63, 3A75, 502, 502A, 503, 504, (Use 067-0535-00)	012-0080-00	Plug-in Extension Cable	For 10A1—With any other 10-series or 11-series plug-ins
* 011-0051-00	Input Normalizer	With 82 (Use 067-0536-00 and UHF Adapters)	012-0100-00	Circuit Card Extender	With 1A1
* 011-0053-00	Input Normalizer	For 3A2 (Use 067-0541-00 and UHF Adapters)	* 013-0002-00	Plug-in Extender	(Use 013-0019-00)
* 011-0065-00	Input Normalizer	For 82, 86 (Use 067-0536-00)	013-0005-00	Gain Set Extender	For 133, 945, 551—With any other 530, 540, 550-series main frame
* 011-0066-00	Input Normalizer	For CA, L, W, 10A1, 3A7, 453, 516, (Use 067-0538-00)	013-0013-00	Plug-in Extender	For 555 Time Base Plug-ins
* 011-0067-00	Input Normalizer	For 3A5, Z (Use 067-0539-00)	013-0015-00	Plug-in Extender	For R
* 011-0068-00	Input Normalizer	For D, G, H, M, O, 1A7, 2A60, 2A63, 3A1, 3A2, 3A3, 3A6, 3A74, 3A75, 3A8, 502, 502A, 503, 504, 9A1, 9A2, (Use 067-0541-00)	* 013-0019-00	Plug-in Extender	For L, M, S, T, Z (Use 013-0055-00)
* 011-0073-00	Input Normalizer	For 1A1, 1A2, 82, 86 (Use 067-0537-00)	013-0021-00	Timing Signal Generator	With 524D, 524AD
012-0038-00	Plug-in Extension Cable	For Q, R, Z, 1L20, 1S1, 1S2—With any other letter-series or 1-series plug-in	* 013-0023-00	Input Connector Adapter	(Use 016-0011-00)
012-0064-00	Plug-in Extension Cable	For 4S1, 4S2, 4S2A, 4S3—With 5T1, 5T1A, 5T3	013-0025-00	Test Resistor	For Q
012-0066-00	Plug-in Extension Cable	For 3A5, 3A74, 3S3, 3S76, 3T4, 3T77, 3T77A, 9A1, 9A2—With any other 2-series or 3-series plug-in	* 013-0026-00	Test Resistor	With Q (Use 013-0078-00)
			013-0028-00	Timing Signal Generator	For N, 3T77, 3T77A, 5T1, 5T1A
			013-0034-00	Plug-in Extender	For 2A61, 3A3, 3A8, 3B1, 3B2, 3B3, 3B4, 3B5, 3C66, 3T4—With any other 2-series or 3-series plug-ins
			* 013-0046-00	Signal Switch	With 180

*Discontinued or replaced.

Tektronix Calibration Fixtures (continued)

Part Number	Description	Useful WITH Or Cal Procedure Calls FOR	Part Number	Description	Useful WITH Or Cal Procedure Calls FOR
013-0055-00	Plug-in Extender	For A, D, E, G, K, O, 545A, 555, 82, 86—With any other 1-series or letter-series plug-ins	067-0114-00	Four-input adapter	For 502A (Use 067-0525-00 and BNC Adapters)—With 560, 561, 564, 565
013-0075-00	Drive Pulse Inverter	For 10A1, 3A7, 422, 453, 567, 86 (Used on TU-5 Step Generator)	067-0500-00	CRT Capacitance Normalizer	For 561A, 567
013-0077-00	Plug-in Extender	With 10-series and 11-series plug-ins	067-0501-00	Plug-in Extension Coax	With 4S1, 4S2, 4S2A, 4S3, 5T1, 5T1A, 5T3
013-0078-00	Test Resistor	For Q	067-0502-00	Standard Amplitude Calibrator	For 1A2, 1A6, 1A7, 1S2, 10A1, 3A1, 3A5, 3A7, 3A8, 422, 453, 502A, 529, 533A, 549, 556, 561A, 581A, 585A, 82, 86
015-0001-00	L-C Delta Standard	For 130	067-0503-00	Precision Resistance Divider	For W, 10A1, 3A7
* 015-0013-00	Frequency Doubler	For 3T4 (Used on Type 180—Use 184)	067-0505-00	Plug-in Extender	With 6R1, 6R1A
015-0038-00	TU-5 Step Generator	For 1A1, 10A1, 3A7, 422, 453, 647, 82, 86	* 067-0506-00	Signal Generator	For 453 (Use Type 191)
015-0042-00	Set of Test Resistors	With 175	067-0507-00	Grid Current Checker	For 3A8—With O Unit
015-0043-00	TU-5 Step Generator Pkg.	For 3A7, 82, 86	067-0508-00	50 Ω Amplitude Calibrator	For 1S1, 1S2, 4S2, 4S2A—With any scope or vertical channel having 50-ohm input
* 015-0056-00	Frequency Doubler	For 3T4 (Used on Type 180A—Use 184)	067-0511-00	Coax Signal Attenuator	For 1S1, 5T3—With any scope or plug-in having 50-ohm inputs
015-0088-00	Step Generator	For P6045 Probe	067-0513-00	Fast-step Generator	For 1S1, 1S2, 4S2, 4S2A—With any sampling scope vertical channels
016-0011-00	Input Connector Adapter	For R	067-0514-00	10 V RMS Voltmeter	With 517, 517A, 555
017-0010-00	Cal Signal Adapter	For N	067-0515-00	Precision 50-ohm Resistor	For 561A, 556—With scopes having calibrator signals from 50-ohm source
017-0019-00	Timing Signal Generator	For 519	067-0517-00	Double Trigger Mod Kit	With any sampling scope (Modifies Type 111 Pulse Generator)
017-0031-00	Cal Signal Adapter	With Clamp-on Current Probes	067-0518-00	Harmonic Modulator	For 1L10, 1L20, 3L10—With other Spectrum Analyzers
* 017-0041-00	Probe Adapter	For P80 Probe	067-0521-00	Test Plug-in	For 533A, 549, 556, 81—With other 530, 540, and 550-series scopes
017-0074-00	Cal Signal Adapter	For N			
* 067-0050-00	Line Voltage Control	With 517, 517A, 555 (Use GR W20MT3A)			
* 067-0075-00	50 Ω Pi Attenuator	For 1A7 (Use 067-0529-00)			
* 067-0081-00	Mixer-rectifier	For 3T4 (Use GR 874-VRL)			

*Discontinued or replaced.

Tektronix Calibration Fixtures (continued)

Part Number	Description	Useful WITH Or Cal Procedure Calls FOR	Part Number	Description	Useful WITH Or Cal Procedure Calls FOR
067-0523-00	Test Plug-in	For 581A, 585A—With 581, 585	067-0538-00	Input Normalizer	For CA, L, W, 10A1, 3A7, 453, 516
067-0525-00	Dual Input Coupler	For CA, 1A2, 1A6, 1A7, 3A1, 3A7, 453—With most other differential-input scopes and plug-in units	067-0539-00	Input Normalizer	For 3A5, Z
067-0529-00	Precision Resistance Divider	With 1A7, 122, 2A61 (Used with 067-0502-00)	067-0540-00	Input Normalizer	For 1A6
067-0530-00	Connector Adapter Cable	With E, 122	067-0541-00	Input Normalizer	For D, G, H, M, O, 1A7, 2A60, 2A63, 3A1, 3A2, 3A3, 3A6, 3A74, 3A75, 3A8, 502, 502A, 503, 504, 9A1, 9A2
067-0531-00	Connector Adapter Cable	With 2A61	067-0544-00	Test Plug-in	For 647A—With 647
067-0532-00	Sine Wave Generator	For 10A2A, 647A, 454—With scopes having band-width from 65 MHz to 500 MHz	* TU-1	Test Unit	General (Use 067-0521-00)
067-0533-00	Input Normalizer	For CA, L, 516	* TU-2	Test Unit	General (Use 067-0521-00)
067-0534-00	Input Normalizer	For Z	* TU-3	Test Unit	General (Use 067-0523-00)
067-0535-00	Input Normalizer	For A, B, D, G, H, M, O, 2A60, 2A63, 3A75, 502, 502A, 503, 504	* TU-4	Test Unit	General (Use typical 2-series or 3-series plug-in units)
067-0536-00	Input Normalizer	For 82, 86	* TU-5	Test Unit	Same as 015-0038-00 and 015-0043-00
067-0537-00	Input Normalizer	For 1A1, 1A2, 82, 86	* TU-6	Test Unit	General (Use 067-0521-00)
			* TU-7	Test Unit	General (Use 067-0521-00)
			* TU-50	Test Unit	General (Use Types 106, 191, and 184)
			* TU-76	Test Unit	General (Use General Radio W10MT3W)
			* TU-77	Test Unit	General (Use General Radio W20MT3A)

*Discontinued or replaced.

ALIGNMENT TOOL KITS

ALIGNMENT TOOL KIT-003-0500-00

003-0001-00



003-0047-00



003-0000-00



003-0521-00



003-0004-00



003-0003-00



003-0301-00



ALIGNMENT TOOL KIT-003-0007-00

003-0305-00



003-0304-00



003-0310-00



003-0307-00



003-0308-00



003-0334-00



ALIGNMENT TOOLS

Tektronix, Inc.

TOOL: 1-1/2 inch shaft;
5 inches total
length, plastic
shaft and handle,
metal screwdriver
tip.



003-0000-00

TOOL: 7 inch shaft; 10-1/2 inches total length, plastic shaft
and handle, metal screwdriver tip.



003-0001-00

TOOL: 6 inches long by 3/8 inch diameter, nylon, with
screwdriver shaped ends.



003-0008-00

TOOL: 3 inch plastic shaft and handles, metal screwdriver
tip, 6-1/2 inches total length.



003-0047-00

TOOL: 4-3/8 inches long by 1/4
inch diameter shaft with
metal screwdriver tip
and knob for handle, for
tuning 517 vertical
trimmers.



003-0374-00

TOOL: 4-1/4 inches long by
5/8 inch diameter, with
screwdriver handle.
For ERIE 557 ceramic
capacitors



003-0521-00

ALIGNMENT TOOLS

Tektronix, Inc.

HANDLE: Uses 003-0304-00 insert.

003-0305-00



HANDLE: Nylon, uses 003-0008-00, 003-0010-00 and 003-0334-00 inserts.



003-0307-00

INSERT: Low capacity nylon with wire pin, 7-3/4 inches long when inserted into handles for 551 right hand delay line. Requires 003-0305-00 handle.



003-0304-00

INSERT: For turret attenuators, requires 003-0307-00 handle.



003-0308-00

INSERT: 0.077 inch outside diameter, use with 003-0007-00 handle, for 5/64 inch inside diameter hex cores.



003-0310-00

INSERT: Nylon, use with 003-0307-00 handle, for turret attenuator.



003-0334-00

ROD: 7 inches long, plastic rod with recessed metal screwdriver tips, one end for #4 studs and the other end for #6 studs. Walsco # 2519 or equal.



003-0003-00

ROD: 7-1/2 inches long, plastic rod with 1/4 inch hex socket at each end. Walsco #2503 or equal.





003-0004-00

ROD: 5 inches long, plastic, for 0.100 inch inside diameter powdered iron hex slugs.



003-0301-00

PLUG-IN EXTENSION CABLE (Part No. 012-0038-00)

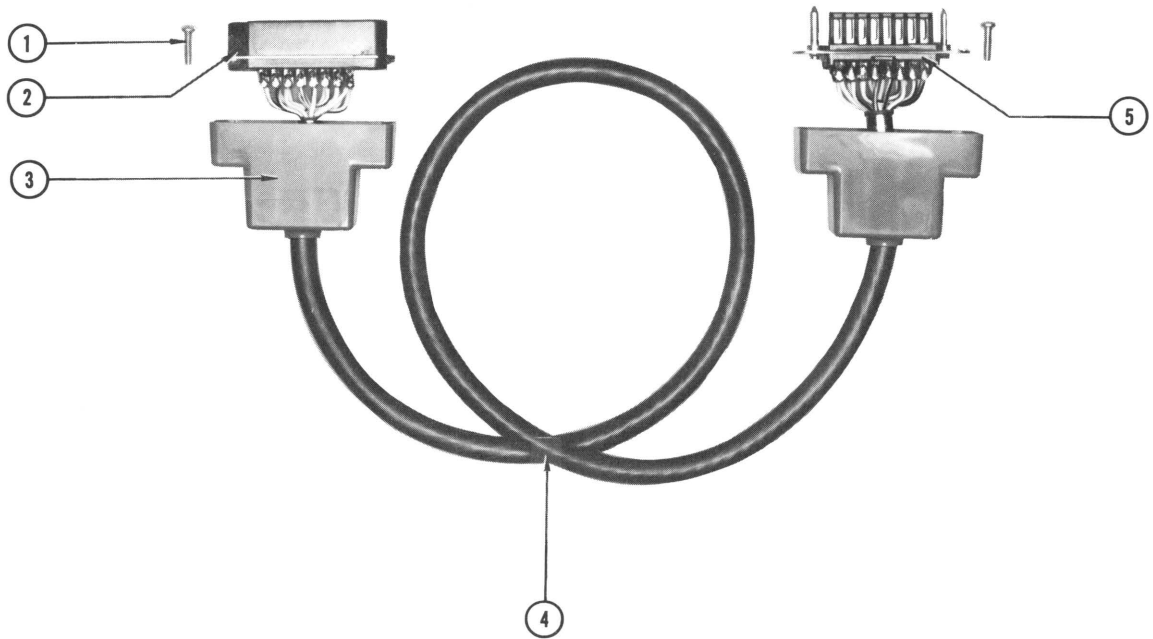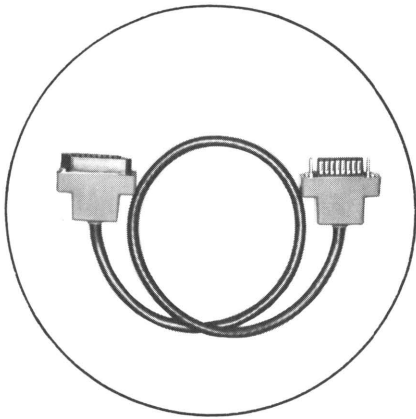

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1.	213-0082-00			4	SCREW, thread cutting, 4-40 x 1/2 inch PHS philips
2.	131-0018-00			1	CONNECTOR, female, 16 contact
3.	202-0066-00			2	BOX, plug in extension cable
4.	175-0236-00			FT	CABLE ASSEMBLY (2.73 ft.)
5.	131-0017-00			1	CONNECTOR, male, 16 contact
	343-0087-00			2	CLAMP, cable (not shown)


PUBLICATION NO.

G61-0724-00
August 1965
(Revised)




©, 1963, Tektronix, Inc.,
All rights reserved.

PLUG-IN TEST CABLE (Part No. 012-0064-00)


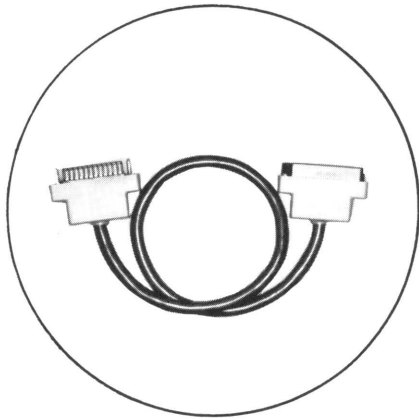


LATE MODEL

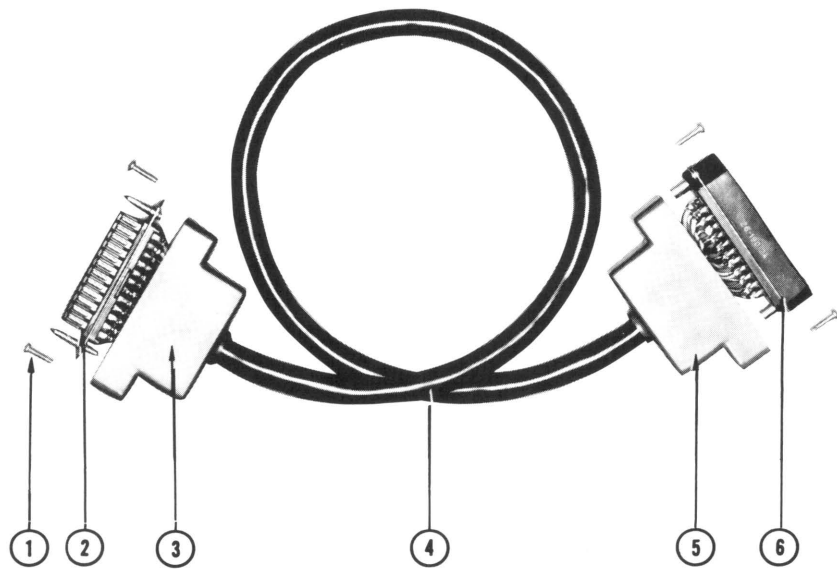

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	213-0082-00			4	SCREW, thread cutting, 4-40 x 1/2" phillips PH
2	131-0149-00			1	CONNECTOR, chassis mt. 24 contact, male
3	200-0453-00			1	COVER, plug-in ext., male
4	175-0245-00			1	CABLE, for plug-in extension .520 dia. vinyl jacket w/(4) #18, (7) #22, (7) 50 coax.
5	200-0478-00			1	COVER, plug-in extension, 3.207 x 1-5/8, female
6	131-0148-00			1	CONNECTOR, chassis mt. 24 contact, female
	343-0091-00			2	CLAMP, strain relief, (not shown)

PLUG-IN EXTENSION CABLE (Part No. 012-0066-00)

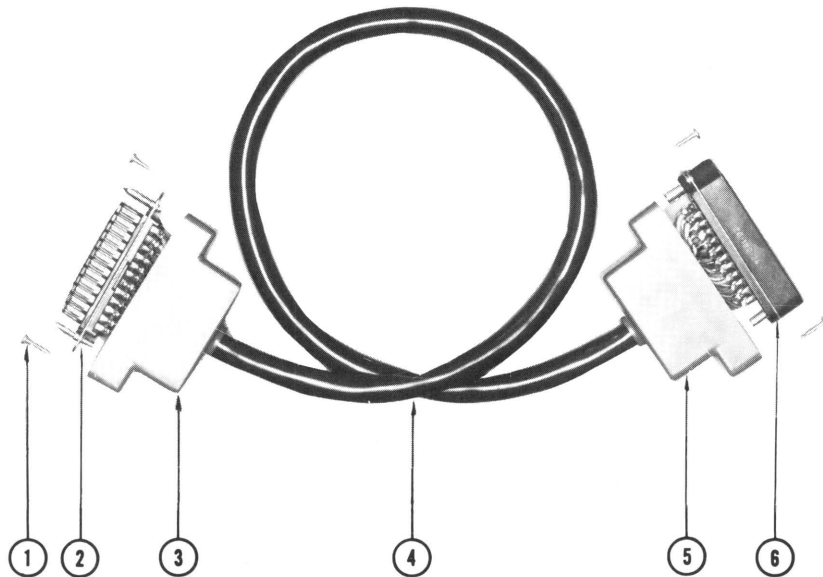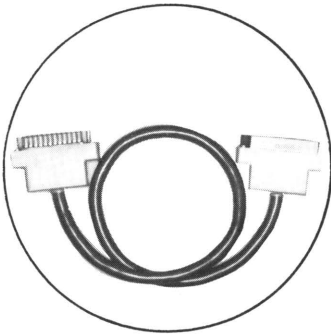

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	213-0082-00			4	SCREW, thread cutting, 4-40 x 1/2 in. Phillips PH
2	131-0149-00			1	CONNECTOR, chassis mt. 24 contact, male
3	200-0454-00			1	COVER, plug-in extension
4	175-0246-00			FT	CABLE (32 in.)
5	200-0478-00			1	COVER, plug-in extension cable, 3.207 x 1-5/8 female
6	131-0148-00			1	CONNECTOR, chassis mt. 24 contact, female
	343-0091-00			2	CLAMP, strain relief (not shown)



PUBLICATION NO.

061-0748-00
August 1965
(Revised)



©, 1963, Tektronix, Inc.,
All rights reserved.

15 PIN PLUG-IN EXTENSION BOARD (Part No. 012-0067-00)

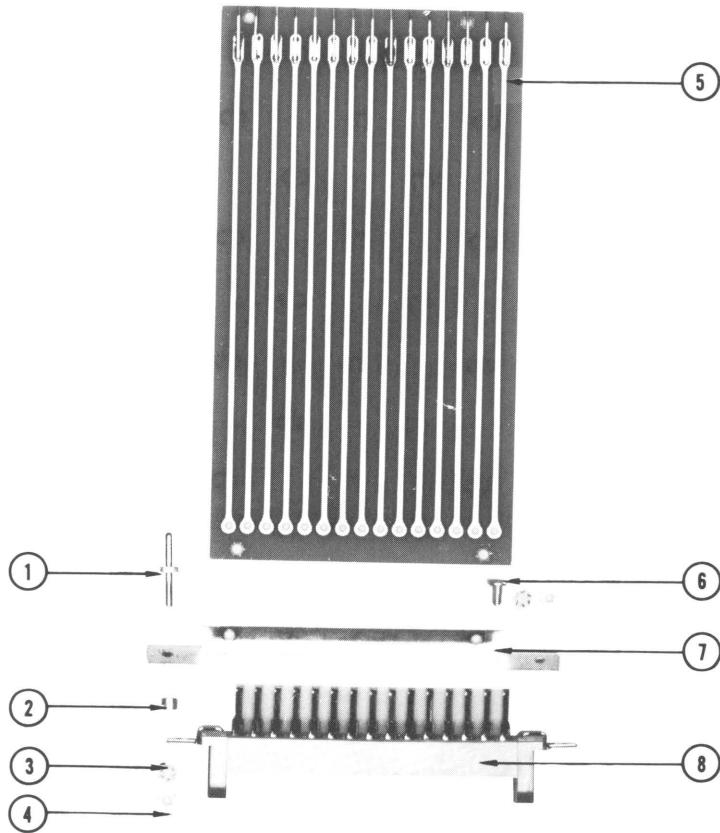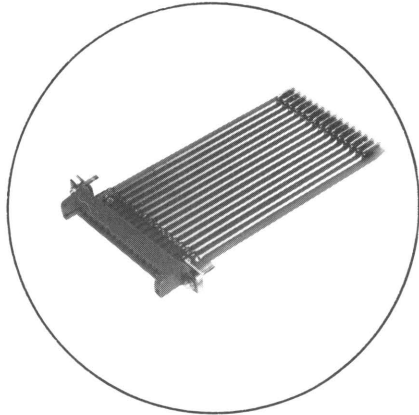

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	214-0279-00			2	PIN, locating
2	166-0024-00			2	TUBE, spacer
3	210-0004-00			4	LOCKWASHER, internal #4
4	210-0406-00			4	NUT, hex, 4-40 x 3/16 inch
5	388-0524-00			1	BOARD, etched circuit
	131-0207-00			15	Includes: CONNECTOR, contact
6	211-0008-00			2	SCREW, 4-40 x 1/4 inch PHS phillips
7	406-0855-00			1	BRACKET, extension board
8	131-0248-00			1	CONNECTOR, 15 pin



PUBLICATION NO.

061-0749-00
August 1965
(Revised)



©, 1963, Tektronix, Inc.,
All rights reserved.

20 PIN PLUG-IN EXTENSION BOARD (Part No. 012-0068-00)

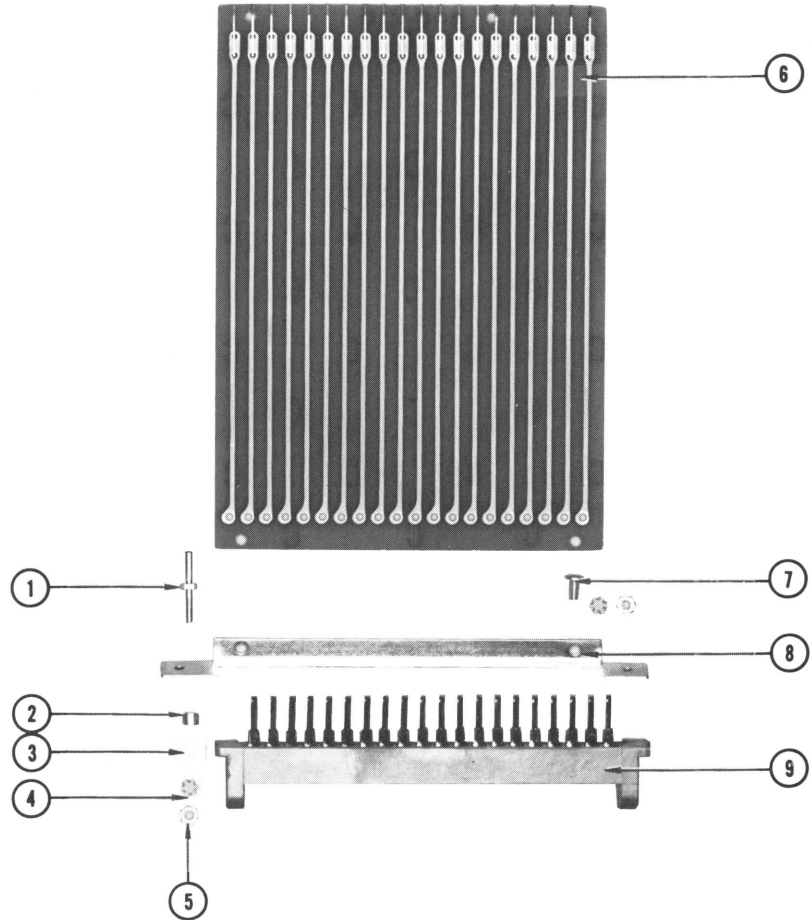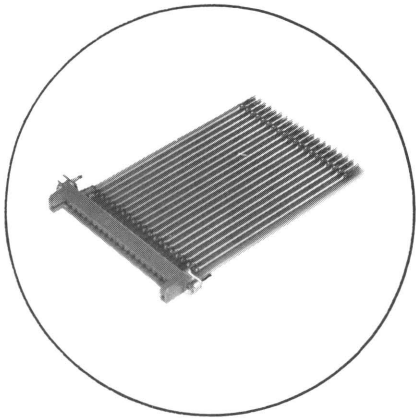

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	214-0279-00			2	PIN, locating
2	166-0024-00			2	TUBE, spacer
3	406-0859-00			2	BRACKET, hold down connector
4	210-0004-00			4	LOCKWASHER, internal #4
5	210-0406-00			4	NUT, hex, 4-40 x 3/16 inch
6	388-0525-00			1	BOARD, etched circuit
	131-0207-00			20	Includes: CONNECTOR, contact
7	211-0008-00			2	SCREW, 4-40 x 1/4 inch PHS phillips
8	406-0854-00			1	BRACKET, extension board
9	131-0247-00			1	CONNECTOR, 20 pin


PUBLICATION NO.

061-0750-00
August 1965
(Revised)



©, 1963, Tektronix, Inc.,
All rights reserved.

PLUG-IN EXTENSION (Part No. 012-0069-00)

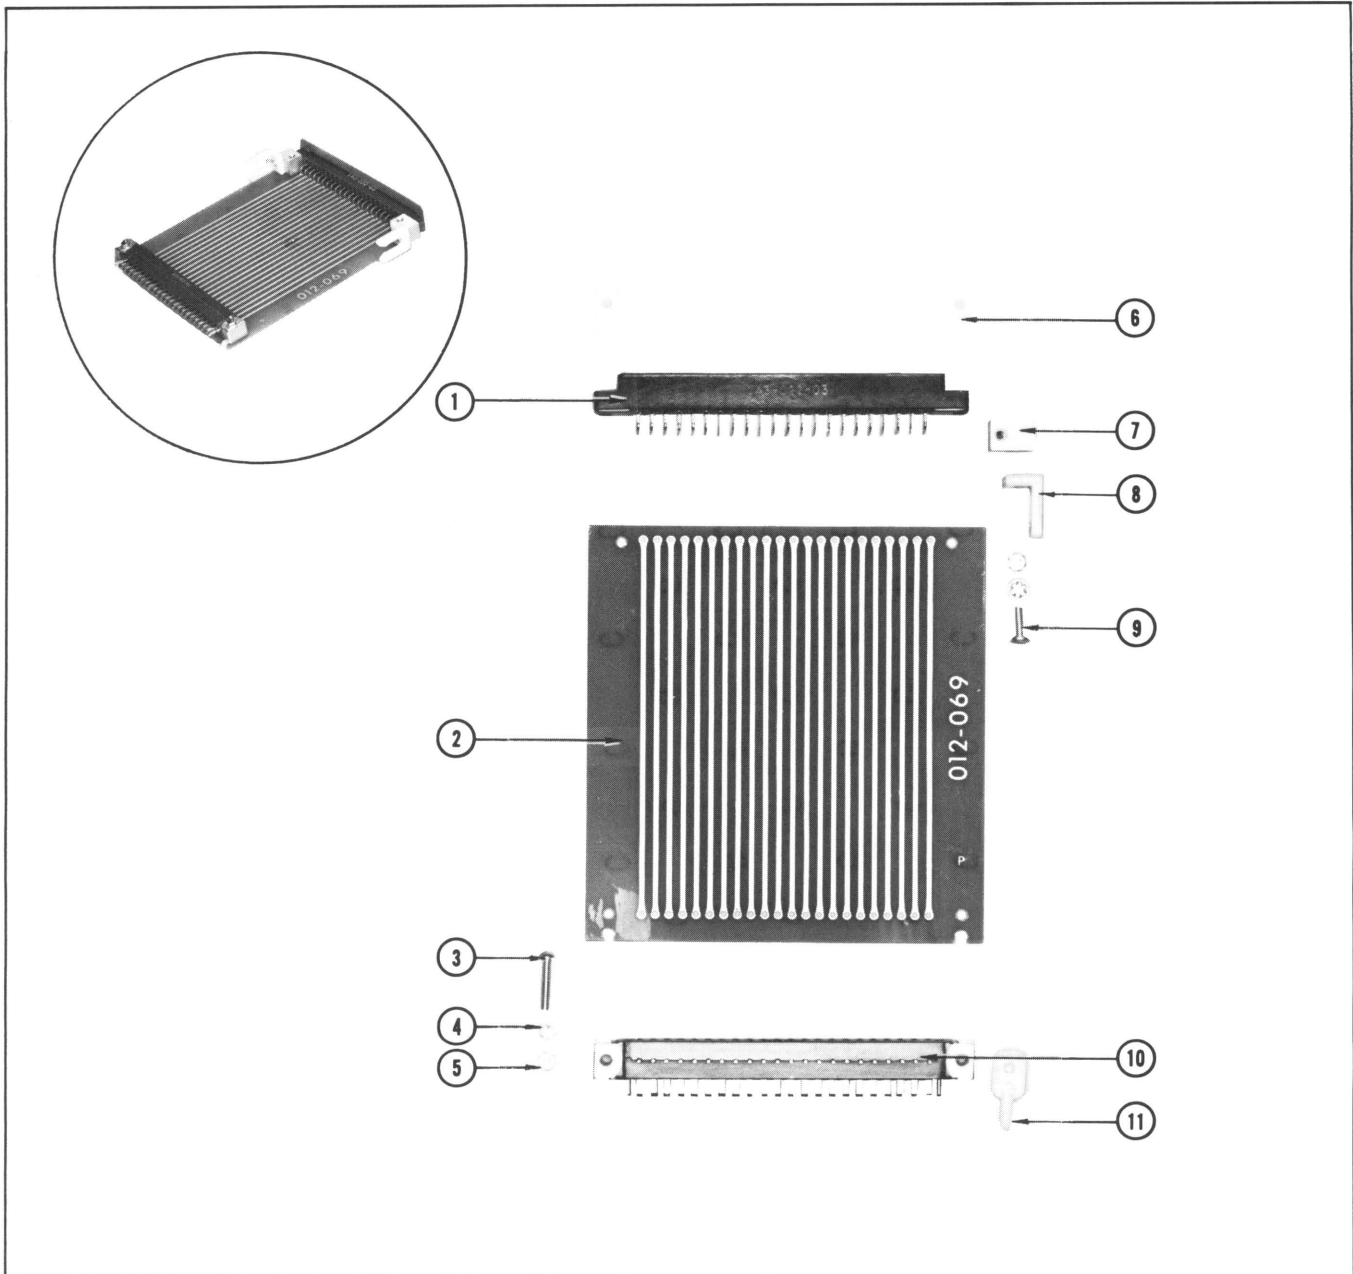

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	131-0246-00			1	CONNECTOR, 22 pin
2	388-0526-00			1	BOARD, etched circuit
3	211-0016-00			4	SCREW, 4-40 x 5/8 inch PHS philips
4	210-0004-00			4	LOCKWASHER, internal #4
5	210-0406-00			2	NUF, hex, 4-40 x 3/16 inch
6	387-0715-00			1	PLATE, connector
7	406-0858-00			2	BRACKET, connector mounting
8	352-0039-00			2	HOLDER, plug in chassis
9	211-0012-00			4	SCREW, 4-40 x 3/8 inch PHS phillips
10	131-0218-00			1	CONNECTOR, 22 contact
11	384-0593-00			2	ROD, pin index, nylon


PUBLICATION NO.

061-0751-00
August 1965
(Revised)



©, 1963, Tektronix, Inc.,
All rights reserved.

PLUG-IN EXTENSION (Part No. 012-0070-00)

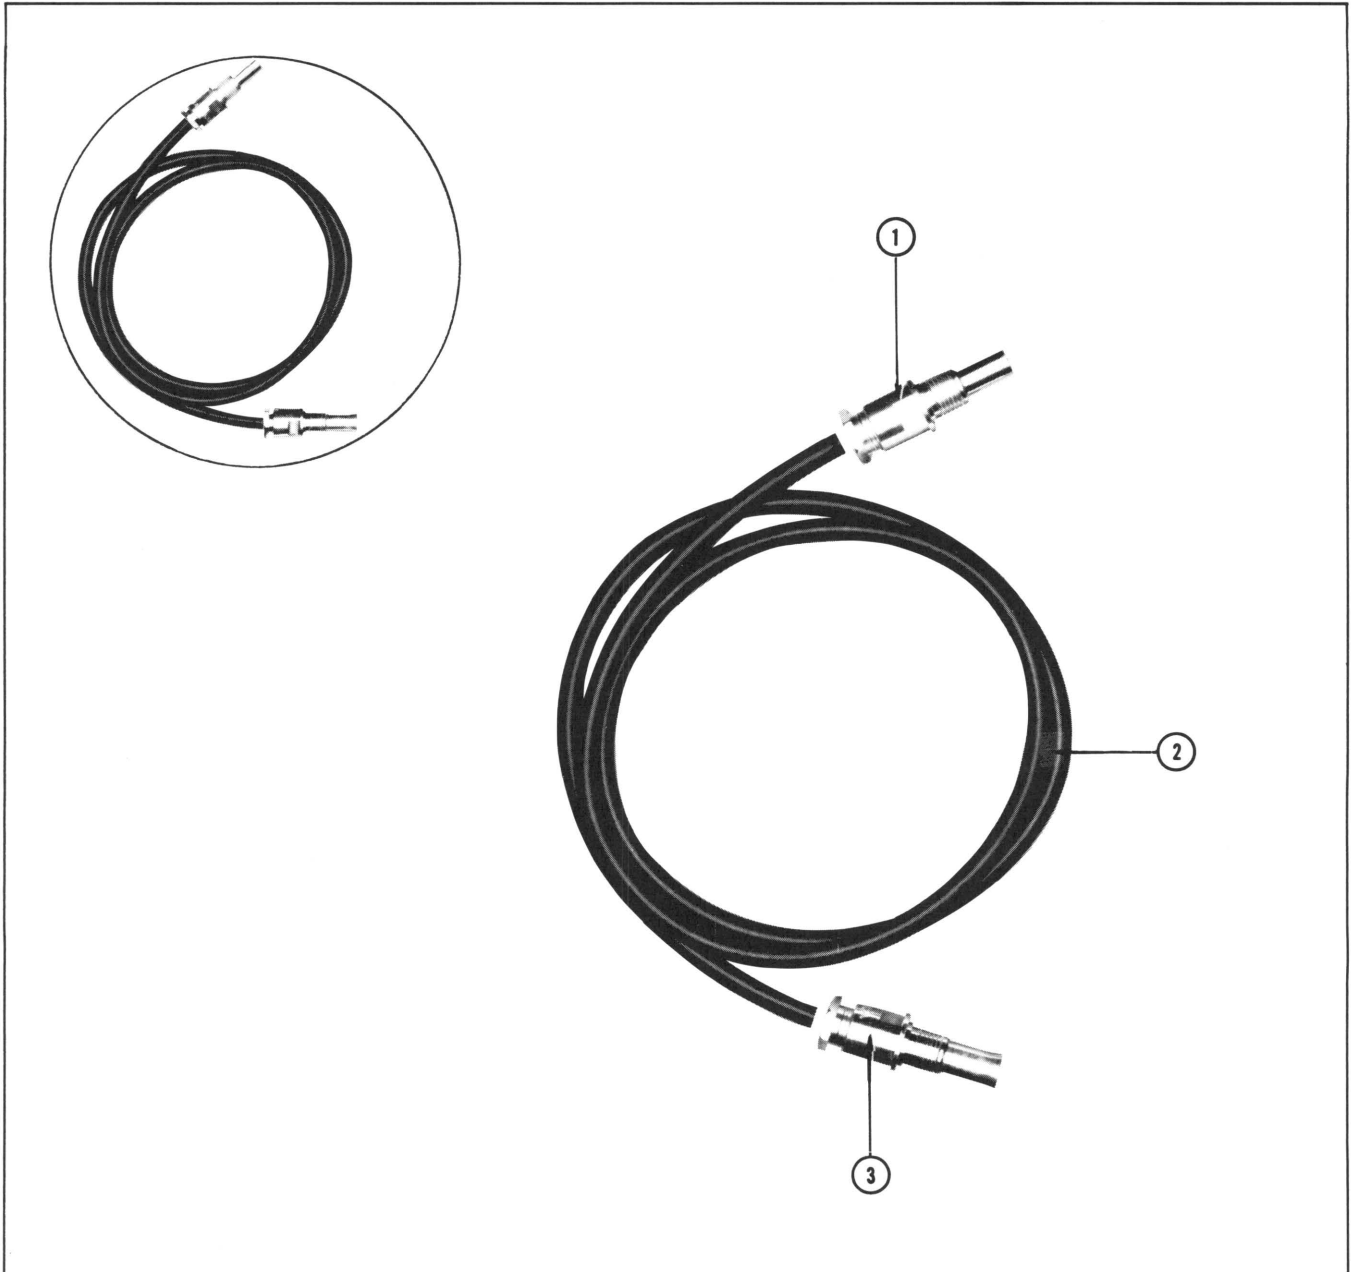

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	131-0222-00			1	CONNECTOR, push on, bulkhead plug
2	175-0300-00			FT	CABLE (32") coax., 50 ohm
3	131-0221-00			1	CONNECTOR, push on, bulkhead Jack



PUBLICATION NO.

061-0752-00
August 1965
(Revised)

Copyright © 1963,
1964, Tektronix, Inc.
All Rights Reserved.

ETCHED CKT. BOARD EXTENSION (3S3)

(Part No. 012-0077-00)

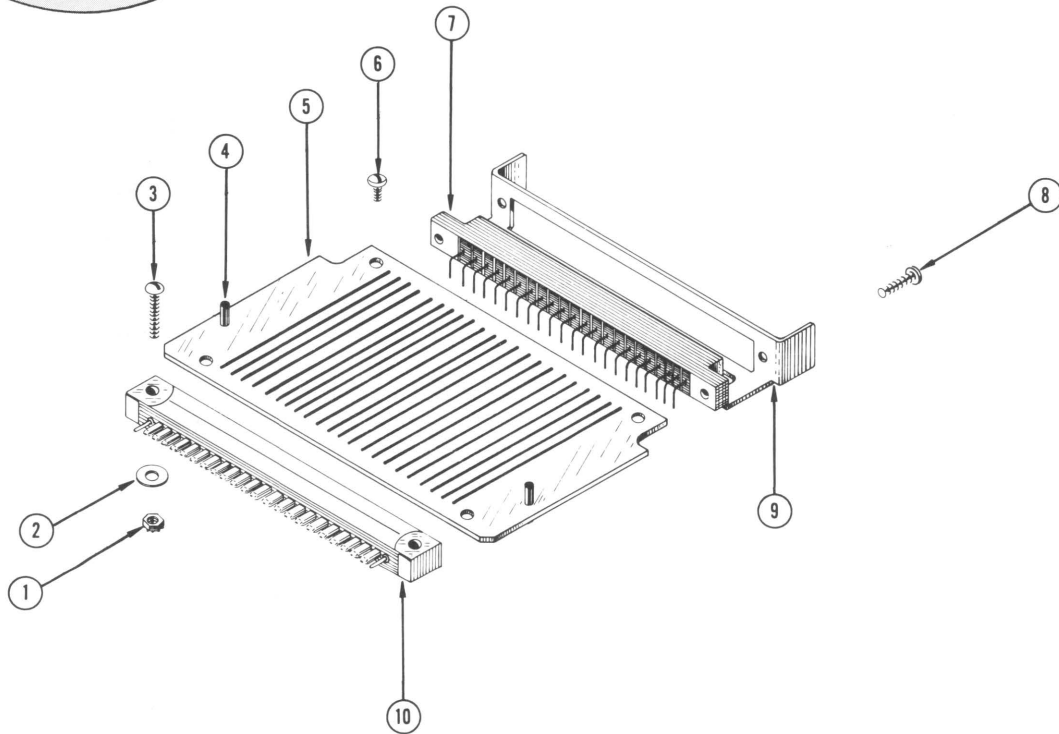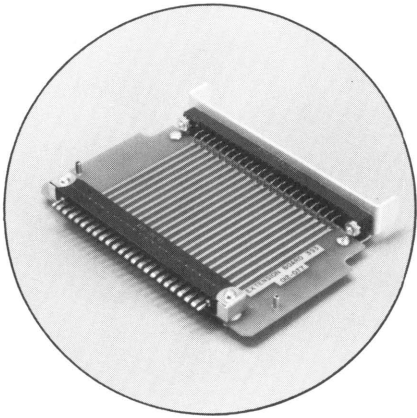

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	210-0586-00			6	NUT, keps, 4-40 x 1/4 inch
2	210-0851-00			2	WASHER, .119 ID x 3/8 inch OD
3	211-0016-00			2	SCREW, 4-40 x 5/8 inch, RHS phillips
4	214-0180-00			2	PIN, roll, 3/32 x 1/2 inch
5	388-0570-00			1	BOARD, etched circuit
6	211-0008-00			2	SCREW, 4-40 x 1/4 inch, PHS phillips
7	131-0246-00			1	CONNECTOR, 22 pin
8	211-0014-00			2	SCREW, 4-40 x 1/2 inch, PHS phillips
9	406-0952-00			1	BRACKET, plug-in extension
10	131-0218-00			1	CONNECTOR, 22 contact

PUBLICATION NO.


062-0054-00
August 1965
(Revised)



© 1963, Tektronix, Inc.,
All rights reserved.

ETCHED CIRCUIT CARD ASSEMBLY

(Part No. 012-0078-00)

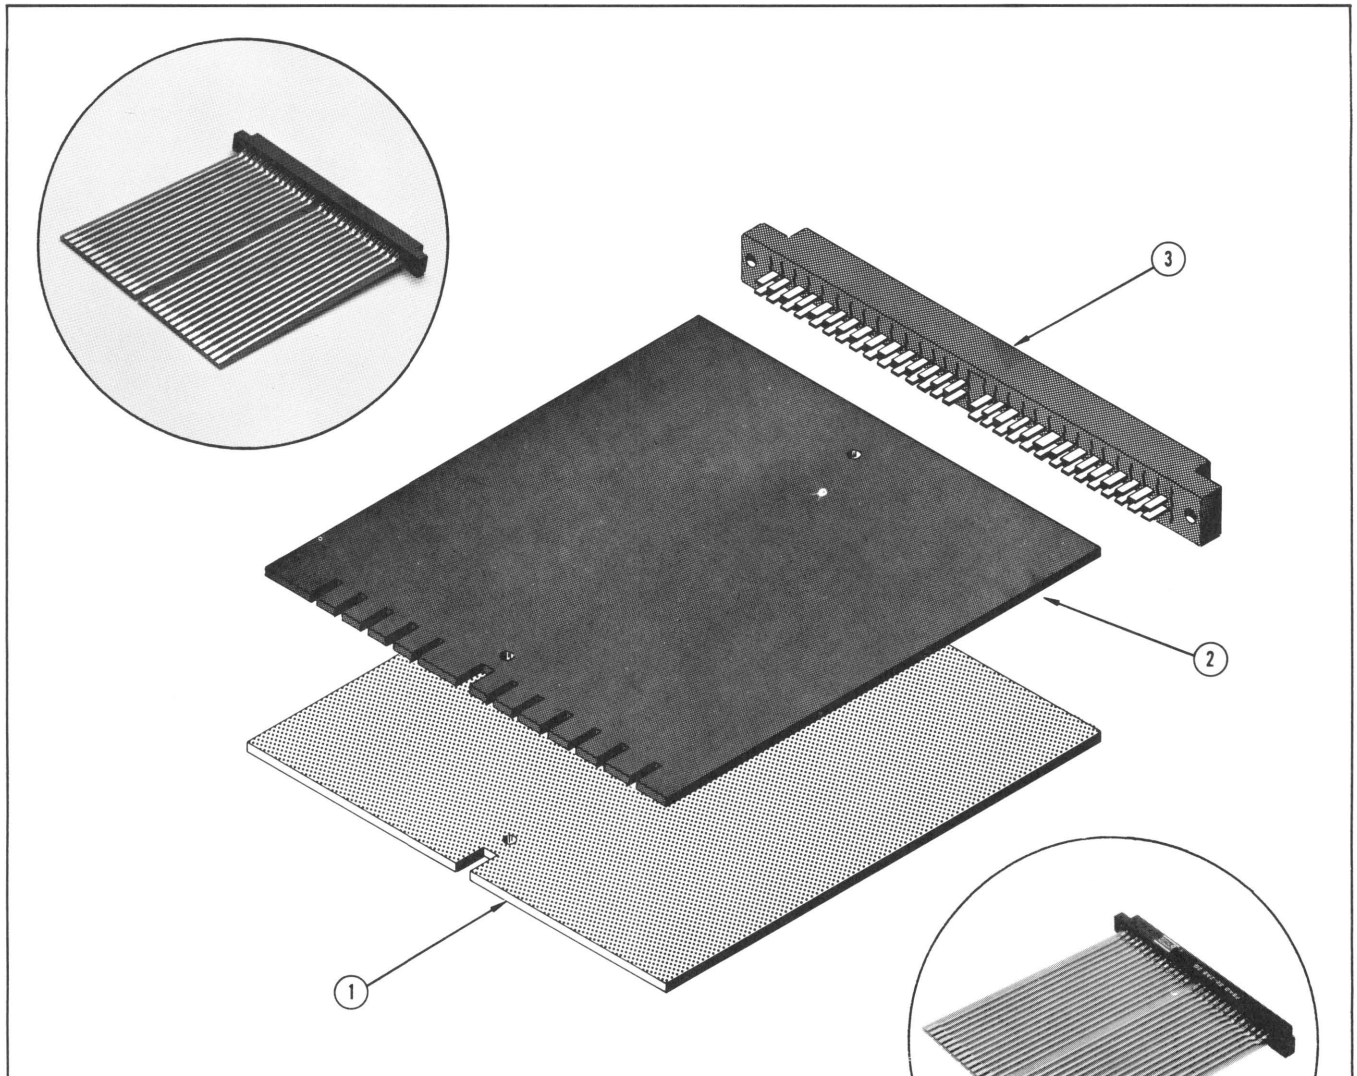

ATTENTION!


Early card extenders which do not have index notches cut into one end will not work with all newer instruments. To make the early extenders compatible, notches should be cut in the right places rather than removing the indexing guides from the card sockets in any instrument.

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	388-0568-00	—EARLY—		1	BOARD, etched circuit, extension
2	388-0568-00	—LATE—		1	BOARD, etched circuit, extension
3	131-0292-00			1	CONNECTOR, 28 pin contact

DATA SHEET NO.
062-0042-00
November 1966
(Revised)

©, 1963, Tektronix, Inc.,
All rights reserved.

PLUG-IN TEST CABLE (Part No. 012-0080-00)

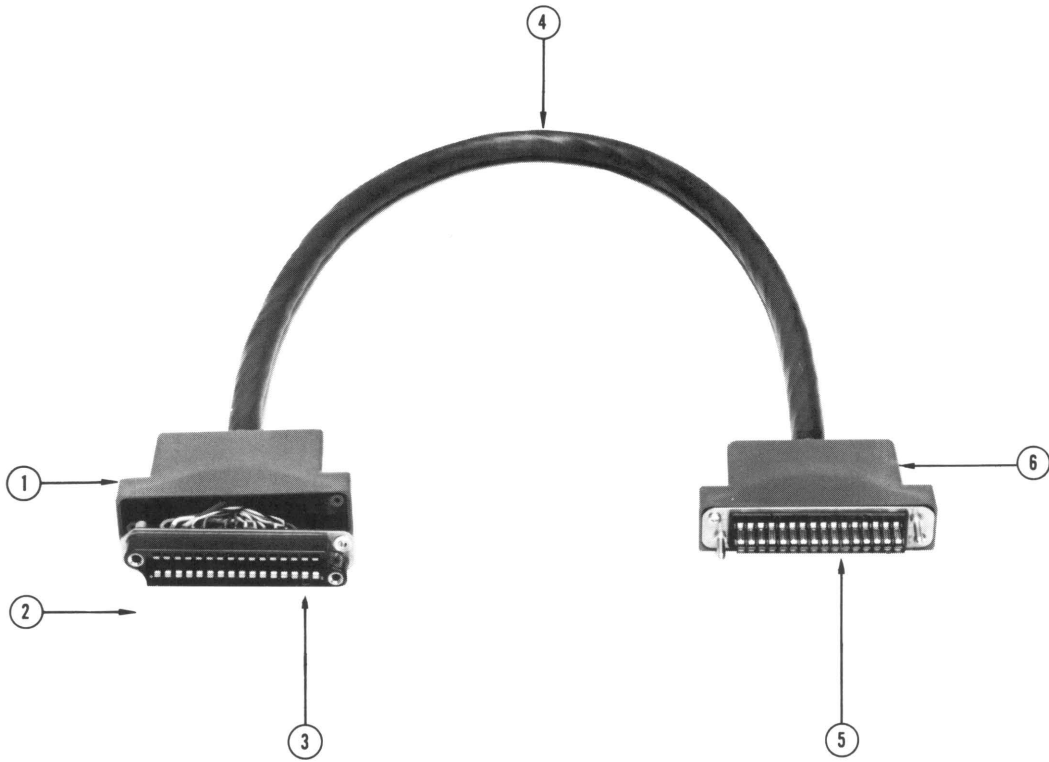

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	200-0551-00			1	COVER, plug-in extension, female
2	213-0082-00			4	SCREW, thread cutting, 4-40 x 1/2 inch, phillips
3	131-0097-00			1	CONNECTOR, chassis mount, 32 contact, female
4	175-0287-00			FT	CABLE, assembly, coax., 32 inches
5	131-0096-00			1	CONNECTOR, chassis mount, 32 contact, male
6	200-0549-00 343-0109-00			1 2	COVER, plug-in extension CLAMP, cable (not shown)


PUBLICATION NO.

062-0091-00
August 1965
(Revised)



©, 1964, Tektronix, Inc.,
All rights reserved.

ETCHED CKT BOARD EXTENSION (Part No. 012-0100-00)

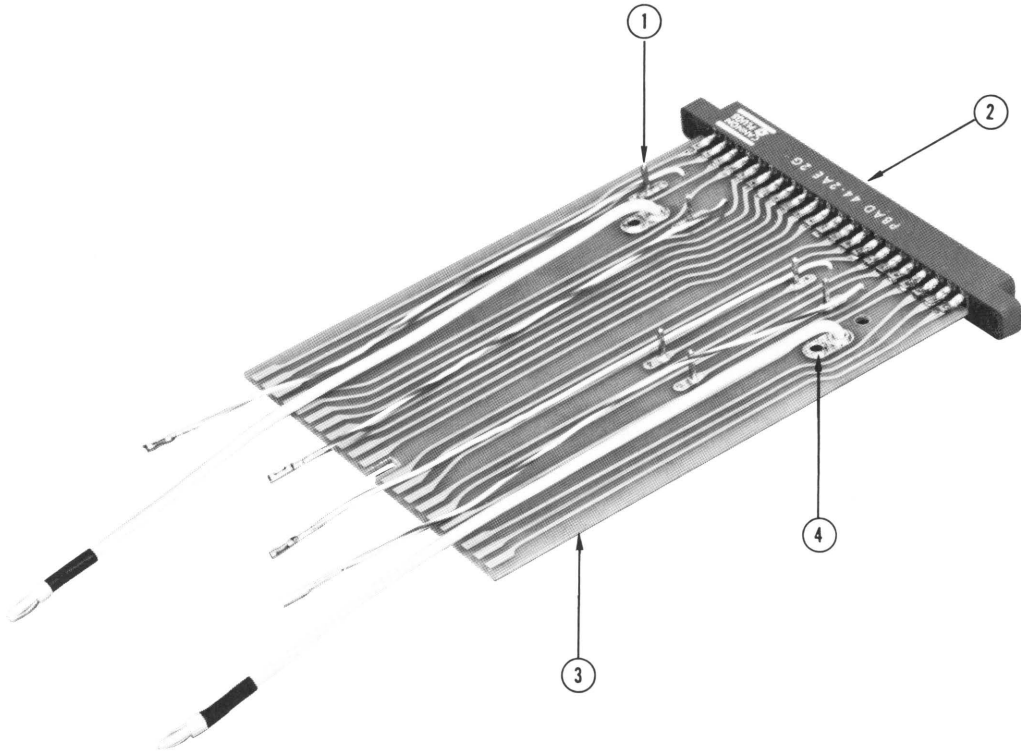



REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	214-0506-00			10	PIN, connector, straight
2	136-0156-00			1	SOCKET, 44 pin
3	388-0575-00			1	BOARD, etched circuit
4	210-0696-00			4	EYELET

DATA SHEET NO.
062-0544-00
DECEMBER 1965

**FOR REPLACEMENT PARTS
NOT LISTED CONTACT YOUR
TEKTRONIX FIELD OFFICE.**

Copyright © 1965,
Tektronix, Inc.
All Rights Reserved.

GAIN ADJUST ADAPTER (Part No. 013-0005-00)

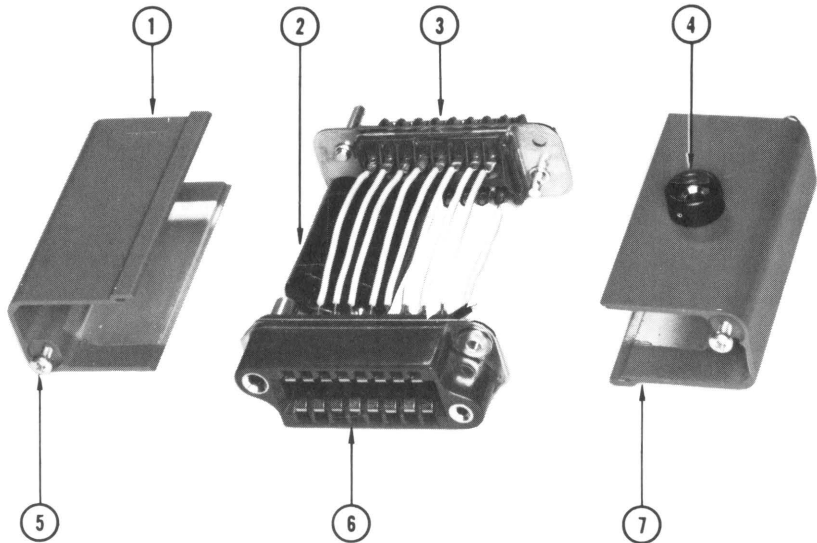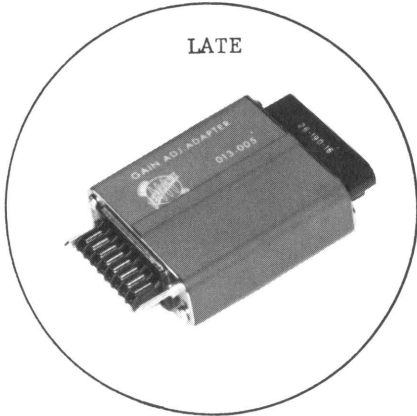

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	200-0430-00			1	COVER, plug-in extension
2	285-0526-00			2	CAPACITOR, mt. .1 μ fd, 400 v 20%
3	302-0224-00			1	RESISTOR, comp. 1/2 w, 220 k 10%
	131-0017-00			1	CONNECTOR, chassis mt. plug-ins, 16 conta 16 contact, male
4	136-0052-00			1	SOCKET, banana jack, black
	210-0223-00			1	LUG, solder
	210-0904-00			1	WASHER, fiber
5	213-0119-00			4	SCREW, thread forming, 4-24 \times 3/8, Pan HS
6	131-0018-00			1	CONNECTOR, chassis mt. scope, 16 contact, female
7	200-0428-00			1	COVER, plug-in extension


PUBLICATION NO.

061-0800-00
August 1965
(Revised)




©, 1963, Tektronix, Inc.,
All rights reserved.

TIME BASE EXTENSION (Part No. 013-0013-00)

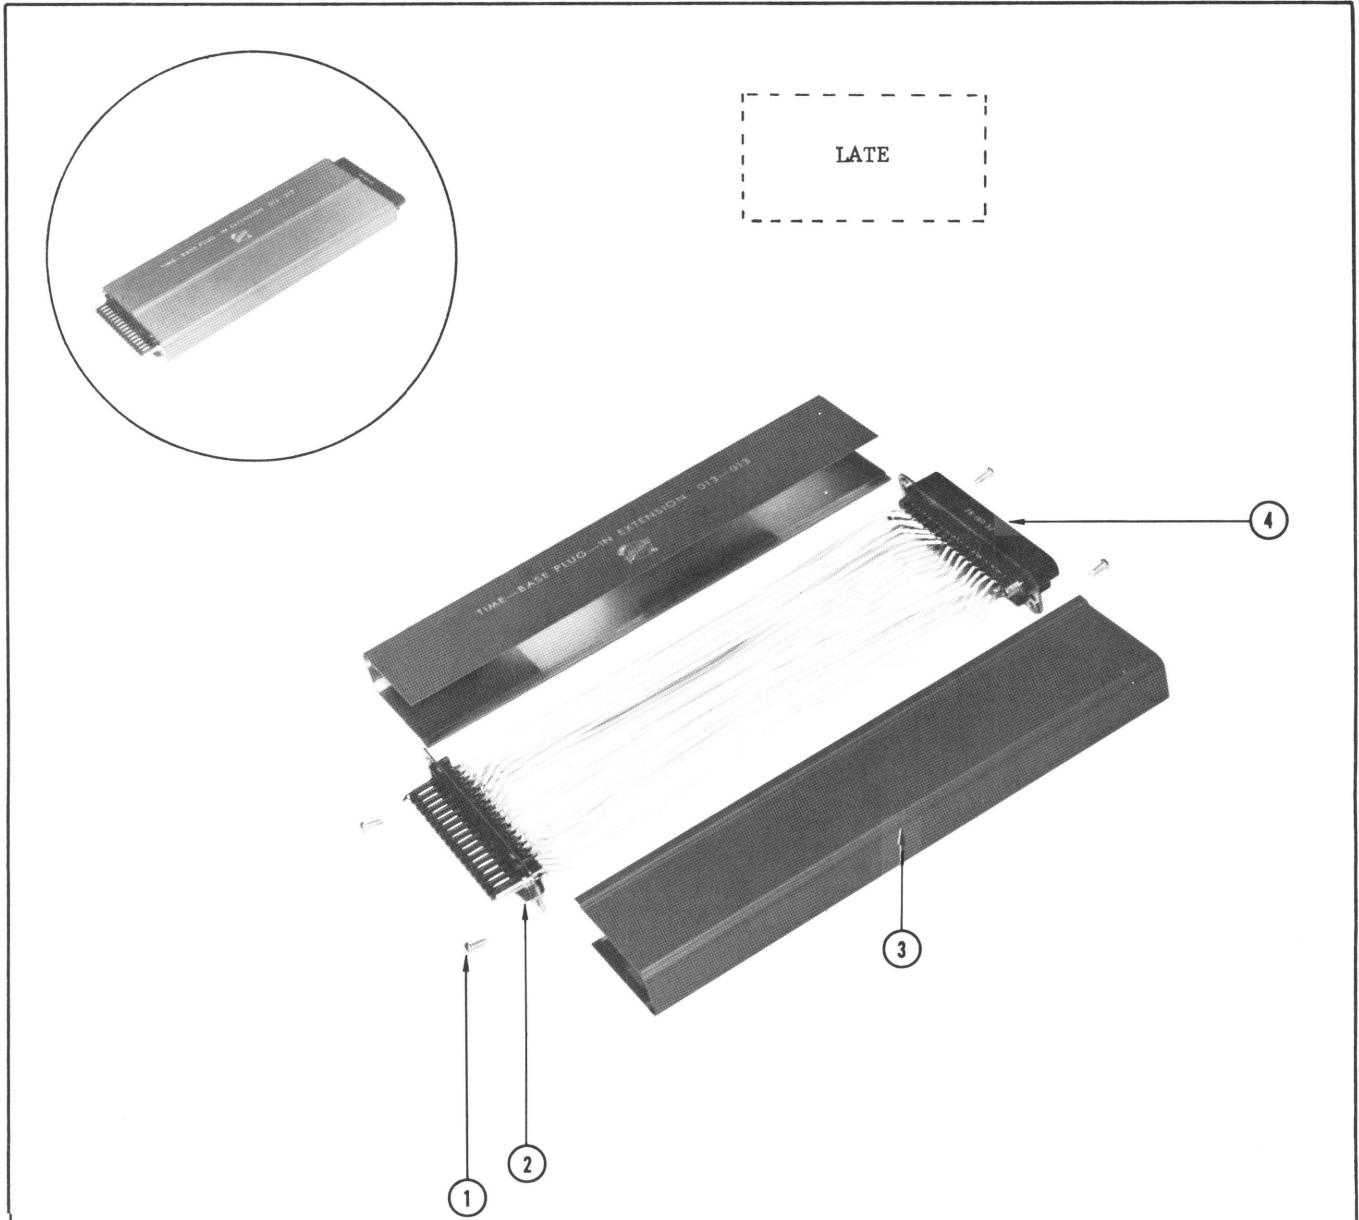

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	213-0119-00			4	SCREW, thread forming, 4-24 x 3/8 Pan HS
2	131-0096-00			1	CONNECTOR, chassis mt., 32 contact, male
3	200-0433-00			2	COVER, plug-in extension
4	131-0097-00			1	CONNECTOR, chassis mt., 32 contact, female

PLUG-IN EXTENSION (Part No. 013-0015-00)

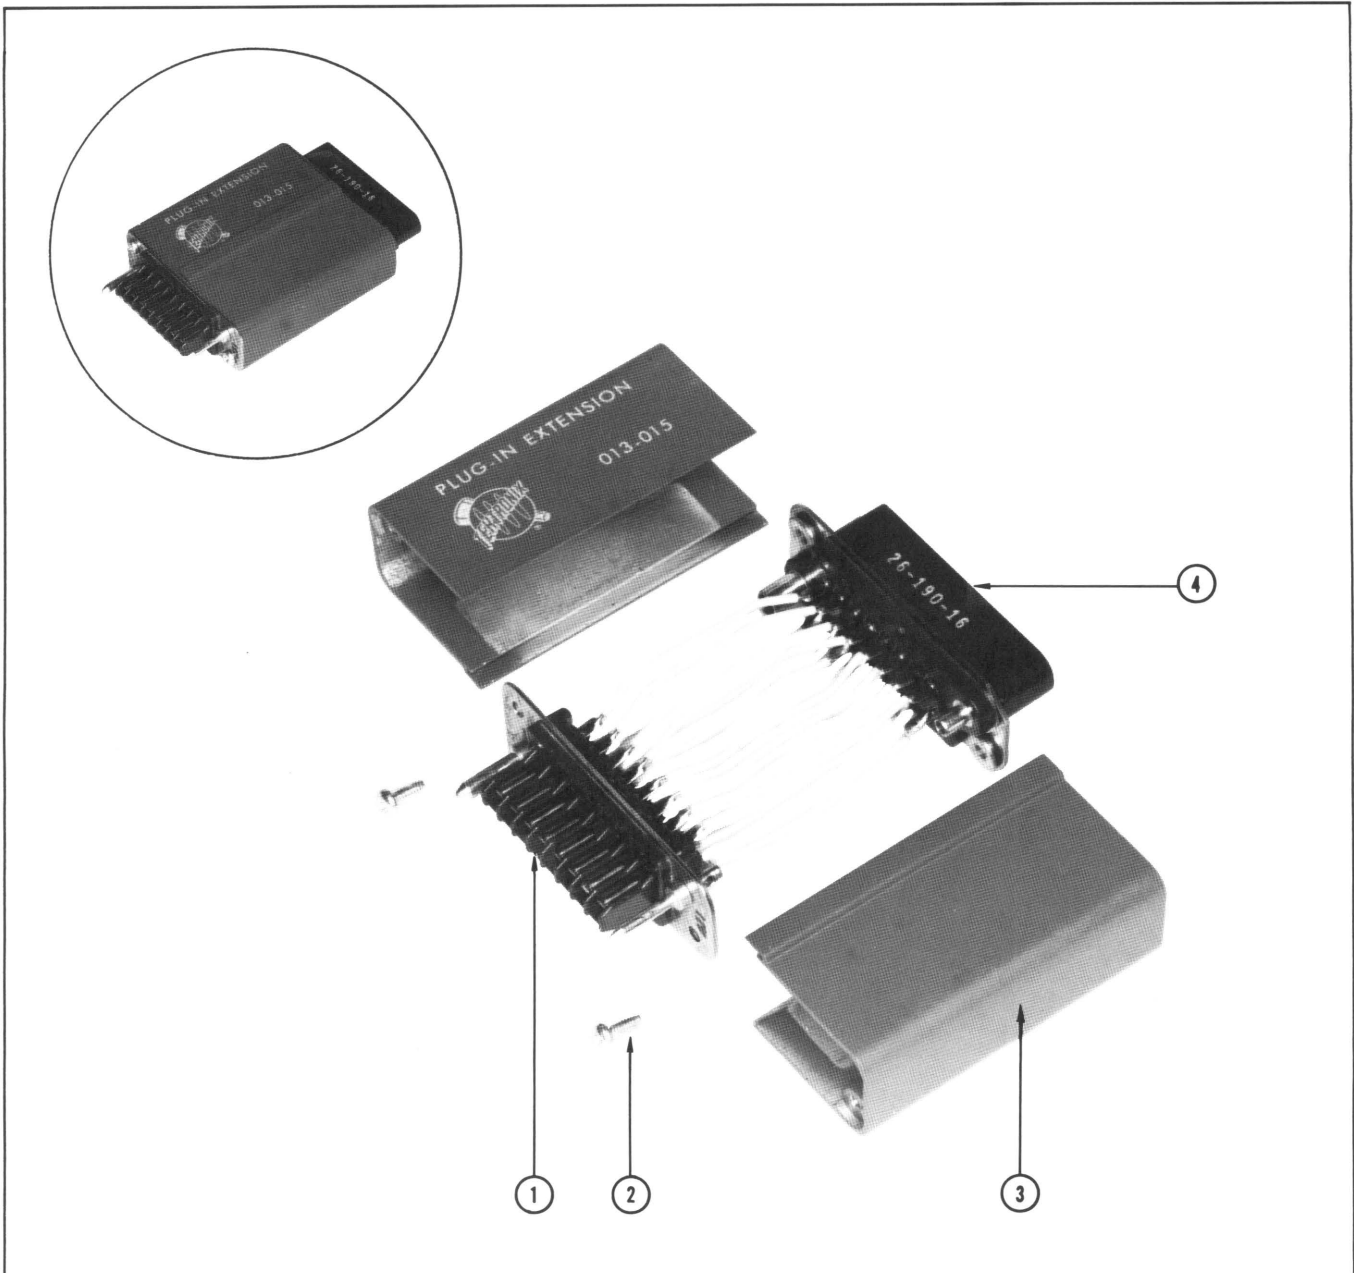

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	131-0017-00			1	CONNECTOR, chassis mt., 16 contact, male
2	213-0119-00			4	SCREW, thread forming, 4-24 x 3/8, pan HS
3	200-0431-00			2	COVER
4	131-0018-00			1	CONNECTOR, chassis mt., 16 contact, female

PUBLICATION NO.

061-0809-00
August 1965
(Revised)



©, 1963, Tektronix, Inc.,
All rights reserved.

TIME MARK CALIBRATOR




(Part No. 013-0021-00)

Accuracy tolerance at room temperature ($25^{\circ}\text{C} \pm 5^{\circ}\text{C}$), 0.05%.



REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	013-0021-00				A Time-mark Calibrator for testing or adjusting intensity markers on the Type 524D and 524AD Oscilloscopes.

120 OHM PLUG-IN RESISTOR BOARD (Part No. 013-0025-00)

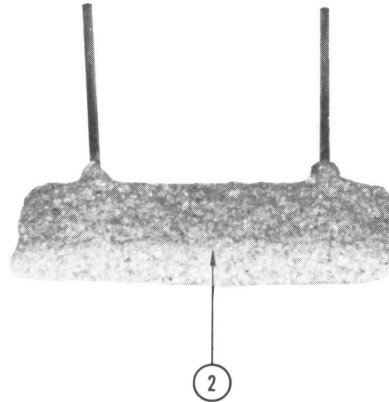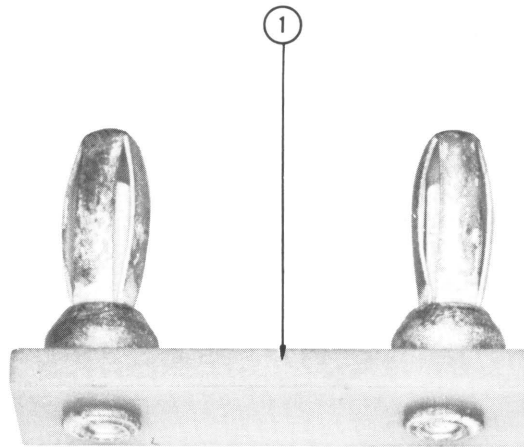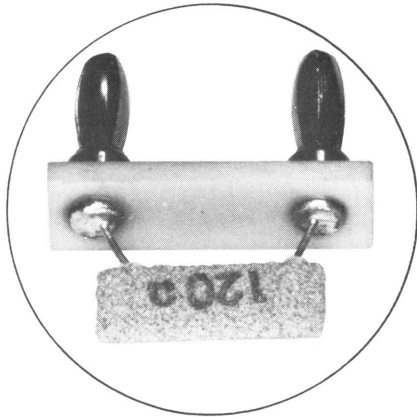


REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	392-0124-00			1	BOARD, resistor
2	310-0561-00			1	RESISTOR, 120 Ω. 1/2 W, Prec., ±1%
	-----			-	

DATA SHEET NO.
061-0770-00
DECEMBER 1965
(Revised)


©, 1963, Tektronix, Inc.,
All rights reserved.

TIMING STANDARD

(Part No. 013-0028-00)

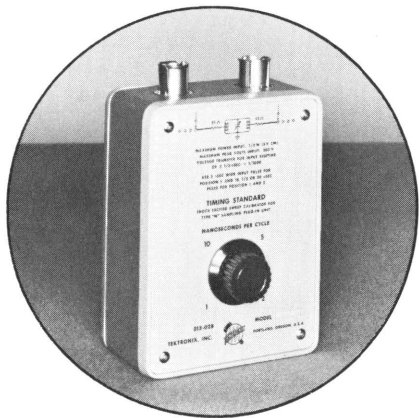

The Timing Standard provides damped-wave oscillations of 10, 5, 2, and 1 nanoseconds per cycle for checking the sweep rates of fast sweep oscilloscopes such as Sampling Timing Units. Accuracy of the unit is within 3%.

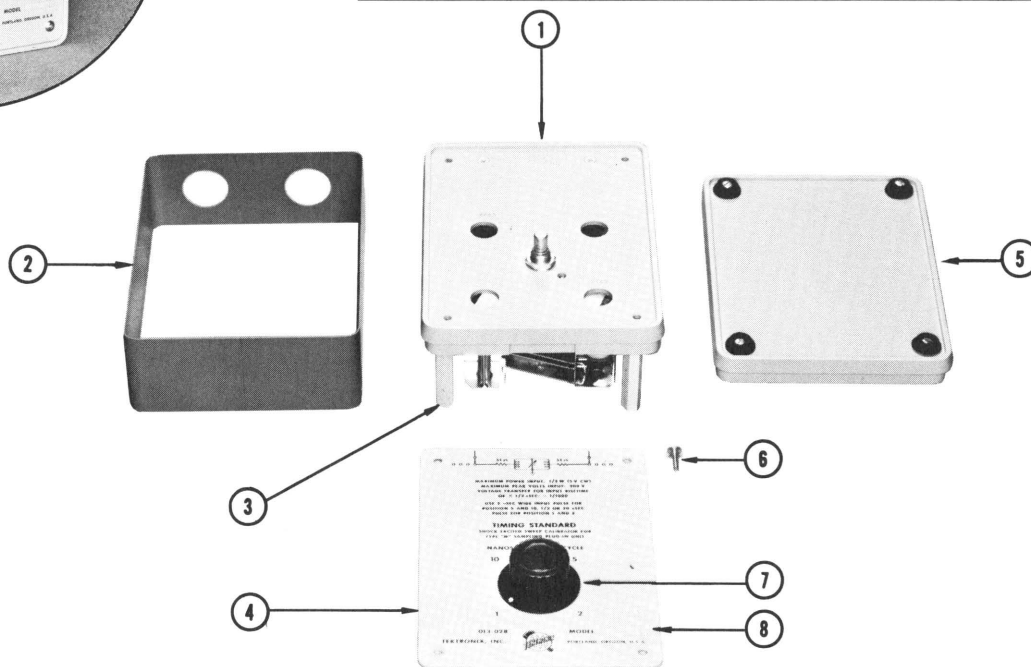

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	200-0308-00 ----- 211-0038-00			1	COVER, front - mounting hardware: (not included w/cover) 2 SCREW, 4-40 x 5/16 inch, 100° csk, FHS
2	380-0026-00			1	HOUSING, wrap-around
3	384-0586-00			2	ROD, spacer
4	333-0674-00			1	PANEL, front
5	200-0309-00 348-0037-00 211-0012-00			1	COVER, box
				4	FOOT, rubber
6	211-0071-00			4	SCREW, 4-40 x 3/8 inch, PHS
7	366-0117-00 ----- 213-0004-00			4	SCREW, 4-40 x 3/8 inch, PHS
				1	KNOB, charcoal - knob includes:
				1	SCREW, set, 6-32 x 3/16 inch, HSS
8	334-0679-00			1	TAG, metal serial number

DATA SHEET NO.



061-0857-00
JUNE 1967
(Revised)

FOR REPLACEMENT PARTS NOT LISTED
CONTACT YOUR TEKTRONIX FIELD OFFICE.



Copyright © 1963,
1964, Tektronix, Inc.
All Rights Reserved.

PLUG-IN EXTENSION (Part No. 013-0034-00)

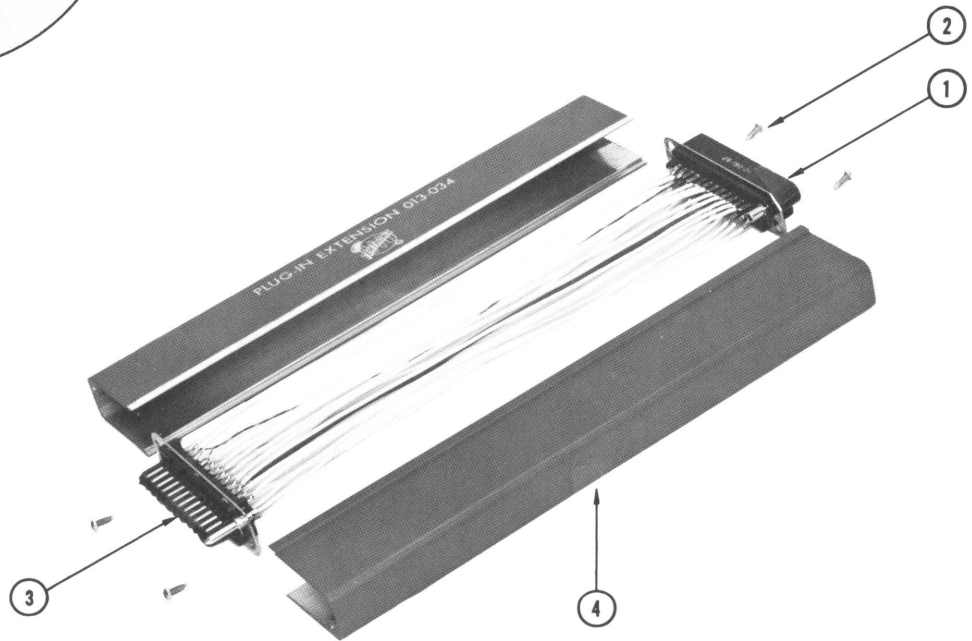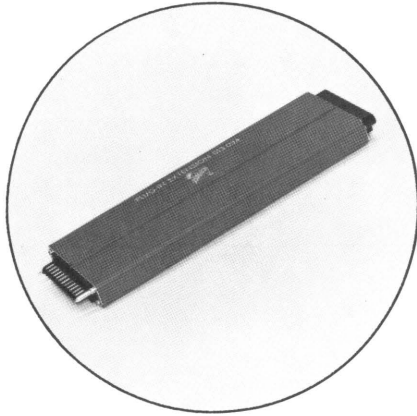


REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	131-0148-00			1	CONNECTOR, chassis mt., 24 contact, female
2	213-0119-00			4	SCREW, thread forming, 4-24 x 3/8 Pan HS
3	131-0149-00			1	CONNECTOR, chassis mt., 24 contact, male
4	200-0434-00			2	COVER, plug-in extension

PUBLICATION NO.


061-0861-00
August 1965
(Revised)

©, 1963, Tektronix, Inc.,
All rights reserved.

PLUG-IN EXTENSION (Part No. 013-0055-00)

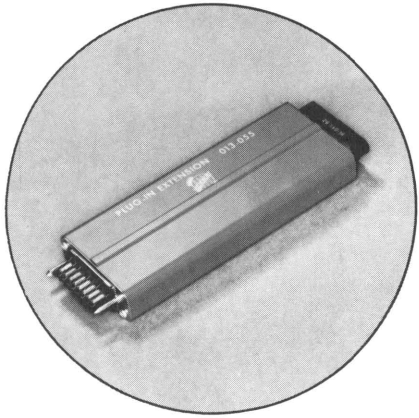

LATE

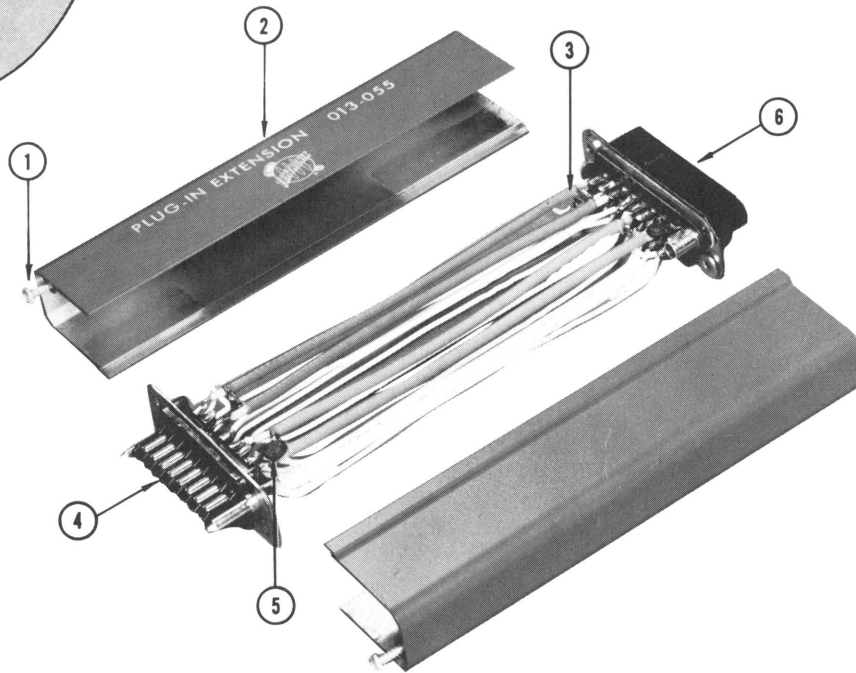

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	213-0119-00			4	SCREW, thread forming, 4-24 x 3/8 inch, PHS, phillips
2	200-0432-00			2	COVER, plug-in extension
3	175-0055-00			5	CABLE, coaxial, 93 Ω , w/jacket, 5-3/4 inch
4	131-0017-00			1	CONNECTOR, 16 contact, male
5	283-0000-00			2	CAPACITOR, 0.001 μ F, disc type, 500 v
6	131-0018-00			1	CONNECTOR, 16 contact, female

TU-5/105 ADAPTER


(Part No. 013-0075-00)



The Tektronix TU-5/105 Adapter allows the Tektronix Type 105 Square-Wave Generator to drive the TU-5 Pulser. The TU-5 requires an input signal which is always above ground. The Adapter shifts the Type 105 output level from below ground to above ground. The TU-5 can be used at any frequency within the limits of the Type 105, above 1 kc. The higher output frequencies provide a brighter crt display when fast sweep rates are used.


Circuit Description

Capacitor C1 removes the dc component from the Type 105 output waveform. Diode D2 clamps the waveform so that only a positive output waveform appears at the adapter output. Diode D1 provides reverse-polarity voltage protection for capacitor C1.

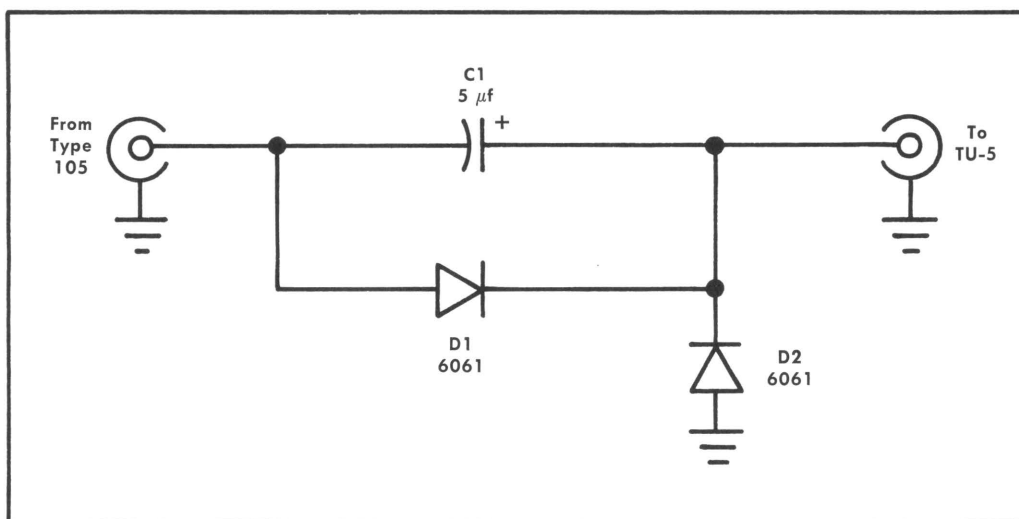

Schematic of TU-5/105 Adapter

PLUG-IN EXTENSION (PART NO. 013-0077-00)

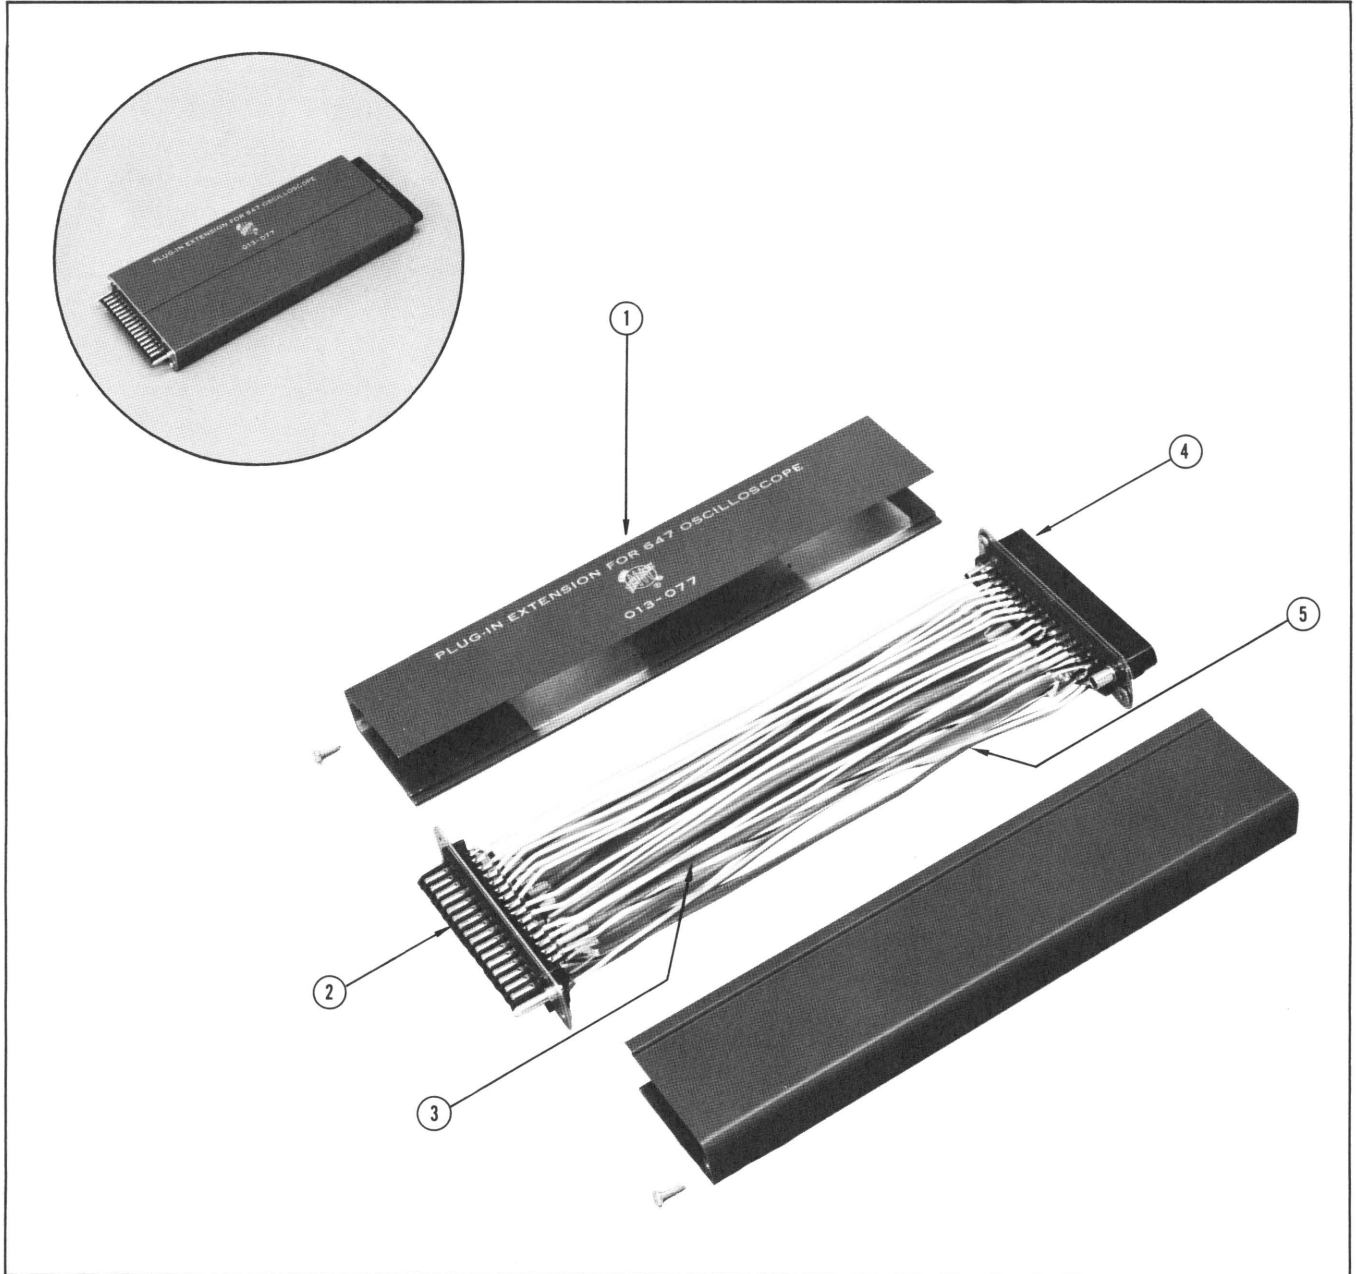




REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	200-0545-00 - - - - - 213-0119-00			2	COVER, plug-in extension Mounting Hardware: (not included)
2	131-0096-00			4	SCREW, 4-24 x 3/8 inch, phillips, pan head
3	175-0284-00 - - - - -			1	CONNECTOR, chassis mount, 32 contact, male
4	131-0097-00 - - - - -			Ft.	CABLE, coax., 50 Ω , 26.5 pf/ft., 9 inches
5	175-0055-00 - - - - -			1	CONNECTOR, chassis mount, 32 contact, female
				Ft.	CABLE, coax., 93 Ω w/jacket, 9 inches

PUBLICATION NO.
062-0048-00
AUGUST 1965
(Revised)



©, 1963, Tektronix, Inc.,
All rights reserved.

PLUG-IN RESISTOR BOARD (Part No. 013-0078-00)

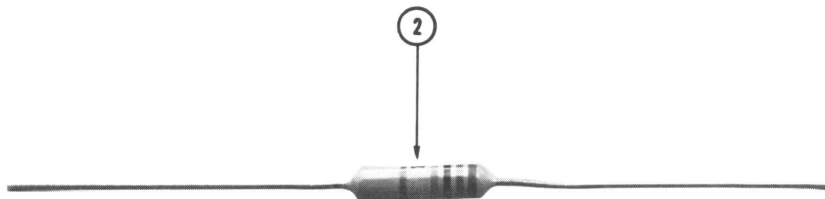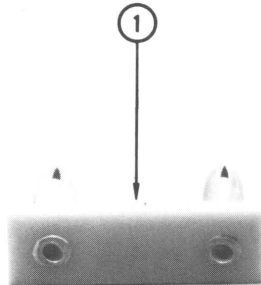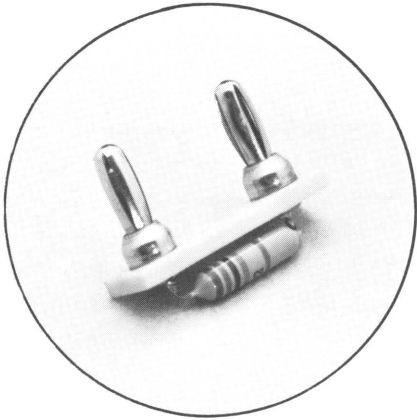


REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	392-0124-00			1	BOARD, resistor
2	323-0649-00			1	RESISTOR, 150 k, 1/2 W, prec., ±1%
	- - - - -			-	


DATA SHEET NO.
061-0967-00
DECEMBER 1965
(Revised)

©. 1963, Tektronix, Inc.,
All rights reserved.

DELTA STANDARD (Part No. 015-0001-00)

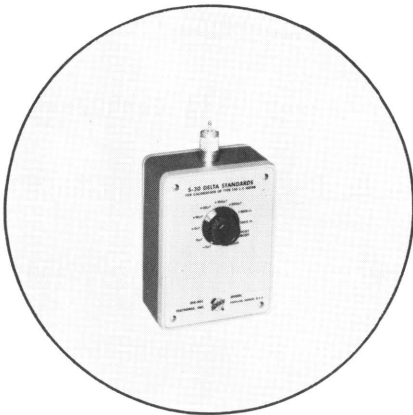

The Delta Standard provides accurate steps of capacitance and inductance for adjusting the Type 130 L-C Meter. Accuracy of the unit is within 1%.

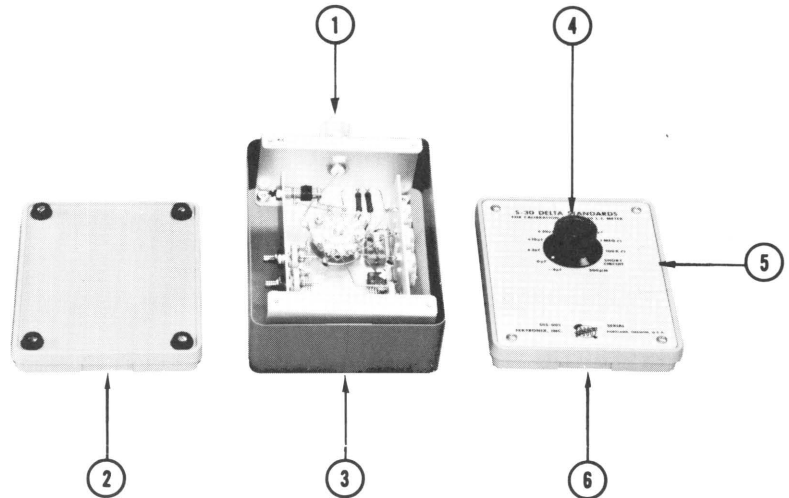

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION	
		EFF.	DISC.			
1	131-0012-00	MDL 1	MDL 1	1	CONNECTOR, chassis mount, female	
	131-0146-00	MDL 1	MDL 1	1	CONNECTOR, coax. assembly	
	210-0004-00	MDL 1	MDL 1	4	LOCKWASHER, internal #4	
	210-0406-00	MDL 1	MDL 1	4	NUT, hex, 4-40 x 3/16 inch	
	211-0008-00	MDL 1	MDL 1	4	SCREW, 4-40 x 1/4 inch PHS phillips	
	131-0168-00	MDL 2		1	CONNECTOR, cable end	
	210-0012-00	MDL 2		1	LOCKWASHER, internal 3/8 x 1/2 inch	
	210-0413-00	MDL 2		1	NUT, hex, 3/8-32 x 1/2 inch	
	200-0026-00			1	COVER, coax. connector	
	102-0006-00			1	REDUCER, 1 inch long	
	358-0153-00			1	BUSHING, insulator	
	2	386-0344-00	MDL 1	MDL 1	1	PLATE
		200-0309-00	MDL 2		1	COVER, box
		348-0037-00	MDL 2		4	FOOT, rubber
211-0012-00		MDL 2		4	SCREW, 4-40 x 3/8 inch PHS phillips	
3	437-0017-00	MDL 1	MDL 1	1	CABINET	
	380-0028-00	MDL 2		1	HOUSING, wrap-around	
4	366-0028-00	MDL 1	MDL 1	1	KNOB, black	
	366-0117-00	MDL 2		1	KNOB, charcoal	
	----- 213-0004-00			1	Includes: SCREW, set, 6-32 x 3/16 inch	
5	333-0117-00	MDL 1	MDL 1	1	PANEL, front	
	211-0504-00	MDL 1	MDL 1	4	SCREW, 6-32 x 1/4 inch PHS phillips	
	333-0681-00	MDL 2		1	PANEL, front	
	334-0679-00	MDL 2		1	TAG, metal serial number	
	211-0071-00	MDL 2		4	SCREW, 4-40 x 3/8 inch PHS phillips	
6	386-0343-00	MDL 1	MDL 1	1	PLATE, subpanel	
	211-0502-00	MDL 1	MDL 1	6	SCREW, 6-32 x 3/16 inch FHS 100°	
	200-0331-00	MDL 2		1	COVER	

FOR REPLACEMENT PARTS
NOT LISTED CONTACT YOUR
TEKTRONIX FIELD OFFICE.

PUBLICATION NO.

061-0908-00
August 1965
(Revised)



©, 1964, Tektronix, Inc.,
All rights reserved.

TU-5 PULSER

Tektronix Part No. 015-038

General Information

The TU-5 is a tunnel-diode which provides a fast-rise pulse for adjusting the transient response of high-frequency plug-in units such as the Tektronix Types 82 and 86.

The TU-5 must be driven by a +100-volt square pulse such as the 1-kc amplitude calibrator signal available from most Tektronix oscilloscopes. (The amplitude calibrator in the Type 560-Series, Type 647, and Type RM647 Oscilloscopes will not switch the TU-5.) A Tektronix Type 105 Square-Wave Generator may be used to drive the TU-5 if an adapter (see Fig. 1) is used. The adapter converts the negative pulse output from the Type 105 to the positive pulse required to drive the TU-5. The Type 105 should be used only at repetition rates of 1 kc and higher. Higher repetition rates will provide a brighter crt display when fast sweep rates are used.

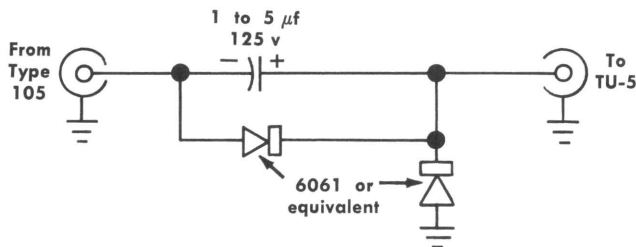


Fig. 1. Adapter for using a Type 105 to drive a TU-5.

Characteristics

Output Signal Risetime: 1.5 nanoseconds or less into 50 ohms.

Output Voltage: At least 200 millivolts into 50 ohms.

Input Voltage Required: +100-volt square wave capable of supplying 10 milliamps.

Connecting the TU-5 to the Plug-In Unit

Whenever possible, use the connection method shown in Fig. 2. Connect the termination as close as possible to the input of the plug-in to reduce undesirable reactances and provide a clean step-function at the input to the plug-in unit.

Turn off the oscilloscope Amplitude Calibrator while connecting the TU-5 to or disconnecting the TU-5 from the BNC cable. The 100 volts from the calibrator could cause a slight shock.

Setting the TU-5 Bias

The knob on the TU-5 sets the bias on the tunnel diode. The bias should be set each time the TU-5 is used. Set the bias as follows:

1. With the TU-5 and termination connected as shown in Fig. 2, set the bias control fully counterclockwise and the oscilloscope Amplitude Calibrator for a 100-volt output.

2. Set the oscilloscope vertical sensitivity at 0.1 volts/div. and the sweep rate at 0.2 millisecond/div.

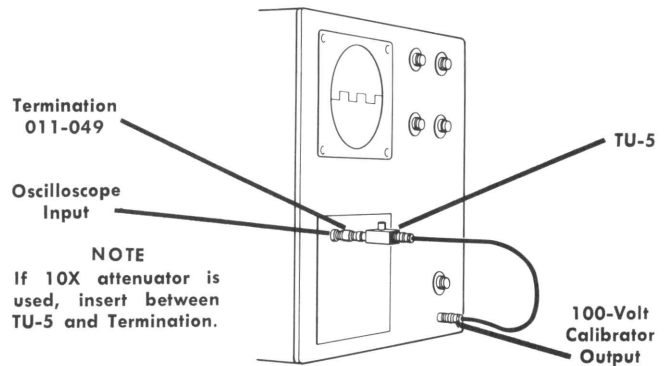


Fig. 2. Proper connection of the TU-5 and Termination to the oscilloscope Input and Calibrator.

3. Set the time-base triggering controls for a stable display. With the bias control set fully counterclockwise, the tunnel diode will not switch due to insufficient current. However, there will be about a 50-mv waveform on the crt. This is the calibrator signal feeding through the TU-5 and not the fast-rise output signal that occurs when the tunnel diode is switching.

4. Slowly turn the bias control clockwise until the waveform amplitude suddenly increases to about 2 divisions (see Fig. 3). This point is the proper bias setting.

Output Waveforms

Figs. 3 and 4 show typical output signals from the TU-5 at various sweep rates. The small intensified portion at the base of each pulse shown in Fig. 3 is the relatively slow rising portion of the calibrator signal just before the tunnel diode switches.

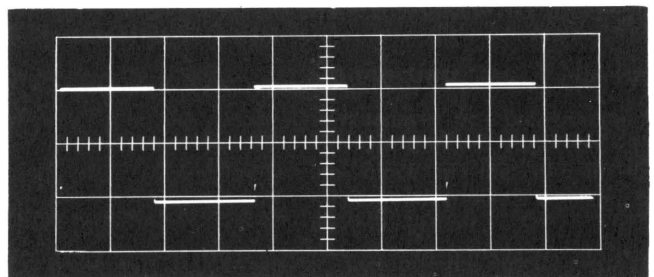


Fig. 3. Sweep rate 0.2 millisecond/div.


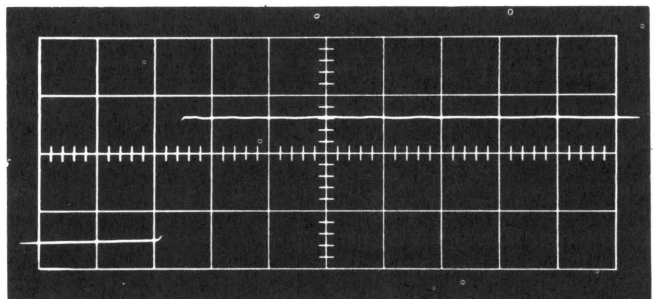


Fig. 4. Sweep rate 20 nanoseconds/div.


PARTS LIST

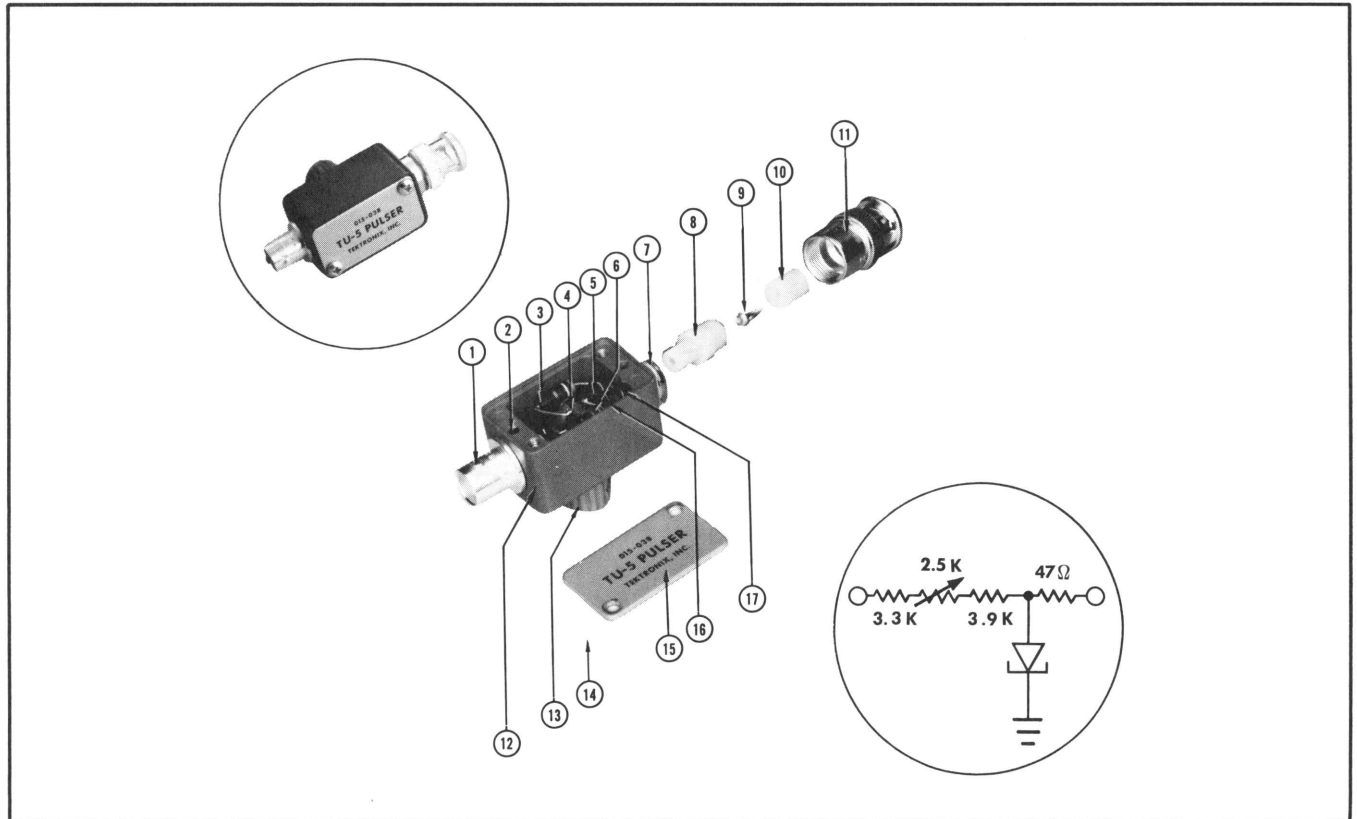

REF. NO.	PART NO.	SERIAL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	131-126			1	Connector, coax, chassis mt.
	210-962			1	Washer, bevel, grey
2	213-075			2	Screw, set 4-40 x 3/32 inch
3	301-392			1	Resistor, 3.9 K, 1/2 W, 5%
4	311-443			1	Resistor, 2500 Ω var. 20%
5	152-102			1	Diode, tunnel, STD 615 10 ma
6	301-332			1	Resistor, 3.3 K 1/2 W, 5%
7	132-081			1	Nut
8	166-217			1	Tube, spacer, insulator
9	214-109			1	Pin, probe contact, male
10	358-072			1	Bushing, insulator
11	134-044			1	Plug, probe
12	202-095			1	Box, standardizer
13	366-203			1	Knob, gray
					Includes:
	213-004			1	Screw, set, 6-32 x 3/16 inch HHS
	210-046			1	Lockwasher, internal tooth
	210-583			1	Nut, hex, 5/16 inch brass 1/4-32
14	213-035			2	Screw, 4-40 x 1/4 inch PHS
15	200-427			1	Cover, pulser box
16	316-470			1	Resistor, 47 Ω, 1/4 W, 10%
17	210-223			1	Lug, solder (not shown)

175 CALIBRATION RESISTORS

(Part No. 015-0042-00)

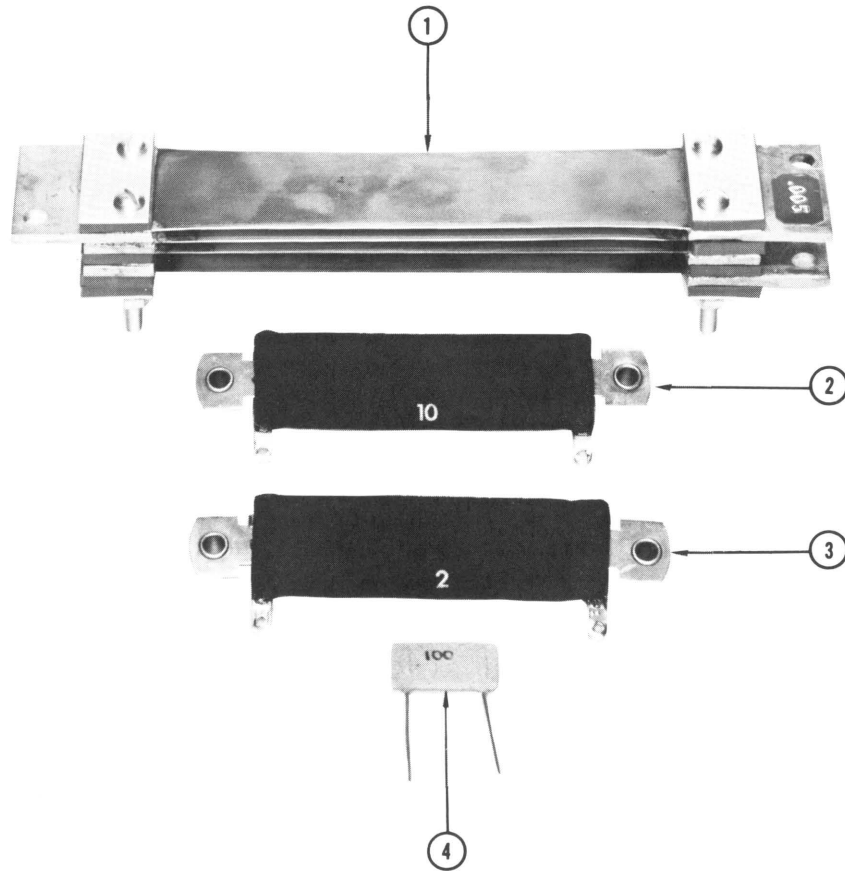


REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	312-0636-00			1	RESISTOR, checked, 0.005 Ω , 100 W, 0.05 Ω , 50 W, $\pm 1\%$
2	312-0638-00			1	RESISTOR, checked, 10 Ω , 20 W, $\pm 1\%$
3	312-0637-00			1	RESISTOR, checked, 2 Ω , 50 W, $\pm 1\%$
4	312-0639-00			1	RESISTOR, checked, 100 Ω , 2 W, $\pm 1\%$

DATA SHEET NO.

061-0960-00
JUNE 1967
(Revised)

©. 1963, Tektronix, Inc.,
All rights reserved.

TU-5 PULSER AND ACCESSORIES (Part No. 015-0043-00)

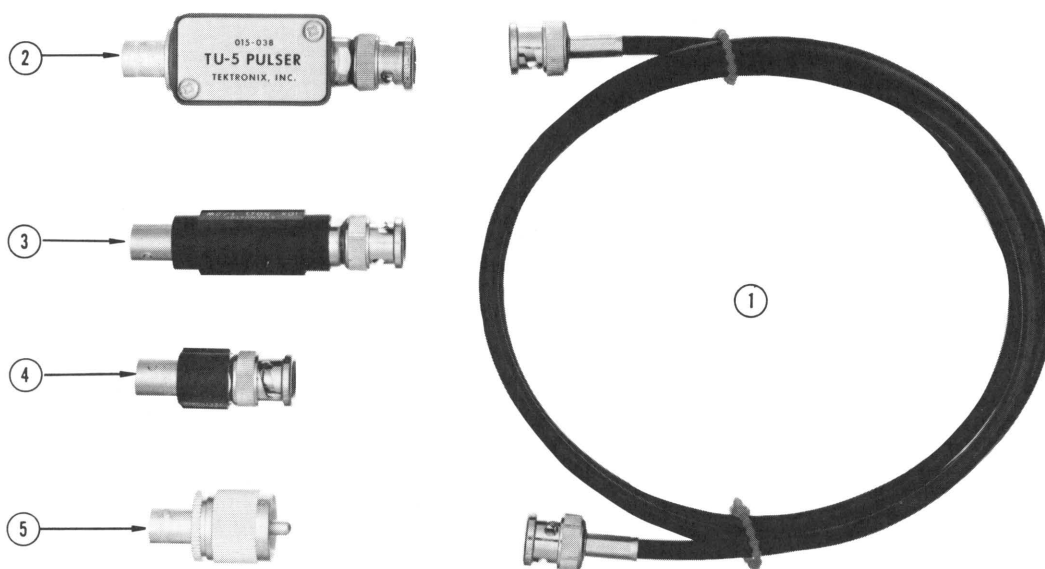

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	012-0057-01			1	CABLE, assembly, 50 Ω coaxial
2	015-0038-00			1	TU-3 TUNNEL DIODE PULSER
3	011-0059-00			1	50 OHM 10X ATTENUATOR (BNC)
4	011-0049-00			1	50 OHM TERMINATION
5	103-0015-00			1	ADAPTER, probe, BNC to UHF

DATA SHEET NO.

061-0786-00
MARCH 1967
(Revised)

FOR REPLACEABLE PARTS
SEE RESPECTIVE PART NUMBERS



©, 1964, Tektronix, Inc.,
All rights reserved.

PROBE PULSER

Tektronix Part No. 015-0088-00

General Information

The Probe Pulser incorporates a tunnel diode which provides a fast-rise pulse for checking transient response and risetime of Tektronix high-frequency miniature-tip probes, such as the P6045 FET Probe.

The Pulser must be driven by a +100-volt square-wave pulse, such as the 1-kHz amplitude calibrator signal available from most Tektronix oscilloscopes. (The amplitude calibrators in the 560-Series and 640-Series Oscilloscopes and in the Tektronix 067-0502-00 Standard Amplitude Calibrator will not switch the Pulser.)

Characteristics

Output Impedance: $\approx 25 \Omega$.

Output Signal Risetime: 0.5 ns or less.

Output Signal Amplitude: At least 260 mV.

Input Signal Required: +100-volt square wave capable of supplying 10 mA.

Adjusting Bias

The bias on the tunnel diode is adjusted with the knob on the Probe Pulser. The bias should be set each time the Probe Pulser is used.

To set the bias, use the following procedure.

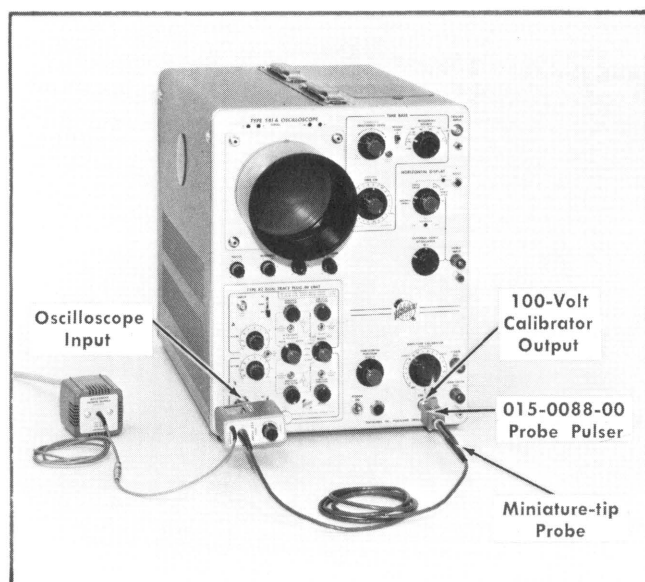


Fig. 1. Correct connection of Probe Pulser and probe to oscilloscope calibrator output and vertical channel input. (Shown with a P6045 FET Probe.)

1. Connect the Probe Pulser to the oscilloscope Calibrator Output and insert the probe tip into the Probe Pulser as shown in Fig. 1.

2. Set the oscilloscope vertical sensitivity to 0.1 V/cm and the sweep rate to 0.2 mSec/cm.

3. Set the bias control fully counterclockwise and the oscilloscope Amplitude Calibrator for a 100-volt square-wave output.

4. Set the time-base triggering controls for a stable display. With the bias control set fully counterclockwise, the tunnel diode will not switch due to insufficient current. However, there will be a waveform of ≈ 40 mV on the CRT screen. This is the calibrator signal feeding through the Probe Pulser and not the fast-rise output signal that occurs when the tunnel diode is switching.

5. Slowly turn the bias control clockwise until the waveform amplitude suddenly increases to about 3 divisions (see Fig. 2A). This indicates the tunnel-diode is now switching and this is the proper bias setting.

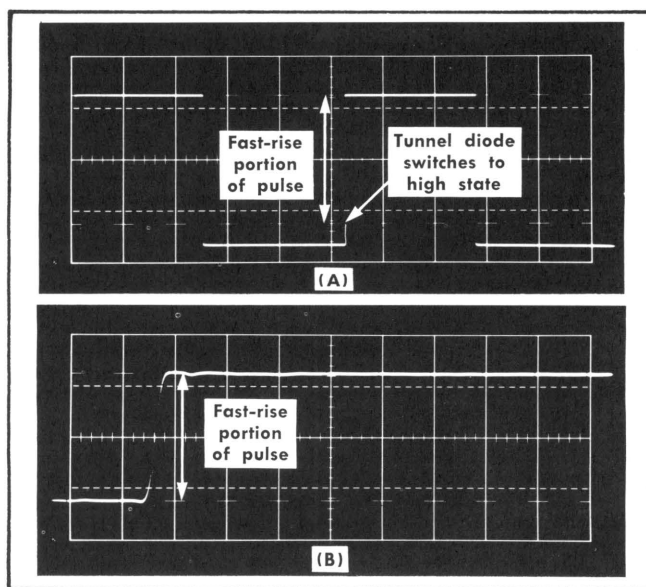




Fig. 2. Typical oscilloscope displays of pulse waveform: (A) With sweep rate of 0.2 μ s/cm; (B) With sweep rate of 20 ns/cm.

Output Waveforms

Figs. 2A and B show typical output signals from the Probe Pulser at slow and fast sweep rates. The small intensified portion at the base of each pulse shown in Fig. 2A is the relatively slow-rising portion of the calibrator signal just before the tunnel diode switches. When measuring risetime, only the fast-rise portion of the output signal is used (see Fig. 2B).

1000 MC TIMING STANDARD (Part No. 017-0019-00)

Accuracy within 0.05%.

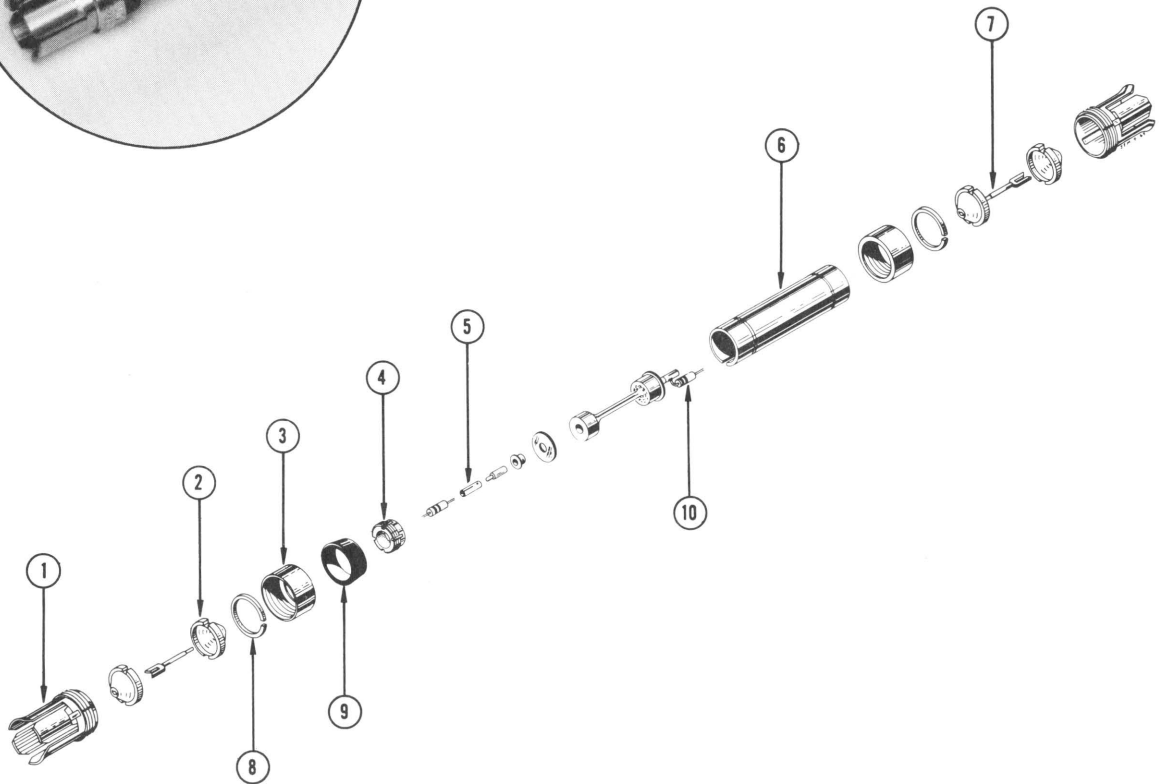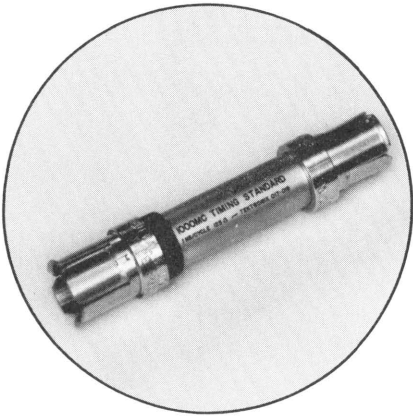

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	132-0102-00			2	CONNECTOR, outer
2	132-0011-00			4	INSULATOR
3	132-0001-00			2	NUT, coupling
4	210-0547-00			1	NUT, tuning
5	132-0014-00			2	SLEEVE, transition
6	205-0037-00			1	SHELL
7	132-0015-00			2	CONTACT ASSEMBLY
8	132-0007-00			2	SNAP RING
9	354-0151-00			1	RING
10	316-0102-00			2	RESISTOR, 1K, 1/4 w, 10%

PUBLICATION NO.

062-0158-00
August 1965
(Revised)



**FOR REPLACEMENT PARTS
NOT LISTED CONTACT YOUR
TEKTRONIX FIELD OFFICE.**



©, 1964, Tektronix, Inc.,
All rights reserved.

CURRENT PROBE CAL ADAPTER

(Part No. 017-0031-00)

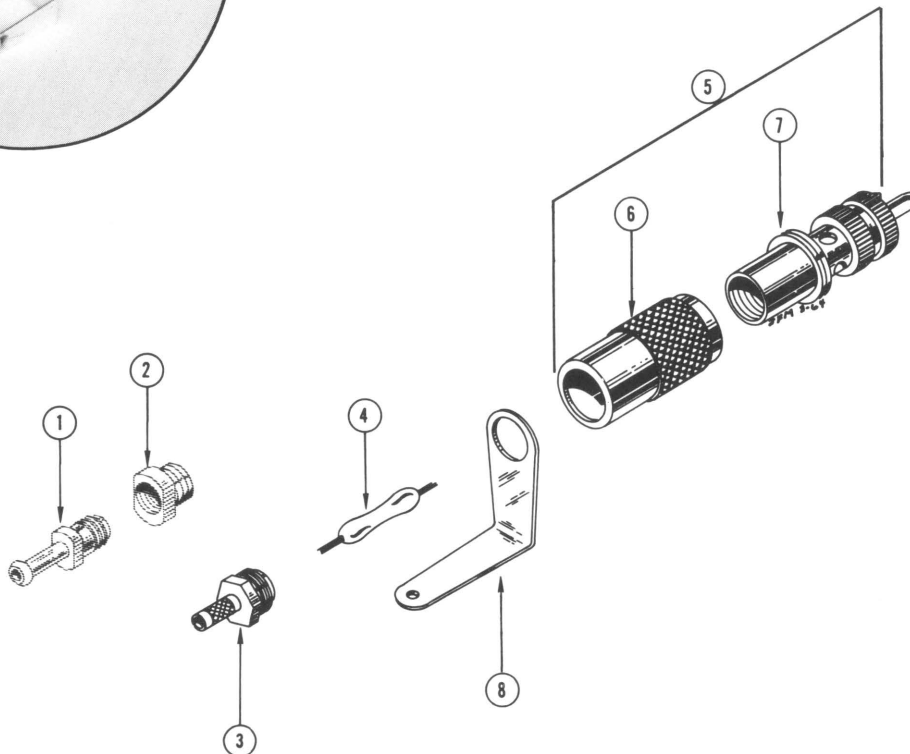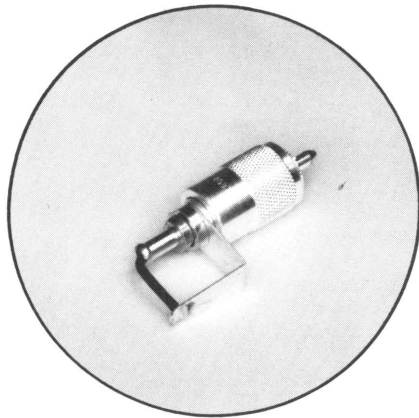

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
1	358-0089-00	EARLY		1	BUSHING, outer
2	210-0474-00	EARLY		1	NUT
3	358-0127-00	LATE		1	BUSHING, assembly
	166-0201-00			1	TUBE, sleeve
4	309-0336-00			1	RESISTOR, 24.5 K, 1/2 w, prec. 1%
5	131-0058-00			1	CONNECTOR, cable end, coax.
	- - - - -			-	Consisting Of:
6	200-0026-00			1	COVER, coax. connector
7	131-0196-00			1	CONNECTOR, coax., 1 contact
8	406-0647-00			1	BRACKET, calibrator

PUBLICATION NO.
062-0145-00
August 1965
(Revised)



©, 1964, Tektronix, Inc.,
All rights reserved.

"N" UNIT CAL ADAPTER (Part No. 017-0074-00)

The N UNIT CAL ADAPTER is a precision voltage divider to provide a constant input voltage of 40 mv for calibrating the gain of the Type N Sampling Plug-In Unit.

To use, connect the CAL ADAPTER to the oscilloscope AMPLITUDE CALIBRATOR output and the GR connector at the other end of the short cable to the SIGNAL INPUT connector on the N unit. Set the AMPLITUDE CALIBRATOR output to 50 volts. Connect a lead from the TO EXT. HORIZ. connector on the Type N unit to the HORIZ. INPUT connector on the oscilloscope. Set the HORIZONTAL DISPLAY switch to EXT. X 1.

Turn the TRIGGER SENSITIVITY on the Type N unit to the FREE RUN position. Two lines of dots should now appear on the crt. Center the two lines, using the VERTICAL POSITION control on the Type N unit. Adjust the Type N GAIN SET capacitor, C 6417, until the two traces are 4 cm apart.

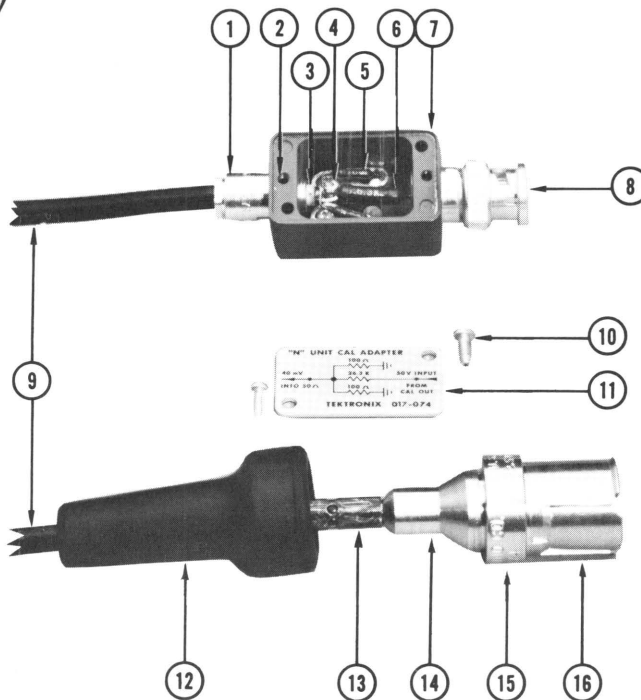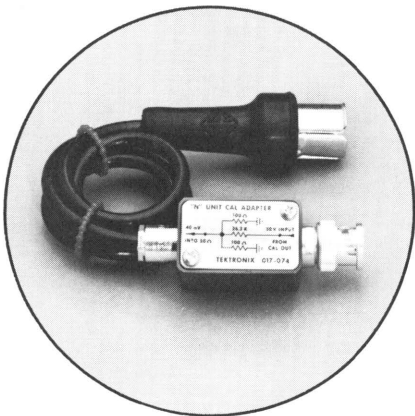

PUBLICATION NO.


061-0957-00
August 1965
(Revised)



©, 1963, Tektronix, Inc.,
All rights reserved.


067-0500-00 CALIBRATION FIXTURE

CRT Deflection Capacitance Normalizer

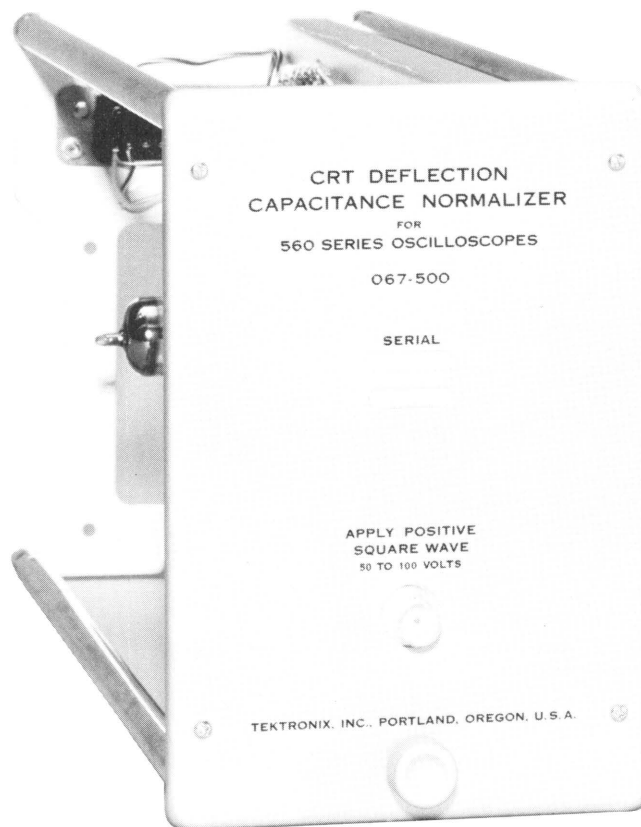


The 067-0500-00 is a plug-in unit for normalizing CRT deflection plate capacitance in 560 series instruments.

The plates of the Schmitt multivibrator are connected push-pull through time constant dividers to the CRT deflection plate. A square wave approximately 5 cm high will be displayed when a positive square wave of 50 to 100 volts in amplitude is applied to the input. C760 or C761 in 560 series scopes is adjusted for optimum square corner (no rolloff or spike) to achieve normalization.

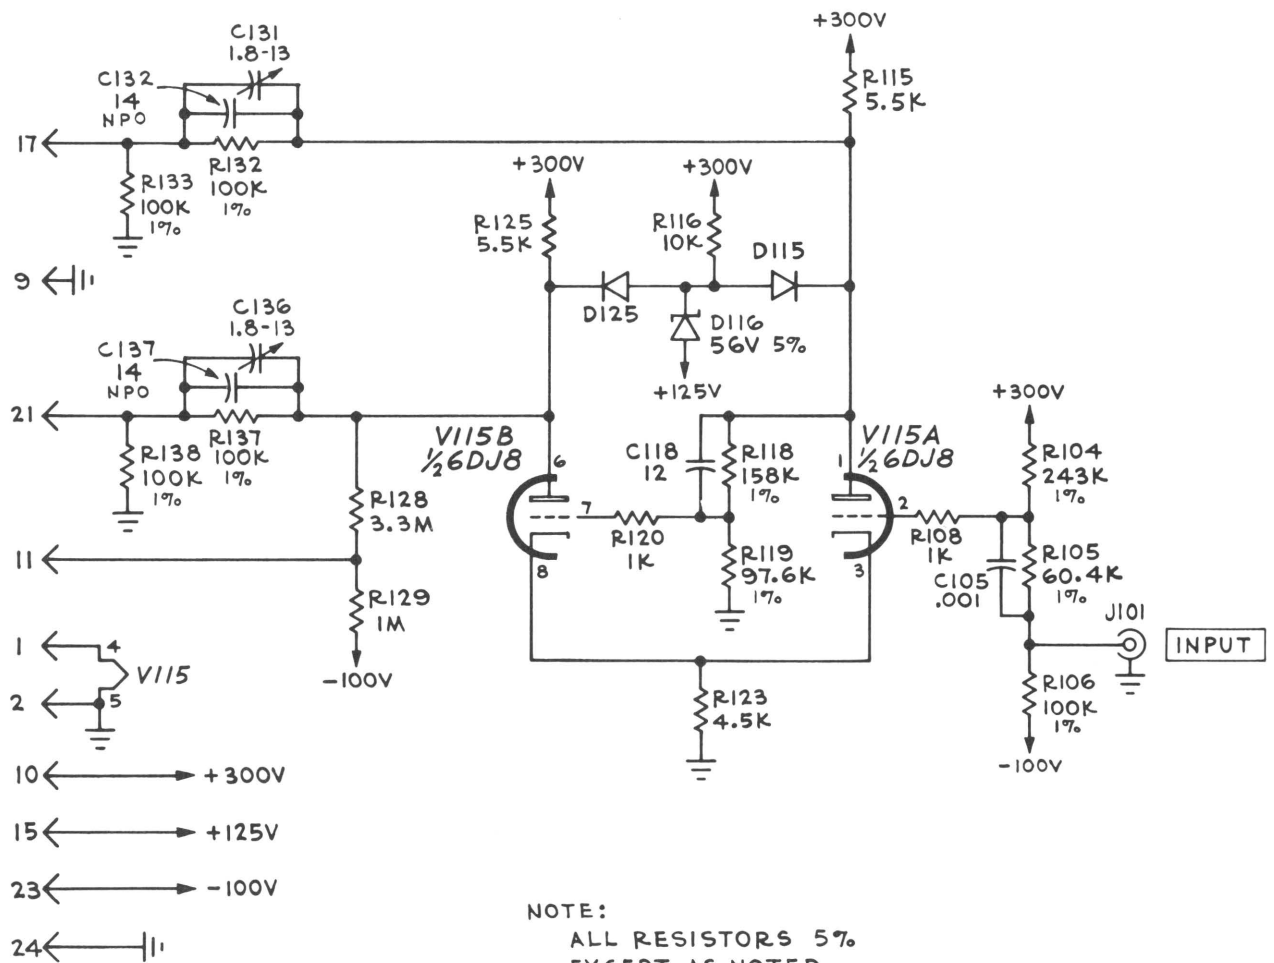

067-0501-00 CALIBRATION FIXTURE

Strobe/Trigger Extender Cable

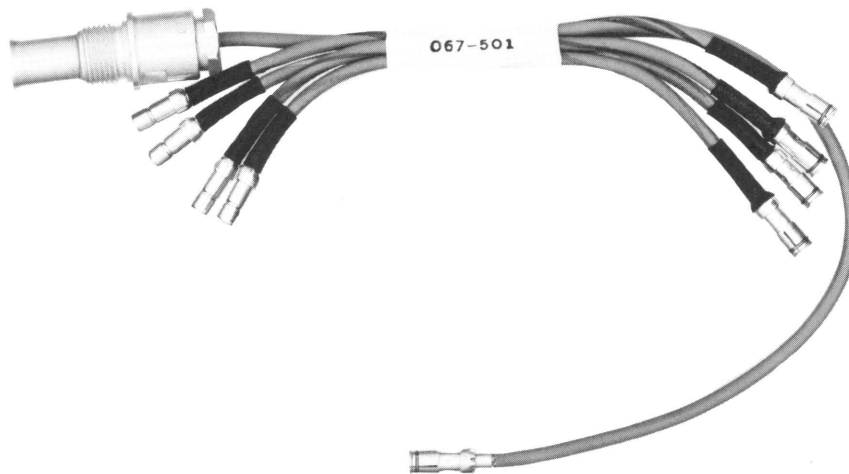

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0501-00				<p>The TYPE 067-0501-00 is an assembly of five 50 ohm impedance cable. The cables are equipped with suitable connectors to extend the strobe lines and the blocking oscillator trigger signal cable from the timing unit, when the 4S2 or 4S3 is operating with the Gate board extended.</p>

DATA SHEET NO.

062-0807-00


FEBRUARY 1967



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0502-00 CALIBRATION FIXTURE

Standard Amplitude Calibrator

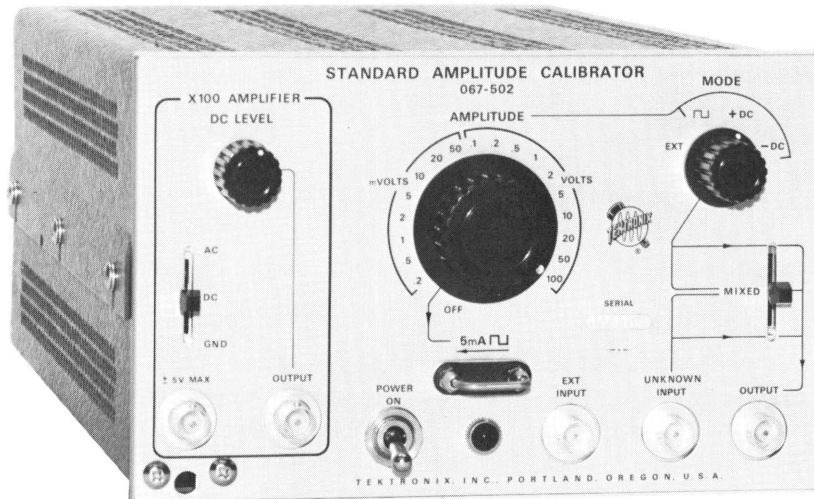

The 067-0502-00 provides accurate ($\pm 0.25\%$) voltage for use in calibrating Tektronix Equipment. Amplitudes are available from 0.2 mV to 100 V in a 1-2-5 sequence. An electromechanical switching circuit provides for comparison between one of the internally generated voltages and an unknown external voltage. A general-purpose amplifier with a voltage gain of 100 ($\pm 1\%$) is built into the instrument for the purpose of accurately amplifying low-level signals prior to measurement of those signals.

067-0502-00

STANDARD AMPLITUDE CALIBRATOR

General Information

The 067-0502-00 STANDARD AMPLITUDE CALIBRATOR provides accurate ($\pm 0.25\%$) voltages for use in calibrating Tektronix Equipment. Amplitudes are available from 0.2 mV to 100 V in a 1-2-5 sequence. Waveforms available are:

1. Positive-going 1-kc square wave.
2. Positive and negative-going 60-Hz square waves.
3. Positive DC voltage.
4. Negative DC voltage.
5. Currents to 5 mA DC, also 1-kc square-wave currents in the current loop.

An electromechanical switching circuit provides for comparison between one of the internally generated voltages and an unknown external voltage. A general-purpose amplifier with a voltage gain of 100 ($\pm 1\%$) is built into the instrument for the purpose of accurately amplifying low-level signals prior to measurement of those signals.

Dimensions: Approximately 5" H x 8" W x 12 1/4" D

Weight: Approximately 11 pounds

Operational Data

Input Connector

Input to X100 amplifier. Maximum input signal voltage (AC or DC coupled) is 0.5 volts p-p. Maximum input DC voltage (AC coupled) is ± 600 volts.

Output Connector

Output of X100 amplifier. ± 50 volts, ± 5 mA maximum output.

DC Level Control

Adjusts output DC level of X100 amplifier.

AC-DC-Gnd Switch


Selects coupling mode of X100 amplifier.

Amplitude E Switch

Selects amplitude of 1-kc square wave, + and - DC, and connects 5 mA current loop.

067-0503-00 CALIBRATION FIXTURE

Precision DC Divider

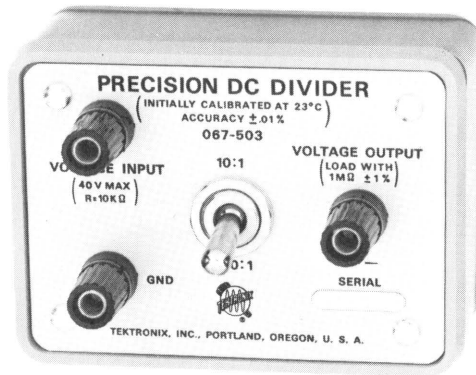

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0503-00				<p>This Precision DC Divider is used to test the attenuation ratio of the input attenuators in such plug-ins as the W unit, 10A1 and 3A7.</p>

DATA SHEET NO.

062-0809-00

FEBRUARY 1967



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

Purpose

The Tektronix Precision DC Divider is primarily used to calibrate DC attenuations of 10:1 and 100:1 attenuators.

Performance Requirements

Ratio Accuracy	$\pm 0.01\%$ (when loaded with 1 megohm $\pm 1\%$)
Temperature Coefficient	10 ppm/ $^{\circ}\text{C}$, 20 $^{\circ}\text{C}$ to 35 $^{\circ}\text{C}$

Voltage Input

Input Resistance	Approximately 10 k
Maximum Input Voltage	± 40 VDC


Operation Instructions

A stable source of DC voltage is connected to the voltage input binding post and to the input of the attenuator to be tested. Outputs of the two attenuators are then compared. Comparison is normally accomplished using an oscilloscope with a differential amplifier, such as a Tektronix Type 547 Oscilloscope with a Type W Differential Comparator. Error of the attenuator under test is the deviation from the correct output voltage expressed as a percentage of the output voltage.

Maintenance


The Precision DC Divider accuracy should be checked after each year of use. The accuracy is checked as follows:

SCHEMATIC

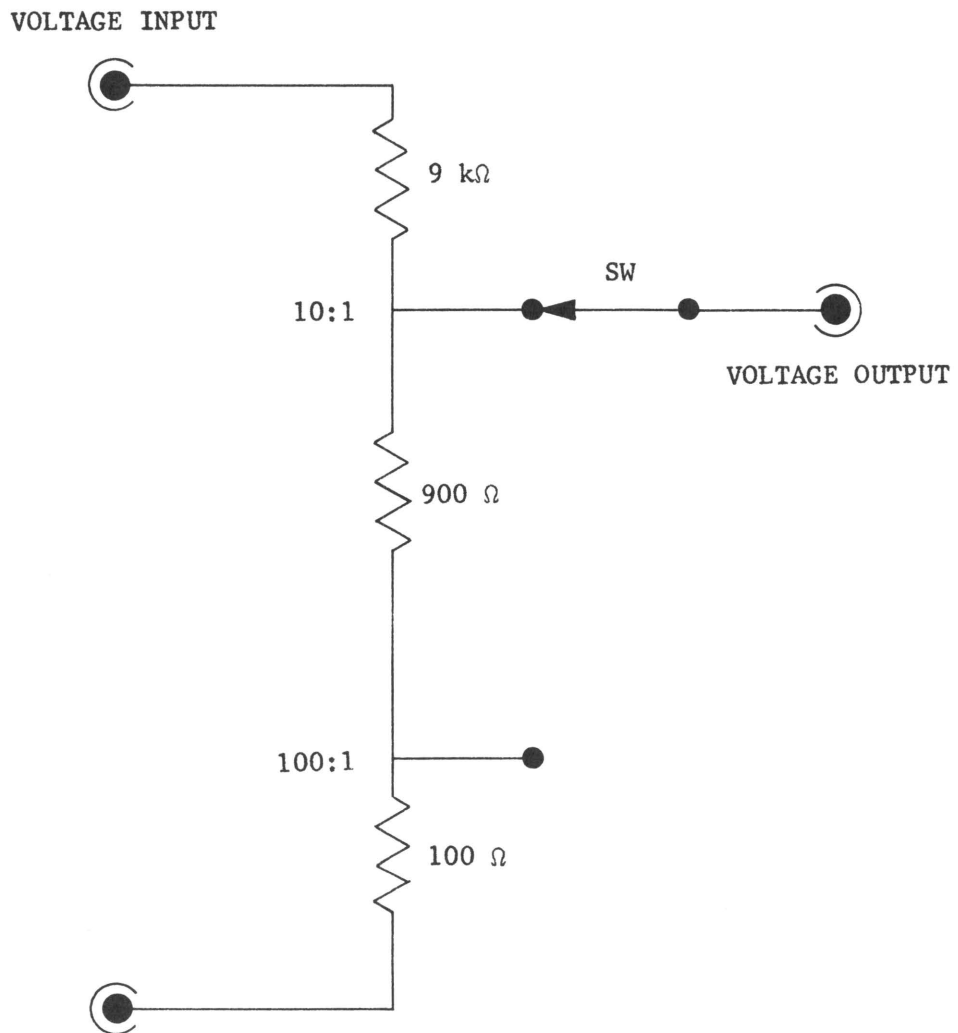

067-0505-00 CALIBRATION FIXTURE

Series 6 Extender

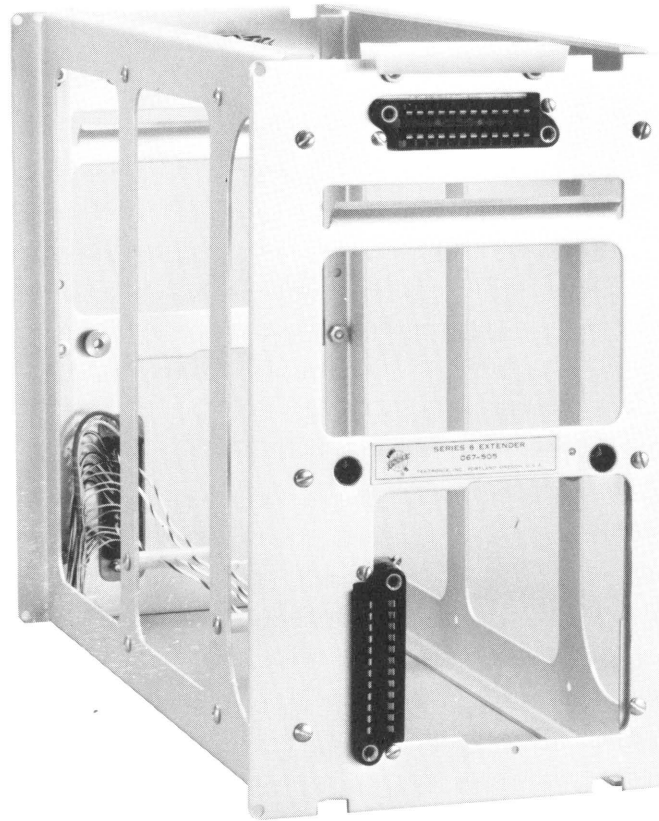


Primarily, this extender is for use with the RM567 when calibrating or trouble shooting the 6R1/6R1A. It has a locking mechanism at each end which secures the extender to the RM567 at one end, and the 6R1/6R1A to the other end. The RM567 may then be tilted in any of its tilt lock positions, if equipped, if there is sufficient clearance in front of the console to do so.

It may also be used in place of flexible extenders in the cabinet models.

067-0507-00 CALIBRATION FIXTURE

0 Unit Grid Current Checker

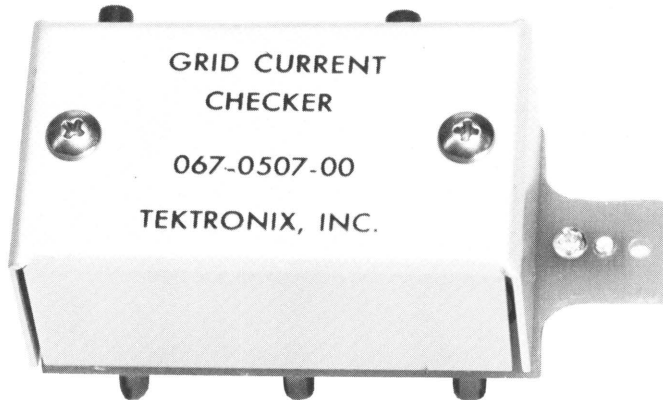

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0507-00			-	<p>The 067-0507-00 Grid Current Checker is used to measure grid current in the type 0 and other operational amplifiers. It matches, in size and general appearance, the Gating, Compensating Leakage Current and other adapters currently in use with operation amplifiers. Banana-plug connectors in back allow the unit to be plugged into the operational-amplifier front panel.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>DATA SHEET NO. 062-0811-00 FEBRUARY 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

OPERATING INSTRUCTIONS

1. Plug the unit into the operational amplifier channel to be tested.
2. Set the sweep rate at the value specified in the Instruction Manual Calibration Procedure for the operational amplifier.
3. Obtain a free-running trace and, when the spot crosses a preselected graticule line, press the desired button.
4. Compute grid current by the formula:

$$I_g = EC/T$$

E Amplitude of the wave form at the end of a prescribed period.

C Capacitance being charged (0.001 mF).

T Time over which the amplitude rise is checked.


See Instruction Manual Calibration Procedure for time and amplitude values.

CALIBRATION PROCEDURE

Check for correct internal wiring, correct capacitor value and tolerance and proper operation of the push-button switches.

CIRCUIT DESCRIPTION

S1 and S2 are normally closed, holding C1 and C2 in a discharged condition. When one of the push-button switches is pressed, grid current charges the associated capacitor generating a saw-tooth waveform representing amplitude versus time.

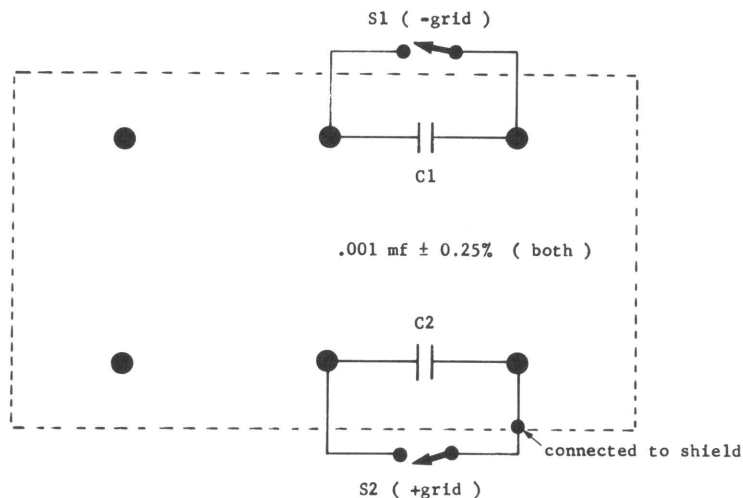

067-0508-00 CALIBRATION FIXTURE

50 ohm Amplitude Calibrator



REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0508-00				<p>This calibrator provides a source of voltage the overall accuracy of which is 0.25%, from an accurate 50 ohm source resistance to calibrate equipment having a characteristic 50 ohm impedance. It may also calibrate a high impedance input provided the unit is accurately terminated in total load of 50 ohms.</p>

067-0508-00 CALIBRATION FIXTURE

General Information

Purpose

Provides an accurate source of voltage for the calibration of equipment having 50 Ω input impedance. It may also be used to calibrate equipment with high input impedance provided the unit is connected through an accurate 50 Ω termination.

Accuracy

Overall accuracy is $\pm 0.25\%$, enabling precision amplitude calibration of devices such as digital readout units or for precision comparison measurements.

Pretrigger

A pretrigger is provided sufficiently delayed to allow zero % zone levels to be established on Type 6R1 which does not have adjustable zero % zones.

Output Level

Output level is adjustable from 12 mV to 1.2 V in increments designed to provide a constant 6 division display as the attenuators of the system are changed. A 2 V level is provided to check linearity of a sampling bridge.

A test point is provided on the front panel to check the level into the attenuator.

Power Source

Normally operates on 115 or 230 VAC, 50 to 60 Hz. Additional taps are provided on the transformer primary to shift the design-center line voltage in 10 V increments from 105 to 125 V from 210 to 250 V.


Operating Instructions

1. Connect power cord to correct line voltage (factory wired for 115 volts unless otherwise indicated by rear panel decal).
2. Connect TRIG OUT to test-scope external trigger input jack.
3. Connect OUTPUT to test-scope vertical input.

NOTE: If test-scope vertical input is high impedance, terminate the cable in 50 Ω ($\pm 1\%$ accuracy required or better).

067-0513-00 CALIBRATION FIXTURE


Tunnel Diode Pulse Generator

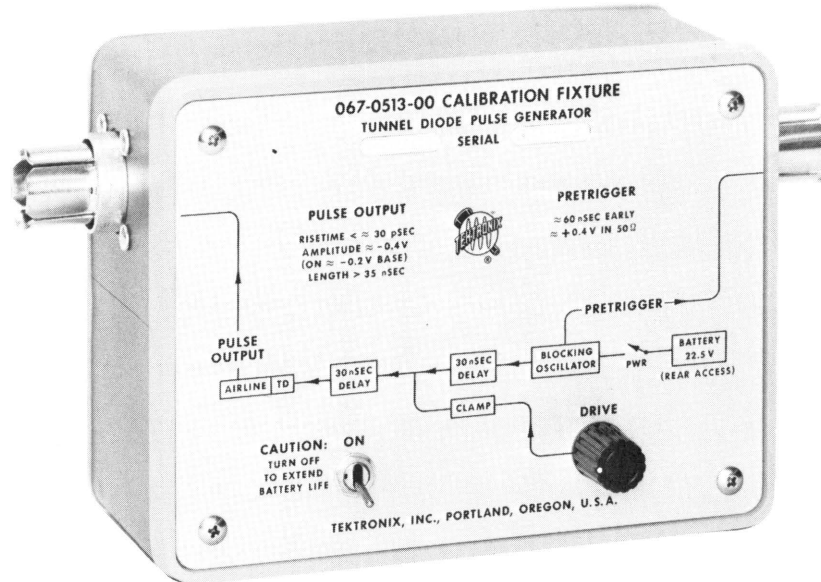

The T.D. Pulse Generator is battery powered and is used for checking step function response of all Tektronix sampling systems. It can be used with a minimum of correction due to pulse source risetime limitations.

The repetition rate varies from about 50 kHz to 150 kHz depending on battery condition. A pretrigger (60 to 70 ns early) permits operation in conjunction with any of the Tektronix sampling systems.

The pulser contains a transistor blocking oscillator, an adjustable diode drive clamp, a delay cable and a 100 mA, 6 pF, tunnel diode mounted in a special coaxial air-line environment. The free-running blocking oscillator generates a 50 ns pulse with adequate amplitude to drive the clamp, tunnel diode and pretrigger. The diode clamp, 30 ns from the blocking oscillator, flattens the negative-going pulse at a level just sufficient to switch the 100 mA tunnel diode which is another 30 ns past the clamp. This device draws about 1.5 mA. It is difficult to predict battery life but approx. 1 month can be expected with average use. New batteries may be ordered on a standard order form.

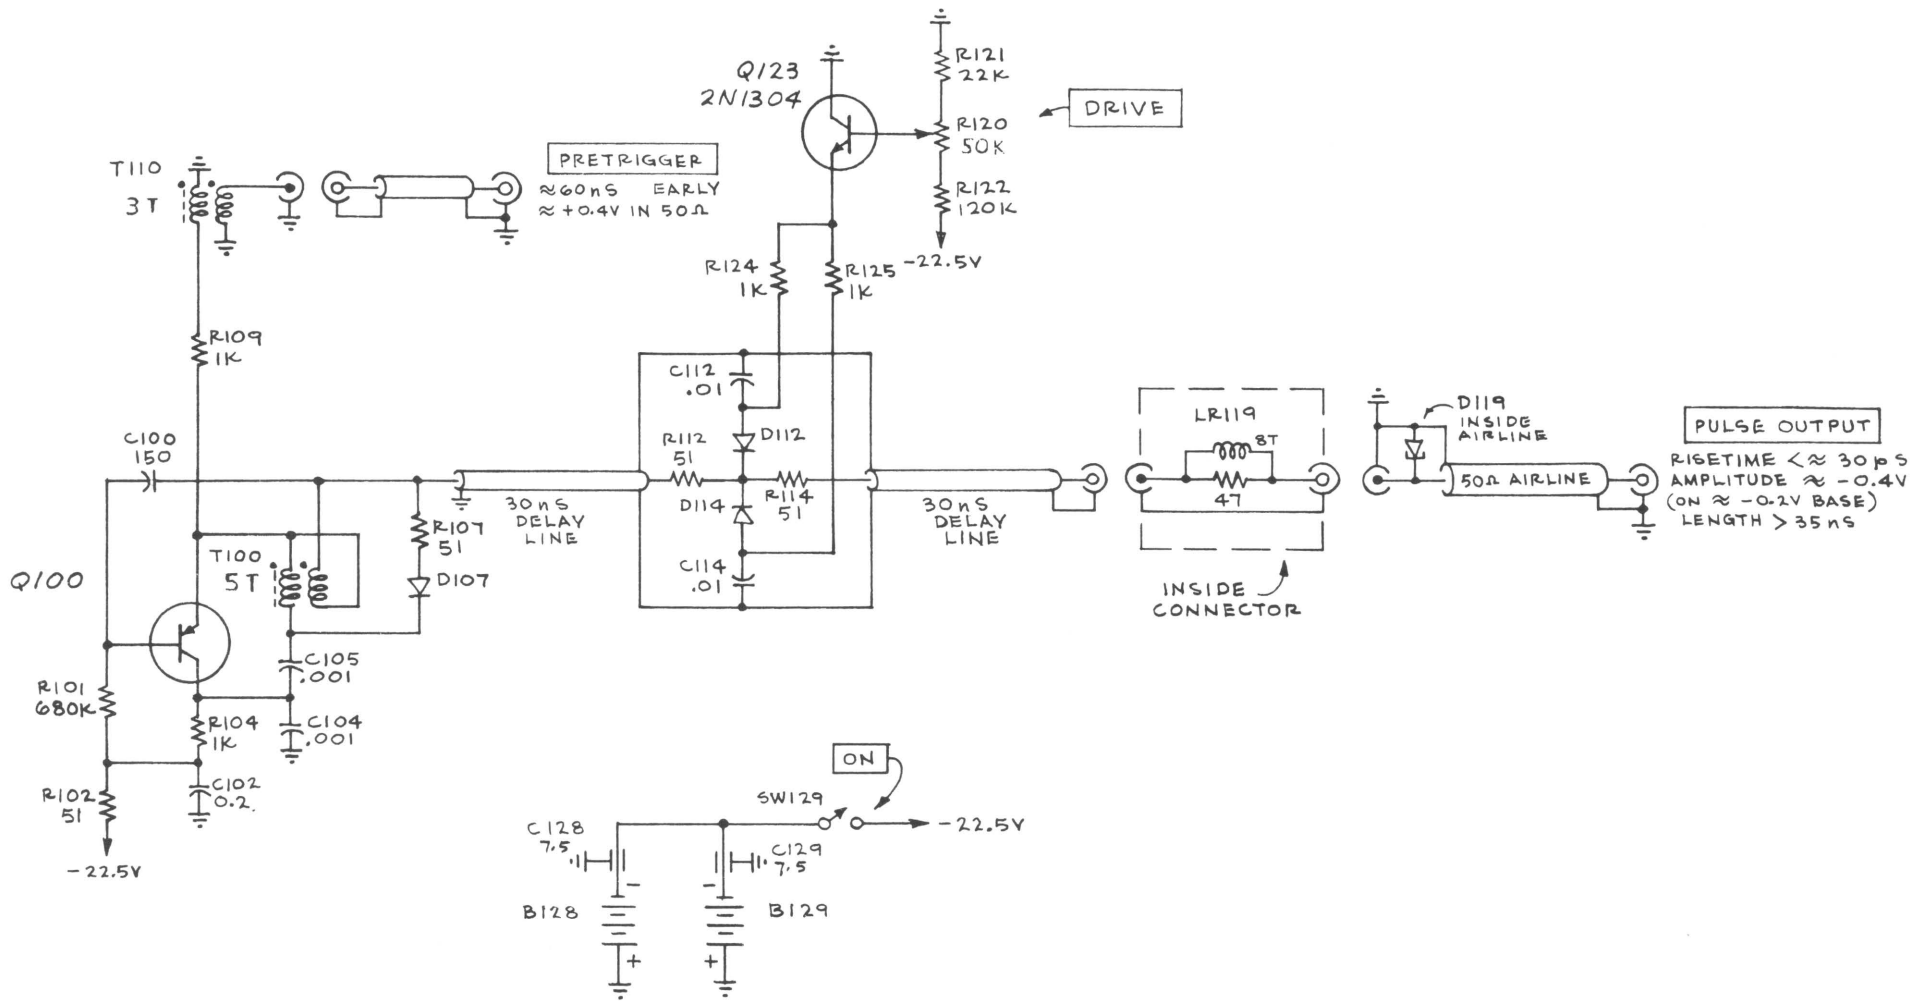

067-0514-00 CALIBRATION FIXTURE

AC 0-10 V Meter



REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0514-00				<p>The 067-0514-00 AC Meter is an iron-vane, 0 to 10 volt, accurate voltmeter for use in testing and adjusting filament voltages from the saturable reactors in Tektronix Type 517/517A and Type 555 oscilloscopes.</p> <p>Accuracy ±2% of full scale</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto;"> <p>DATA SHEET NO.</p> <p>062-0816-00</p> <p>FEBRUARY 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0515-00 CALIBRATION FIXTURE

Precision 50 ohm termination



REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0515-00				<p>A 0.1% 50 Ω termination for use with instruments that have outputs into 50 Ω. This calibration fixture is used to accurately terminate an instrument into 50 Ω to check its calibration accuracy. Its primary intent is for use with the 067-0508-00, the 50 Ω Amplitude Calibrator, but can also be used for checking the calibrator outputs into 50 Ω, of the Type 546, 547, 567 etc.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>DATA SHEET NO. 062-0817-00 APRIL 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0518-00 CALIBRATION FIXTURE

Harmonic Modulator



REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0518-00				<p>Permits simultaneous modulation of an R.F. signal with Tektronix Type 105 Square Wave Generator and with an audio generator. Recommended R.F. source is Tektronix Type 180A Time Mark Generator. The unit is designed to provide test signals for Tektronix L10A Spectrum Analyzer (will also be usable with future models). Modulated harmonic frequencies to 900 mc, with amplitudes of a few microvolts, have been produced although this is considerable beyond the normal output requirement. A 60-mc trap may be switched in to attenuate any 60-mc component (center I.F. frequency of L10A is 60-mc). Effective attenuation of this trap depends on the setting of RF VARIABLE control.</p>

DATA SHEET NO.
062-0819-00
FEBRUARY 1967

 Copyright © 1967, Tektronix, Inc. All Rights Reserved.

MODU FREQ 1 & 2 Inputs


Coupling	DC
Maximum Input Voltage	±10 v

RF Input


Coupling	AC
Maximum Input Voltage	20 volts p-p

Operating Instructions

Test configuration for displaying modulation on a carrier with Type L10A Spectrum Analyzer.

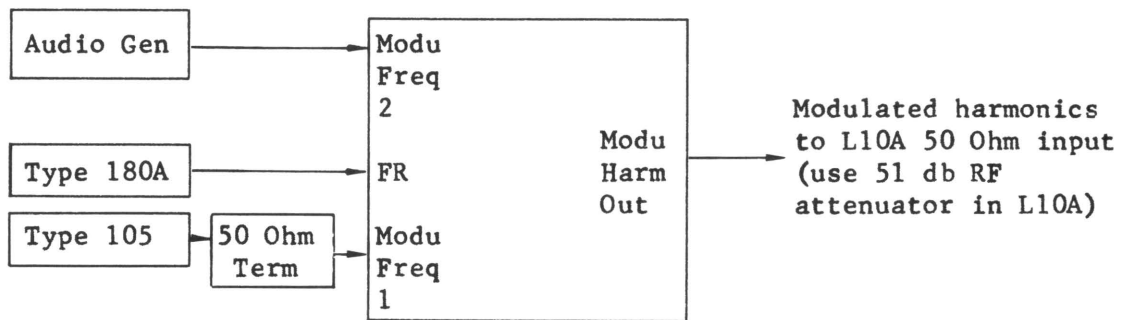

Set the audio generator and the Type 105 for the desired modulation frequencies. Set Type 180A for 1μsec, 5 mc, 10 mc or 50 mc. The mixing ratio is varied by changing the amplitude of the outputs of two modulation generators

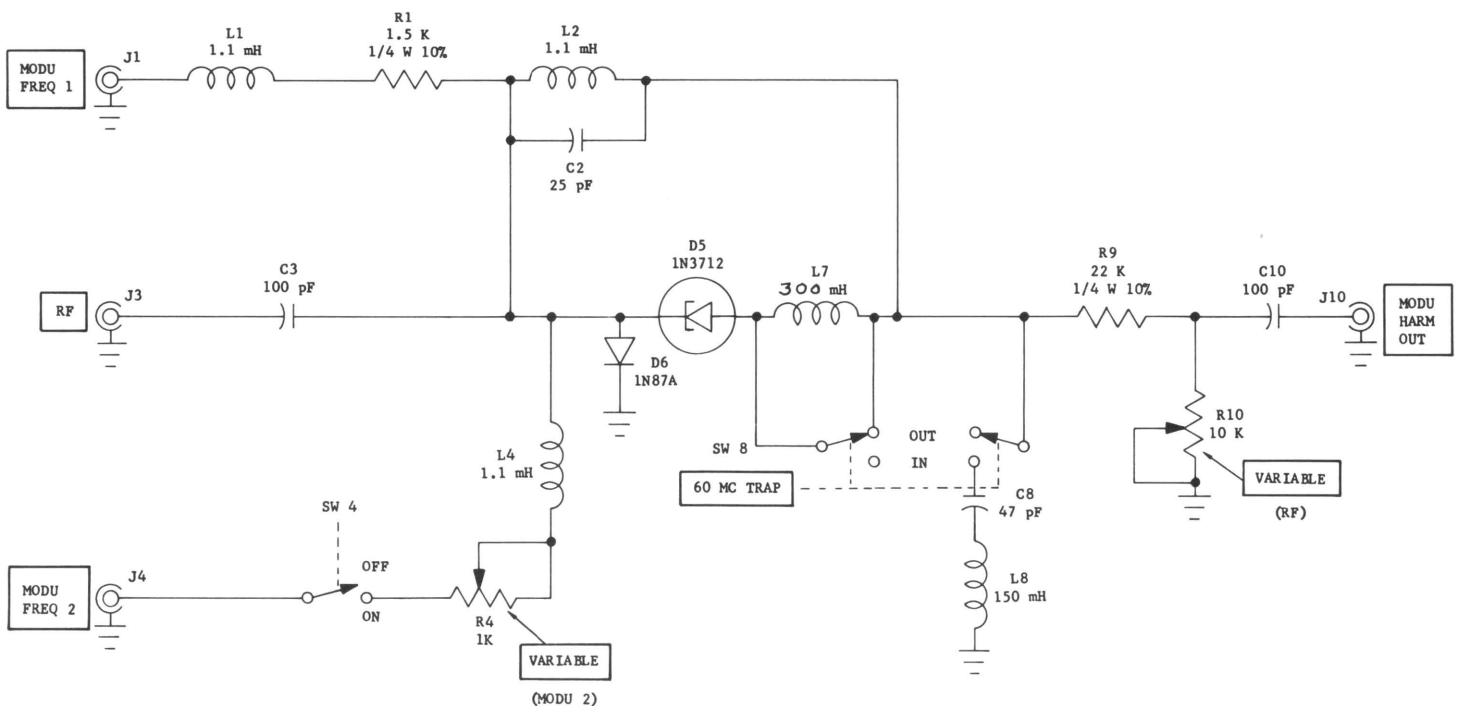

LOAD/PULSER

(Part No. 067-0521-00)



CHARACTERISTICS

General Description

The 067-0521-00 Plug-In Test Unit is a versatile single-unit calibration aid for use with all Tektronix 530-, 540-, or 550-Series Oscilloscopes using 1-series or letter-series vertical plug-in units. The 067-0521-00 is the only plug-in unit required for calibrating the oscilloscope.* An input connector on the front panel permits application of various external signals for use in the calibration procedure. The self-contained unit also generates fast-rise pulses for checking rise-time and adjusting transient response of the oscilloscope vertical amplifier.

The 067-0521-00 permits checking the regulation limits of the power supplies. In addition, the unit provides a quick check of the oscilloscope alternate sync pulse and chopped blanking circuitry. For oscilloscopes capable of displaying two time-base signals alternately, the 067-0521-00 checks the ability of the alternate-sweep switching circuitry to lock the channels of a dual-trace plug-in unit to the time bases of the oscilloscope.

ELECTRICAL

TEST FUNCTION SWITCH POSITIONS

LOW LOAD, HIGH LOAD

These two switch positions permit the oscilloscope low-voltage power supplies to be loaded from minimum to maximum. External signals applied through the EXT INPUT connector on the front panel of the unit will be ac-coupled to the oscilloscope vertical amplifier to produce a normal display. Maximum vertical sensitivity of the 067-0521-00 oscilloscope combination is about 0.5 volt/cm when the VARIABLE control is set fully clockwise.

GAIN SET

Permits setting the gain of the oscilloscope vertical amplifier with a 100-volt calibrator signal applied to the EXT INPUT connector. The 250-to-1 fixed ratio of this position attenuates the 100-volt signal to 0.4 volt which produces 4 cm of vertical deflection on the crt when the oscilloscope vertical amplifier gain adjustment has been accurately set.

COMMON MODE

Checks common-mode rejection ratio and dc balance of the oscilloscope vertical amplifier.

ALTERNATE

Checks operation of the alternate-mode synchronizing circuits in the oscilloscope. Also permits checking for proper sweep slaving in oscilloscopes having two time bases that can be displayed alternately. Any external signal applied

* A sine-wave bandpass check of the system cannot be made by applying an external high-frequency sine wave through the plug-in test unit.

to the EXT INPUT connector is attenuated approximately 1000 times by an internal attenuation network.

CHOPPED

Checks oscilloscope for proper operation in the chopped mode. Free-running rate of the dual-trace switching multi-vibrator is approximately 100 kc. Any external signal applied to the EXT INPUT connector is attenuated approximately 1000 times by the internal attenuation network.

+ PULSE, — PULSE

In these two switch positions, a fast-rise squarewave with a risetime considerably less than the vertical deflection system of a Type 546 or 547, is applied to the oscilloscope. Maximum amplitude of the pulse display for either + or — polarity is approximately 6 cm with the AMPLITUDE control set fully clockwise. Minimum amplitude is approximately 2 cm.

Other Controls and Connectors

REPETITION RATE

Three-position switch to select the approximate pulse repetition rate of the Pulse Generator circuit: LOW — 5 kc, MED — 100 kc, HIGH — 600 kc.

AMPLITUDE

Adjusts amplitude of the pulse applied to the oscilloscope vertical amplifier when the TEST FUNCTION switch is set to + PULSE or — PULSE.

VARIABLE

Controls amplitude of the signal applied through the EXT INPUT connector when the TEST FUNCTION switch is set to LOW LOAD or HIGH LOAD. The minimum deflection factor is 0.5 volt/cm with the VARIABLE control set fully clockwise.

VERTICAL POSITION

Controls vertical positioning of the trace or display on the crt in all TEST FUNCTION positions except COMMON MODE.

+ 225V Pushbutton

Provides +225 volts at the front-panel output banana jack when the pushbutton is pressed.

+ 225V Banana Jack

Convenient source of +225 volts for checking dc balance of each stage of a distributed vertical amplifier. With the voltage output connected to the cathodes, the stage is effectively cut off when the +225 V pushbutton is pressed.

TEST UNIT

(Part No. 067-0523-00)



CHARACTERISTICS

General

The Type 067-0523-00 Plug-In Test Unit is a calibration aid for use with Tektronix 580-Series oscilloscopes. The unit provides a reference signal for setting the oscilloscope vertical amplifier gain, a fast-rise voltage step for adjusting oscilloscope vertical amplifier transient response, and a load bank which loads the oscilloscope power supplies over their full current range. The Type 067-0523-00 allows a check of the DC balance of the oscilloscope vertical amplifier. It may also be fed external signals which might be used in calibration procedures.

580-Series oscilloscope vertical amplifiers that have been calibrated with the Type 067-0523-00 have a uniform transient response. The amplitude calibration signal has a long-term amplitude stability. The amplitude signal circuit is driven by the dual-trace alternate sync pulse generated by the oscilloscope. The dual-trace display shows the presence of the sync pulse.

Calibration Reference Signal

A 200-millivolt signal for adjustment of vertical amplifier gain. Signal level is switched by the alternate trace sync pulse from the oscilloscope sweep generator. Signal amplitude can be checked at front-panel jacks.

Pulser

Provides low distortion square-wave pulse with a risetime considerably less than the response time of the vertical amplifier in a 580-Series Oscilloscope. Pulse amplitude continuously adjustable to either plus or minus 4 centimeters deflection. Repetition rate adjustable from about 550 to 750

pulses per second. Pulser maintains risetime without need for circuit adjustment.

Scope Amplifier balance check

Connects input leads to oscilloscope vertical amplifier together. The resultant deflection shows any overall dc imbalance of the scope vertical amplifier.

Power Supply Load

Provides low, normal, and high loading of oscilloscope power supplies. Range corresponds to the range of currents available from power supplies. Allows check of ripple and regulation of each power supply.

Display Selector

A three-position switch which selects the 200 mv calibration signal, pulser, or external input to the oscilloscope.

Power Line Indicator:


Lights when line power is present at pins 12 and 13 of the plug-in interconnecting plug.

Mechanical Construction


Aluminum alloy chassis. Aluminum alloy anodized front panel.

067-0529-00 CALIBRATION FIXTURE

Precision Divider

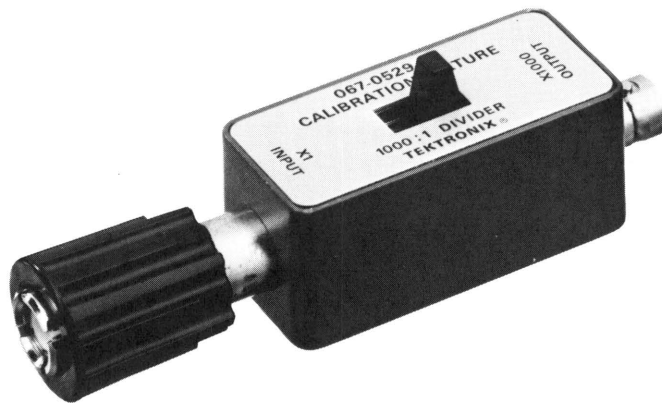

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0529-00				<p>A 1000:1 Divider for use with Standard Amplitude Calibrator (067-0502-00) to extend range of output voltage to amounts less than 200 microvolts. Accuracy of divider $\pm 0.2\%$</p>

DATA SHEET	
NO.	062-0821-00
DATE	MARCH 1968 (R)
 COPYRIGHT © 1967 TEKTRONIX INC. ALL RIGHTS RESERVED	

067-0530-00 CALIBRATION FIXTURE

3 Pin Adapter Cable



REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0530-00				An adapter cable for use between BNC source of calibrator signal and input to three-pin Cannon connector, such as used on Type E Plug-in and Type 122 Amplifier.



067-0531-00 CALIBRATION FIXTURE

4 Pin Adapter Cable



REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0531-00				An adapter cable for use between BNC source of calibrator signal and input to four-pin Cannon connector, such as used on Type 2A61 Plug-in Unit.



067-0532-00 CALIBRATION FIXTURE

Constant Amplitude Signal Generator



The Tektronix Type 067-0532-00 Constant Amplitude Signal Generator produces sinewaves whose amplitude remains constant as the frequency is varied. Output frequency is continuously variable from 65 to 500 MHz. The amplitude of the above mentioned sinewaves is referenced to the amplitude of a 3 MHz sinewave also available at the output connector. Output amplitude is continuously variable from 0.5 volt to 2.5 volts peak to peak into 50 ohms. The output amplitude is in 0.5 volt steps from 0.5 to 5.0 volts into 50 Ω . It is also continuously variable from 0.5 volts to 5.5 volts. The output remains constant amplitude from 0.5 volts to 5.5 volts from 65 MHz to 300 MHz, and constant amplitude from 0.5 volts to 2.5 volts from 300 MHz to 500 MHz. Cable loss and standing wave errors are essentially eliminated. The amplitude is regulated at the generator end of a 50 ohm resistor physically adjacent to the output connector. The output connector, 50 ohm resistor, and amplitude detector are at the end of an attached 42 inch cable.

CHARACTERISTICS

OUTPUT

CHARACTERISTIC	PERFORMANCE REQUIREMENT	SUPPLEMENTAL INFORMATION
FREQUENCY ACCURACY	Within $\pm 2\%$ of reading	
AMPLITUDE ACCURACY	With $\pm 3\%$ of indicated amplitude	Into a 50Ω 1% load
AMPLITUDE REGULATION	Within $\pm 1\%$ of 3 MHz amplitude from 65 to 300 MHz and 0.5 to 5.5 volts P-P output. Within $\pm 3\%$ of 3 MHz amplitude from 300 to 500 MHz and 0.5 to 2.5 volts P-P output.	Into a 50Ω 1% load
HARMONIC CONTENT	Typically less than 2%	

POWER REQUIREMENTS

CHARACTERISTIC	PERFORMANCE REQUIREMENT	SUPPLEMENTAL INFORMATION
LINE VOLTAGES	105 VAC, 115 VAC, 125 VAC 210 VAC, 230 VAC, 250 VAC	Center values available by rear panel switch and transformer wiring
FUSES	Type 3AG 0.4 amperes slo blo Type 3AG 0.2 amperes slo blo	115 VAC operation 230 VAC operation
LINE FREQUENCY	50 to 400 Hz	
POWER CONSUMPTION	Approximately 25 watts	

OSCILLOSCOPE INPUT NORMALIZERS

Input Normalizers are used for checking or adjusting the input capacitance of oscilloscopes, or oscilloscope plug-in units, where high-impedance attenuator probes may be used. In a sense they are dummy probes. Input capacitance should be adjusted for each setting of the input attenuator switch, so that you will not need to readjust an input probe each time the attenuator setting is changed.

Different oscilloscope types have different nominal values of input capacitance, so require different input normalizers. The Instruction Manual for each Tektronix Oscilloscope identifies which normalizer should be used, if any, and how to use it.

An instruction manual may refer to an Input Normalizer as a Capacitance Standardizer, a Time Constant Standardizer, or as an RC Standardizer. The name was changed to Normalizer to reduce confusion about whether they should be considered a measurement Standard. The Tektronix part number was changed at the same time.

Input Normalizers are not intended to be used to determine whether input capacitance is within certain limits, or whether the RC product of input resistance and input capacitance is within certain limits. Therefore, they are not intended to be measurement Standards. Furthermore, it is not advisable to attempt to maintain the input capacitance or the input RC time constant on different scopes to tight tolerances with the hope of obviating the need to check or adjust a probe when it is used with a different oscilloscope. Proper probe adjustment should always be checked each time a probe is connected to a different oscilloscope or plug-in unit. When this practice is


observed, fewer measurement errors will be made than can be prevented by a rigorous program to maintain specific tolerance limits. Nor is it advisable to rely on a known input capacitance, measured at one frequency, to calculate the input loading effects on a signal having a different frequency.

Most Tektronix Input Normalizers never need to be adjusted after they leave the factory. Performance is tested each time one is used, and normally should be considered adequate as long as the adjustable input capacitors in the oscilloscopes have sufficient range.

If readjustment should be necessary, the internal resistor should first be measured to be sure it is in tolerance. Then the internal variable capacitor may be adjusted to produce a square-cornered flat-topped response to a square-wave signal on an oscilloscope it is designed to be used with, in the same way as described in the instructions for adjusting scope input capacitance. The response of the scope to square waves should first be known to be normal, and the input capacitance to the scope should be known to be within about five per cent of its nominal value at the attenuator setting used. It is normal for input capacitance to vary slightly from one setting to the next to correspond with slight variations of input resistance. A Tektronix Type 130 L-C Meter may be used to measure the scope input capacitance. Measurement should be made while the scope is operating. When using the Type 130, to avoid a small possibility of a measurement error due to overdriving the input, it is a good idea to use an attenuator setting that corresponds to a deflection factor of about 1 volt per division.

067-0533-00 CALIBRATION FIXTURE

Input Normalizer 20 pF (UHF)

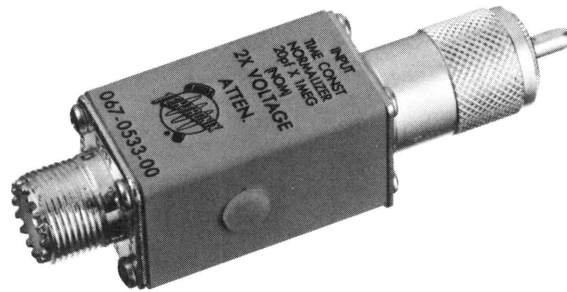


REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0533-00				<p>An Input RC Time Constant Normalizer for signal inputs having nominal 1 megohm x 20 pF input RC time constant and having UHF connectors.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto;"> <p>DATA SHEET NO.</p> <p>062-0839-00</p> <p>APRIL 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0534-00 CALIBRATION FIXTURE


Input Normalizer 24 pF (UHF)

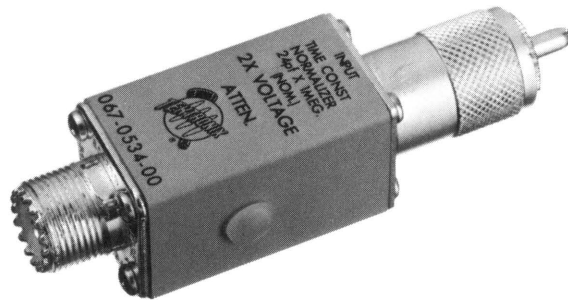

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0534-00				<p>An Input RC Time Constant Normalizer for signal inputs having nominal 1 megohm x 24 pF input RC time constant and having UHF connectors.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>DATA SHEET NO.</p> <p>062-0840-00</p> <p>APRIL 1967</p> </div> <div style="margin-top: 10px;"> Copyright © 1967, Tektronix, Inc. All Rights Reserved. </div>

067-0535-00 CALIBRATION FIXTURE

Input Normalizer 47 pF (UHF)

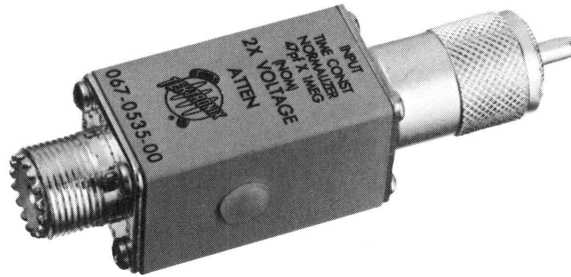

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0535-00				<p>An Input RC time Constant Normalizer for signal inputs having nominal 1 megohm x 47 pF input RC time constant and having UHF connectors.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>DATA SHEET NO.</p> <p>062-0841-00 APRIL 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0536-00 CALIBRATION FIXTURE

Input Normalizer 12 pF (BNC)




REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0536-00				<p>An Input RC Time Constant Normalizer for signal inputs having nominal 1 megohm x 12 pF input RC Time constant and having BNC connectors.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>DATA SHEET NO. 062-0833-00 APRIL 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0537-00 CALIBRATION FIXTURE

Input Normalizer 15 pF (BNC)

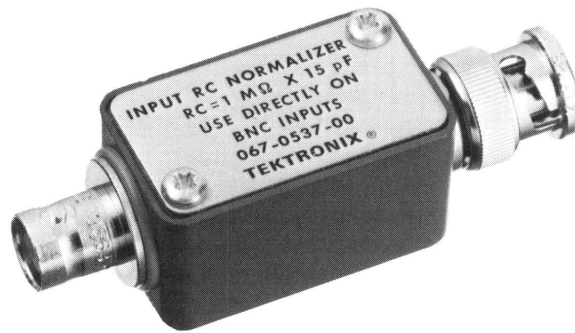

REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0537-00				<p>An Input RC Time Constant Normalizer for signal inputs having nominal 1 megohm x 15 pF input RC time constant and having BNC connectors.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>DATA SHEET NO. 062-0834-00 APRIL 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0538-00 CALIBRATION FIXTURE

Input Normalizer 20 pF (BNC)




REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0538-00				<p>An input RC Time Constant Normalizer for signal inputs having a nominal 1 megohm x 20 pF input RC time constant and having BNC connectors.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto; margin-right: auto;"> <p>DATA SHEET NO. 062-0835-00 APRIL 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0539-00 CALIBRATION FIXTURE

Input Normalizer 24 pF (BNC)

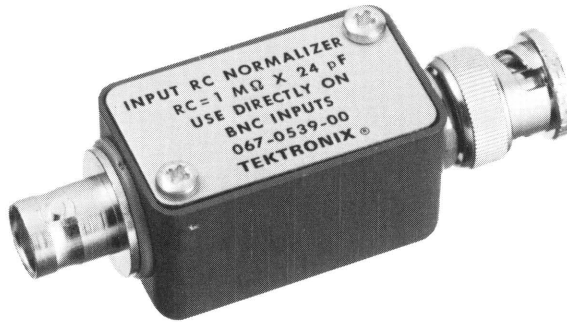


REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0539-00				<p>An Input Time Constant Normalizer for signal inputs having a nominal 1 megohm x 24 pF RC time constant and having BNC connectors.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto;"> <p>DATA SHEET NO. 062-0836-00 APRIL 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.

067-0540-00 CALIBRATION FIXTURE

Input Normalizer RC = 1 MEG × 33 pF

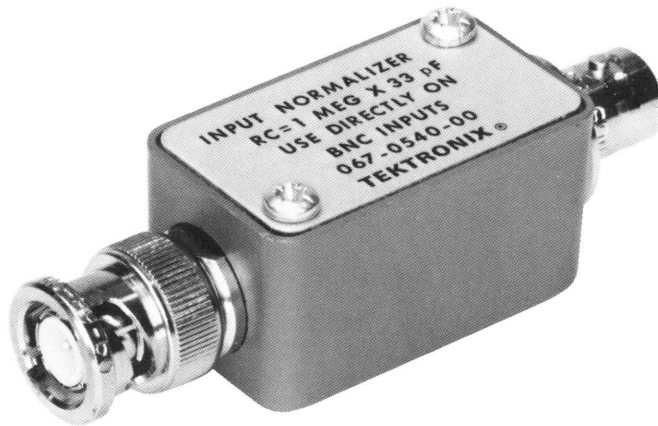


REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0540-00				<p>This 33 pF Input Normalizer is a calibration aid that is used for checking or adjusting the input capacitance of oscilloscopes, or oscilloscope plug-in units, where high impedance attenuator probes may be used.</p>



067-0541-00 CALIBRATION FIXTURE

Input Normalizer 47 pF (BNC)

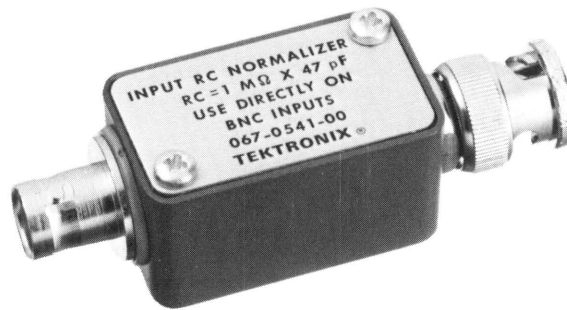


REF. NO.	PART NO.	SERIAL/MODEL NO.		QTY.	DESCRIPTION
		EFF.	DISC.		
	067-0541-00				<p>An Input Time Constant Normalizer for signal inputs having a nominal 1 megohm x 47 pF input RC time constant and having BNC connectors.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin-left: auto;"> <p>DATA SHEET NO. 062-0837-00 APRIL 1967</p> </div>



Copyright © 1967,
Tektronix, Inc.
All Rights Reserved.


067-0544-00 CALIBRATION FIXTURE

TEST LOAD UNIT

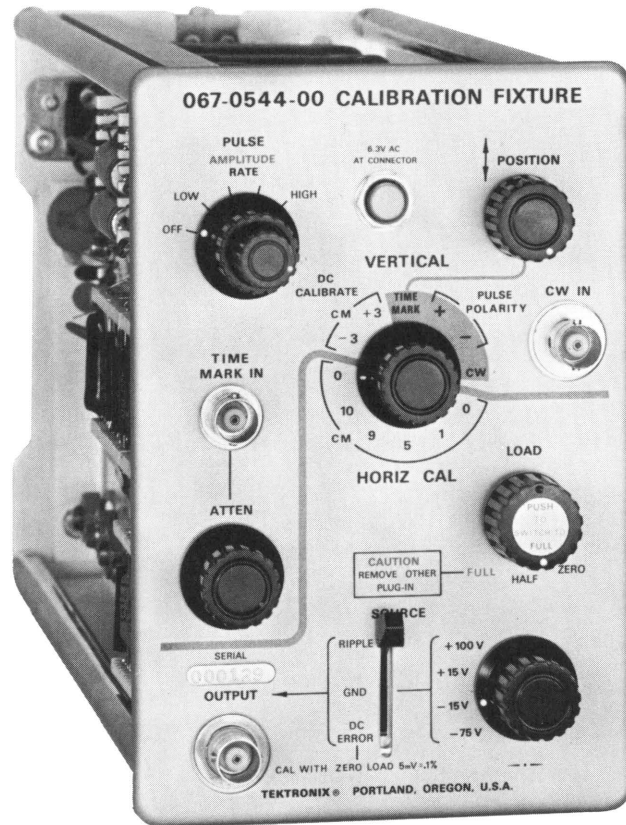

The 067-0544-00 Test Unit is a calibration aid for the Type 647A or Type RM647A Oscilloscope. The unit is designed to calibrate and standardize both the vertical and horizontal circuitry of the Type 647A. The 067-0544-00 aids in setting the oscilloscope: (1) power supply voltages, (2) horizontal amplifier gain, (3) vertical amplifier gain, and (4) vertical amplifier transient response and bandwidth. The 067-0544-00 aids in checking: (1) regulation of the power supplies at the different load conditions, and (2) power supply ripple. In addition, an external time-mark signal may be applied to the 067-0544-00 for calibrating or checking the sweep rates of the time-base unit used with the Type 647A.

ELECTRICAL PARTS LIST—067-0553-00

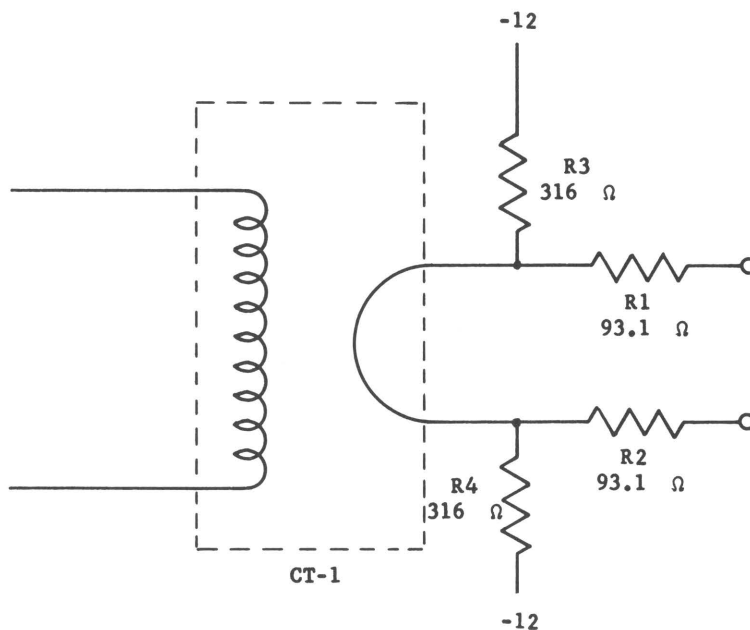

Values are fixed unless marked Variable.

Ckt. No.	Tektronix Part No.	Serial/Model No. Eff	Disc	Description
Resistors				
R1	321-0094-00		93.1 Ω	1/8 W Prec 1%
R2	321-0094-00		93.1 Ω	1/8 W Prec 1%
R3	322-0145-00		316 Ω	1/4 W Prec 1%
R4	322-0145-00		316 Ω	1/4 W Prec 1%

